


10'x12' HARDTOP GAZEBO WITH DOUBLE ROOF ASSEMBLY MANUAL

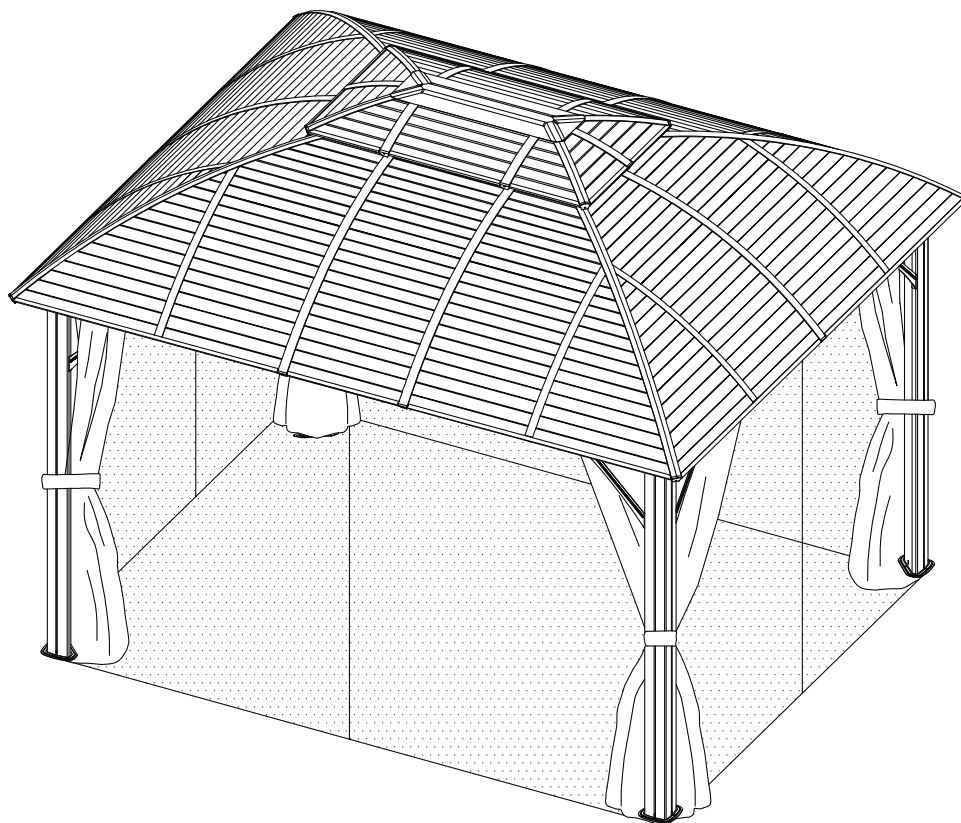

MODEL#: LGMF8008

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2022–2024 domi LLC. | All Rights Reserved.




1. Two or more people are required for assembly.



5. Use the hex keys included in the box.



2. You will need one or more step ladders.



6. Please use a Phillips screwdriver.



3. Wearing protective gloves is recommended.



7. Do not fully tighten screws until assembly is completed.




4. You may need a safety hat.



8. For ease of construction, you may need to use a drill.

10x12' ANCHOR BLUEPRINT

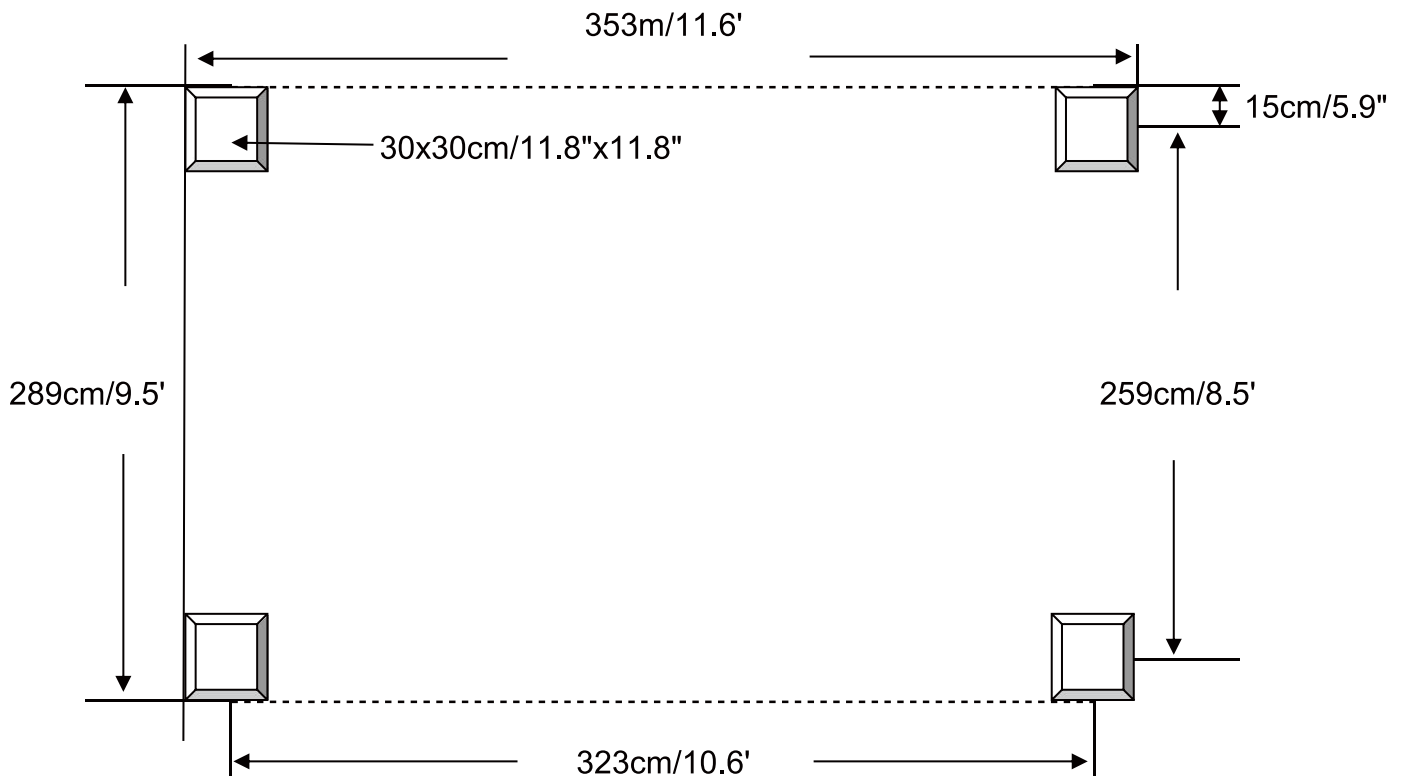




A 4x POLE



C 2x BEAM




C1 2x BEAM



C2 2x BEAM




C3 2x BEAM

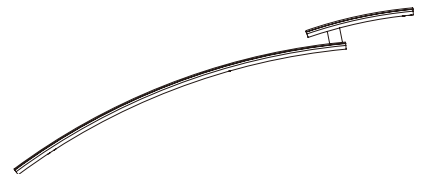

D 4x CORNER ROOF BAR




E 6x ROOF BAR




F 4x FINISHING BAR



F1 4x FINISHING BAR




F2 2x FINISHING BAR



G 4x FINISHING BAR



G1 4x FINISHING BAR



G2 2x FINISHING BAR
























H 4x FINISHING BAR




H1 4x ROOF BAR



J 4x SOLIDIFYING BAR

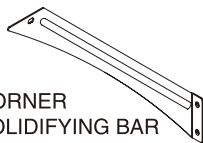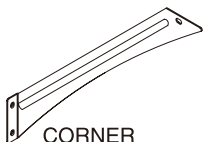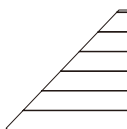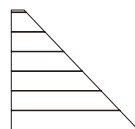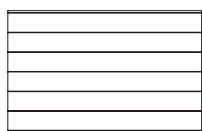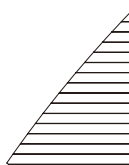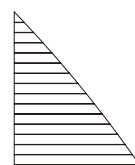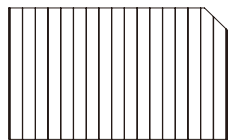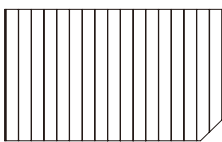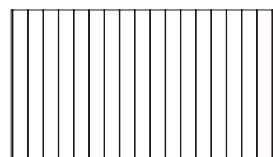2	  J1 4x SOLIDIFYING BAR	  J2 2x SOLIDIFYING BAR		
	  K 4x FINISHING BAR	  K1 4x FINISHING BAR		
	  K2 2x FINISHING BAR	 B 4x PLATE	 CORNER SOLIDIFYING BAR L 4x	
	 CORNER SOLIDIFYING BAR L1 4x	 M 4x CORNER COVER	 N 4x JOINT COVER	 P 4x SUPPORTING PART
	 Q 1x INSIDE ROOF CONNECTOR	 Q1 1x OUTSIDE ROOF CONNECTOR	 R 12x FINISHING END	 R1 6x FINISHING END
	 R2 12x FINISHING END	 S 8x SUPPORTING PART	 T 4x PANELS	 T1 4x PANELS
	 T2 2x PANELS	 U 4x PANELS	 U1 4x PANELS	 V 4x PANELS
	 V1 4x PANELS	 V2 4x PANELS	 V3 4x PANELS	 W 2x PANELS




W1 2x PANELS




X 104x HOOK




Y 20x PLASTIC LOCK




Y1 2x MOSQUITO SIDEWALL



Y2 2x MOSQUITO SIDEWALL




Y5 2x SOLID SIDEWALL



Y6 2x SOLID SIDEWALL




Yb 4xSTRAPES




Z5 1x MESH




AA 4x JOINT COVER

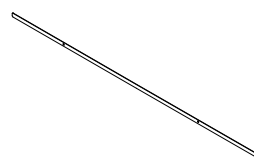

BB 2x PLASTIC BAR



CC 2x PLASTIC BAR



M6x12

1 150x



M6x16

2 25x



M6x15

3 8x




ST4.8x10

4 32x



M5x10

5 4x




6 1x




M6x20


7 13x

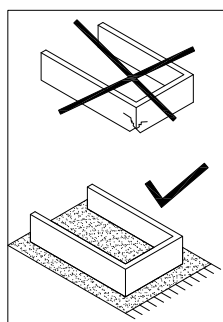


3

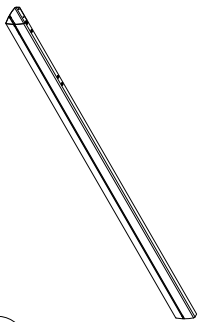

A 4x



B 4x



M6x12



1 12x




S4

6 1x






Set up poles (Part A) with plates (Part B) using screws #1 as shown in diagram.

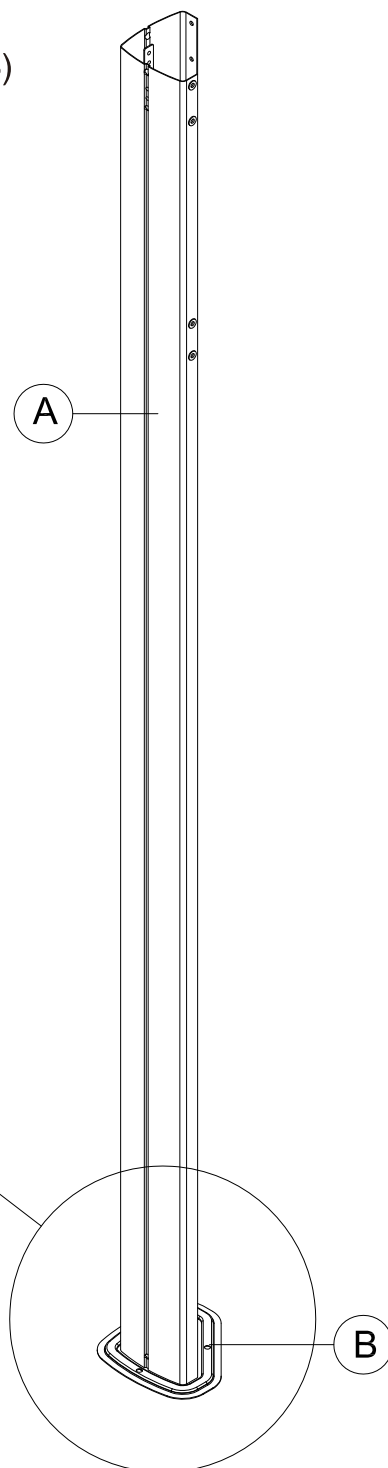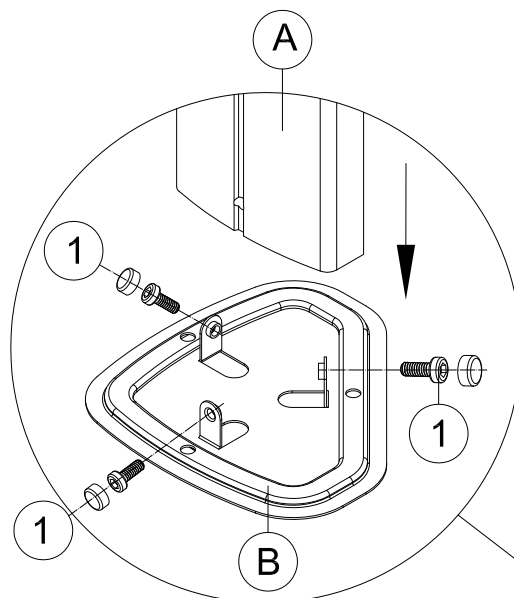


Attention: You can also put the plastic caps in the last step.

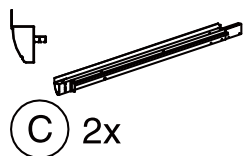


Connect Part C and C1 into one beam using screws #1 as shown in diagram.

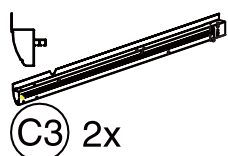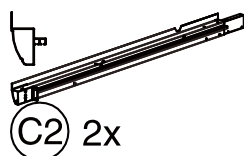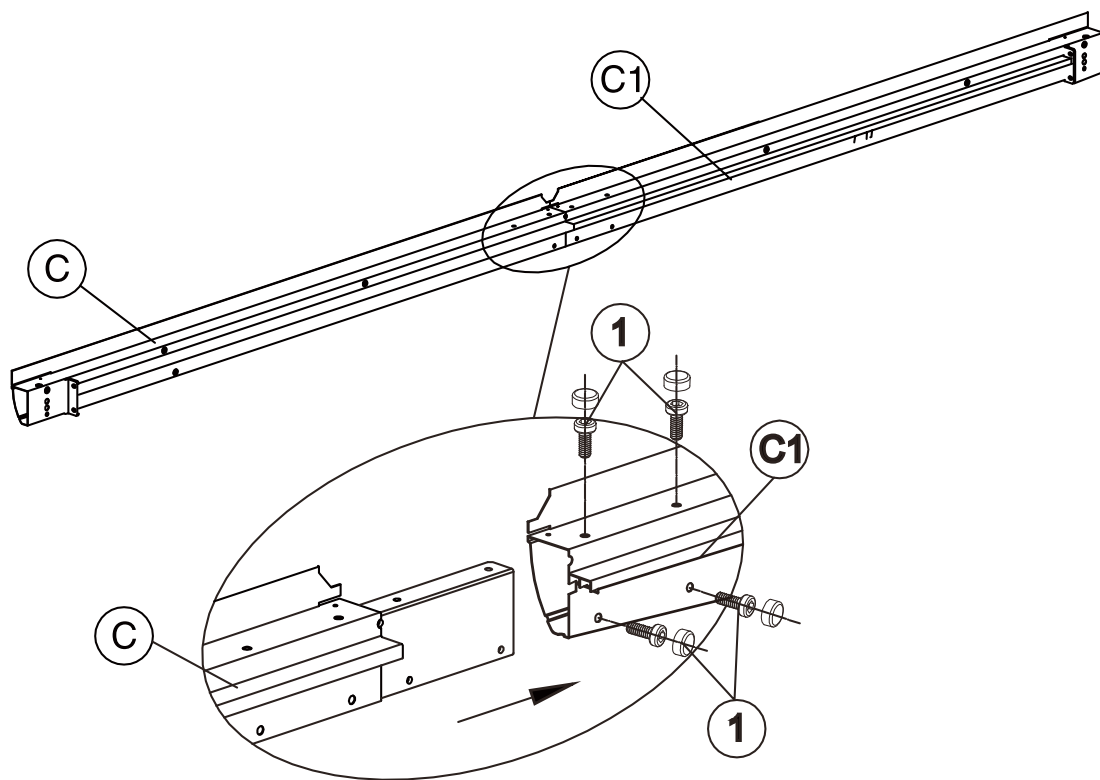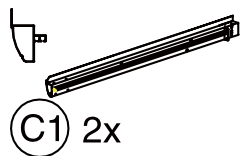

1 16x

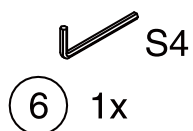

Connect Part C2 and C3 into one beam using screws #1 as shown in diagram.

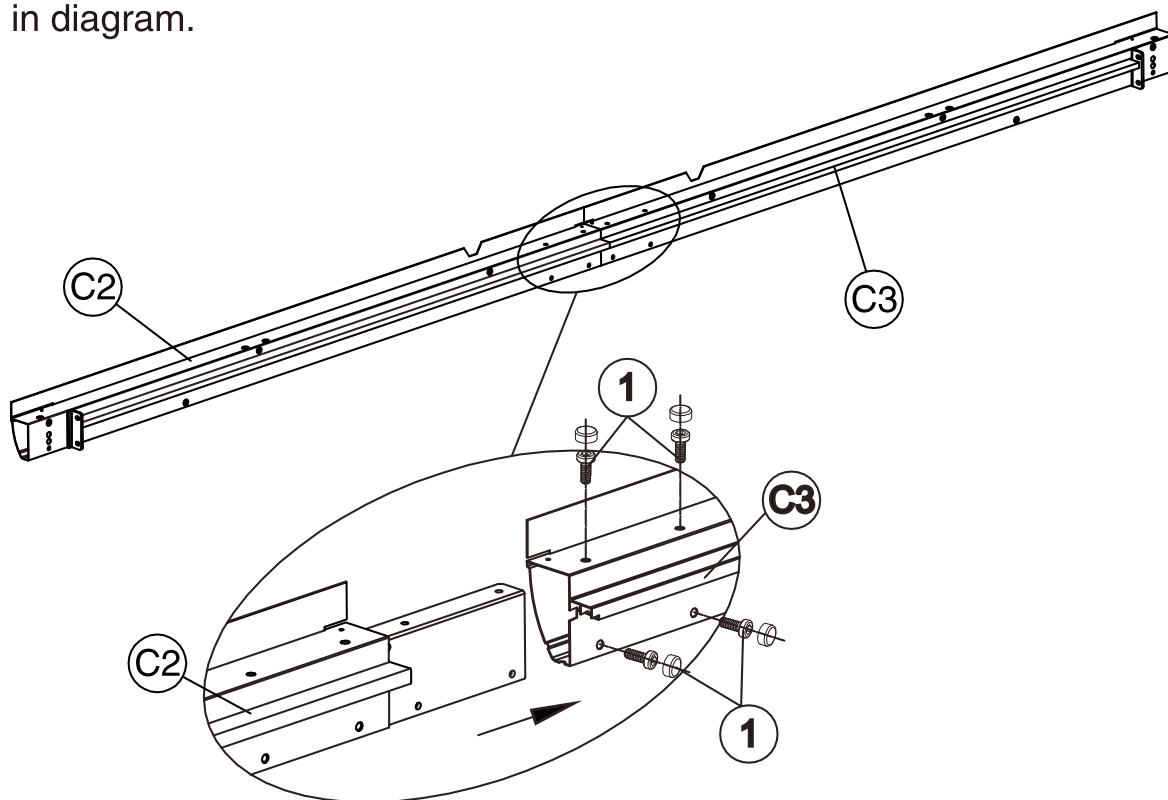



M6x12

1

8x



M6x16

2


16x



M6x15

3


8x




6

1x


Use screws #1, #2 and #3 to connect poles and beams as shown in diagram.

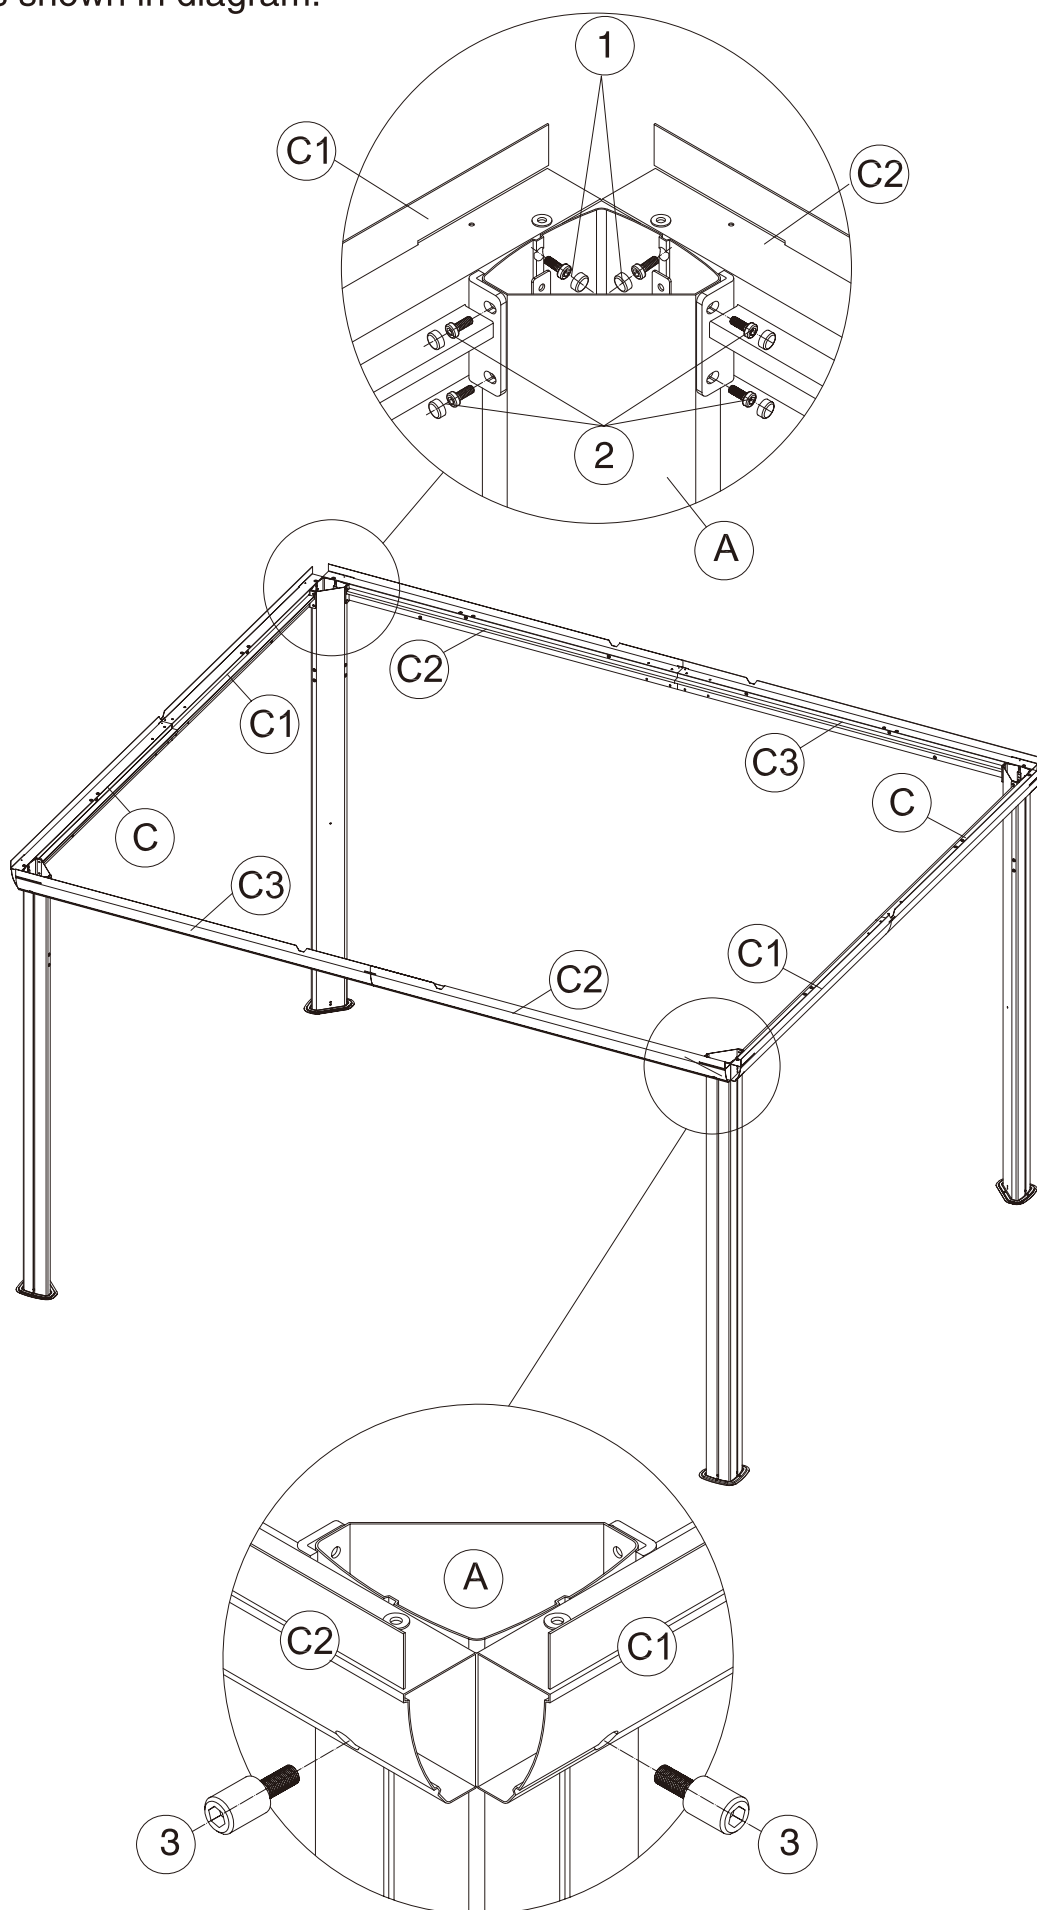

6

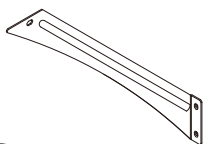

L 4x

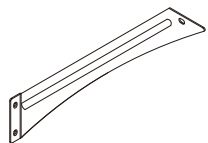

L1 4x



M6x12



1 24x




S4


6 1x

Affix the frame with corner solidifying bars (Part L and L1) by using screws #1 as shown in diagram.

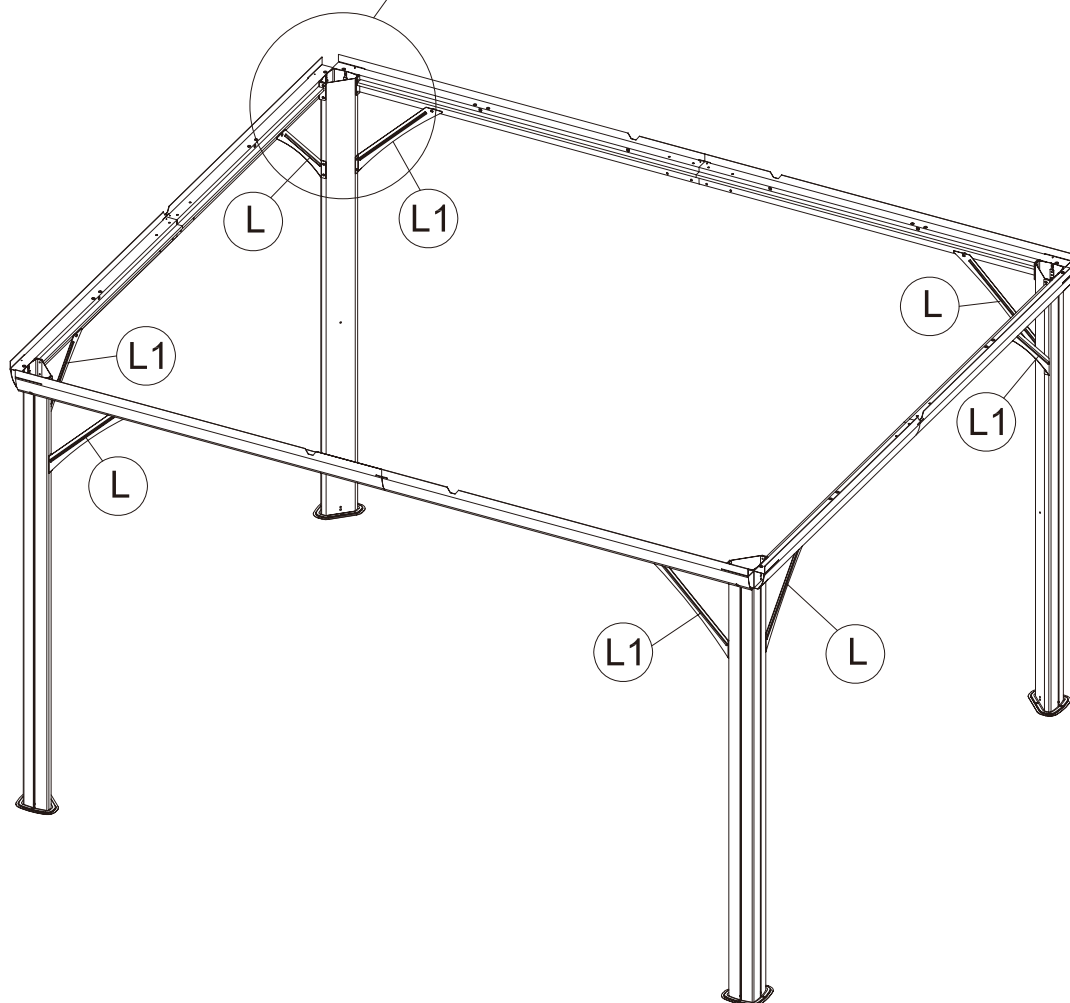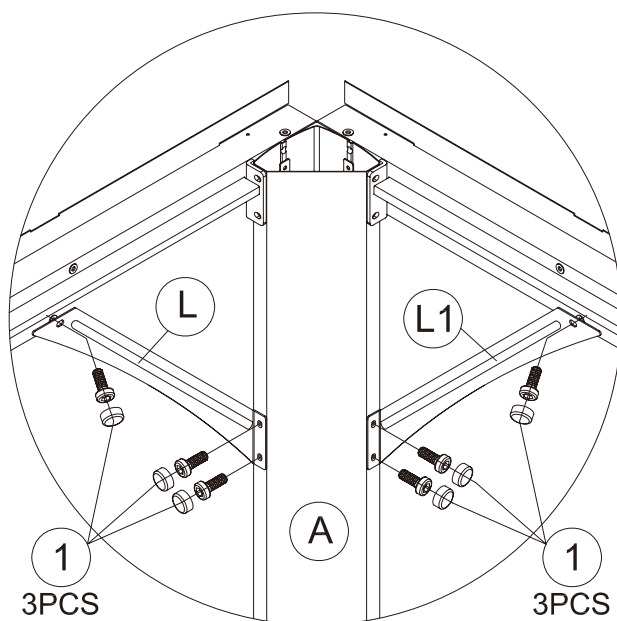



X
x104



AA (x4)



M5x10

5

4x



N



4x





ST4.8x10

4

8x

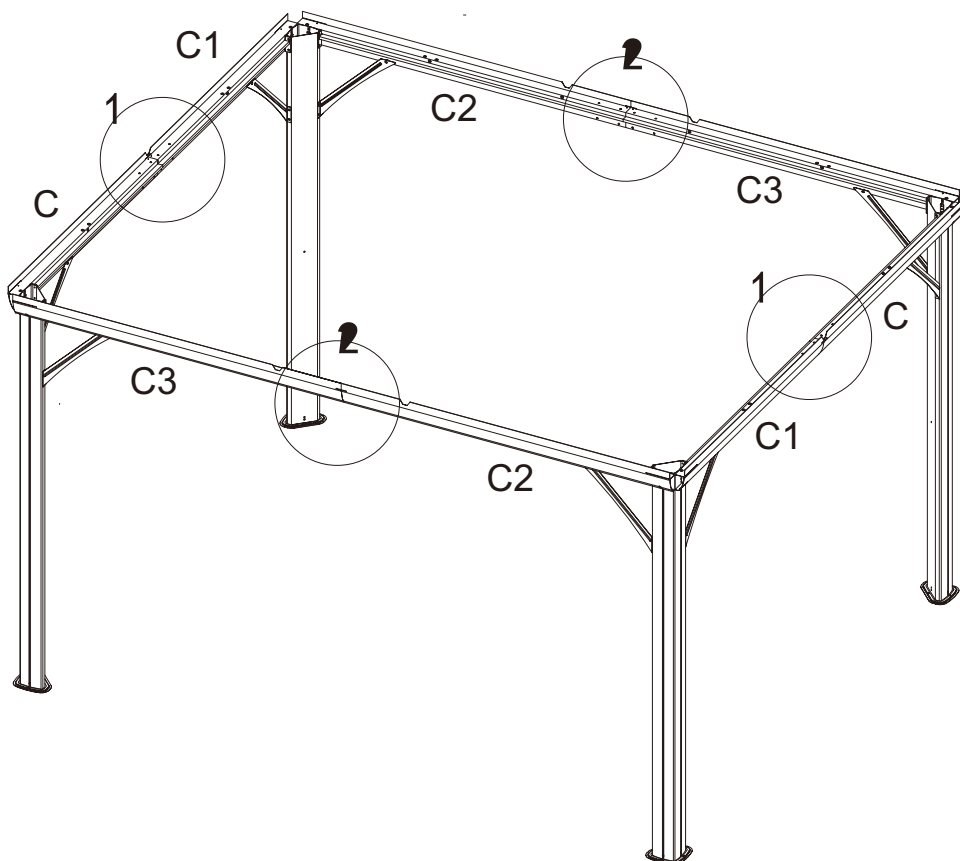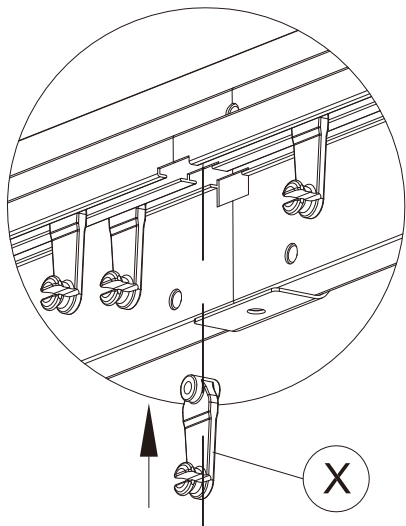


After you finish putting the hooks into the tracks, secure with part N & AA by using screws #5.

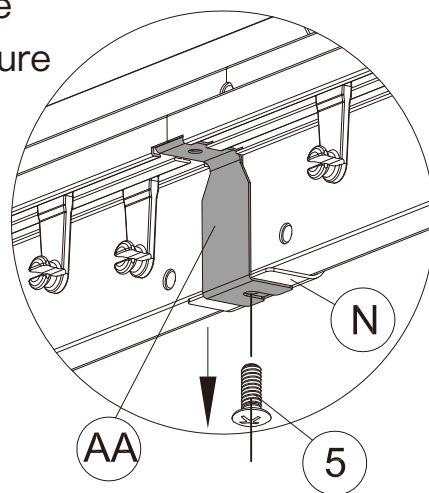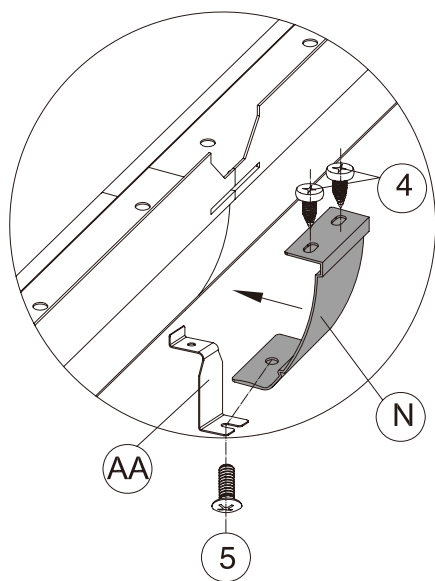


Put 6 hooks to each slot of sidewall track (Part C and Part C1)


1

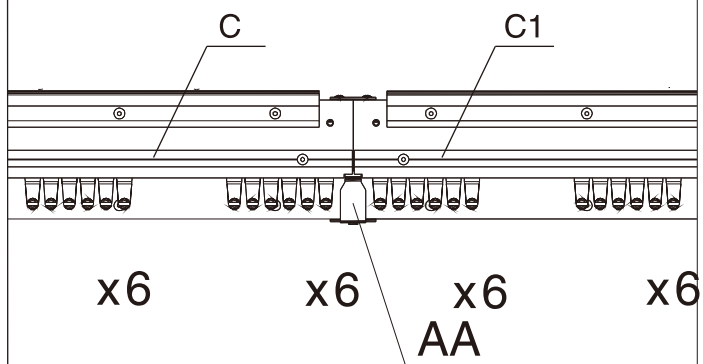

Put 7 hooks to each slot of sidewall track (Part C2 and Part C3)

2

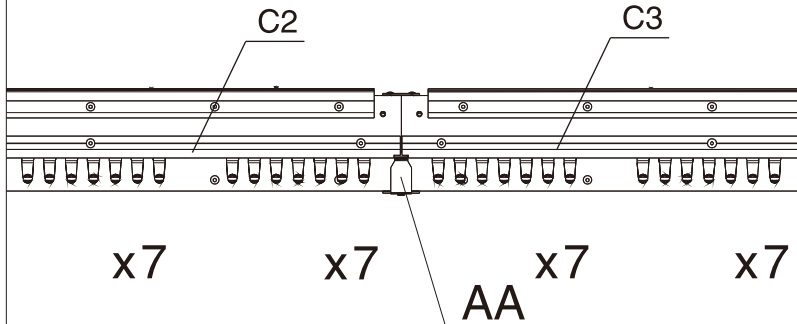




(M) 4x



ST4.8x10


(4) 16x

Finish connecting beams using corner covers (Part M) and screws #4 as shown in diagram.

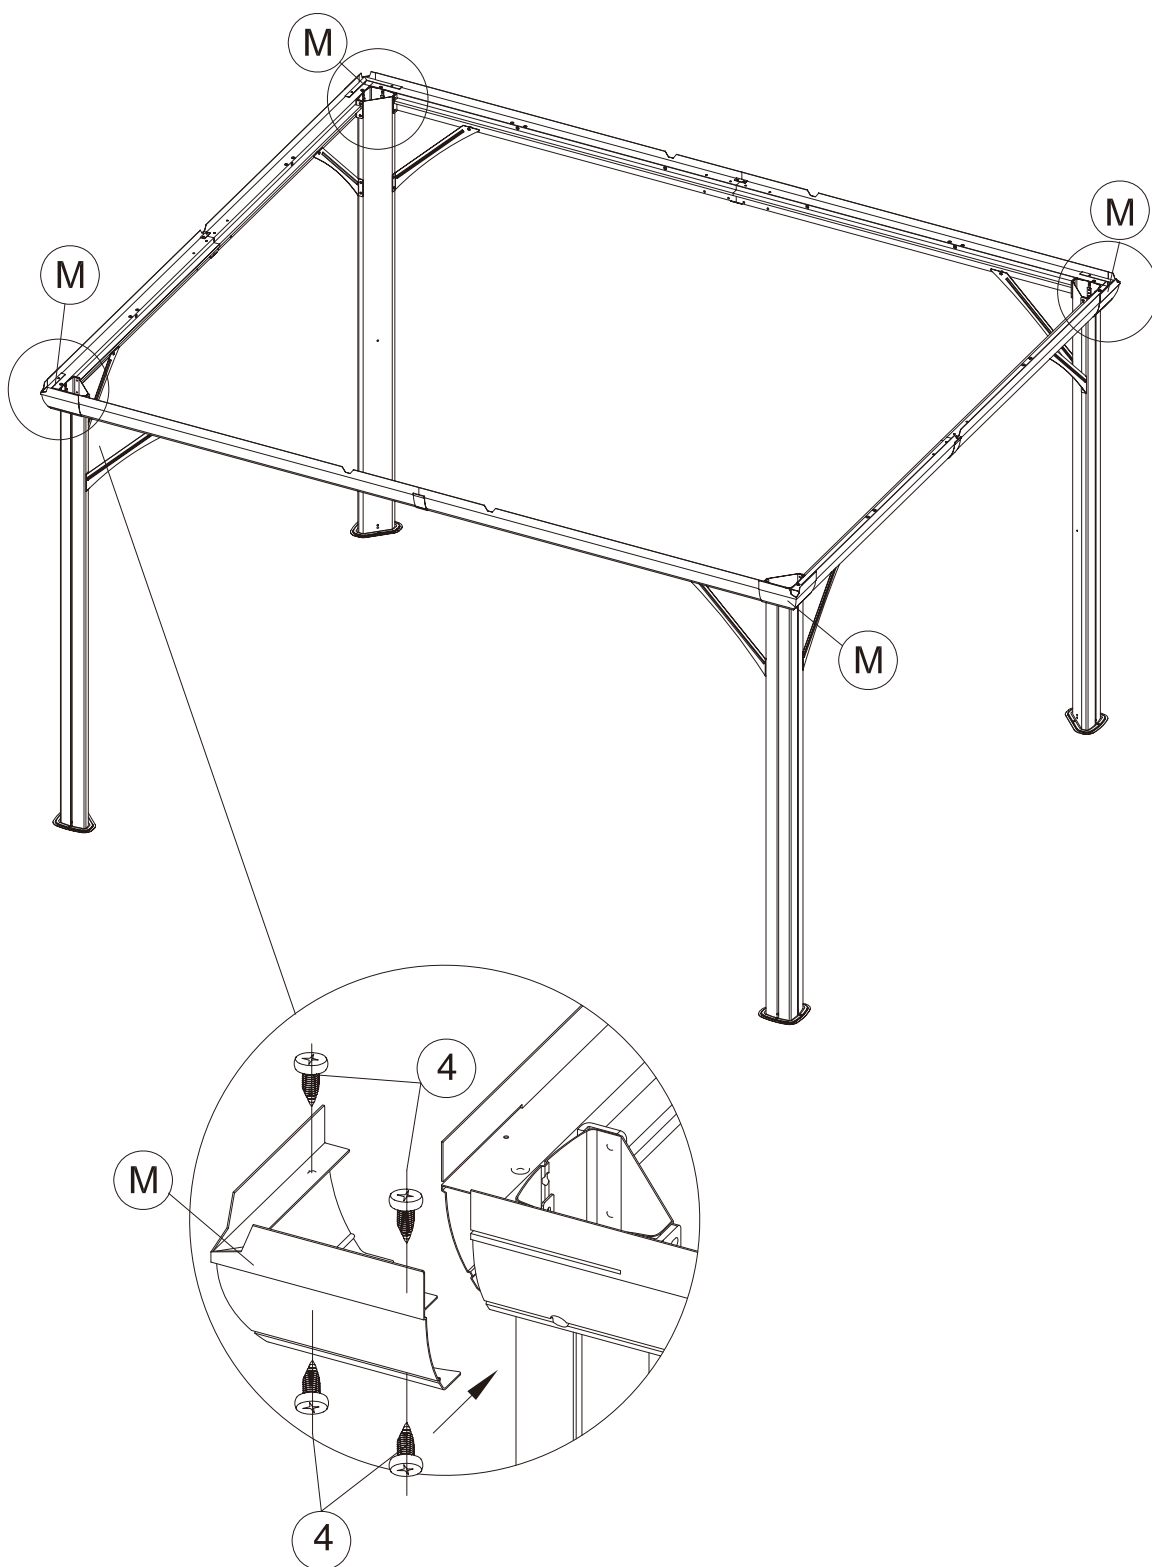


D 4x
P 4x
Q 1x
M6x12
1 12x
S4
6 1x
M6x12
1 8x
S4
6 1x
10

Set up roof frame.

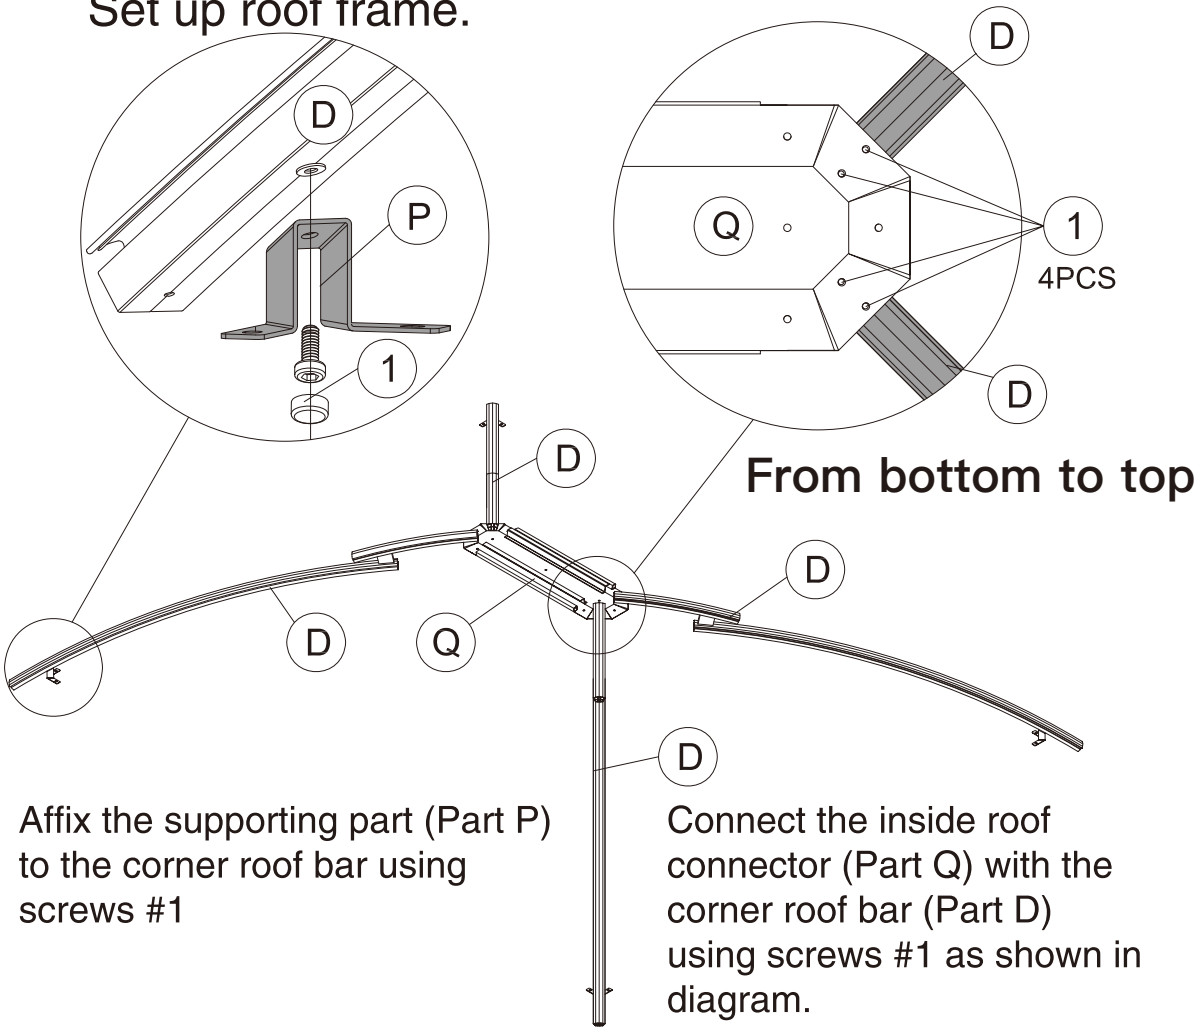

Attach the corner roof bar (Part D) and main frame using screws #1 as show in diagram.

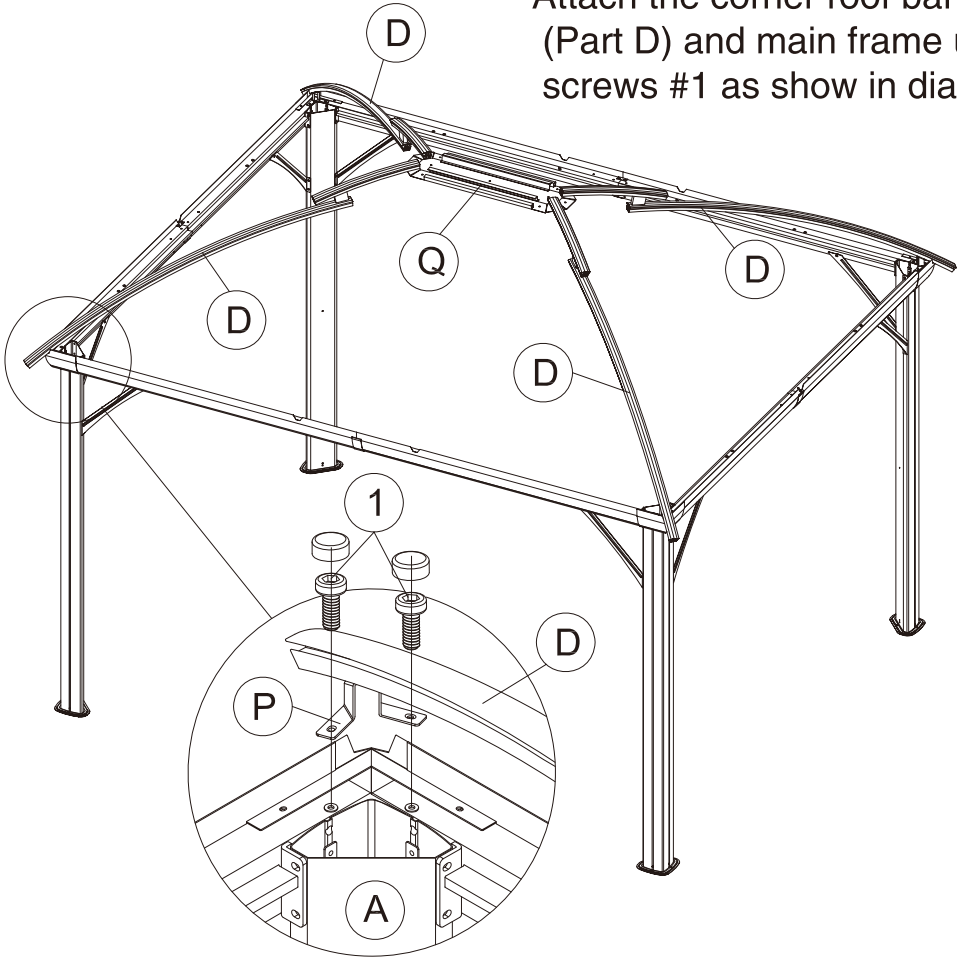



E 6x



M6x12

1 6x



M6x16


2 6x




S4

6 1x

From bottom to top

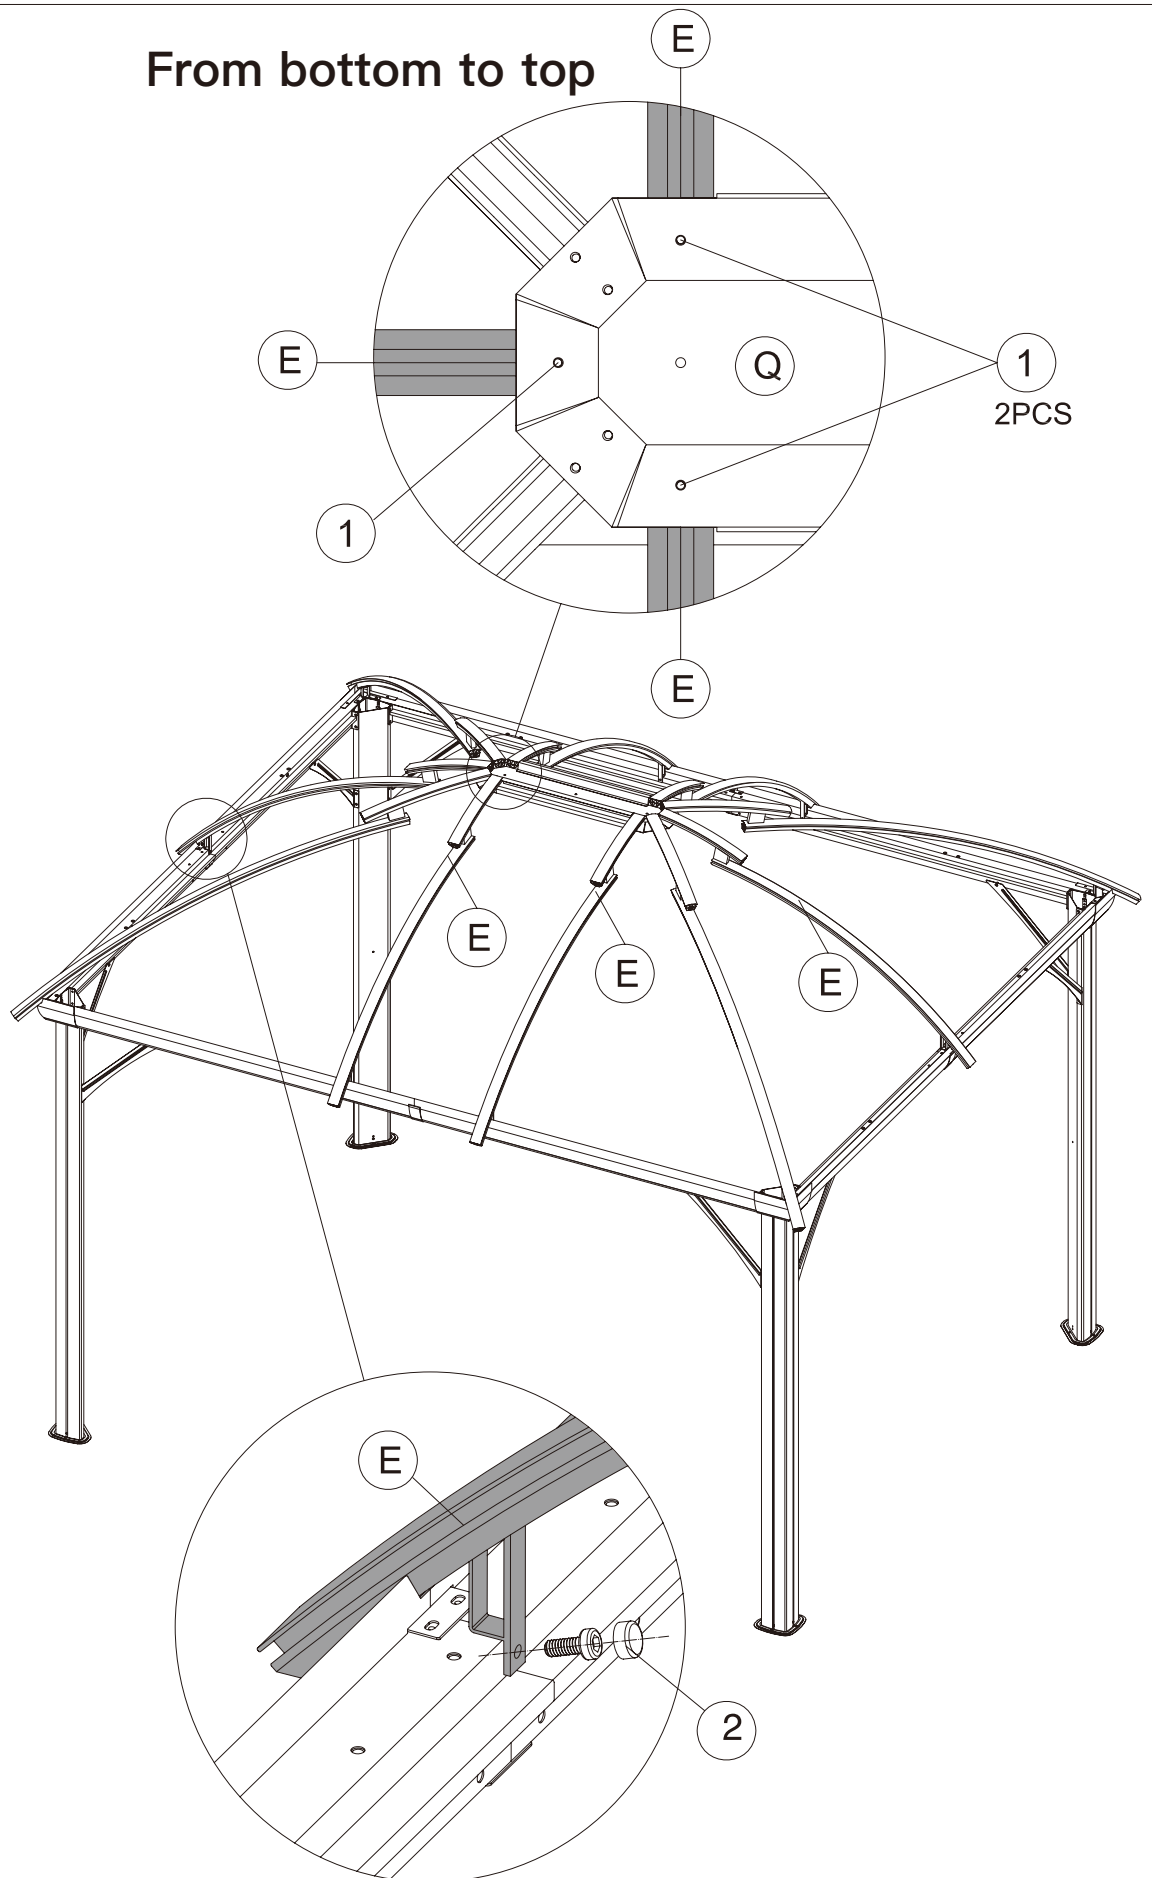

Attach Roof Bars (Part E) to inside roof connector and main beam using Screws 1#&2# as shown in diagram.

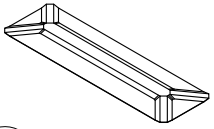

Q1 1x



6 1x






M6x20

7 3x


Connect both the outside roof connector #Q1 and the mesh #Z5 to the inside roof #Q with screws #7 as the picture shows.

ATTENTION: The holes of part #Z5, #Q and #Q1 need to be aligned, on the same vertical line.

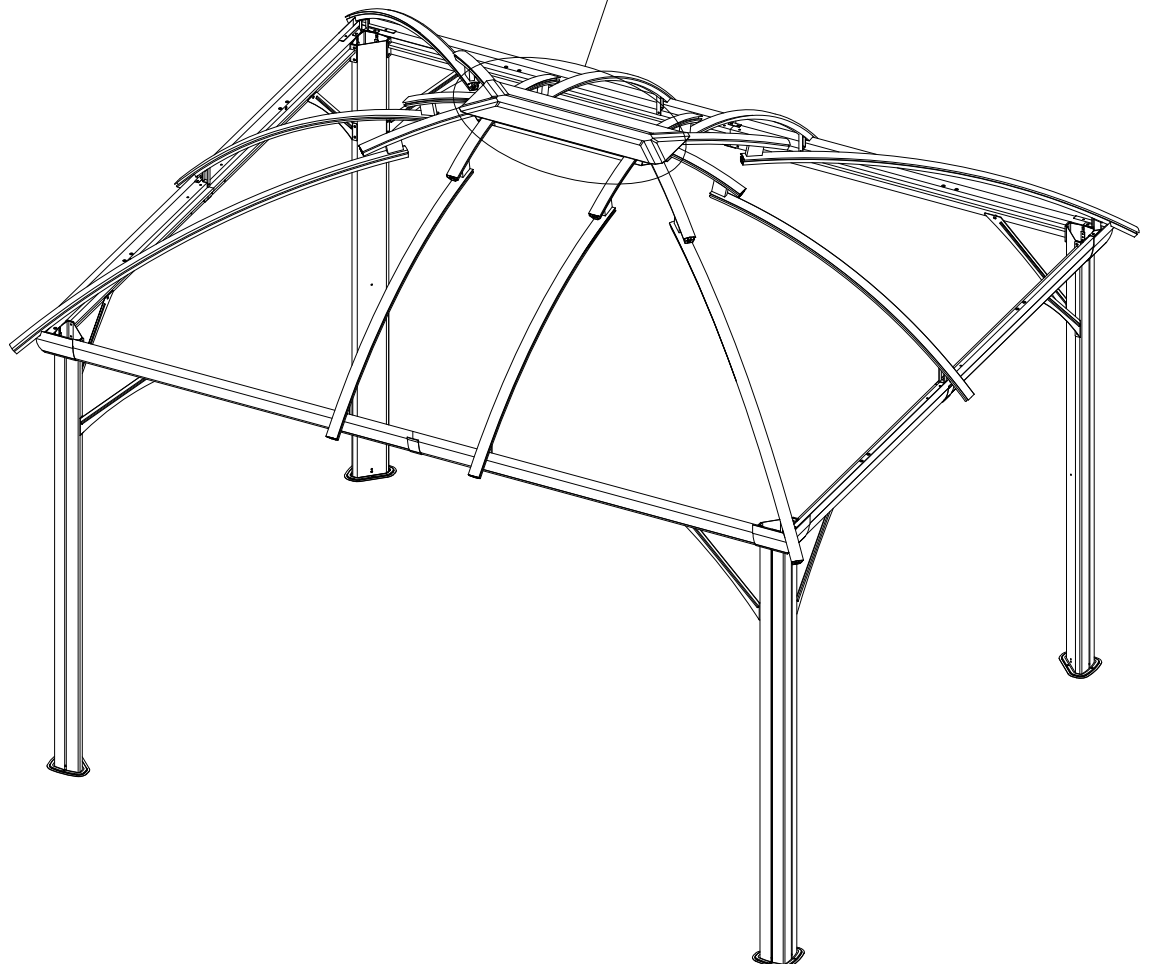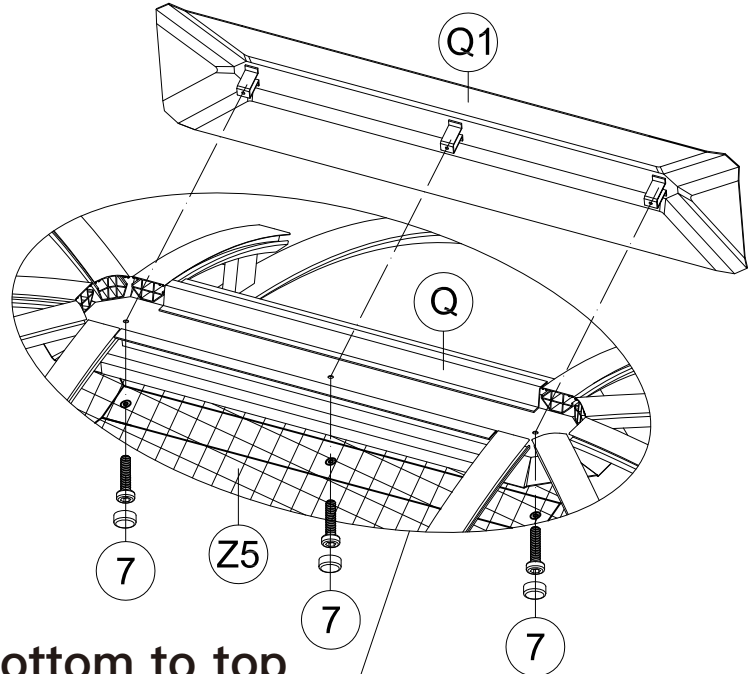


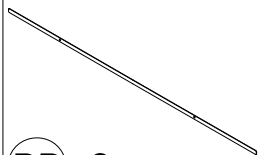

BB 2x





CC 2x




MESH

Z5 1x


Insert the part #BB/CC into the holes that around the edge of the part #Z5.

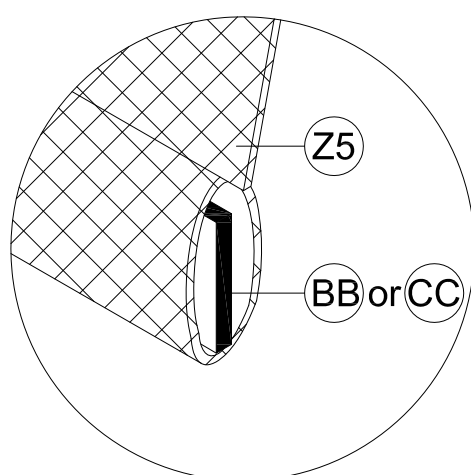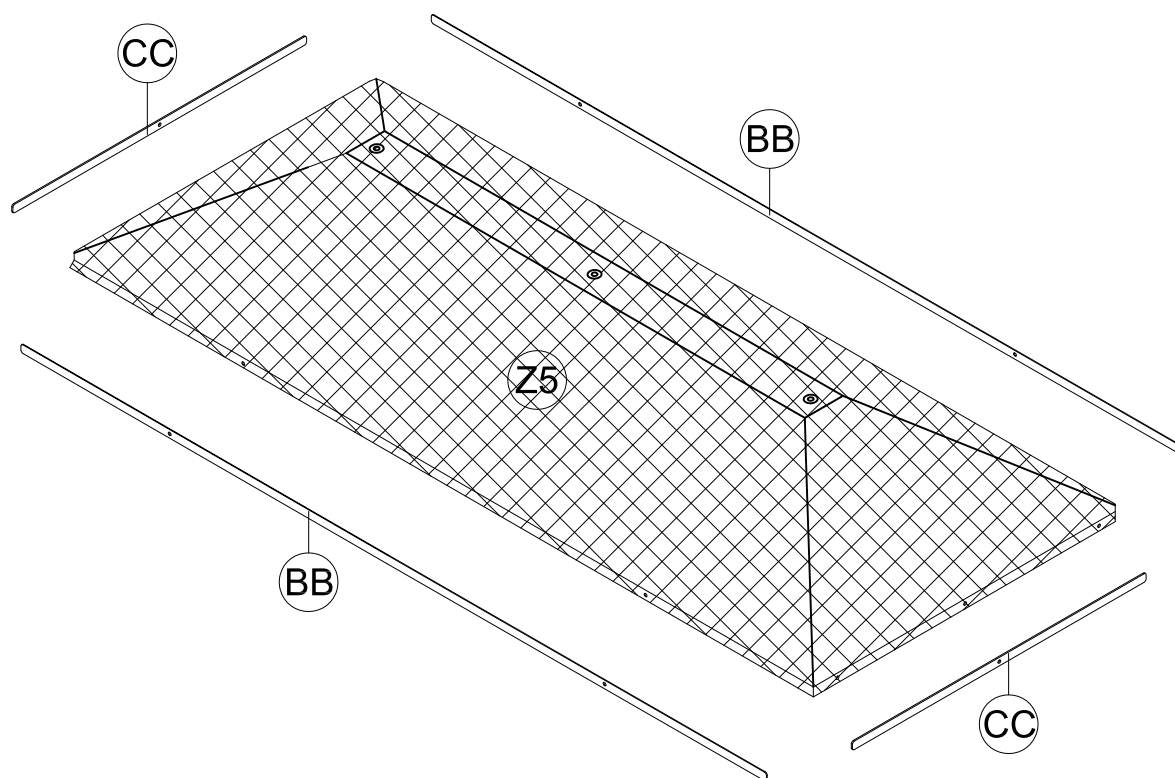

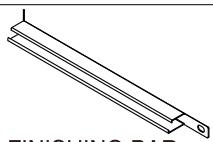

FINISHING BAR

(F) 2x

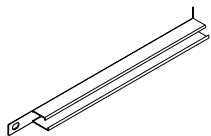

(F1) 2x



(F2) 2x



(R1) 4x



S4



(6) 1x




M6x20

(7) 4x

Firstly, attach part #F2, #F1 and #R1 to #E as the left picture shows, and then secure the #BB to the finishing bars with screws #7.

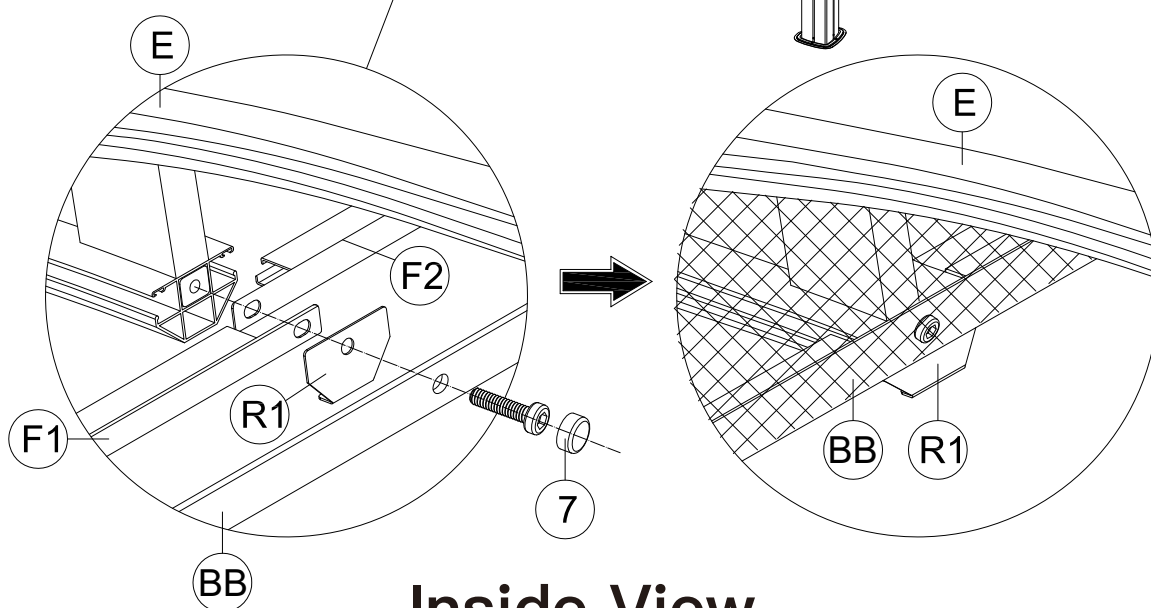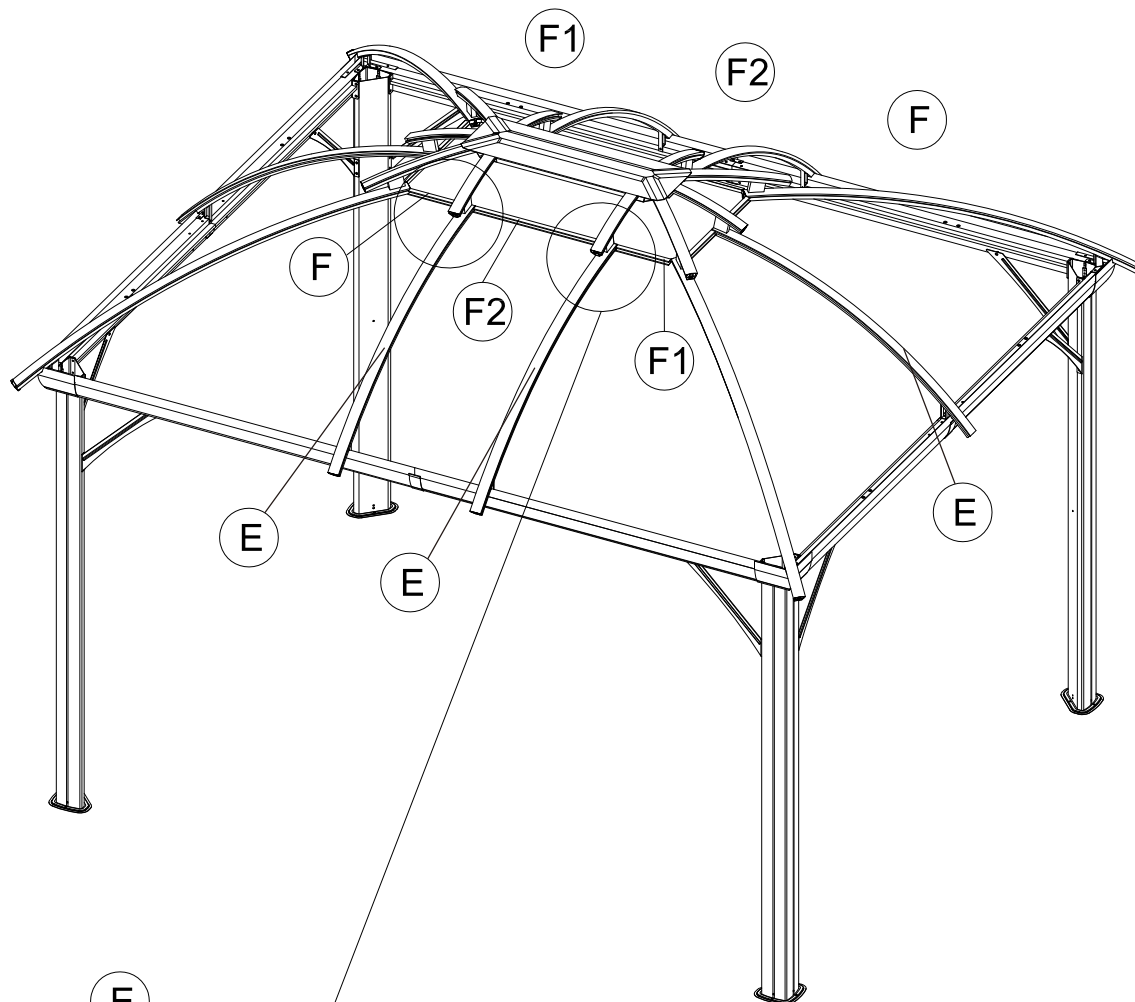


Inside View

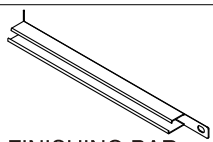

FINISHING BAR

(F) 2x

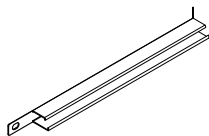

(F1) 2x



(R1) 2x



S4




(6) 1x



M6x20

(7) 2x


Firstly, attach part #F, #F1 and #R1 to #E as the picture shows, and then secure the #CC to the finishing bars with screws #7.

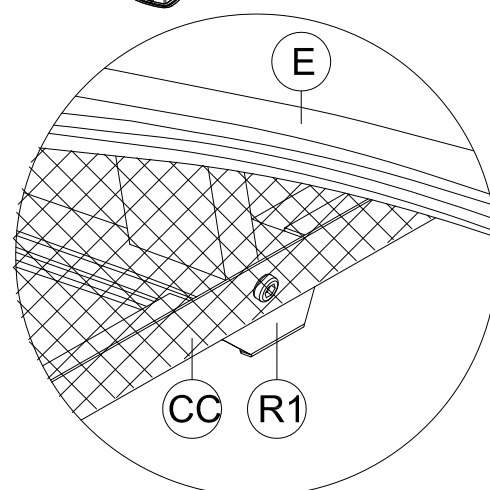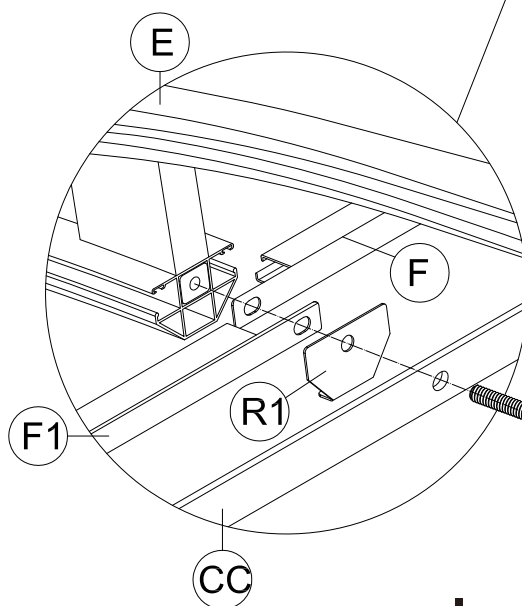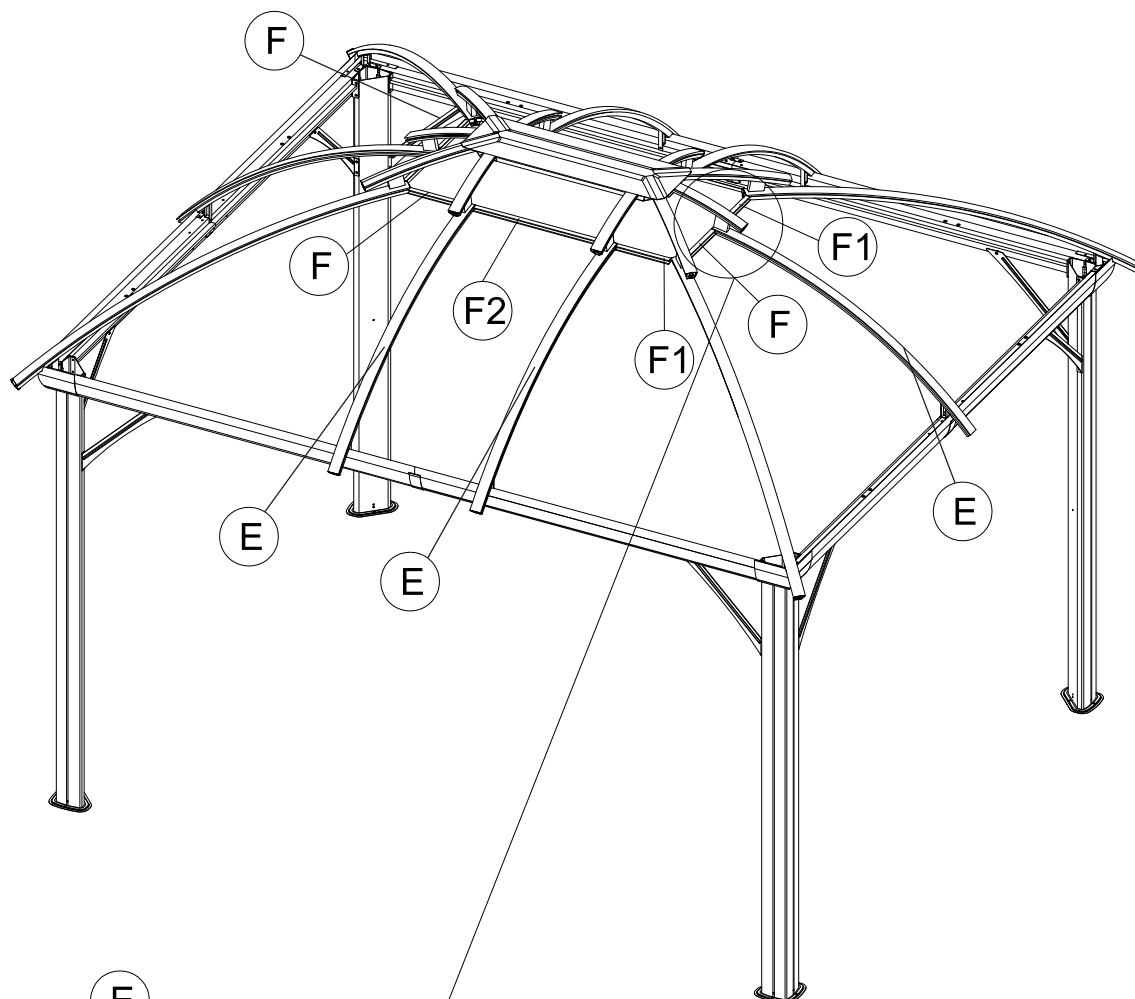

Inside View



(R) 4x




(6) 1x




M6x20


(7) 4x

Attach part #R to the part #D, and then secure the corners of #Z5(MESH) to the 4 corner roof bars with screws #7 as the right picture shows.

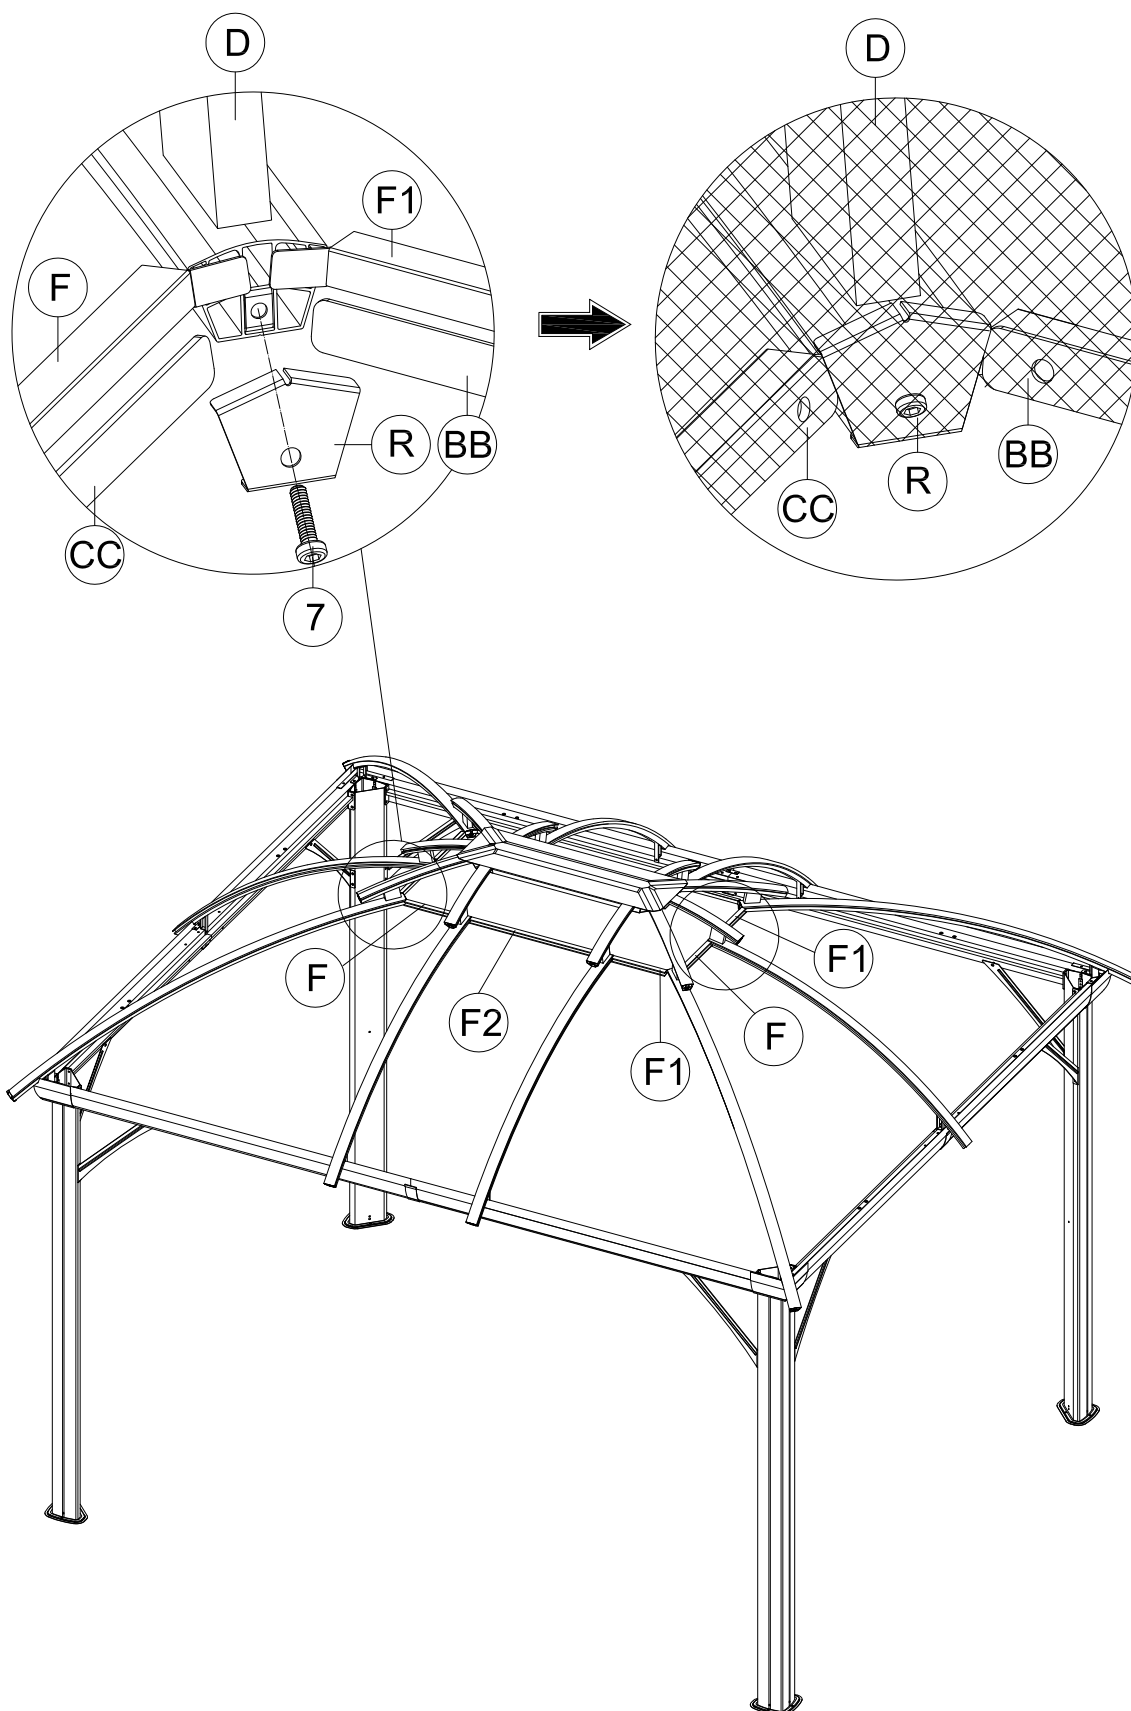


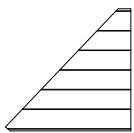

T 4x


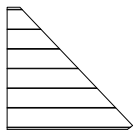









T1 4x

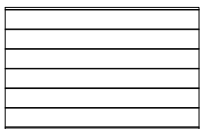


T2 2x


Insert panels (Part T,T1 and T2) into the slots of roof bars as shown in diagram.

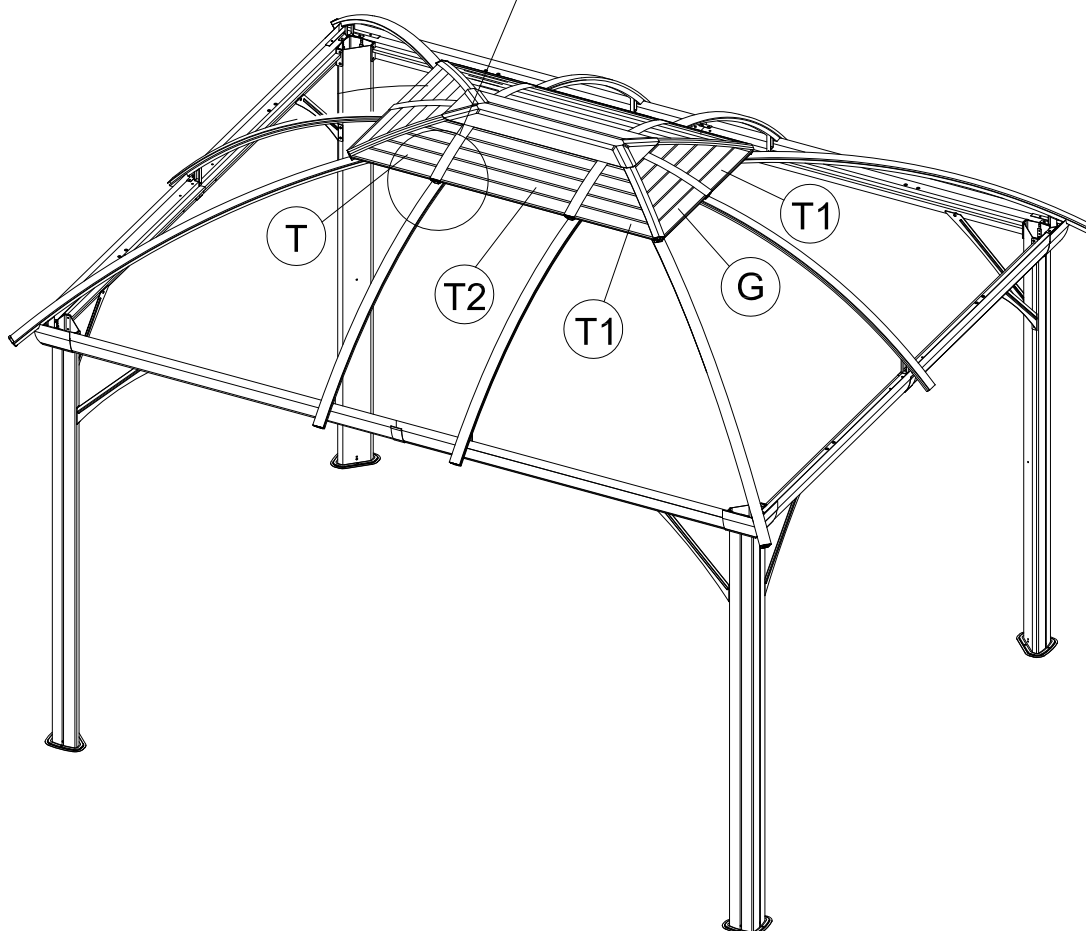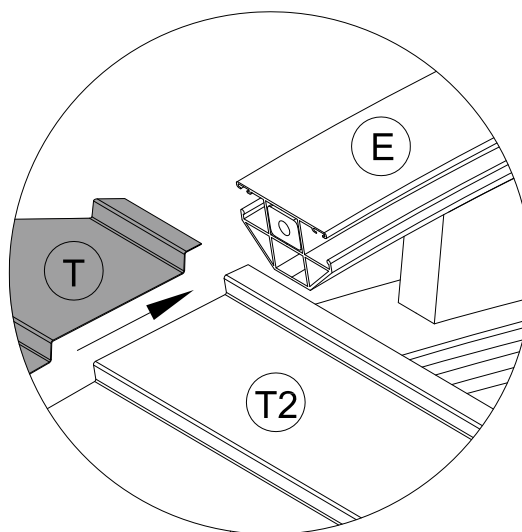

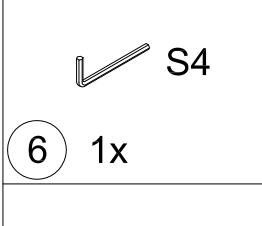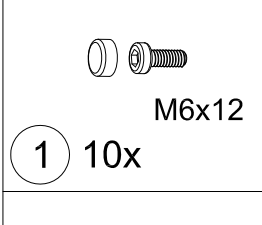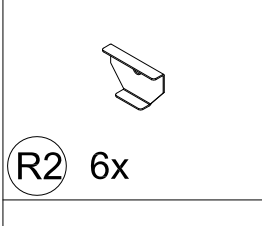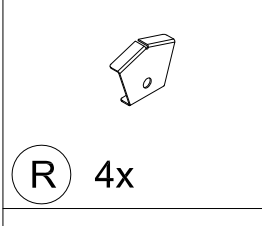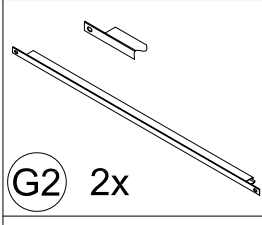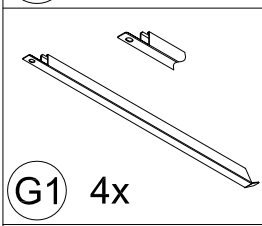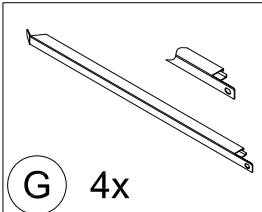


Affix finishing bars (Parts G, G1 and G2) to roof bars (Part E and D) using finishing end (Part R and R2) and screw #1 as shown in diagram.

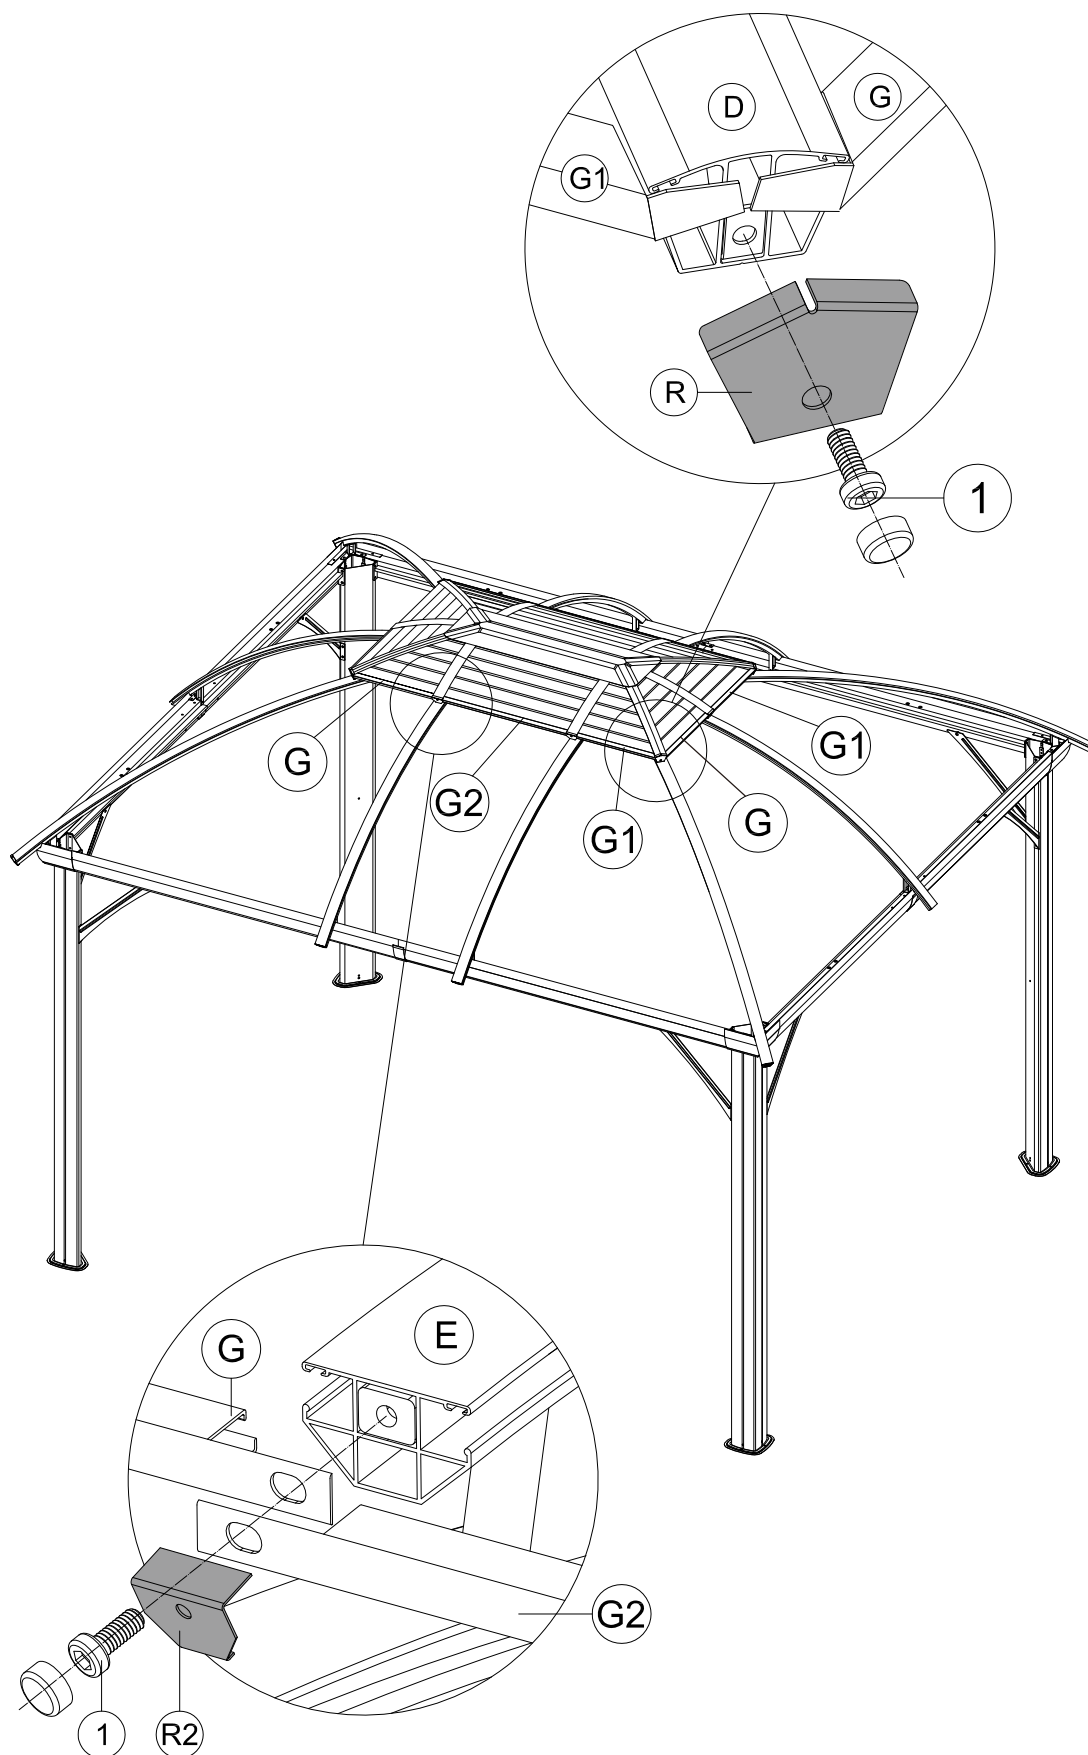

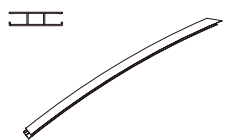

H 4x

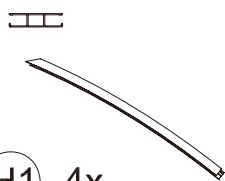

H1 4x



S 8x



M6x12




1 24x




S4

6 1x


Affix roof bars (Parts H and H1) to beam using supporting part (Part S) and screws #1 as shown in diagram.

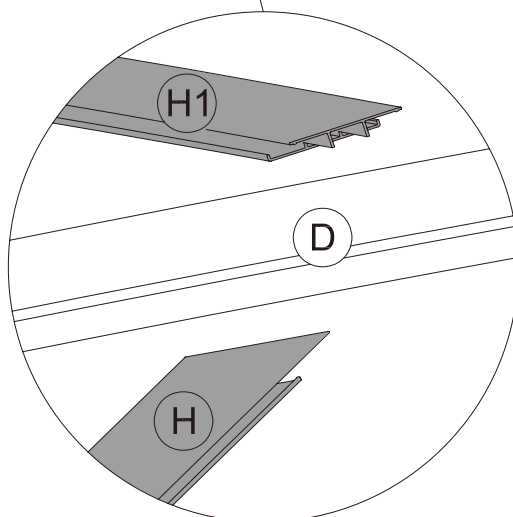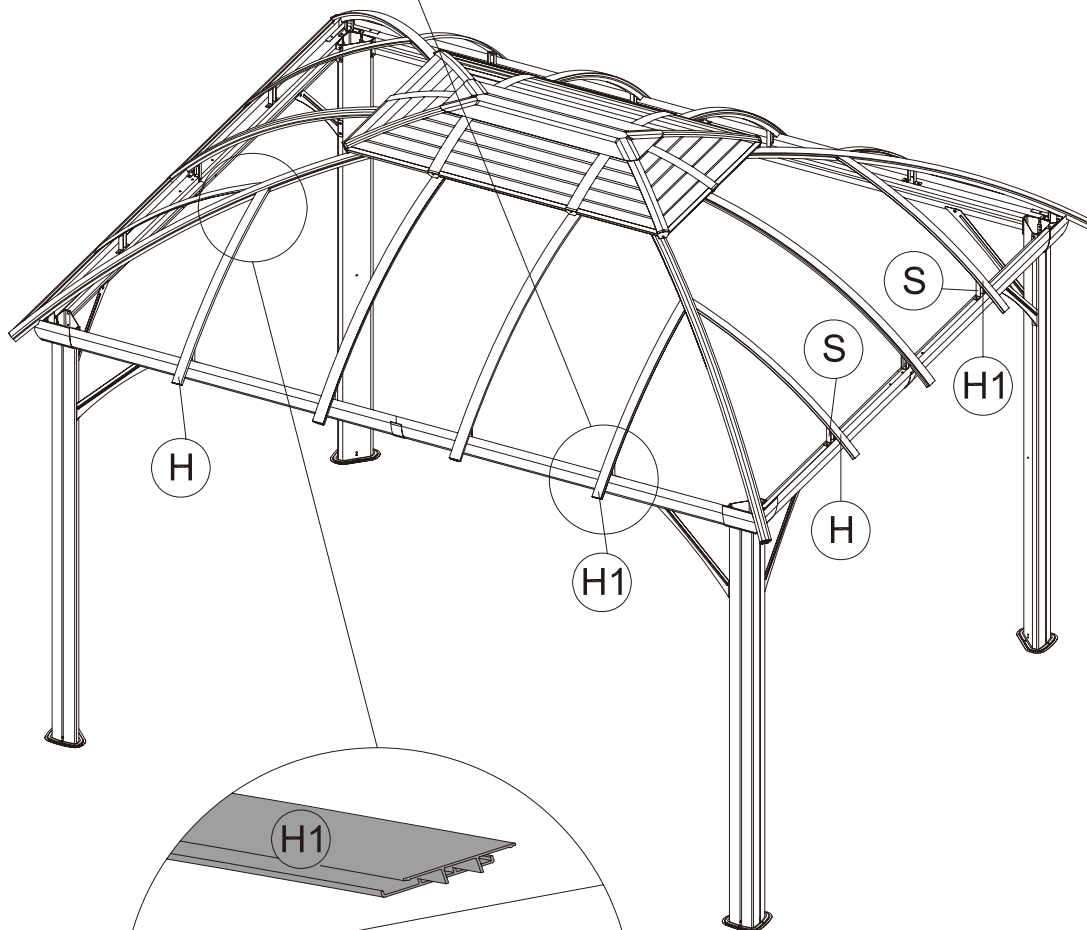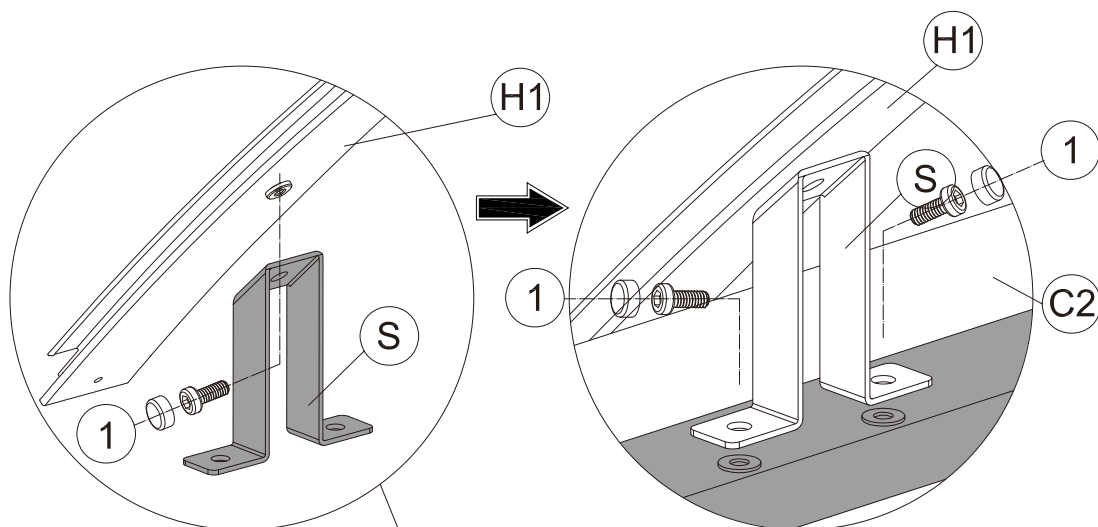


Insert roof bars (Part H and H1) to the slot of corner roof bar (Part D) as shown in diagram.

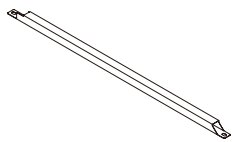

J 4x

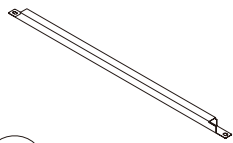

J1 4x

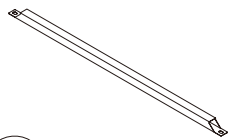

J2 2x



M6x12




1 10x



S4

6 1x


Affix solidifying bars (Parts J and J1) to corner roof bar (Part D) using screw #1 as shown in diagram.

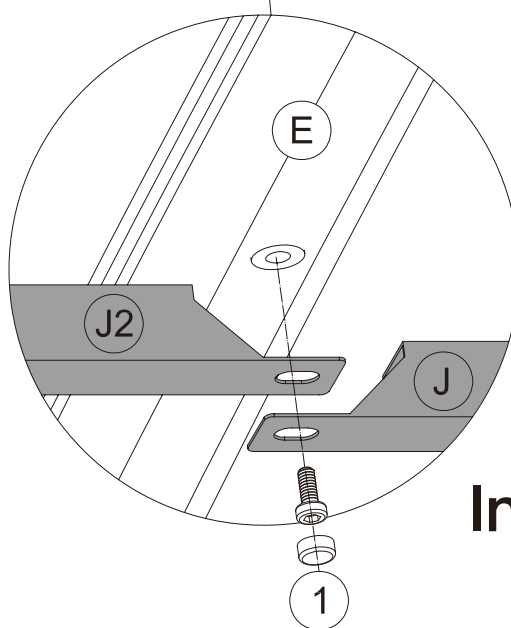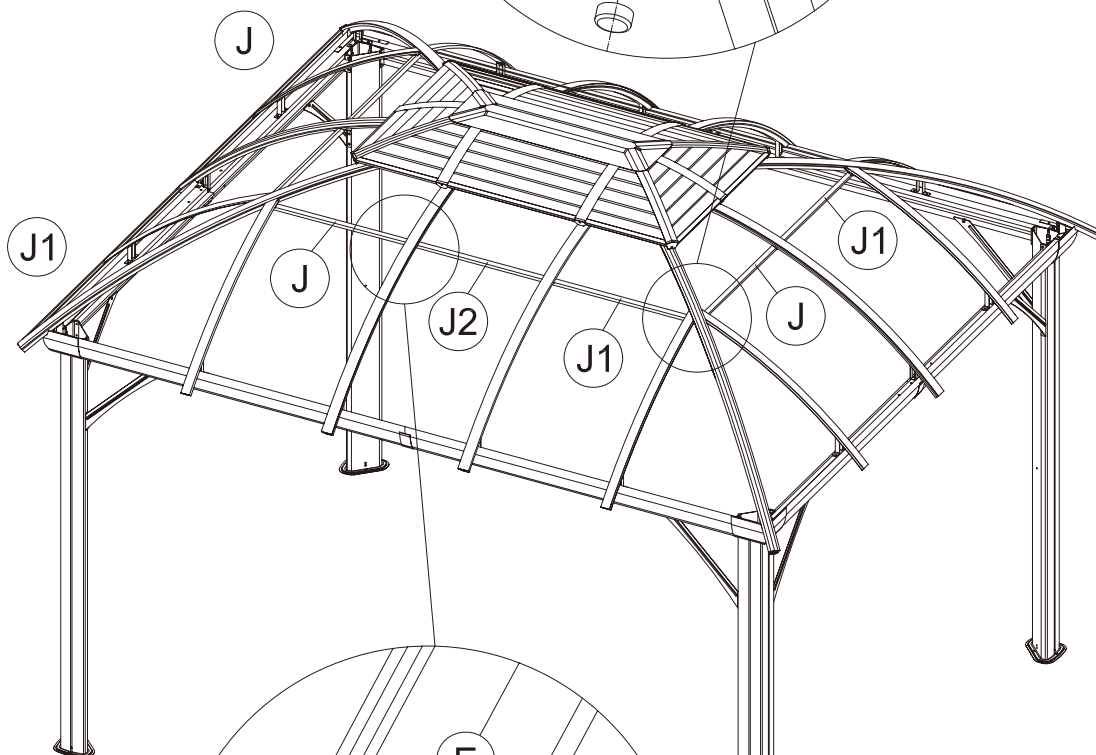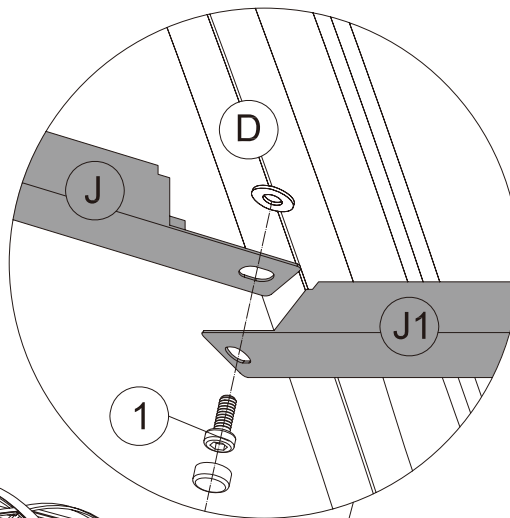

Inside View


Affix solidifying bars (Parts J and J2) to roof bar (Part E) using screw 1# as shown in diagram.









Overall Roof Assembly

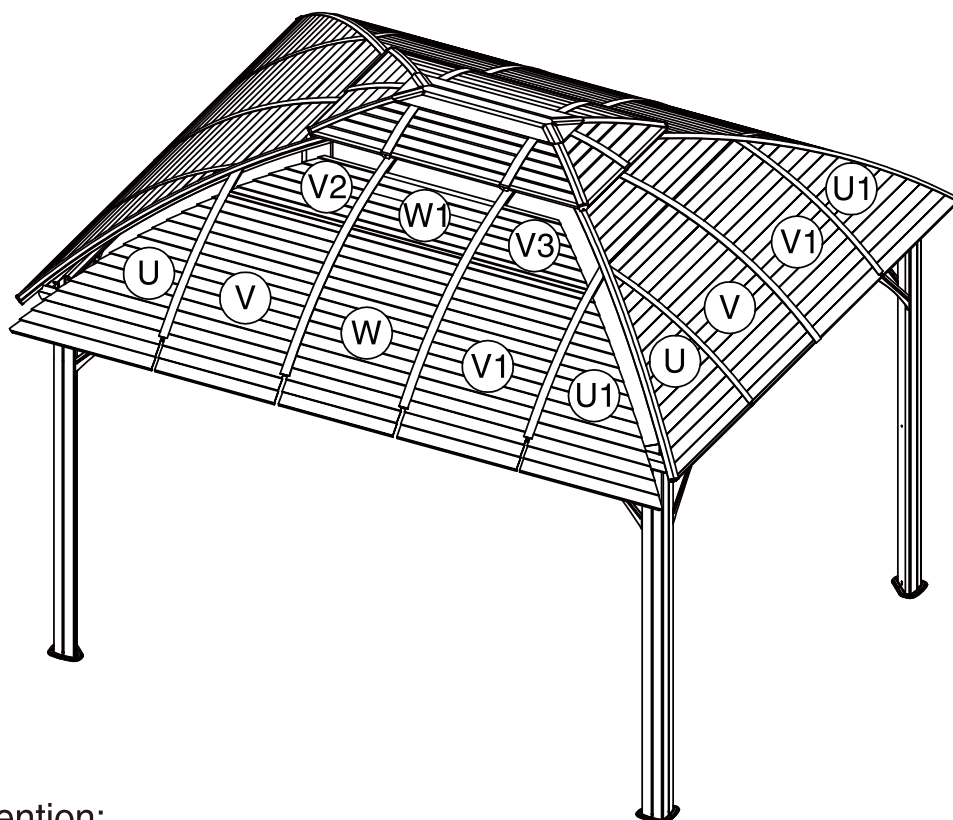


Attention:

Start from V and install piece by piece in a clockwise sequence. Only W and W1 can jointly insert into the slot. Fit V2 and V3 from top to the slot.

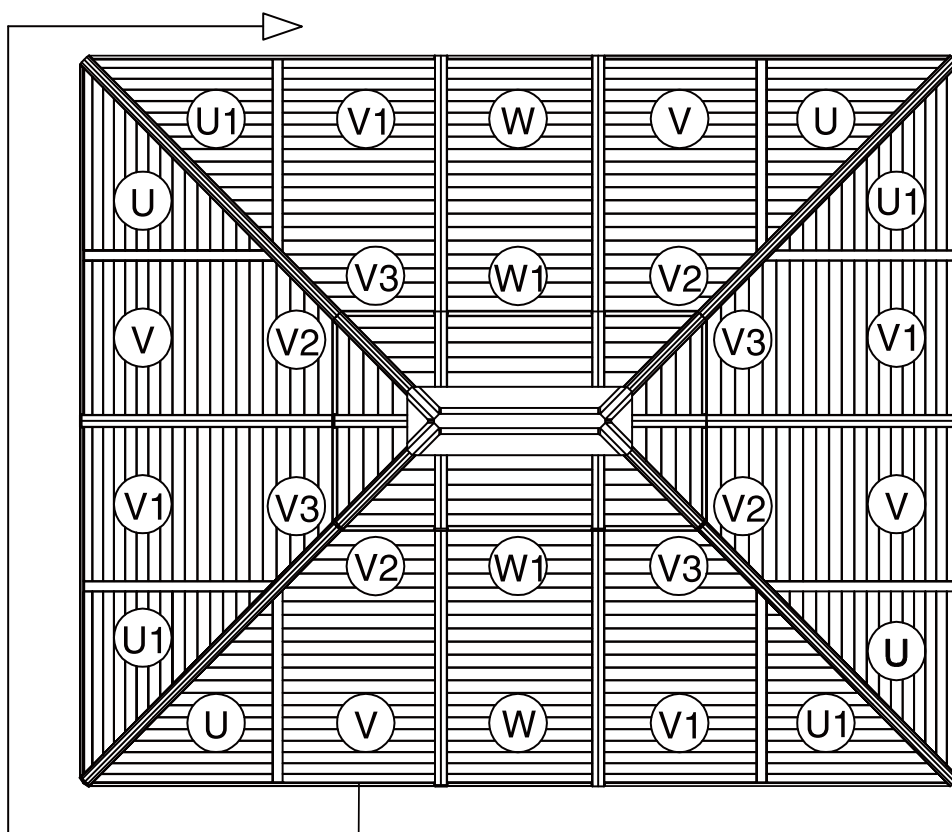

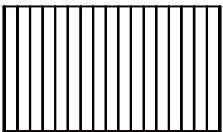

(U) 4x

(U1) 4x

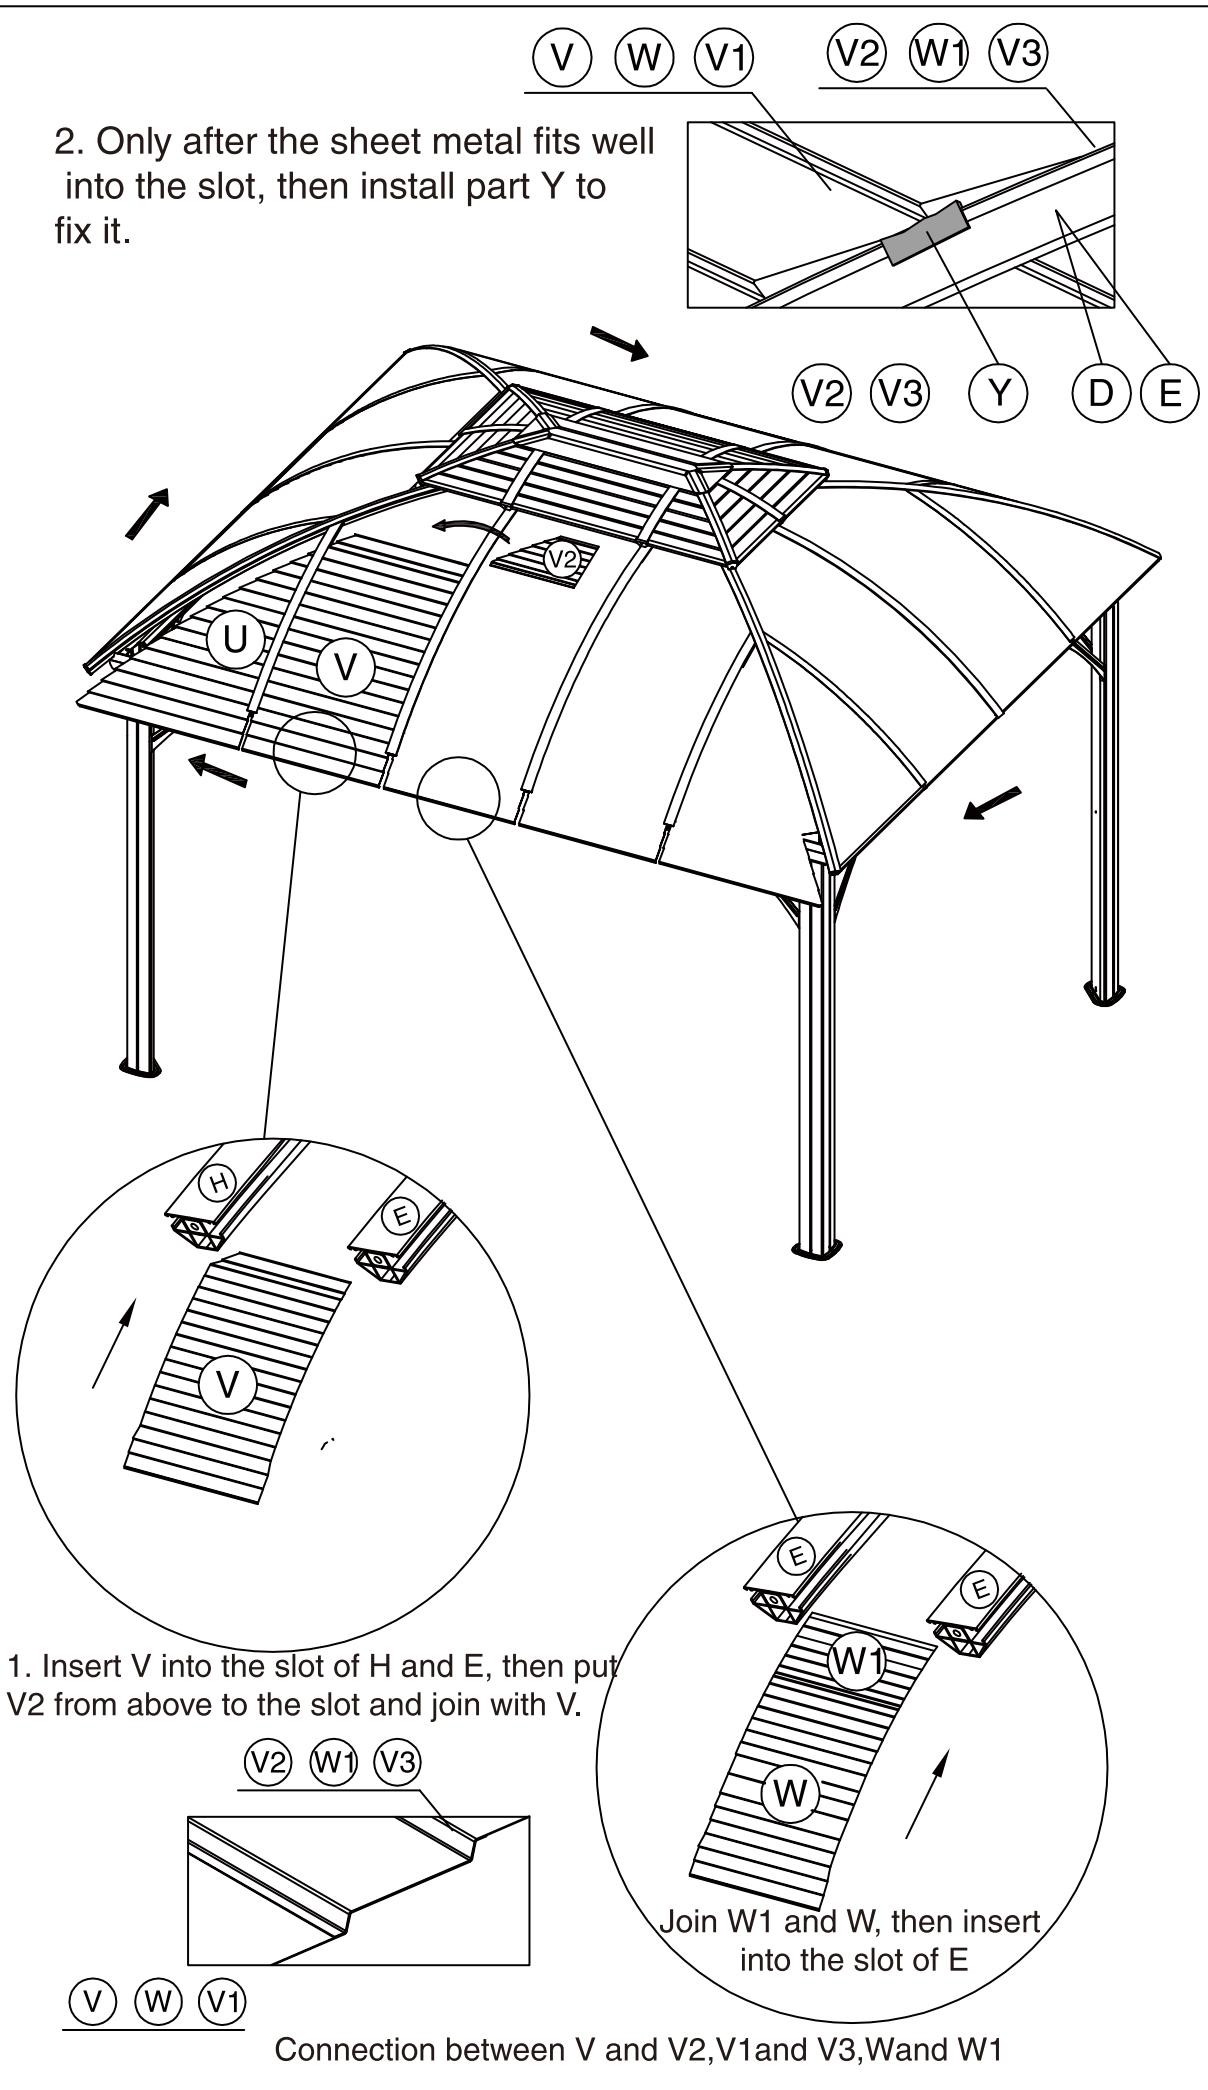(V) 4x

(V1) 4x

(V2) 4x

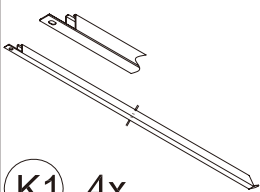(V3) 4x

(W) 2x

(W1) 2x

(Y) 20x
22







(K) 4x




(K1) 4x

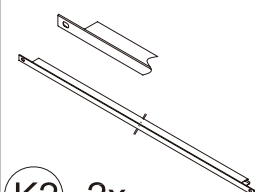

(K2) 2x



(R) 4x



(R2) 6x



M6X12

(1) 10x




ST4.8x10

(4) 8x




(6) 1x


23

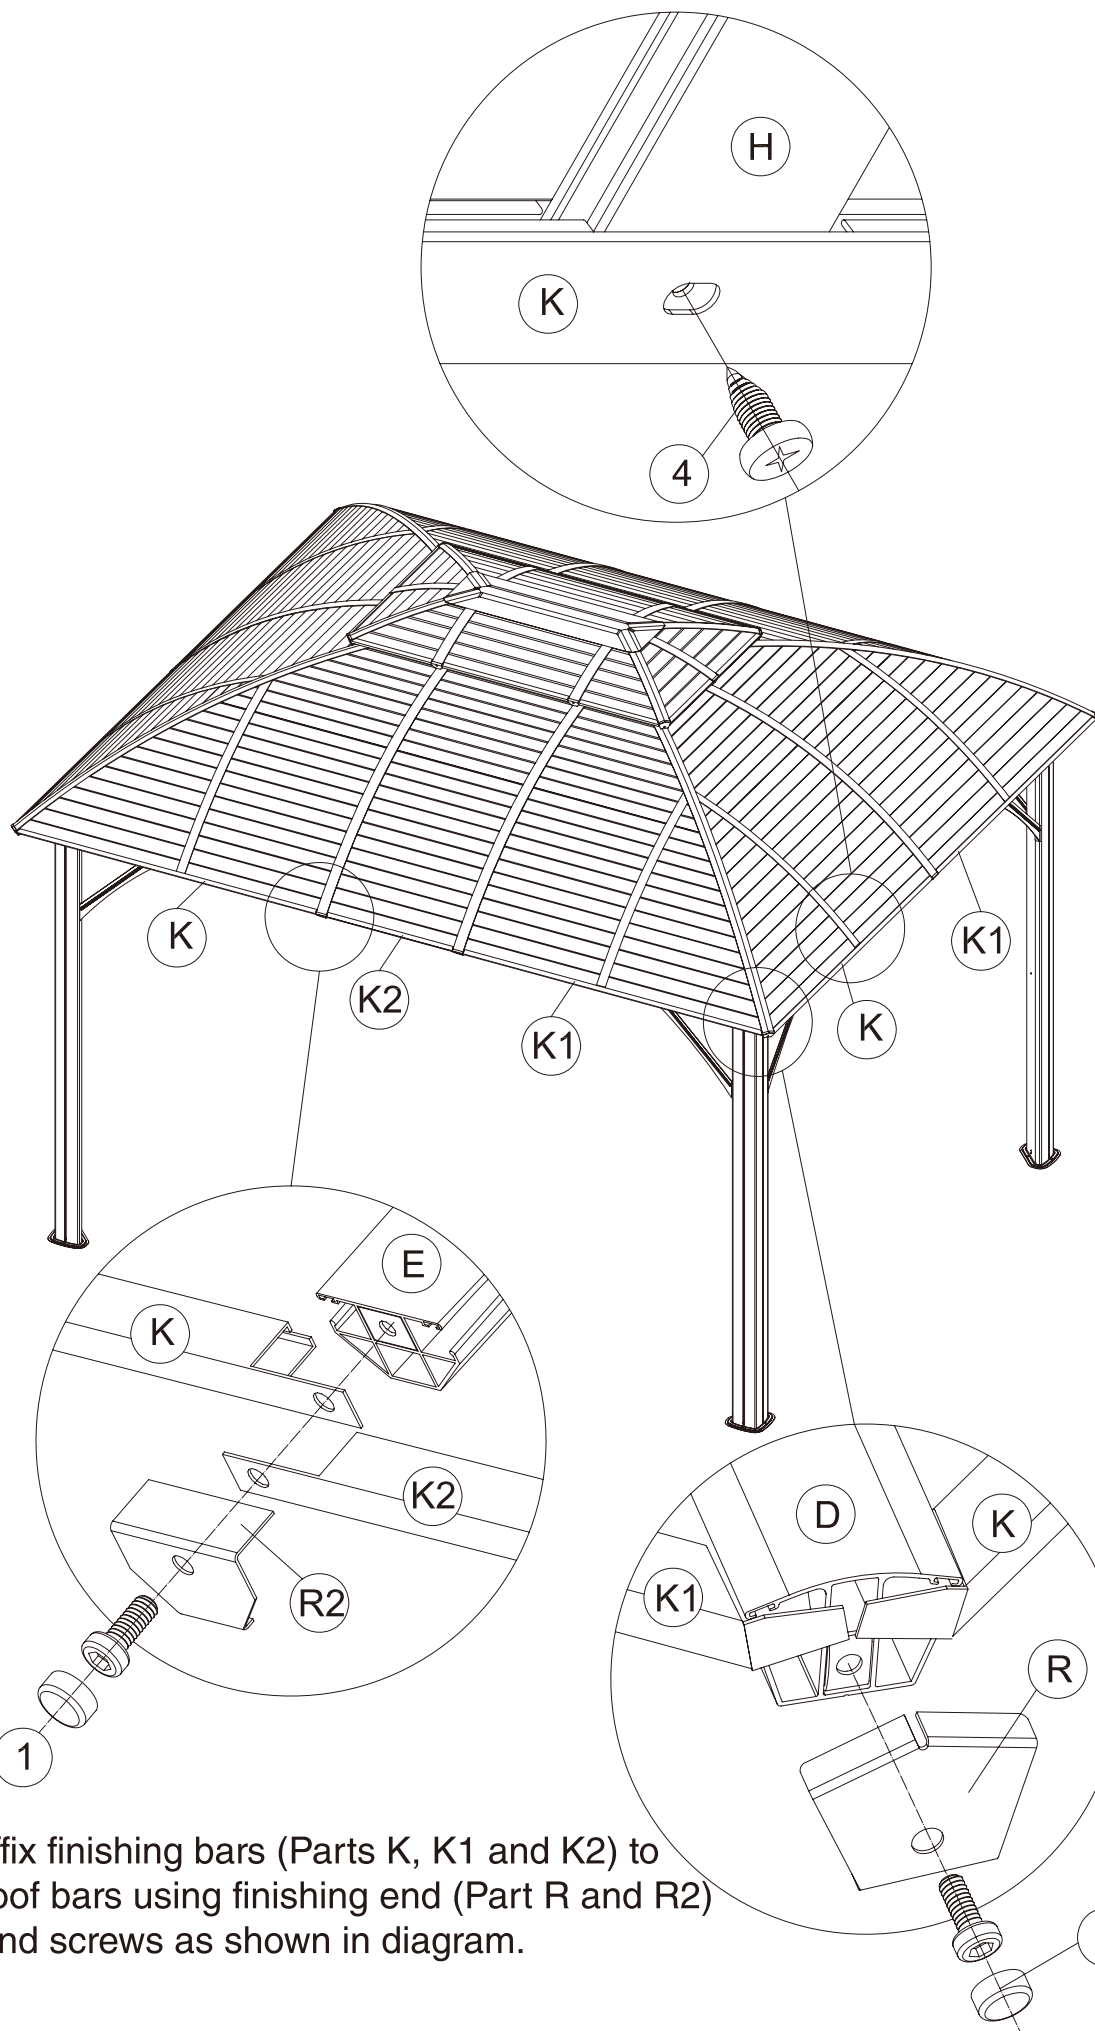


Affix finishing bars (Parts K, K1 and K2) to roof bars using finishing end (Part R and R2) and screws as shown in diagram.



Y1 2x



Y2 2x








Y5 2x



Y6 2x


- (1) Hang up Y1 & Y2 to the inside sidewall track as shown in diagram.
- (2) Hang up Y5 & Y6 to the outside sidewall track as shown in diagram.

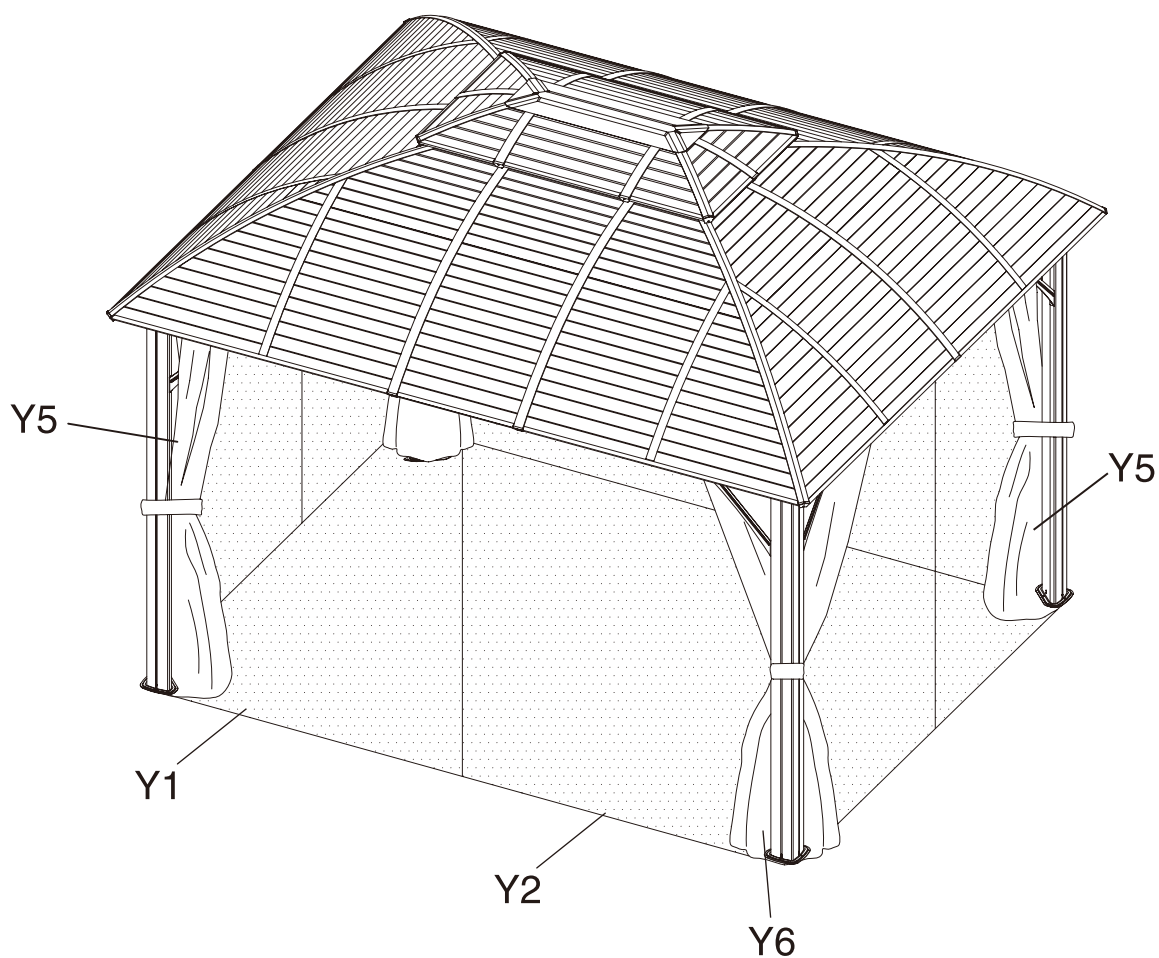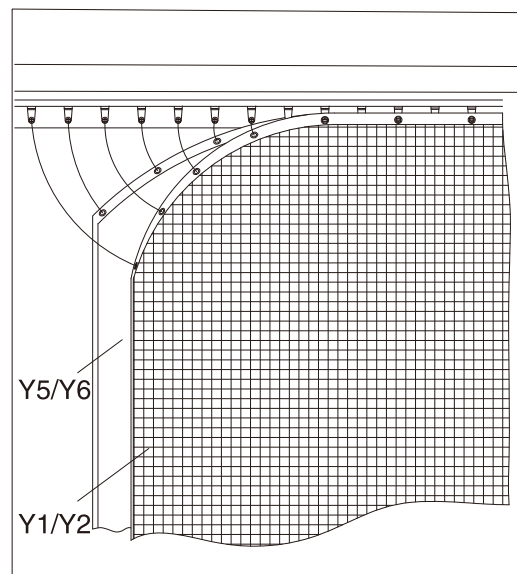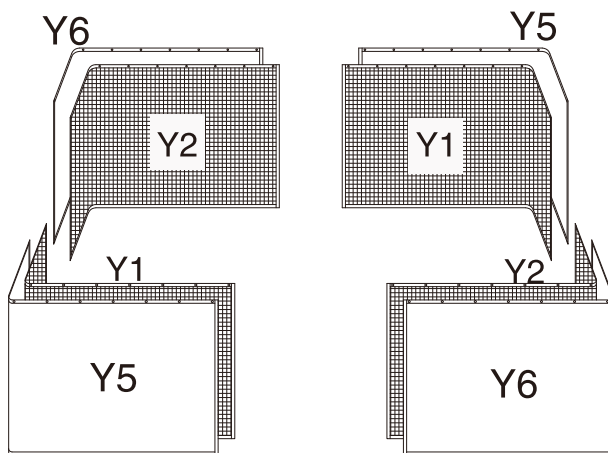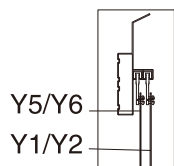



Yb 4x

When you close the curtain, please refer to below steps to fix with poles using Yb as shown in diagram.

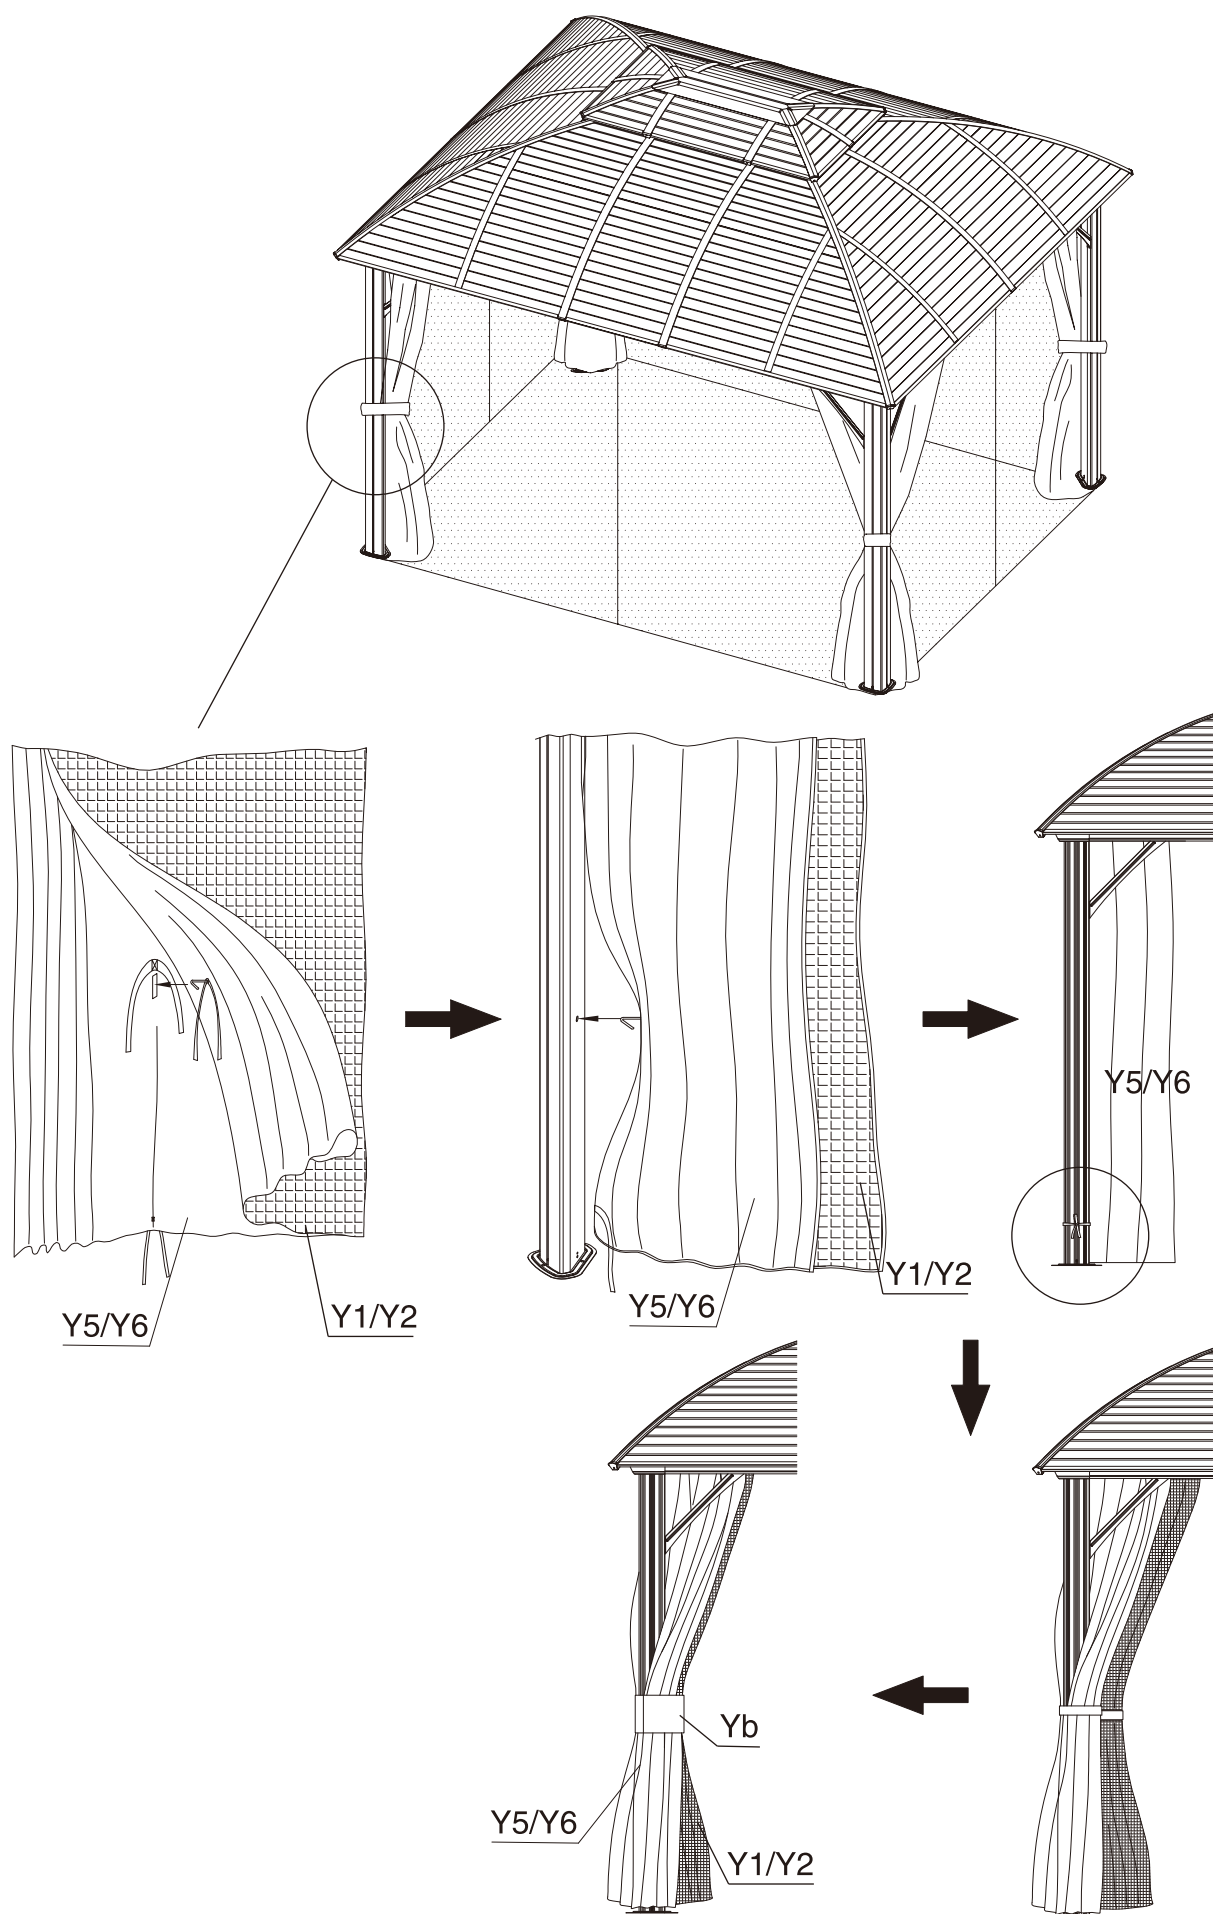

Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and

friendly, easy-to-reach after-sales service. So if you

have any questions about our product and assembly-

,please feel free to contact us. We will be here for you.

Support:



After-sales contact email:

service@domioutdoorliving.com

Business cooperation contact email:

marketing@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.