


# ASSEMBLY INSTRUCTION


---

## (Instructions de montage)

N752P317333

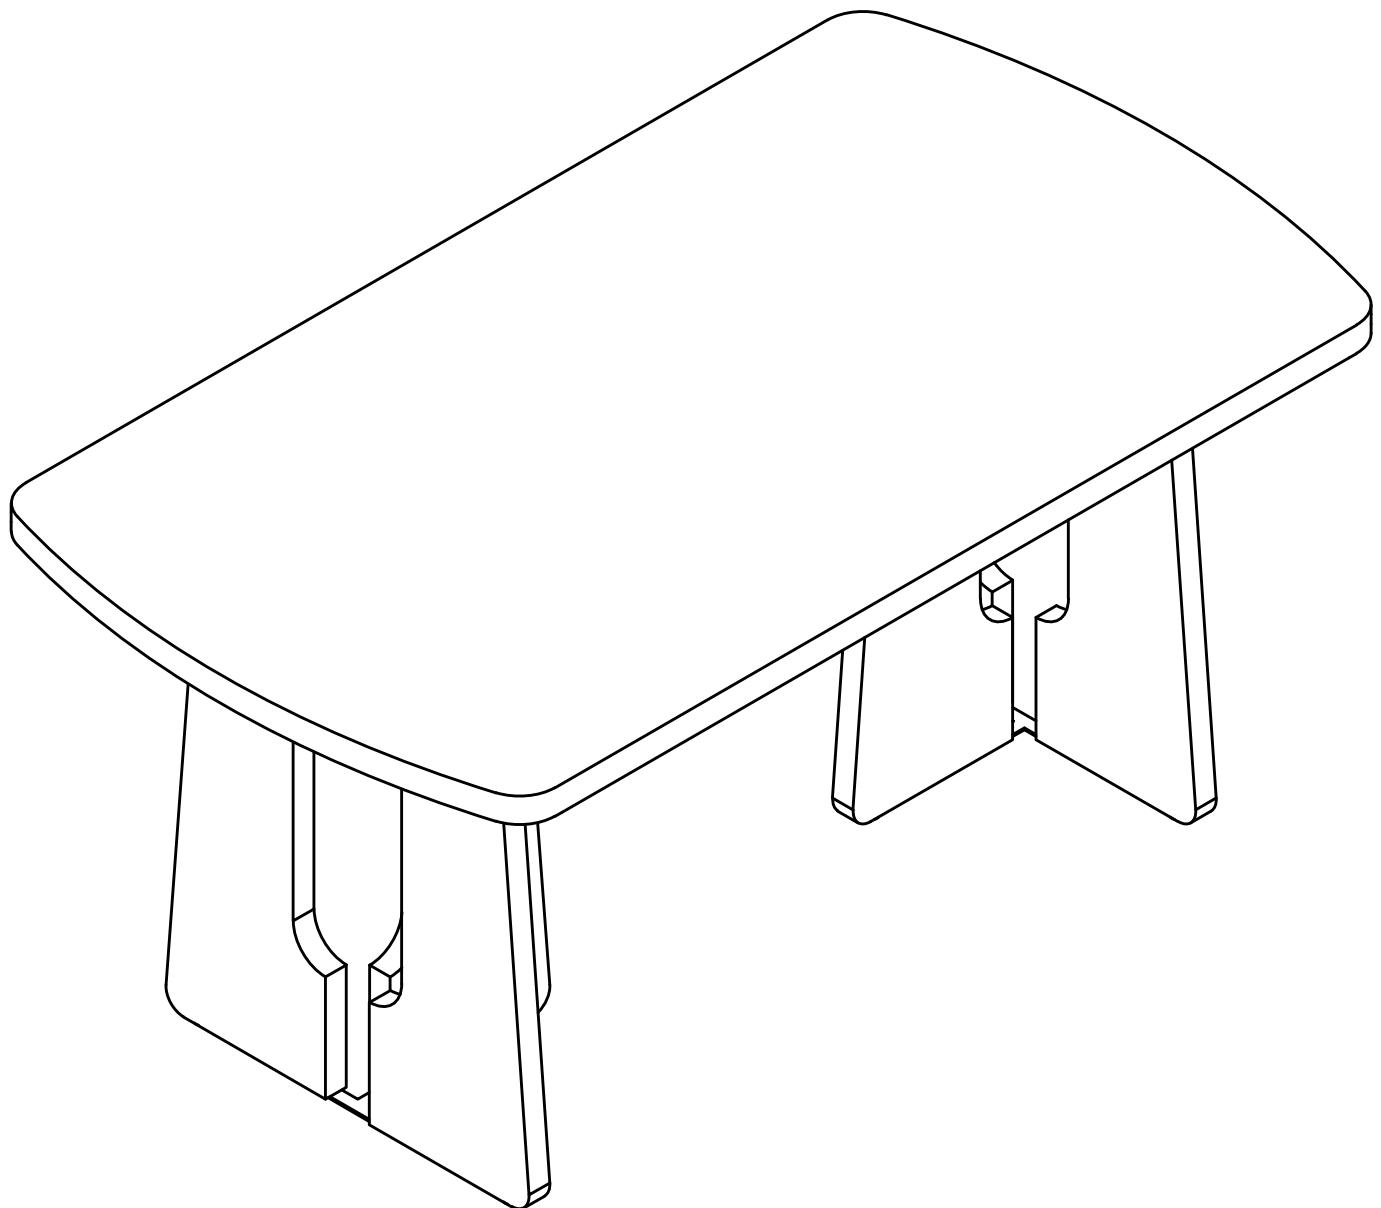

NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS  
(REMARQUE: SERRER À 50% AVANT DE FIXER TOUS LES BOULONS)

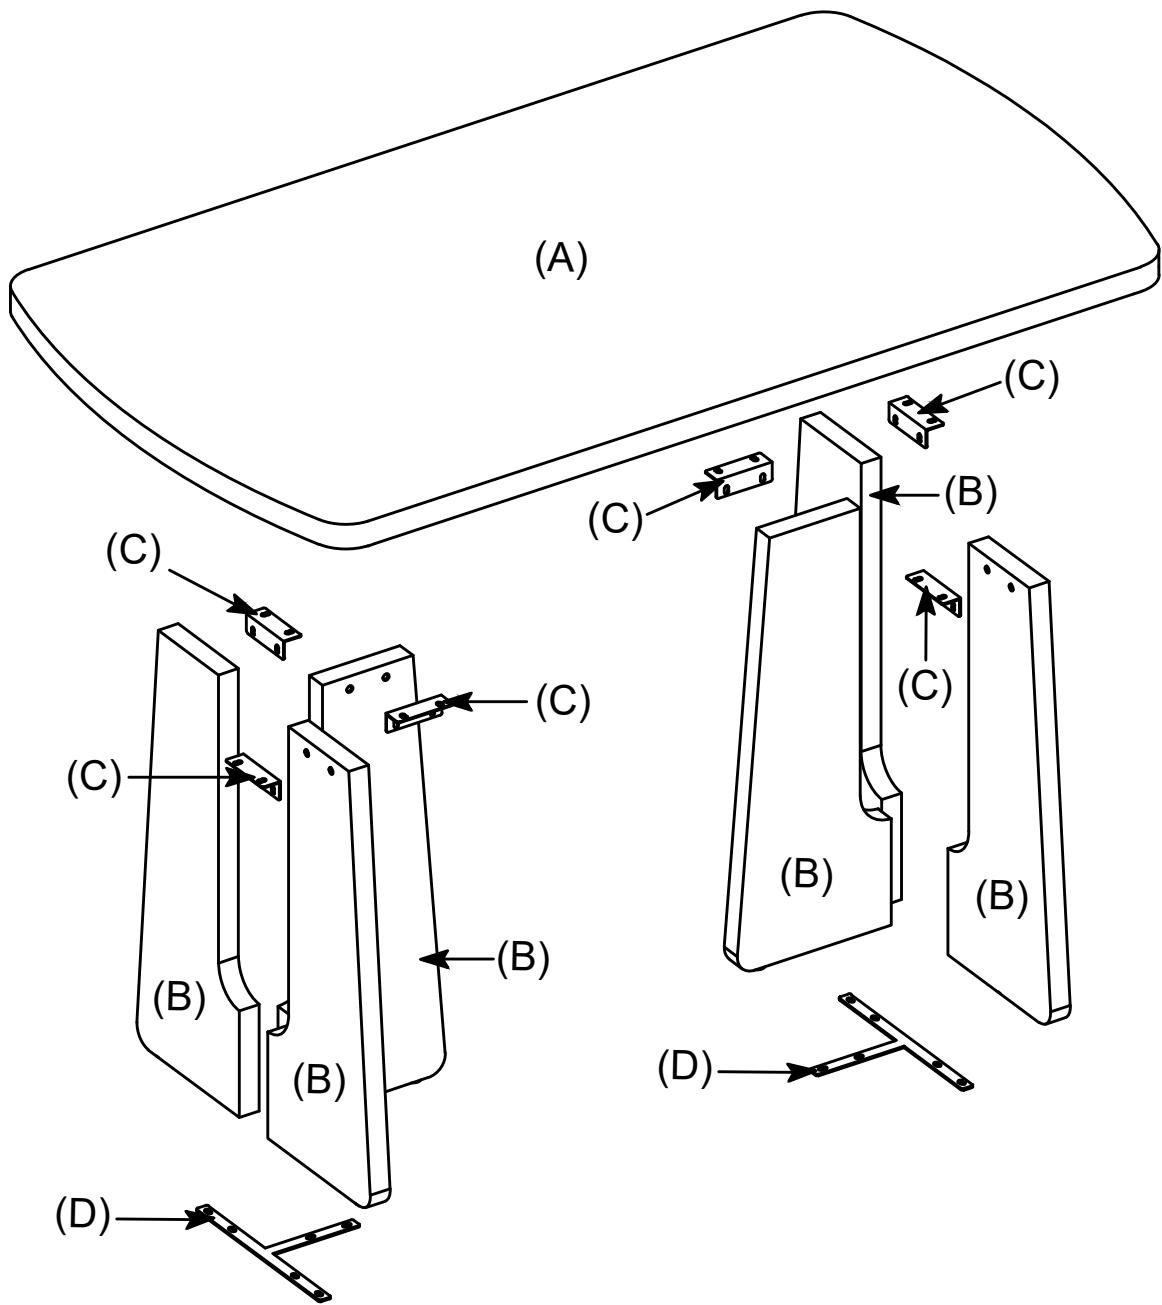


## Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

# PART LIST (LISTE DES PIÈCES)

A

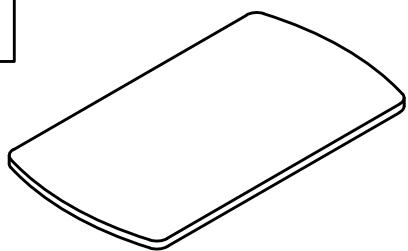


Tabletop (1pc)  
(Plateau de table)

B




Table Leg (6pcs)  
(Pied de table)

C

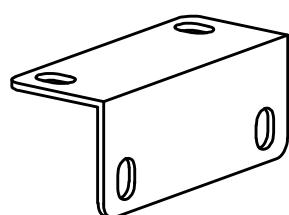

L-Bracket (6pcs)  
(Suport en L)


D

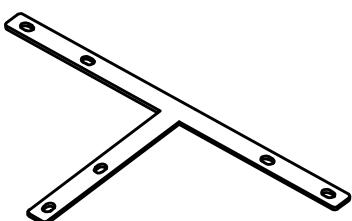

Sketcher (2pcs)  
(Esquisse)

# HARDWARE LIST (LISTE DU MATERIEL)

1

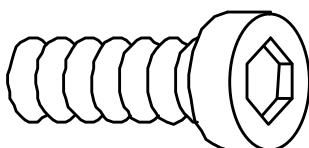


Bolt 1/4" x 15mm (36PCS)  
(Boulon)

2




AllenKey 4mm (1PC)  
(Clé Allen)

## STEP 1

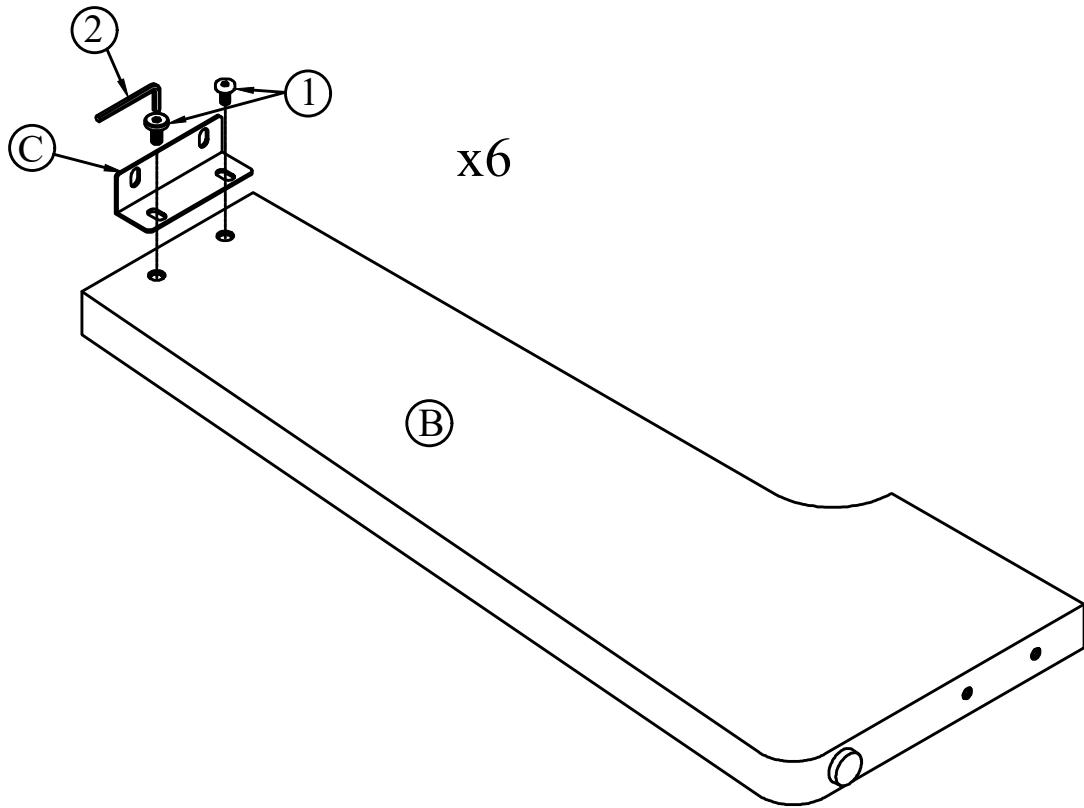


1		Bolt 1/4" x 15mm (Boulon)	12pcs	2		Allenkey 4mm (Clé Allen)	1pc
---	--	---------------------------	-------	---	--	--------------------------	-----

## STEP 2

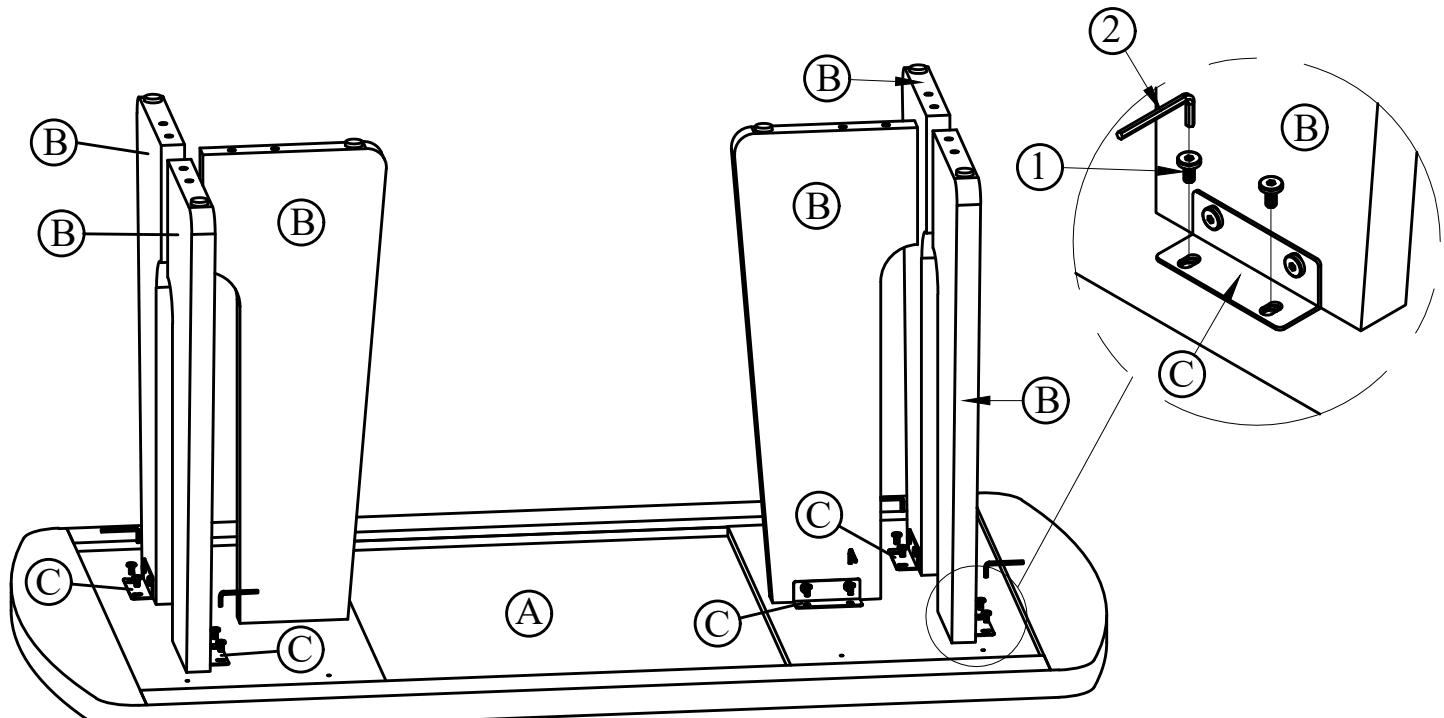


1		Bolt 1/4" x 15mm (Boulon)	12pcs	2		Allenkey 4mm (Clé Allen)	1pc
---	--	---------------------------	-------	---	--	--------------------------	-----

### STEP 3

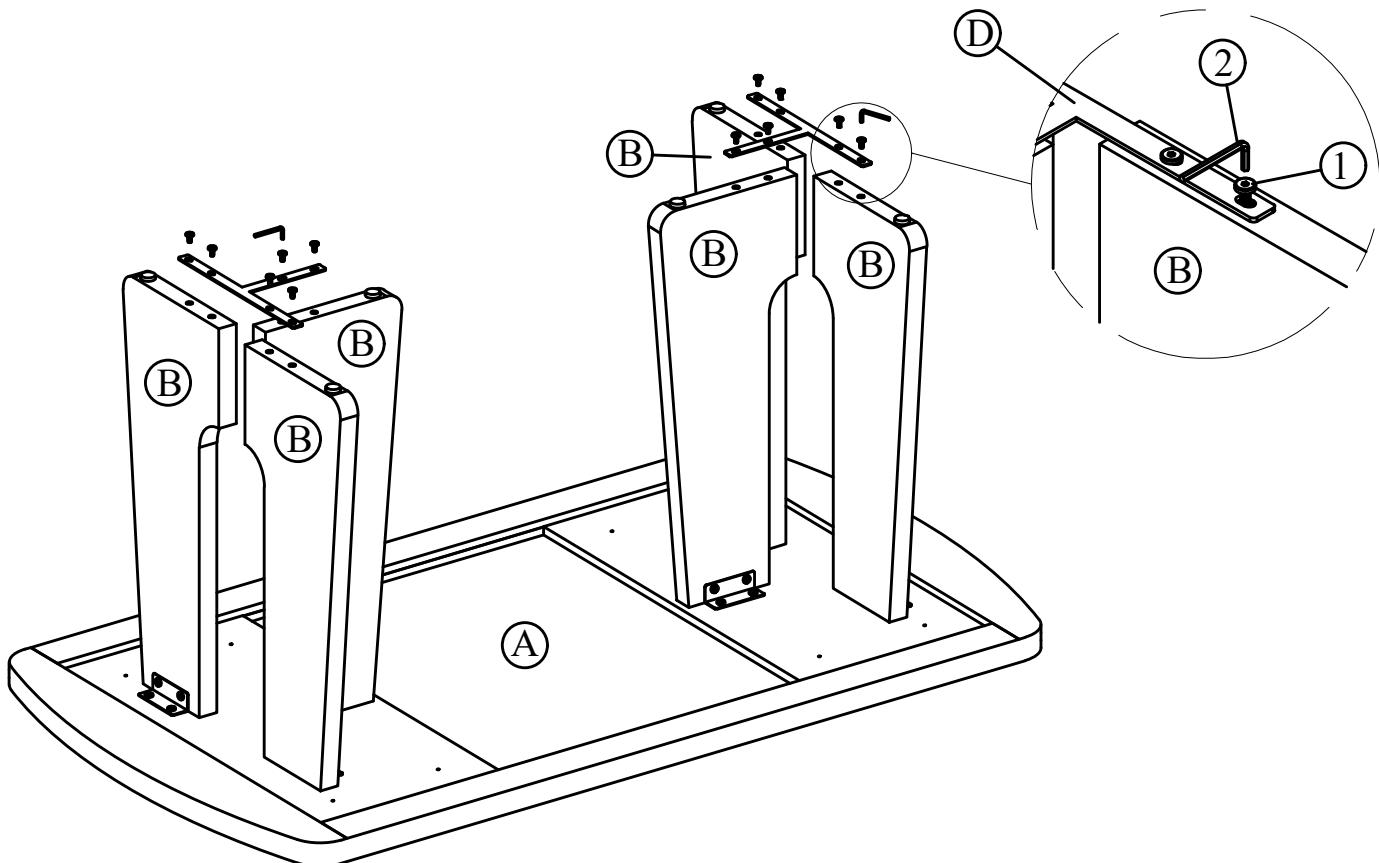

1		Bolt 1/4" x 15mm (Boulon)	12pcs		2		Allenkey 4mm (Clé Allen)	1pc
---	--	---------------------------	-------	--	---	--	--------------------------	-----

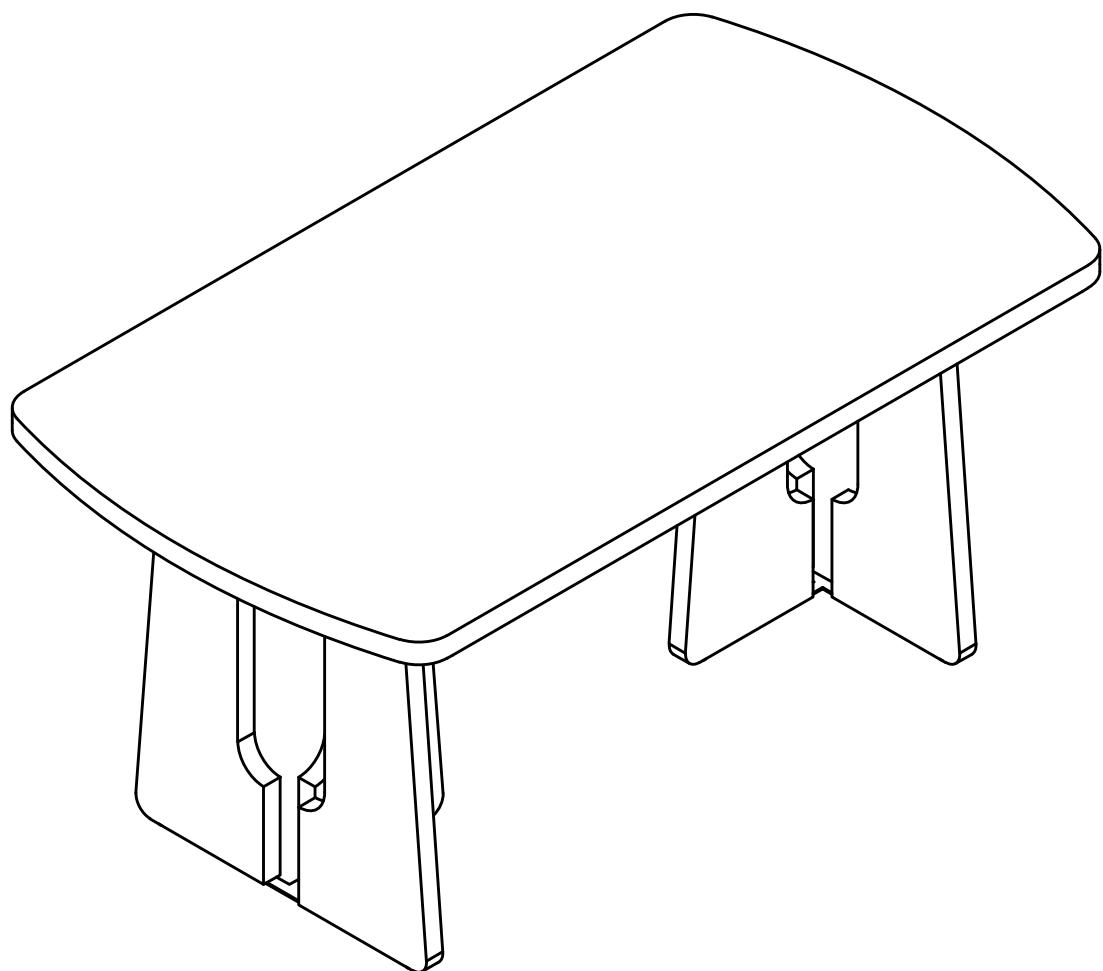


# ASSEMBLY INSTRUCTION


---

## (Instructions de montage)

N752P317334

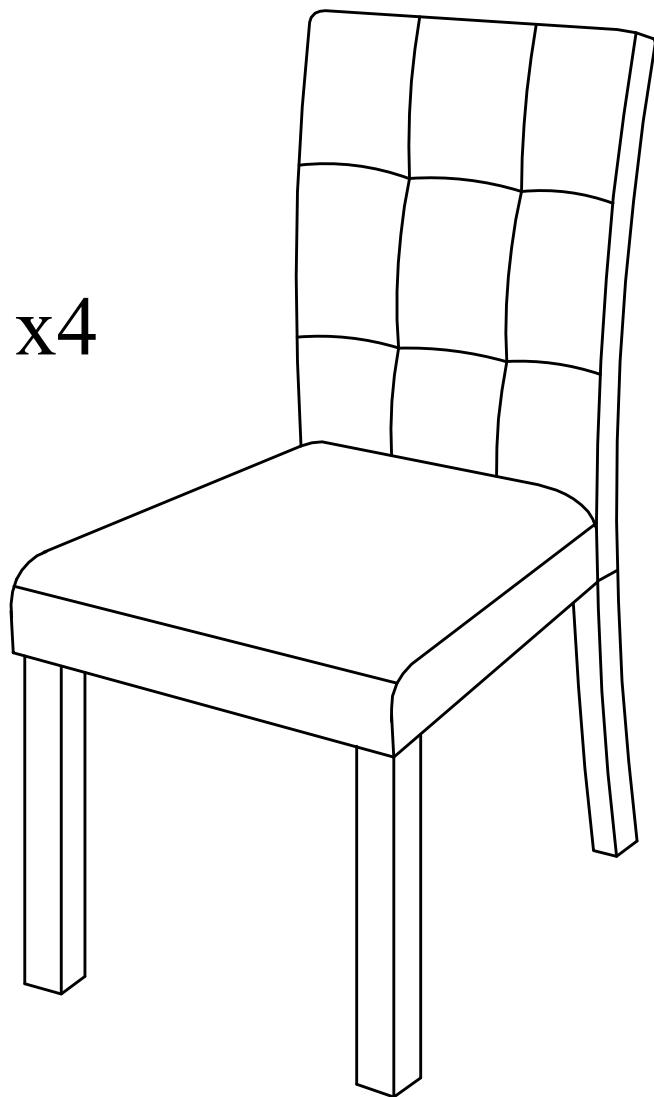



NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS  
(REMARQUE: SERRER À 50% AVANT DE FIXER TOUS LES BOULONS)

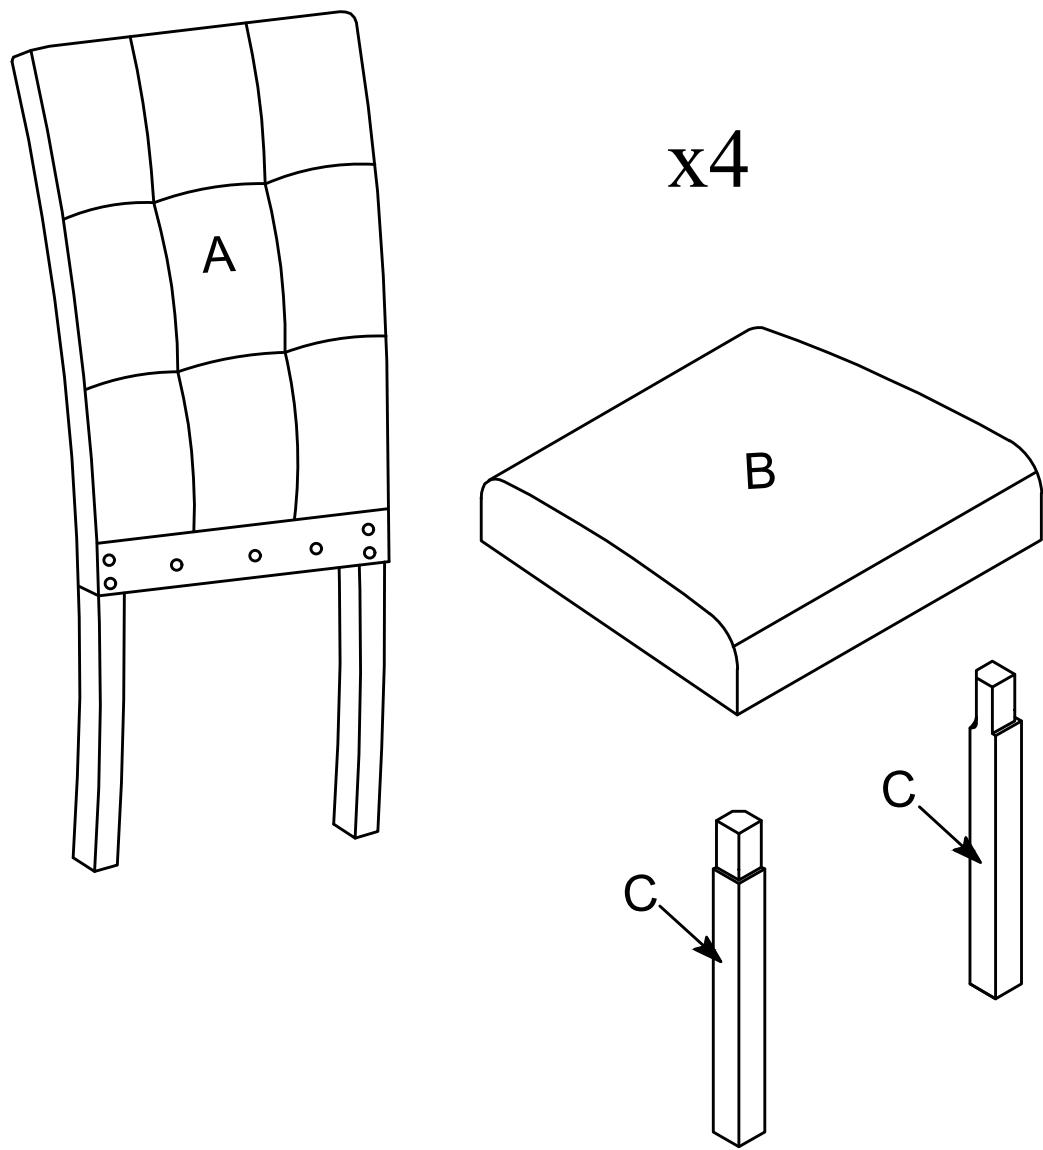





## Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.



# PART LIST FOR 4 (LISTE DES PIÈCES POUR 4)

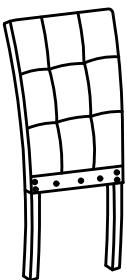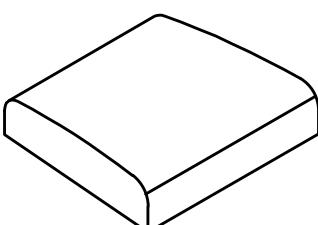A		B		C	
	Chair Back (4PCS) (Dossier de chaise)		Chair Seat (4PCS) (Siège de chaise)		Front Leg (8PCS) (Patte de devant)

# HARDWARE LIST FOR 4 (LISTE DU MATERIEL POUR 4)

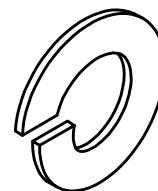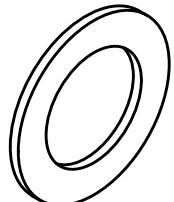1		2		3	
	Bolt 5/16" x 50mm (24PCS) (Boulon)		Bolt 5/16" x 80mm (16PCS) (Boulon)		Spring Washer 5/16" (40PCS) (Rondelle élastique)
4		5		6	
	Flat Washer 5/16" * 22MM (40PCS) (Rondelle plate)		Allen Key 5mm (1PC) (Clé Allen)		Wood dowel Ø10 * 30mm (4PCS)



## STEP 1

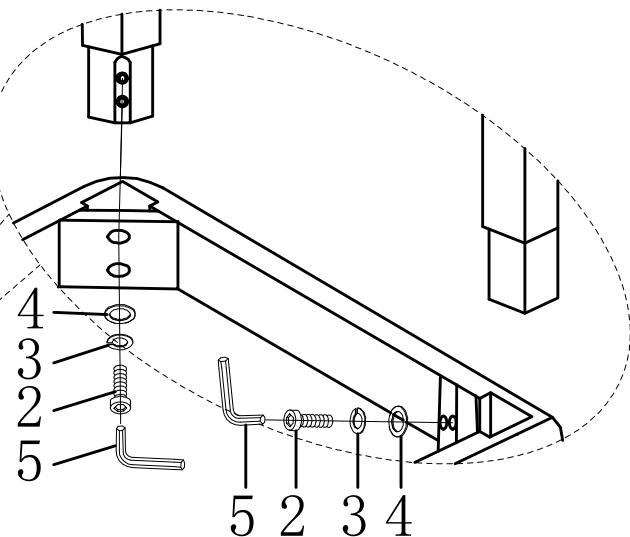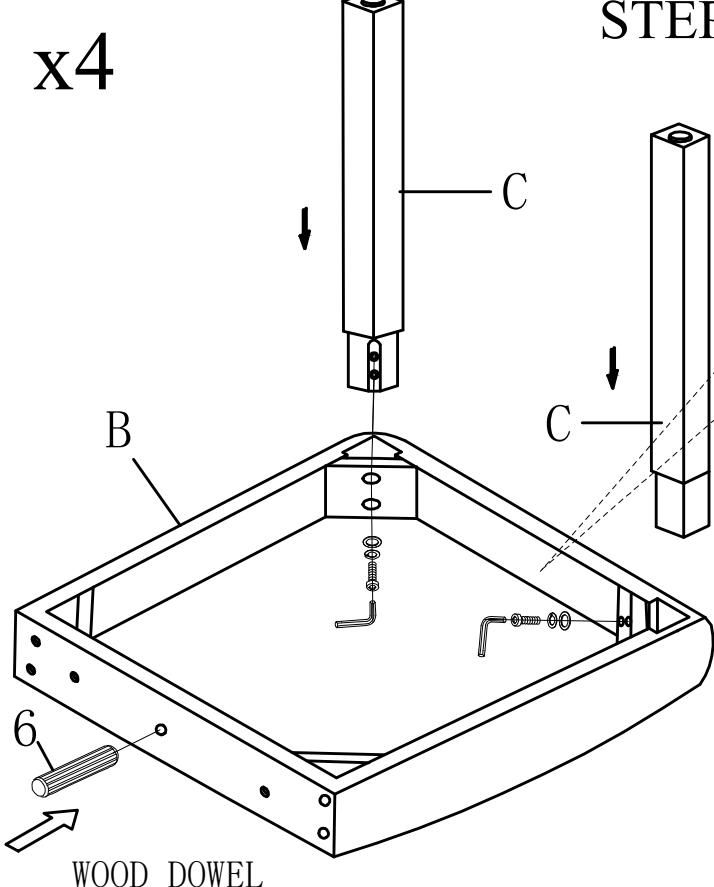

1		Bolt 5/16"x50mm (Boulon)	16pcs
3		Spring Washer (Rondelle élastique)	16pcs

4		Flat Washer (Rondelle plate)	16pcs
5		Allen Key 5mm (Clé Allen)	1pc
6		Wood dowel Ø10*30mm	4pcs


## STEP 2

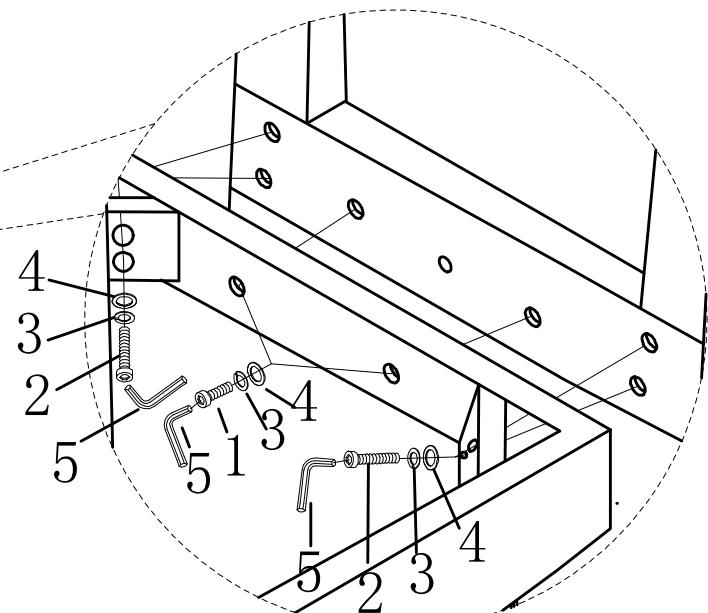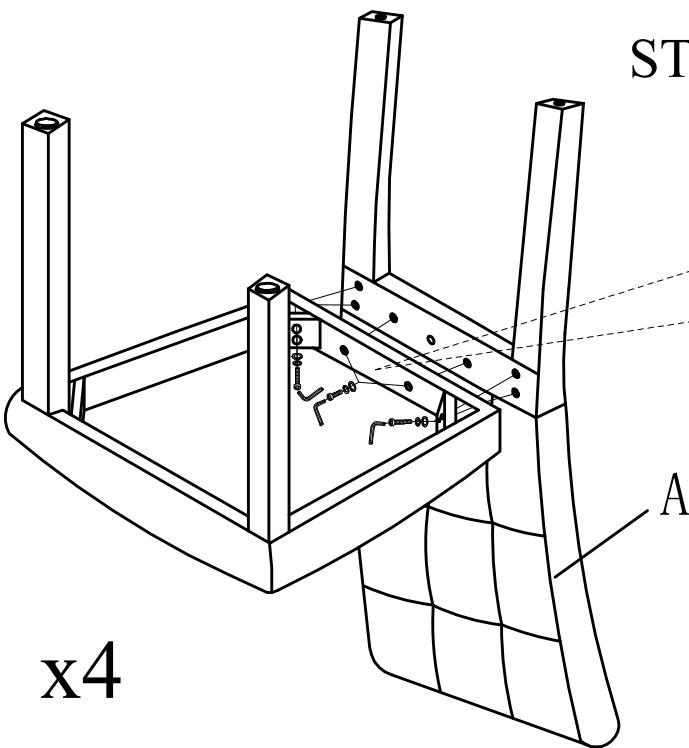

1		Bolt 5/16"x50mm (Boulon)	8pcs
2		Bolt 5/16"x80mm (Boulon)	16pcs
3		Spring Washer (Rondelle élastique)	24pcs

4		Flat Washer (Rondelle plate)	24pcs
5		Allen Key 5mm (Clé Allen)	1pc

## STEP 3

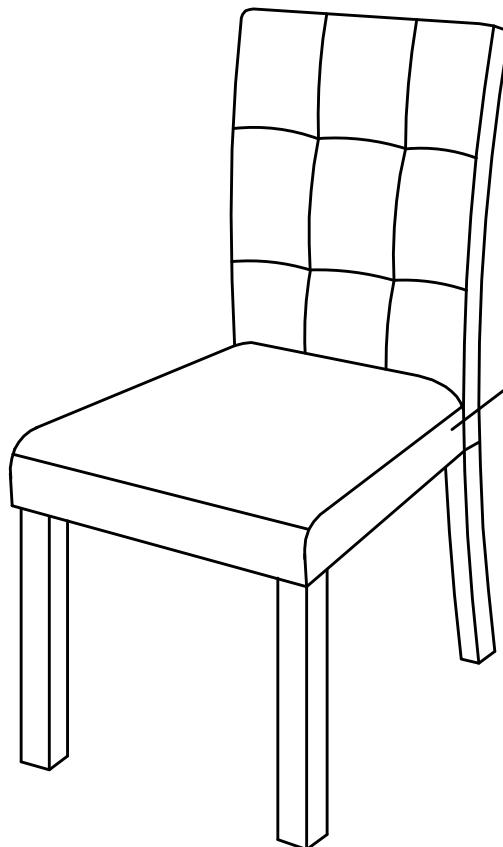

Please balance all 4 chair legs on the same level & tightem all the screws.


**x4**

5



Allen Key 5mm (Clé Allen)

1pc

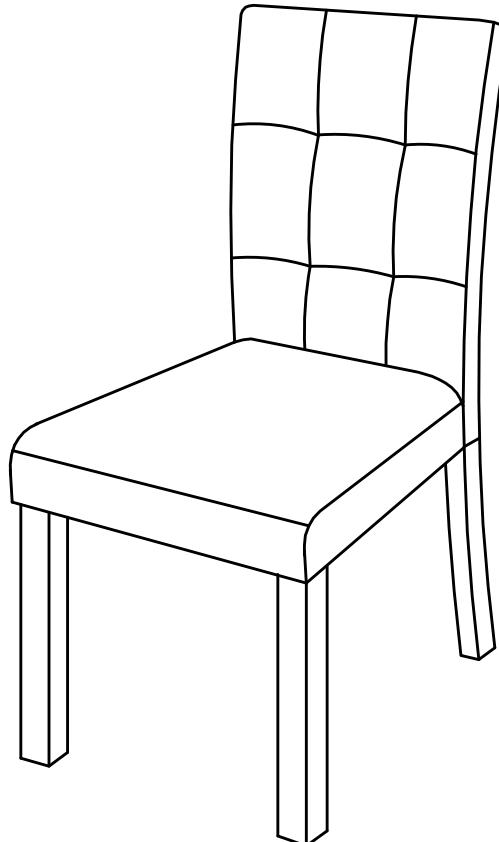


**x4**

# ASSEMBLY INSTRUCTION


---

## (Instructions de montage)

N752P317335

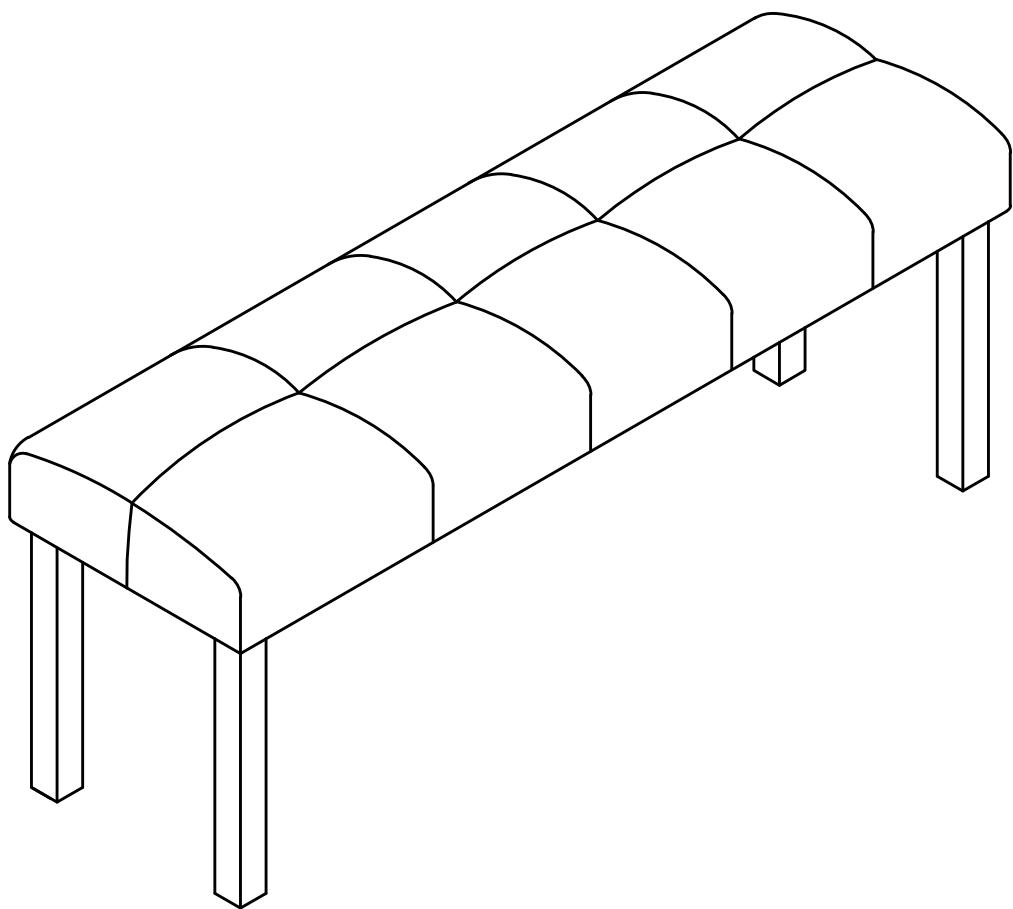

NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS  
(REMARQUE: SERRER À 50% AVANT DE FIXER TOUS LES BOULONS)

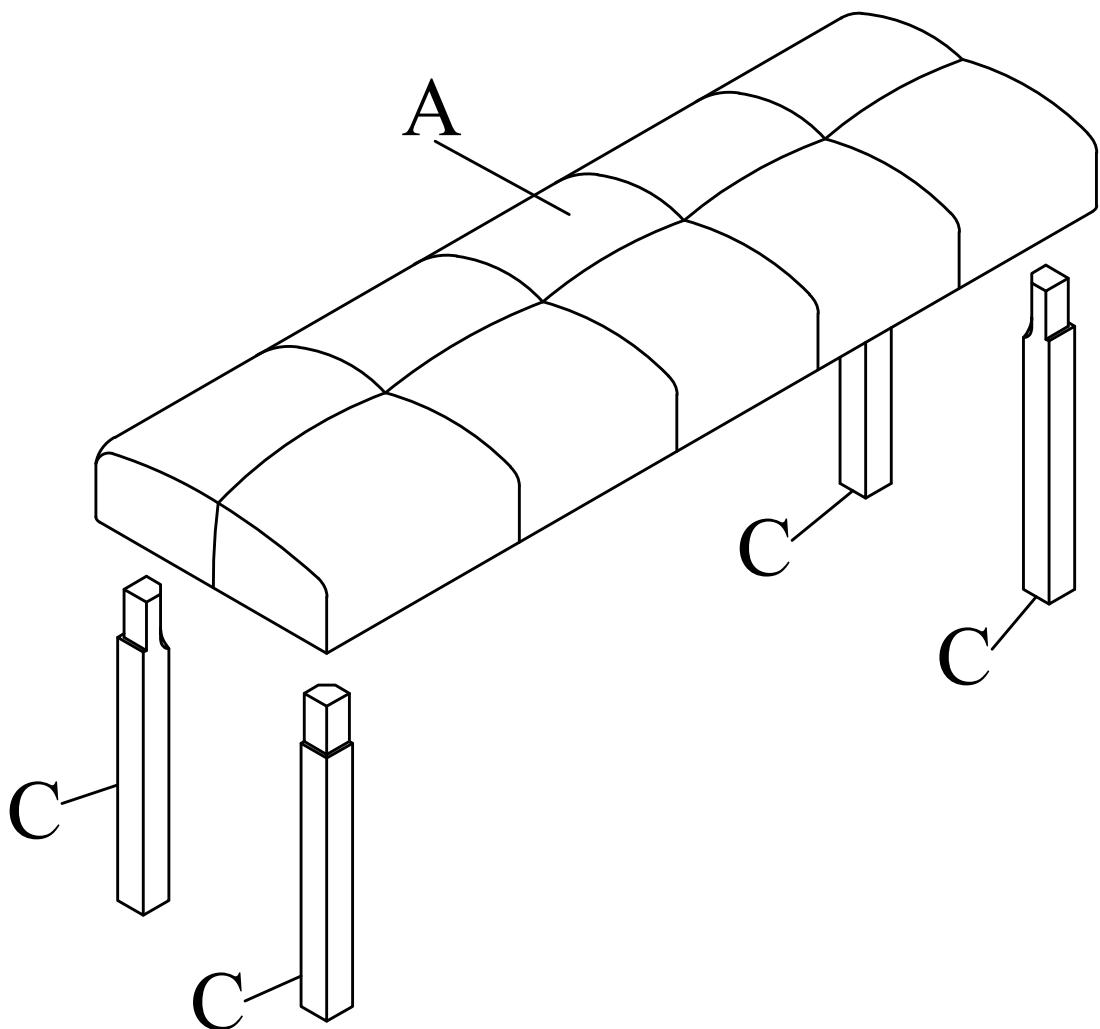


## Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.


# PART LIST ( LISTE DES PIÈCES)

A

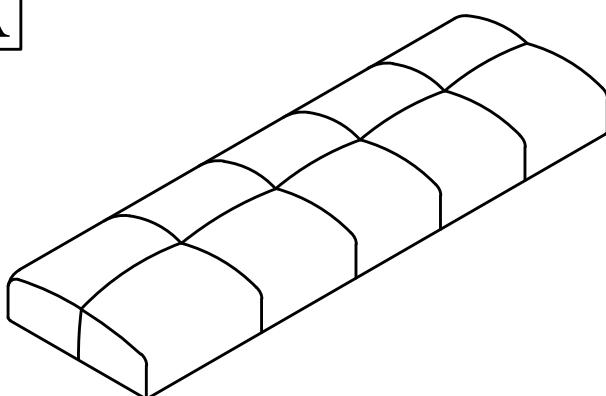

Seat Cushion (1pc)  
(Coussin de siège)


C

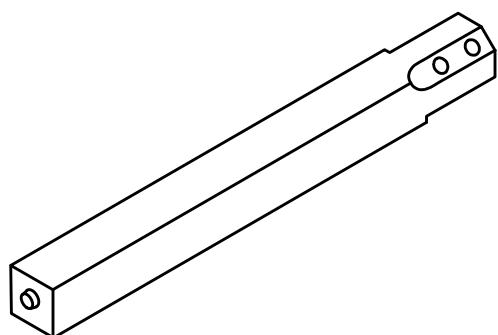

Leg (4pcs)  
(Jambes)


# HARDWARE LIST (LISTE DU MATERIEL)

1

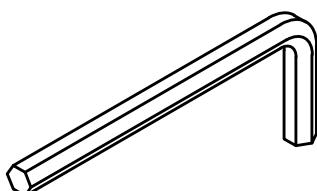


Allen key 5mm (1pc)  
(Clé allen)

2




Bolt 5/16" x 50mm (8pcs)  
(boulon)

3

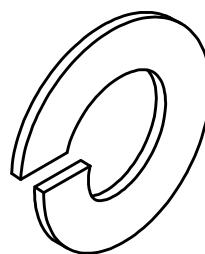


Lock washer Ø5/16" (8pcs)  
(Rondelle élastique)

4

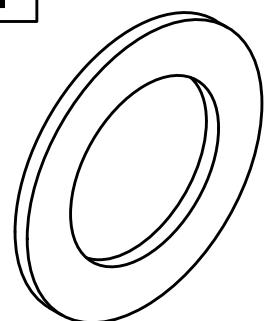


Flat washer Ø5/16" \* Ø22mm  
(8pcs)  
(Rondelle plate)

## STEP 1

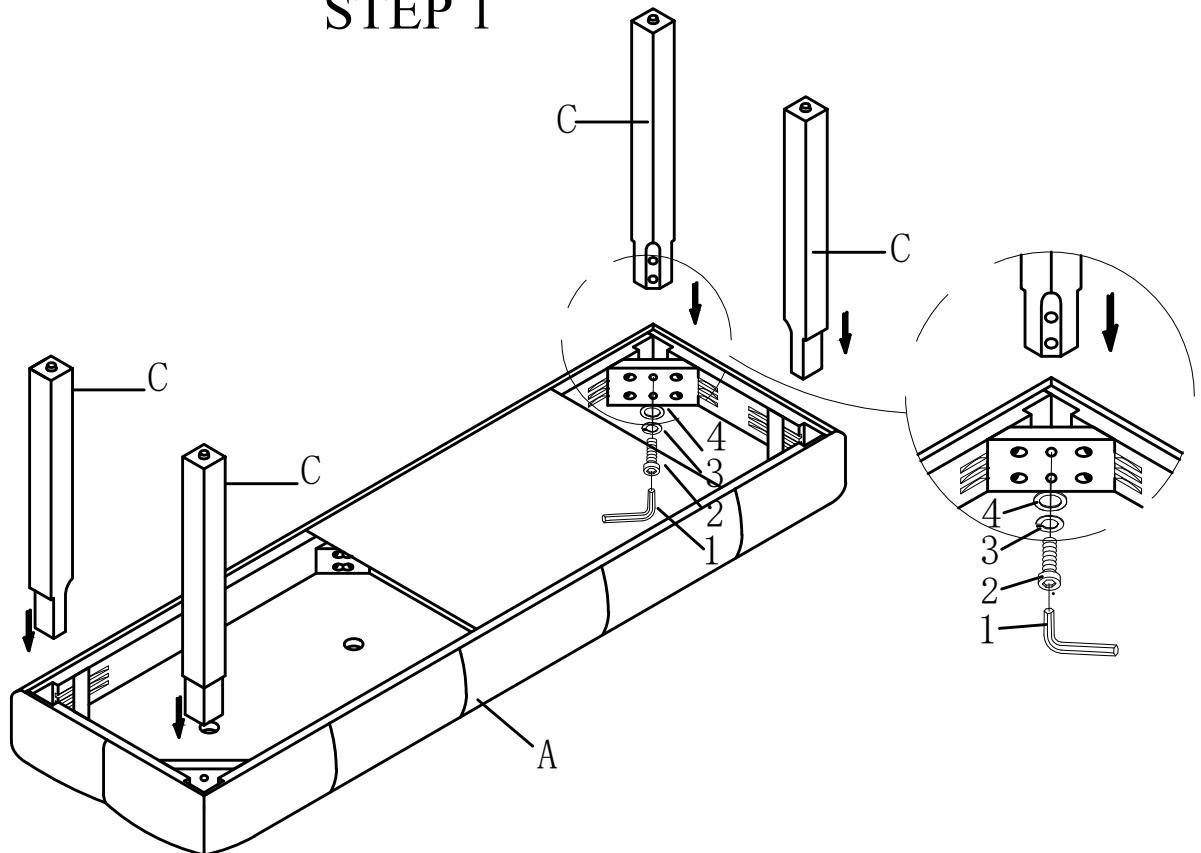


1		Allen Key 5mm (Clé Allen)	1pc	3		Lock washer Ø5/16" (Rondelle élastique)	8pcs
2		Bolt 5/16" x 50mm (Boulon)	8pcs	4		Flat washer Ø5/16" * Ø22mm (Rondelle plate)	8pcs


## STEP 2

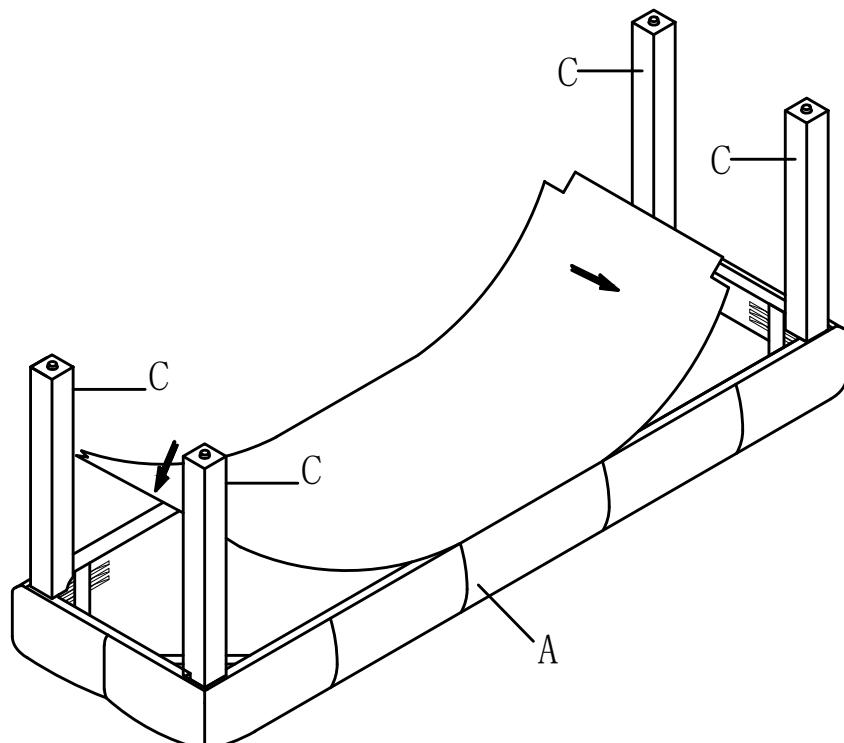

## STEP 3

Please balance all 4 chair legs on the same level & tighten all the screws.

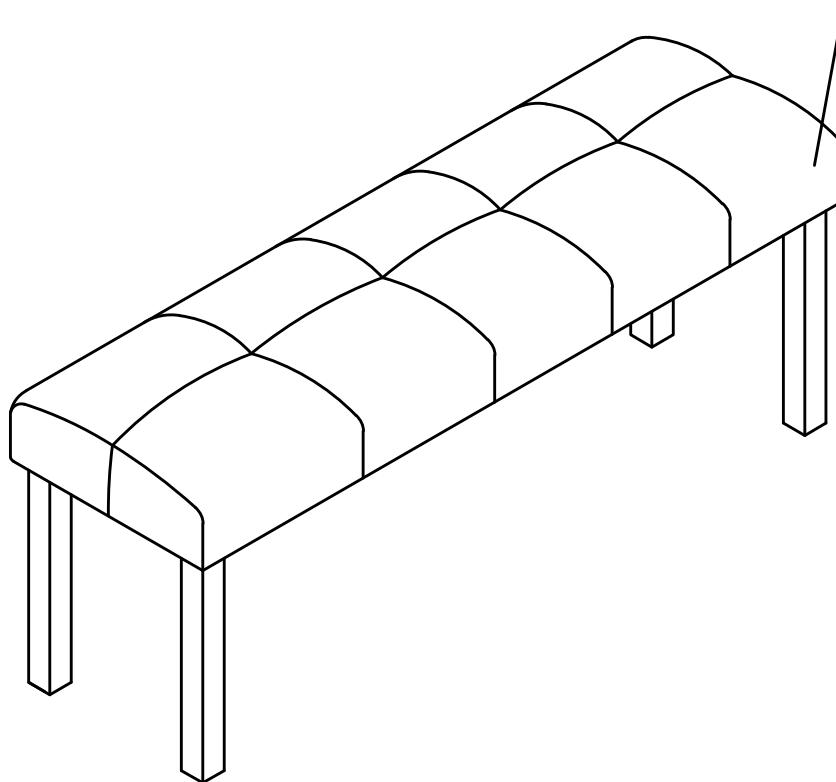

1		Allen Key 5mm (Clé Allen)	1pc
---	---	---------------------------	-----

