




INSTALLATION MANUAL

FOR SHOWER DOOR

INSTALLATION INSTRUCTIONS

Shower Door

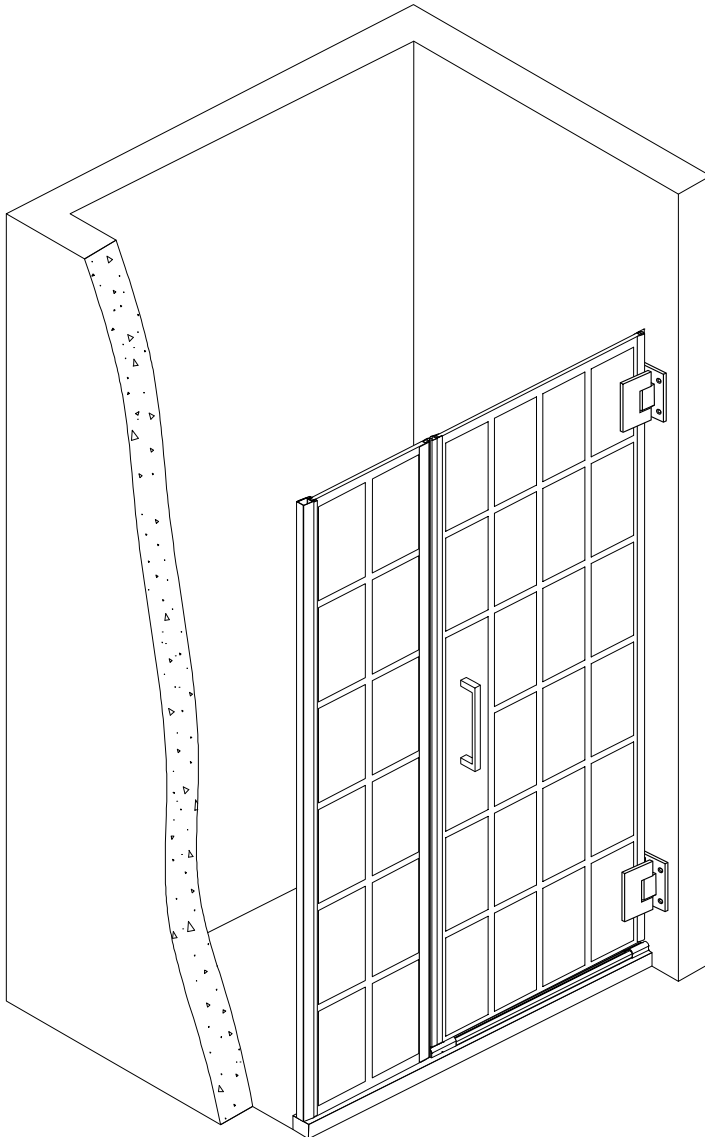

SAFETY INFORMATION

CAUTION

Please carefully read the following important safety information before handling or installing this shower door. There is a risk of serious injury while handling this product.

To minimize these risks, please note:

Always wear safety glasses and gloves while handling.

Always follow the installation instructions. Inspect glass for damage before installation.

Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.

Do not cut or modify the tempered glass as it will shatter if cut.

Carefully remove product from packaging and keep packaging until installation is complete.

Inspect all parts for damage or missing; If there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.

Cover the drain with tape to prevent the loss of small parts.

The shower base and finished walls should be installed before beginning the shower door installation.

During the installation, protect the shower floor with a drop cloth to avoid damage. This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!

Keep this installation manual for future reference.

NOTE: Two people should perform this installation.

NEED TOOLS



Safety Glasses



Silicone Adhesive Sealant



Tape Measure



Rags



Drill Bits



Drill



Screwdriver



Pencil



Hammer



Knife



Glove




















Spirit Level

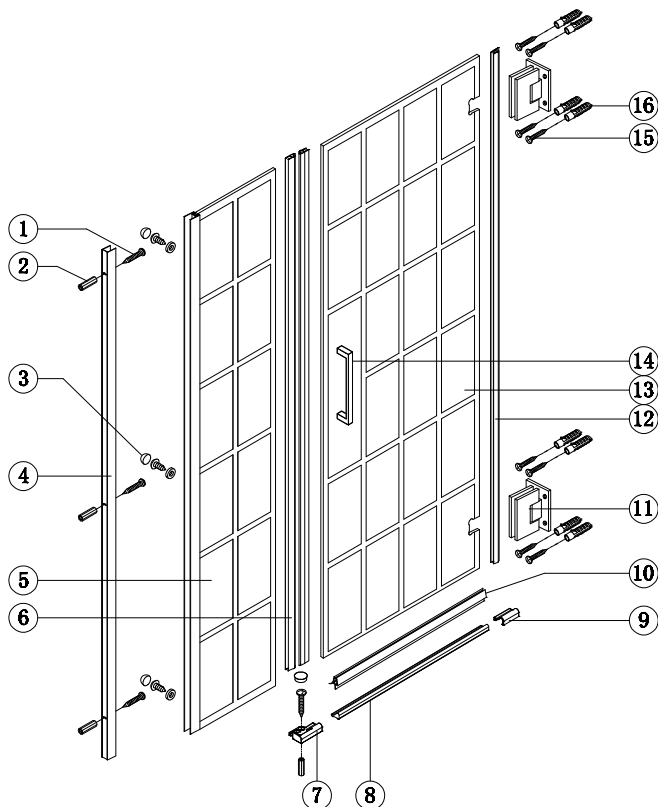


Allen Key

ESSENTIAL ACCESSORIES LIST




① Self-tapping Screws  4 Pcs	② Plastic Expand Plug  4 Pcs	③ Self-tapping Screws  3 Pairs	④ Side Jamb  1 Pc	⑤ Fixed Door  1 Pc
⑥ Magnetic Profile Seal A+B  1 Pc	⑦ Water Blocking Plastic Piece L R  1 Pair	⑧ Water Blocking Strip  1 Pc	⑨ Water Blocking Plastic Piece  1 Pc	⑩ Lower Water Blocking Strip  1 Pc
⑪ Hinge  2 Pcs	⑫ Waterproof Strip  1 Pc	⑬ Sliding Door  1 Pc	⑭ Handle  1 Pc	⑮ Self-tapping Screws  8 Pcs
⑯ Plastic Expand Plug  8 Pcs				

NOTE: Inspect all parts for missing prior to installation! Contact us for any part missing.

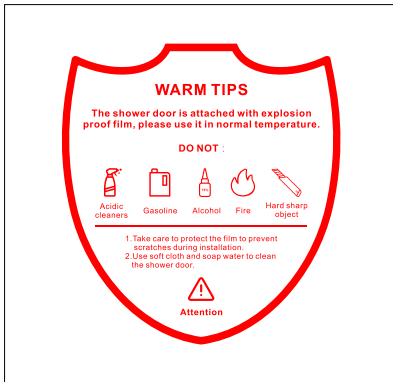




NOTE:Our shower door is affixed with explosion-proof film. Please install the side with the explosion-proof film prompt inside the shower room.

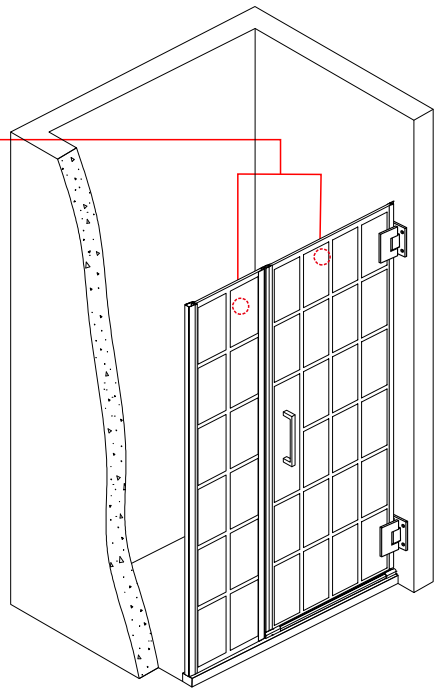


Step1:

Measure the levelness of the threshold and the perpendicularity of the wall.
Measure the bathroom floor threshold and side wall verticality before installing a glass shower door.
Ensure the threshold is flat and side walls are perpendicular using a level.
Make adjustments for smooth door operation.

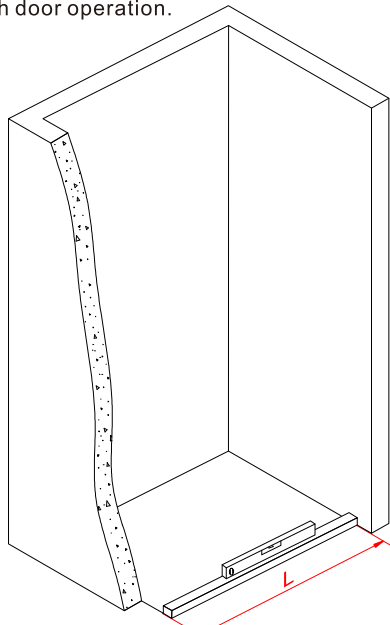

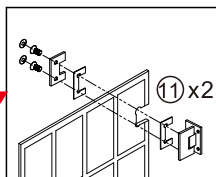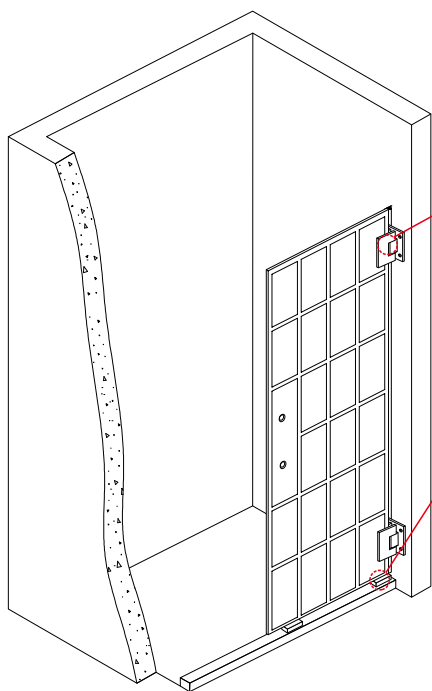

Step2: Install two ⑪ hinge on the glass door according to the illustration.


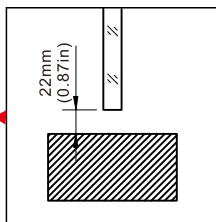


Step3: Please prepare two 22mm(0.87in) thick wooden boards by yourself and place them under the sliding door.


Step4:


Mark the holes on the wall.

Move the ⑬ sliding door close to the wall and ensure it adheres to the wall. Use a level to measure and ensure the door is perpendicular to the ground. Mark the drilling positions on the wall with a pen.

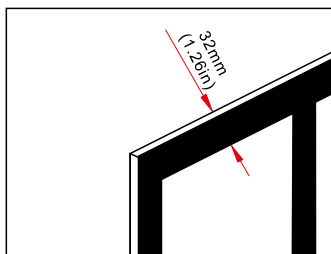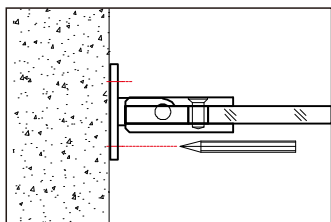


NOTE: The 32mm(1.26in) wide silk screen printing on the glass door should face upwards.

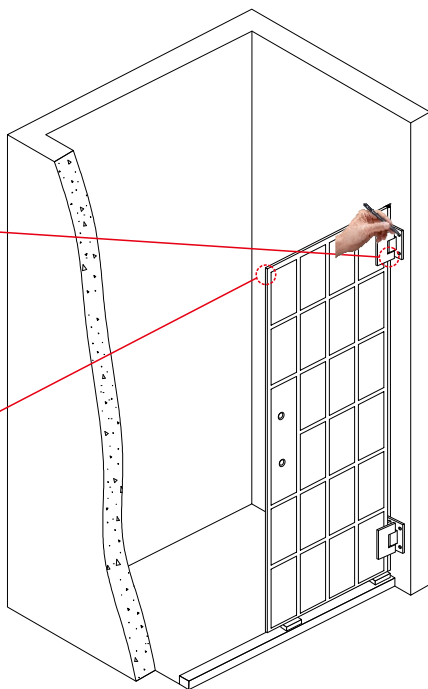

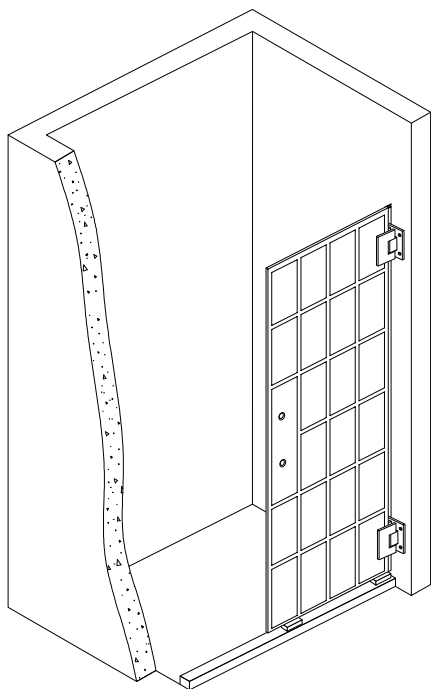


Step5:


Install the sliding door onto the wall.

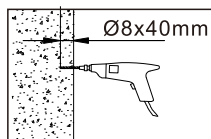

Carefully remove the glass door temporarily and drill holes at the marked positions on the wall.

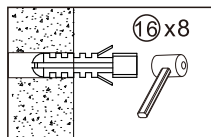


Insert 8 pieces of ⑩ plastic expand plug into the holes respectively.

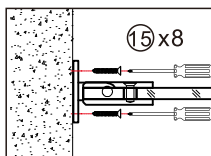

Carefully move the glass door back to its original position and screw in 8 pieces of ⑪ self-tapping screws.

Step6:


Mark the holes on another wall.

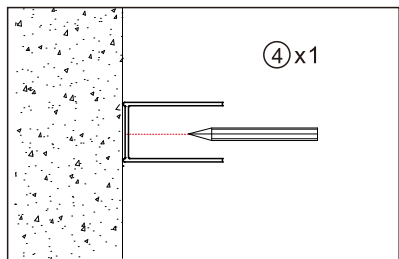


Insert ④ side jamb into ⑤ fixed door, align with ③ sliding door.


Adjust verticality using a level and mark position .

Separate ④ side jamb from ⑤ fixed door, return to original position, and mark drilling positions.

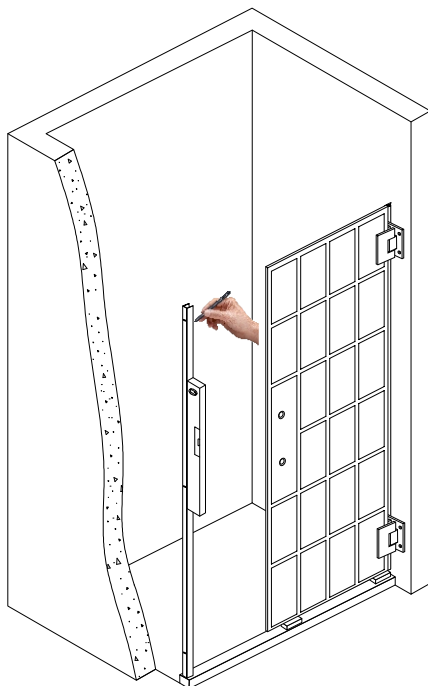


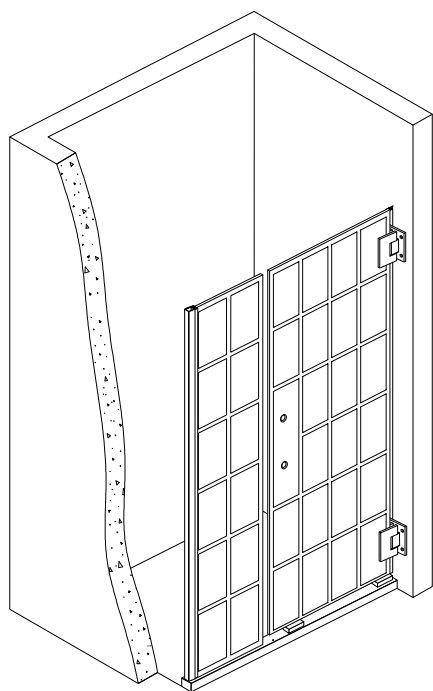


Step7: Install the fixed door onto the wall.

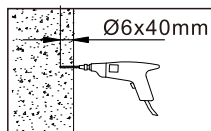


Drilling holes at the marked positions on the wall.

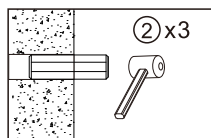

Insert 3 pieces of ② plastic expand plug into each hole.

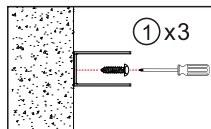


Put ④ side jamb back in place, then screw in 3 pieces of ① self-tapping screws.

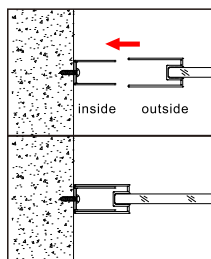


Insert the ⑤ fixed door.



Step8: Install the waterproof strip.

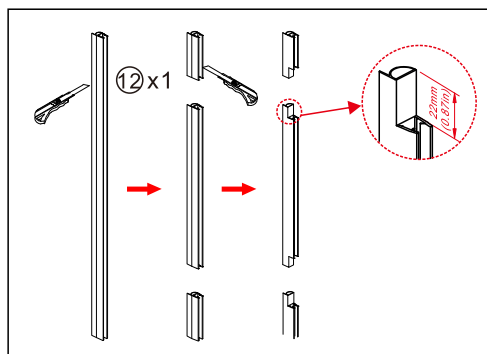


Align the ⑫ waterproof strip with ⑬ sliding door. Draw cutting lines based on hinge position, cut out three sections, insert onto ⑬ sliding door.

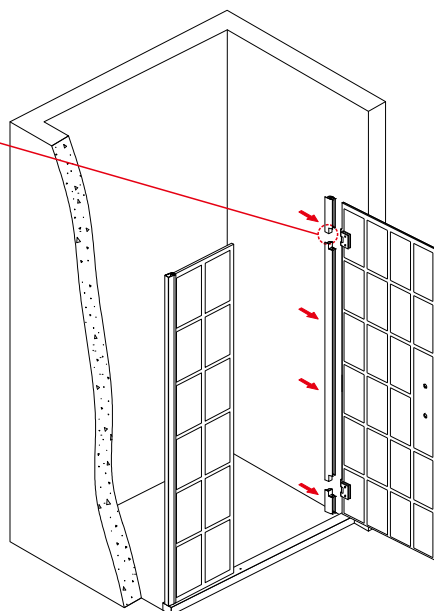

Step9: Install the water blocking piece.
Take out the ⑦ water blocking plastic piece LR, the ⑧ water blocking strip and ⑨ water blocking plastic piece, then combine them as shown in the illustration.


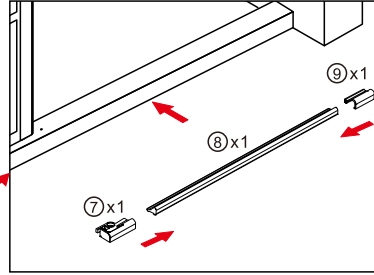
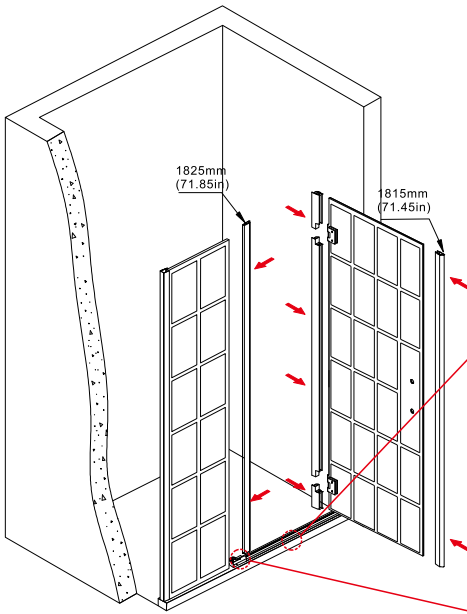


Step10: Fix the water blocking strip on position.

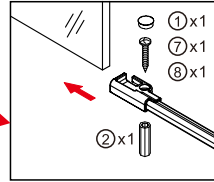

Place ⑧ water blocking strip on threshold, align with ⑤ fixed door.
Mark drilling positions.
Drill hole, insert screw ① into ② expand plug.




Step11:
Install the magnetic profile.
Insert the ⑥ magnetic profile seal into both the ⑤ fixed door and the ⑬ sliding door.

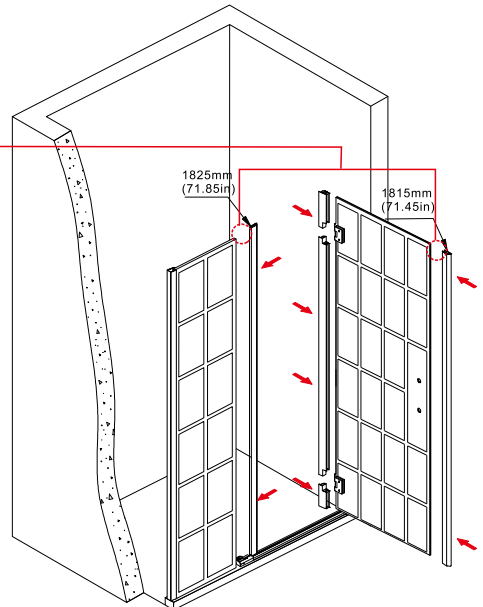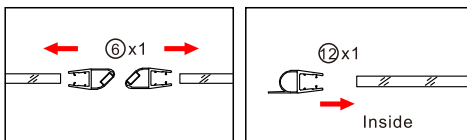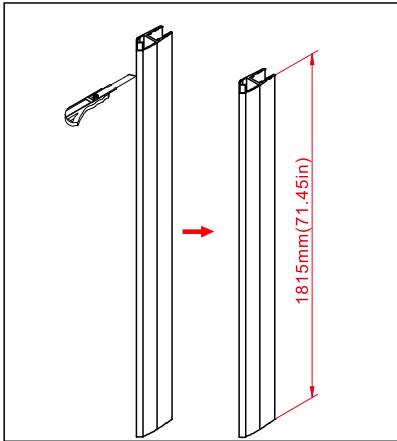

Step12:

Install the water blocking piece.



Insert ⑩ lower water blocking strip into ⑬ sliding door bottom as per drawings. Orientation matters, correct insertion ensures proper door closure.

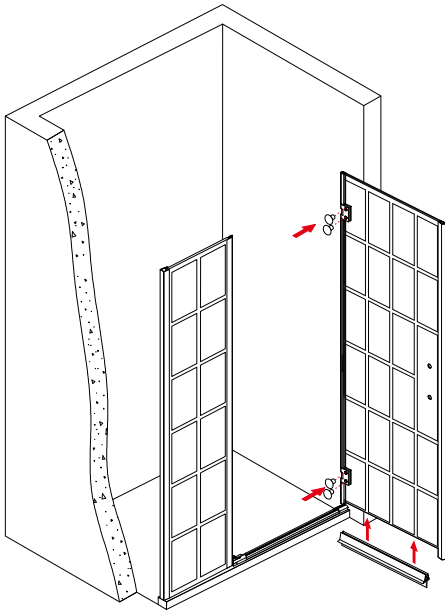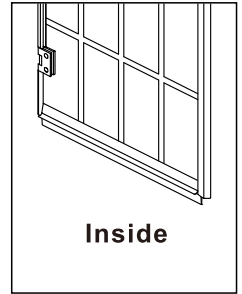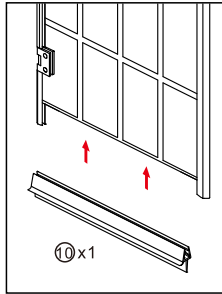
**Step13:**

Adjust the opening width.


Product has 20mm(0.79in) adjustable width.

Check for gaps between magnetic profile seal when sliding door closed as per drawings. Adjust fixed door width to eliminate gaps.

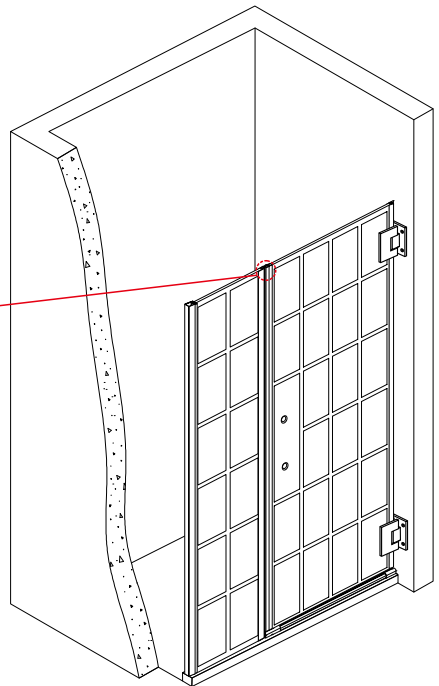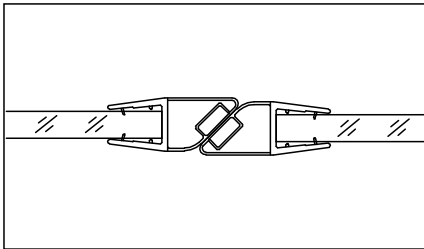


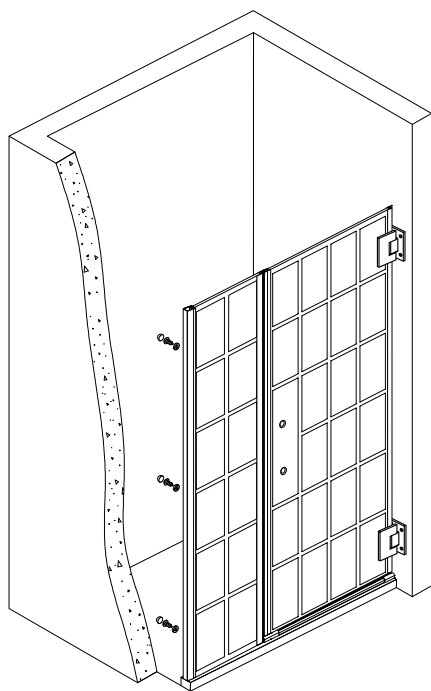

Step14:
Secure the fixed door.


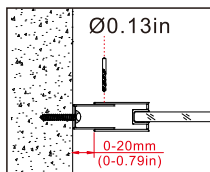


After adjusting the width of the fixed door, drill 3 holes at the overlapping area of the ④ side jamb and the ⑤ fixed door. You can decide the interval between the holes.

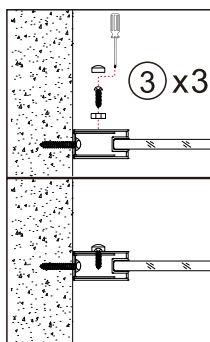


Screw in 3 ③ self-tapping screws into the 3 screw holes respectively.

Step15:
Apply silicone to the water blocking strip.
Apply silicone sealant along the ⑧ water blocking strip as shown in the illustration.
The installation process is now complete.

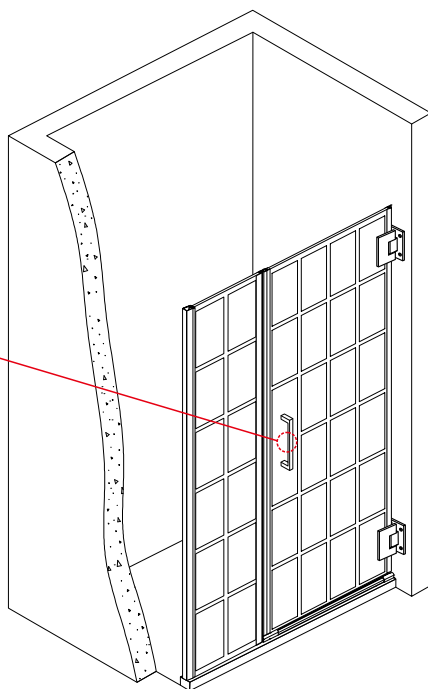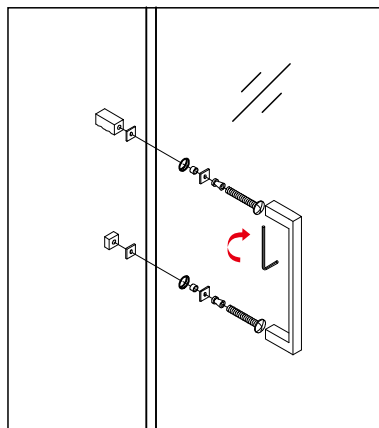

Step16:Do not use the shower door within 24 hours.

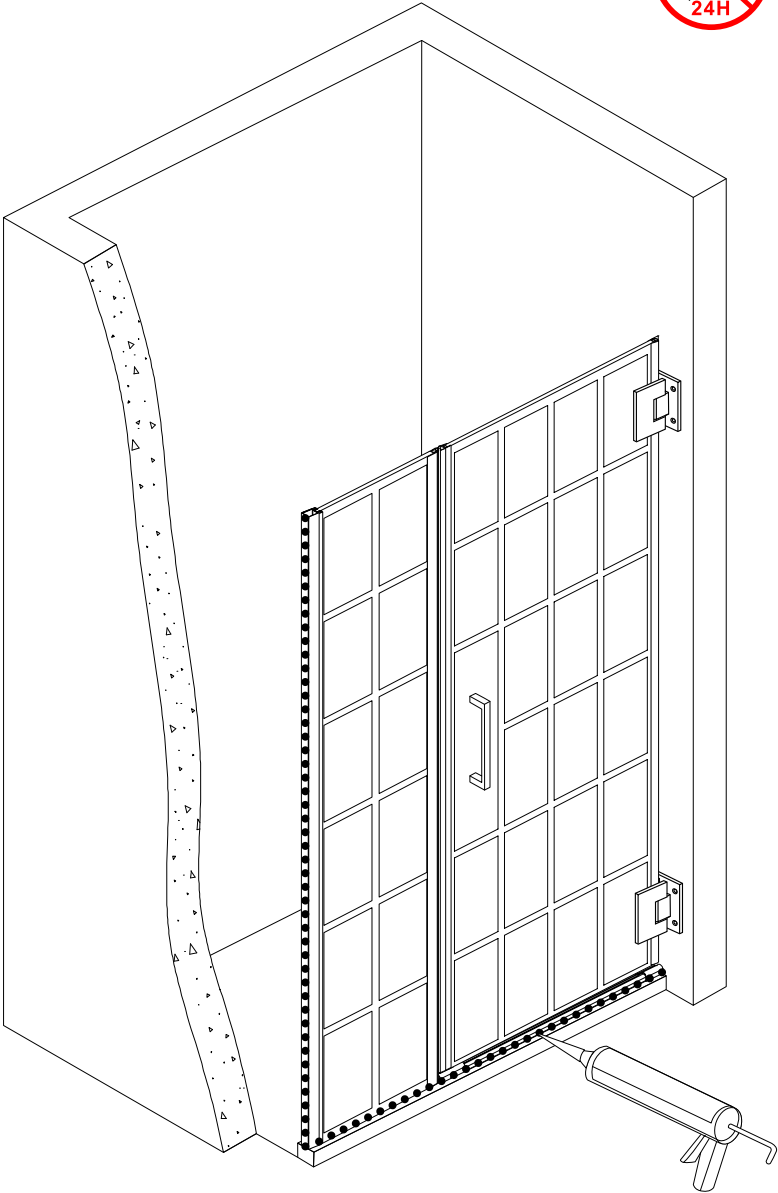

NOTE: Do not use the shower enclosure for 24 hours after installation and do not use corrosive cleaning products or abrasive materials when cleaning the shower enclosure.

SHOWER DOOR MAINTENANCE MANUAL

Cleaning:

1. When cleaning the frame, glass and hardware accessories of the shower door, please use a soft cloth. If there is slight dirt, please use a soft cloth or sponge dipped in "neutral detergent" for cleaning. After removing the stubborn dirt, please rinse with plenty of water to prevent the cleaning agent from remaining on the surface of the shower door and causing corrosion damage.
2. When using the special detergent and cleaning agent for bathroom, please be sure to use it correctly according to the precautions described in the detergent. Incorrect use will cause the product to have some bad conditions, such as paint peeling, color fading, rust, tarnishing, etc.
3. Do not use the following items for cleaning: acid, alkaline solvents, medicines (such as hydrochloric acid), solvents containing bleach, acetone diluent, detergent powder, toilet cleaner, etc, otherwise the product will be damaged. There are some bad conditions, such as paint peeling, discoloration, rust, tarnishing, etc.
4. The cleaning items that can be used for the product are: soft cloth, toothbrush, neutral detergent, a mixture of diluted vinegar and salt. Note: any cleaning agent will have a certain impact on the surface of the product, so use caution. Rinse with clean water in time to prevent damage to the surface caused by the residual detergent.

How to use and maintain the pulley of the shower door:

1. Avoid hitting the movable door with force, so as not to cause the movable door to fall off.
2. Pay attention to regularly clean the slide rails, pulleys and sliders, and add lubricant (lubricating oil or lubricating wax).
3. Regularly adjust the fixing screws of the pulley to ensure the effective bearing and good sliding of the pulley on the movable door.

Maintenance of tempered glass:

1. Do not hit or hit the glass surface with sharp objects to avoid damage.
2. Do not wipe the glass surface with rough objects to avoid scratches.
3. After using for a period of time, the glass will remain dirt, remove the dirt on the glass. you can use a mixture of cool and salt to wash with a toothbrush, you can remove the stains. Pay attention to rinse with clean water in time after use.

THANK YOU FOR SHOPPING WITH US!



**PLEASE DO NOT RETURN TO STORE!
PLEASE CHECK ALL THE ACCESSORIES
BEFORE INSTALLATION.**

Tips: If there is any questions for the products, please feel free to contact us. We will solve it at the first time.

For quick and better to solve problem for you,
Required information is a MUST:

1. Where you buy
2. PO Number/Tracking number
3. SKU Number
4. Problem to Clarify
5. Picture/Video

Email: servicefast1@outlook.com



Bring Better Life for You!

Email: servicefast1@outlook.com