


Monterrey Solid Wood Bed

Queen Size

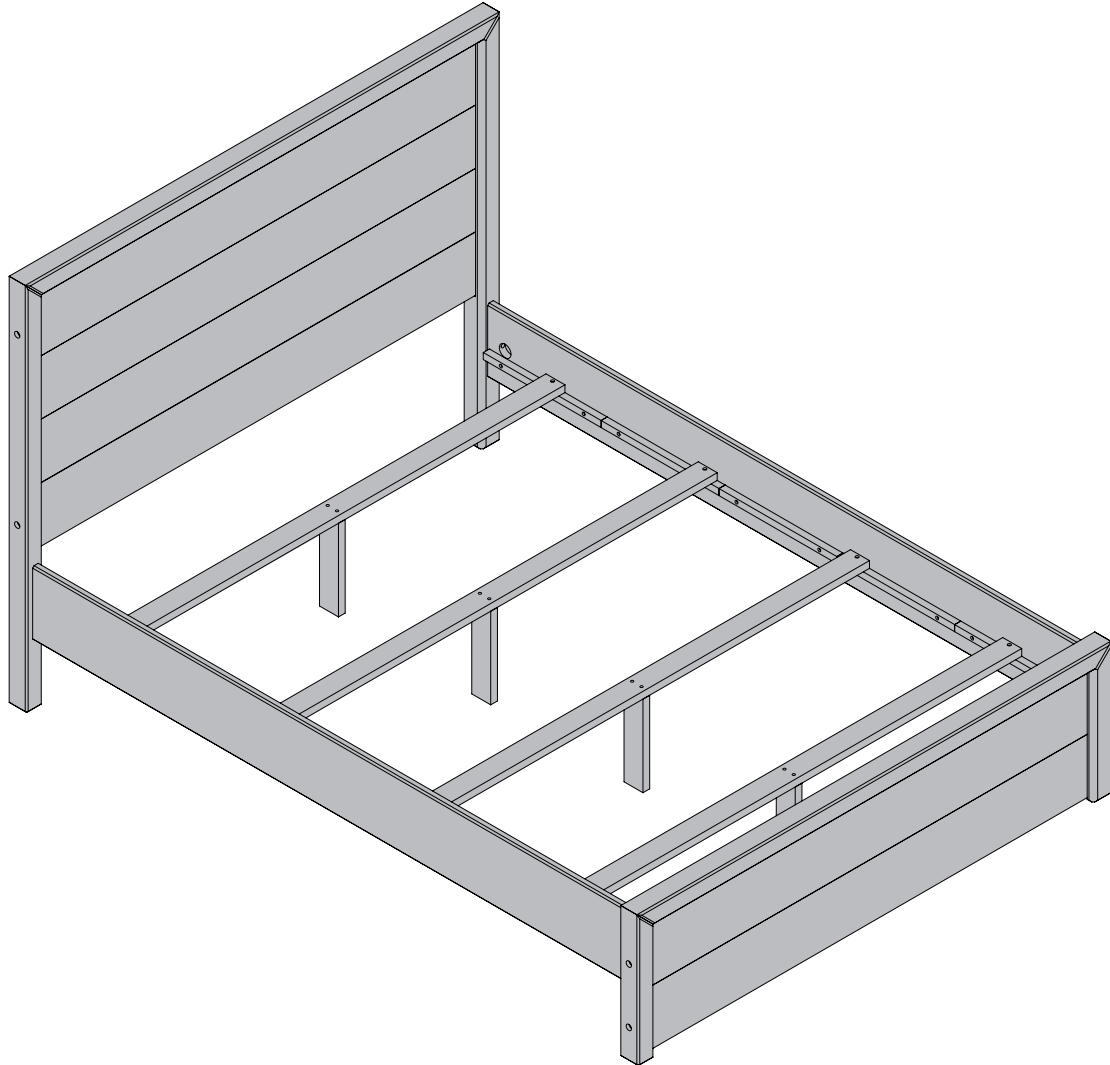

Assembly
02 people



Time
1:00 hours approximately




Tools
philips key, rubber hammer



Volume quantity
01 boxes





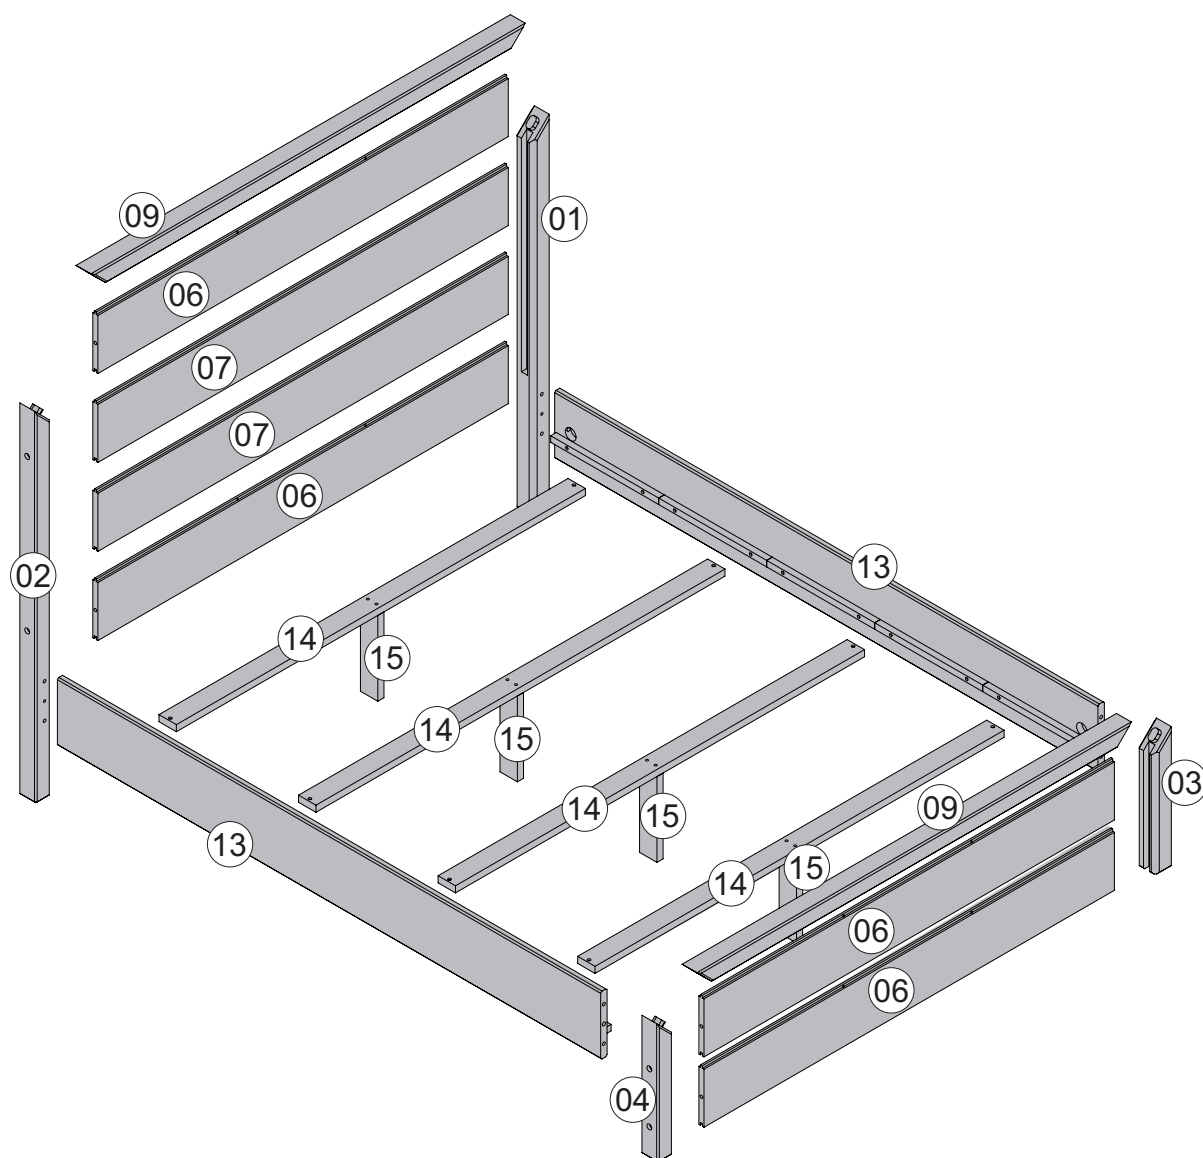








Parts list for assembly. Please confirm all parts available before assembly




ATTENTION


- * Read and observe carefully all the assembly instructions before beginning assembly.
- * The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- * The screws must be tightened periodically.
- * Avoid contact with sharp objects.
- * Avoid banging pieces together.

Hardware list for assembly.
Please confirm all hardware available before assembly


A	 $\varnothing 3/8" \times 1' 9/16"$	08x	+	SPARE 02x
B	 $\varnothing 1/4" \times 4' 1/4"$	08x	+	01x
F		01x	+	01x
AP	 $\varnothing 1/8" \times 1' 3/8"$	12x	+	02x
AR	 $\varnothing 5/16" \times 3' 1/2"$	02x		
AS	 $1/2" \times 1' 1/4"$	02x		
AT	 $\varnothing 5/16"$	02x	+	01x
AU	 $1/2"$	01x		
BC	 $1/4"$	10x	+	02x
BI	 $\varnothing 1/4" \times 5"$	02x	+	01x
BJ	 $\varnothing 3/4"$	08x	+	02x
BL	 $1/4" \times 2"$	08x	+	01x
BV	 $1/4"$	04x		

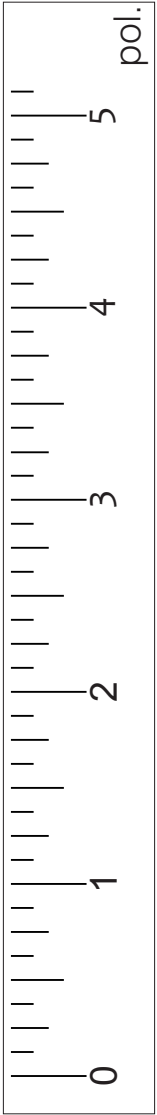


Step - 01

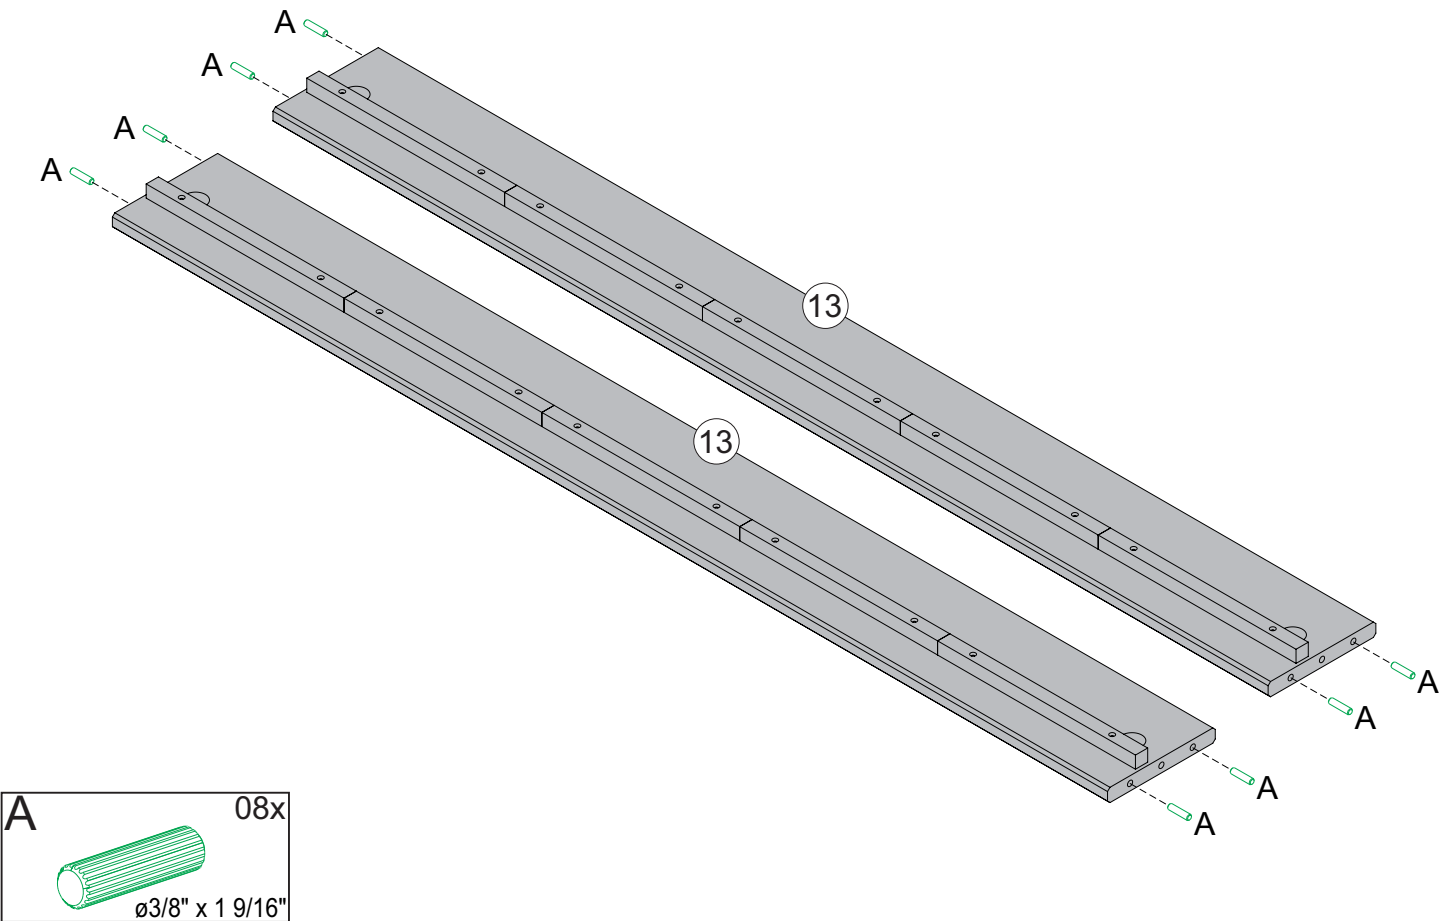


Step - 02

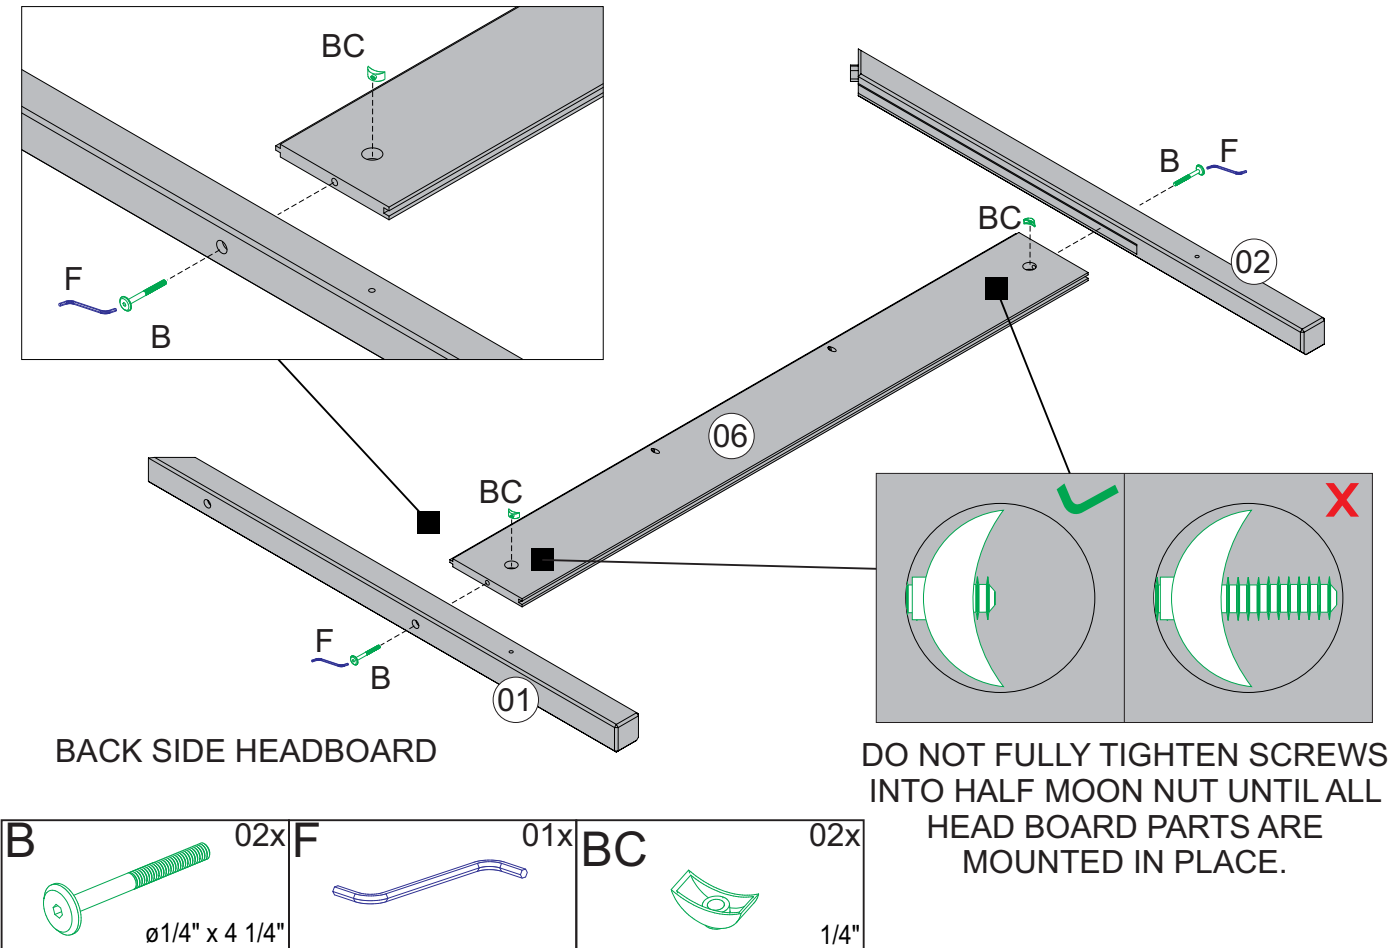

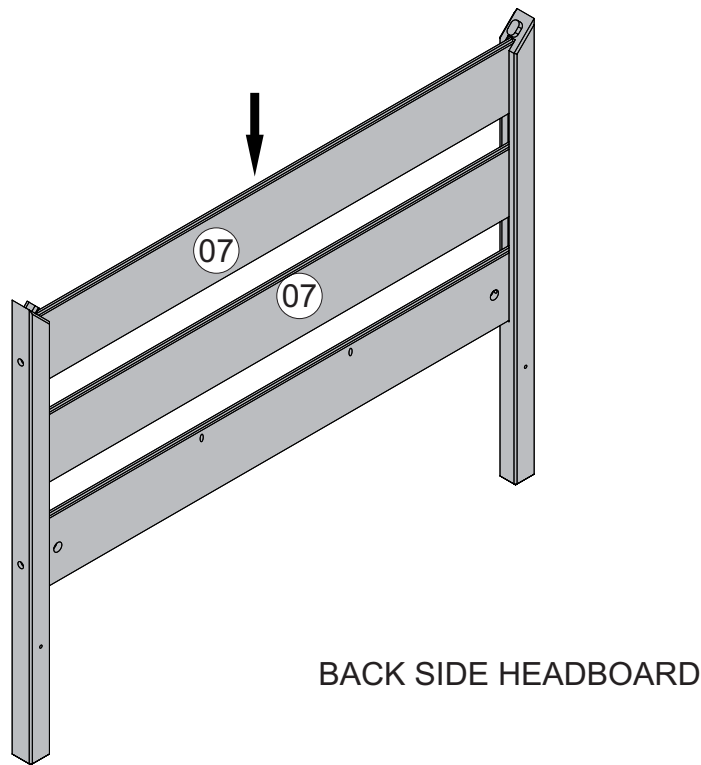


Step - 03

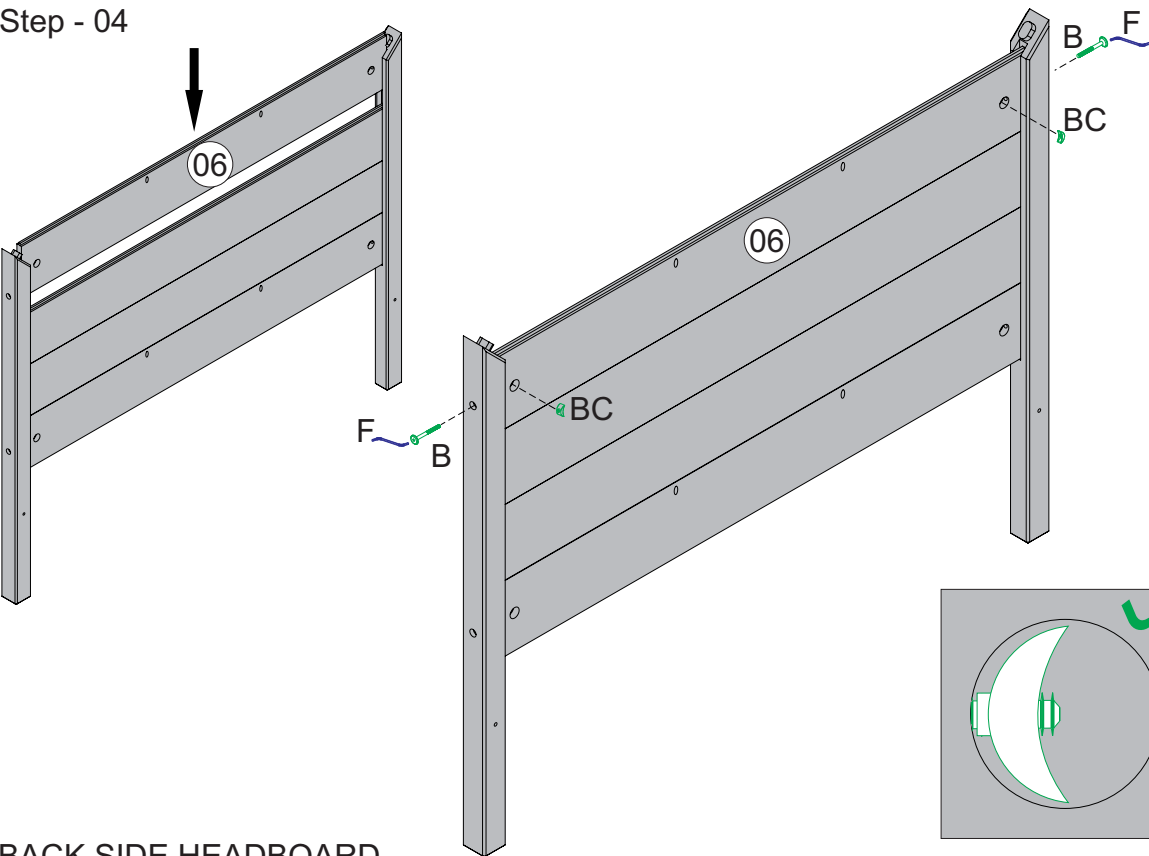

Step - 04




BACK SIDE HEADBOARD



B		02x	F		01x	BC		02x
	$\varnothing 1/4" \times 4 \frac{1}{4}"$						$1/4"$	

DO NOT FULLY TIGHTEN SCREWS INTO HALF MOON NUT UNTIL ALL HEAD BOARD PARTS ARE MOUNTED IN PLACE.


Step - 05 - Attention: At this Point, Fully Tighten All Screws!

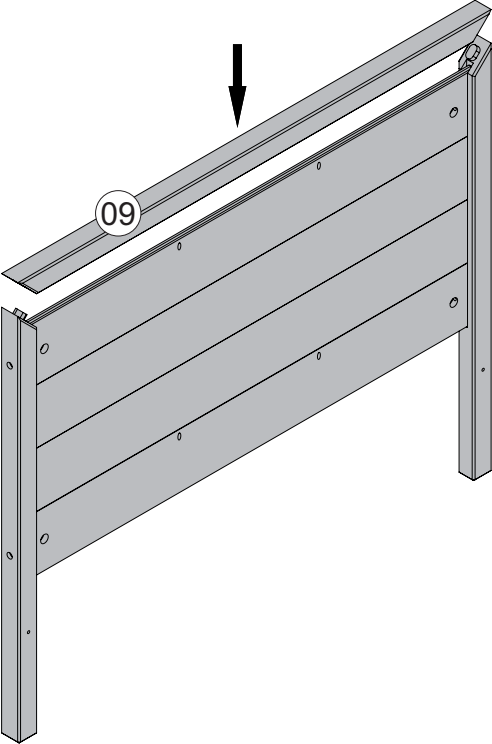


BACK SIDE HEADBOARD

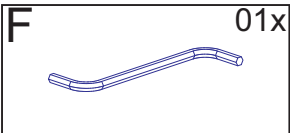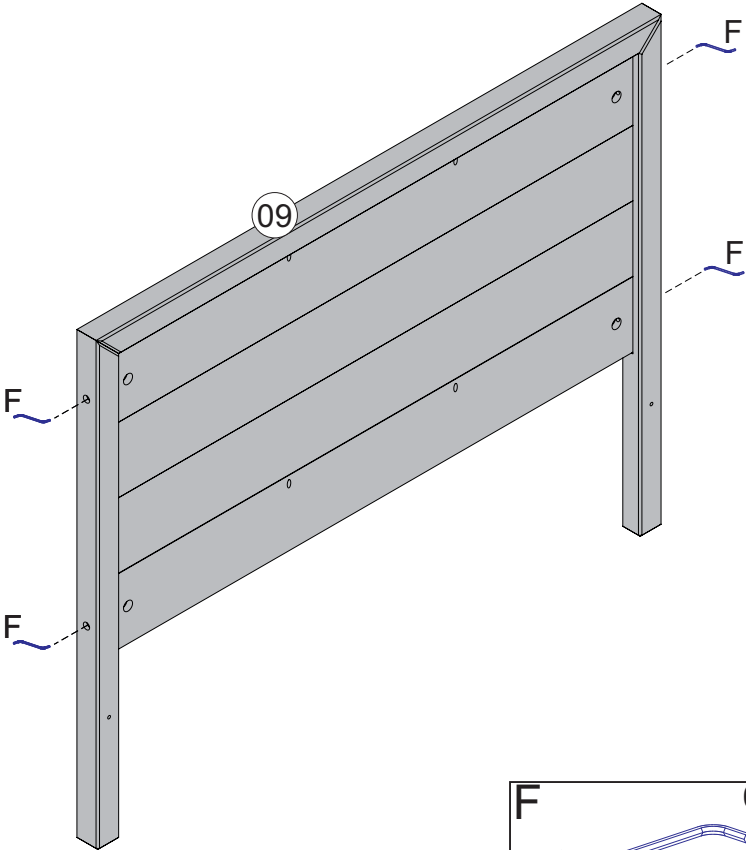

Step - 06

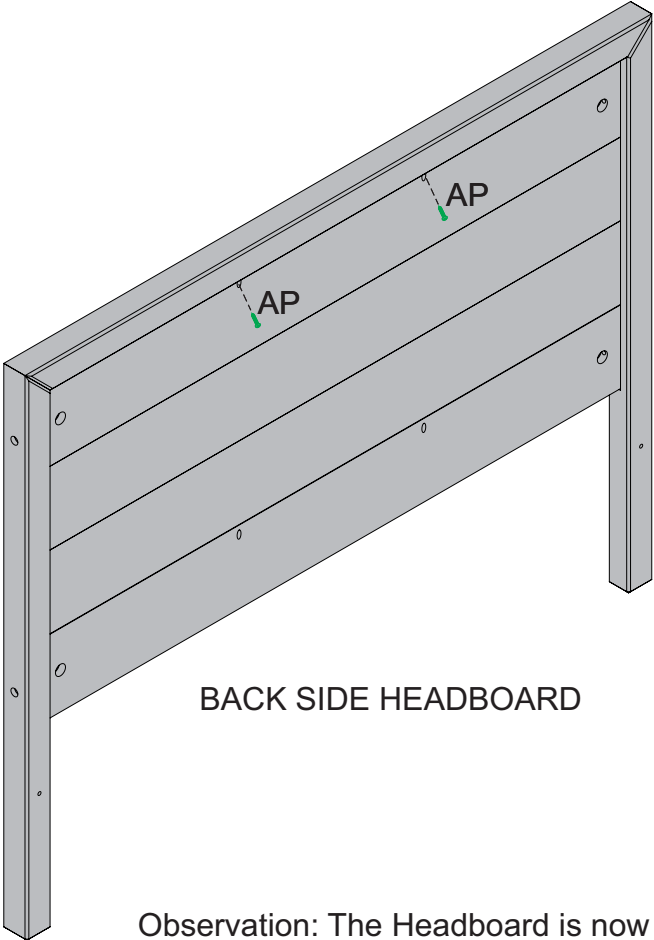


BACK SIDE HEADBOARD

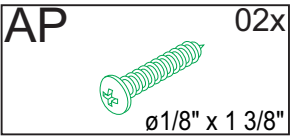

Observation: The Headboard is now completely assembled and ready to attach to Bed Rails (Part 13)

Step - 07

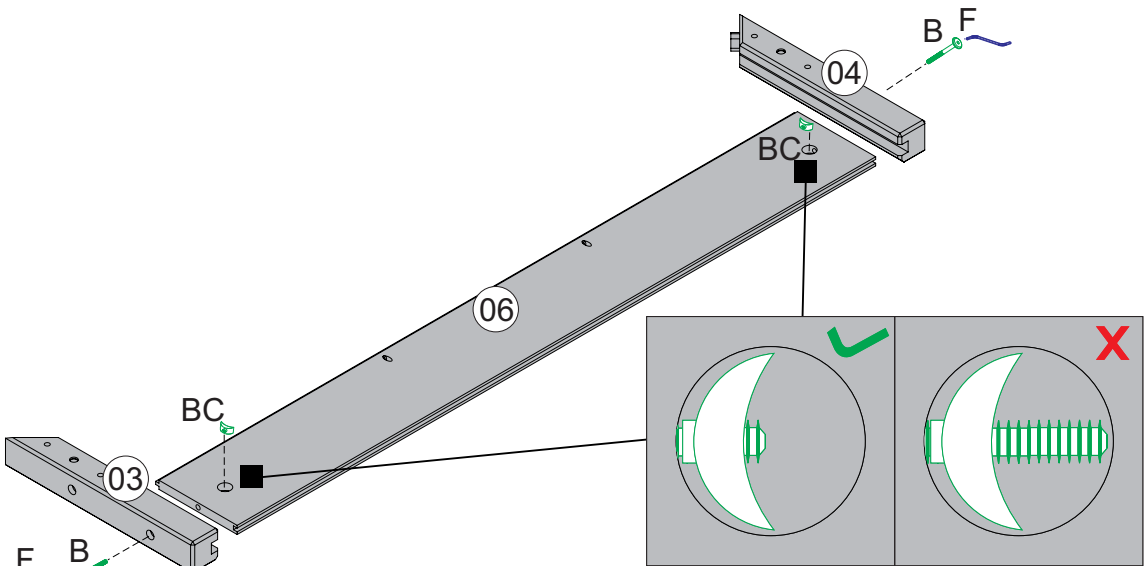


BACK SIDE FOOTBOARD

DO NOT FULLY TIGHTEN SCREWS INTO HALF MOON NUT UNTIL ALL HEAD BOARD PARTS ARE MOUNTED IN PLACE.

B	02x	F	01x	BC	02x

Step - 08

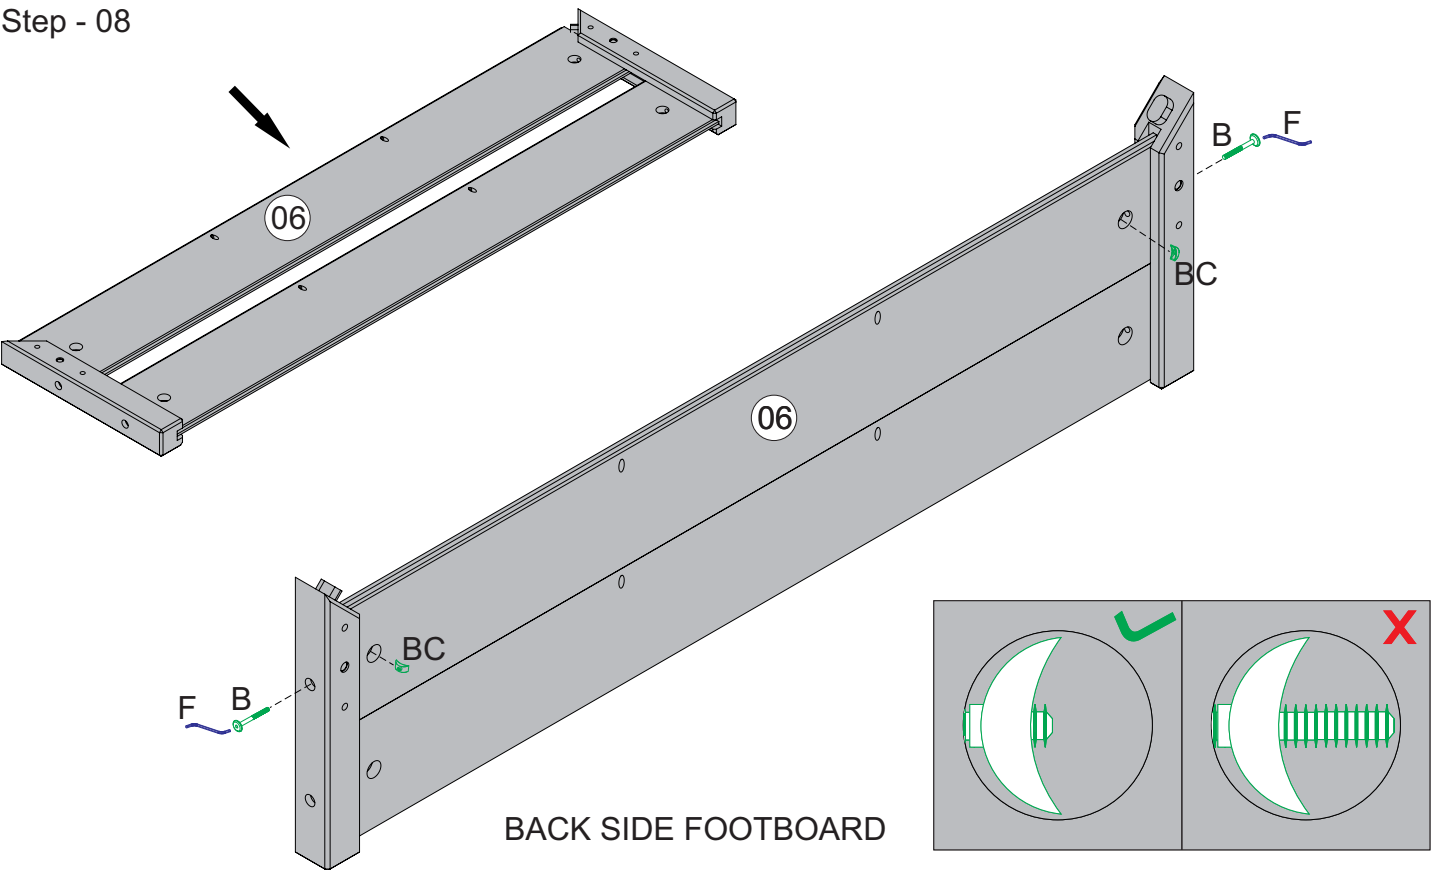


BACK SIDE FOOTBOARD



DO NOT FULLY TIGHTEN SCREWS INTO HALF MOON NUT UNTIL ALL HEAD BOARD PARTS ARE MOUNTED IN PLACE.

B	02x	F	01x	BC	02x



Step - 9 - Attention: At this Point, Fully Tighten All Screws

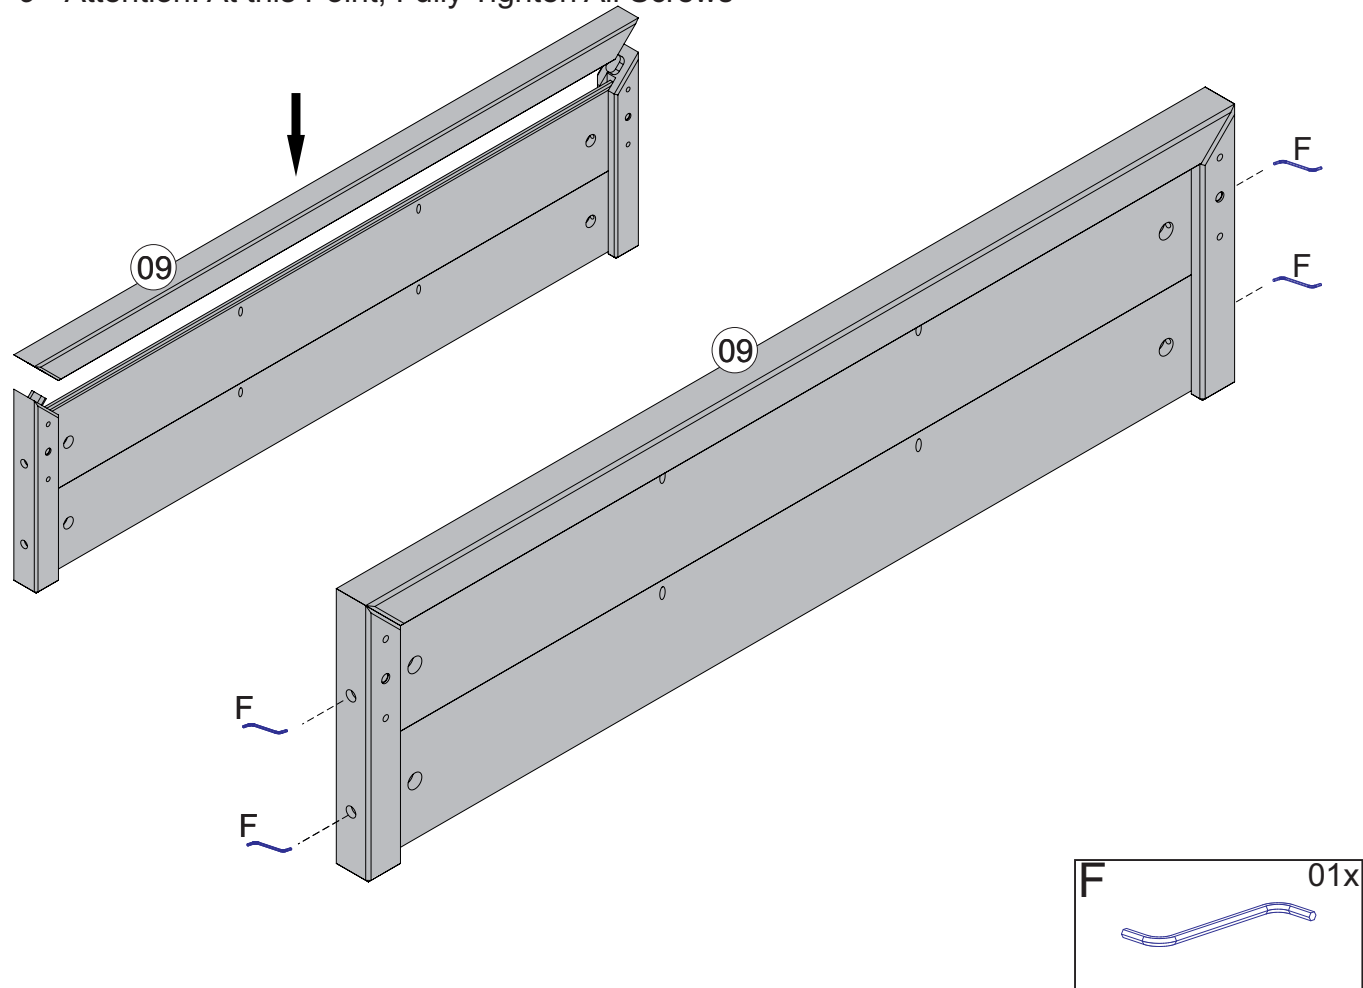




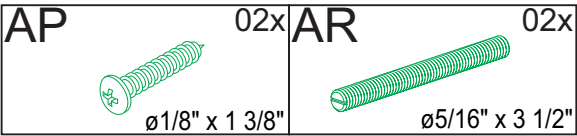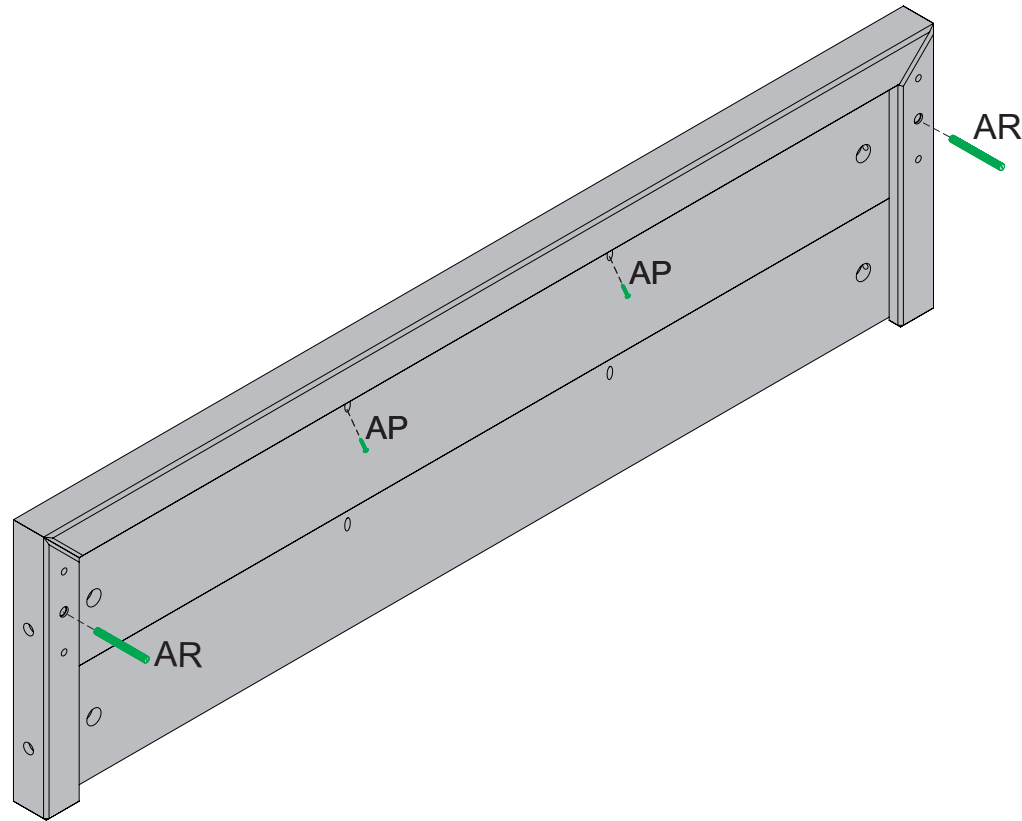


Step - 10

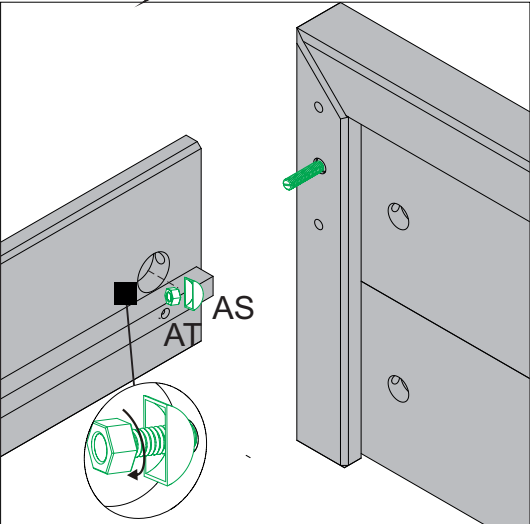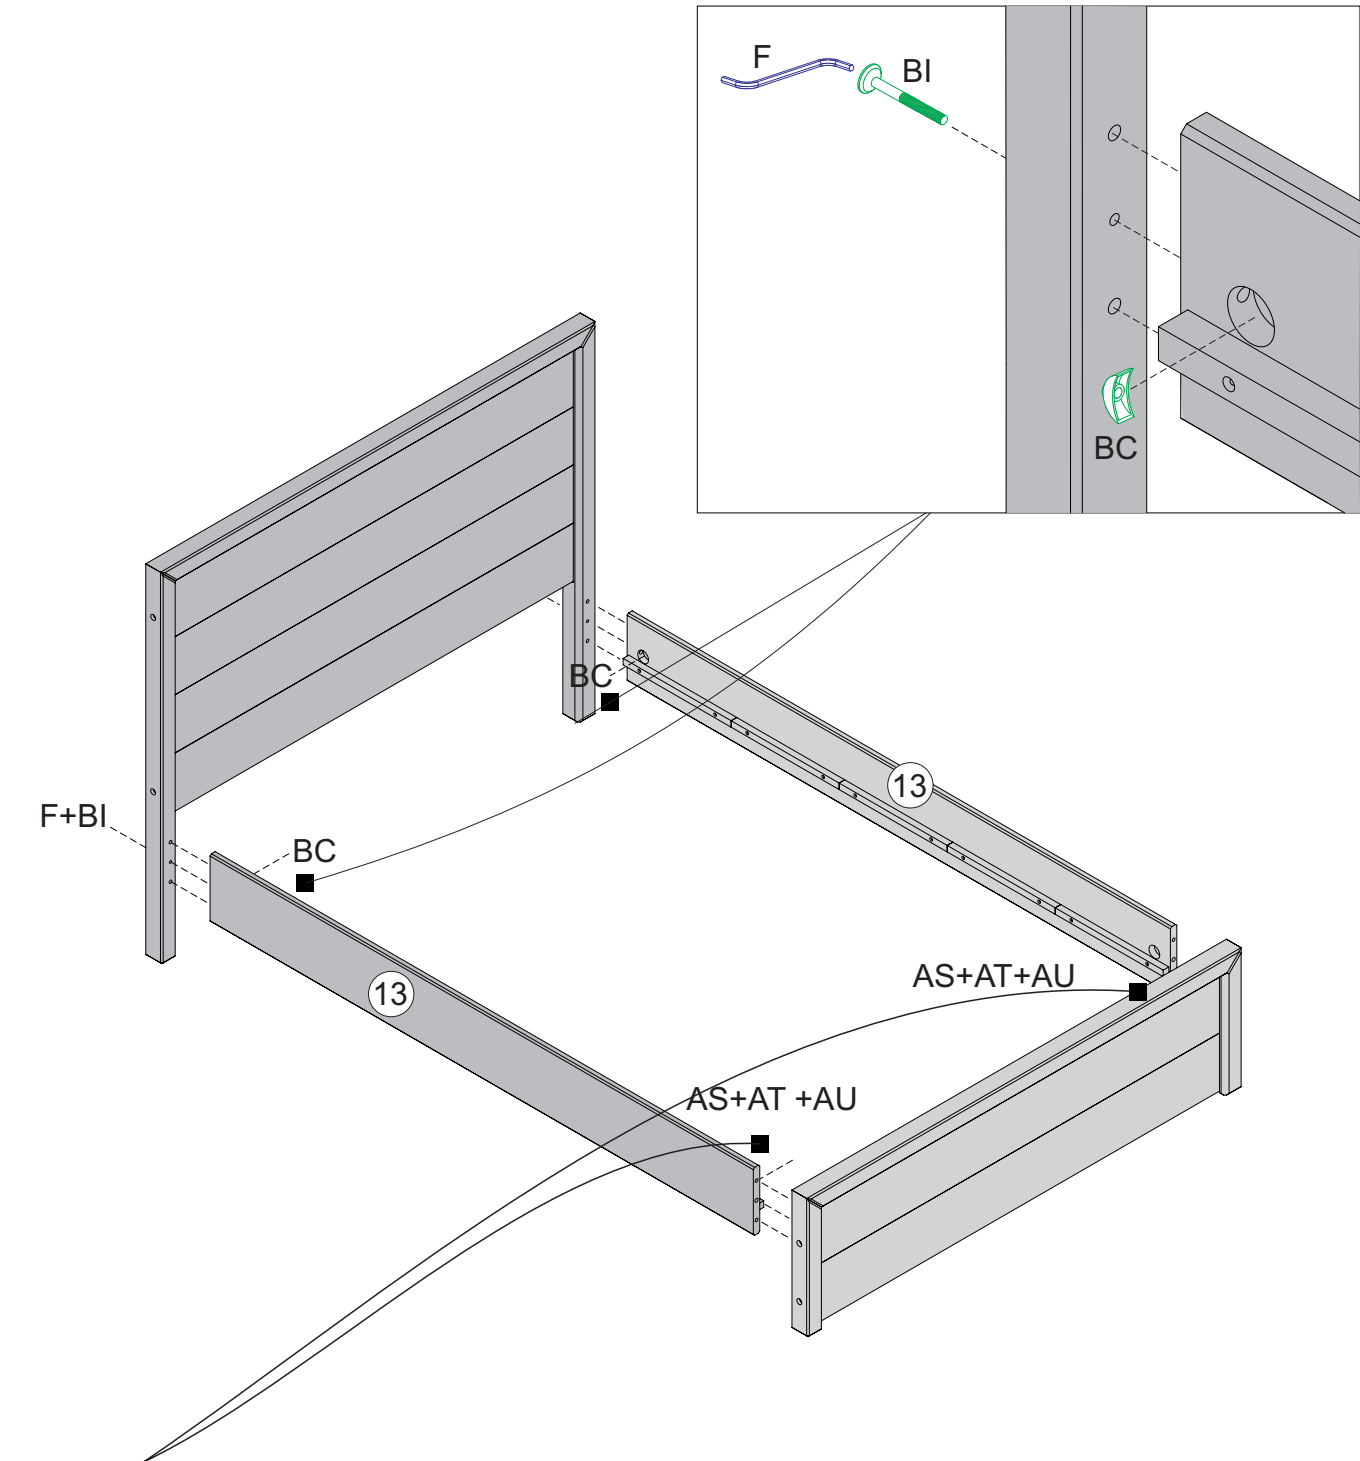


Observation: The Foot board is now completely assembled and ready to attach to Bed Rails (Part 13)





F	01x	AS	02x
			1/2" x 1 1/4"
AT	02x	AU	01x
			1/2"
BC	02x	BI	02x
	1/4"		ø1/4" x 5"

Step - 12

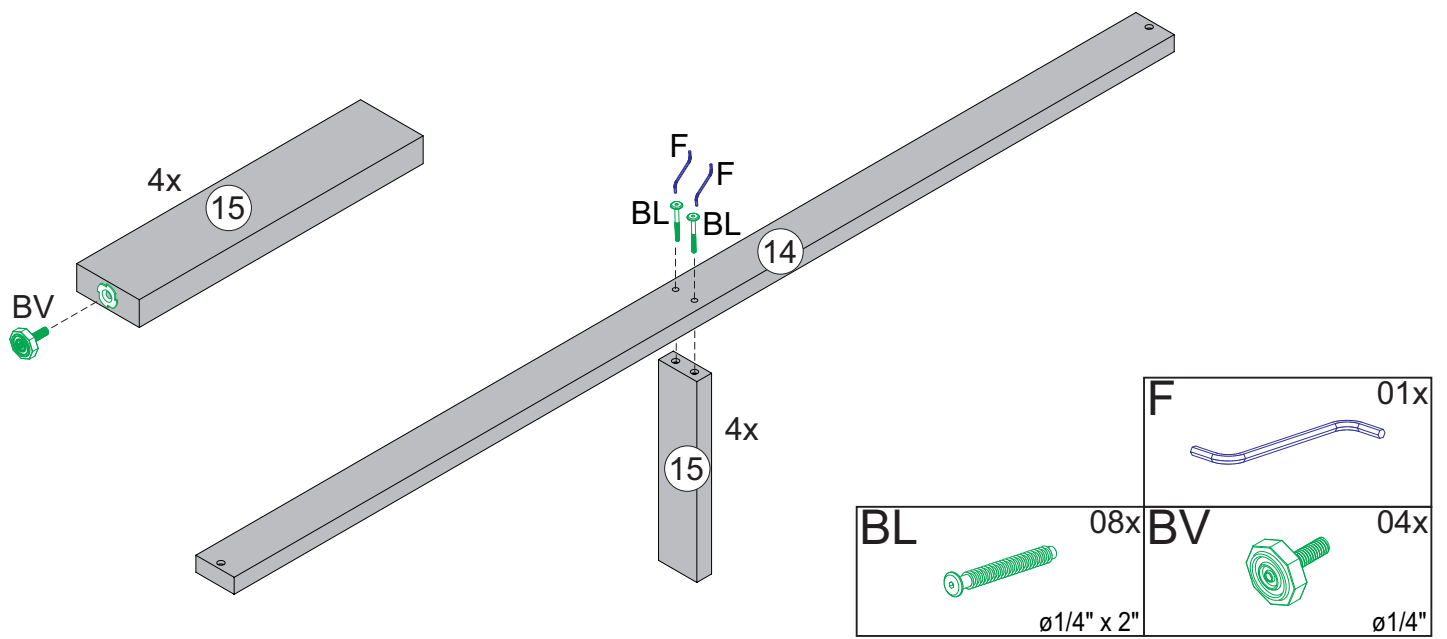

Step - 13

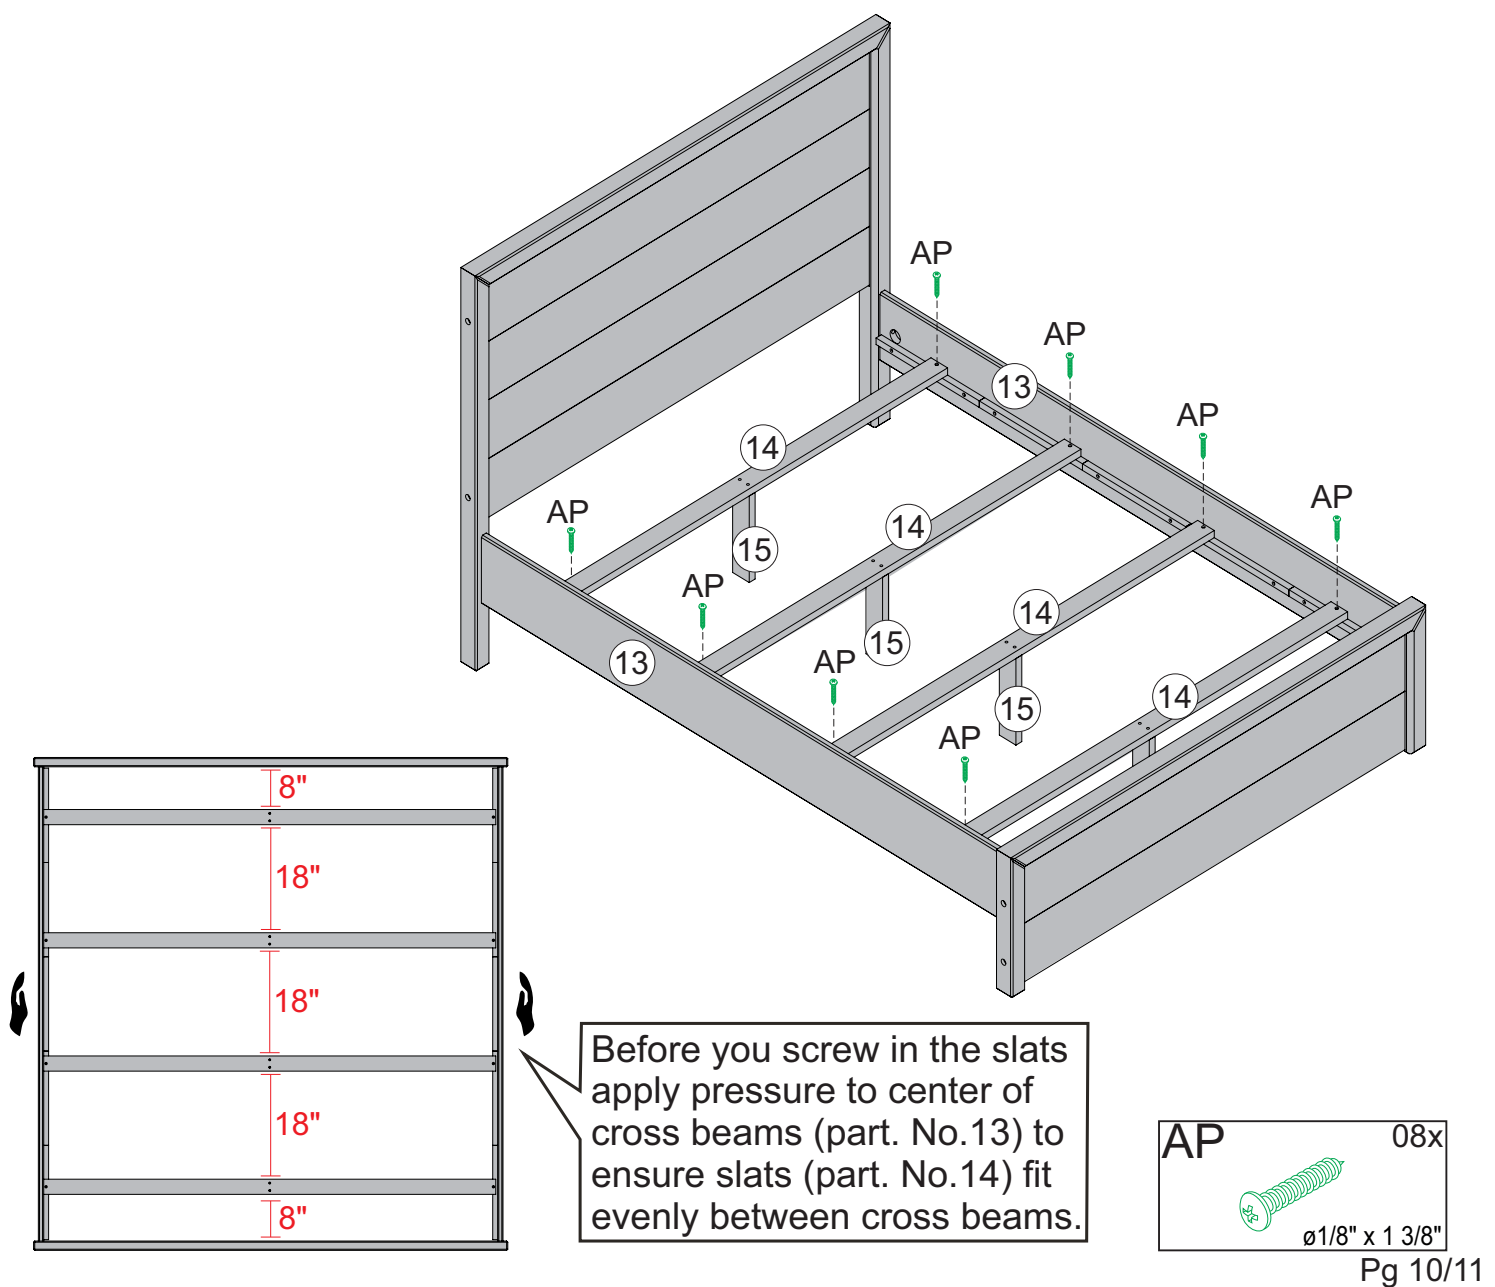

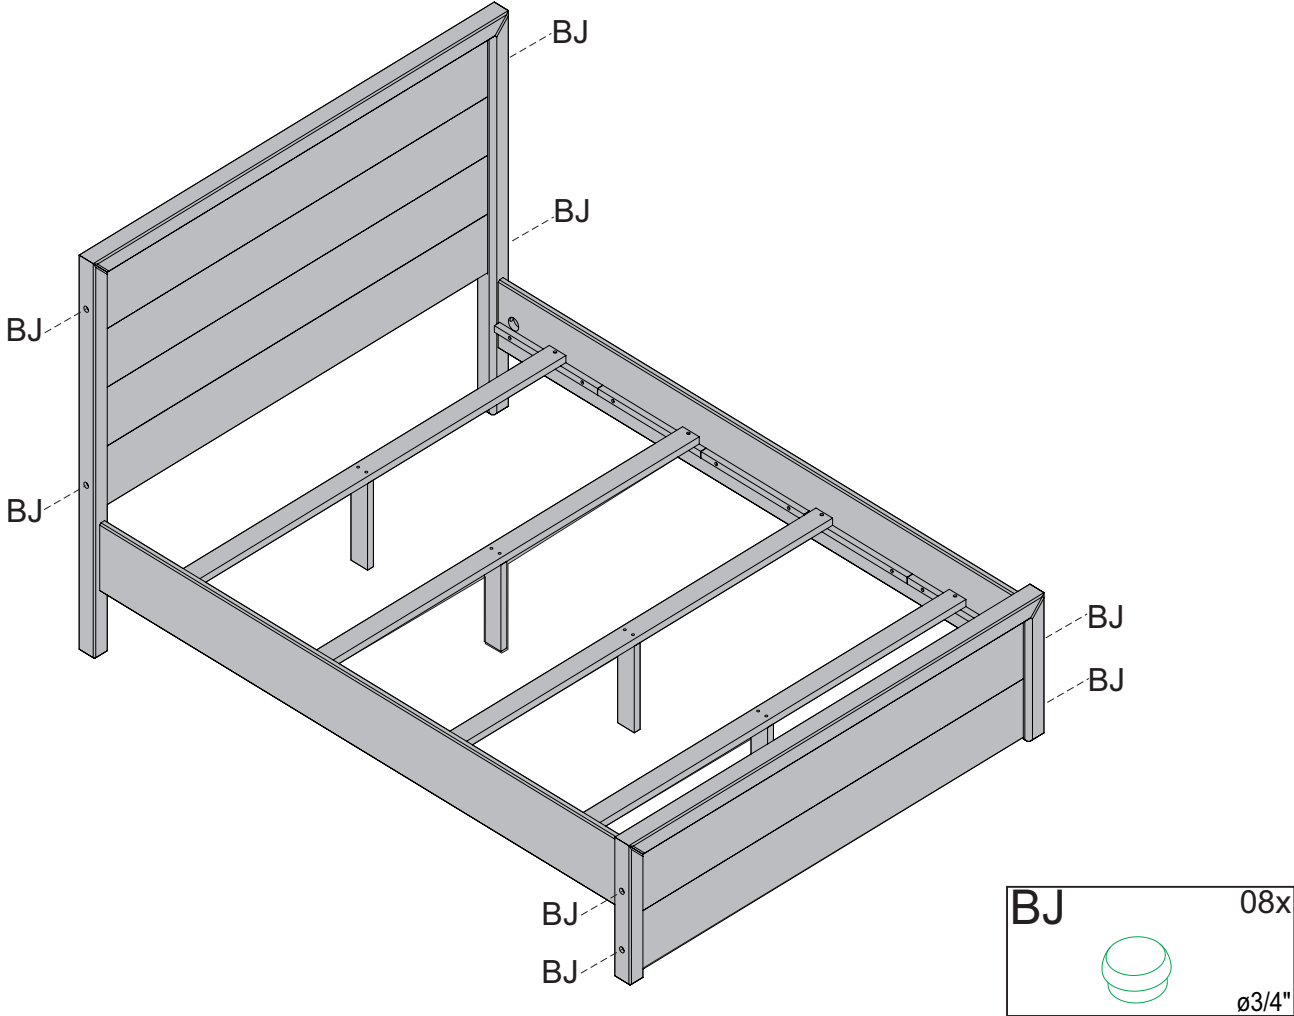

Congratulations, your new bed is now completely assemble and ready to enjoy!