


# ASSEMBLY INSTRUCTION

## ITEM:WF316903

### CONSOLE TABLE

If you have any questions, please feel free to contact us.  
Email: [lowes.team@qualfurn.net](mailto:lowes.team@qualfurn.net)

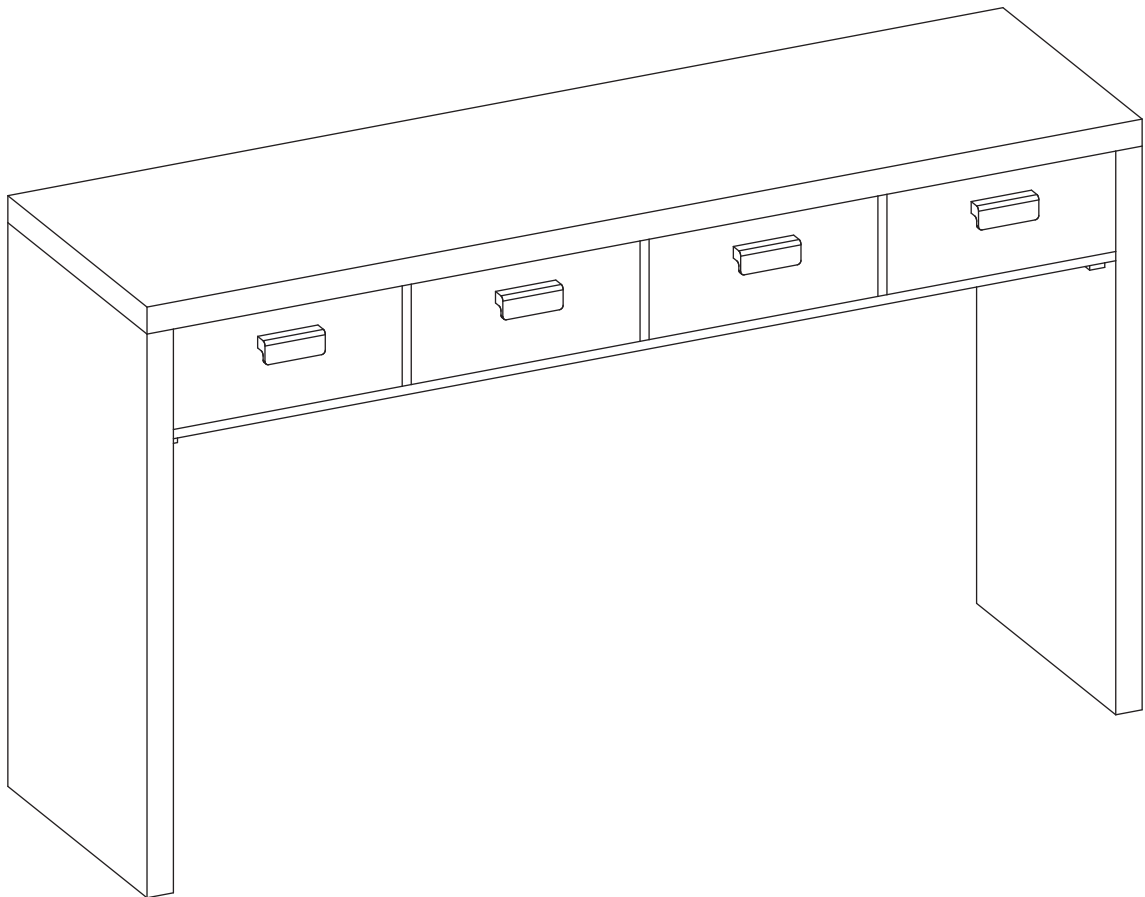

# **ASSEMBLY INSTRUCTION**

## **ITEM:WF316903**

**Please read these instructions fully before starting assembly:**

Tools required: Phillips screwdriver (medium & large)


1. Check you have all the components and tools listed on the following pages.
2. Remove all fittings from the plastic bags and separate them into their groups.
3. Keep children and animals away from the work area, small parts could choke if swallowed.
4. Make sure you have enough space to layout the parts before starting.
5. During assembly do not stand or put weight on the product, this could cause damage.
6. Assemble the item as close to its final position (in the same room) as possible.
7. Assemble on a soft level surface to avoid damaging the unit or your floor.
8. Parts of the assembly will be easier with 2 people.
9. To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.
10. Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
11. Regularly check and ensure that all bolts and fittings are tightened properly.
12. Please do not place items that exceed the load capacity.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

# ASSEMBLY INSTRUCTION

## ITEM:WF316903


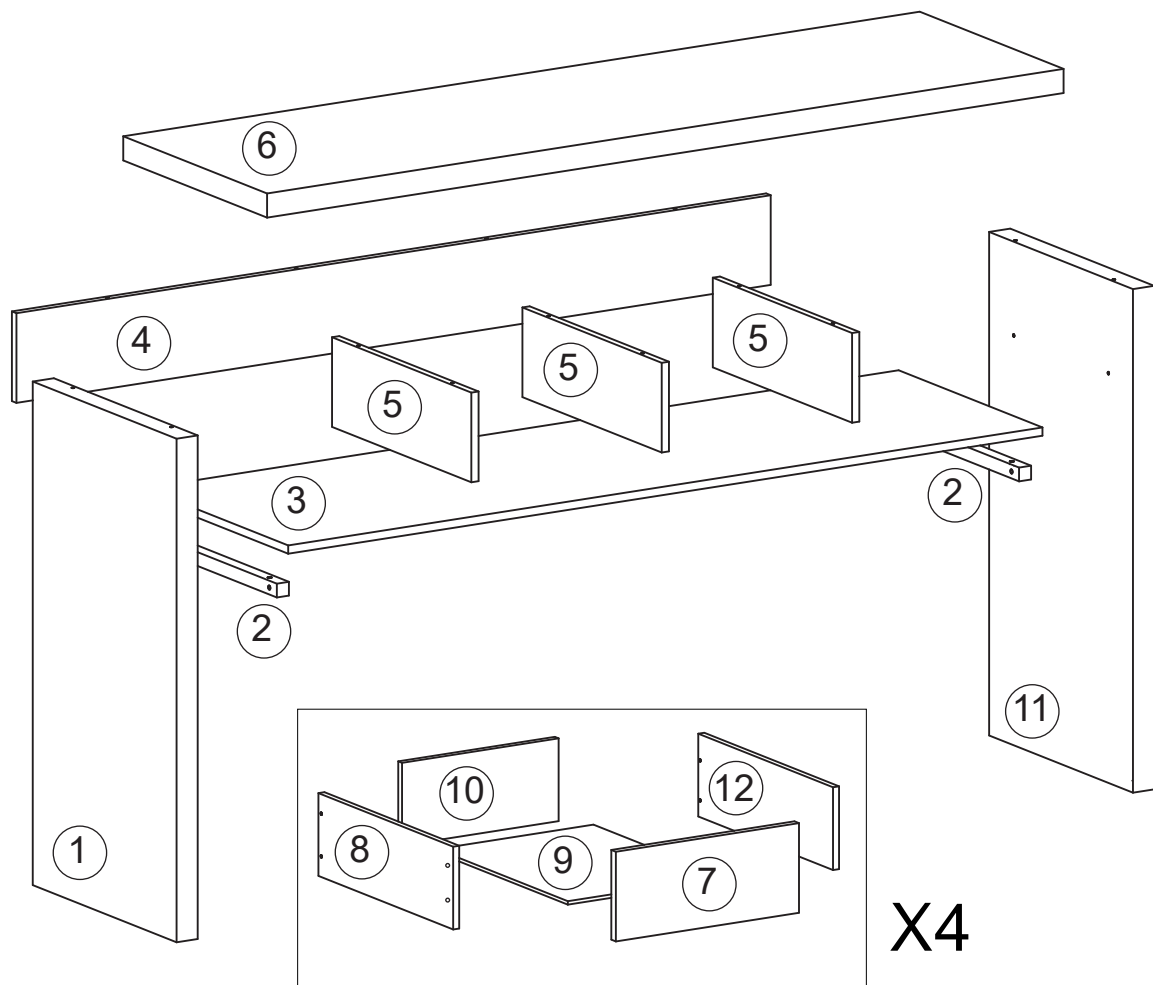




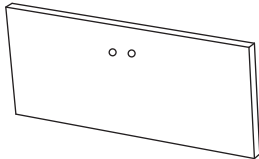
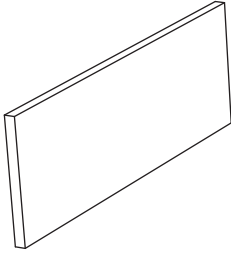

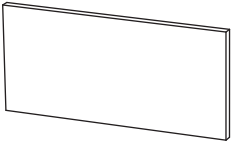

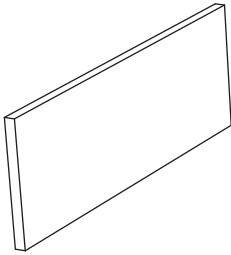


# Part List

## ITEM:WF316903

Please check you have all the panels listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
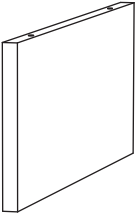
<p>①</p>  <p>Table leg 1 PC</p>	<p>②</p>  <p>Support bar 2 PCS</p>	<p>③</p>  <p>Lower bar 1 PC</p>	<p>④</p>  <p>Rear panel 1 PC</p>
<p>⑤</p>  <p>Medial panel 3 PCS</p>	<p>⑥</p>  <p>Top panel 1 PC</p>	<p>⑦</p>  <p>Drawer panel 4 PCS</p>	<p>⑧</p>  <p>Drawer side panel 4 PCS</p>
<p>⑨</p>  <p>Drawer lower panel 4 PCS</p>	<p>⑩</p>  <p>Drawer rear panel 4 PCS</p>	<p>⑪</p>  <p>Table leg 1 PC</p>	<p>⑫</p>  <p>Drawer side panel 4 PCS</p>



















# Hardware list

## ITEM:WF316903

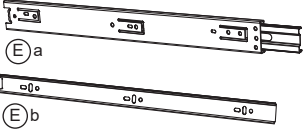Please check you have all the panels listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.




<p><b>A</b></p>  <p>Male camlock x 32</p>	<p><b>B</b></p>  <p>Female camlock x 32</p>	<p><b>C</b></p>  <p>Screw 3*12 x 32</p>	<p><b>D</b></p>  <p>Screw 6*35 x 4</p>
<p><b>E</b></p>  <p>Drawer slider 10' x 8</p>	<p><b>F</b></p>  <p>Handle x 4</p>	<p><b>G</b></p>  <p>Screw 4*18 x 8</p>	<p><b>H</b></p>  <p>HexKey M4 x 1</p>
<p><b>I</b></p>     <p>x 2 x 1 x 2 x 2</p> <p>Tilting prevention device</p>			
<p><b>J</b></p>  <p>Male camlock x 16</p>	<p><b>K</b></p>  <p>Female camlock x 16</p>	<p><b>L</b></p>  <p>Screw 4*30 x 16</p>	<p><b>M</b></p>  <p>Screw 6*40 x 4</p>

T





# ASSEMBLY INSTRUCTION

## ITEM:WF316903

### Step 1

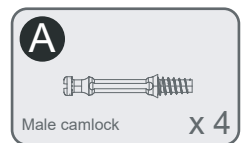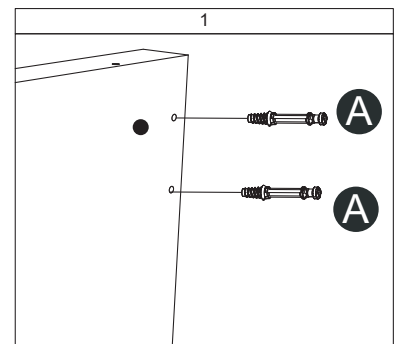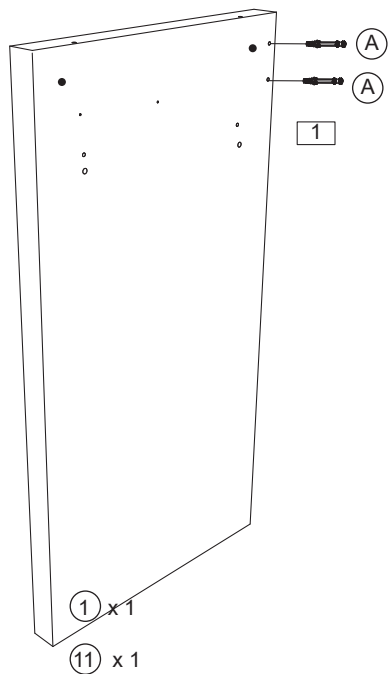







### Step 2

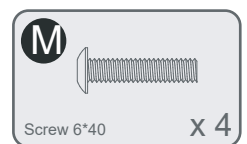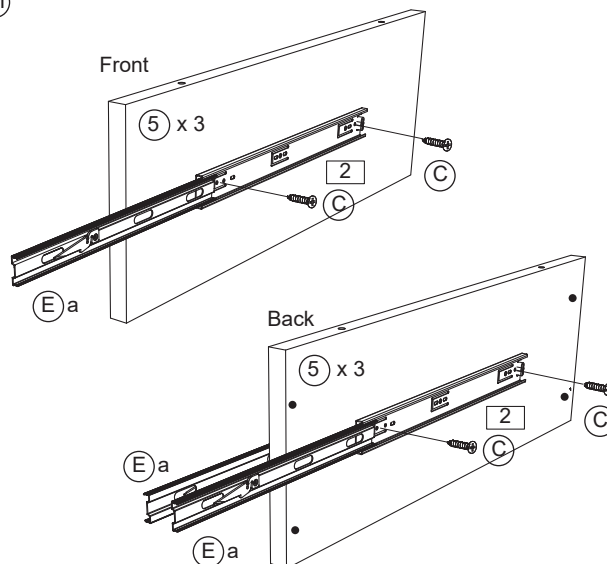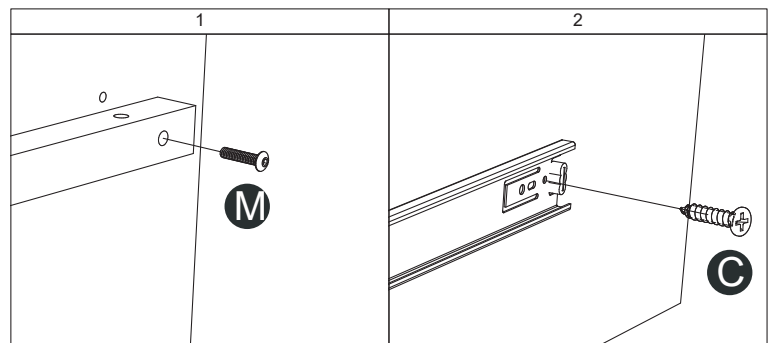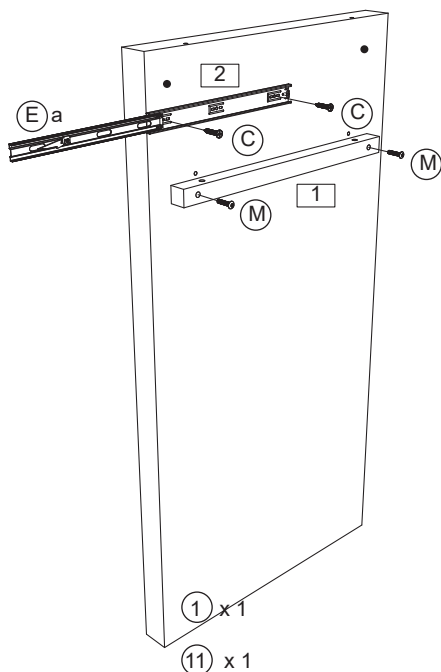



# ASSEMBLY INSTRUCTION

## ITEM:WF316903



### Step 3

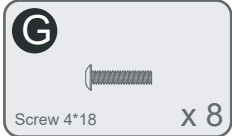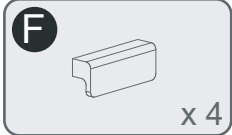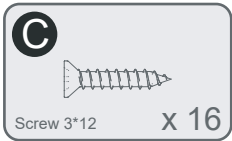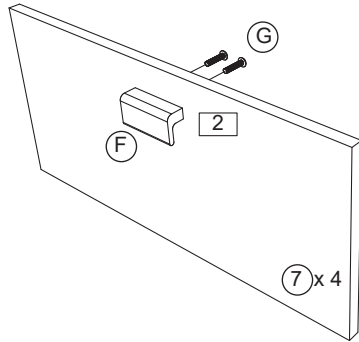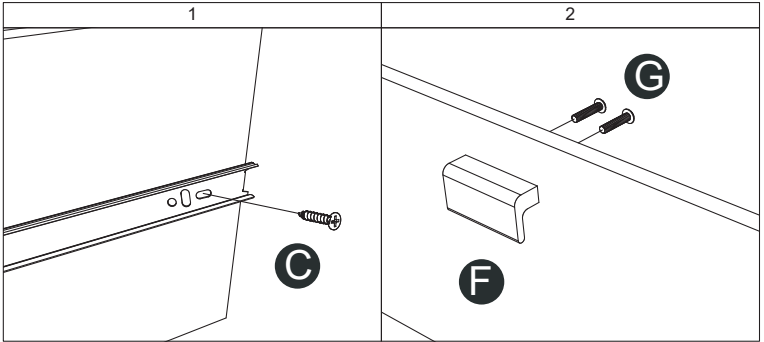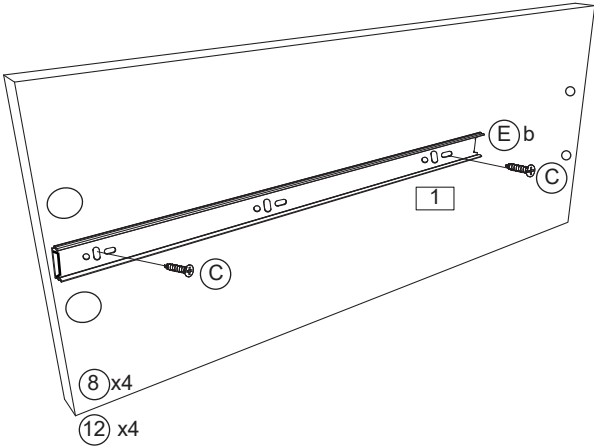

### Step 4

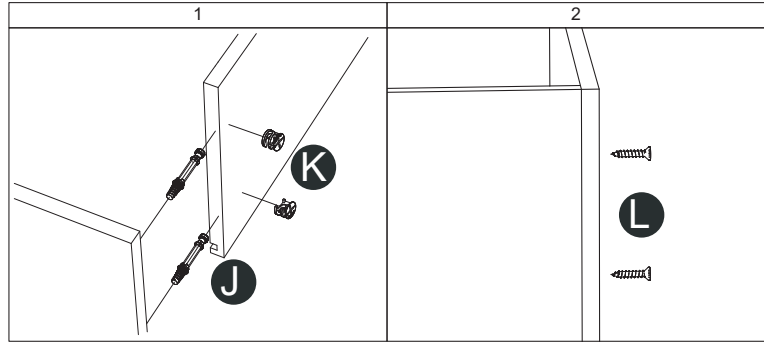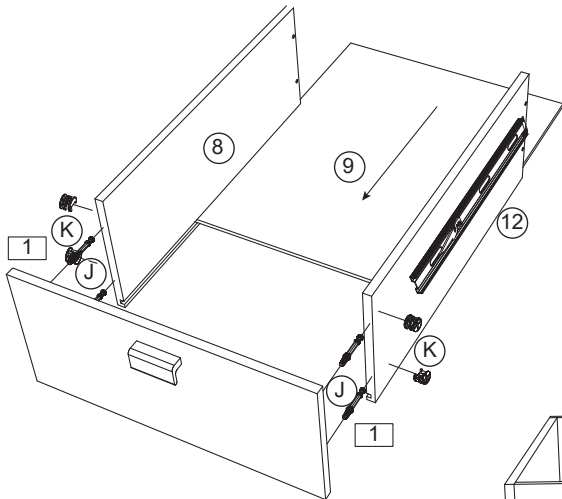




x 4

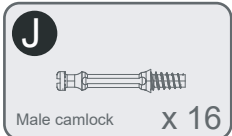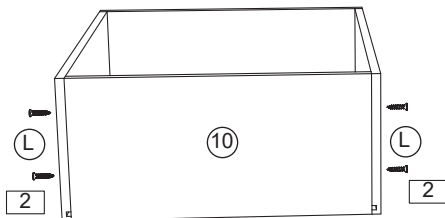




# ASSEMBLY INSTRUCTION

## ITEM:WF316903

### Step 5

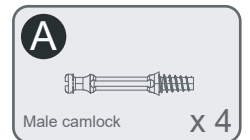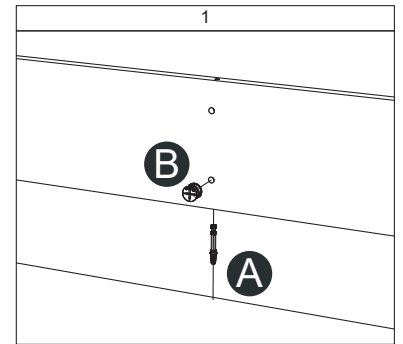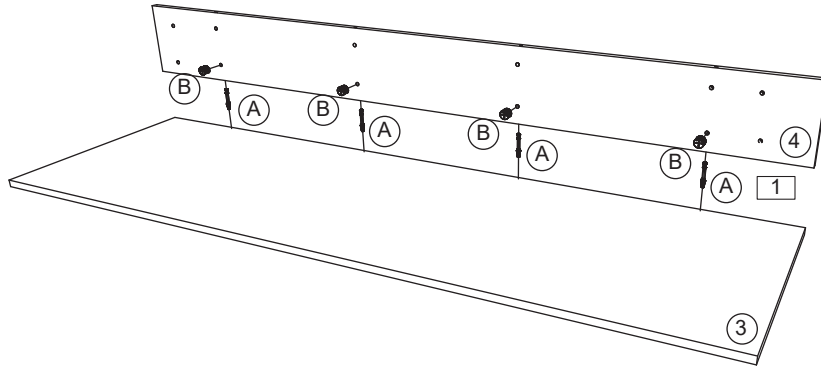




### Step 6

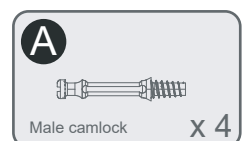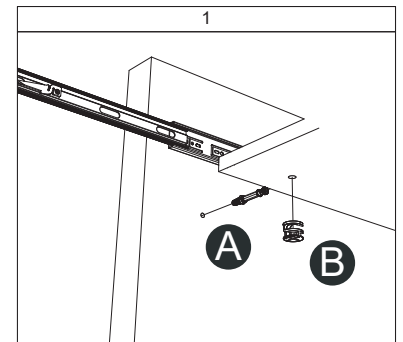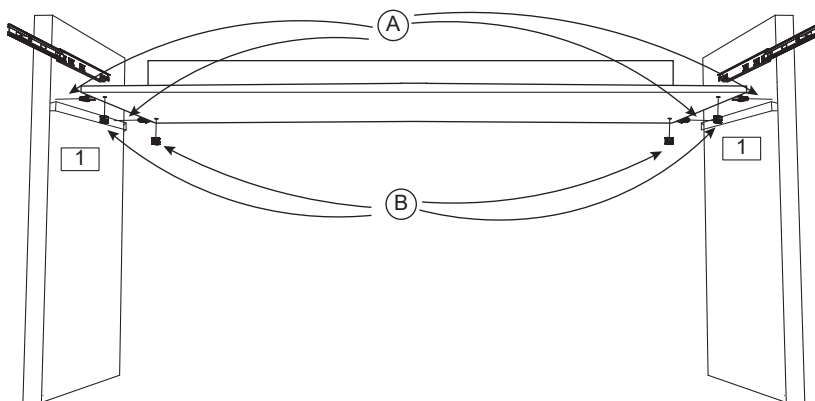




# ASSEMBLY INSTRUCTION

## ITEM:WF316903

### Step 7

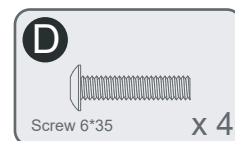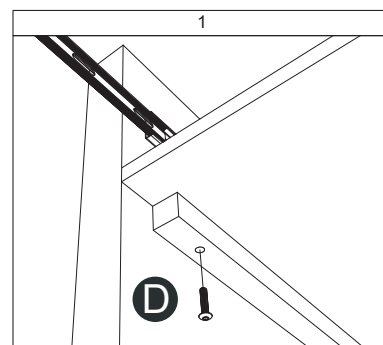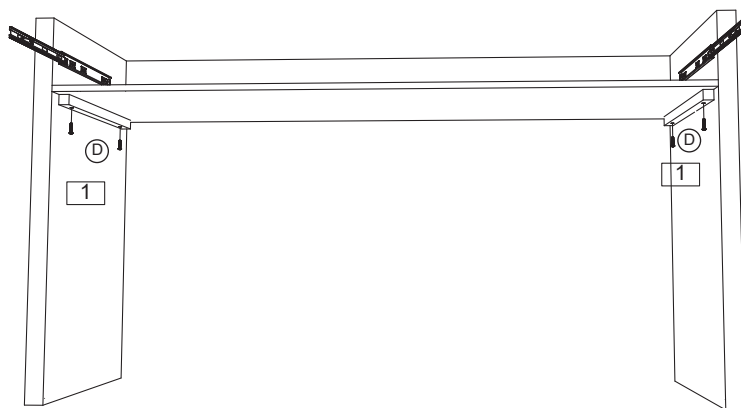





### Step 8

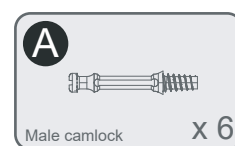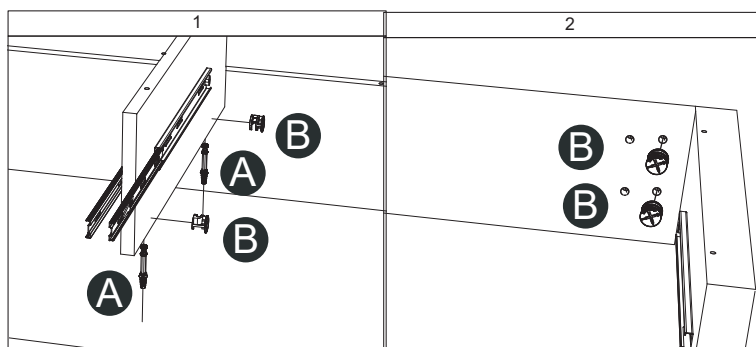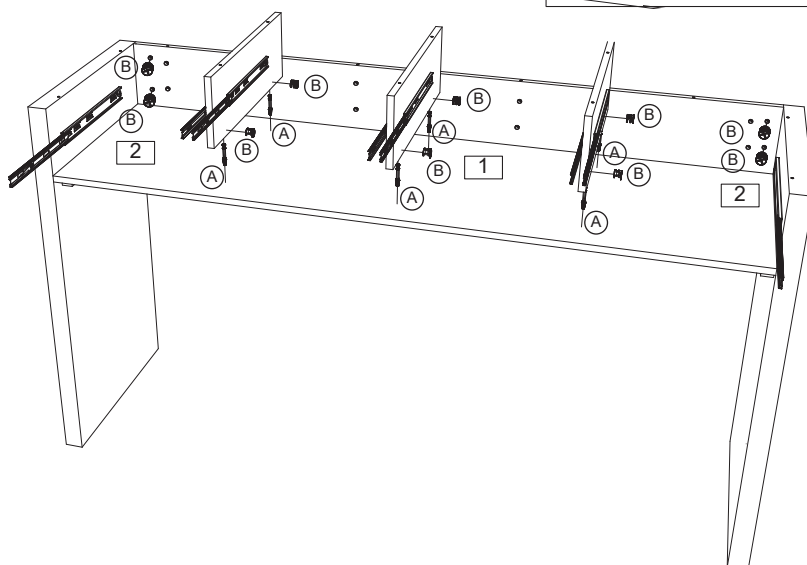



# ASSEMBLY INSTRUCTION

## ITEM:WF316903

### Step 9

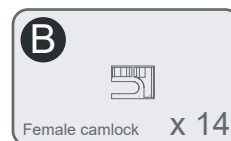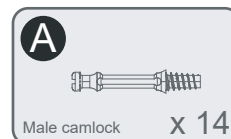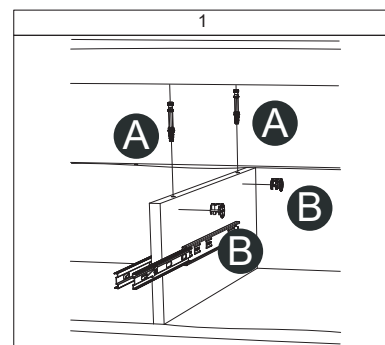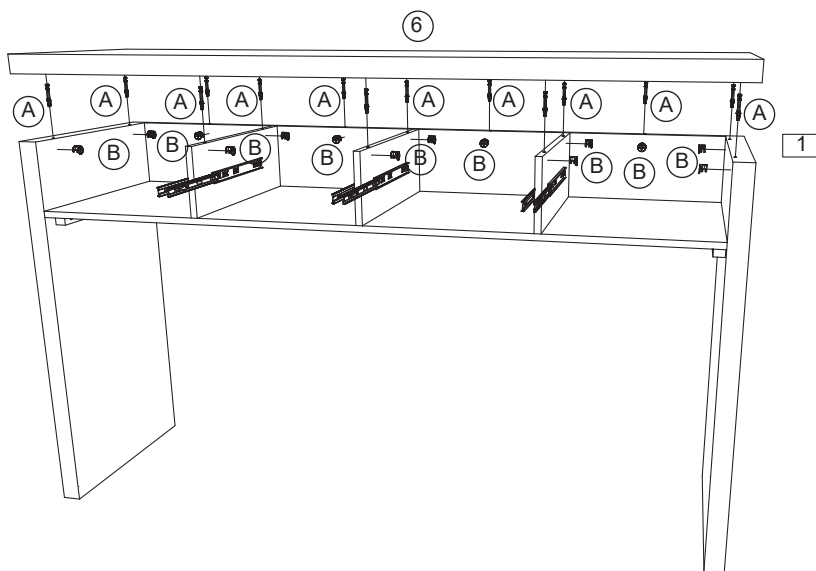




### Step 10

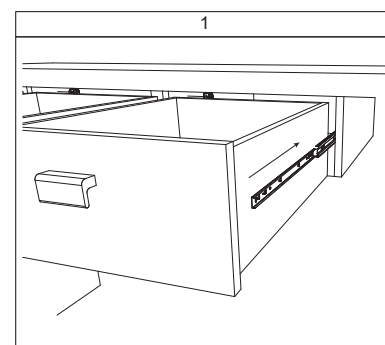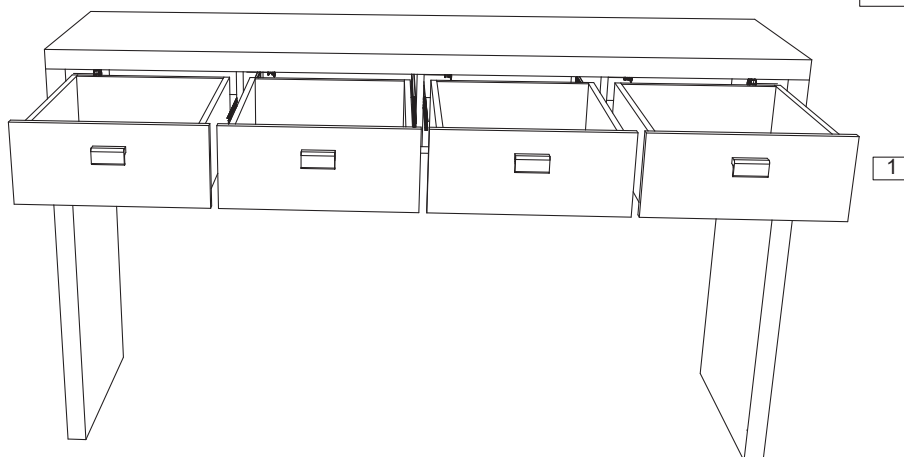

# ASSEMBLY INSTRUCTION

## ITEM:WF316903

### Step 11

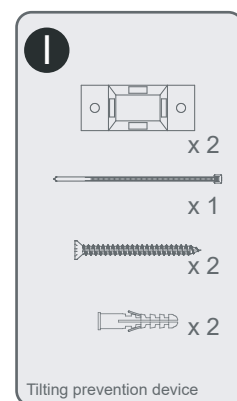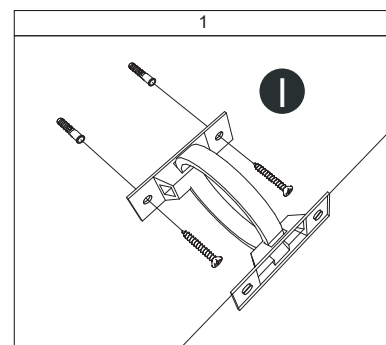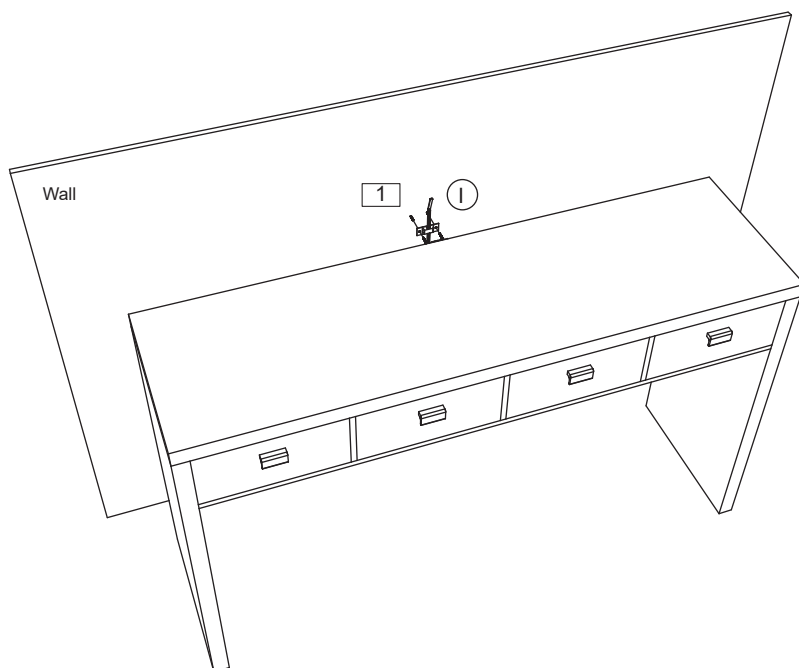

### Complete

