



# ZIPPITY

*Easy Does It!*

## BASKENRIDGE VINYL FENCE KIT 2-PACK (42"W X 36"H)

## ASSEMBLY INSTRUCTIONS ZP19037

**60 MIN**

*Approximate assembly time*

Want to see a video on how to  
assemble this product?

**Scan the QR code**



## GENERAL INFORMATION



### IMPORTANT

- Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

## MISSING OR DAMAGED PARTS?

### VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 [parts.nychbrands.com](http://parts.nychbrands.com)

 [support@zippity-outdoor.com](mailto:support@zippity-outdoor.com)

 **704-892-5222 / 877-234-6196**

*Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.*

To help you quickly and accurately, please have reference item number **ZP19037** and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number inside the box.


## NEED ASSEMBLY HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6196.**


## NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

## Detailed Product Dimensions & Specifications

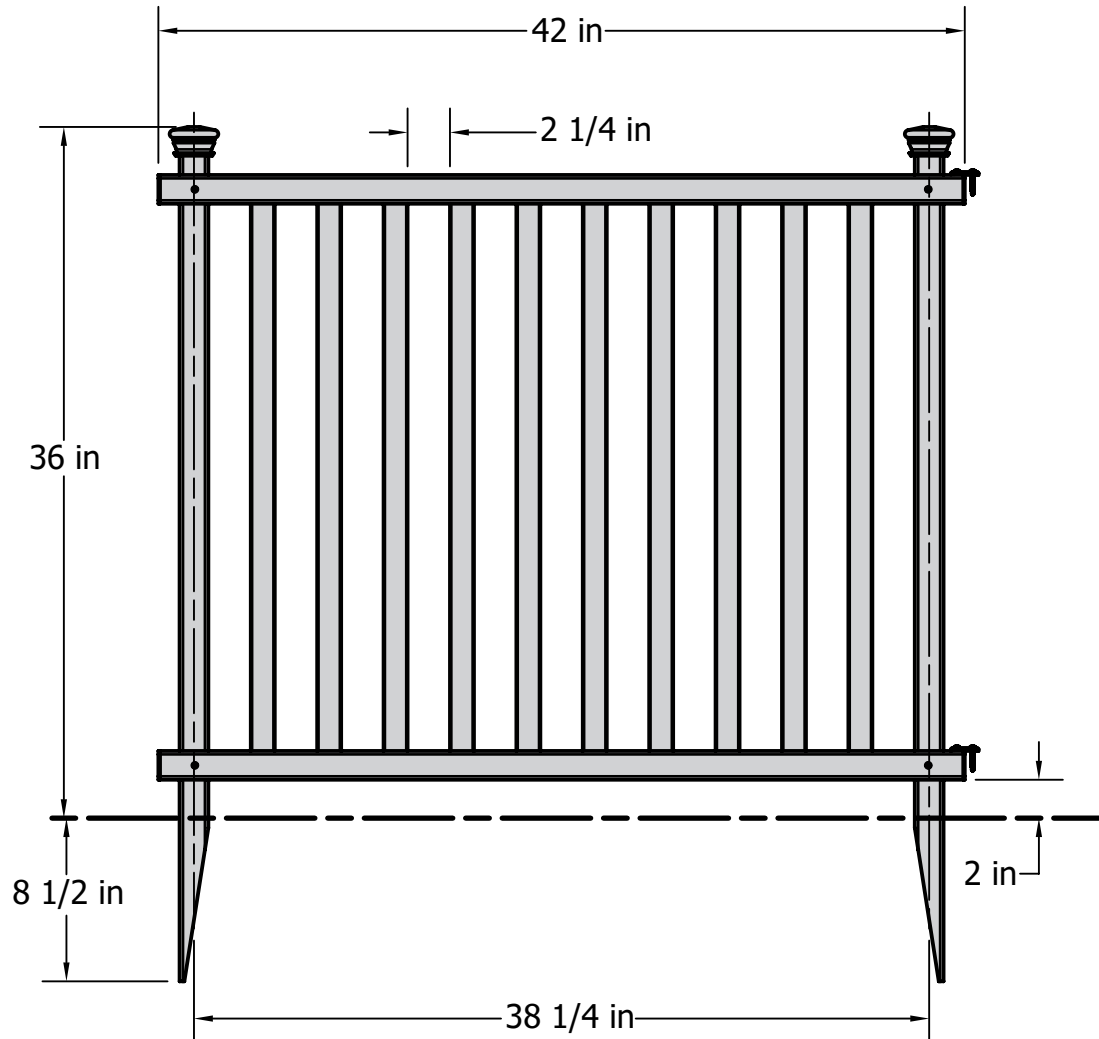


## STEP 1: LAY OUT MATERIALS

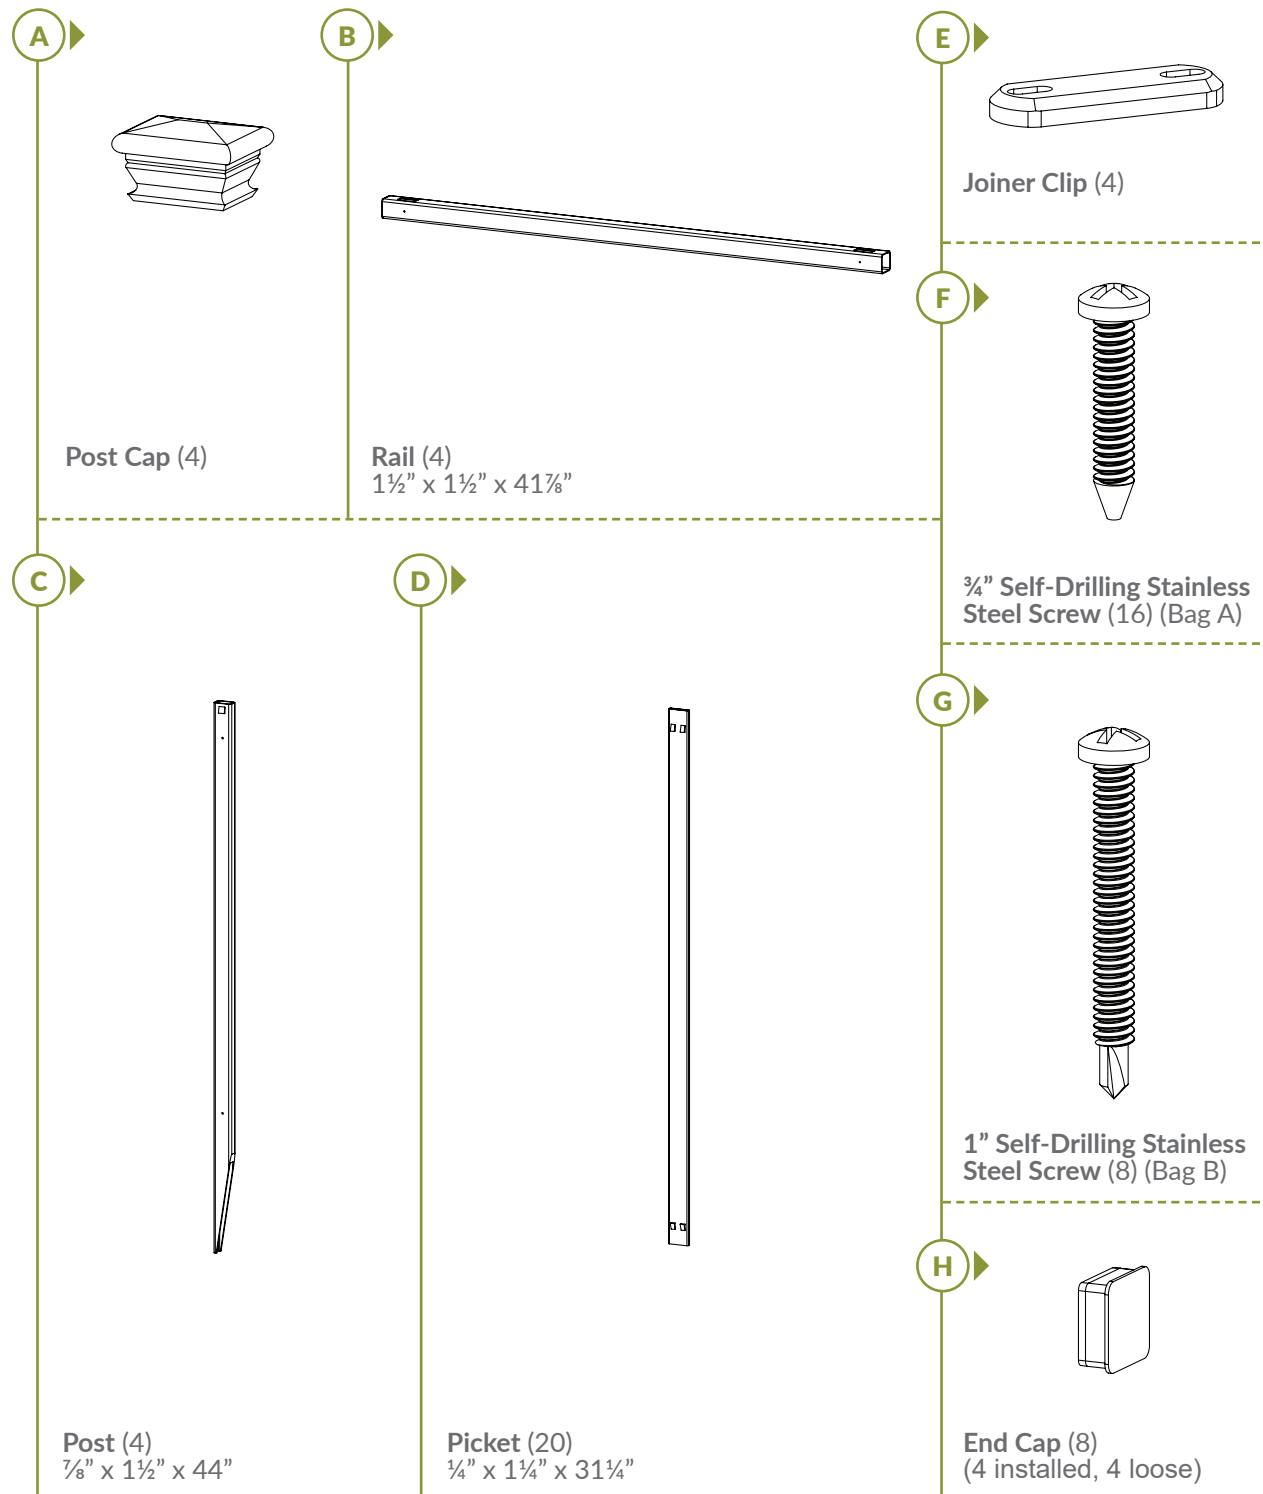

## STEP 2: ASSEMBLE FENCE FRAME


### STEP 2.1 ▶

- ▶ Pressure fit End Caps (H) to the end of the Rails (B). There will be a total of (8) end caps and (4) rails. Four of the end caps will already be installed.

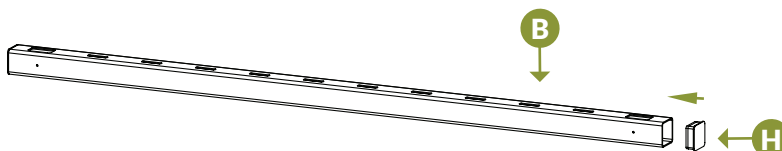


### STEP 2.2 ▶

- ▶ Slide a rail over the bottom of (2) Posts (C). Align the pre-drilled holes on the rail with the pre-drilled holes on the top of the posts.

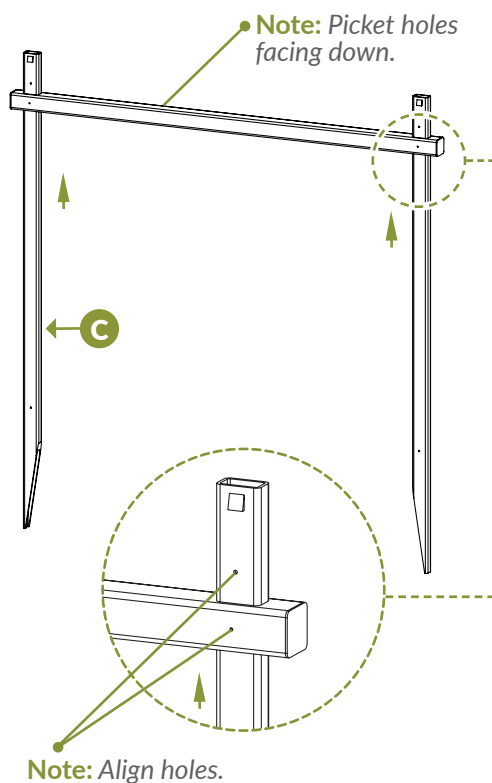

### STEP 2.3 ▶


- ▶ Secure the rail to the posts using (4)  $\frac{3}{4}$ " Self-Drilling Stainless Steel Screws (F).

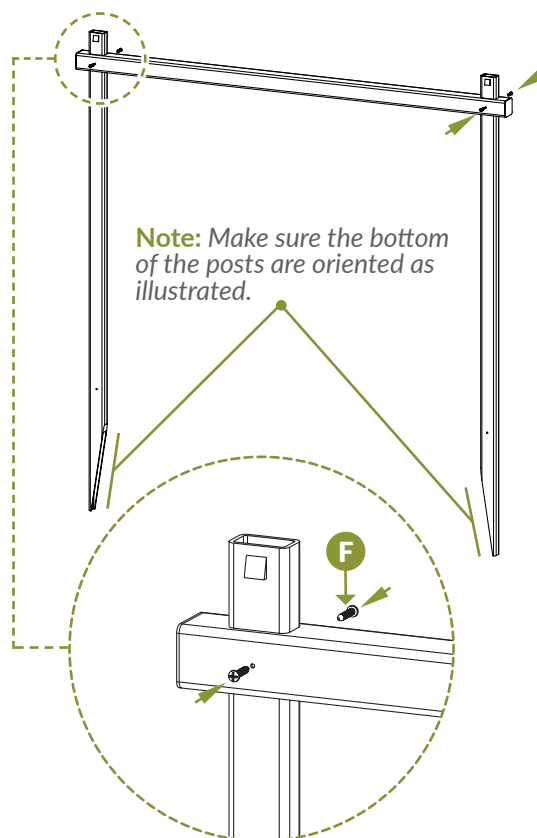

## STEP 3: FINISH ASSEMBLING FENCE PANEL

### STEP 3.1 ▶


- ▶ Insert the Pickets (D) into the routed holes as illustrated.

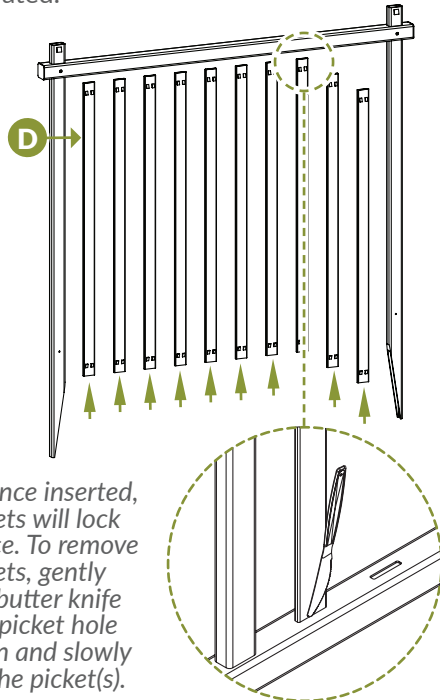

**Note:** Once inserted, the pickets will lock into place. To remove the pickets, gently insert a butter knife into the picket hole as shown and slowly pull up the picket(s).


### STEP 3.2 ▶

- ▶ Slide a rail up the posts until the picket lock into the routed holes in the rail.

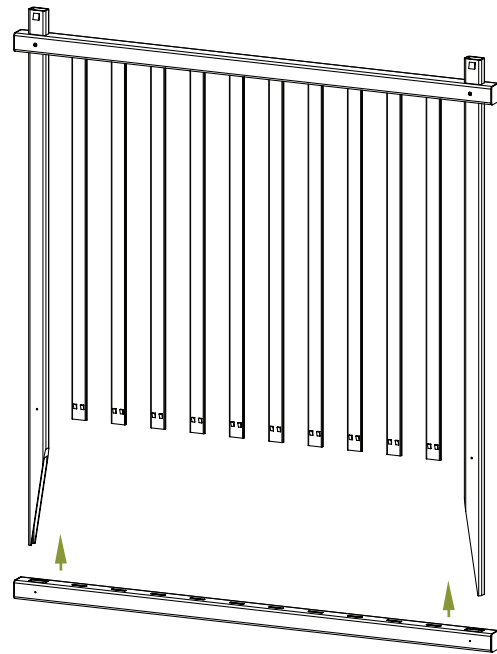

### STEP 3.3 ▶


- ▶ Secure the rail to the posts using (4)  $\frac{3}{4}$ " self-drilling stainless steel screws.

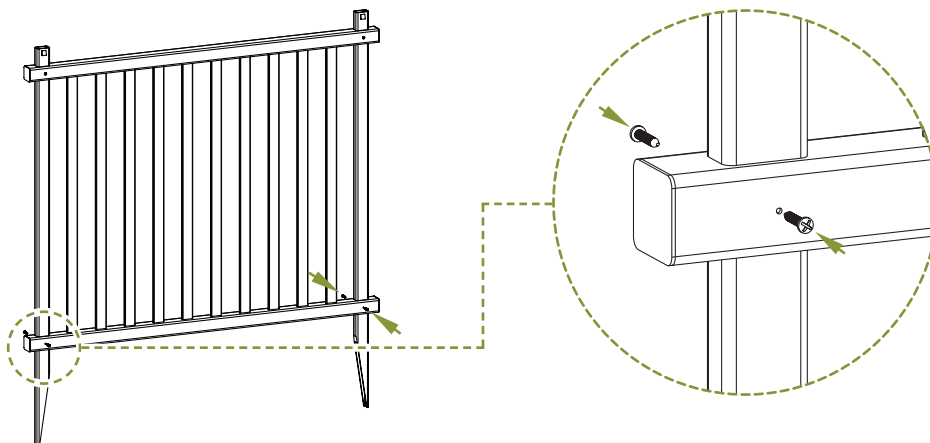

## STEP 4: INSTALL FENCE INTO THE GROUND


### STEP 4.1 ▶

- ▶ Move the fence to where you would like to install it, and mark the location of the posts.

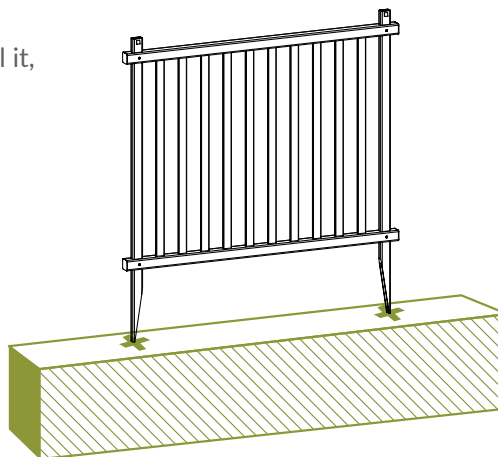


### STEP 4.2 ▶

- ▶ Loosen the top 8" to 10" of the ground using a claw hammer (or something equivalent) as illustrated. Add water to loosen soil.

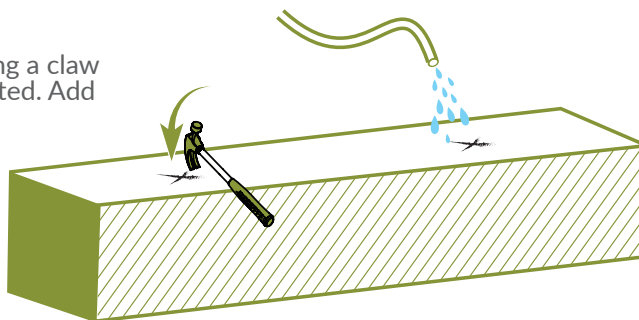

### STEP 4.3 ▶


- ▶ Use a block of wood to protect the top of the posts, and gently hammer each post into the ground equally.

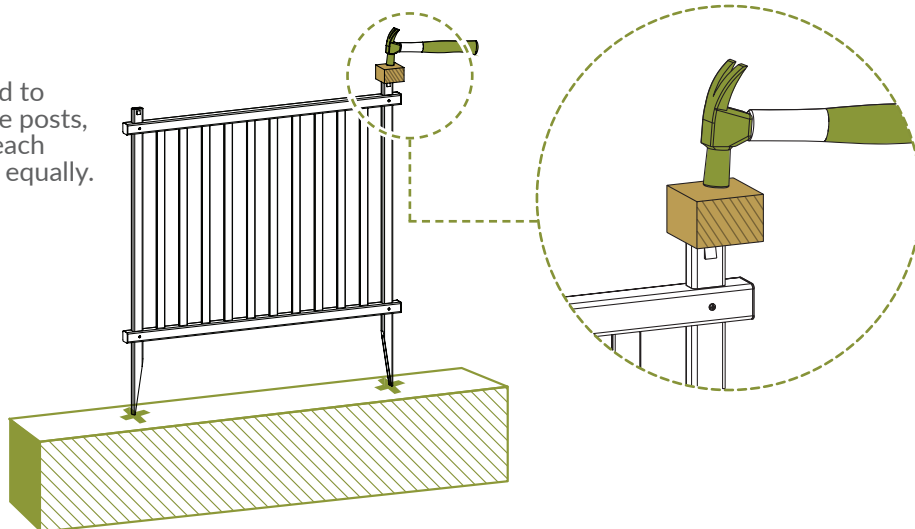


**STEP 4.4** ▶**► Options in hard ground:**

If your ground is too hard, or you have more than three or four panels to install, please consider these options:


- 1** Purchase a 1¼" diameter auger bit (commonly used for planting tulips. \$15 to \$20 on Amazon.com).

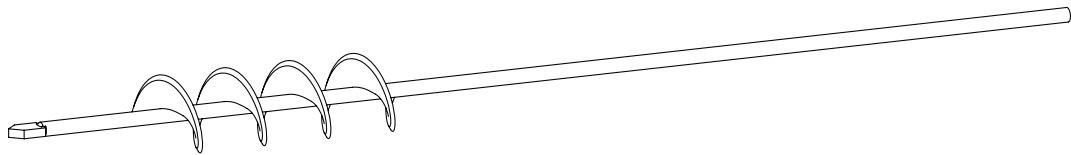


- 2** Drill a hole in the ground at the desired location about 8" to 10" deep.



- 3** Add water to loosen soil.

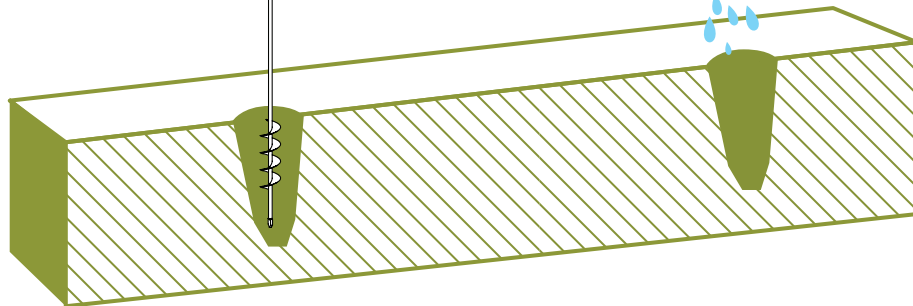


- 4** Push posts into the holes as illustrated.

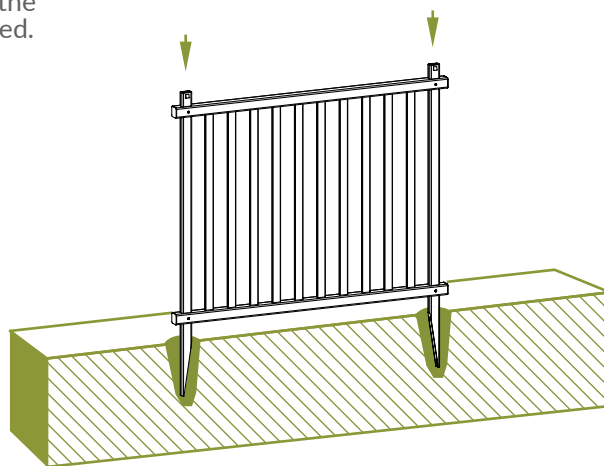




**STEP 4.5** ▶▶


- ▶ Level the assembled unit, backfill, and compact dirt around the base of each post to strengthen the unit.

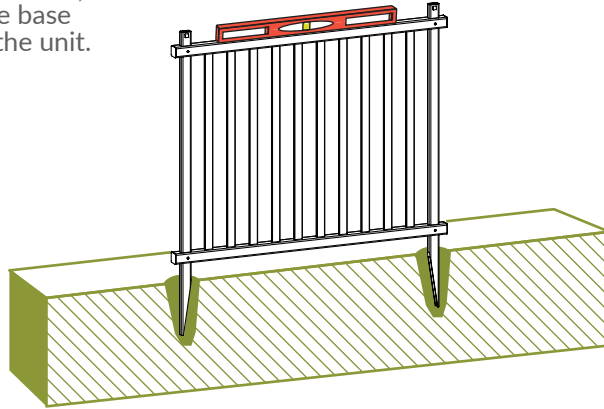**STEP 5: FASTEN JOINER CLIPS****STEP 5.1** ▶▶


- ▶ Fasten Joiner Clips (**E**) by screwing them into place on the top of the rails using (4) 1" Self-Drilling Stainless Steel Screws (**G**).

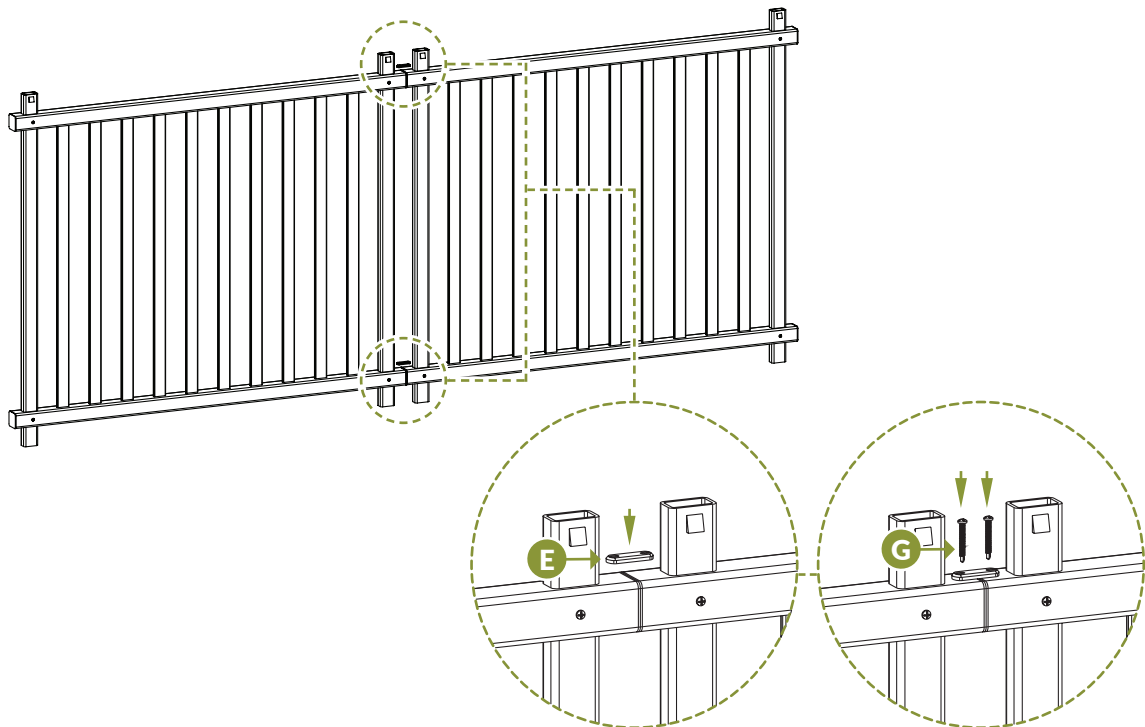

90° Application

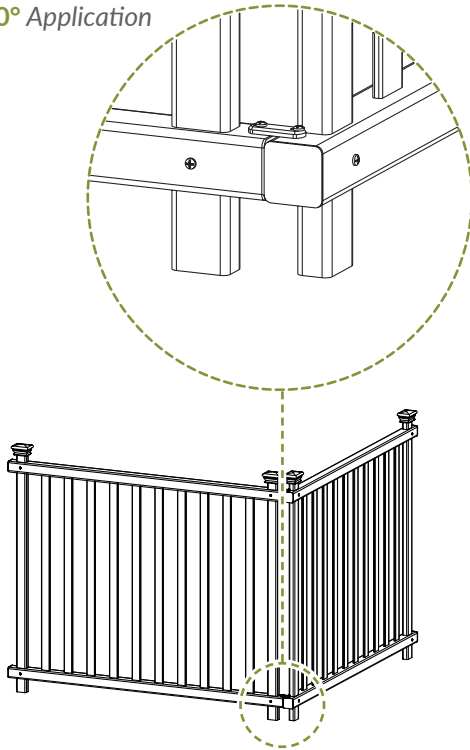


45° Application

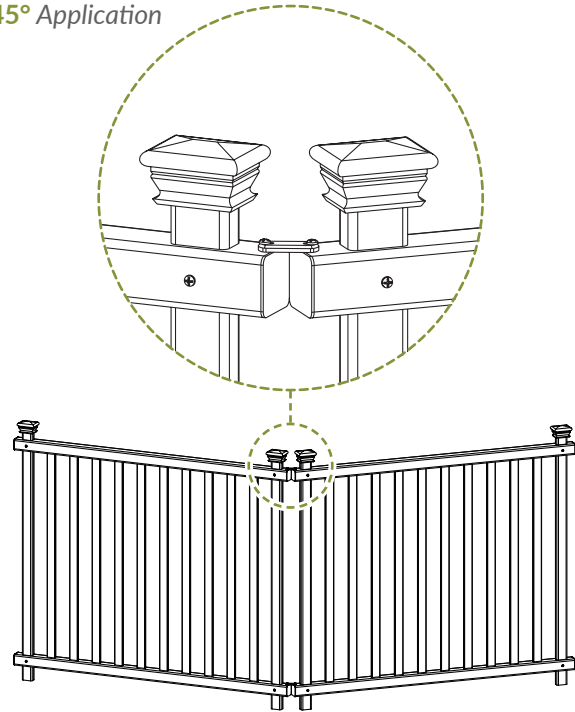

## STEP 6: INSTALL POST CAPS

### STEP 6.1 ▶

▶ Finish the assembly by pushing the Post Caps (A) down over the top of the posts as illustrated. The post caps will lock into place.

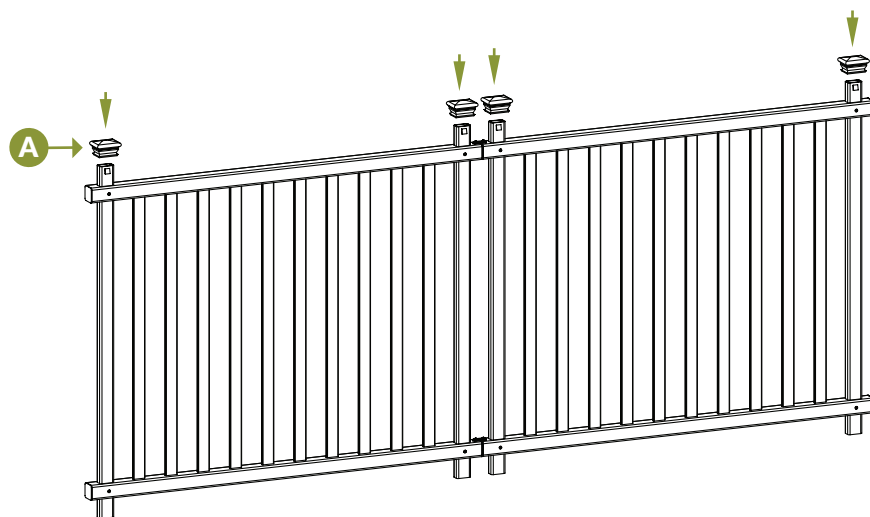





# ZIPPITY

*Easy Does It!*



6935 Reames Rd. Ste. K.  
Charlotte, NC 28216



[support@zippity-outdoor.com](mailto:support@zippity-outdoor.com)

704-892-5222  
877-234-6196



[WWW.ZIPPITY-OUTDOOR.COM](http://WWW.ZIPPITY-OUTDOOR.COM)