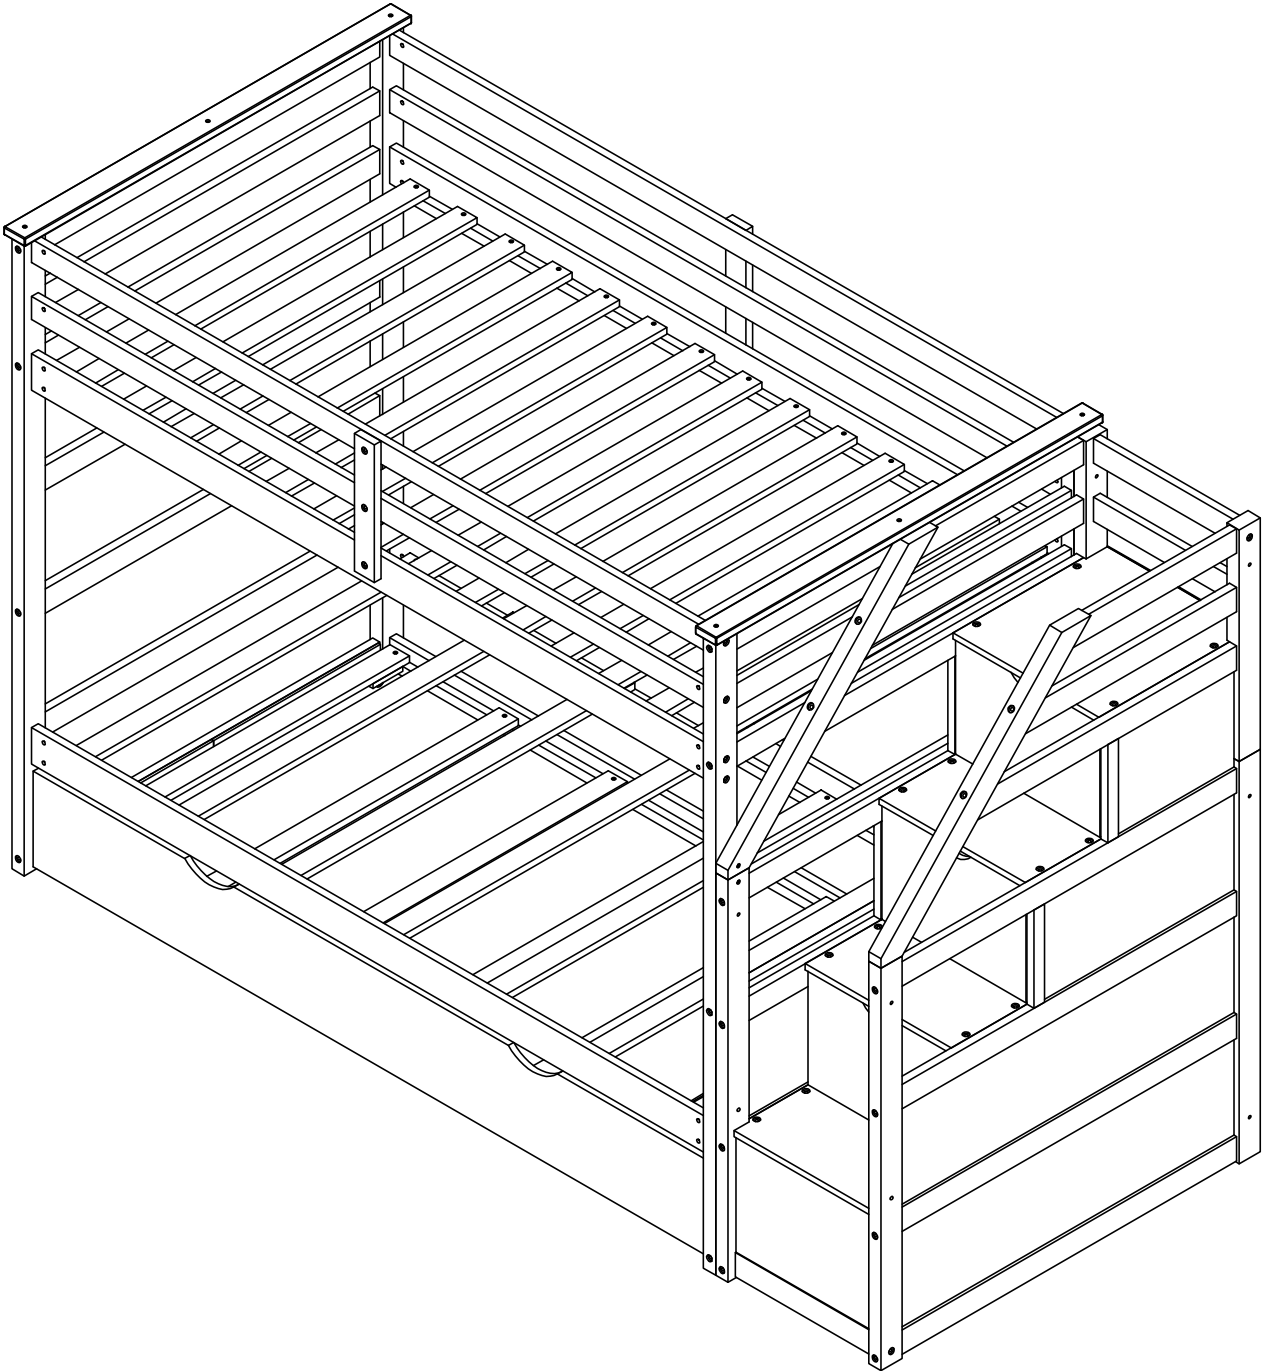


ASSEMBLY INSTRUCTION

SKU CODE: (WF286865-WF286866-WF286867)

This set is included 3 boxes if don't receive full 3 boxes please contact our customer service team



If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net


! SAFETY WARNINGS !

1. This bed is designed for use only mattress(es) meeting the following specifications on the upper bunk, and lower bunk:
















Bed Type	Length	Width	Thickness
<i>Twin Standard</i>	<i>74" - 75"</i>	<i>38 1/2"</i>	<i>8" max</i>

2. Replacement parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY(USA) INC) dealers
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of the mattress must be at least 5" (127 mm) below the upper edge of guardrails.
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed
9. Always use the ladder for entering and leaving the upper bunk.
10. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
11. Use of a night light may provided added safety precaution for a child using the upper bunk.
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited.
14. STRANGULATION HAZARD – Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
15. Keep these instructions for future reference















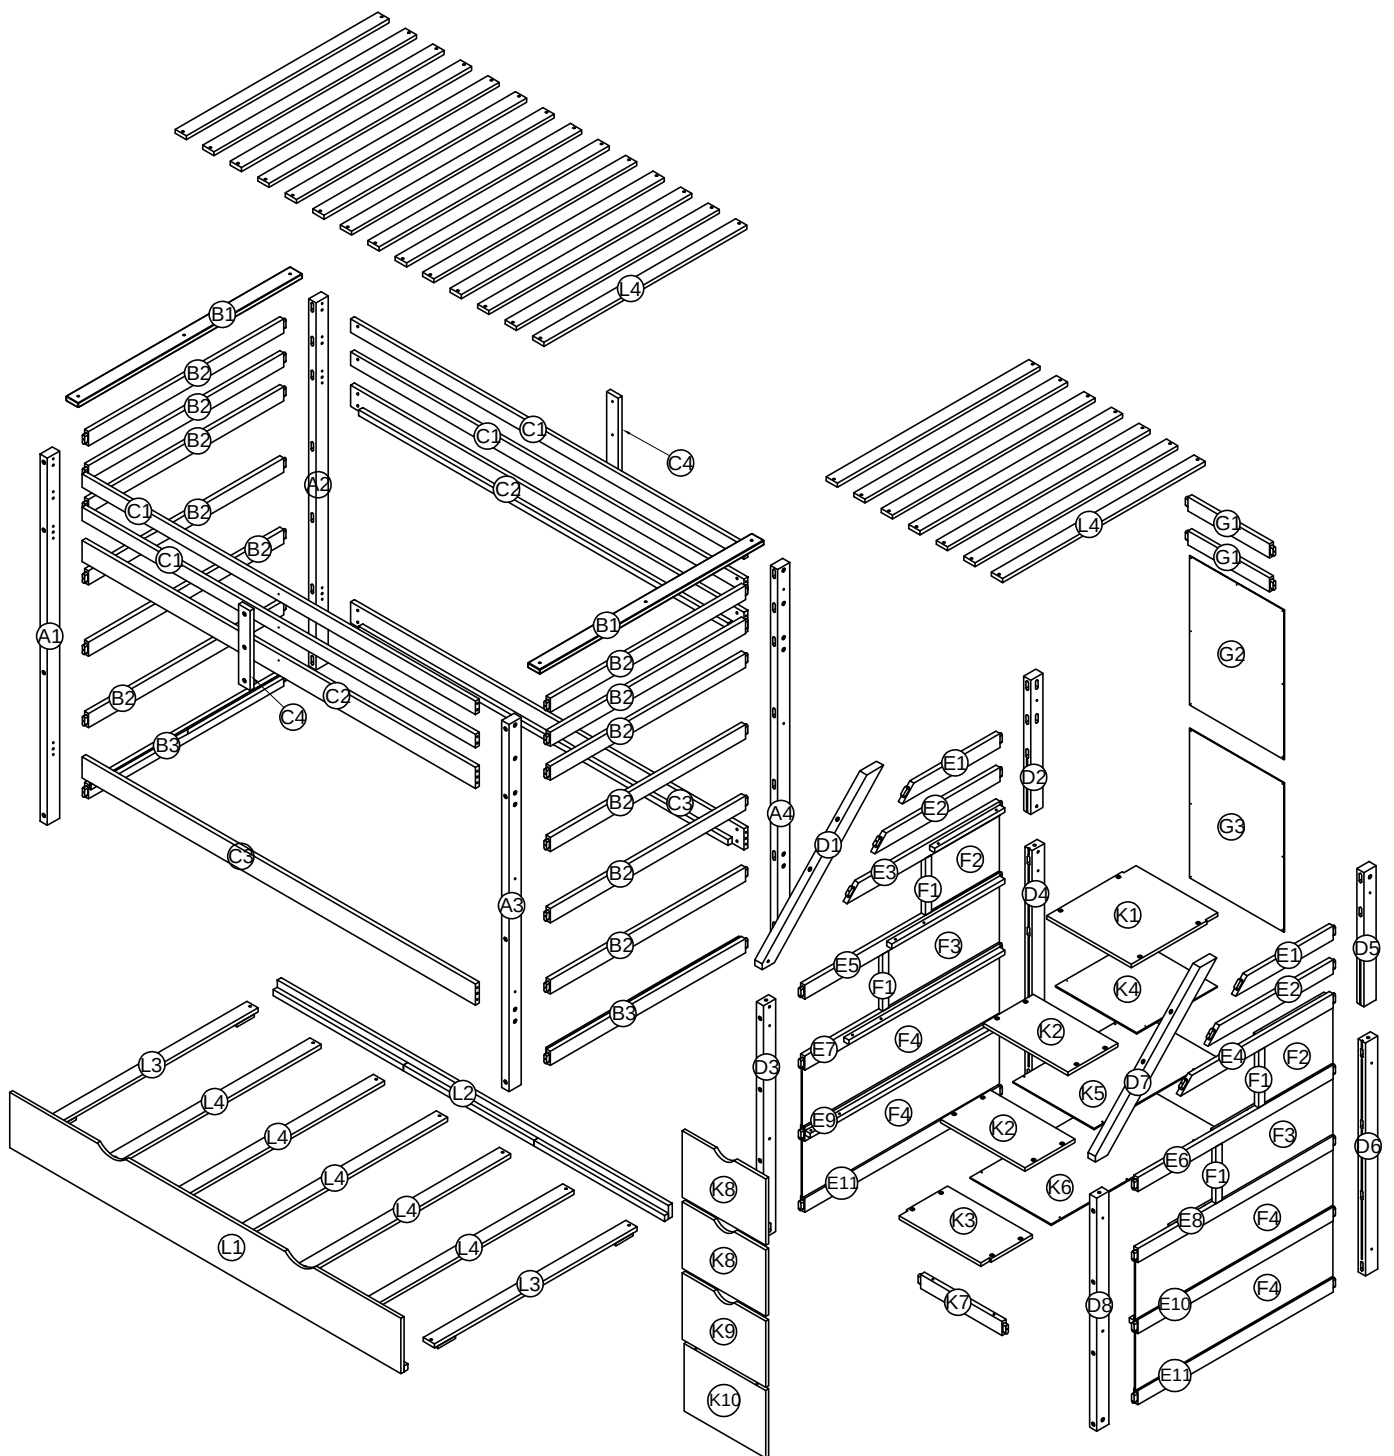
ASSEMBLY INSTRUCTION



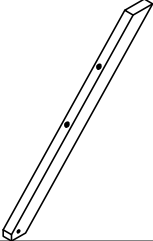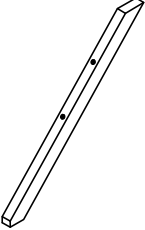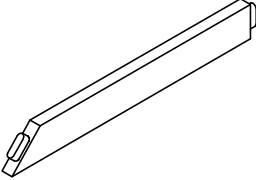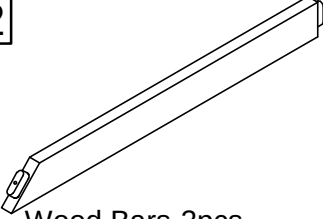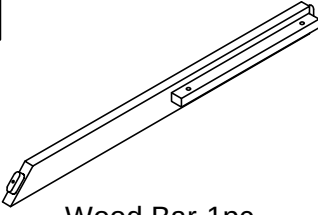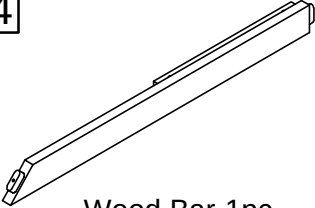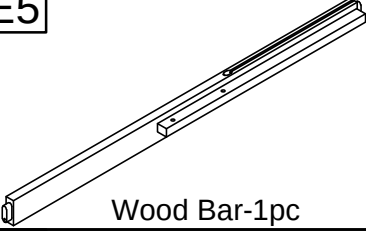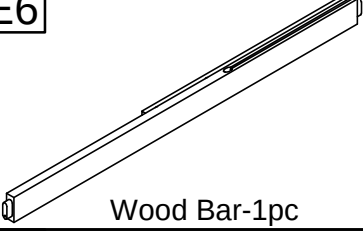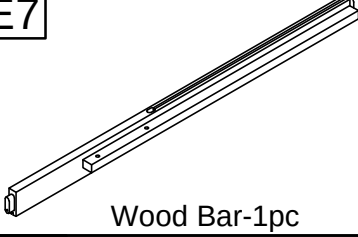
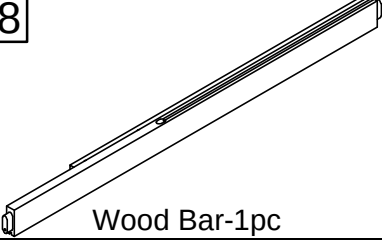
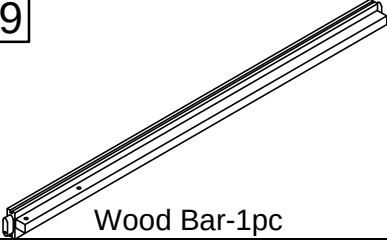
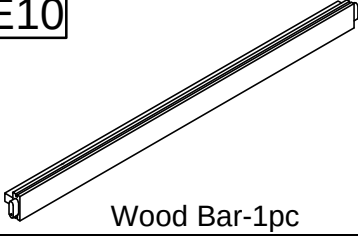
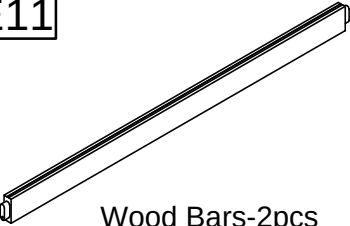
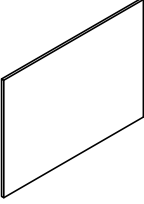
Part List & Hardware List (Box 1-WF286865)

D1  Leg-1pc	D2  Leg-1pc	D3  Leg-1pc
D4  Leg-1pc	D5  Leg-1pc	D6  Leg-1pc
D7  Leg-1pc	D8  Leg-1pc	E1  Wood Bars-2pcs
E2  Wood Bars-2pcs	E3  Wood Bar-1pc	E4  Wood Bar-1pc
E5  Wood Bar-1pc	E6  Wood Bar-1pc	E7  Wood Bar-1pc
E8  Wood Bar-1pc	E9  Wood Bar-1pc	E10  Wood Bar-1pc
E11  Wood Bars-2pcs	F1  Horizontal bar - 4Pcs	F2  Panels-2pcs

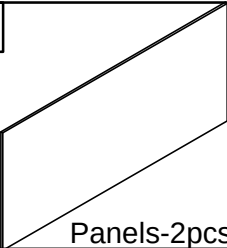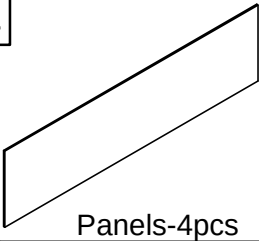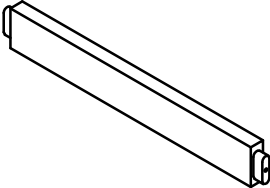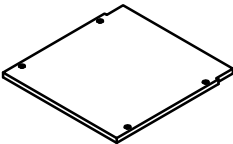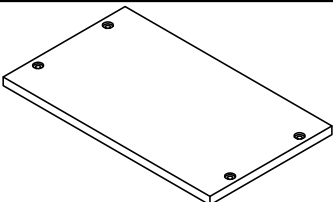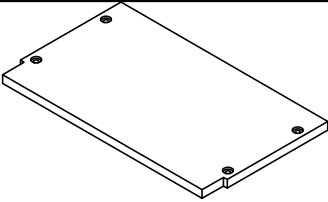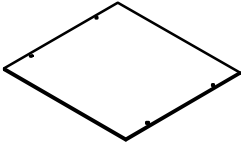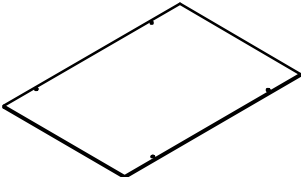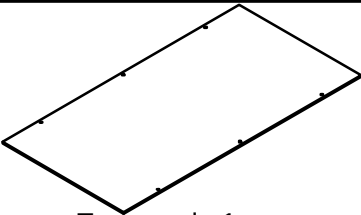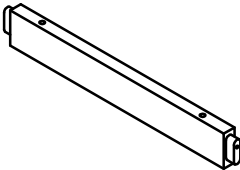
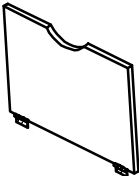
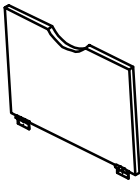
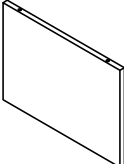
Part List &Hardware List (Box 1-WF286865)

F3  Panels-2pcs	F4  Panels-4pcs	G1  Horizontal bar - 2Pcs
G2  Back panel - 1Pcs	G3  Back panel - 1Pcs	K1  Top panel - 1pc
K2  Top panels - 2pcs	K3  Top panel - 1pc	K4  Top panel - 1pc
K5  Top panel - 1pc	K6  Top panel - 1pc	K7  Horizontal bar - 1Pcs
K8  Front panels-2pcs	K9  Front panel-1pc	K10  Front panel-1pc

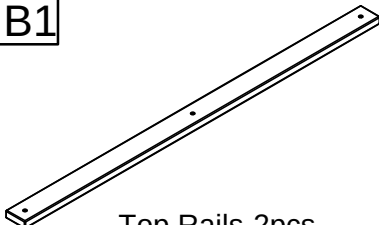
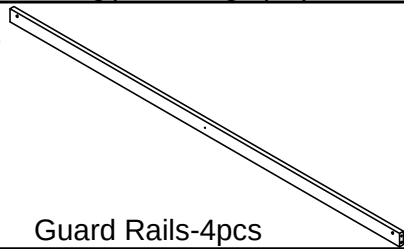
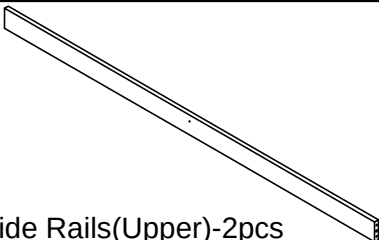
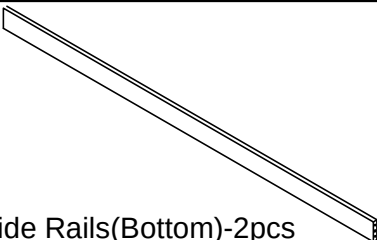
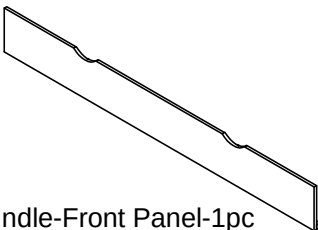
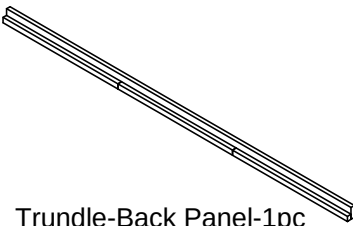
Part List(Box 2-WF286866)


A1  Leg(Front-Left)-1pc	A2  Leg(Back-Left)-1pc	A3  Leg(Front-Right)-1pc
A4  Leg(Back-Right)-1pc	B1  Top Rails-2pcs	C1  Guard Rails-4pcs
C2  Side Rails(Upper)-2pcs	C3  Side Rails(Bottom)-2pcs	C4  Support Side Rails-2pcs
L1  Trundle-Front Panel-1pc	L2  Trundle-Back Panel-1pc	

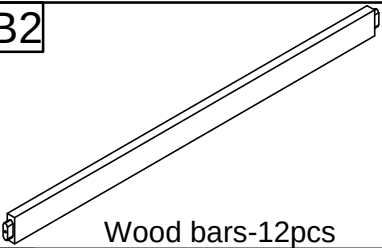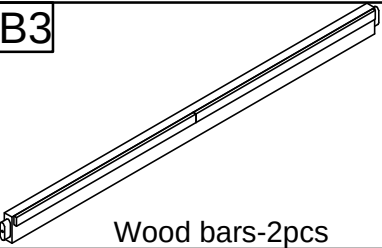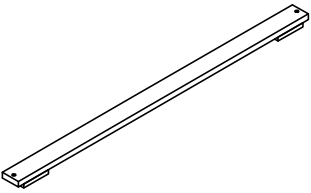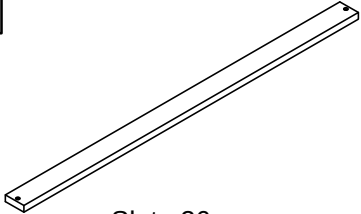Part List(Box 3-WF286867)

B2 A long, thin, rectangular wooden bar with a slightly tapered end. Wood bars-12pcs	B3 A long, thin, rectangular wooden bar with a slightly tapered end. Wood bars-2pcs	L3 A long, thin, rectangular wooden slat with a slightly tapered end. Slats-2pcs
L4 A long, thin, rectangular wooden slat with a slightly tapered end. Slats-26pcs		

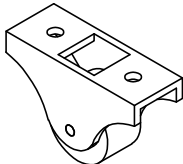Hardware List(Box 1-WF286865)



1	 Screws 1/4" x80 42pcs	2	 M4 x 30 mm Wood Screws 70pcs	3	 Ø10 x 40 mm Wood dowel 16pcs
4	 Ø1/4" x 13 mm Horizontal-Hole bolts 24pcs	5	 Ø1/4" x 80 mm Hex-Head bolts 24pcs	6	 Ø1/4" x 15 mm Canopy head though -6cs
7	 Allen Key 1pc	8	 Ø12 x 70 mm Wood dowel 4pcs	9	 Screws 1/4" x60 4pcs
10	 Door Catches(45x17x13) 6pcs	11	 Screw M4 x 15 mm 12pcs	12	 Screw M3 x 12 mm 18pcs
13	 Ø8 x 30 mm Wood dowel 4pcs	14	 Ø1/4" x 30 mm Hex-Head bolts 16pcs	15	 M4 x 15 mm Wood Screws 34pcs
16	 Pan Head Screw M3 x 15 mm 13pcs	17	 Ø1/4" x 45 mm Hex-Head bolts 5pcs	18	 Wheels 4pcs
19	 Steel Bracket 3pcs	20	 Ø1/4" x 25 mm Hex-Head bolts 13pcs		



STEP 1: Following below illustration Assembly Headboard:

-1.1:Using hardware #1 Connect B2(x6) Woodbar with A1,A2 Legs

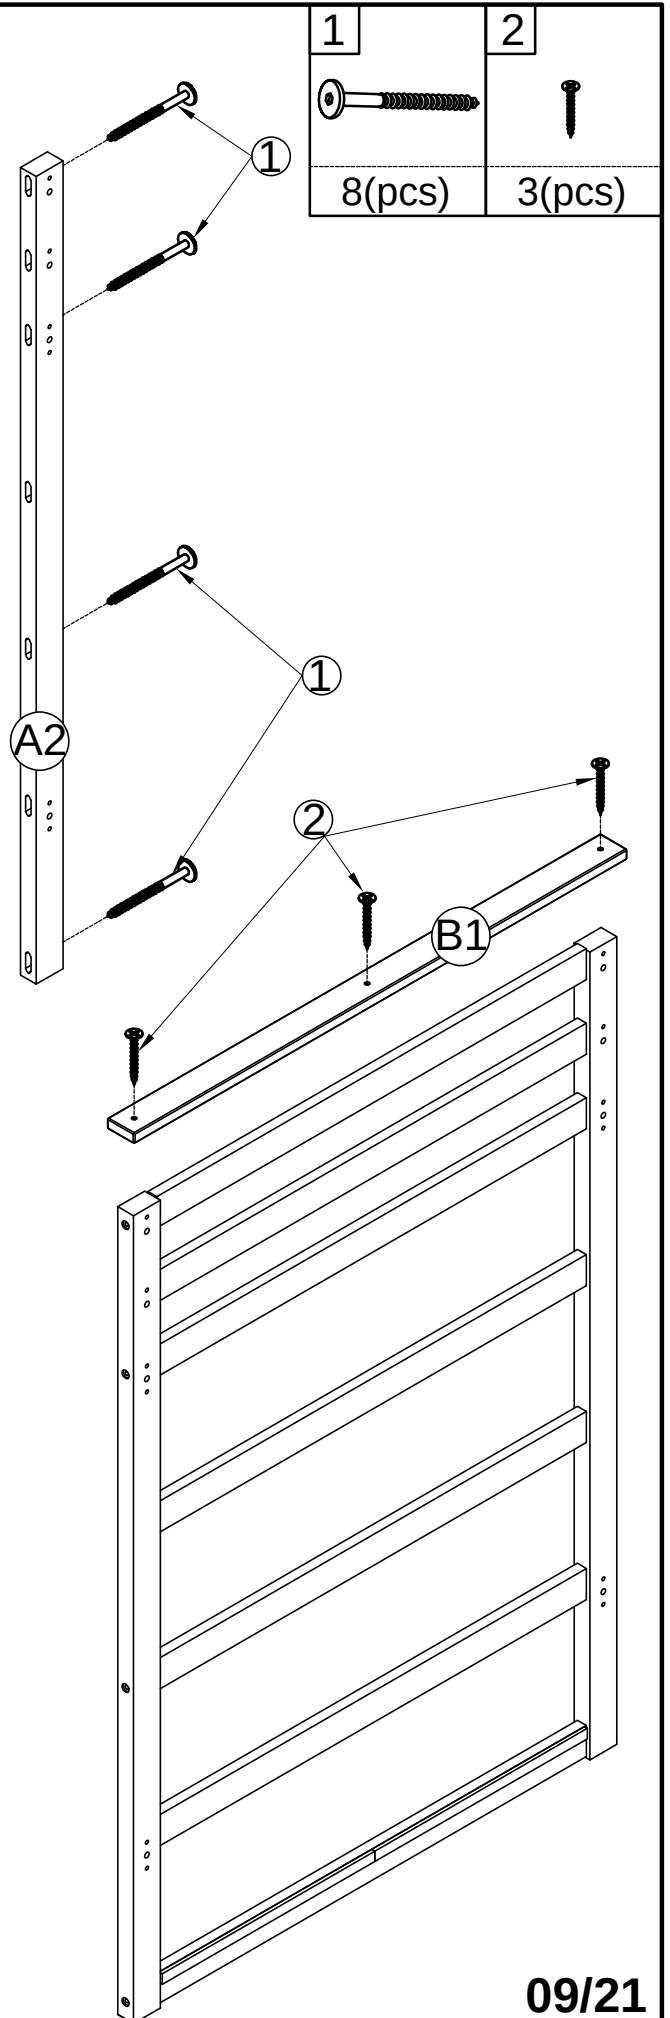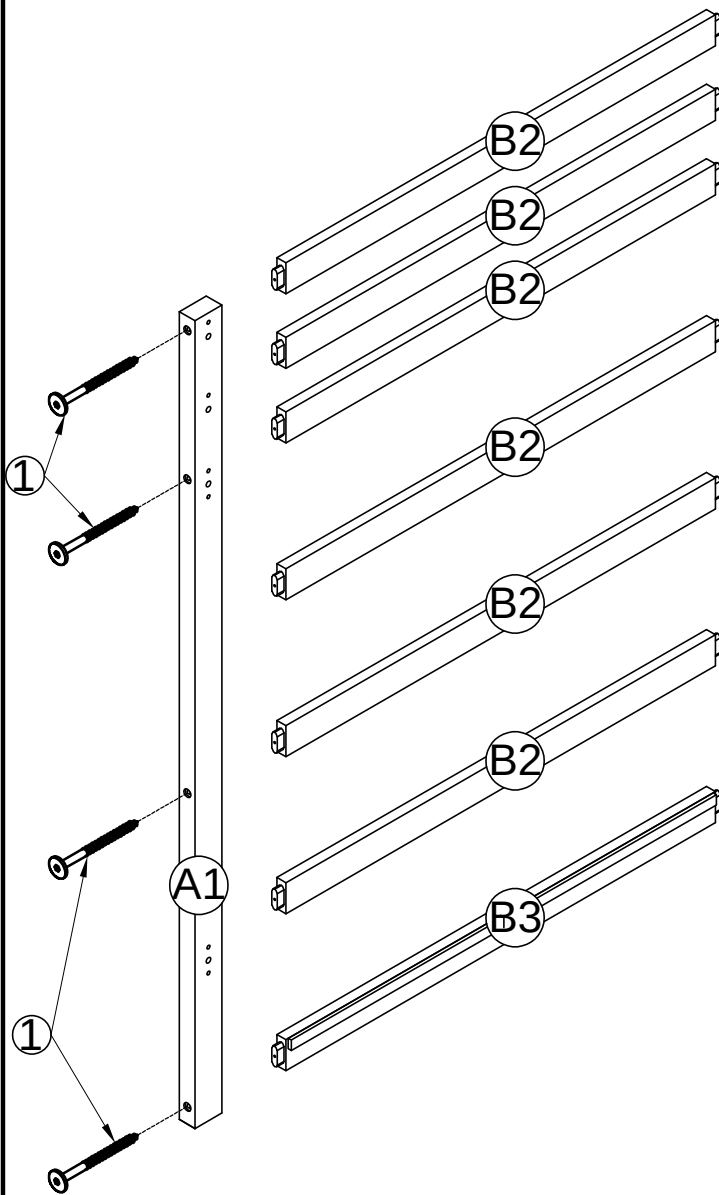-1.2:Using hardware #2 Connect Frame(completed on step 1.1) with B1 Woodbar





1	2
8(pcs)	3(pcs)

STEP 2: Following below illustration Assembly Footboard:


-2.1:Using hardware #1 Connect B2(x6) Woodbar with A3,A4 Legs

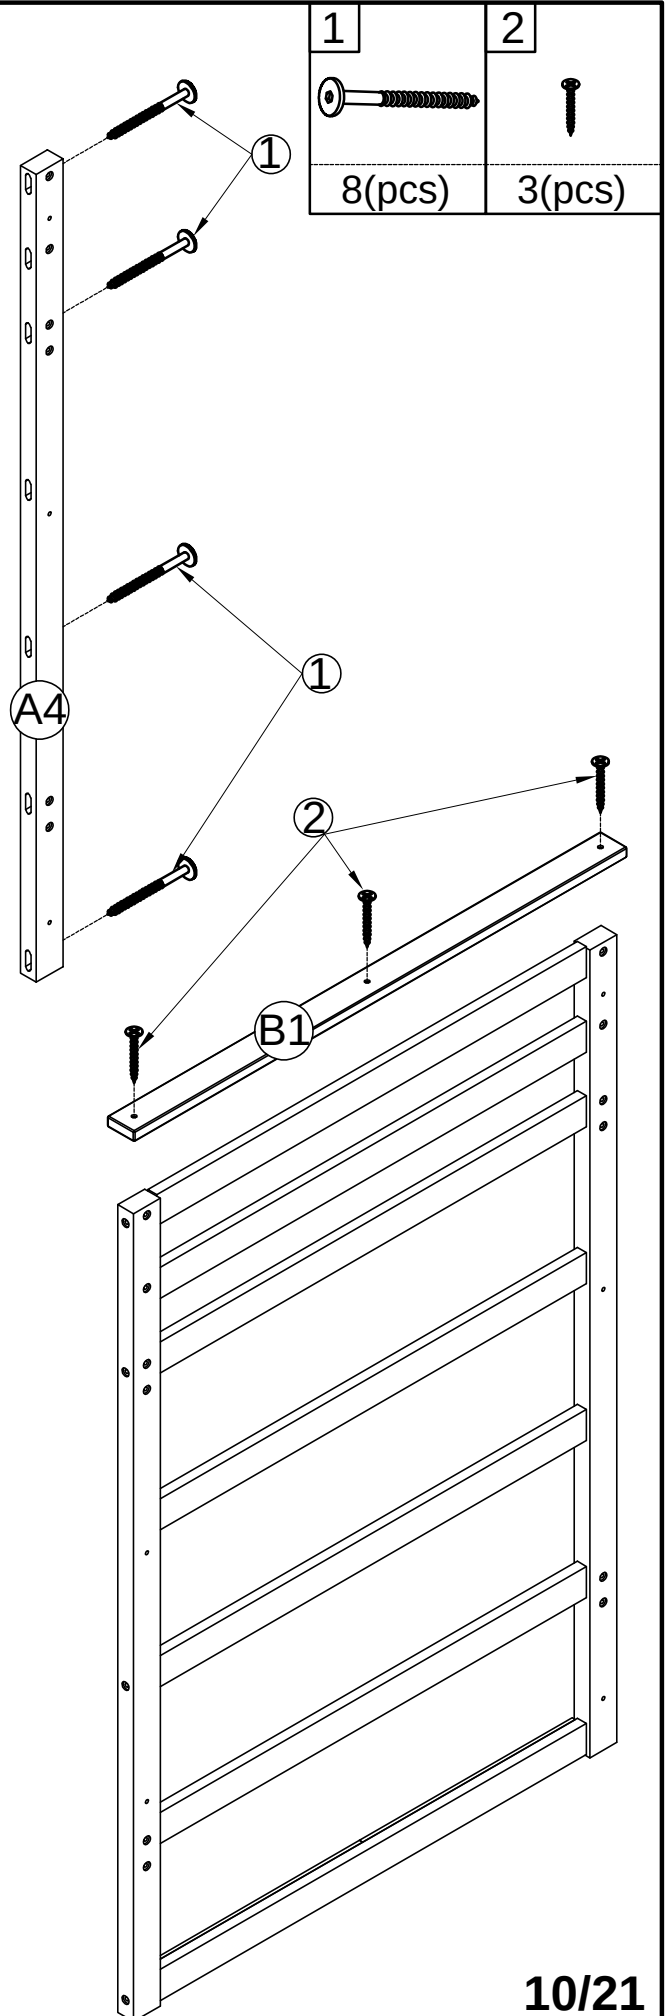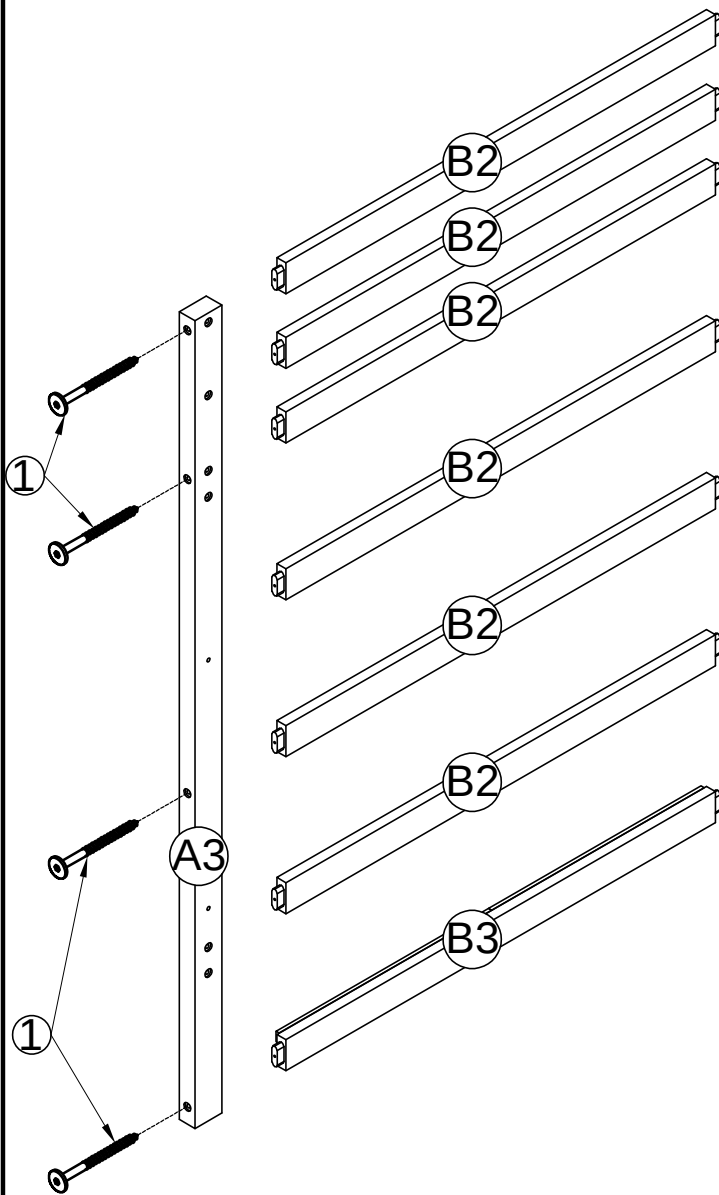
-2.2:Using hardware #2 Connect Frame(completed on step 2.1) with B1 Woodbar



STEP 3: Following below illustration Assembly Footboard:

-Using hardware #4,#5 and Dowel #3 Connect Frame (completed on step1.2,step 2.2)
with Guard Rails C1(x4) and Side Rails C2(x2),C3(x2)


4	5	3
		
24pcs	24pcs	16pcs

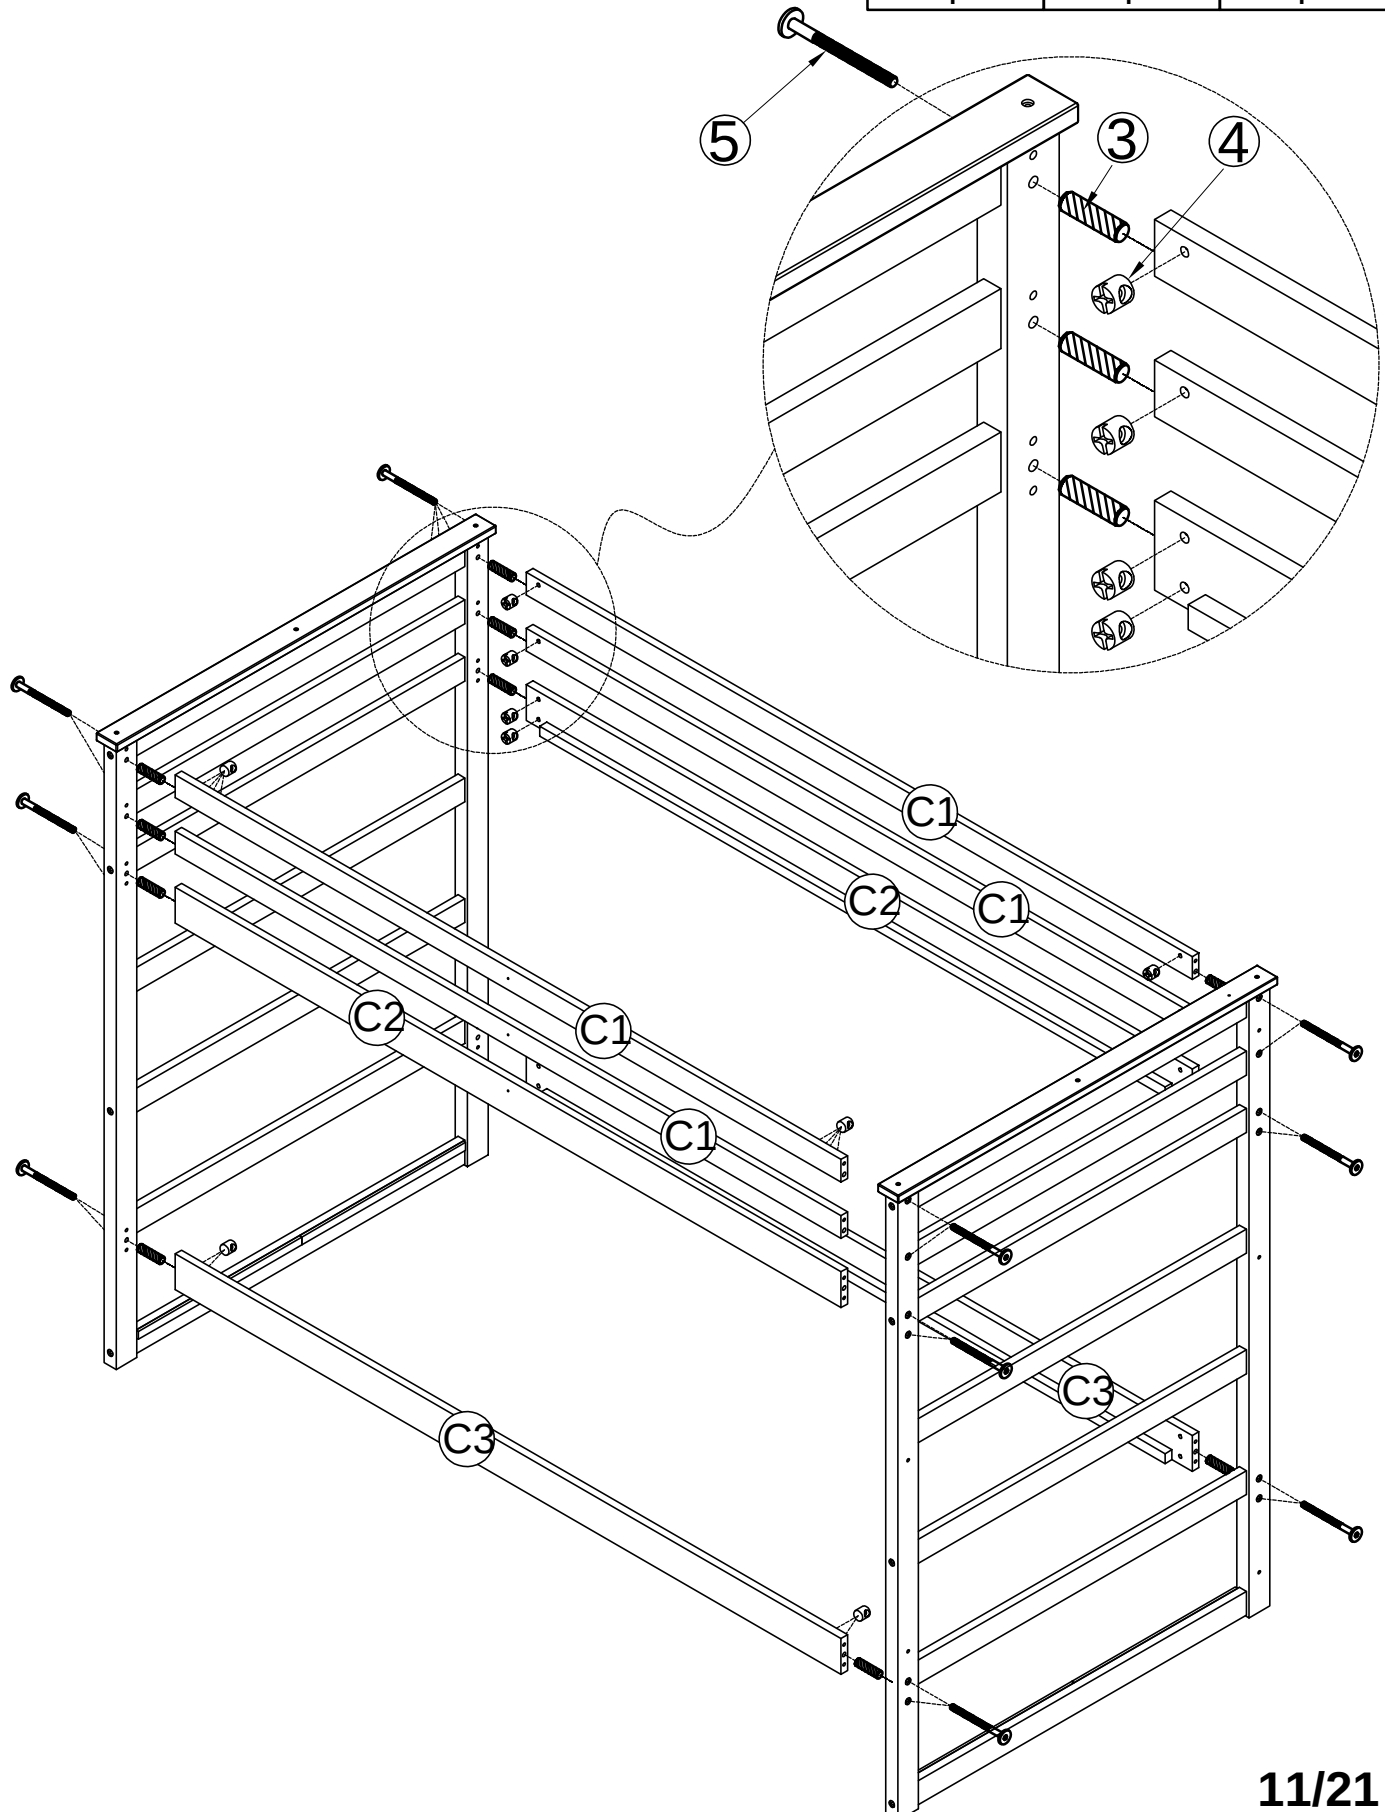

STEP 4: Following below illustration:

- Using hardware #2 to Assembly Slats L4(x21) With Frame (Completed on step 3)
- Using hardware #6,#20 to Assembly Support Side Rails C4(x2) With Frame (Completed on step 3)
- Look at detail view for more detail


20	6	2
		
6(pcs)	6(pcs)	42(pcs)

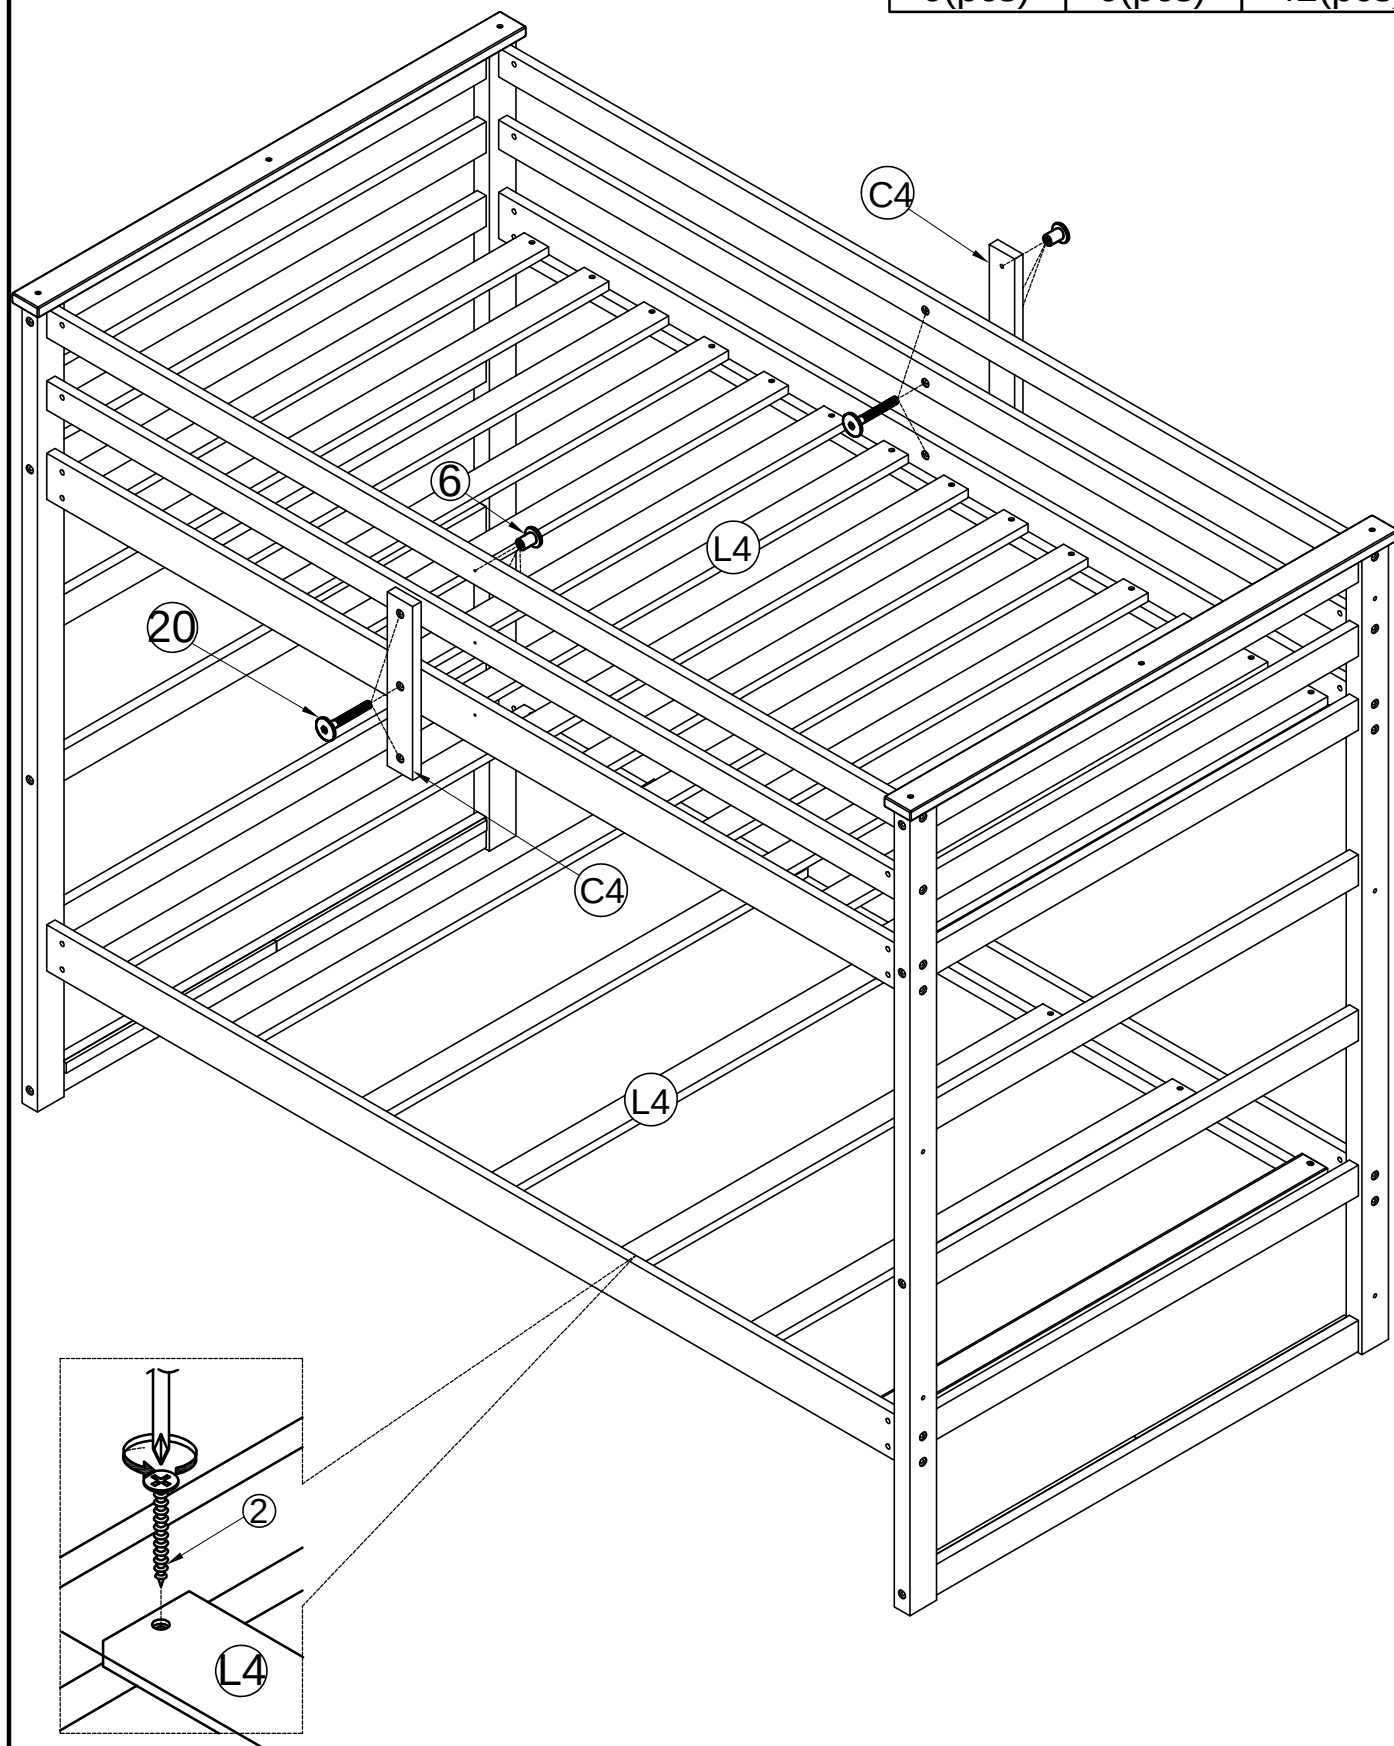


STEP 5:

10 PCS

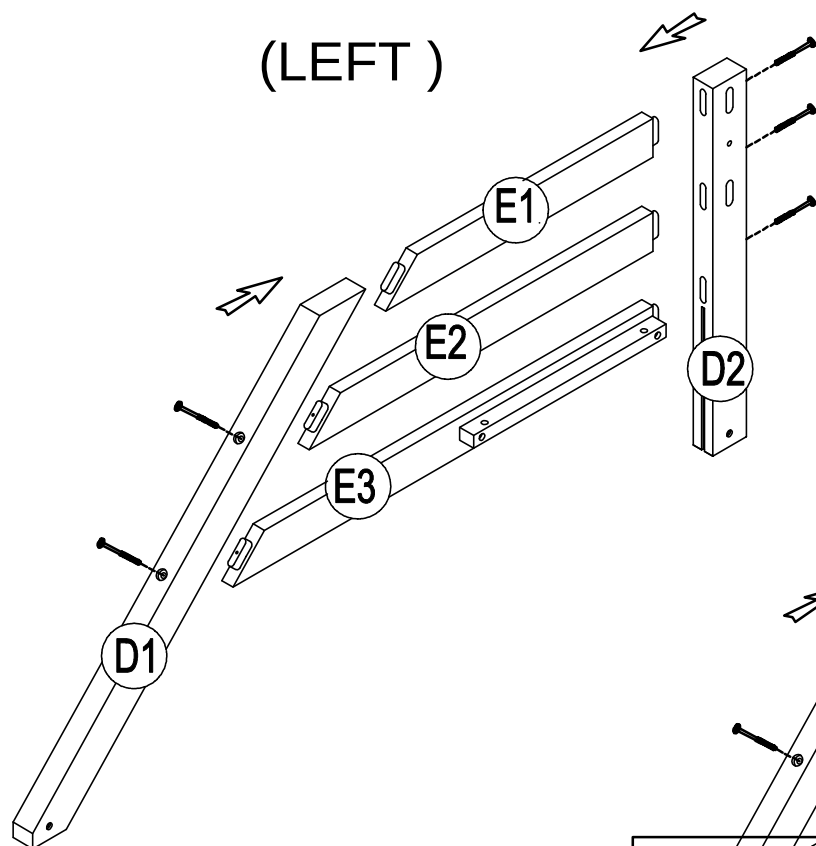(LEFT)




(RIGHT)

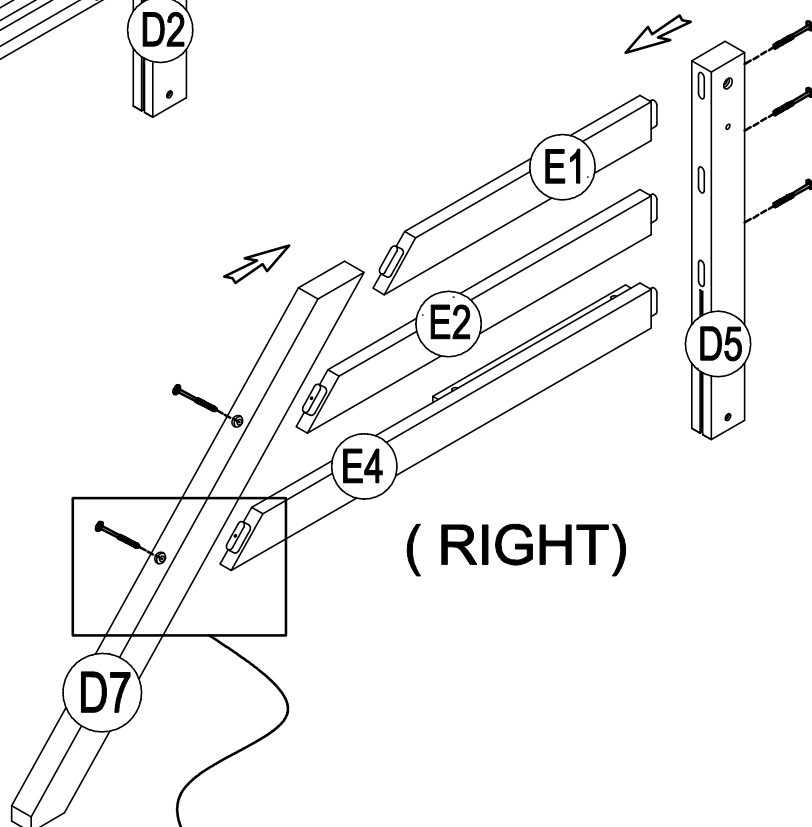

7

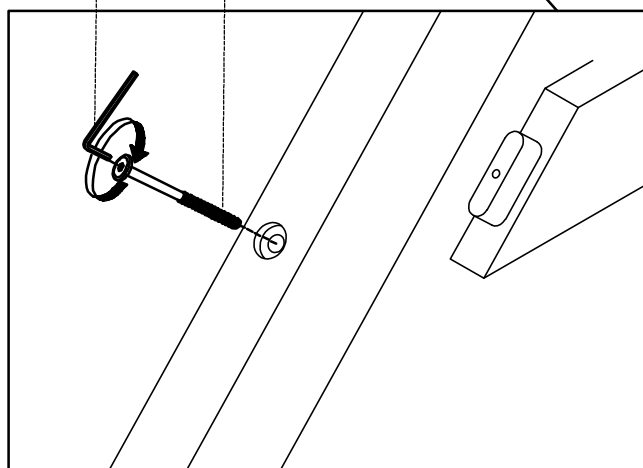
1



STEP 6:

1

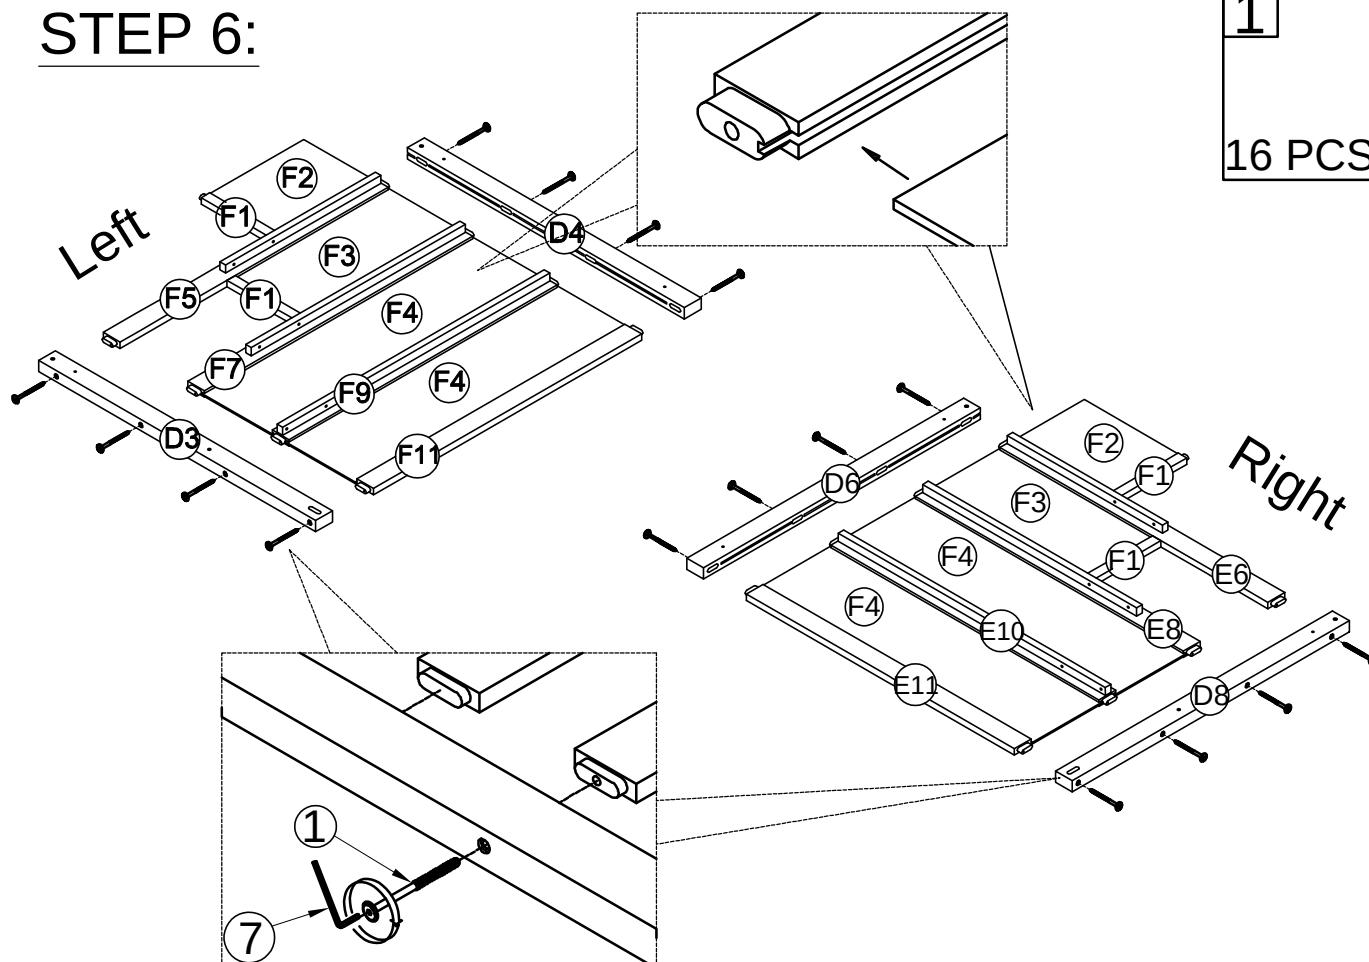16 PCS




STEP 7:

2

8PCS

8

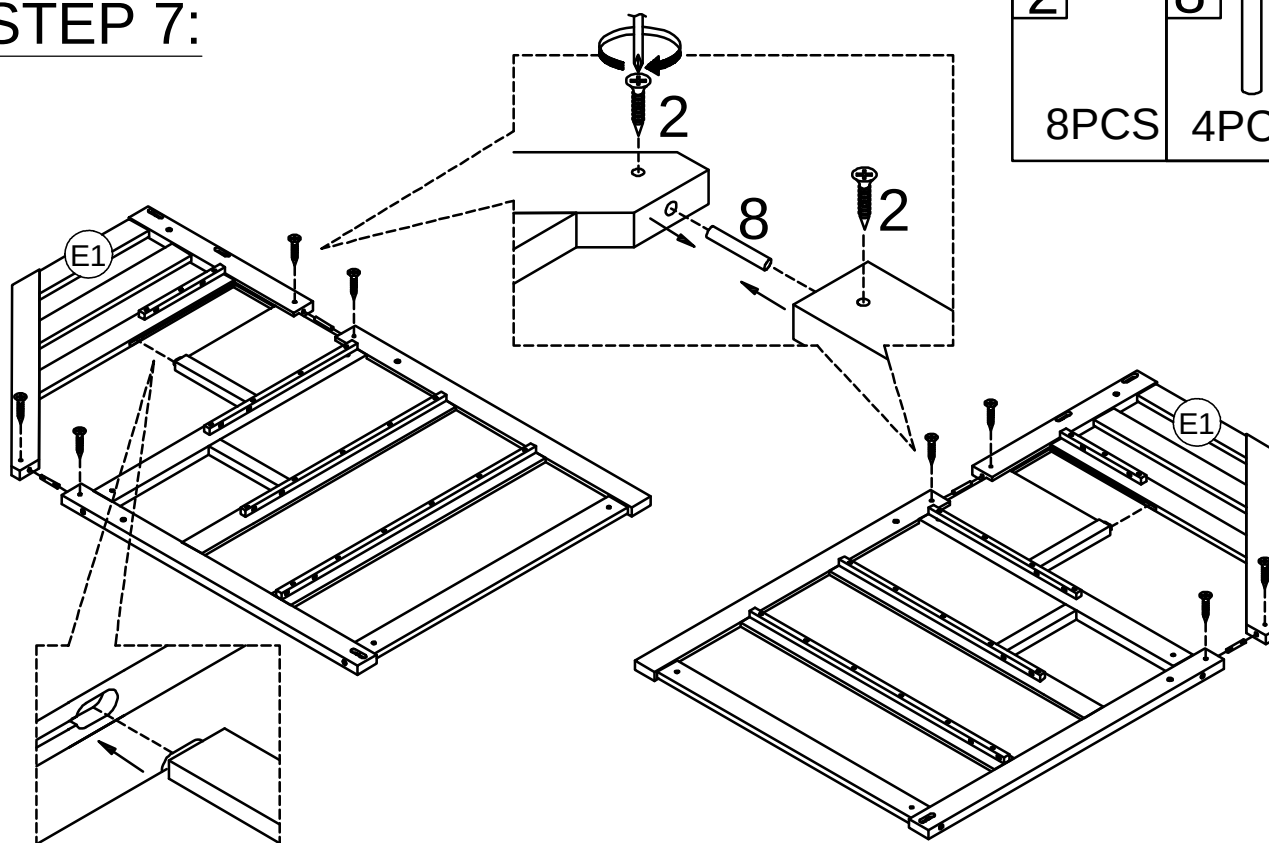
4PCS






STEP 8:

9



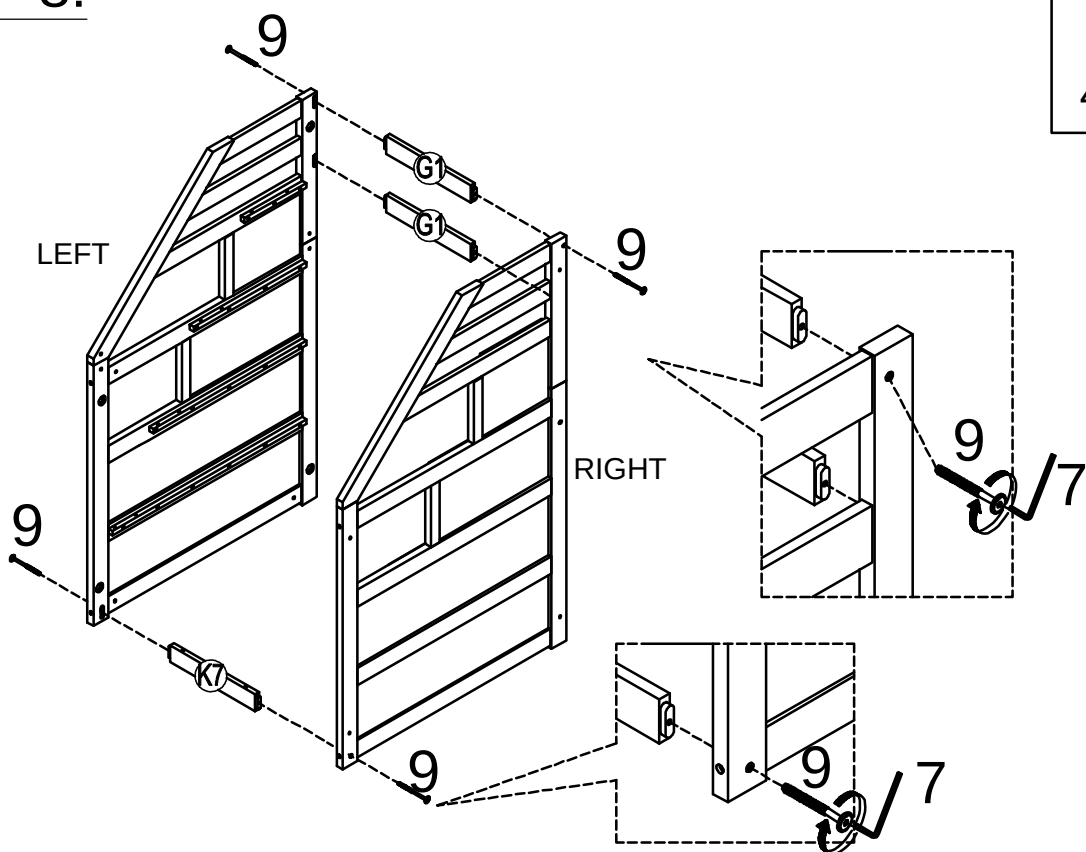
4PCS



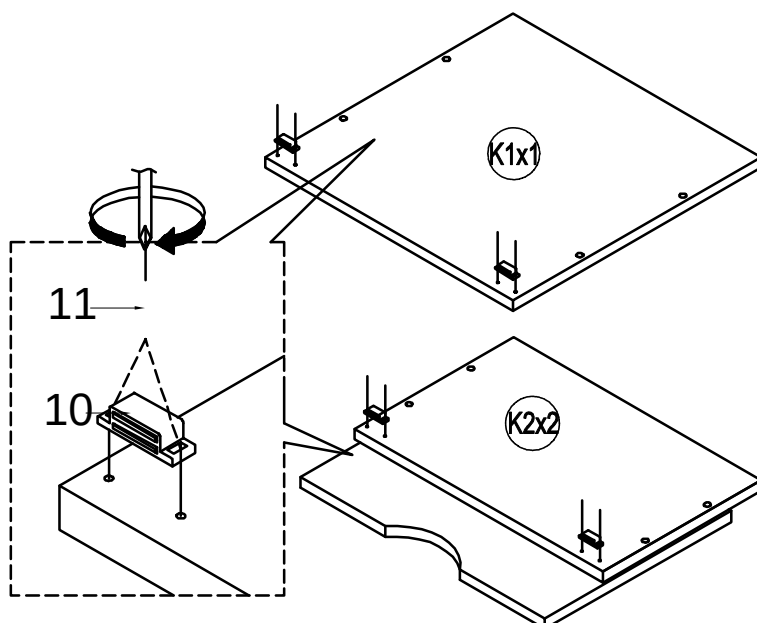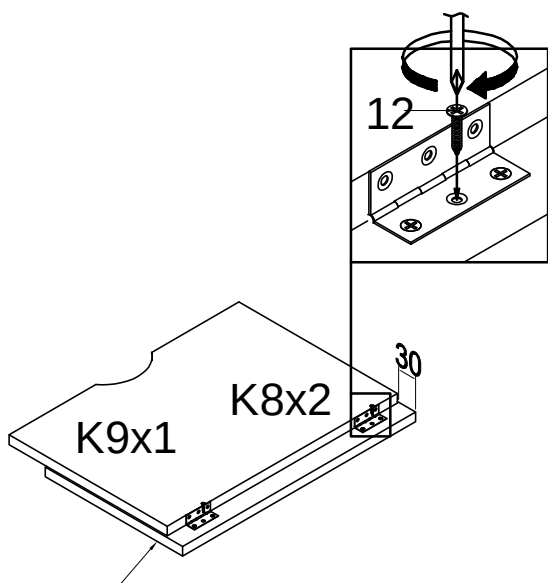
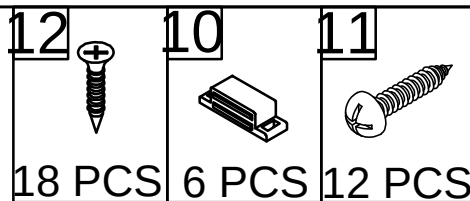
STEP 9



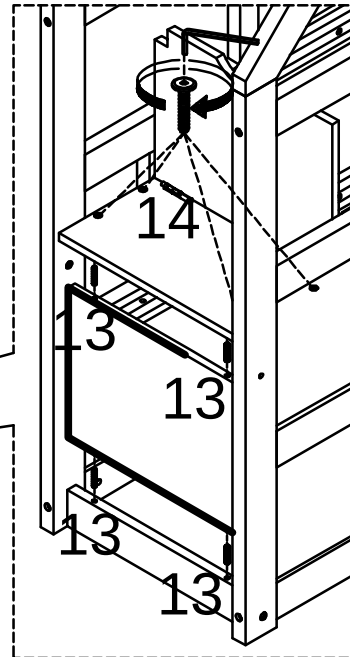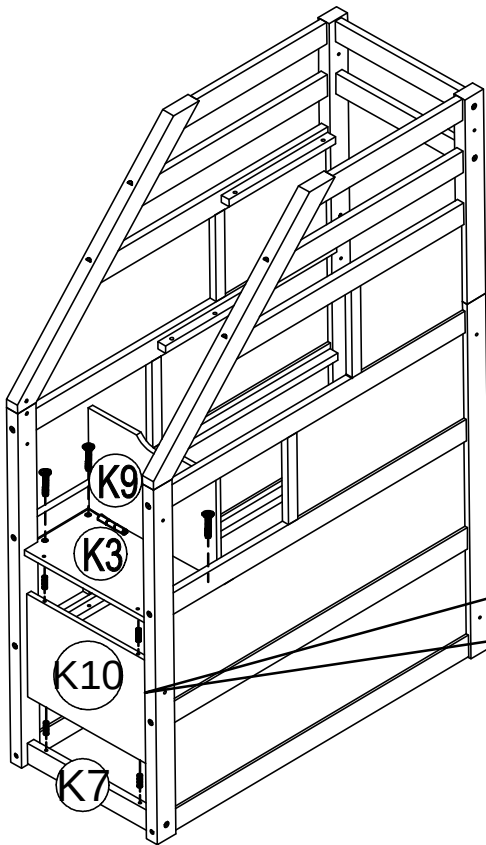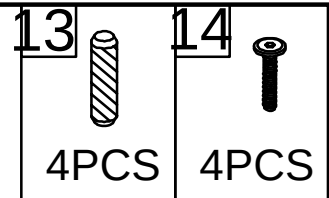STEP 10:




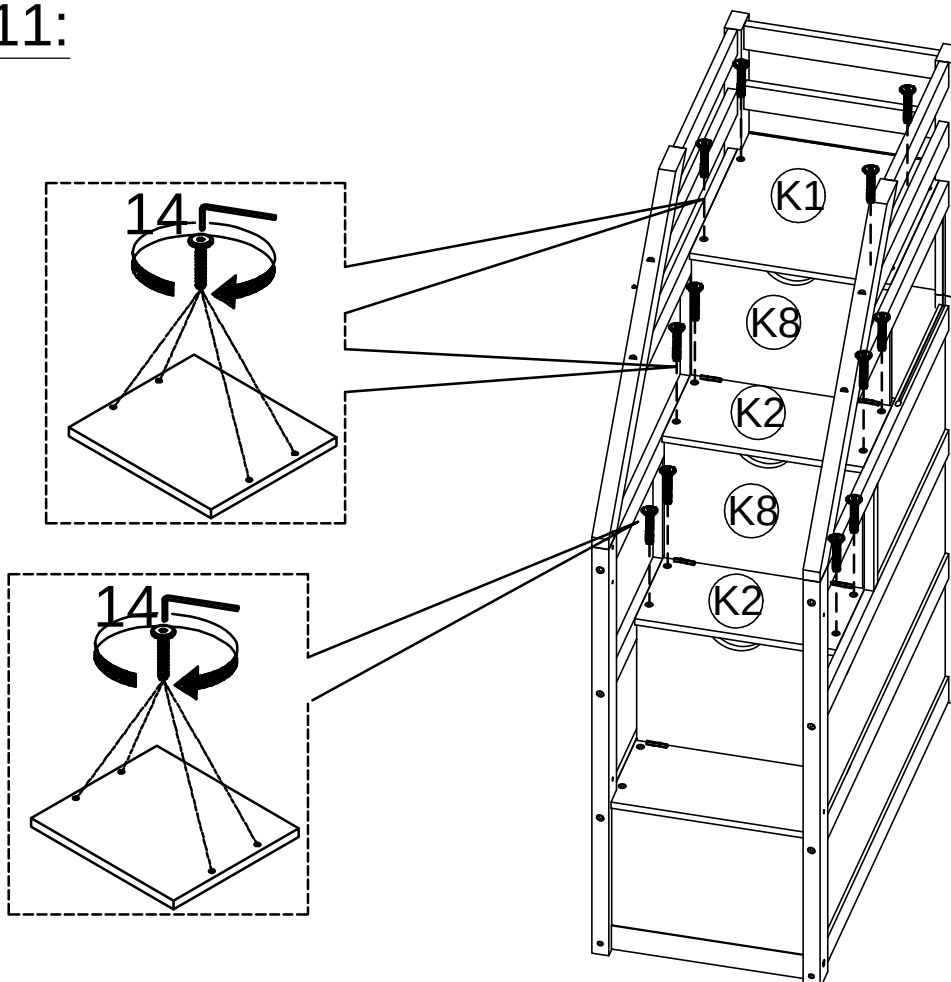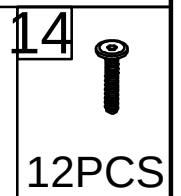STEP 11:




STEP 12:

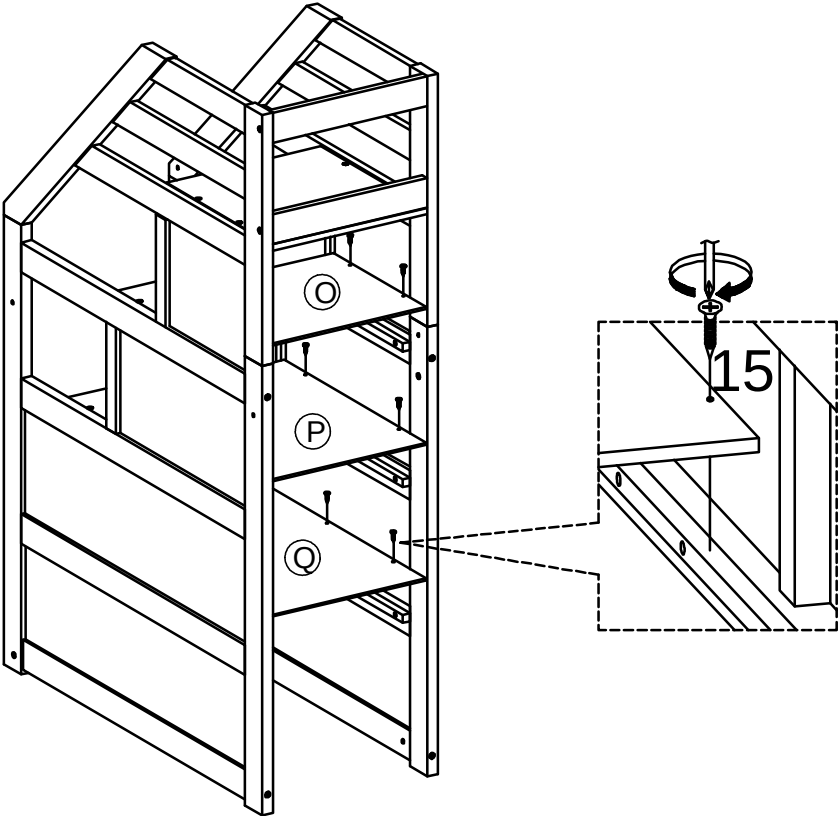15
14PCS



STEP 13:

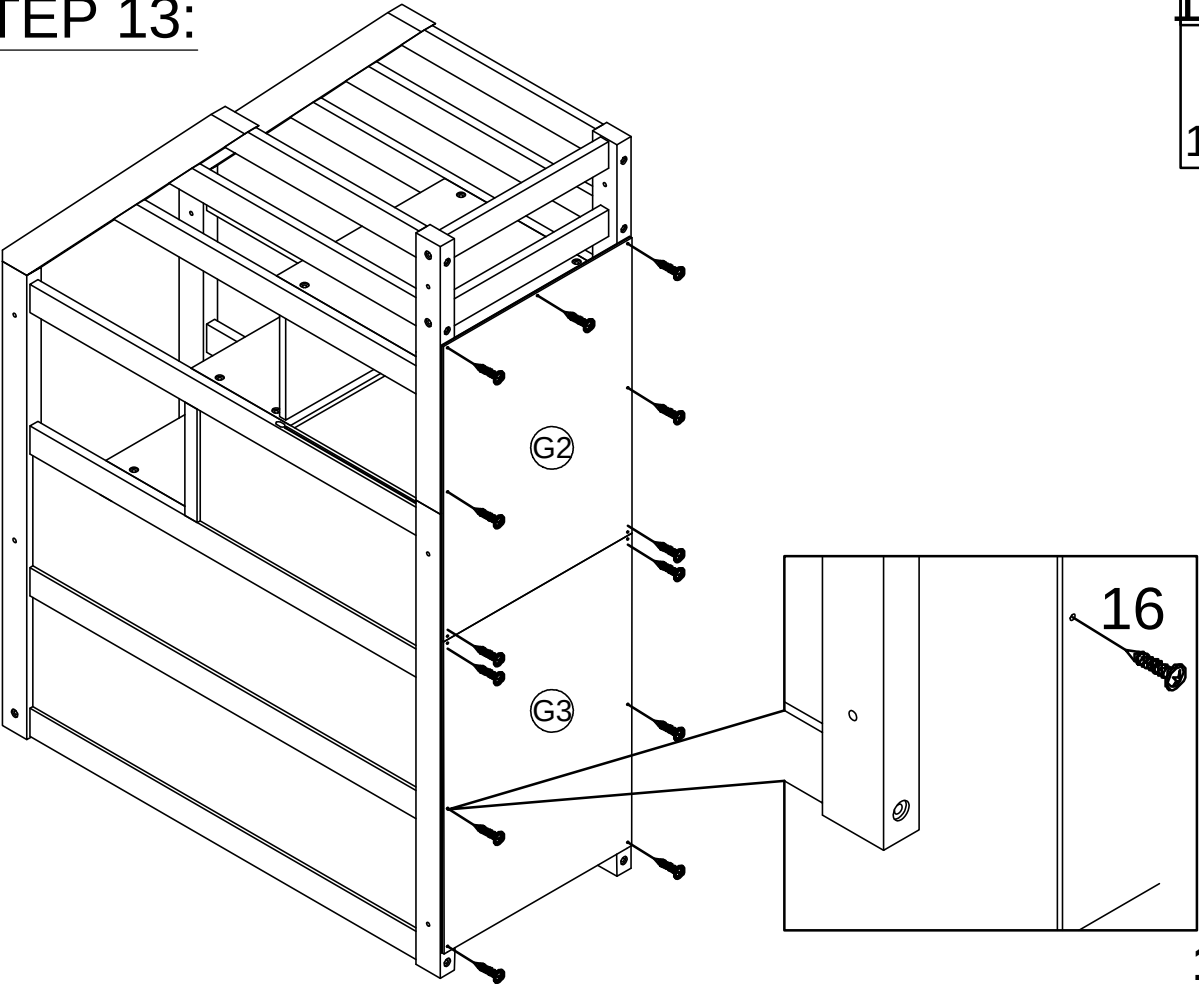
16
13PCS




STEP 14: Following below illustration:

-Using hardware #17 to Assembly Frame(completed on step 4) With Frame (Completed on step 13)


17



5pcs

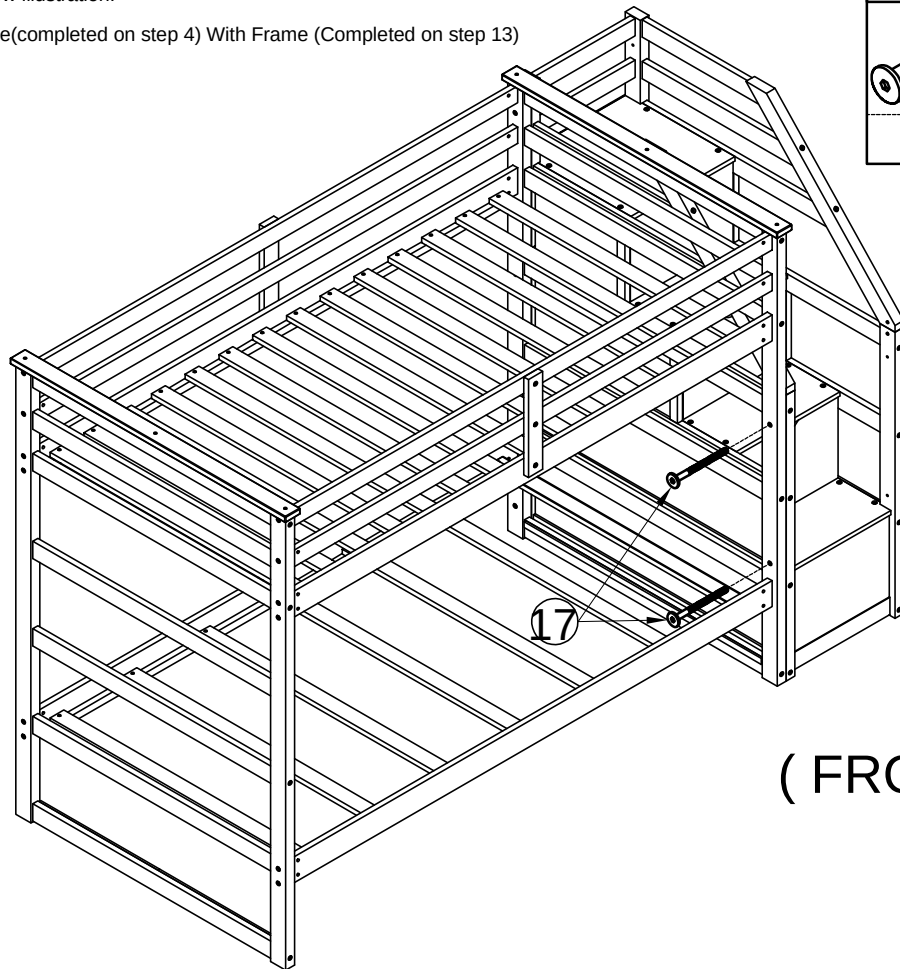



(FRONT)

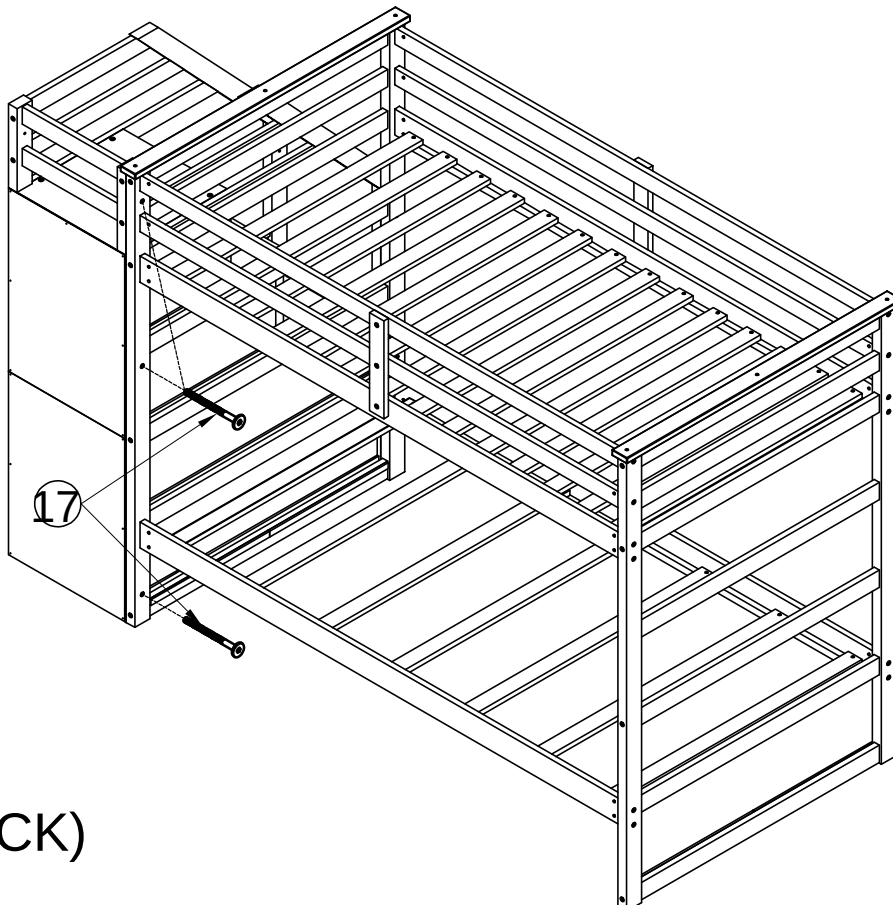

(BACK)

STEP 15-1:ASSEMBLY TRUNDLE


18	
4(pcs)	
15	
8(pcs)	

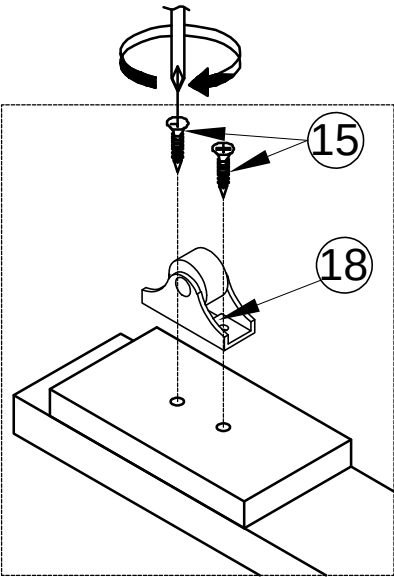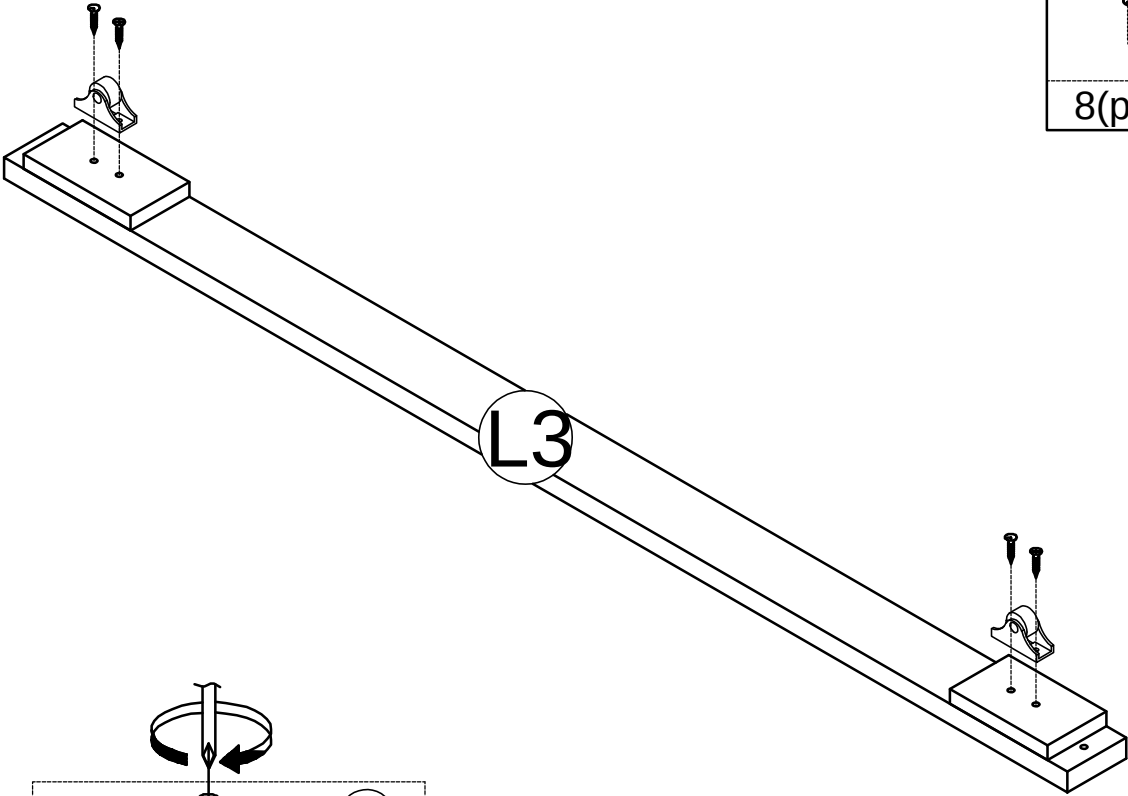

STEP 15-2: Following below illustration:

- Screw 5 slats L4, 2 slats L3 with Front Trundle(L1) and Back Trundle(L2) using hardware #2.
- Screw Steel Bracket (#19) with Front Trundle(L1) and slats L3 using hardware #15
- Look at detail view for more detail

19	15	2
3pcs	12pcs	14pcs

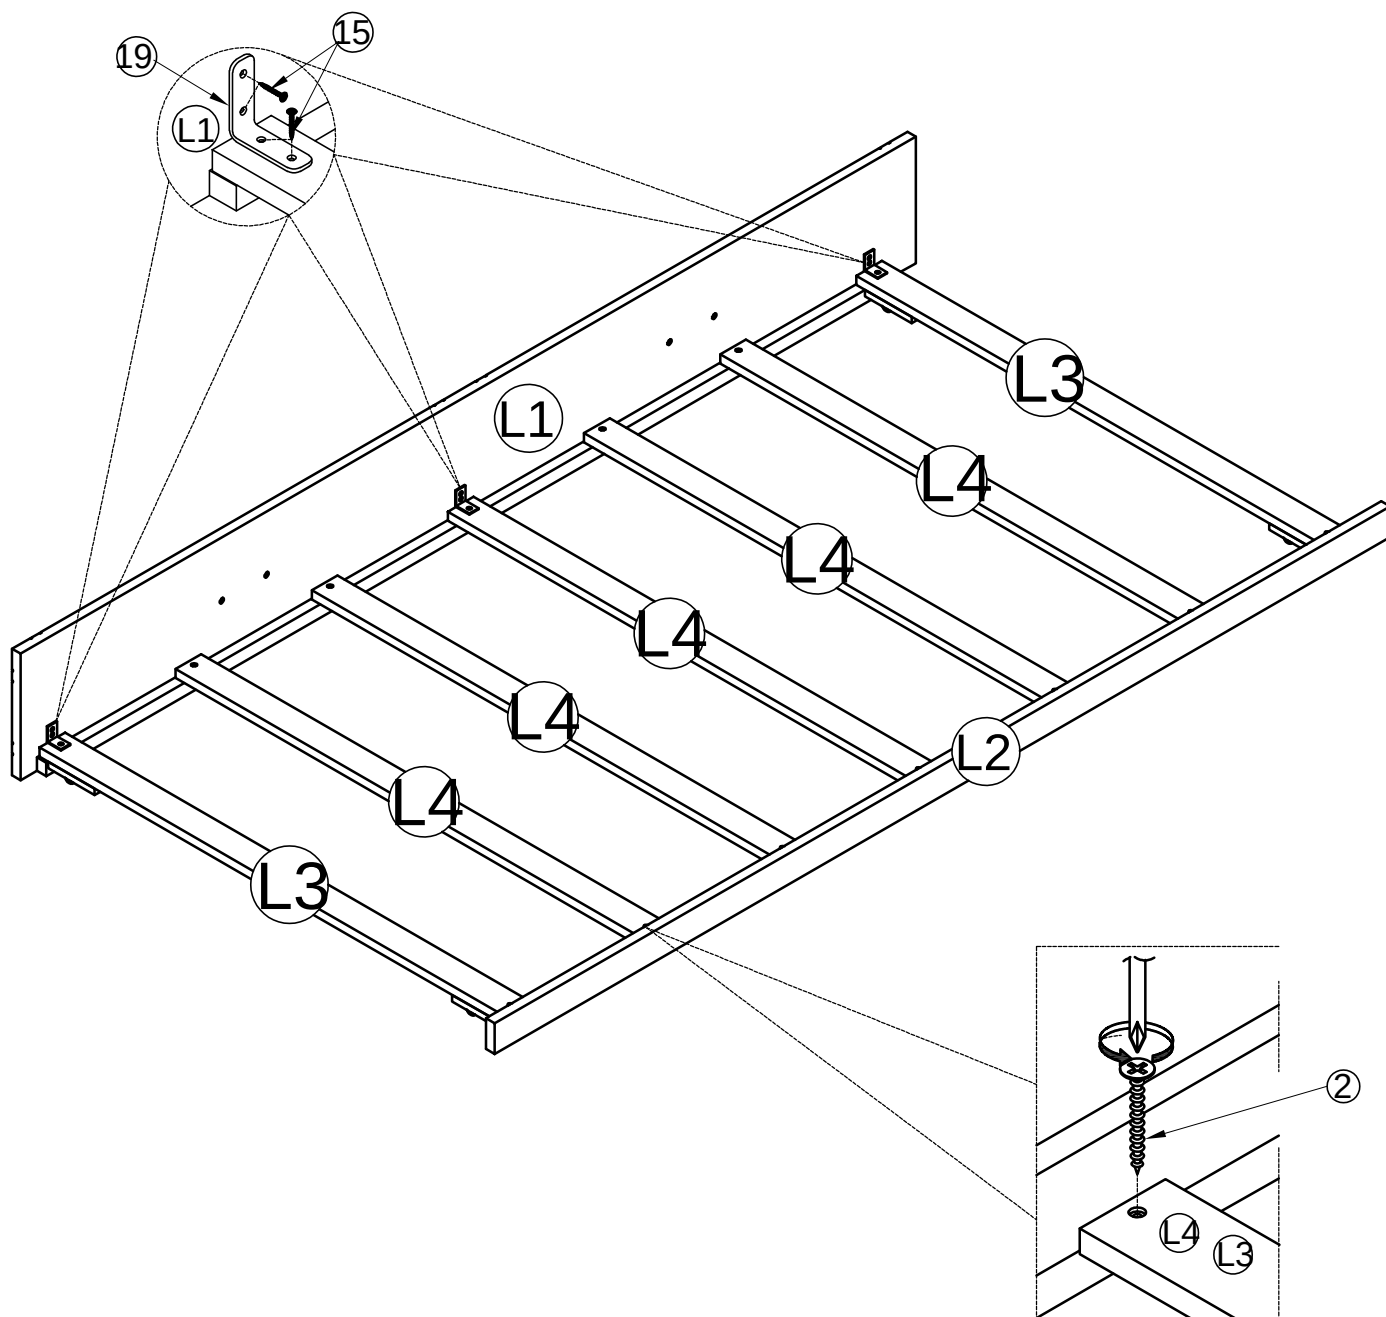

STEP 16: CONGRARULATION. YOU HAVE COMPLETED THE BED. just one more step to push the Under Bed Trundle into it position

