



Installation of Side Glass Piece(KK)

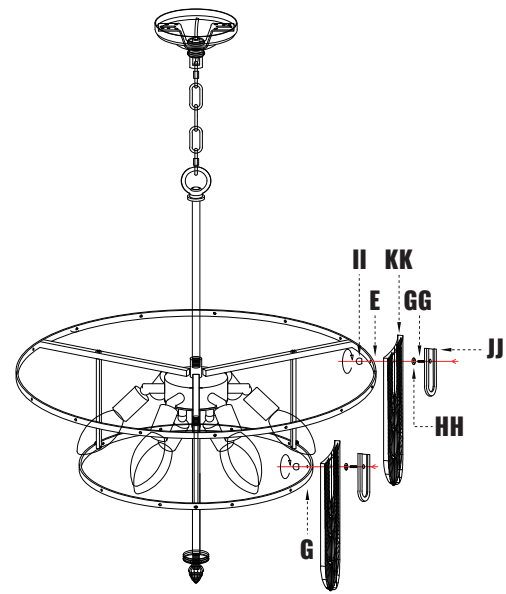


1. After Hanging the fixture body, screw the double end bolts (GG) into the decorative nuts (JJ), and fit the silicon washers (HH) onto them;
2. Attach the glass shades (KK) to the flat iron ring (G) and the fixture body (E) with screws assembled earlier, and locked with the dome nuts (II).

Install the Bottom Glass Piece

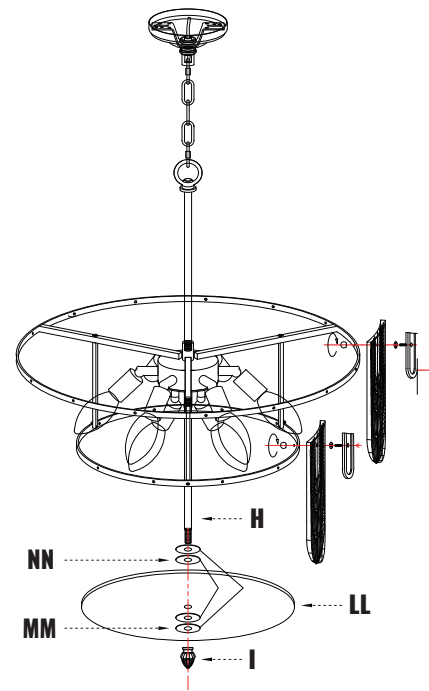

1. Once you've completed the previous step and have all the side glass in place, you can begin installing the bottom glass.
2. Thread (MM)-(NN)-(LL)-(NN)-(MM) onto (H) in order as shown, then twist (I) into connecting rod (H).


Installation Complete

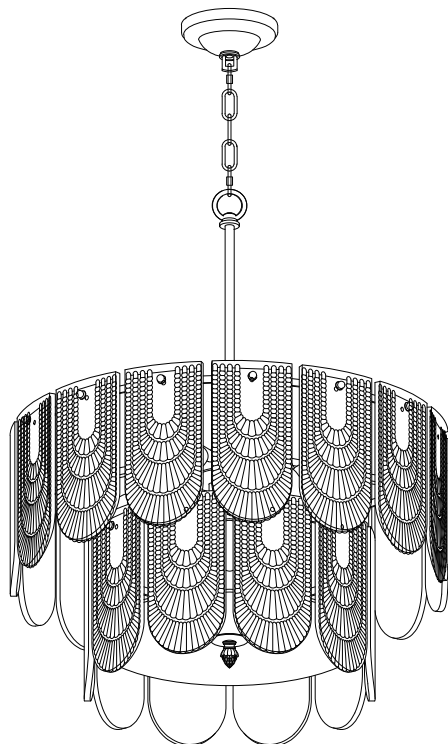

INSTALLATION MANUAL

CHANDELIER

Model No.: MP19212-10

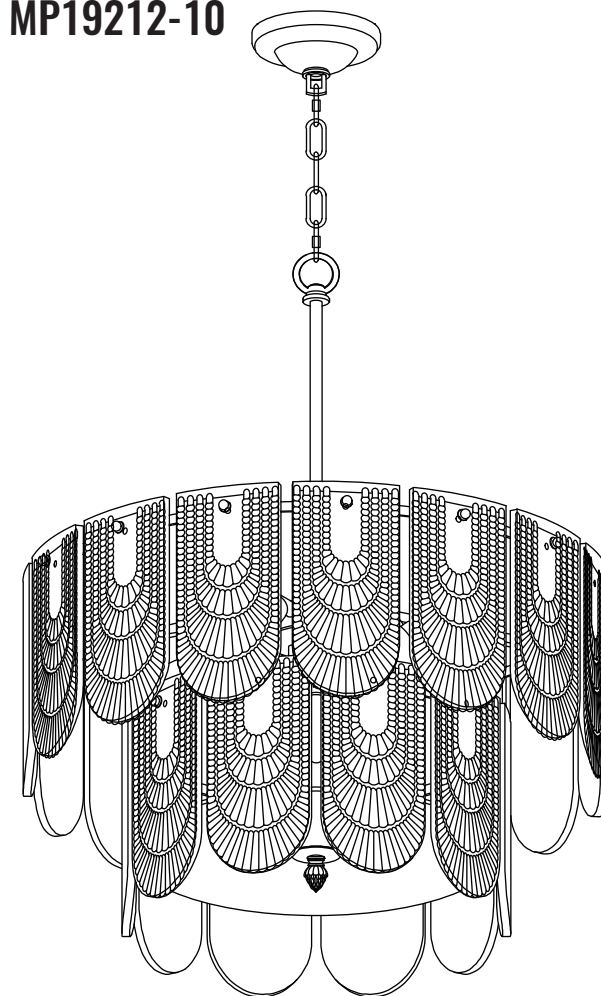


Scan for Installation Video


TOOLS REQUIRED




Ladder

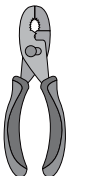

Pliers

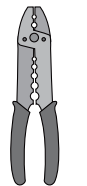


Wire Strippers

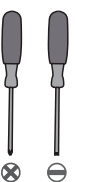


Screwdrivers

PACKING LIST

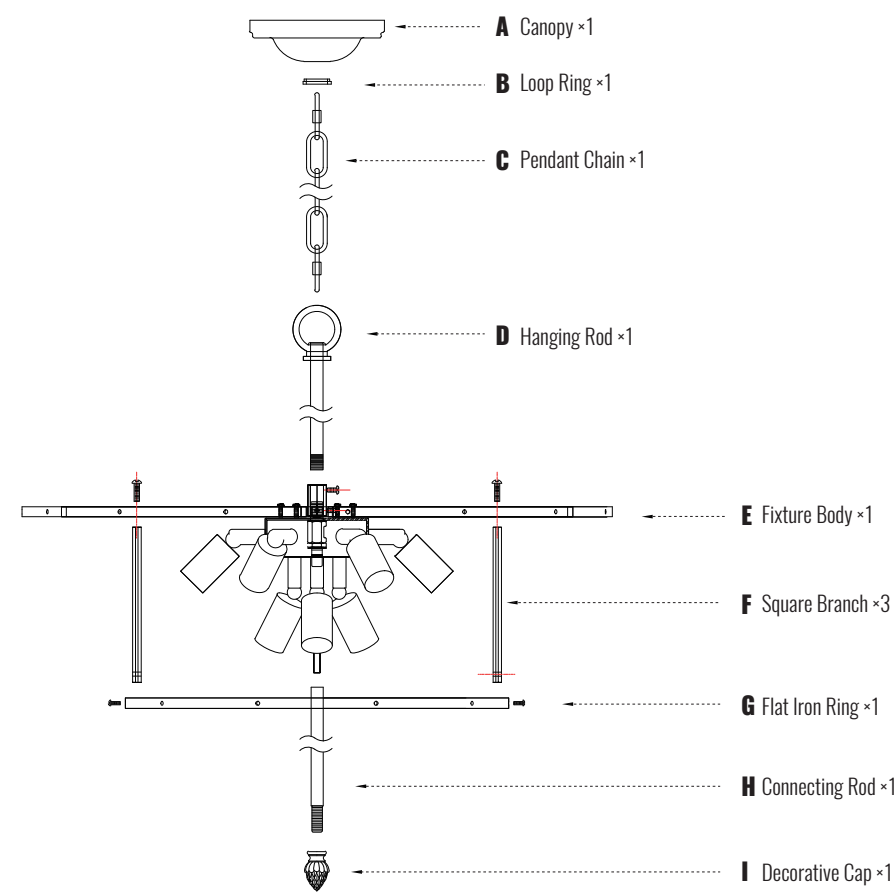


INSTALLATION KIT

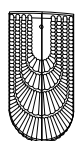AA  Wire Nut 3×	BB  Outlet Box Screw 2×	CC  Ground Screw 1×	DD  Mounting Bracket 1×	EE  Setscrew M5*20 3×
FF  Setscrew M3*10 3×	GG  Double End Bolt 25×	HH  Silicon Washer 25×	II  Dome Nut 25×	JJ  Decorative Nut 25×
KK  Glass Shade 25×	LL  Round Glass 1×	MM  large Silicon Washer 2×	NN  large Plastic Washer 2×	OO  Gloves 1×


- NOTE:**
- Ground screw (CC) has been preloaded inside Mounting Bracket (DD), and mounting bracket (DD) has been preloaded into the canopy (A).
 - Setscrew (EE)/(FF) has been preloaded into Square Branch (F). You must loosen them before installtion.
 - Silicon Washer (MM)/(NN) has been preloaded into Connecting Rod (H). You must loosen them before installtion.

INSTALLATION

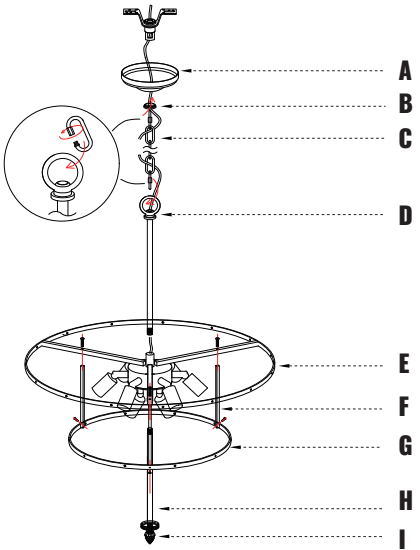

Hanging and Fixing the Fixture Body


- Pass the supply wire through in this order (D)-(C)-(B)-(A).
- Rotate (D) onto (E).
- Rotate quick link on both ends of (C) and snap one end to (D).
- Take off the screws on the square brach(F),then palce (F) in the appropriate position in the illustration and secure (E) and (G) with screws taken off.
- Screw (H) onto fixture body (E).

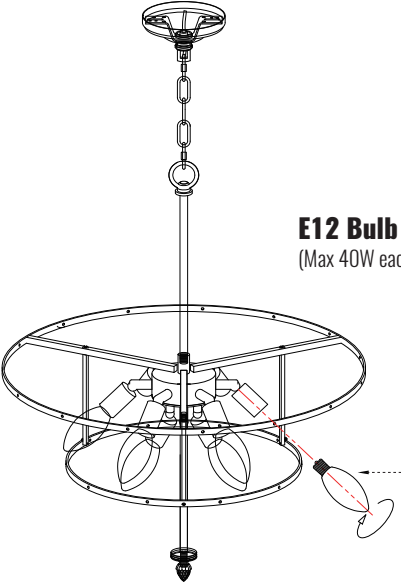

E12 Bulb x 9
(Max 40W each, not included)


Install the E12 LED Bulb

INSTALLATION

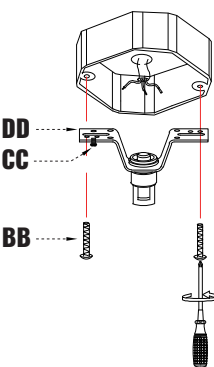


1. Mount the Mounting Bracket

Take off screws from outlet box, secure mounting bracket onto box with screws taken off or outlet box screw(BB) provided.

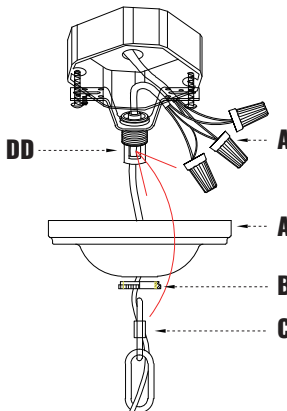


2. Lock the Quick Link

Thread the chain through(B) and (A), then hook the (C) onto (DD).

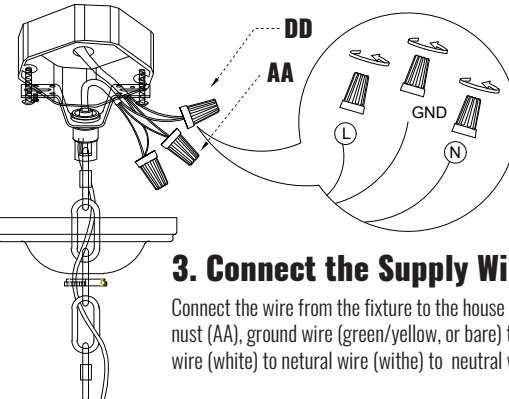

3. Connect the Supply Wire

Connect the wire from the fixture to the house suply wires with wire nust (AA), ground wire (green/yellow, or bare) to ground wire neutral wire (white) to netural wire (withe) to neutral wire, and hot wire.

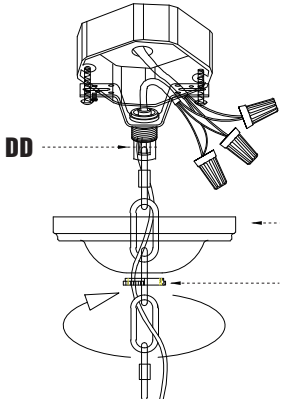

4. Lock the Canopy Loop

Lock canopy (A) to mounting bracke with loop ring(B).