

ReGENCY

YOUR COMPLETE OFFICE SOLUTION

LEGACY FAX/PRINTER CABINET • LPFS2121 • INSTRUCTIONS

Organize your parts and hardware. You will need a Phillips head and flat head screw driver and rubber mallet.

Hardware :

A: Cam Pins(14) • B: Cam Covers(14) • C: Small Screw(6) • D: Medium Screws(8) • E: Large Screws(4)

F: Handle Screws(2) • G: Drawer Handle(1)



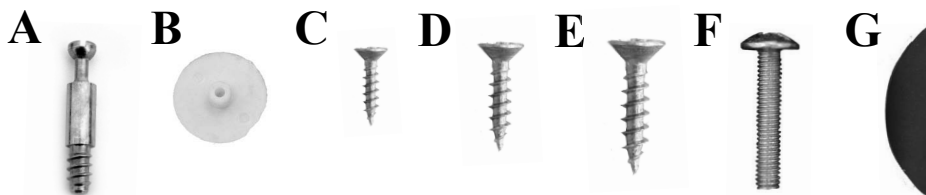


Figure 1: To open Cam, point arrow toward Cam Pin hole. To lock Cam, turn clockwise.

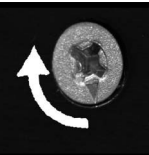


Parts :


H: Runner • I: Base • J: Back Panel • K: Sides(2) • L: Suspension Slide(2) • M: Top • N: Drawer Front • O: Drawer Box

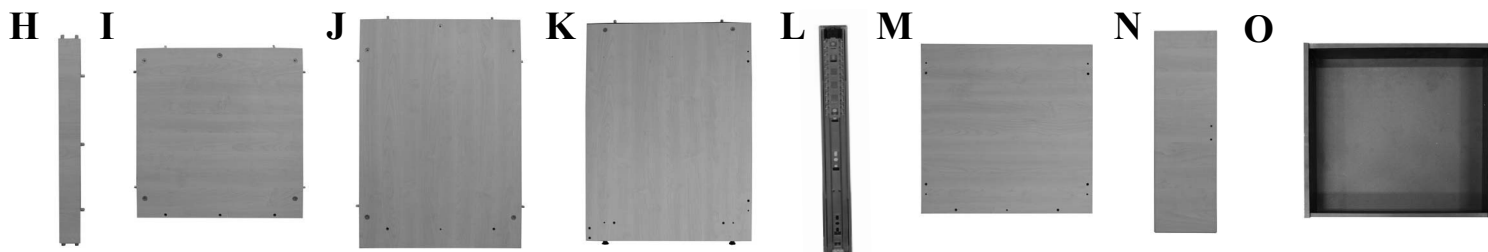

STEP 1 : Attach Runner(H) to Base(I) by inserting dowels into coordinating holes.

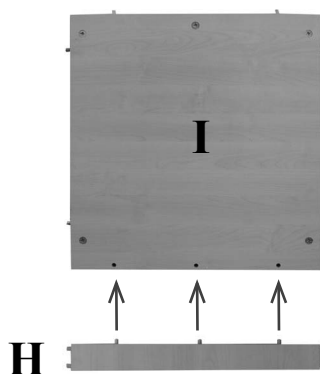

STEP 2 : Insert 1 Cam Pin(A) into Back Panel(J).

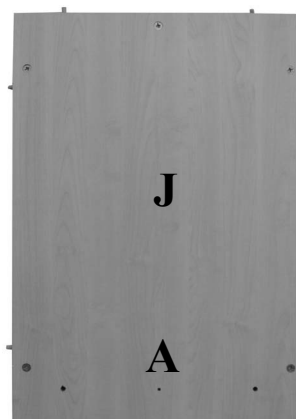

IMPORTANT NOTICE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.

Check to be sure that you have all parts and hardware.

Remove all wrapping materials, including staples & packing straps before you start to assemble.


Do not tighten all screws/bolts until completely assembled.

Keep all hardware parts out of reach of children.


Any problems or questions call Regency Office Furniture at 1-866-816-9822

LEGACY FAX/PRINTER CABINET • LPFS2121 • INSTRUCTIONS

STEP 3 : Attach Base(I) to Back Panel(J) by inserting Dowels into coordinating holes and Cam Pin into Cam Lock. Lock Cams (**Figure 1**).

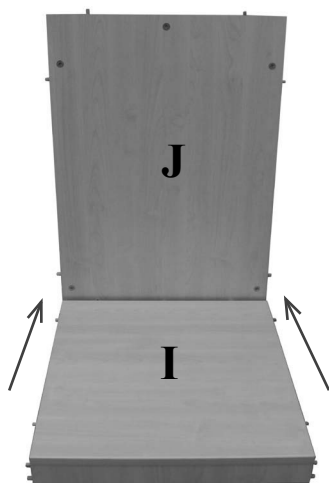


STEP 4 : Insert 4 Cam Pins into each Side(K).

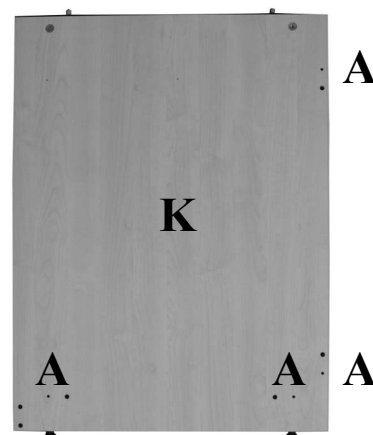


STEP 5 : Attach 1 Suspension Slide(L) to each Side(K) using 2 Medium Screws(D) each.

NOTE: Black Piece faces the Front of the Storage Cabinet.

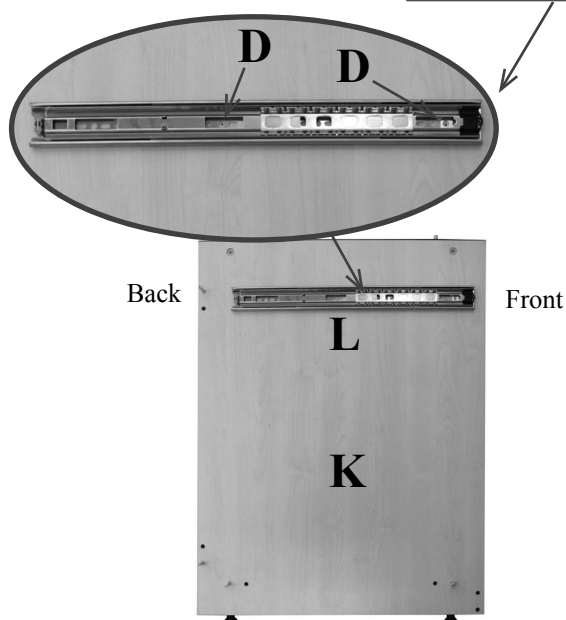

STEP 6 : Attach both Sides(K) to Base(I) and Back Panel(J) by inserting Dowel Rods into the coordinating holes and Cam Pins(A) into Cam Locks. Lock Cams(**Figure 1**).

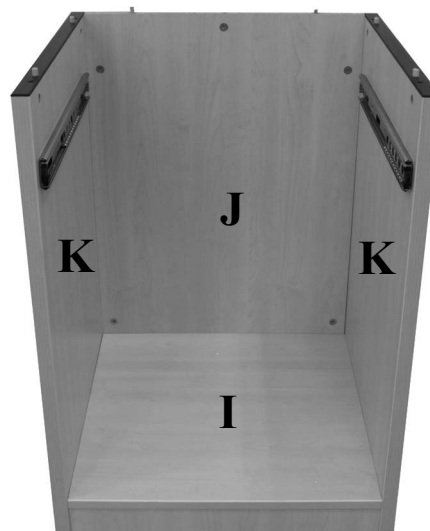


REGENCY


YOUR COMPLETE OFFICE SOLUTION

LEGACY FAX/PRINTER CABINET • LPFS2121 • INSTRUCTIONS

STEP 7 : Insert 5 Cam Pins(A) into Top(M). Attach Top(M) to both Sides and Back Panel by inserting Cam Pins into Cam Locks. Lock Cams(**Figure 1**).

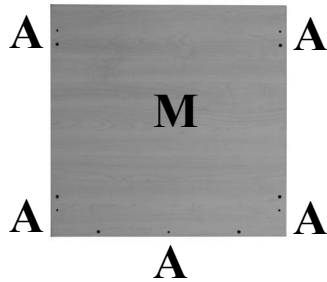

STEP 8 : Attach Handle(G) to Drawer Front(N) with 2 Drawer Screws(F).

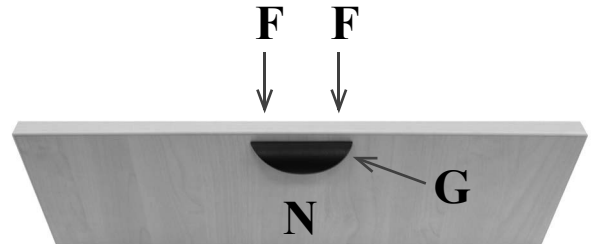

STEP 9 : Attach Drawer Front(N) to Drawer Box(O) using 4 Large Screws(E). Insert Drawer into Suspension Slides(L). Finish by attaching Cam Covers(B).

