

7179W12F6 ASSEMBLY INSTRUCTIONS

Disclaimer:

Thank you for your purchase. Please read carefully and keep these instructions, as you may need them later. We suggest installation by a **licensed electrician**.

Beware of potential electrical shock! Before installing the fixture or removing any other light already present, please turn off the main power at the circuit breaker.

If your product contains glass items, please handle with care, as glass is fragile and can lead to injuries if handled incorrectly.

Please keep in mind that the warnings and instructions present in this document are not meant to cover and prevent all possibilities and situations that could lead to injury or damage. It is the responsibility of the end-user to exercise caution and common sense when handling and installing the product.

All electrical connections must be made by qualified personnel in accordance with the National Electrical Code.

Please refer to the table below for electrical connections:

Fixture wire markings:

"L" Live wire (Black or Brown)

"N" Neutral wire (White or Blue)



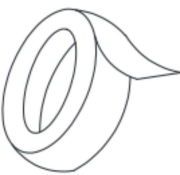
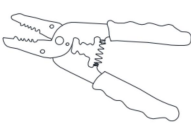

"⊕" Ground wire (Bare copper or Green)

AC power equivalent:

"L" Live wire (Black)

"N" Neutral wire (White)

"⊕" Ground wire (Bare copper or Green)

Tools Required: (not included)				
				
Step Ladder	Phillips Head, Flat Blade Screwdrivers	Electrical tape	Wire Cutter/Stripper	Plier

Need to contact us?

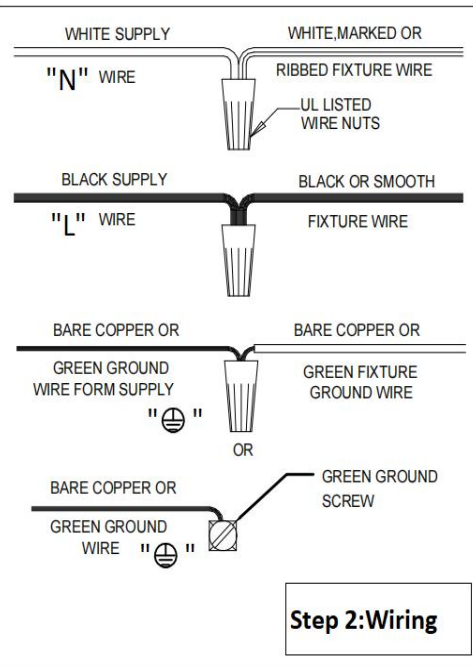
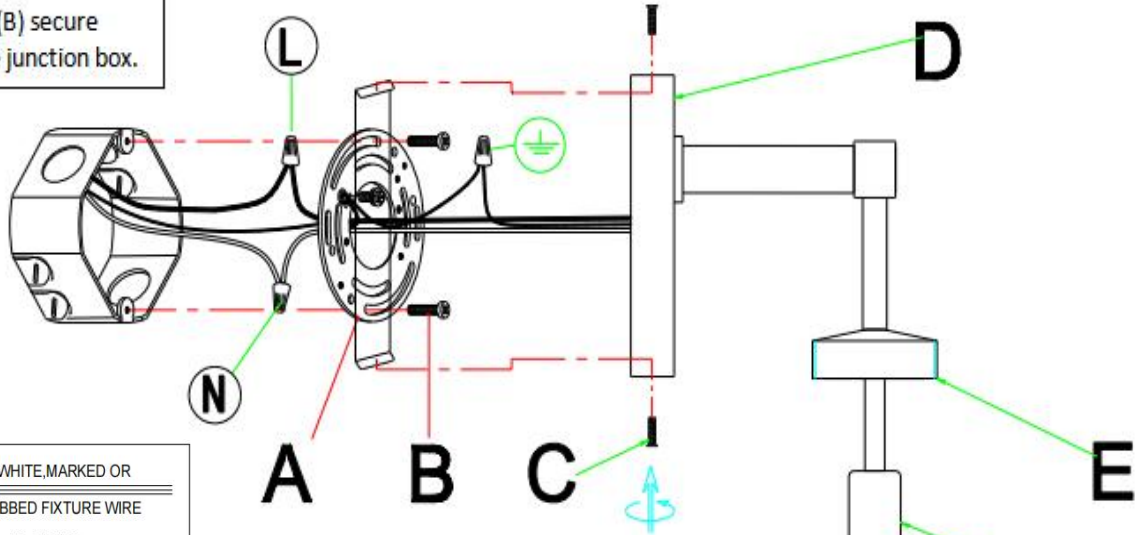
Please send an email at:
service@aloadecor.com

Need more information?

Please visit our website:
www.aloadecor.com

7179W12F6 ASSEMBLY INSTRUCTIONS

Step 1. Use the two screws(B) secure mounting bracket(A) to the junction box.



Bulbs not included

Step 3. Use the screw nut(C) secure backplate (D) to the mounting bracket(A).

Step 4. Install the glass shades(H) onto the socket(E) .

Step 5. Install the E12 LED bulbs 1pc(not included).
Applicable only for type T5/B10/B11 bulbs !

