


Product Name:	Natural Wood 2-Tier Raised Garden Bed Planter
SKU #:	WHPL1191

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Parts List:

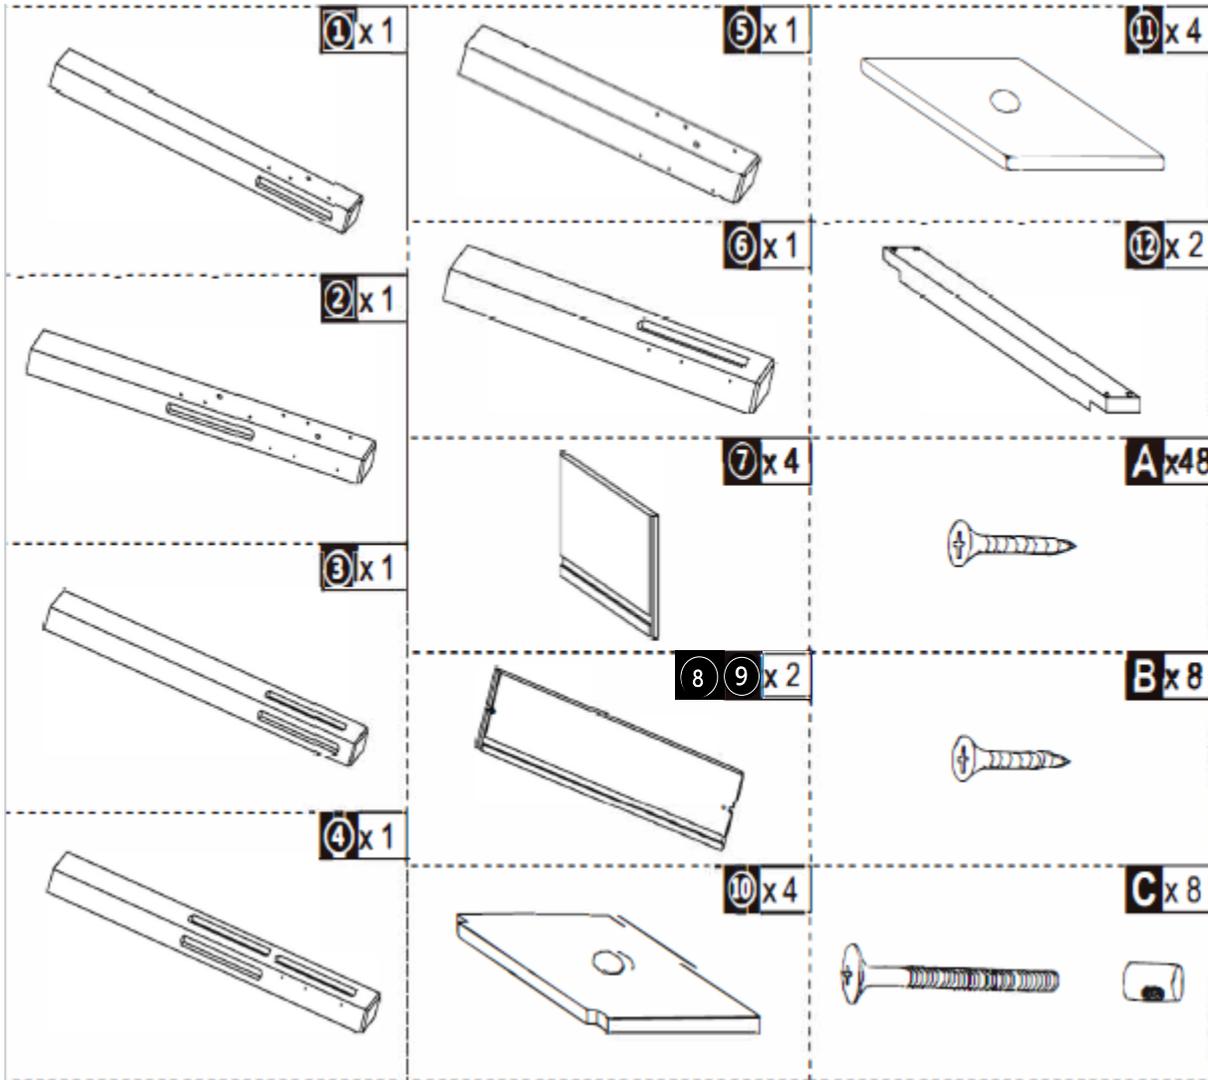


Note: There are two panels of part 8 and two panels of part 9.

Tools required for assembly: Philips screwdriver (if using power tools, use with care)

Product Name:	Natural Wood 2-Tier Raised Garden Bed Planter
SKU #:	WHPL1191

Step 1


Start by assembling the legs and side. The legs and side panels contain Parts 1, 2, 5, 7 and 7. Attach and insert panels 7's to legs 5, 2, and 1. Then secure the frame together using screws (A) to the holes closest to panel 7.

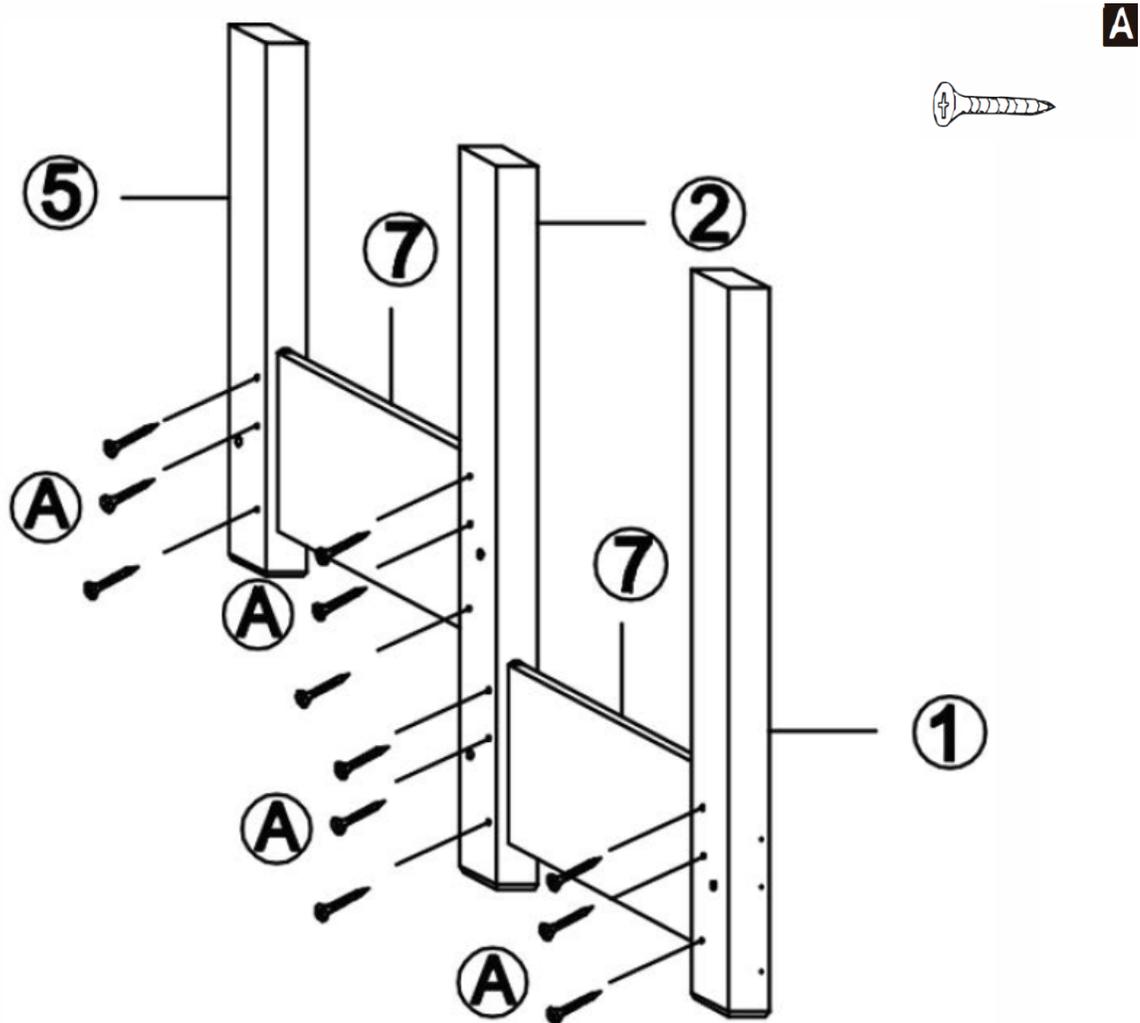

Product Name:	Natural Wood 2-Tier Raised Garden Bed Planter
SKU #:	WHPL1191


Step 2

Next, assemble the other side of the garden beds legs and side panels. The legs and side panels contain Parts 3, 4, 6, 7, and 7. Attach and insert panels 7's to legs 3, 4, and 6. Then secure the legs together using screws (A) to the holes closest to panel 7. 3 screws for the end legs and 6 screws for the middle leg.

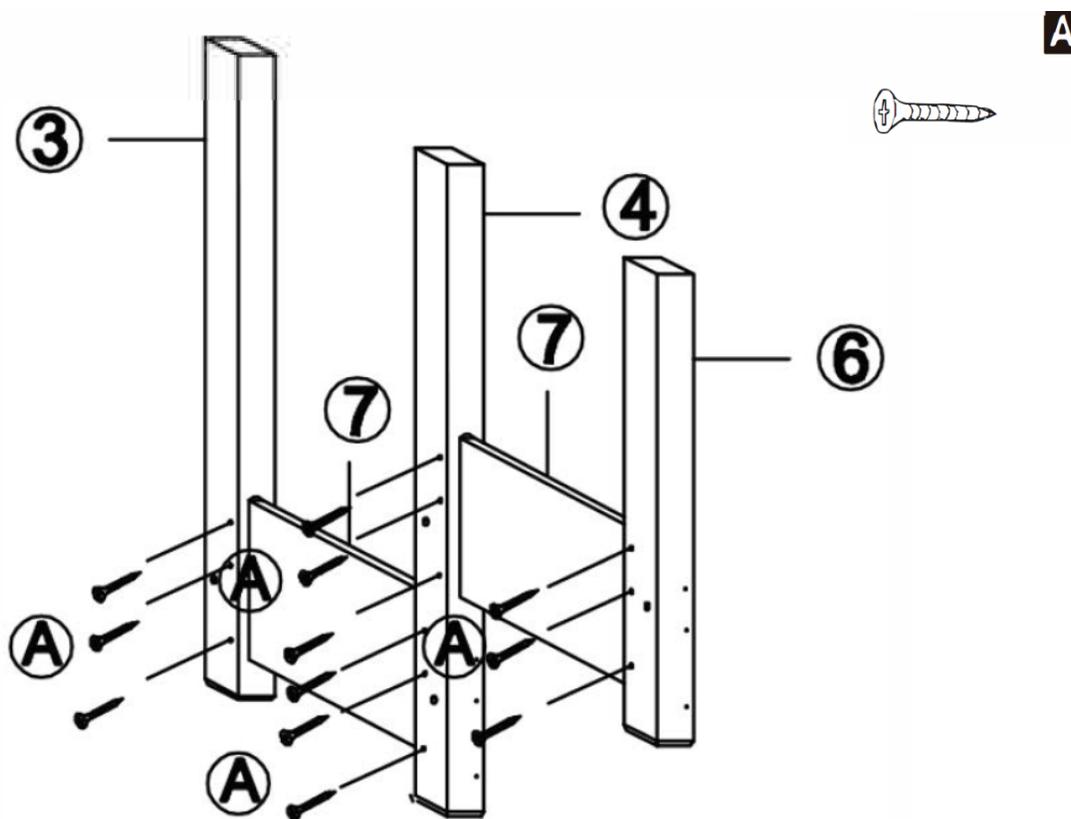

Step 3


Next, have Part 12 ends align with panels 8. Then secure it with screws (B).

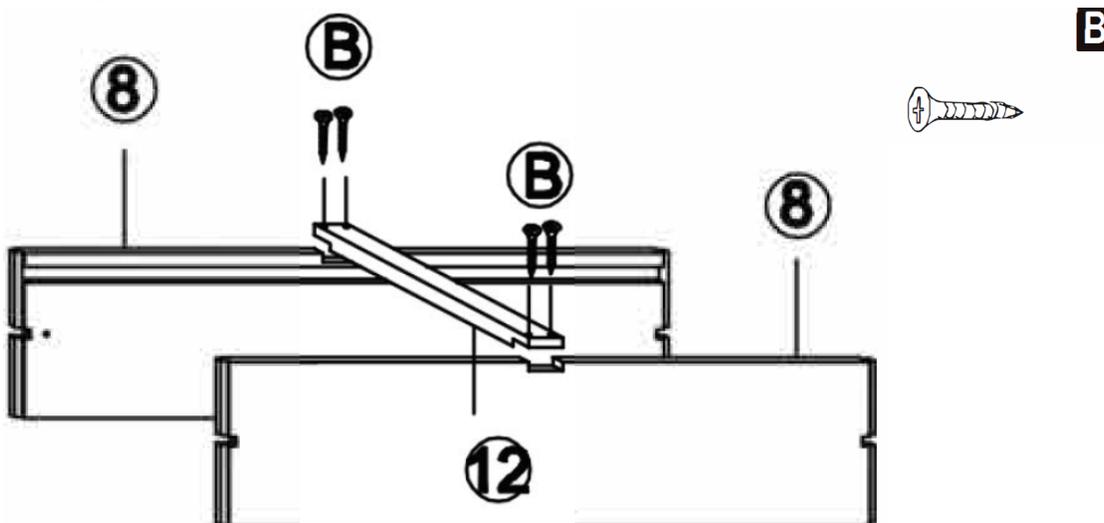

Product Name:	Natural Wood 2-Tier Raised Garden Bed Planter
SKU #:	WHPL1191


Step 4

Insert the Barrell nut to the inner side of panels 8 and 9. Align the frame into the legs and screw in the bolt.

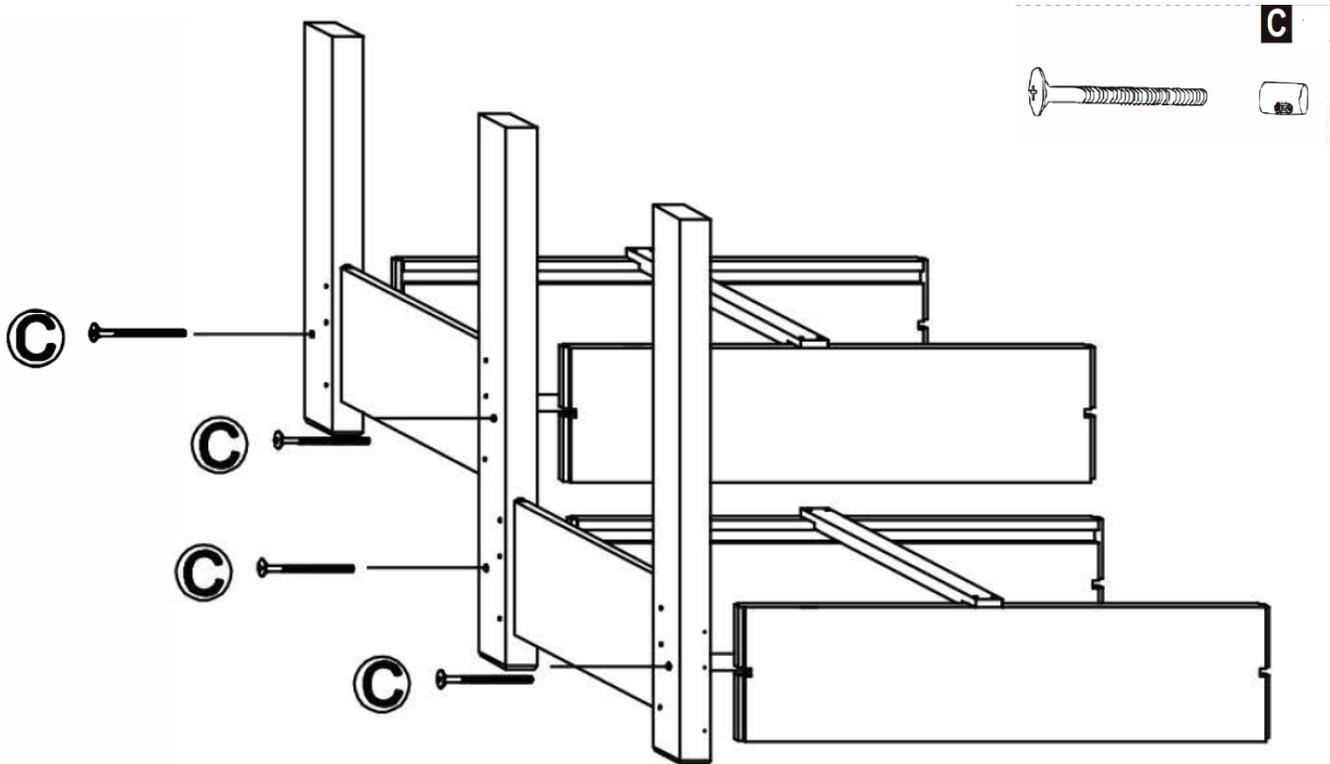

Step 5


Slide in bottom panels 10, 11, 11, and 10 through both side of the frame's panels 8 and 9.

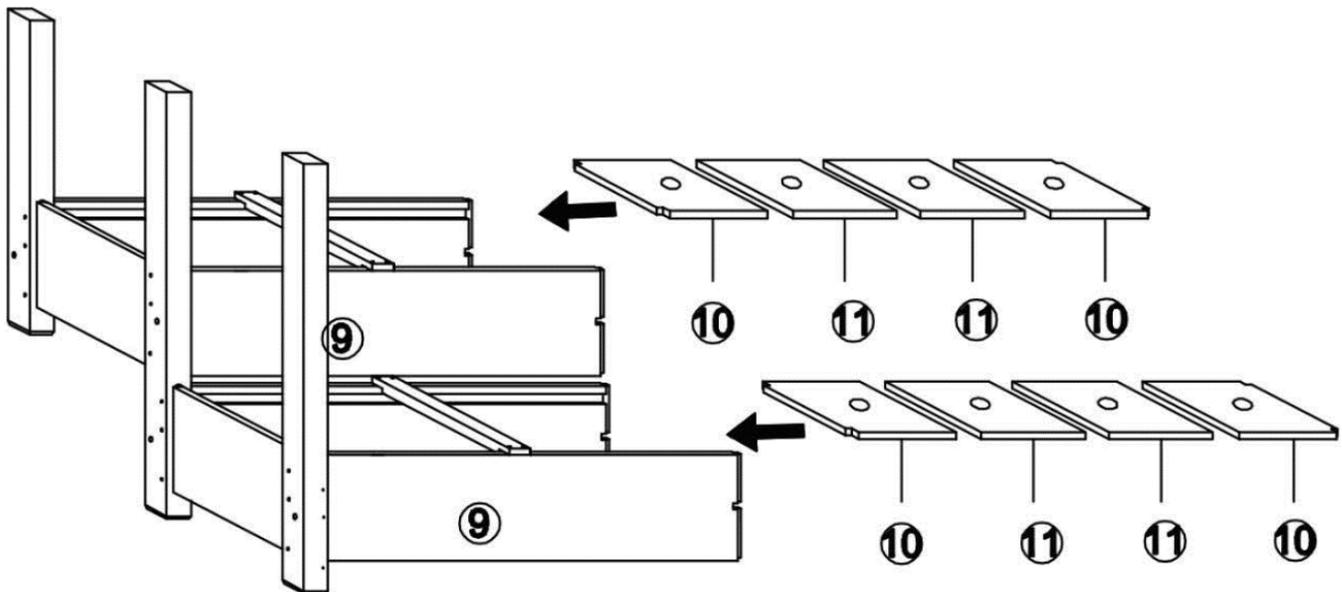

Product Name:	Natural Wood 2-Tier Raised Garden Bed Planter
SKU #:	WHPL1191

Step 6

Attach and align the legs to the frame. Once aligned insert the Barrell nut to panels 8 and 9 and screw in the bolts.

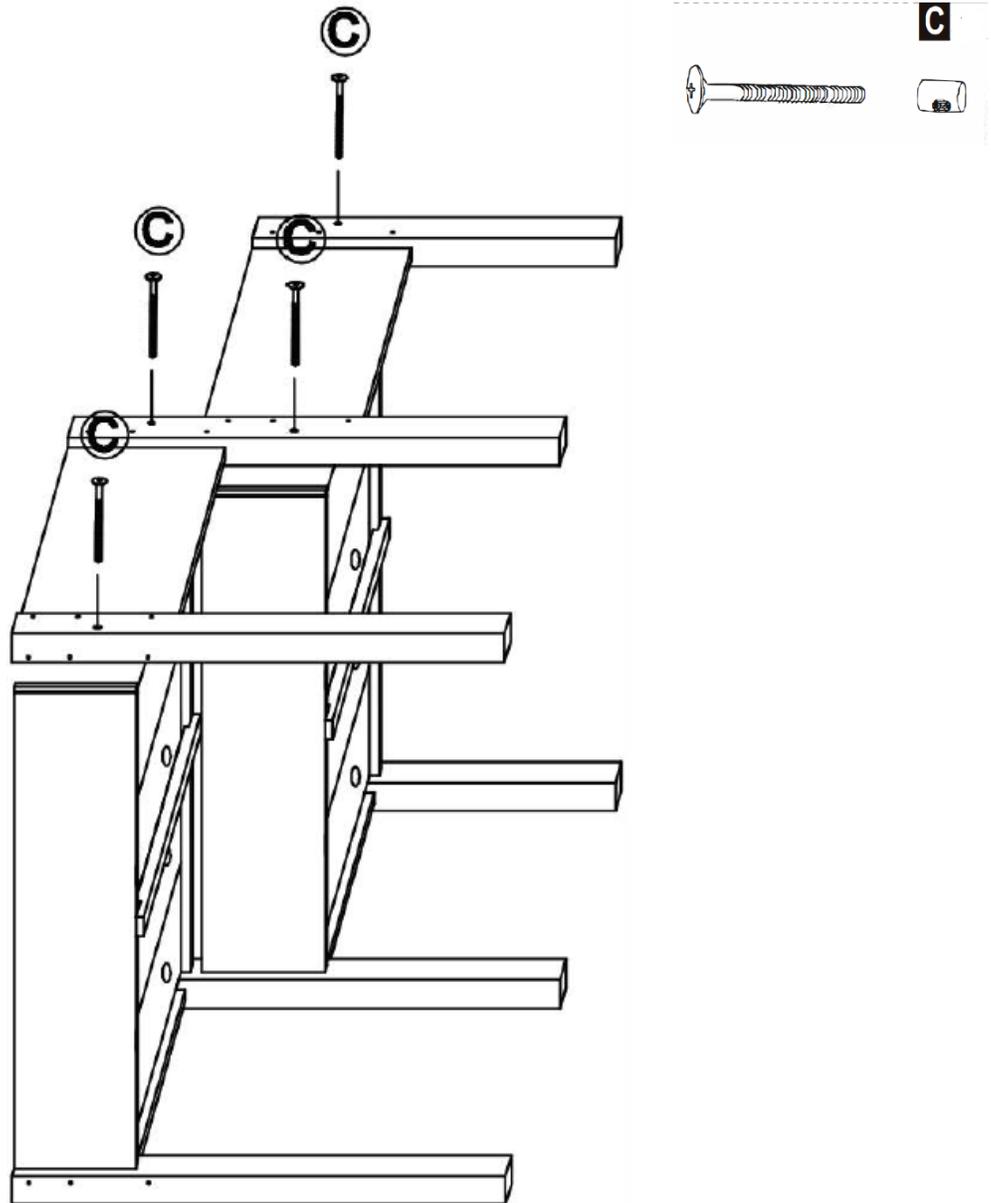

Product Name:	Natural Wood 2-Tier Raised Garden Bed Planter
SKU #:	WHPL1191

Step 7

Screw in 24 x screw (A) to the sides of the legs. Once finished, adjust the bottom panels 10 and 11 to have even spacing between each panel to complete.

