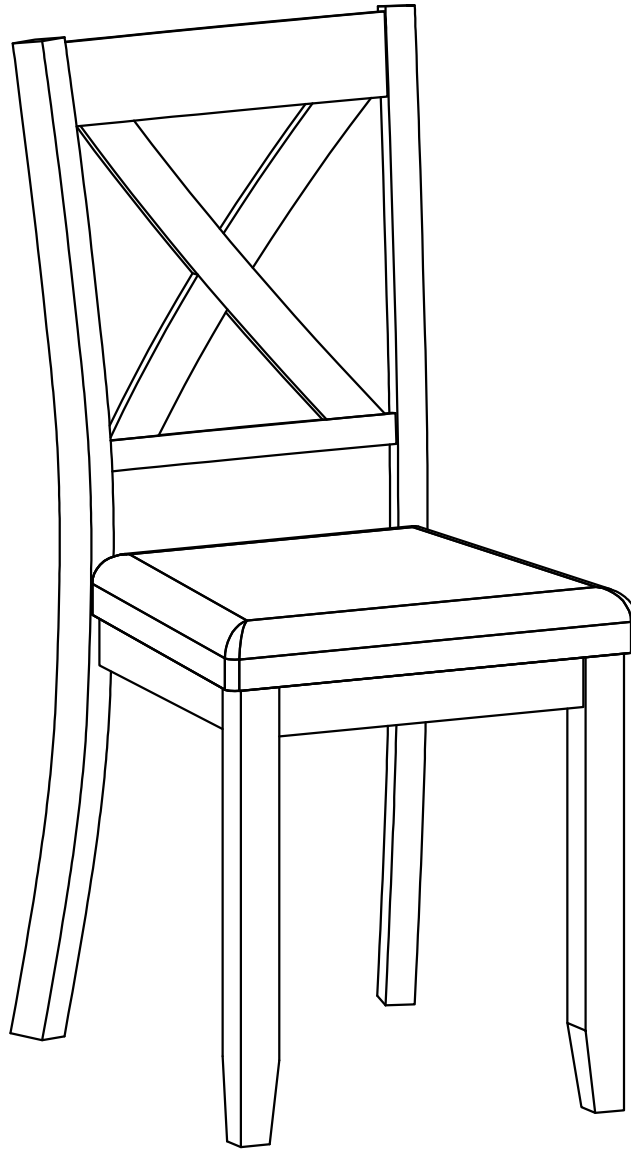


ASSEMBLY INSTRUCTIONS

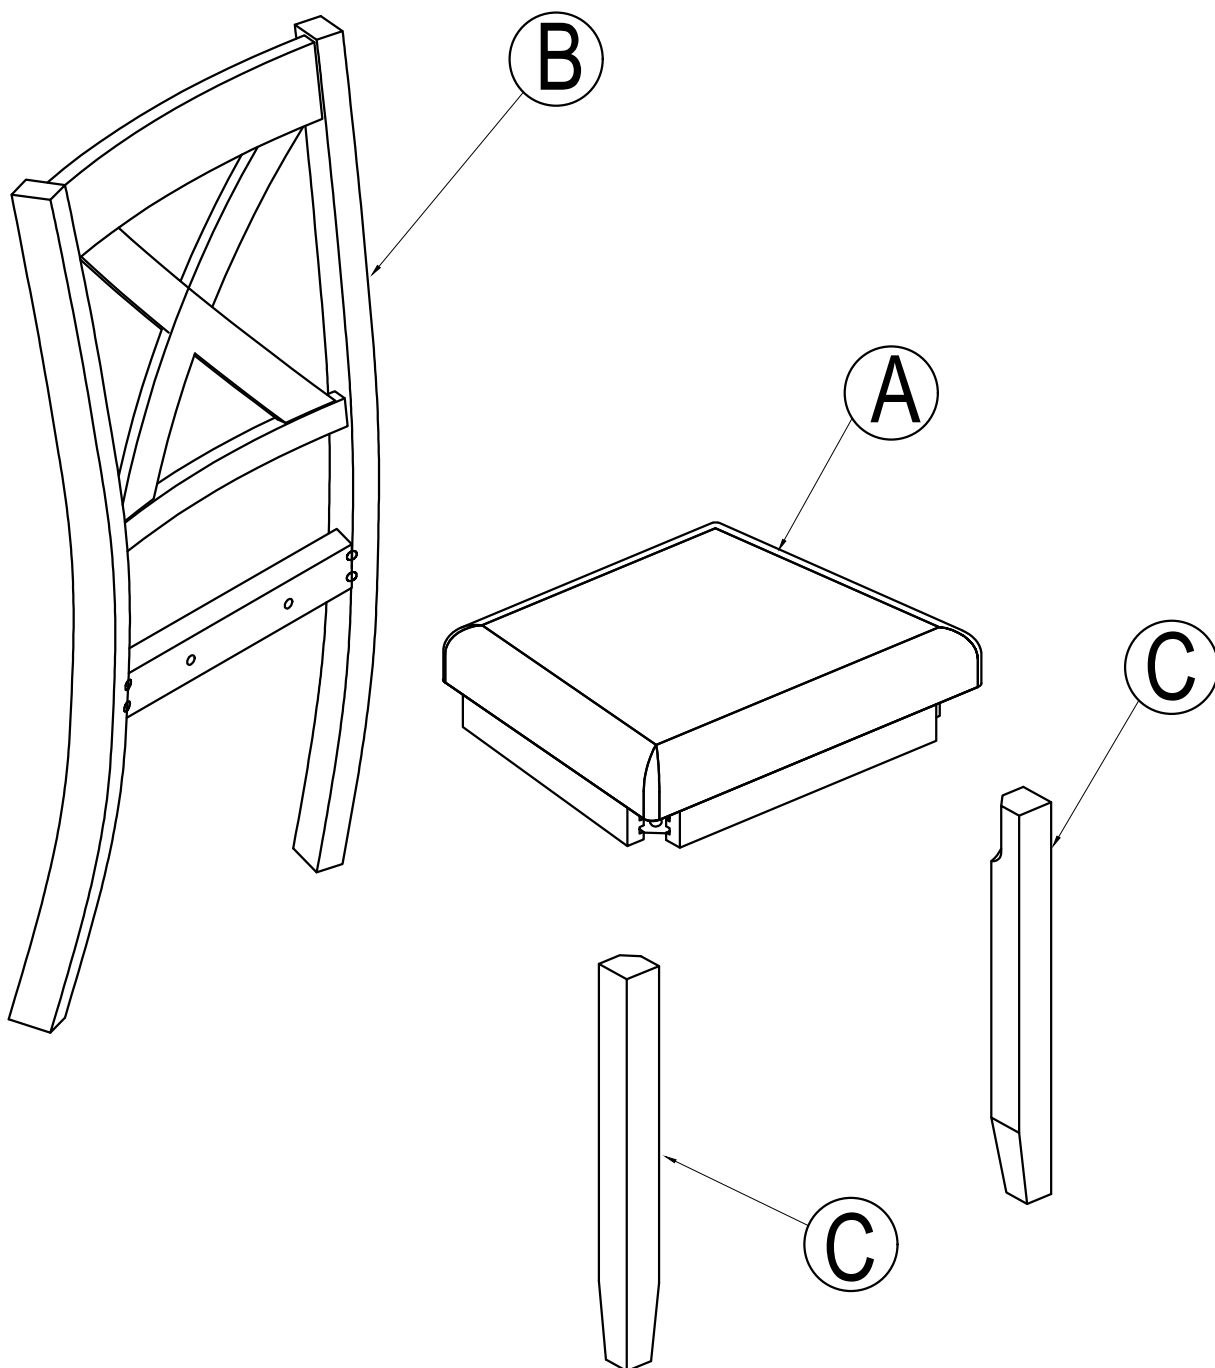
ITEM NO.WF292250

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net










IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.




Part List

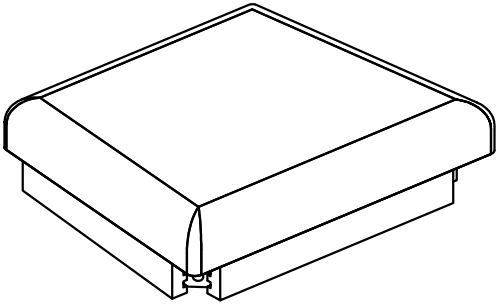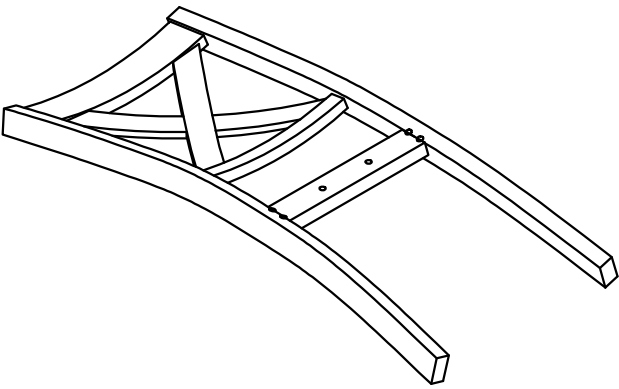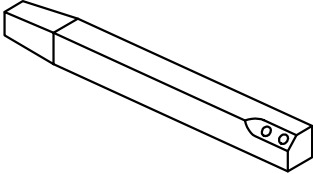
Hardware List

Ⓐ  CUSHION SEAT (4 pcs)	①  Ø 1/4" x 40 mm
	BOLT (8 pcs)
	②  Ø 1/4" x 55 mm
	BOLT (16 pcs)
Ⓑ  CHAIR BACK (4 pcs)	③  Ø 1/4" x 75 mm
	BOLT (16 pcs)
	④  Ø5/16" x 13 mm
	FLAT WASHER (40 pcs)
Ⓒ  FRONT LEGS (8 pcs)	⑤  Ø5/16" x 19 mm
	LOCK WASHER (40 pcs)
	⑥  4 mm
	ALLEN KEY (1 pc)

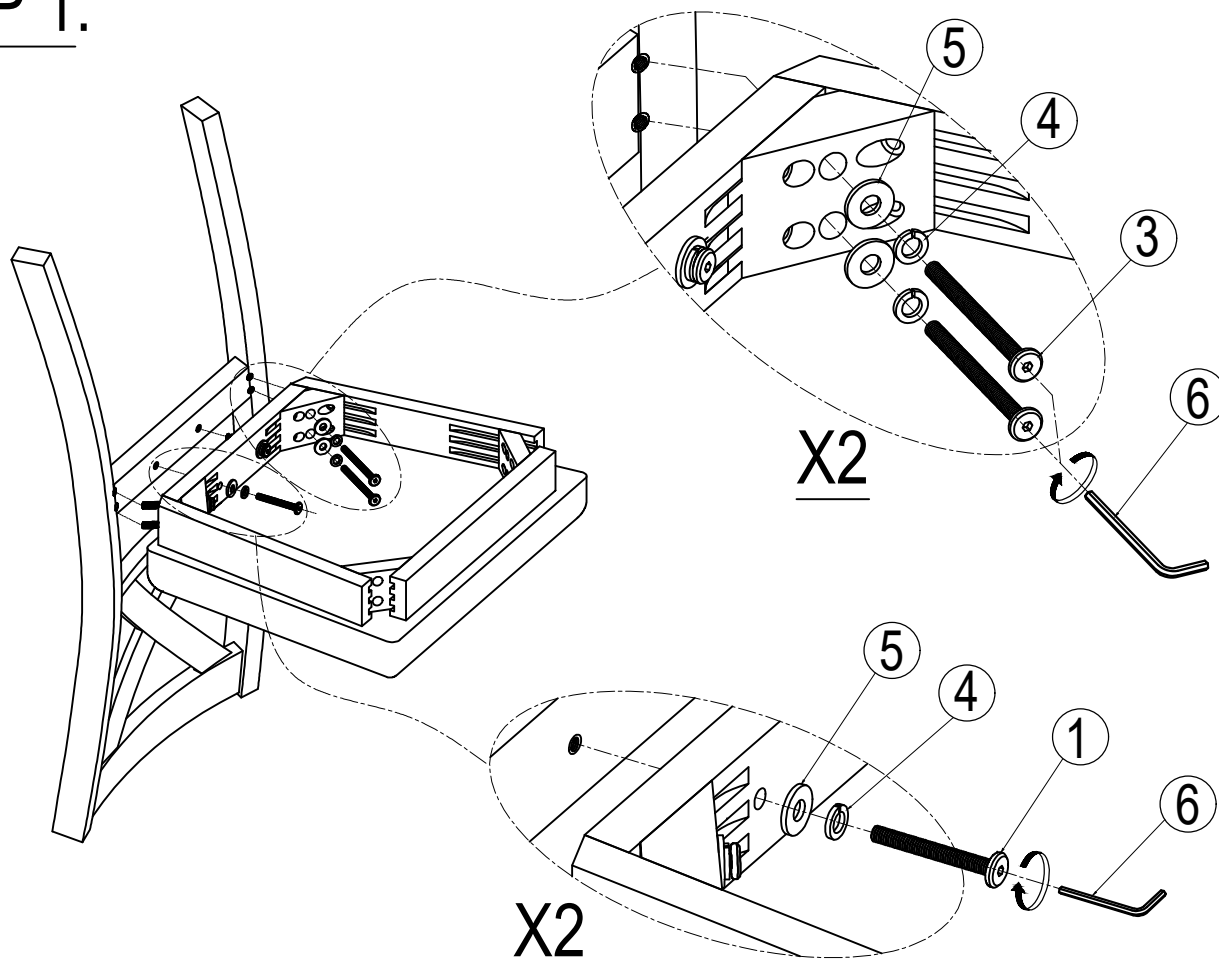STEP 1:




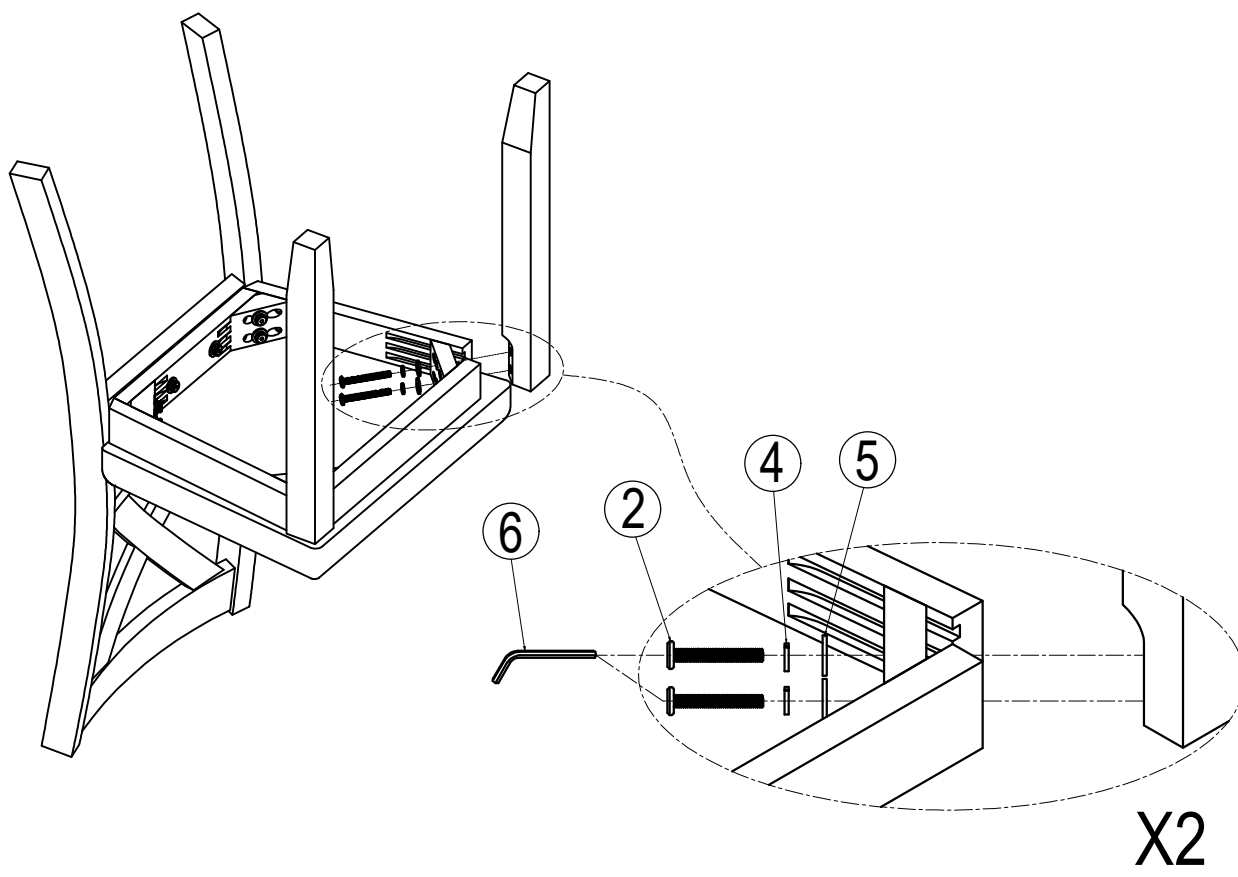STEP 2:




ASSEMBLY INSTRUCTIONS

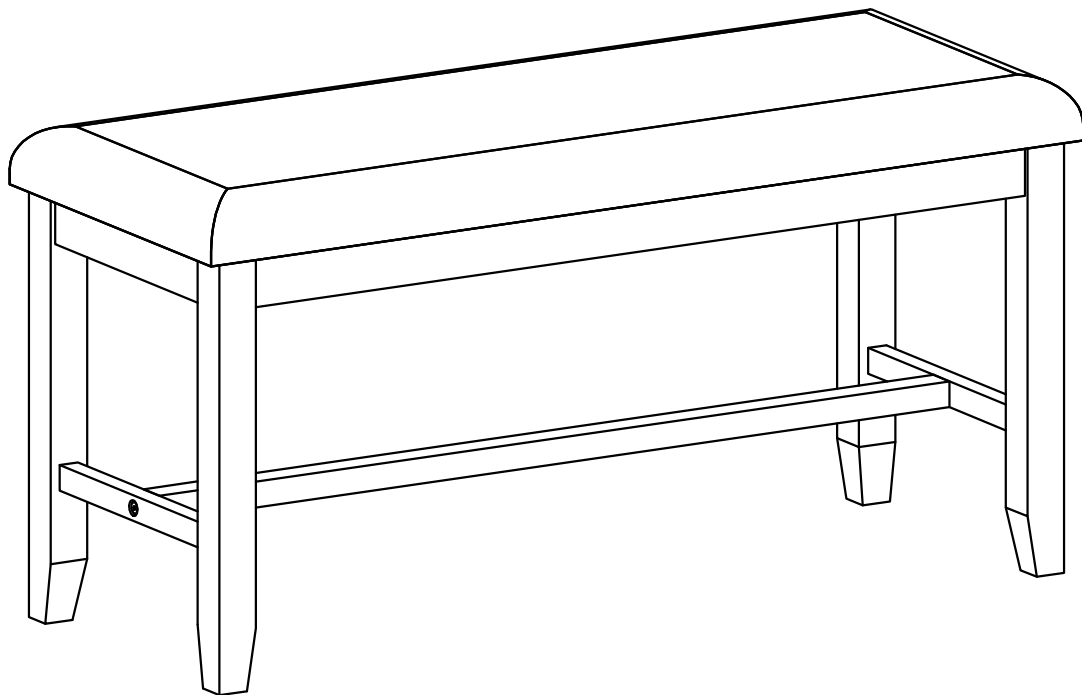ITEM NO.WF292250












IMPORTANT NOTE :

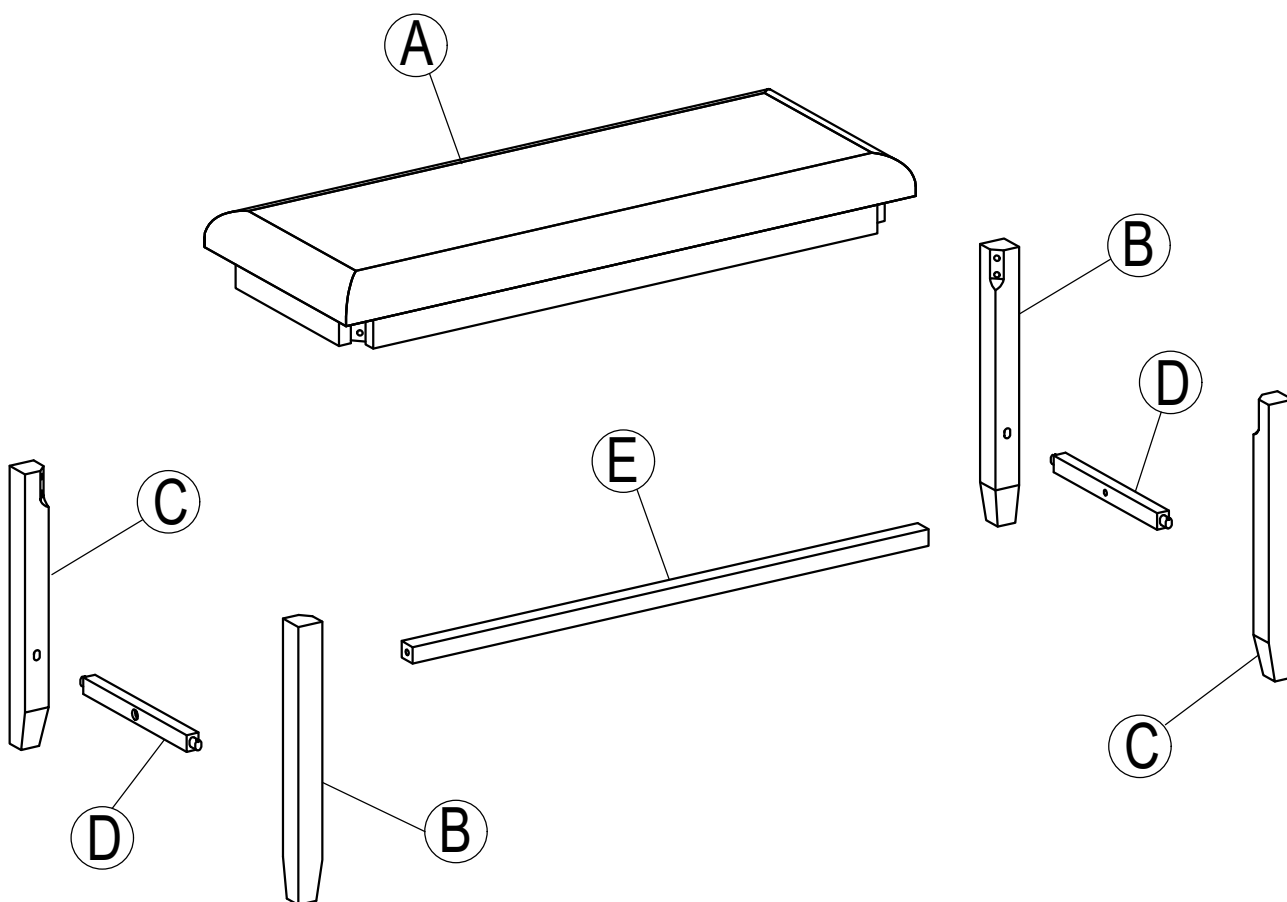- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BENCH IS FULLY SET-UP.




Part List

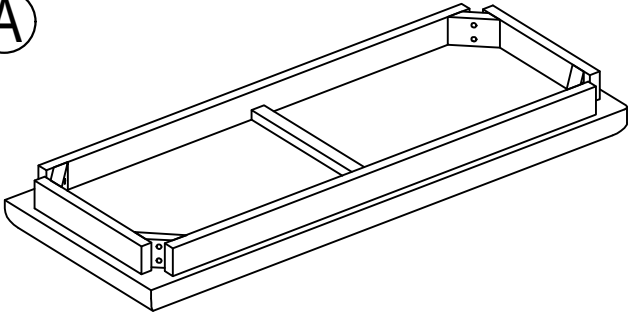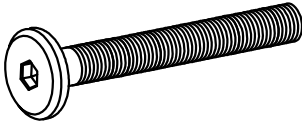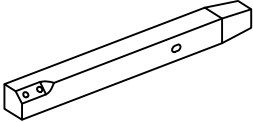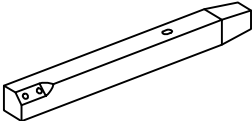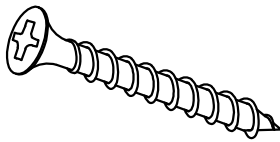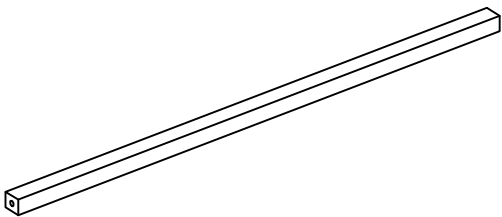
Hardware List

A 	1  Ø 1/4" x 50 mm BOLT (8 pcs)
TOP TABLE (1 pc)	2  Ø 1/4" x 30 mm BOLT (2 pcs)
B 	3  Ø5/16" x 13 mm FLAT WASHER (8 pcs)
LEG LEFT (2 pcs)	4  Ø5/16" x 19 mm LOCK WASHER (8 pcs)
C 	5  4 mm ALLEN KEY (1 pc)
LEG RIGHT (2 pcs)	6  Ø4 x 38 mm WOOD SCREW (4 pcs)
D 	
SHORT STRETCHER (2 pc)	
E 	
LONG STRETCHER (1 pc)	

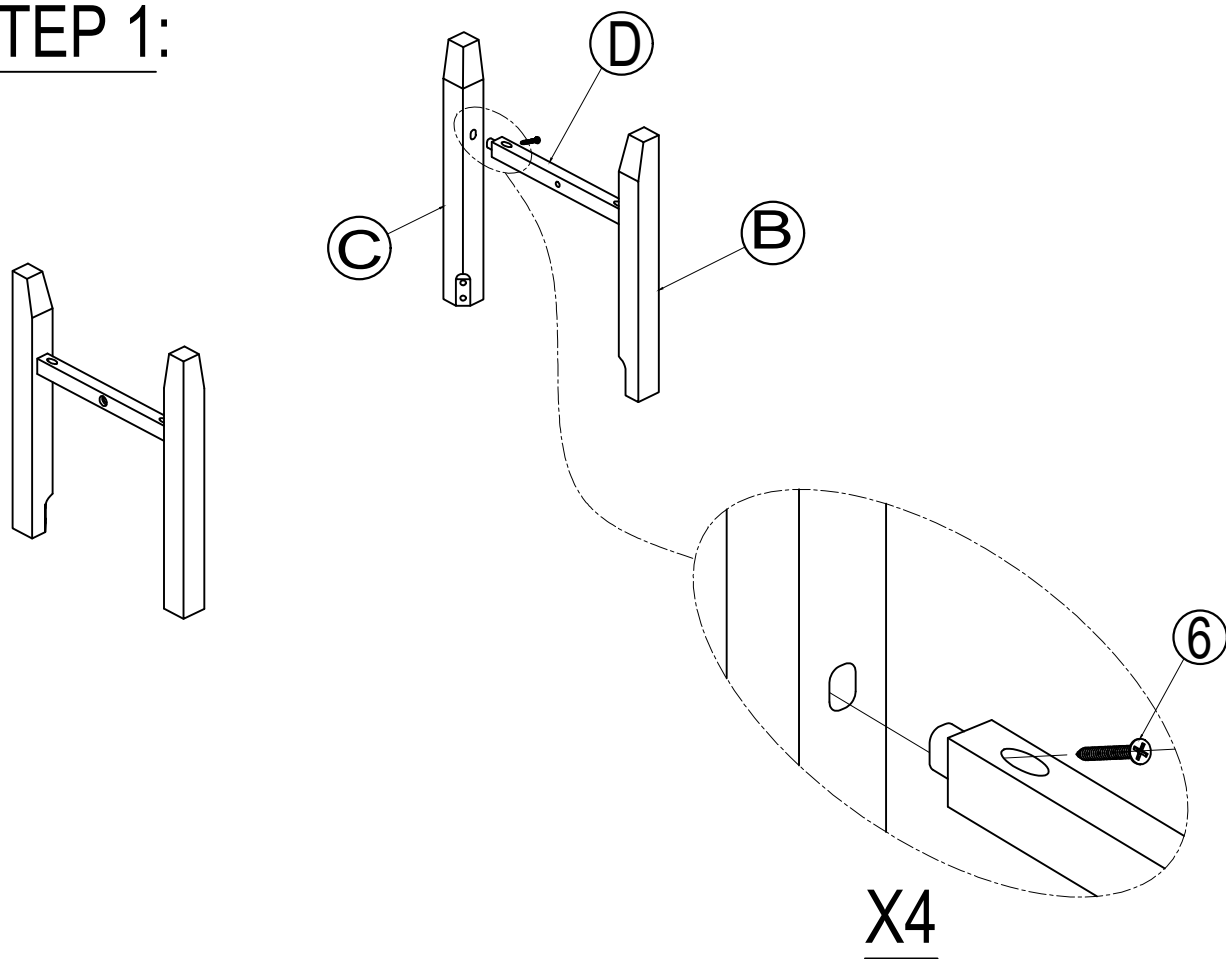STEP 1:



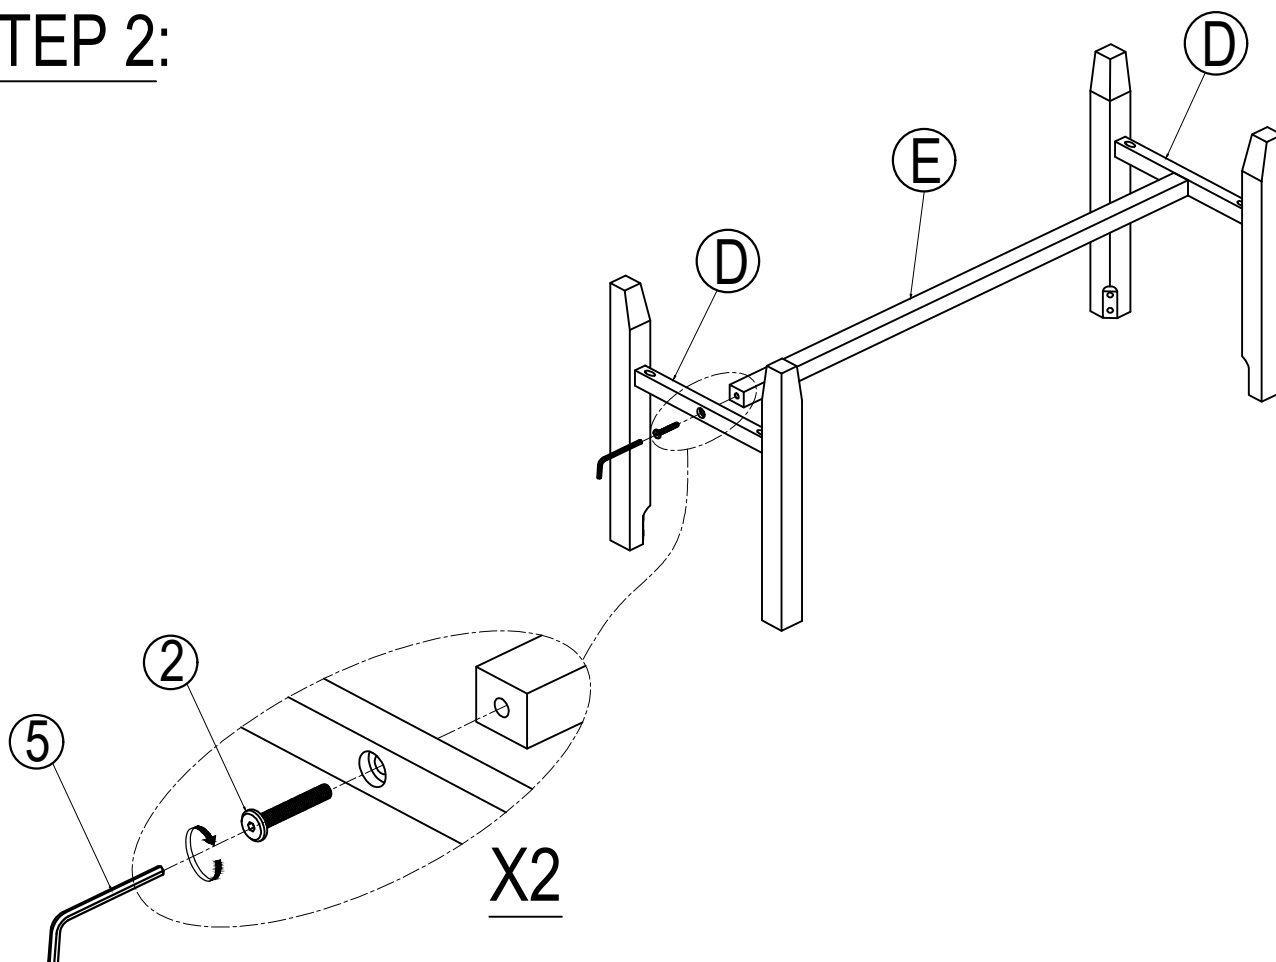STEP 2:



STEP 3:

