


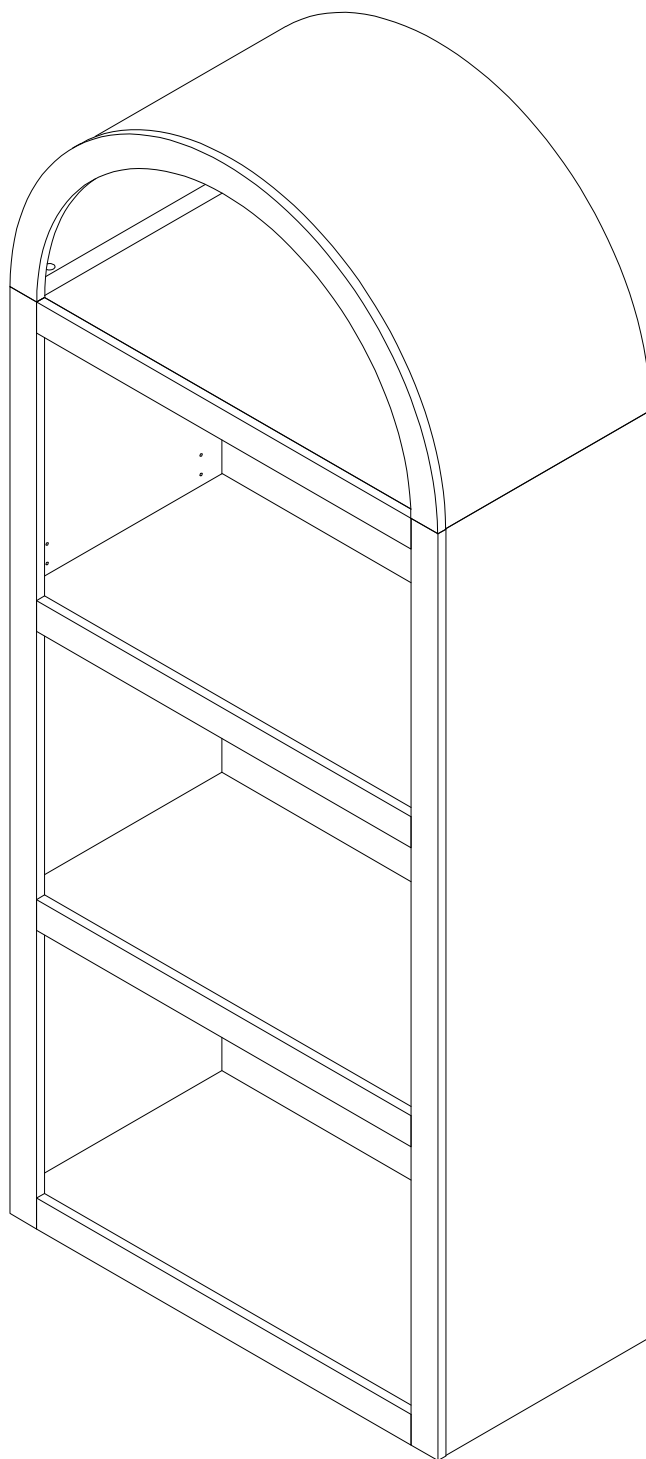

ASSEMBLY INSTRUCTIONS

Bookcase

EEL-7584 / V1.03.04.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome. Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.




Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

A		Screw M3.5 x 15mm	x8
B		Screw M4.7 x 25mm(ZB)	x4
C		Screw M6 x 40mm	x3
D		Wood Dowel Ø6 x 20mm	x2
E		Wood Dowel Ø6 x 35mm	x12
F		Wood Dowel Ø8 x 25mm	x32
G		Wood Dowel Ø8 x 35mm	x2
H		Cam Bolt 20 x 5 mm	x31
J		Cam Lock 15/12	x28
K		Cam Lock 15/10	x3
L		Plastic Leg Stud	x4
M		Shelf Pin	x4
N		Allen Key	x1
P		Backply Stopper	x8
		Tipping Restraint Kit	x1

WHAT YOU NEED:




Phillips Head Screwdriver



Mallet

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

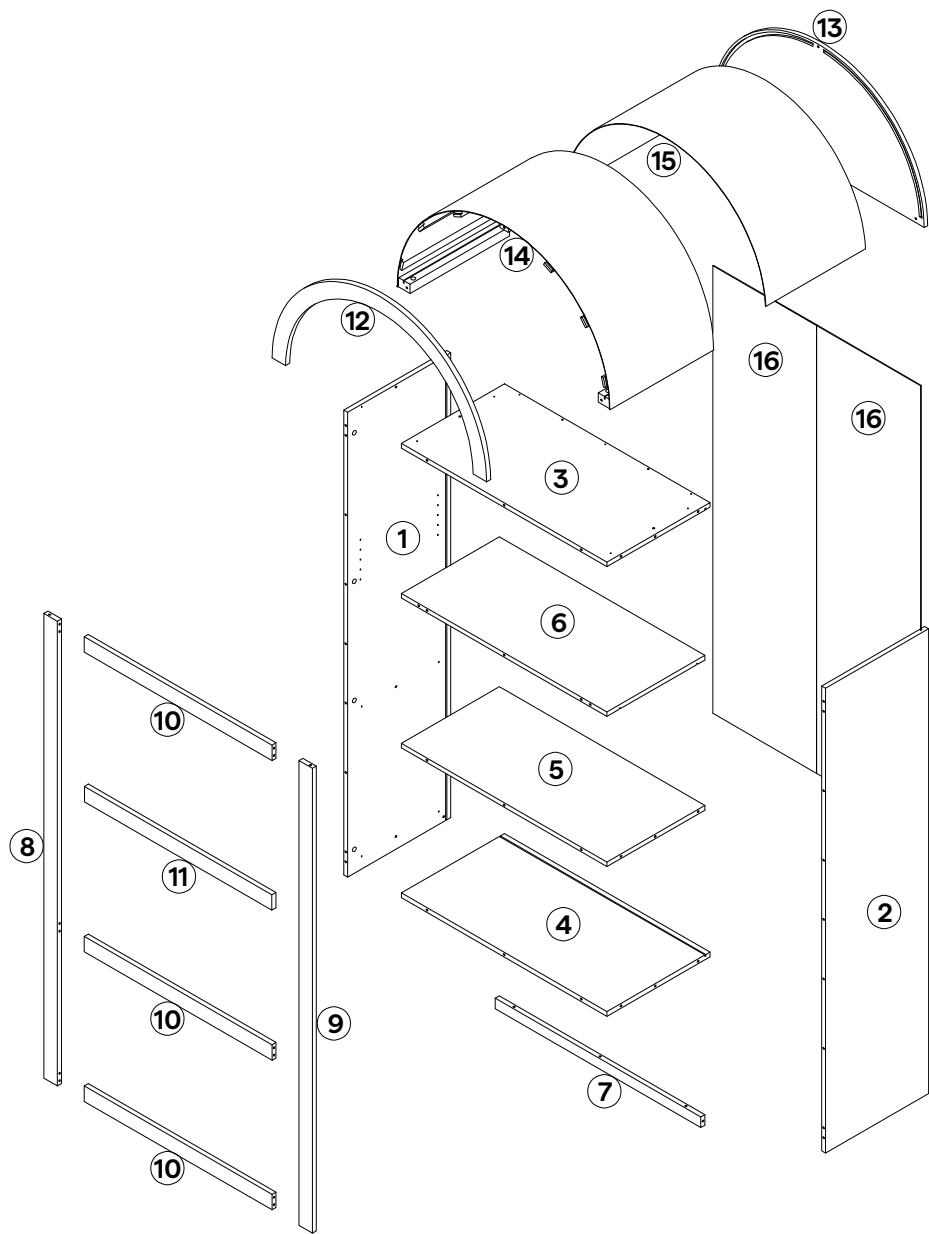

1	Left Side Panel	x1	7	Bottom Support Panel	x1	12	Front Arch Panel	x1
2	Right Side Panel	x1	8	Front Panel Left	x1	13	Back Panel Top	x1
3	Top Shelf Panel	x1	9	Front Panel Right	x1	14	Arch Top Panel	x1
4	Bottom Panel	x1	10	Front Panel	x3	15	Arch Top Panel Inner Layer	x1
5	Fixed Shelf Panel	x1	11	Front Adjustable Shelf Panel	x1	16	Back Panel	x2
6	Adjustable Shelf Panel	x1						

HARDWARE

F Wood Dowel Ø8 x 25mm x10

H Cam Bolt 20 x 5mm x12



COMPONENTS

1 Left Side Panel x1

2 Right Side Panel x1

1.1 Insert **Wood Dowel (F)** into **Left Side Panel (1)** and **Right Side Panel (2)**.

1.2 Insert **Cam Bolt (H)** into **Left Side Panel (1)** and **Right Side Panel (2)** then tighten using screwdriver.

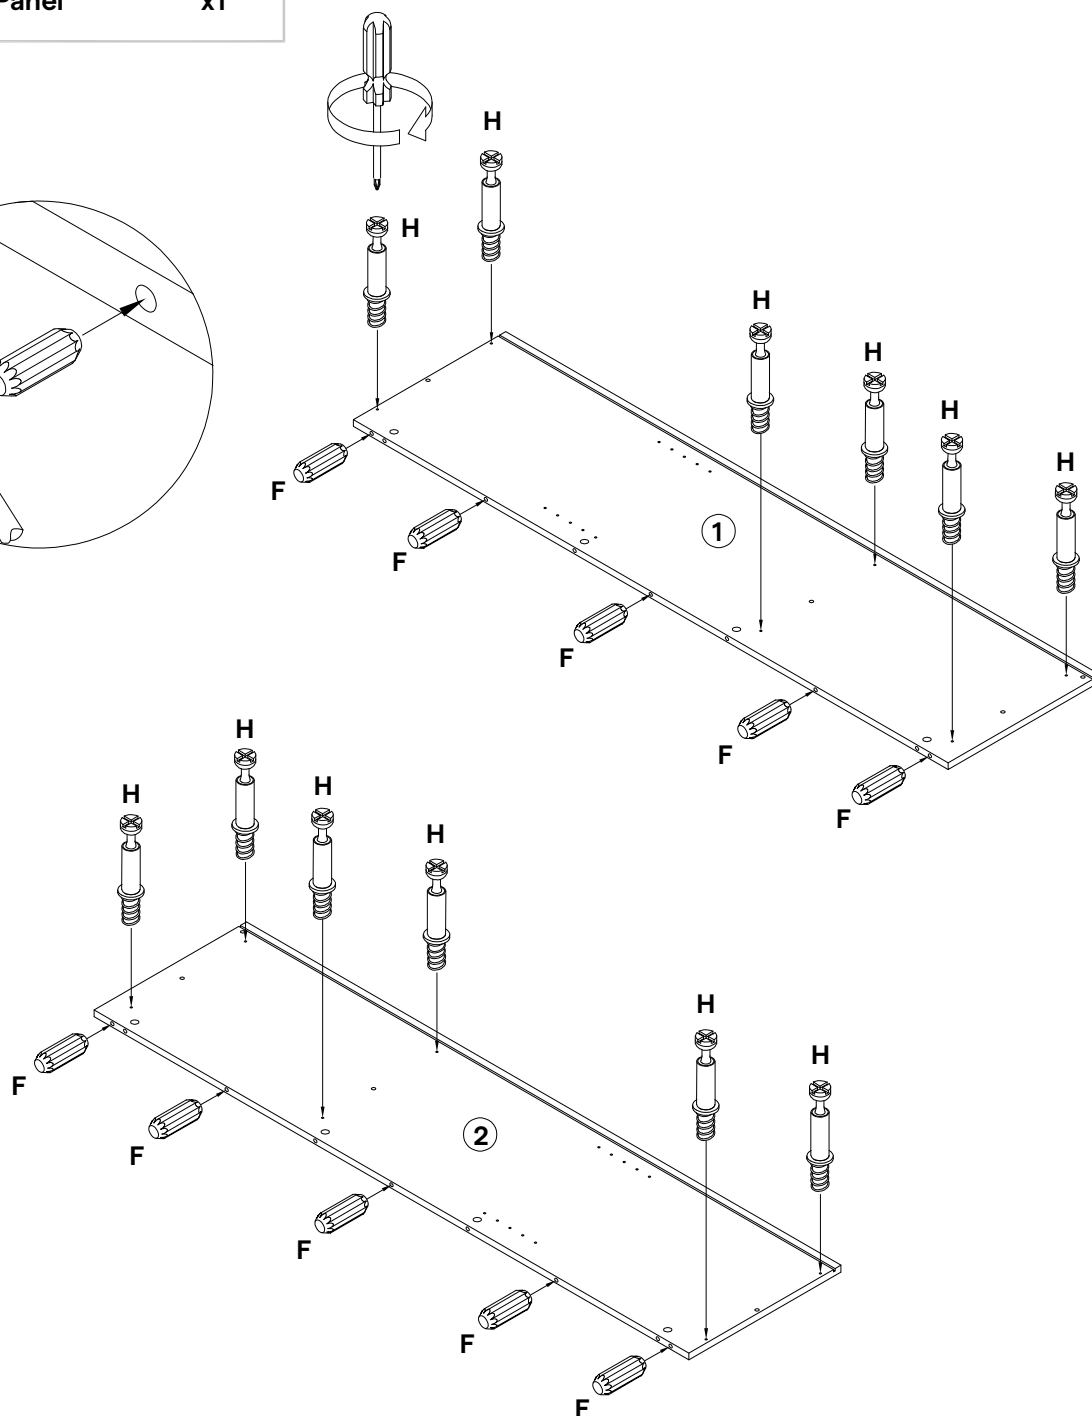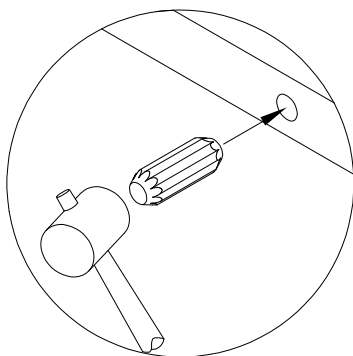

HARDWARE

F Wood Dowel Ø8 x 25mm x17

H Cam Bolt 20 x 5mm x3

COMPONENTS

3 Top Shelf Panel x1






4 Bottom Panel x1

5 Fixed Shelf Panel x1

7 Bottom Support Panel x1

2.1 Insert **Wood Dowel (F)** into **Top Shelf Panel (3)**, **Bottom Panel (4)**, **Fixed Shelf Panel (5)** and **Bottom Support Panel (7)**.


2.2 Insert **Cam Bolt (H)** into **Top Shelf Panel (3)** then tighten using screwdriver.

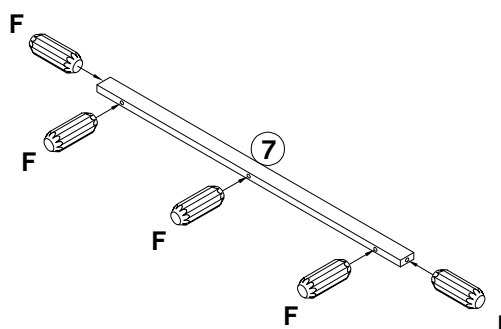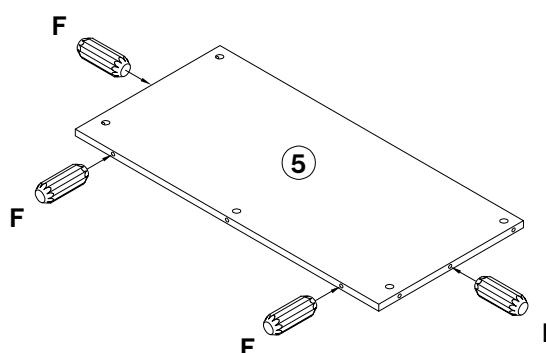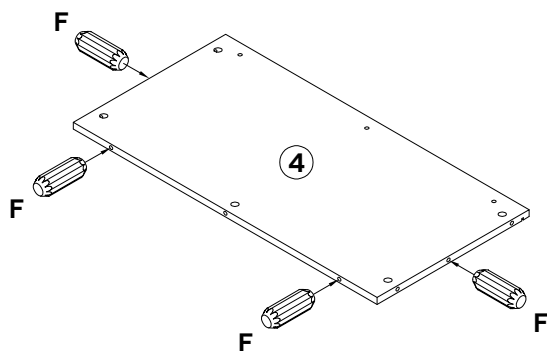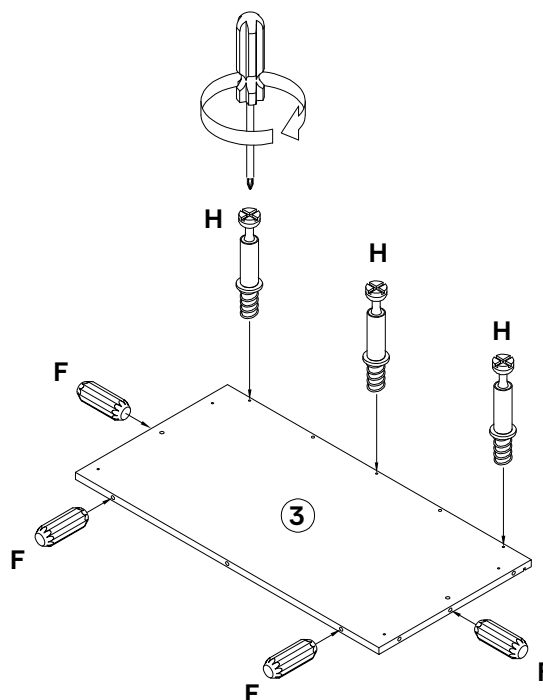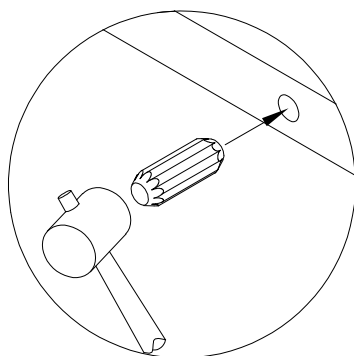

COMPONENTS

- | | |
|-------------------------------|----|
| 4 Bottom Panel | x1 |
| 7 Bottom Support Panel | x1 |

3.1 Connect **Bottom Support Panel (7)** to **Bottom Panel (4)**. Position as shown in the figure.


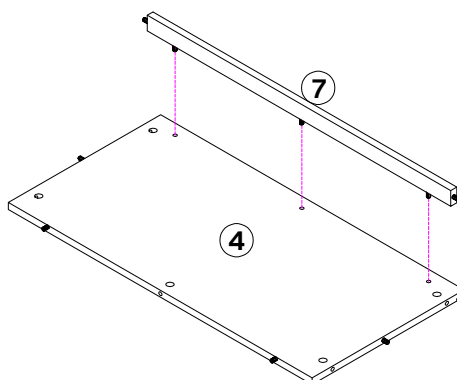
**STEP 04****HARDWARE**

- | | |
|-------------------------|----|
| J Cam Lock 15/12 | x6 |
|-------------------------|----|

COMPONENTS

- | | |
|-------------------------------|----|
| 1 Left Side Panel | x1 |
| 3 Top Shelf Panel | x1 |
| 4 Bottom Panel | x1 |
| 5 Fixed Shelf Panel | x1 |
| 7 Bottom Support Panel | x1 |


4.1 Connect **Top Shelf Panel (3)**, **Bottom Panel (4)**, **Fixed Shelf Panel (5)**, **Bottom Support Panel (7)** to **Left Side Panel (1)** by inserting **Cam Lock (J)** into the corresponding holes then tighten using screwdriver.

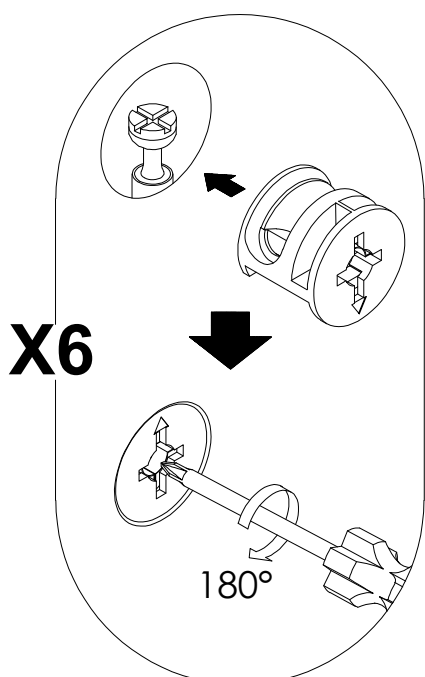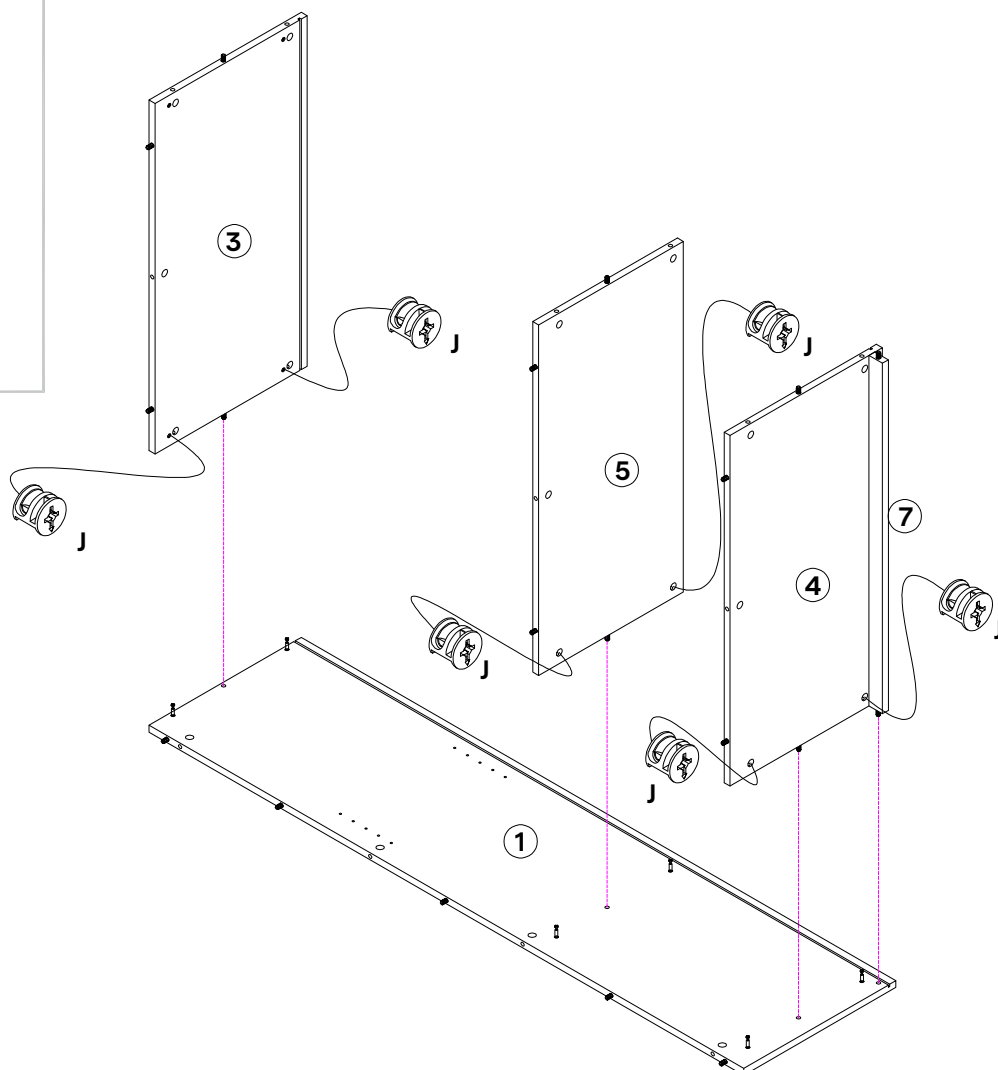

COMPONENTS

16 Back Panel

x2

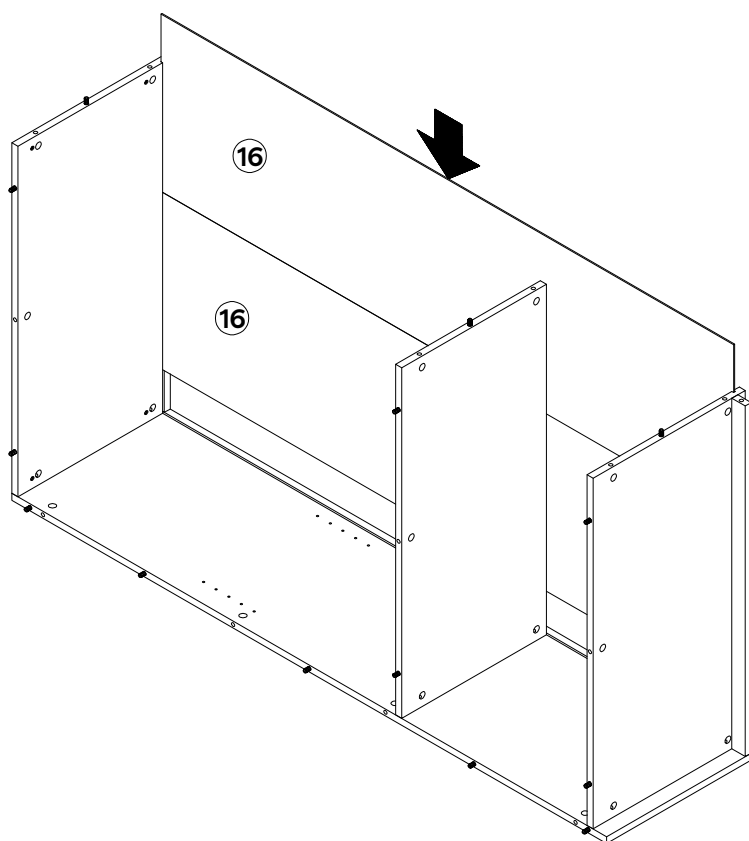5.1 Slot the **Back Panel (16)** into the body.

HARDWARE

J Cam Lock 15/12 x6

COMPONENTS

2 Right Side Panel x1



3 Top Shelf Panel x1

4 Bottom Panel x1

5 Fixed Shelf Panel x1

7 Bottom Support Panel x1

6.1 Connect **Right Side Panel (2)** to **Top Shelf Panel (3)**, **Bottom Panel (4)**, **Fixed Shelf Panel (5)**, **Bottom Support Panel (7)** by inserting **Cam Lock (J)** into the corresponding holes, then tighten using screwdriver.

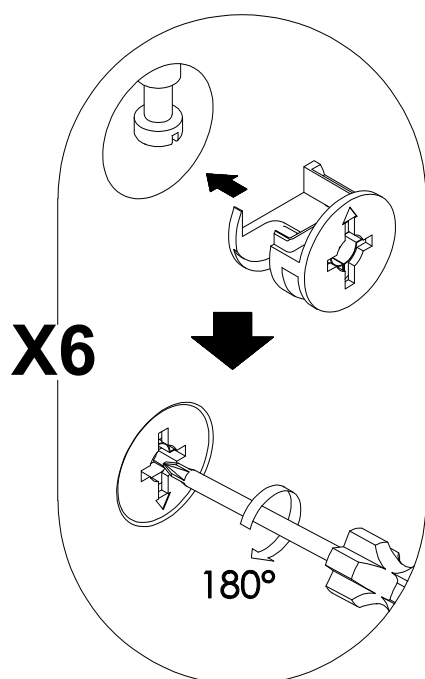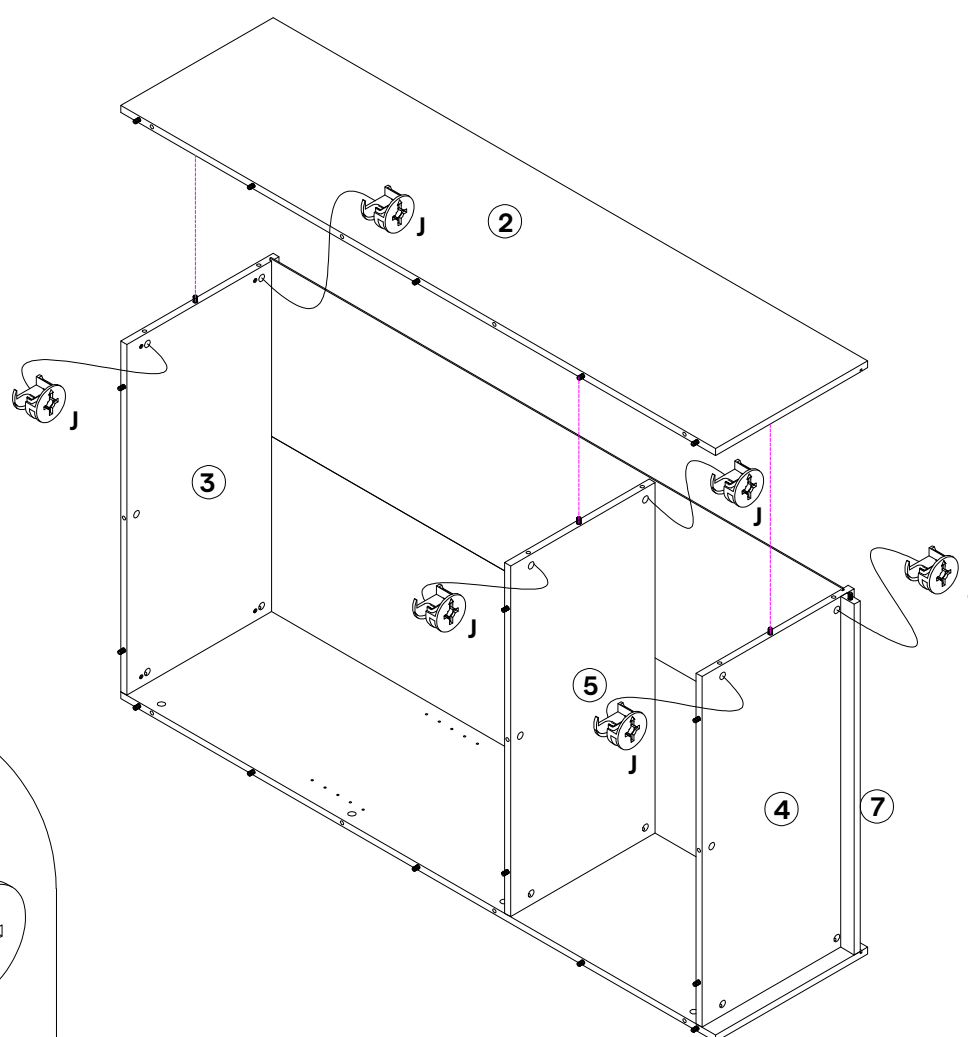

HARDWARE


L Plastic Leg Stud x4



COMPONENTS

1 Left Side Panel x1

2 Right Side Panel x1

7.1 Insert **Plastic Leg Stud (L)** into **Left Side Panel (1)** and **Right Side Panel (2)**. Position as shown in the figure.

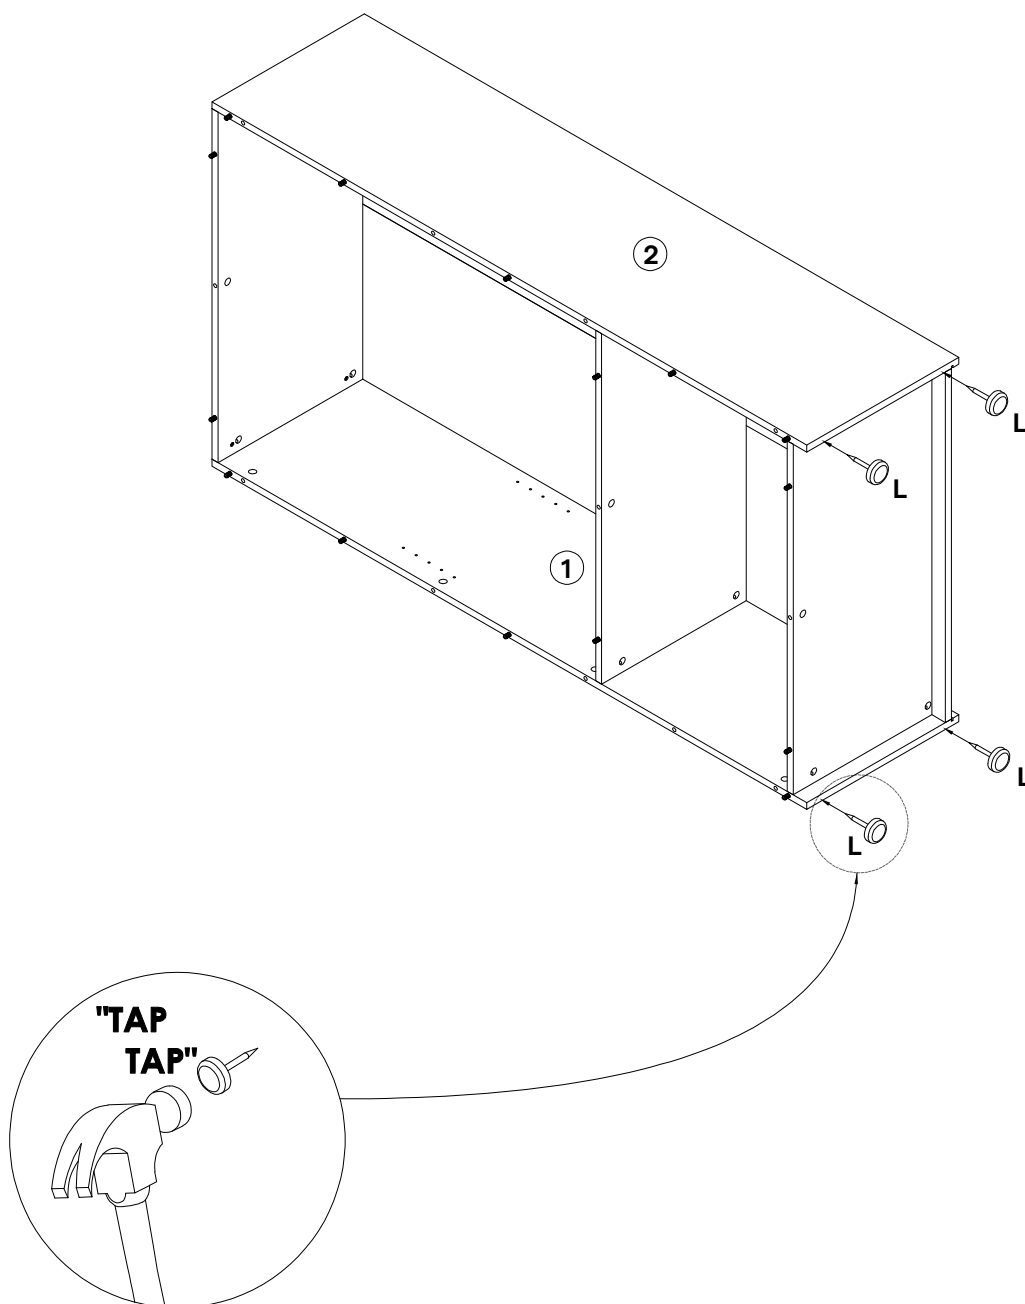


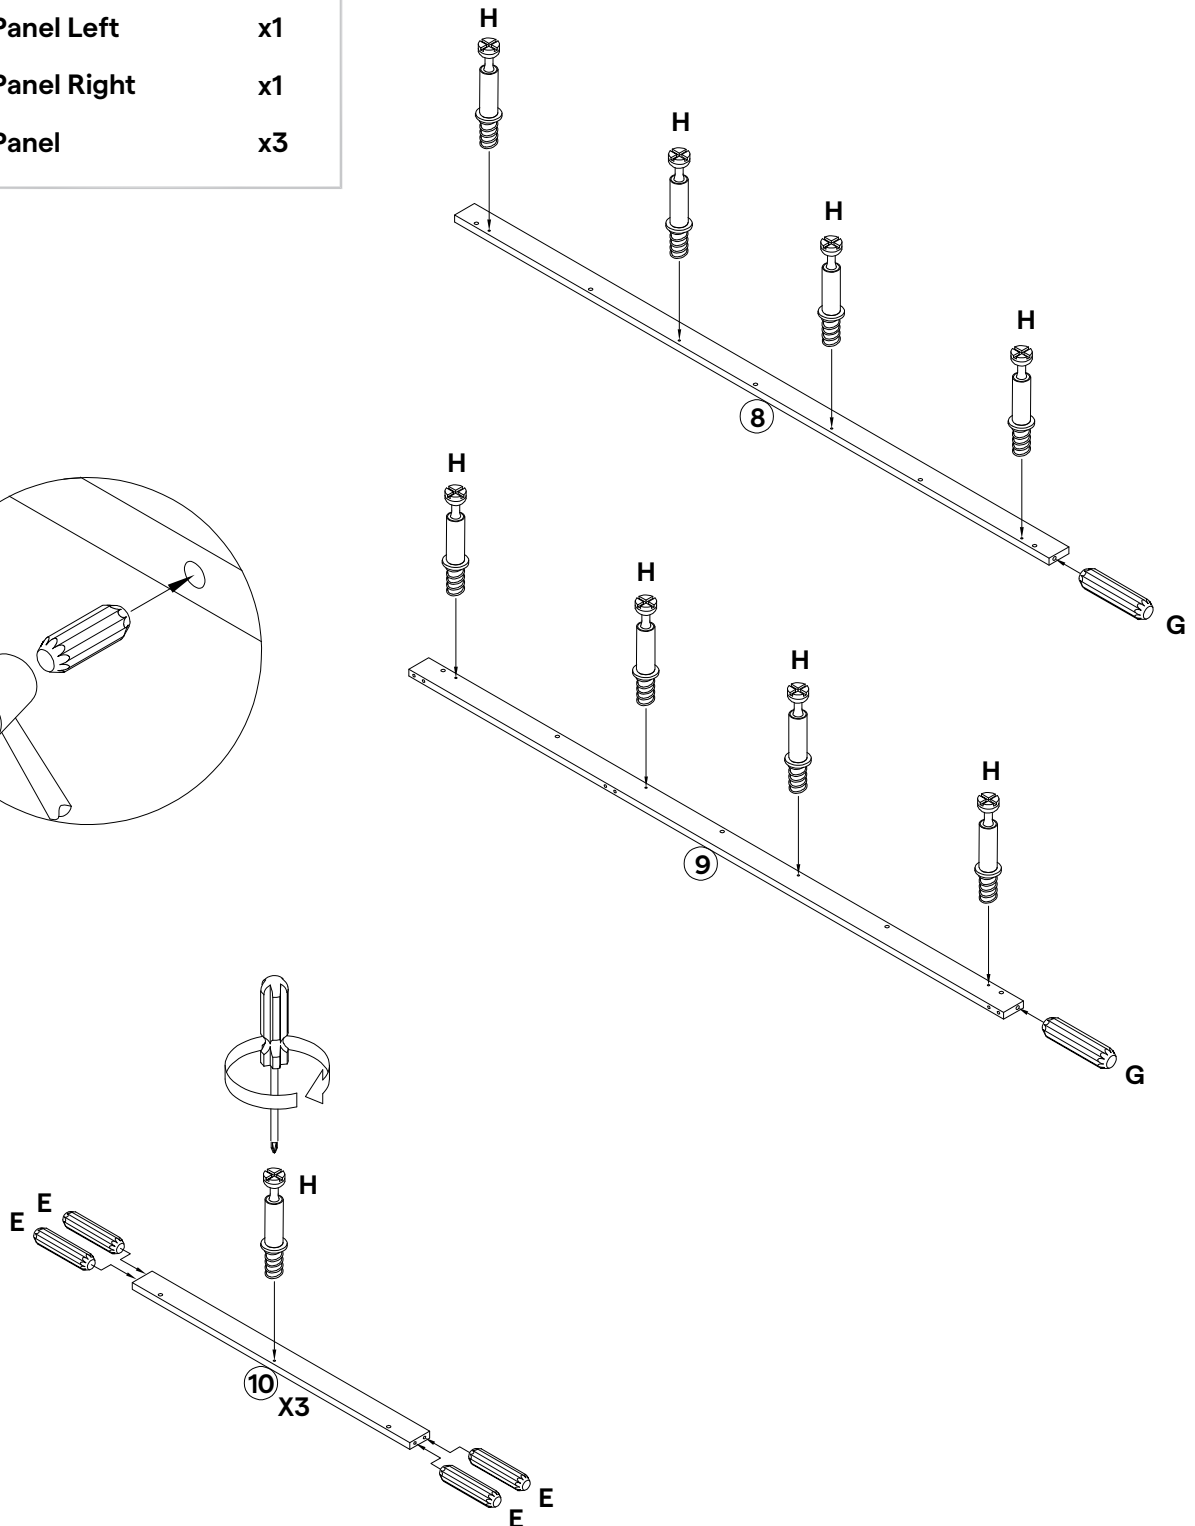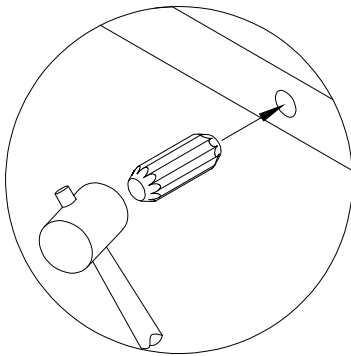HARDWARE**E** Wood Dowel Ø6 x 35mm x12**G** Wood Dowel Ø8 x 35mm x2**H** Cam Bolt 20 x 5mm x11**COMPONENTS****8** Front Panel Left x1**9** Front Panel Right x1**10** Front Panel x38.1 Insert **Wood Dowel (E)** into **Front Panel (10)**.8.2 Insert **Wood Dowel (G)** into **Front Panel Left (8)** and **Front Panel Right (9)**.8.3 Insert **Cam Bolt (H)** into **Front Panel Left (8)**, **Front Panel Right (9)** and **Front Panel (10)**, then tighten using screwdriver.

COMPONENTS

8	Front Panel Left	x1
9	Front Panel Right	x1
10	Front Panel	x3

9.1 Connect **Front Panel Left (8)** and **Front Panel Right (9)** to **Front Panel (10)**.

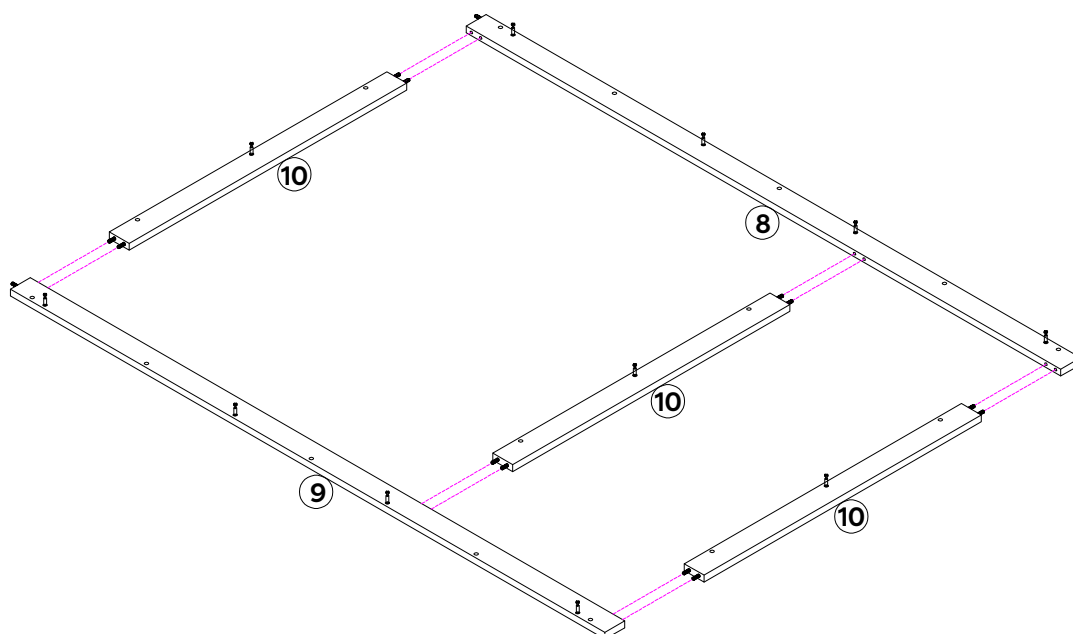

HARDWARE

J Cam Lock 15/12 x11

COMPONENTS

1 Left Side Panel x1

2 Right Side Panel x1

3 Top Shelf Panel x1

4 Bottom Panel x1



5 Fixed Shelf Panel x1

8 Front Panel Left x1

9 Front Panel Right x1

10 Front Panel x3

10.1 Connect **Front Panel Left (8)**, **Front Panel Right (9)** and **Front Panel (10)** to **Left Side Panel (1)**, **Right Side Panel (2)**, **Top Shelf Panel (3)**, **Bottom Panel (4)** and **Fixed Shelf Panel (5)** by inserting **Cam Lock (J)** into the corresponding holes, then tighten using screwdriver.

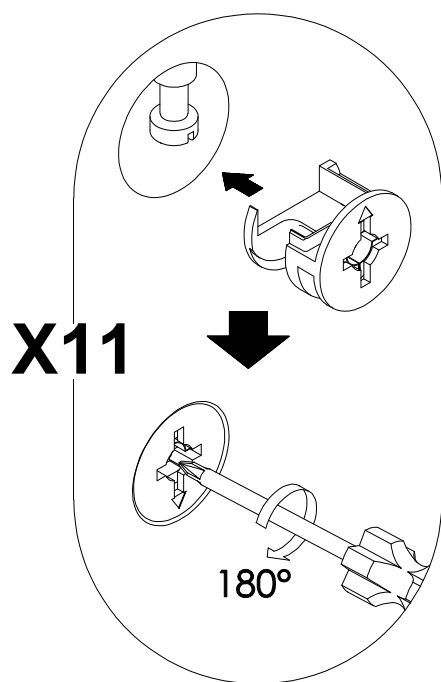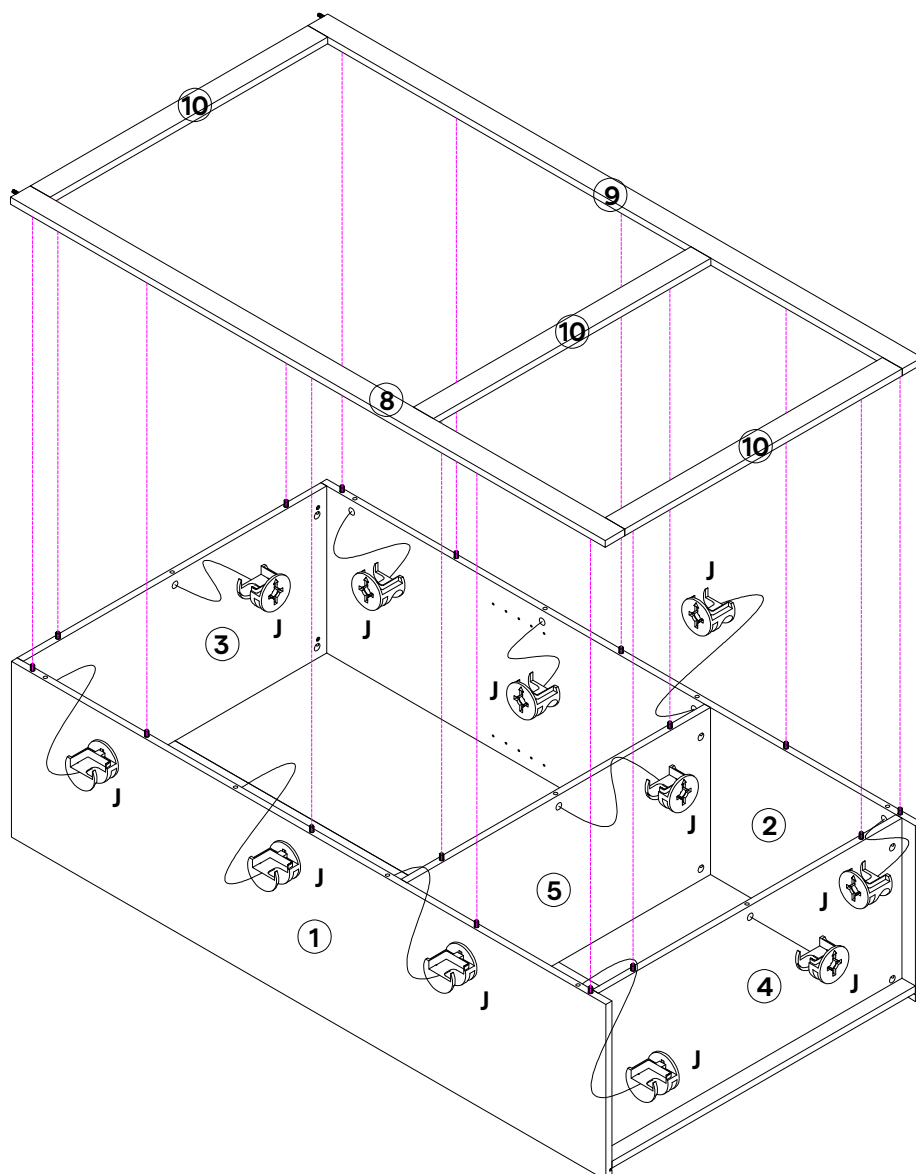

HARDWARE




- D** Wood Dowel Ø6 x 20mm x2
H Cam Bolt 20 x 5 mm x3

COMPONENTS

- 12** Front Arch Panel x1
13 Back Panel Top x1

11.1 Insert **Wood Dowel (D)** into **Back Panel Top (13)**.

11.2 Insert **Cam Bolt (H)** into **Front Arch Panel (12)** then tighten using screwdriver.

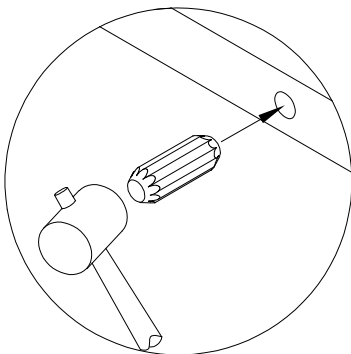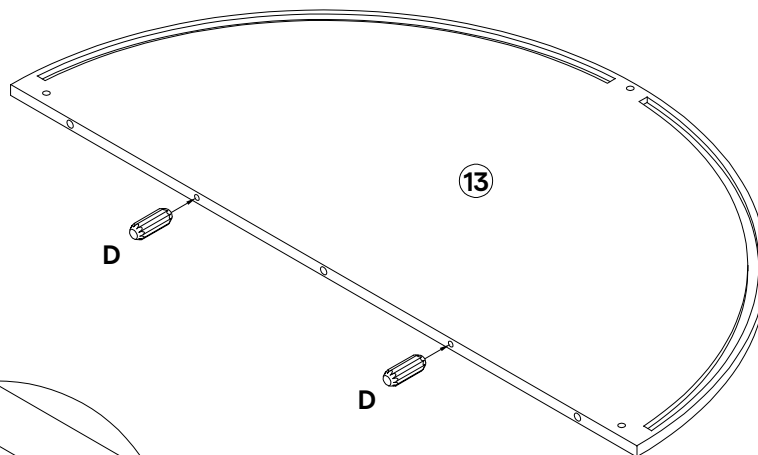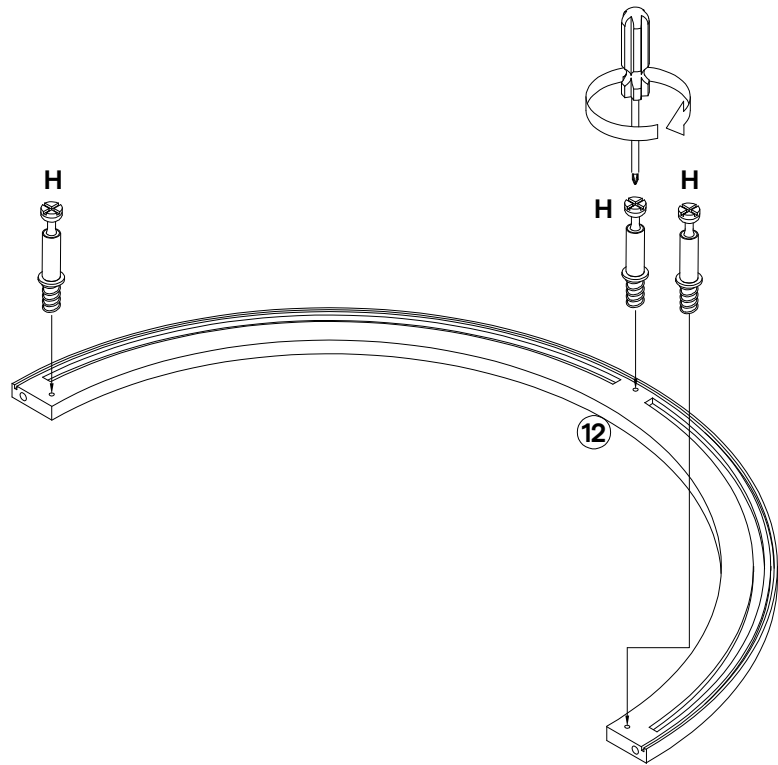

HARDWARE


J Cam Lock 15/12 x3

COMPONENTS

12 Front Arch Panel x1

14 Arch Top Panel x1

12.1 Connect **Arch Top Panel (14)** to **Front Arch Panel (12)** by inserting **Cam Lock (J)** into the corresponding holes then tighten using screwdriver.

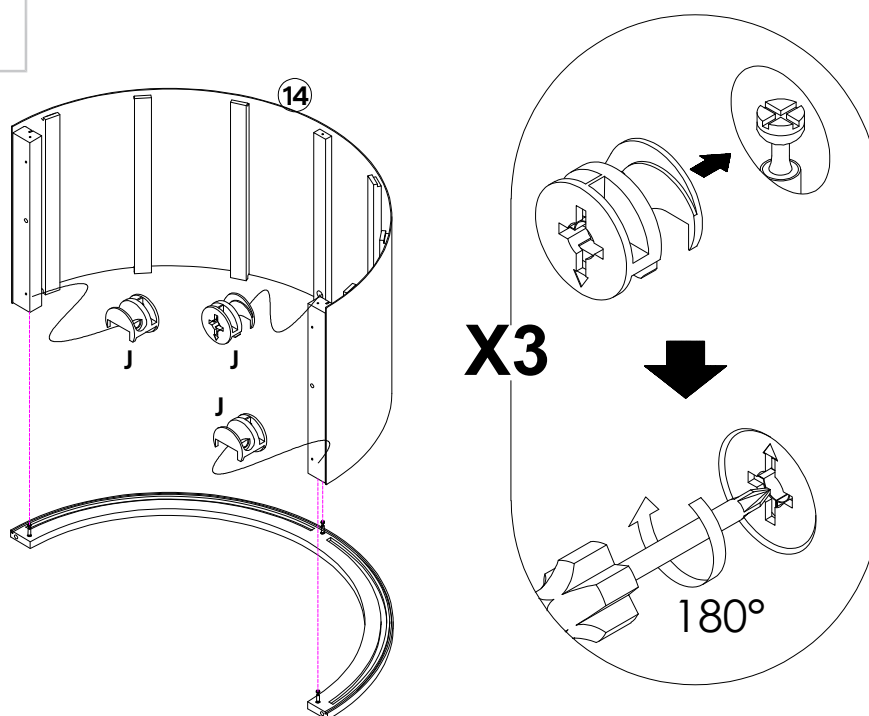


STEP 13

COMPONENTS

15 Arch Top Panel Inner Layer x1

13.1 Slot the **Arch Top Panel Inner Layer (15)** in. Position as shown in the figure.

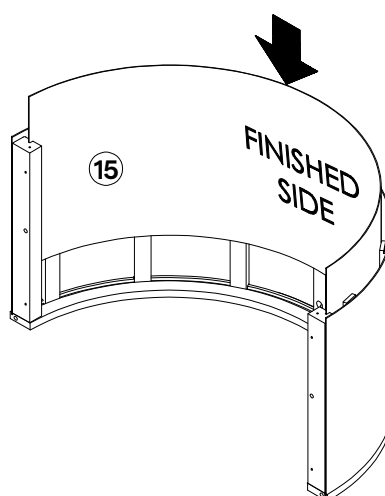

HARDWARE

C Screw M6 x 40mm x3

COMPONENTS


13 Back Panel Top x1

14 Arch Top Panel x1

TOOLS

N Allen Key

14.1 Secure **Back Panel Top (13)** to **Arch Top Panel (14)** with **Screw (C)** then tighten using the provided **Allen Key (N)**.

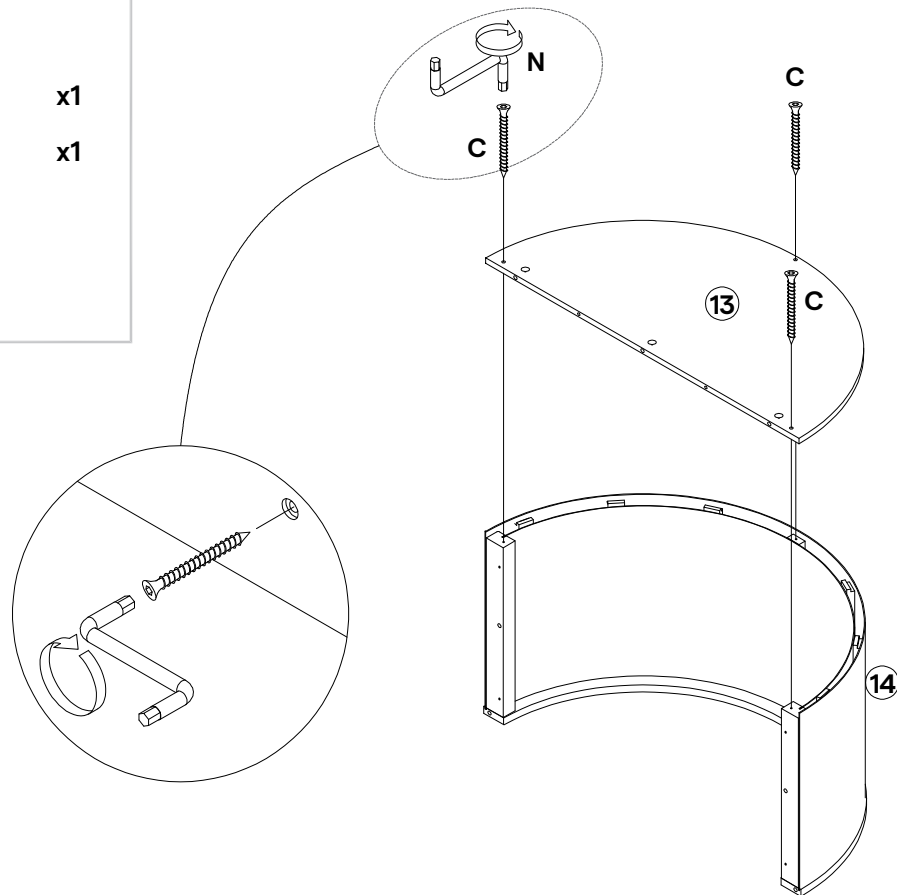

STEP 15



HARDWARE

F Wood Dowel Ø8 x 25mm x2

COMPONENTS

14 Arch Top Panel x1

15.1 Insert **Wood Dowel (F)** into **Arch Top Panel (14)**.

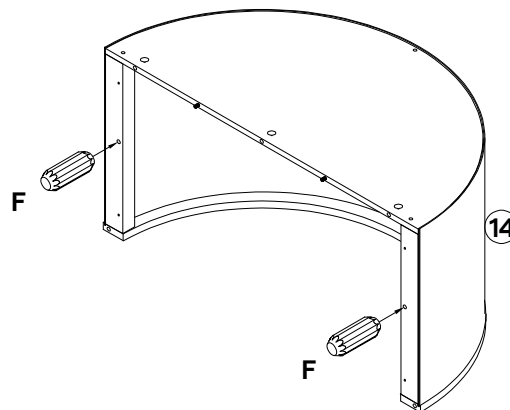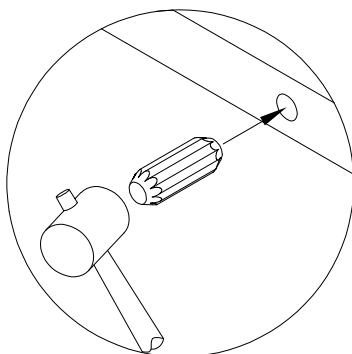

HARDWARE

K Cam Lock 15/10 **x3**

COMPONENTS

3 Top Shelf Panel **x1**

8 Front Panel Left **x1**



9 Front Panel Right **x1**

12 Front Arch Panel **x1**

13 Back Panel Top **x1**


14 Arch Top Panel **x1**

16.1 Connect **Front Arch Panel (12)**, **Back Panel Top (13)** and **Arch Top Panel (14)** to **Top Shelf Panel (3)**, **Front Panel Left (8)** and **Front Panel Right (9)** by inserting **Cam Lock (K)** into the corresponding holes, then tighten using screwdriver.

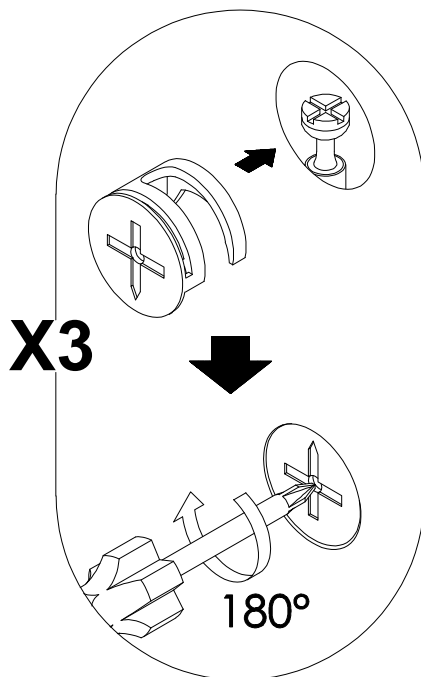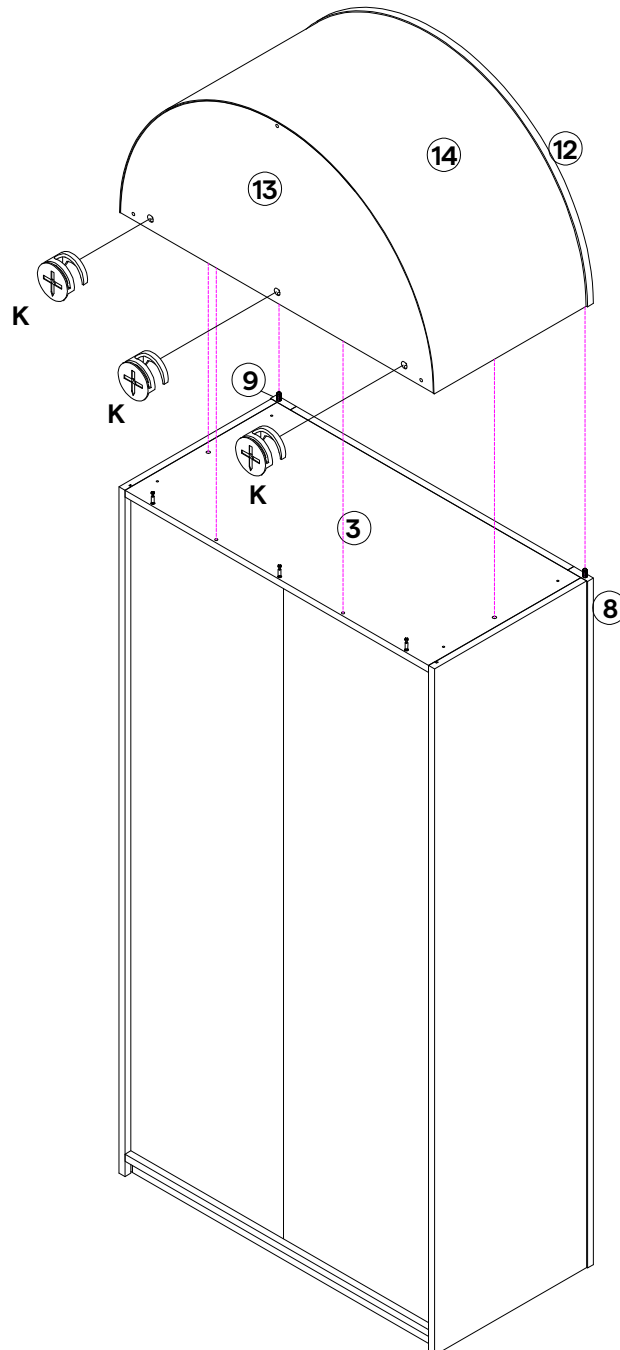

HARDWARE**B** Screw 4.7 x 25mm (ZB) x4**COMPONENTS****3** Top Shelf Panel x1**14** Arch Top Panel x1

17.1 Secure Top **Shelf Panel (3)** to **Arch Top Panel (14)** with **Screw (B)** then tighten using screwdriver.

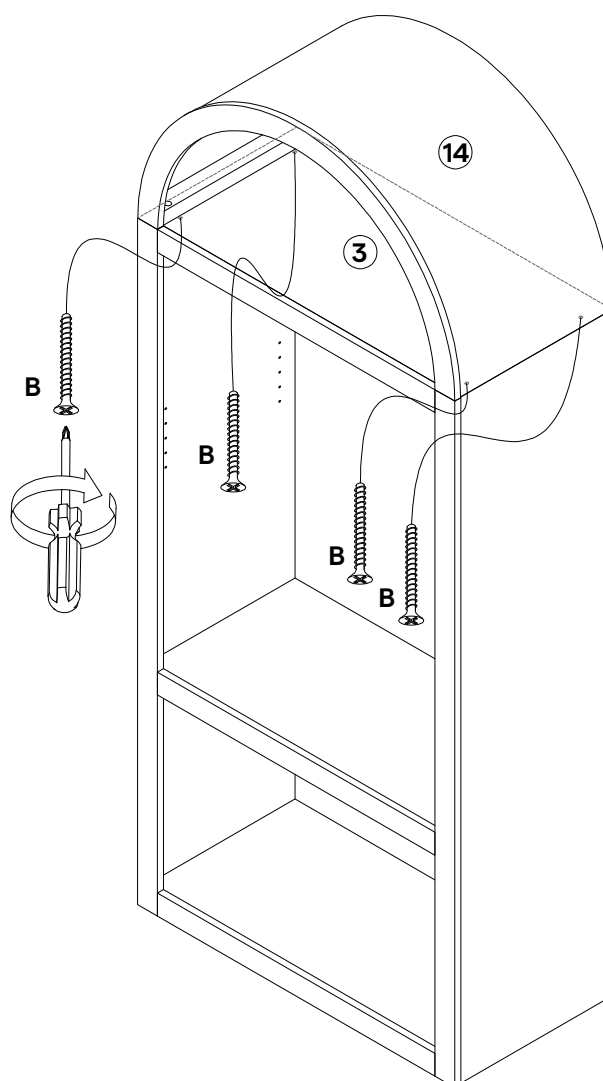

HARDWARE

F Wood Dowel Ø8 x 25mm x3

H Cam Bolt 20 x 5mm x2


COMPONENTS

6 Adjustable Shelf Panel x1

11 Front Adjustable Shelf Panel x1

18.1 Insert **Wood Dowel (F)** into **Adjustable Shelf Panel (6)**.

18.2 Insert **Cam Bolt (H)** into **Front Adjustable Shelf Panel (11)** then tighten using screwdriver.

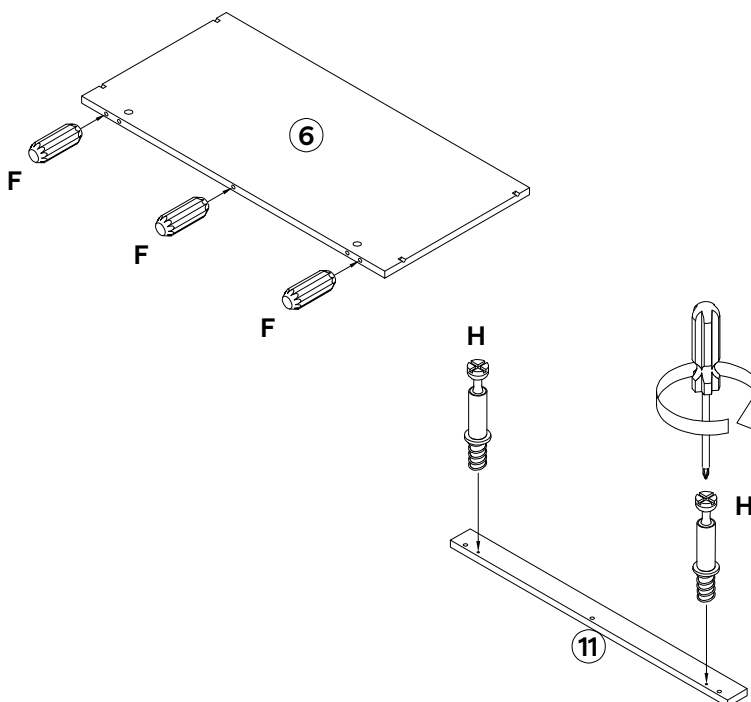

STEP 19

HARDWARE


J Cam Lock 15/12 x2

COMPONENTS

6 Adjustable Shelf Panel x1

11 Front Adjustable Shelf Panel x1

19.1 Connect **Front Adjustable Shelf Panel (11)** to **Adjustable Shelf Panel (6)** by inserting **Cam Lock (J)** into the corresponding holes then tighten using screwdriver.

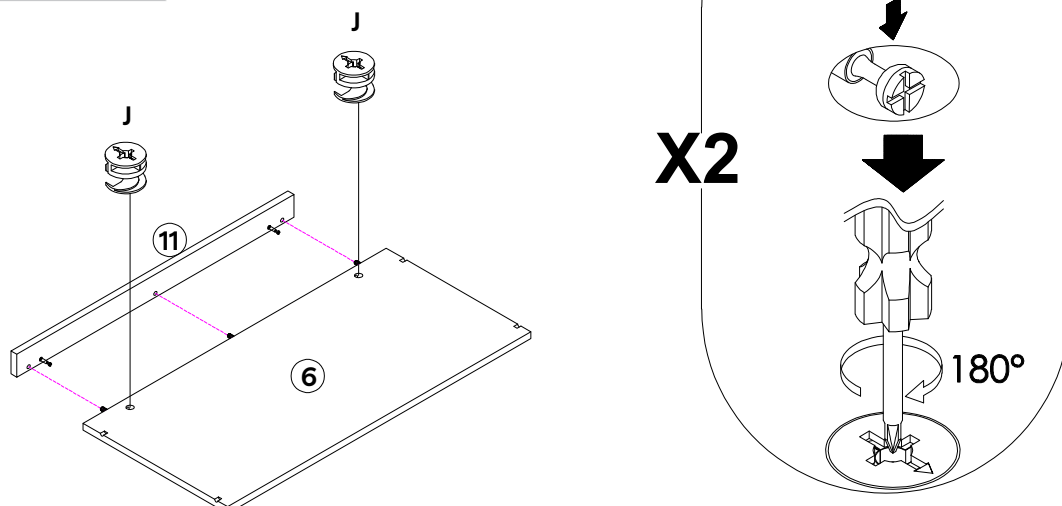

HARDWARE

M Shelf Pin **x4**

COMPONENTS



1 Left Side Panel **x1**

2 Right Side Panel **x1**

6 Adjustable Shelf Panel **x1**

11 Front Adjustable Shelf Panel **x1**

20.1 Insert **Shelf Pin (M)** into **Left Side Panel (1)** and **Right Side Panel (2)** then insert **Adjustable Shelf Panel (6)** and **Front Adjustable Shelf Panel (11)** into the body.

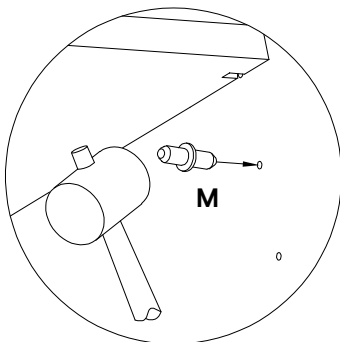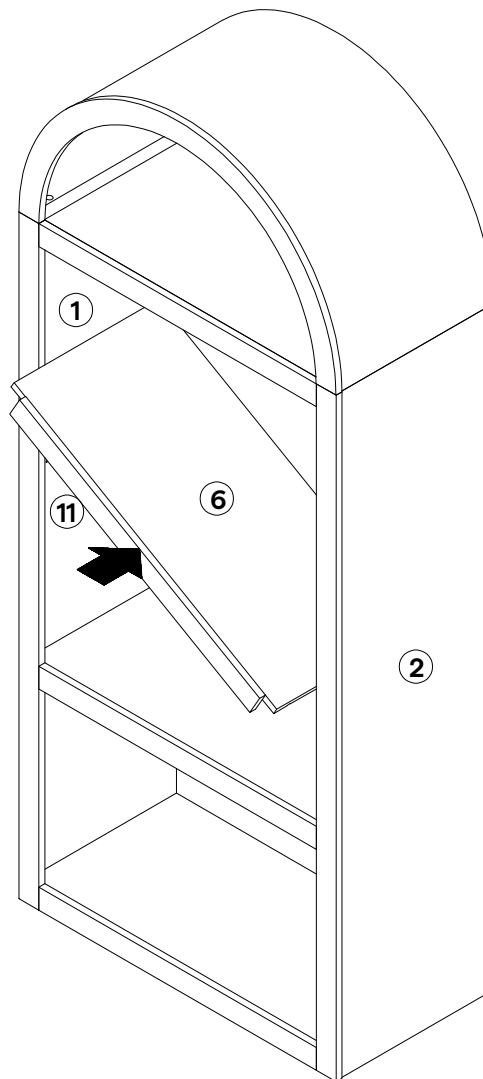


HARDWARE

- A** Screw M3.5 x 15mm x8
- P** Backply Stopper x8

COMPONENTS

- 16** Back Panel x2

21.1 Attach **Backply Stopper (P)** to the back side of **Back Panel (16)** using **Screw (A)** then tighten using screwdriver.

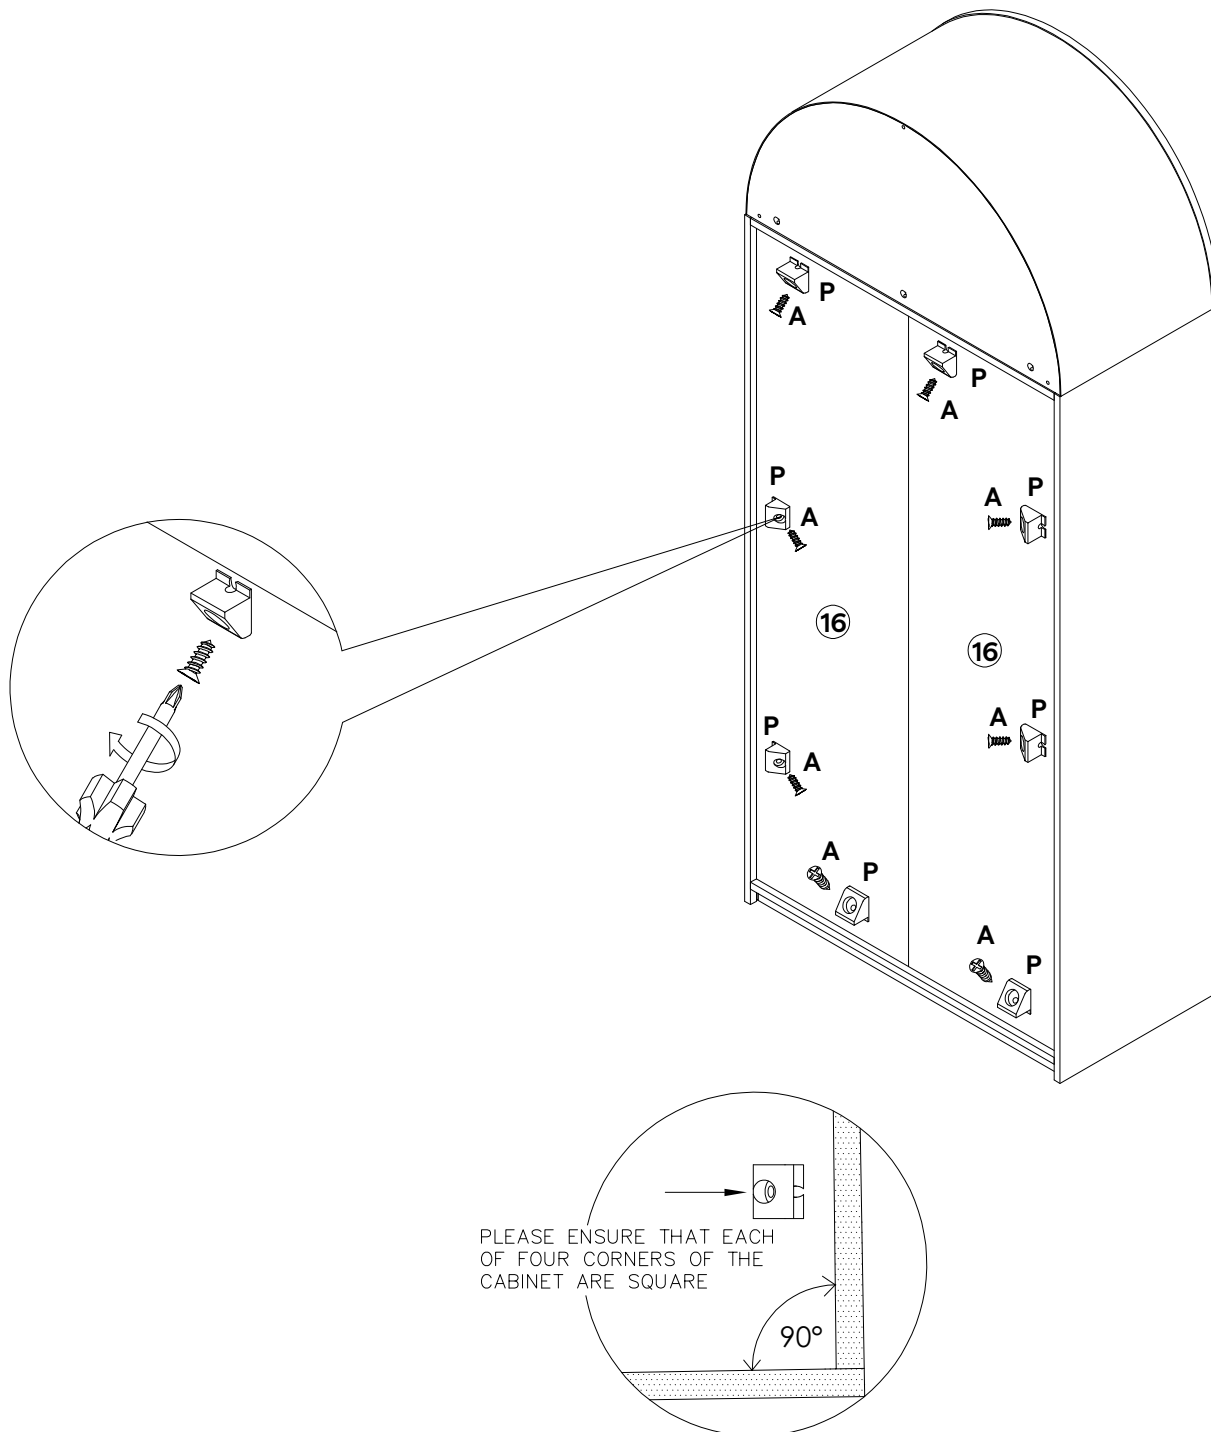

Great job!

Your bookcase is complete.

CARING FOR YOUR ITEM


- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

Max 35Kgs/77Lbs

Max 35Kgs/77Lbs

Max 35Kgs/77Lbs

Max 35Kgs/77Lbs

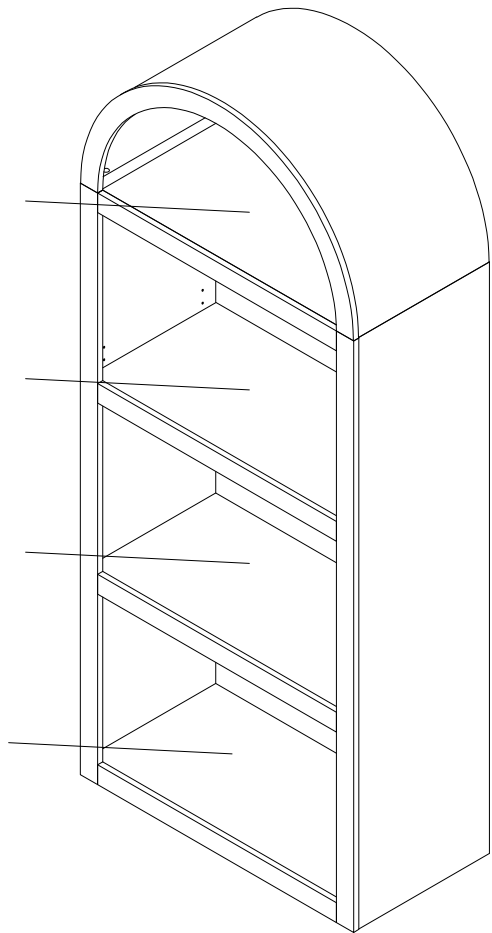

CONNECT WITH US!

Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.

modway





Questions? Contact us!

609.256.9000
cs@modway.com

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

This tipping restraint is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

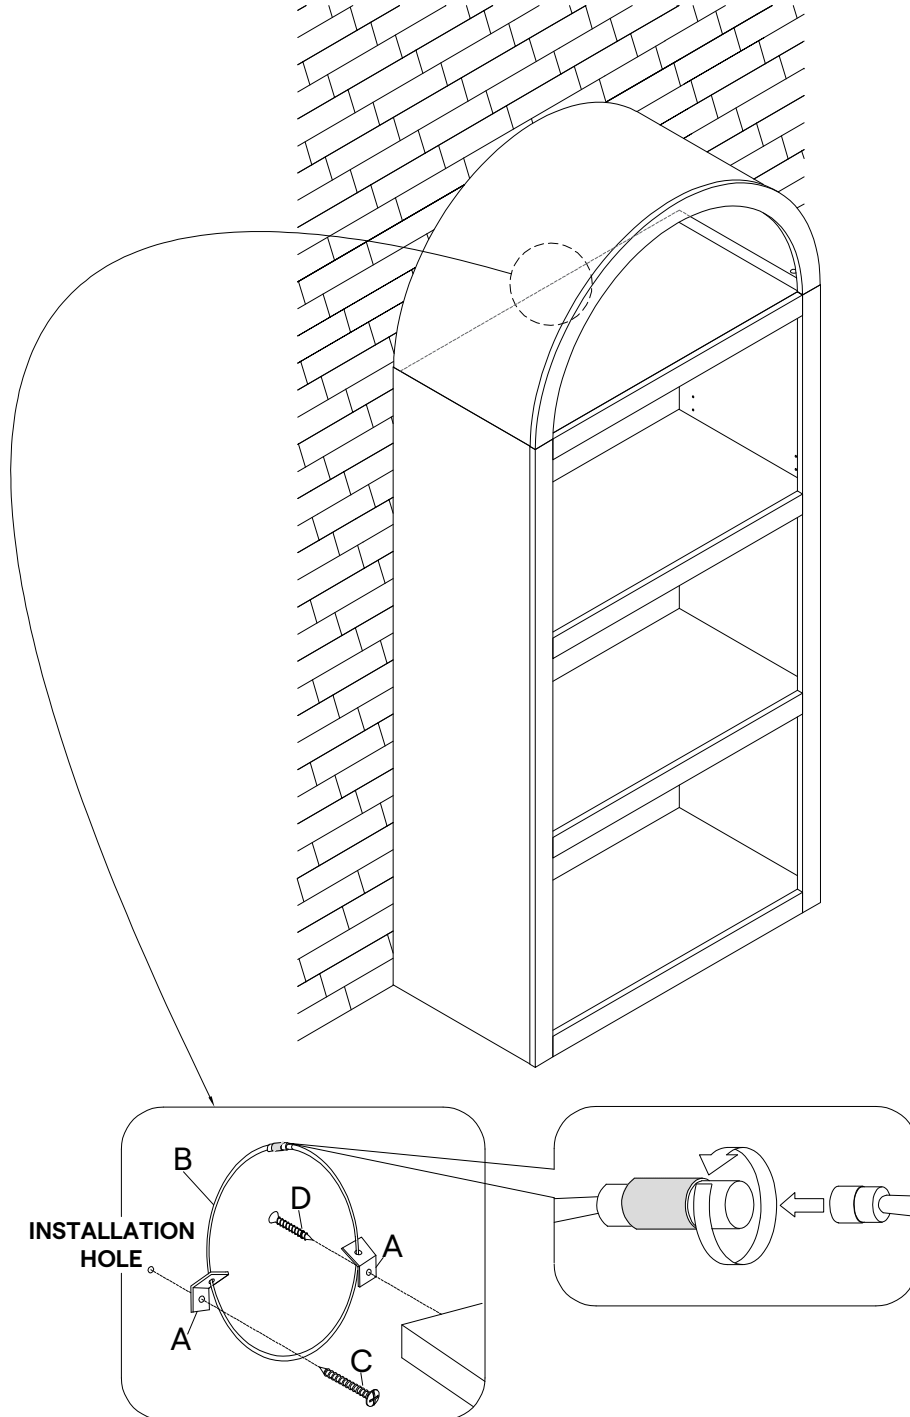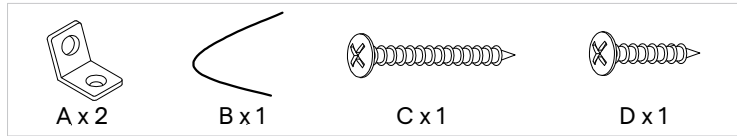

Installation Instructions :

1. Determine where the furniture is to be placed and find the center line of a wooden stud using a stud finder.
2. Drill a 1/8" pilot hole on the wooden stud approximately 3" below the height of unit top.
3. Attach one bracket (A) securely with screw (C) into the pilot hole on the wall.
4. Position the furniture in place and attach the other bracket (A) with screw (D) to the back edge of unit top in line with the bracket (A) on the wall.
5. Put the male end of the steel cable (B) through each bracket. Securely connect both ends together by turning the female connector clockwise.