



DESIGN

PURCHASE

CONSTRUCT

ENJOY

Installation Instructions,
56667 T-Tie 4" Plate (TTP-LS-4)
51767 T-Tie 4" Plate (TTP-IW-4)

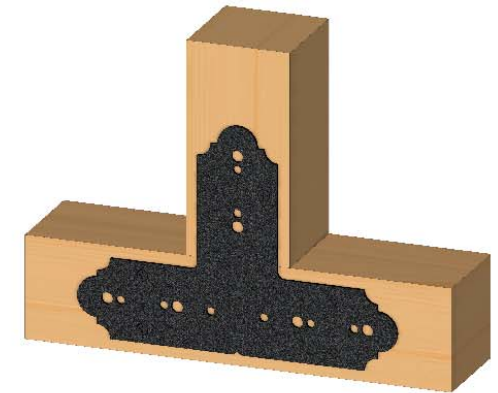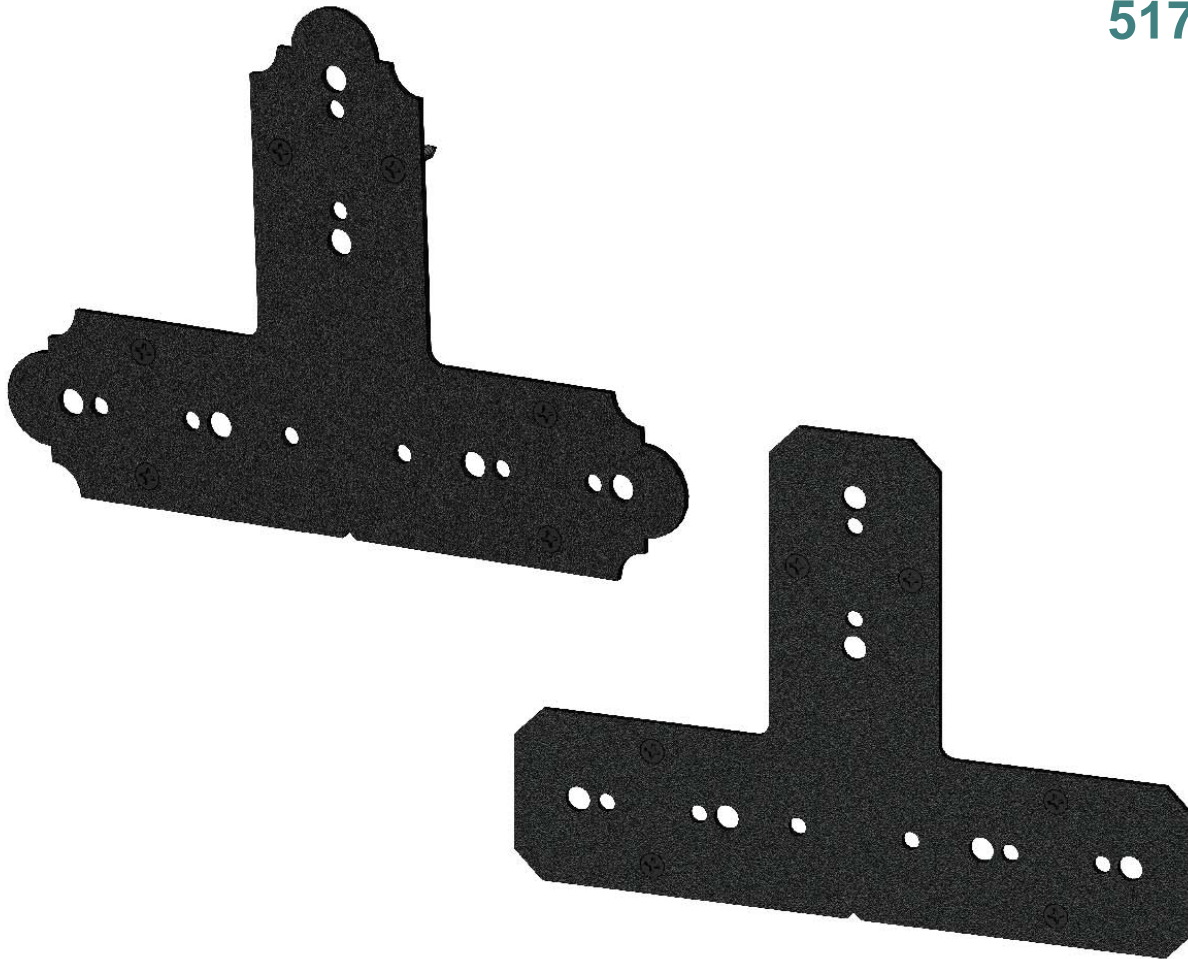

Typical Installation
Laredo Sunset shown




OZCO BUILDING PRODUCTS



Printing Documents from ISSUU

Unfortunately, there is currently no way to print content directly through issuu. To print a publication, you will need to download it and print it from your computer.

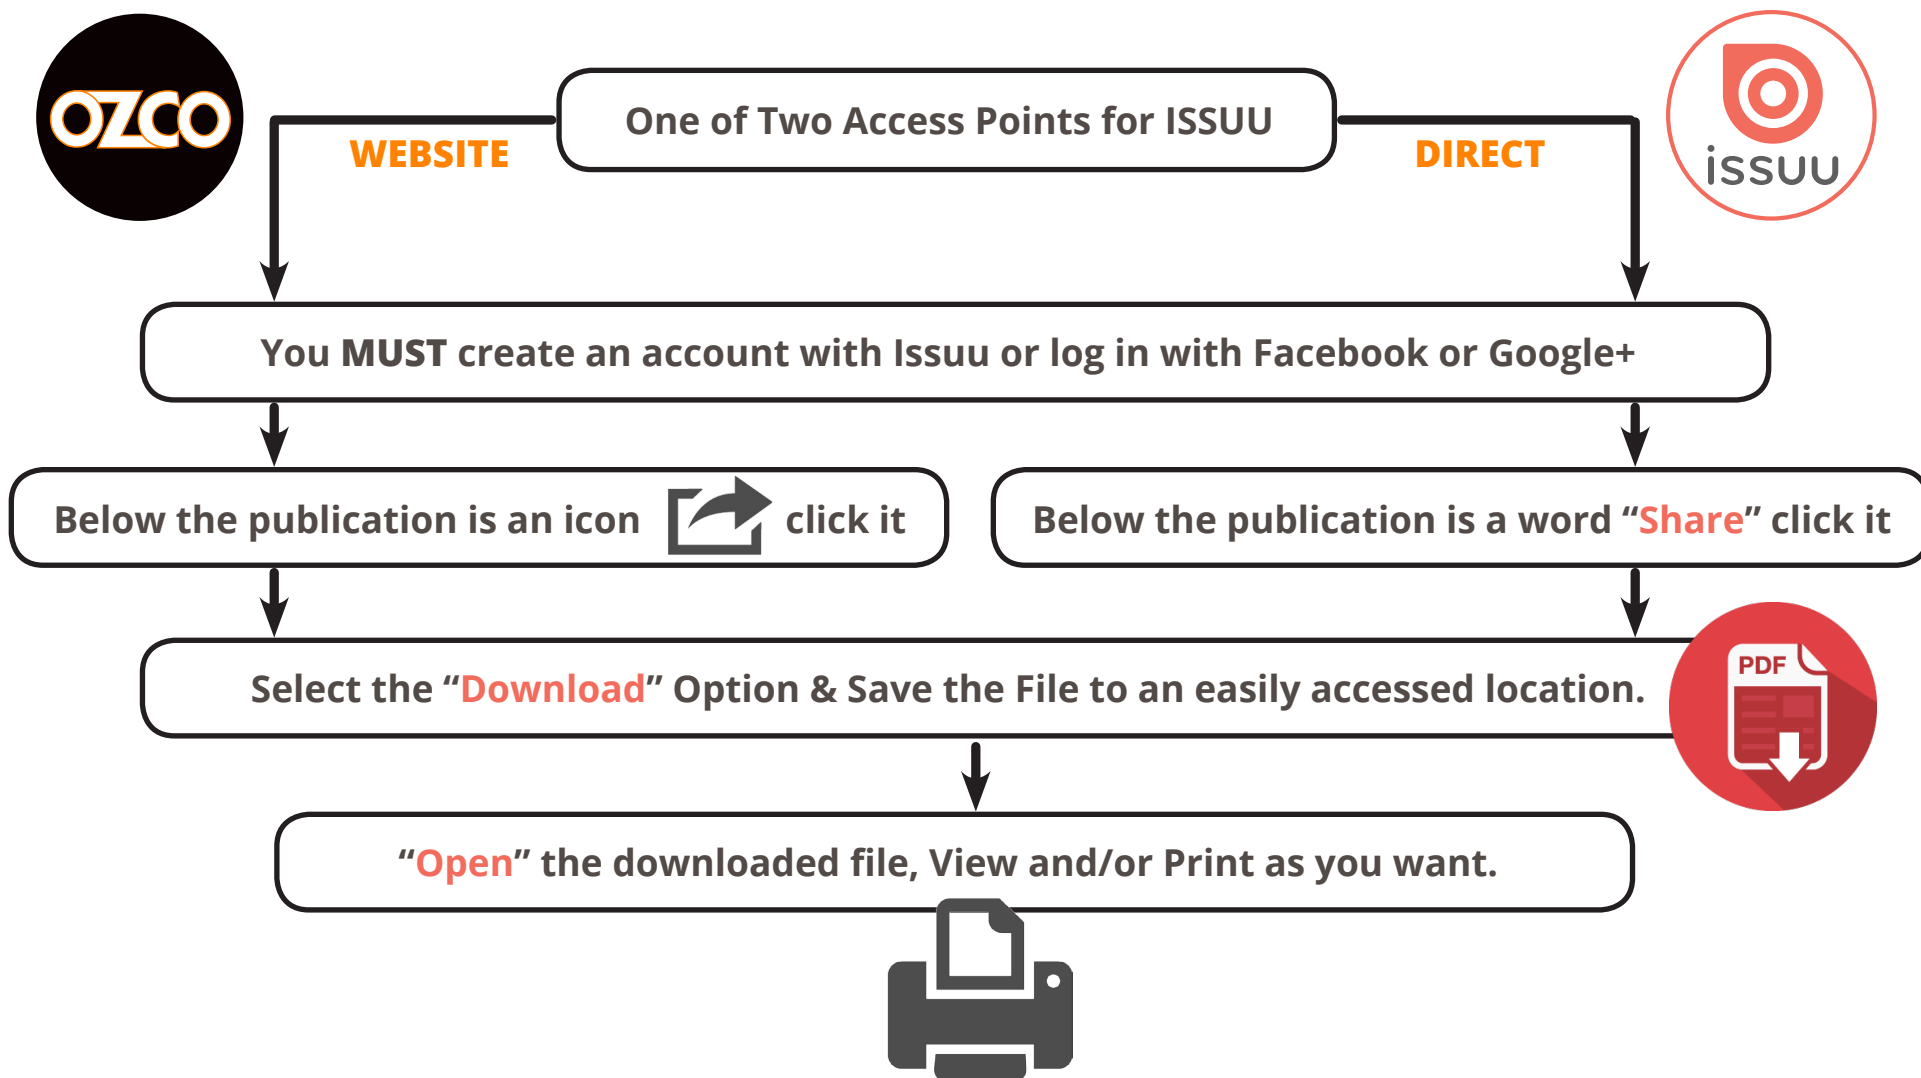

DESIGN


PURCHASE

CONSTRUCT

ENJOY

Laredo Sunset vs. Ironwood

2 great styles
same functionality

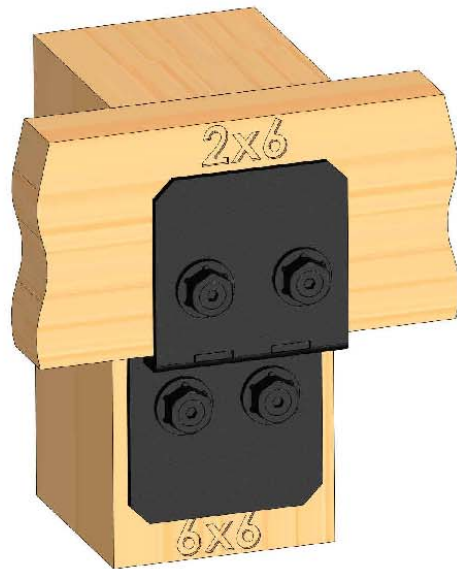

Ironwood
(517XX series)





Laredo Sunset
(566XX series)

choose your connection lifestyle
both styles available for most products





OZCO BUILDING PRODUCTS

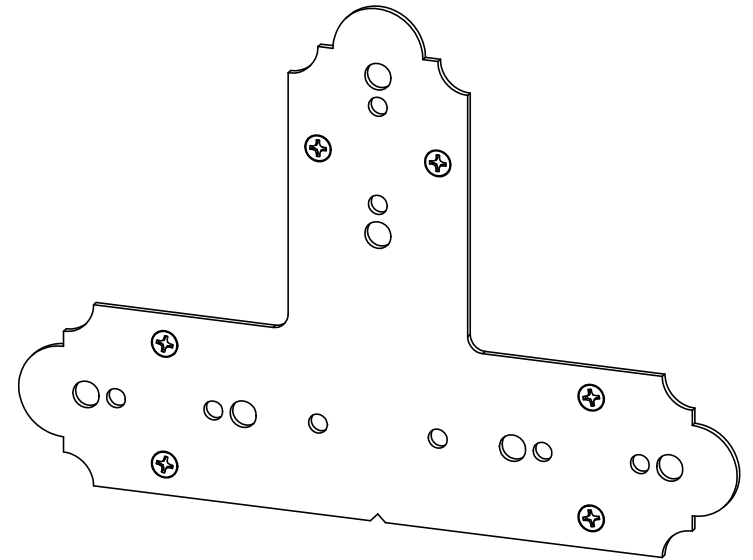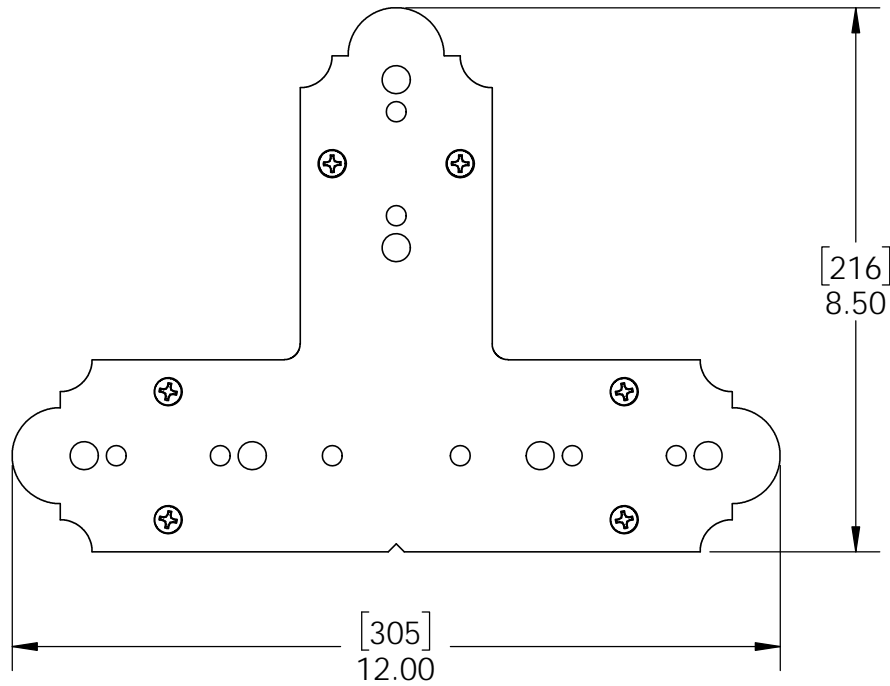

56667



Installation Instructions, 56667

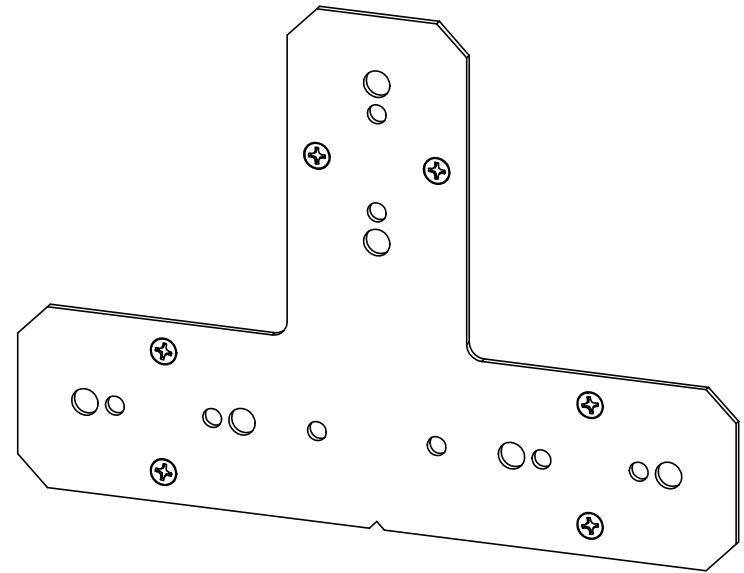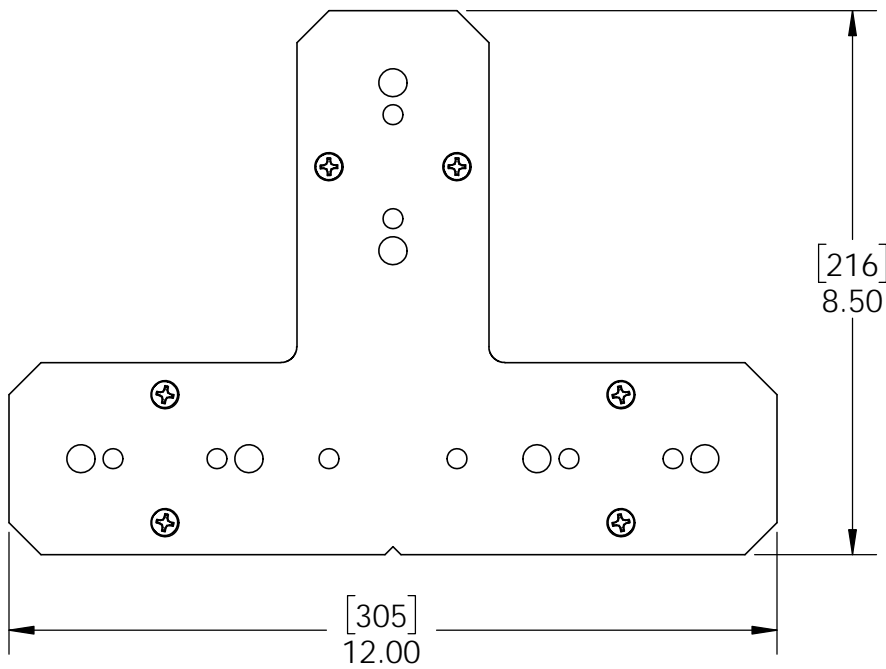

51767

Installation Instructions, 56667





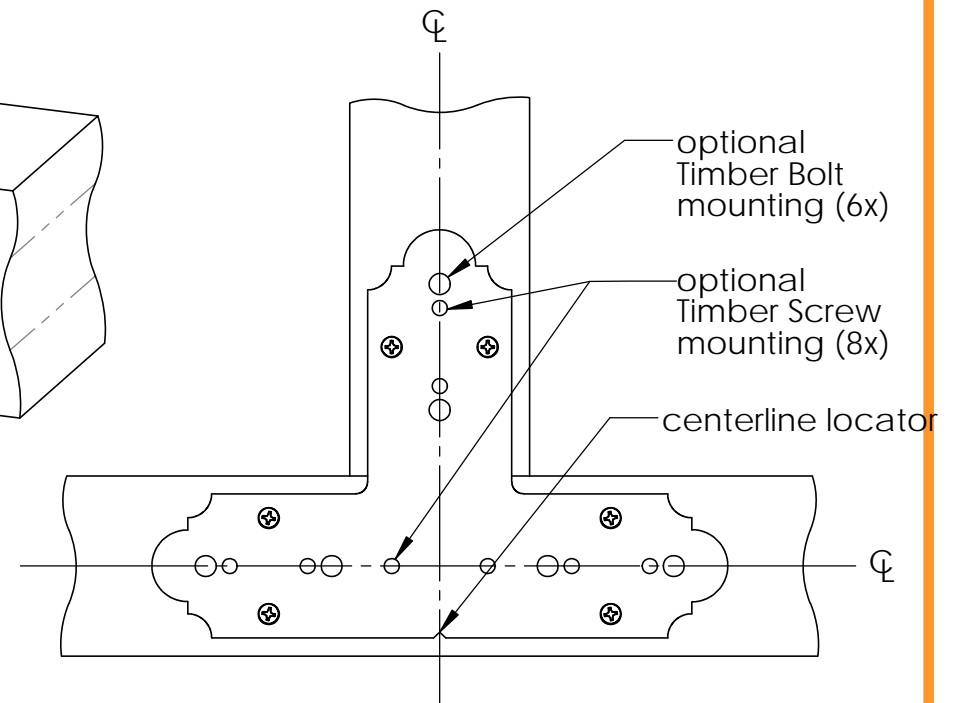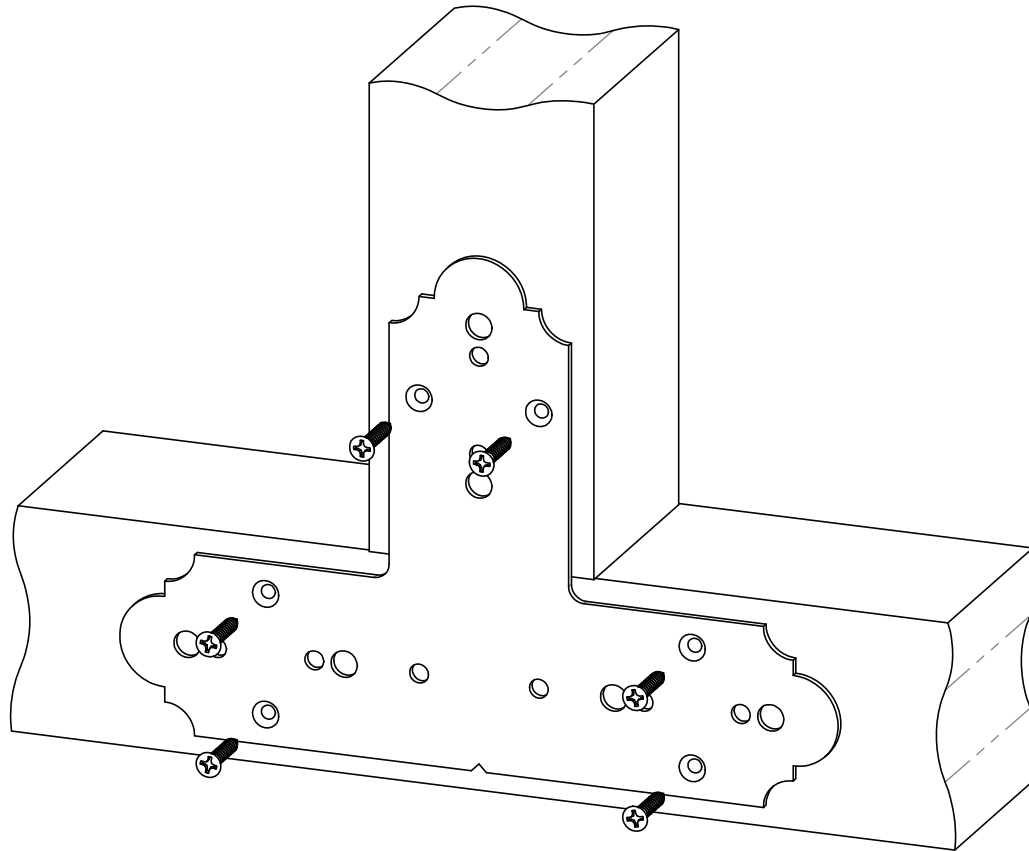

standard installation


Installation Instructions, 56667

V1.00 - Installation Instructions effective May 1, 2015 and reflects information that available as of April 10, 2014. This information is updated periodically and should not be relied upon after May 1, 2015. Please visit www.OZCOBP.com to get current information

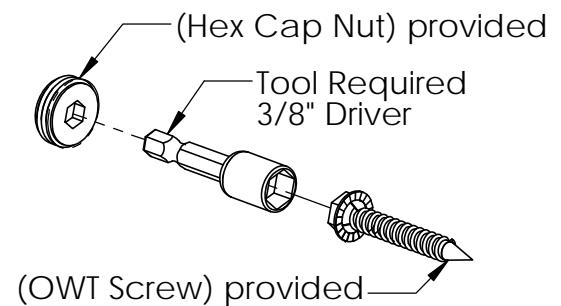
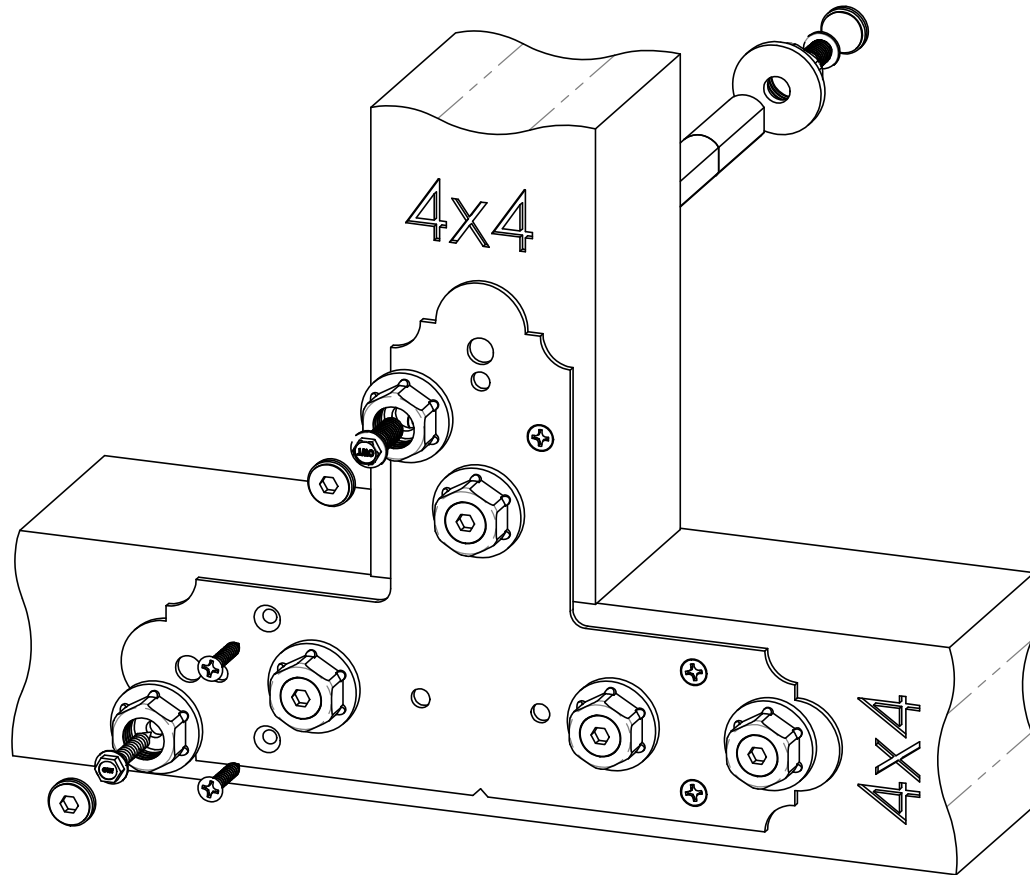


with optional Timber Bolts

Installation Instructions, 56667

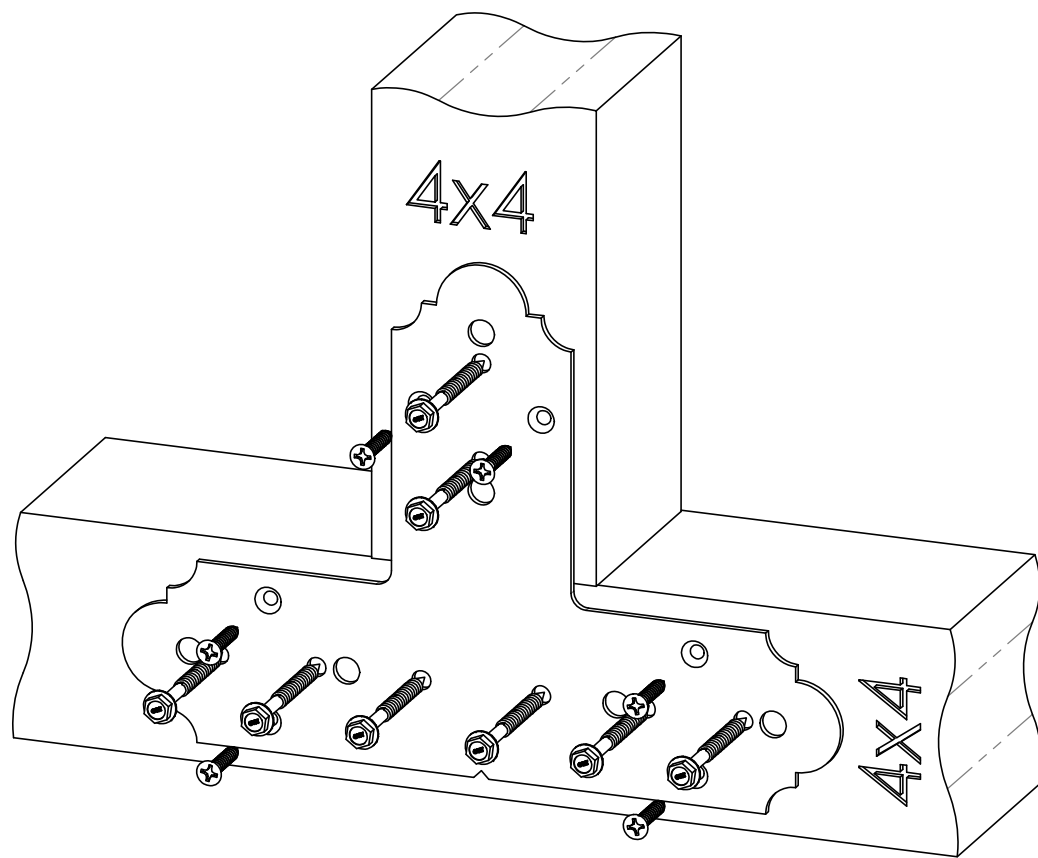

Timber Screw
(optional fastener)
sold separately

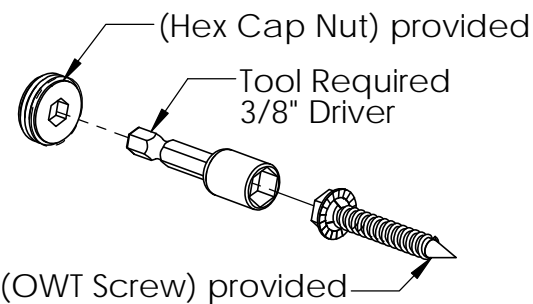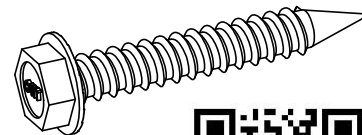

with optional Timber Screws

Installation Instructions, 56667