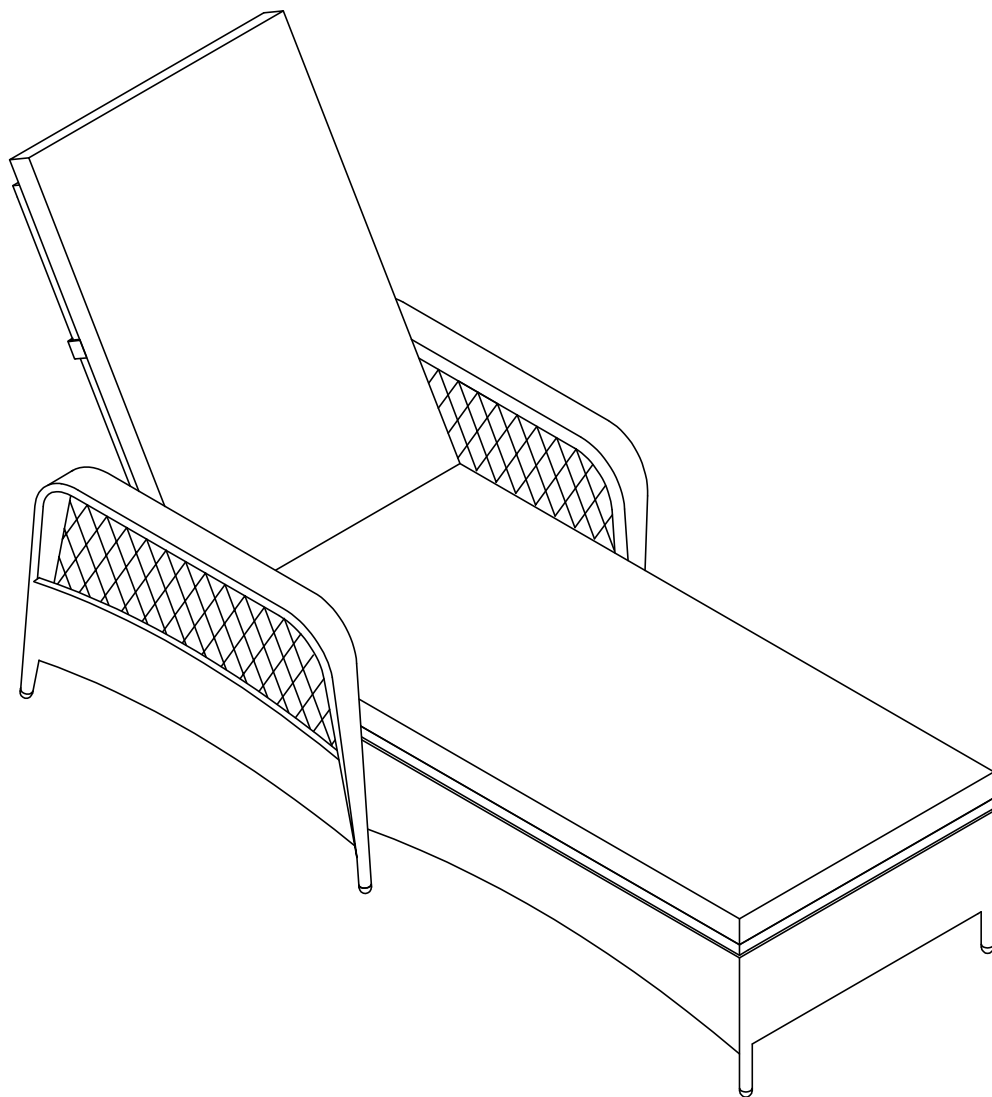



ASSEMBLY INSTRUCTIONS

SUN LOUNGER



NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS











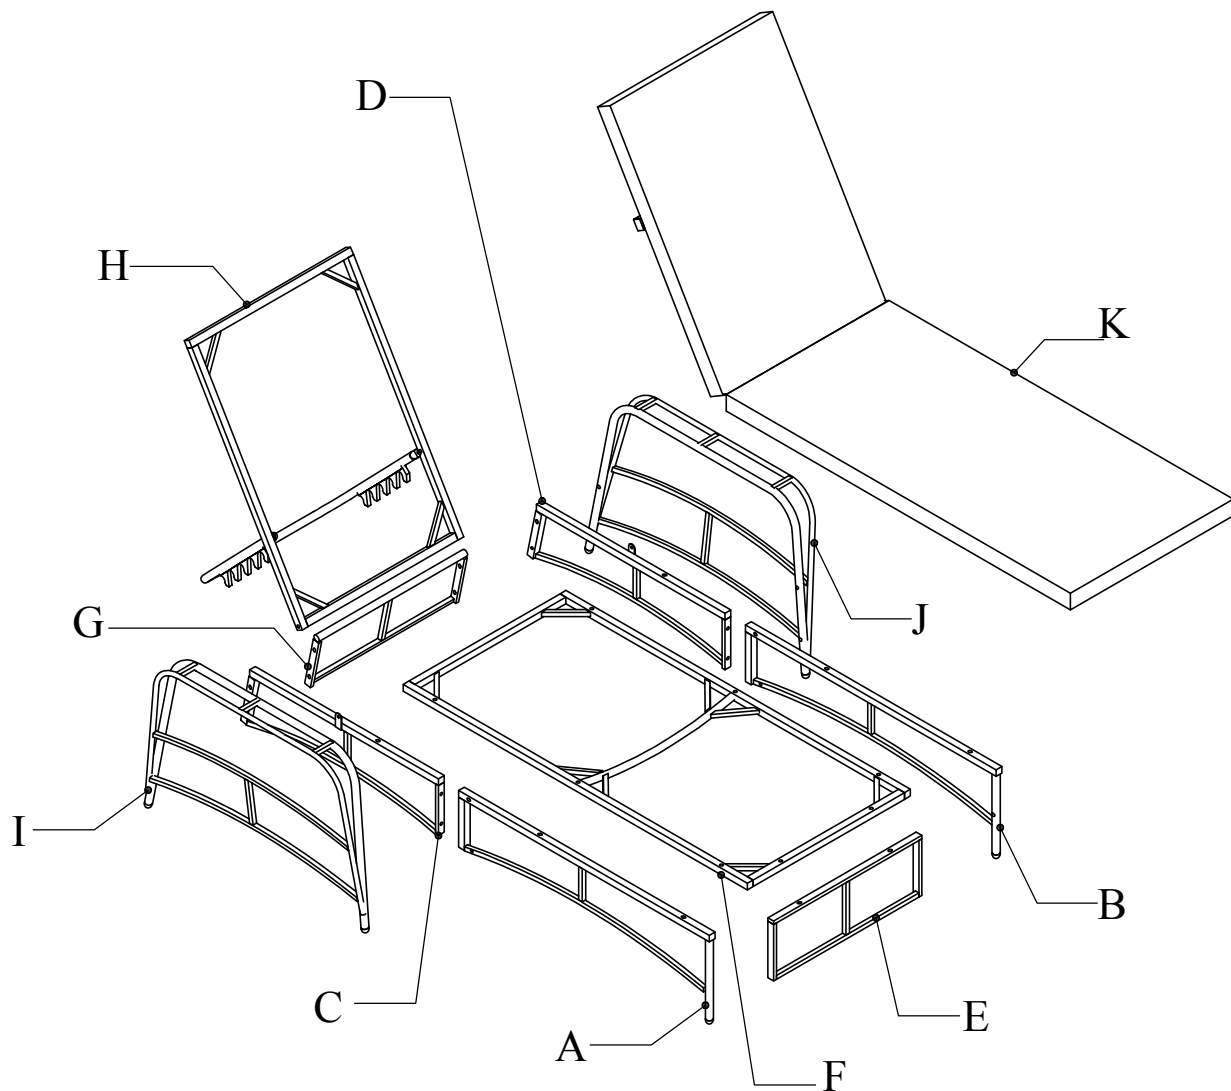
WF198166AAA







Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

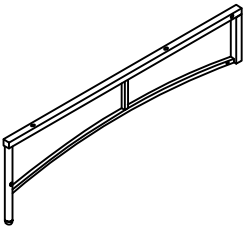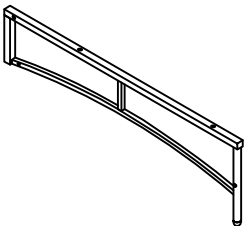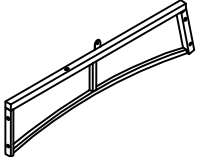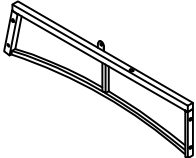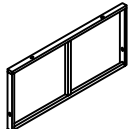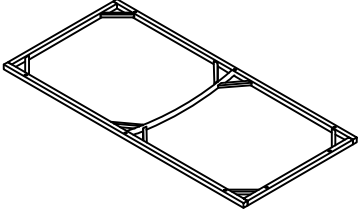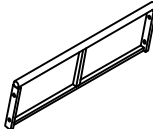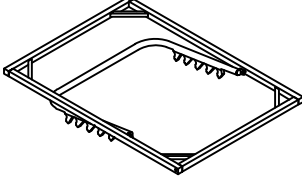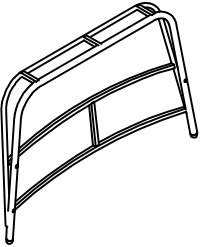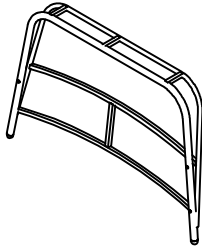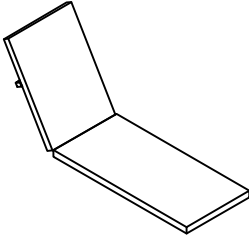Part List


A  Right Frame (1pc)	B  Left Frame (1pc)	C  Side Right Frame (1pc)
D  Side Left Frame (1pc)	E  Front Frame (1pc)	F  Seat Frame (1pc)
G  Back side Frame (1pc)	H  Back Frame (1pc)	I  Right Arm (1pc)
J  Left Arm (1pc)	K  Seat Cushion (1pc)	

Hardware List

1  Bolt M6 x 20 mm 2 pcs + extra 1 pc	2  Bolt M6 x 30 mm 12 pcs + extra 2 pcs	3  Bolt M6 x 40 mm 8 pcs + extra 1 pc
4  Bolt M6 x 55 mm 2 pcs + extra 1 pc	5  M6x1 Washers 24 pcs + extra 2 pcs	6  Allen key M4 (2 pcs)


STEP 1

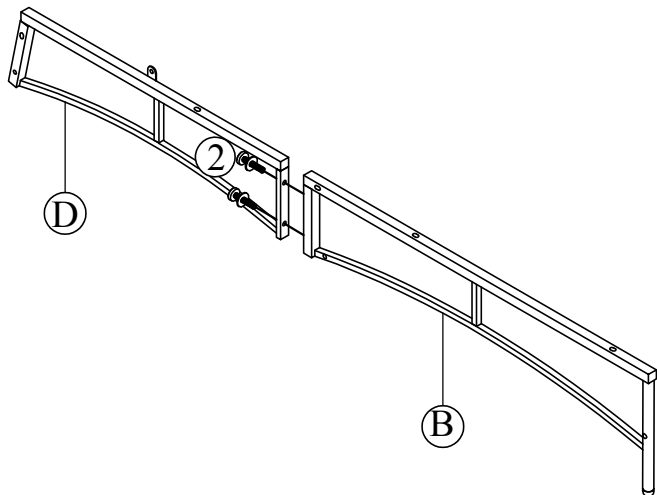Connect Left Frame (B) & Side Left Frame (D) with Bolt (2) & Washers (5)




STEP 2

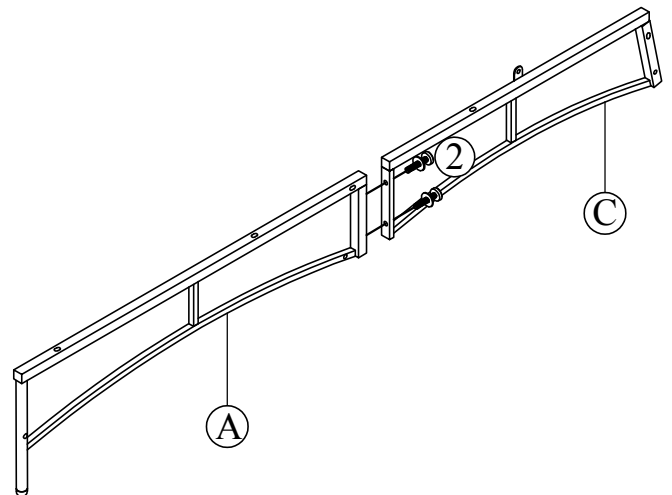Connect Right Frame (A) & Side Right Frame (C) with Bolt (2) & Washers (5)




STEP 3

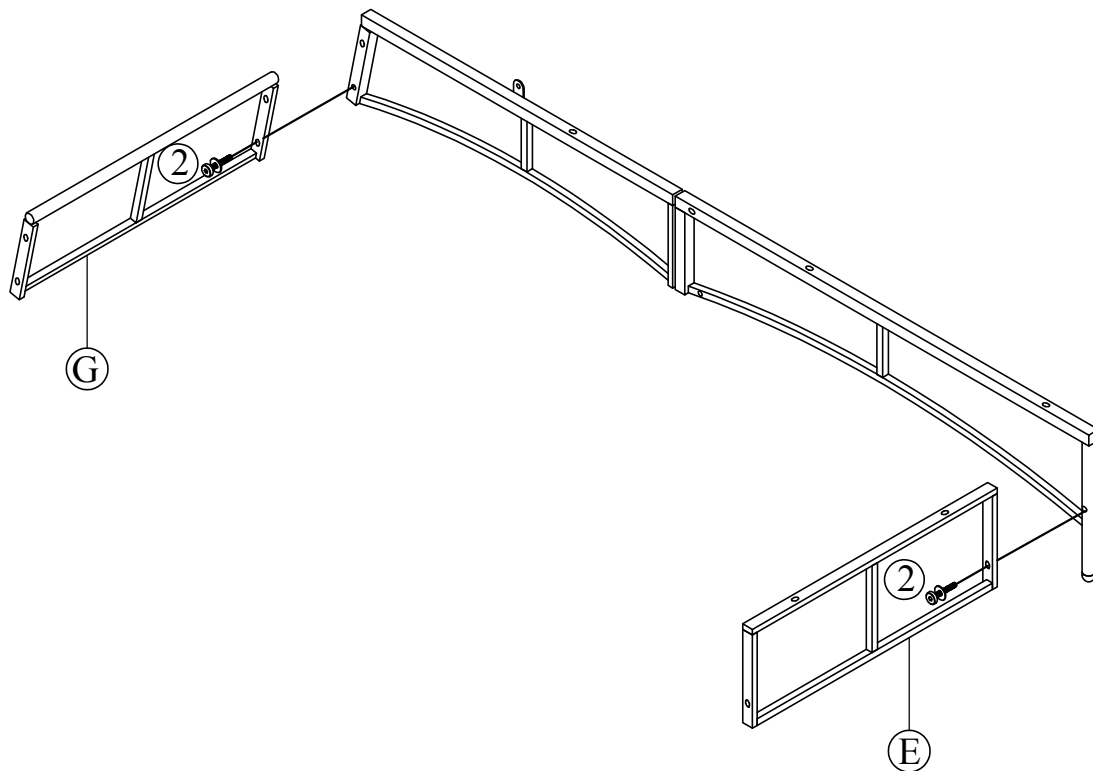Connect part from STEP 1 & Front Frame (E) & Back side Frame (G) with Bolt (2) & Washers (5)




STEP 4

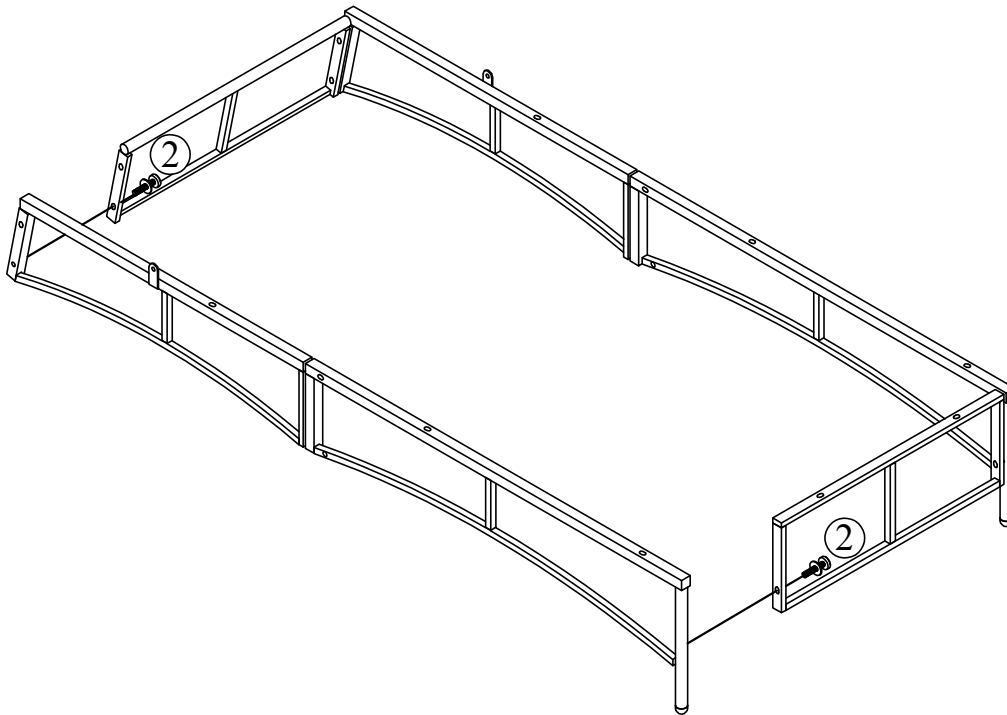Connect part from STEP 2 & STEP 3 with Bolt (2) & Washers (5)




STEP 5

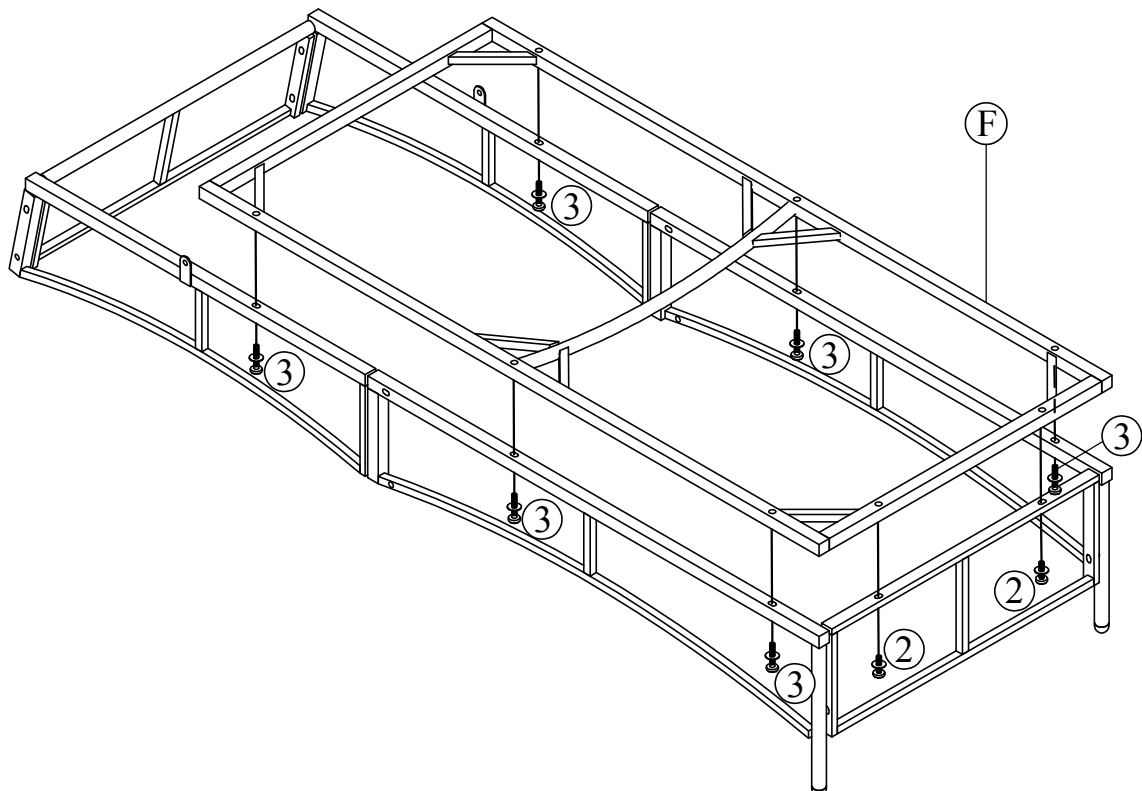Connect part from STEP 4 & Seat Frame (F) with Bolt (2), (3) & Washers (5)




STEP 6

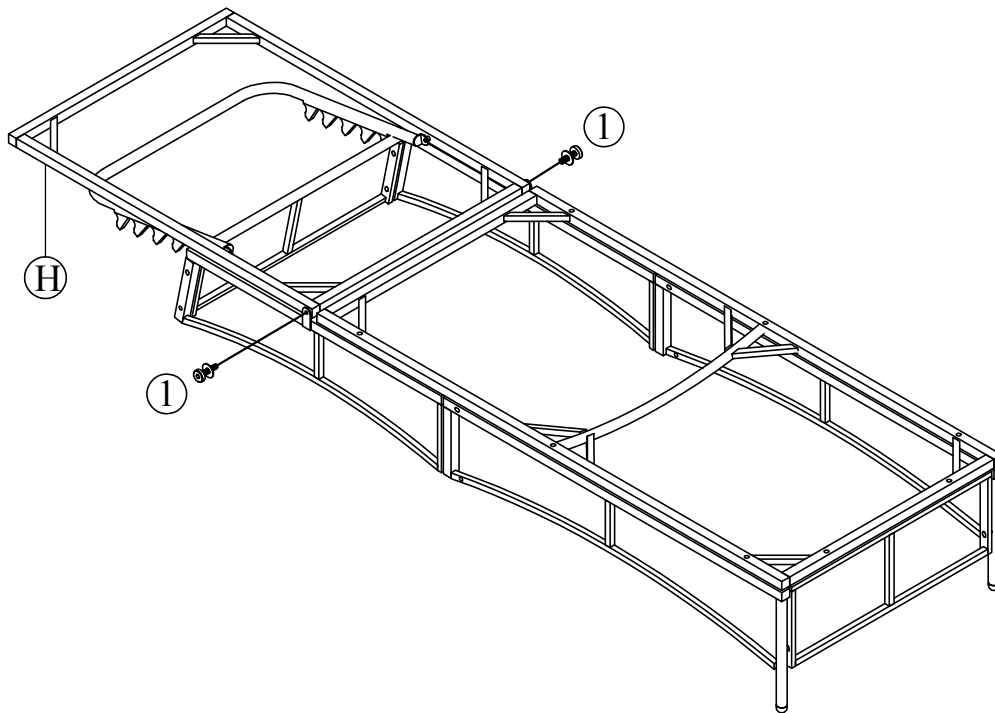Connect part from STEP 5 & Back Frame (H) with Bolt (1) & Washers (5)




STEP 7

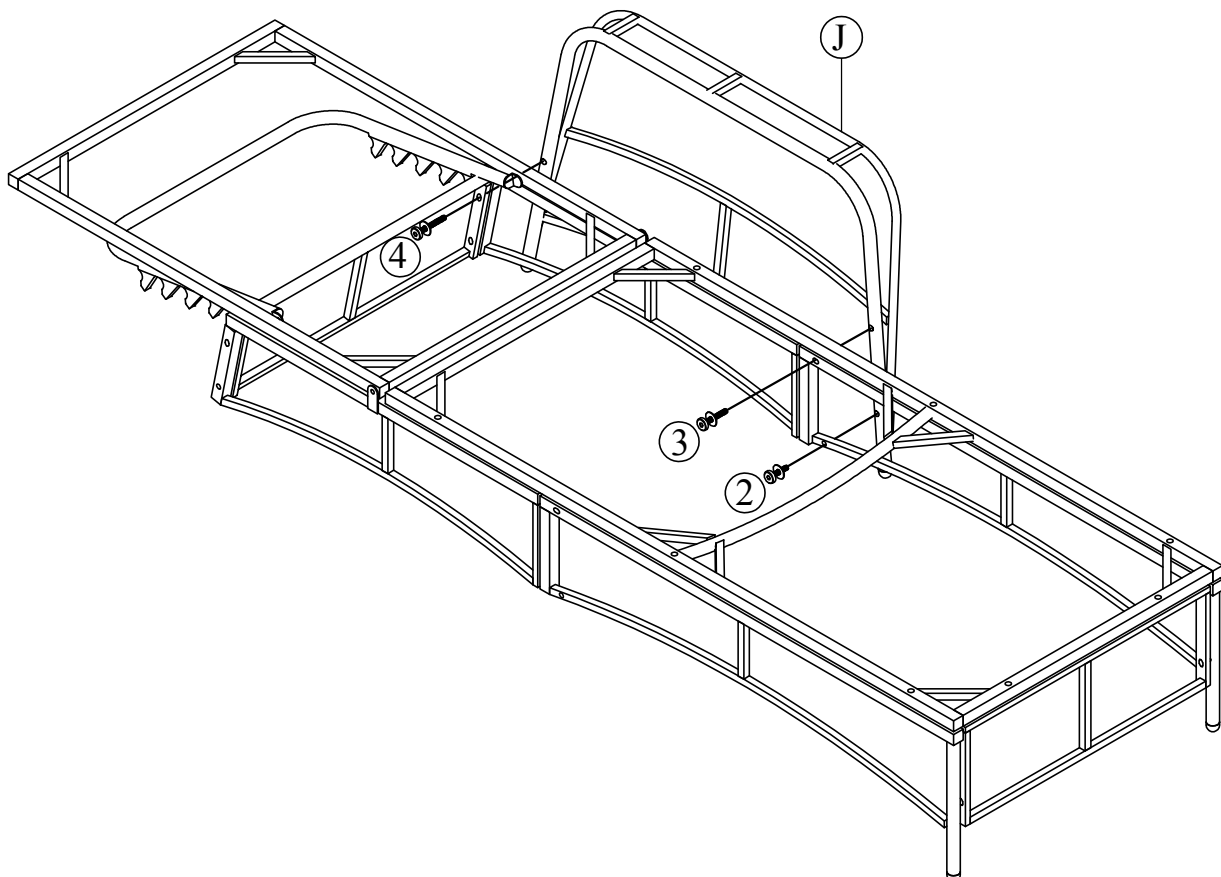Connect part from STEP 6 & Left Arm (J) with Bolt (2), (3), (4) & Washers (5)




STEP 8

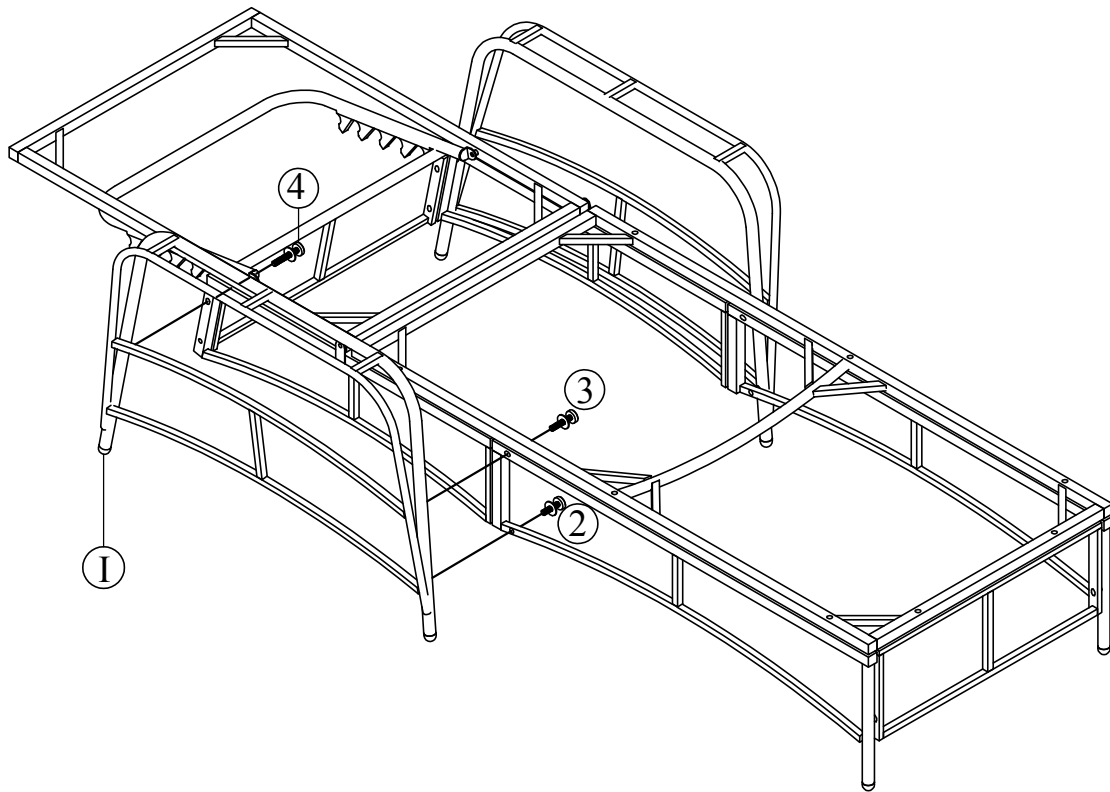Connect part from STEP 7 & Right Arm (1) with Bolt (2), (3), (4) & Washers (5)




STEP 9

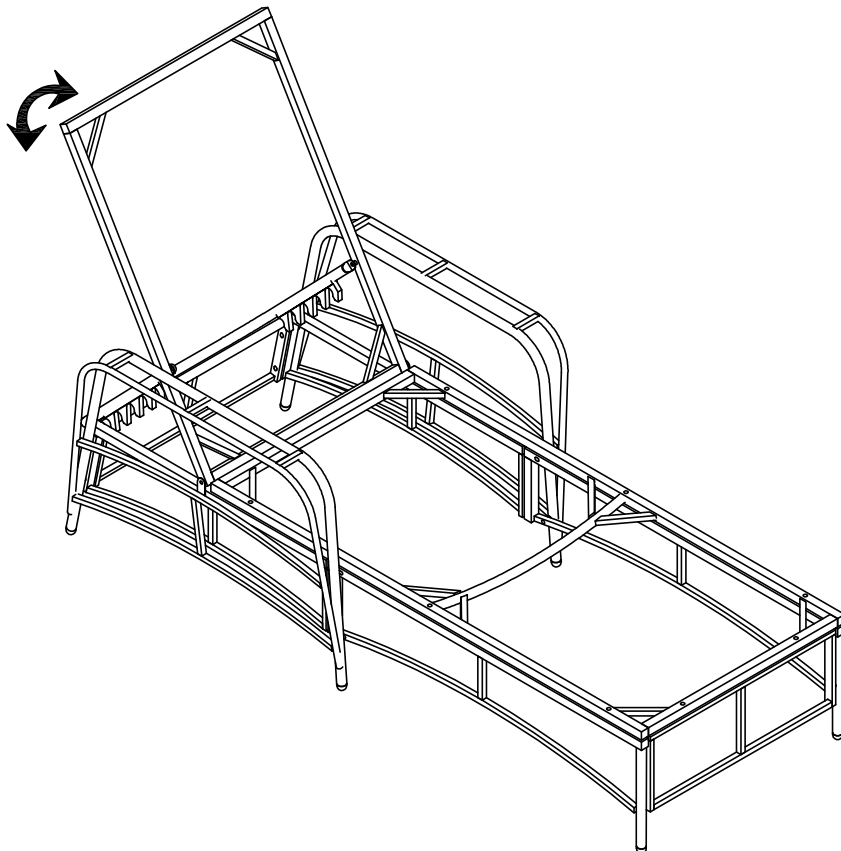Backrest tilt angle can be adjusted




STEP 10

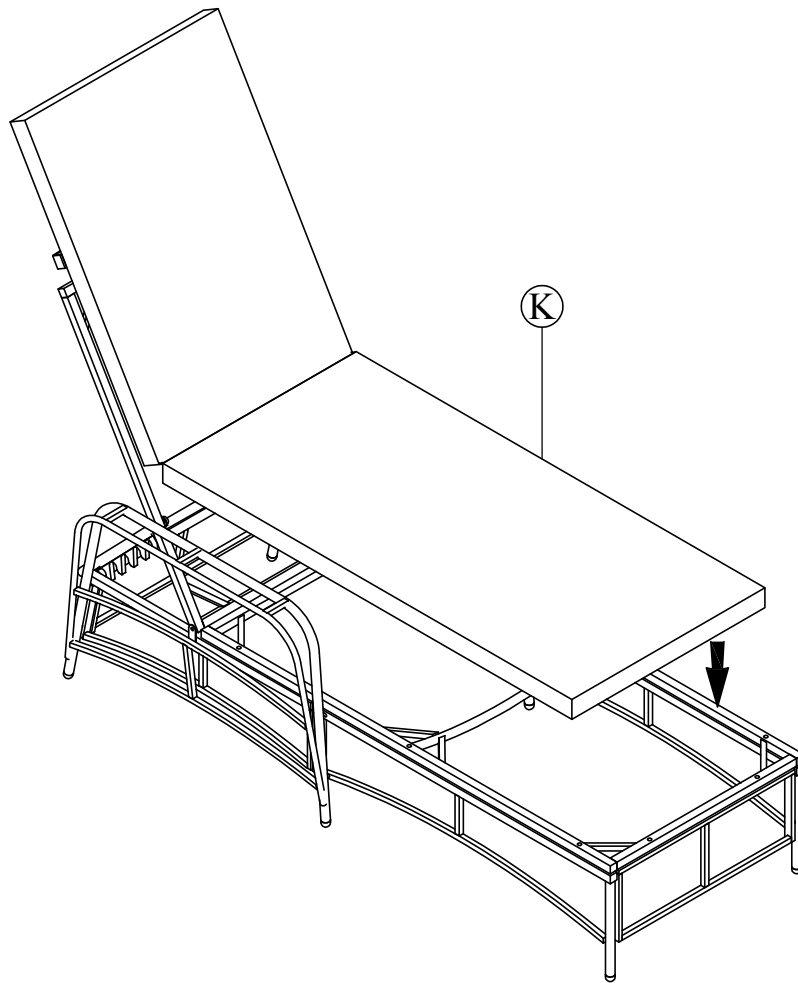Put on Seat Cushion (K) to Complete sun lounger



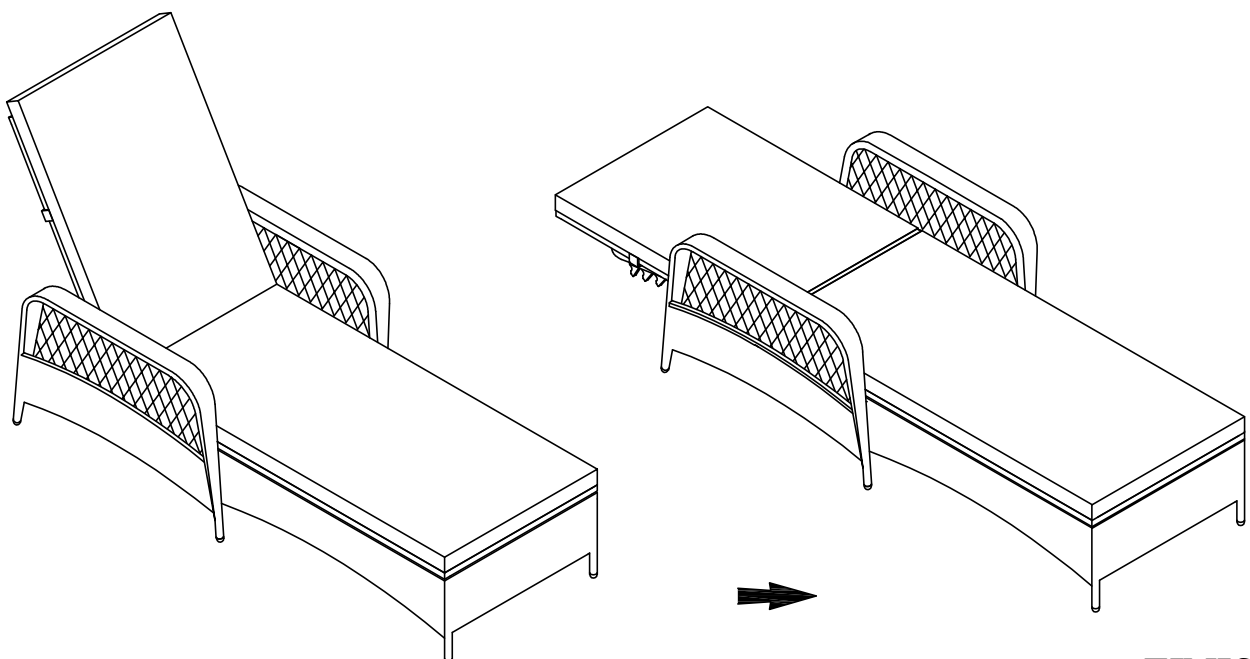STEP 11



FINISH