

ProVantage **3-Inch** Thick Series Silicone Installation Kits

For use with 3-Inch Thick Series **REDI2SET Glass Block Only** (do not use with 4-Inch Thick Series or Metric 3-Inch Thick Series Glass Block)

10 BLOCK KIT

Model #PV310



ProVantage 3 in. Thick Series Silicone System Glass Block Installation Kit (**10 Block Kit** for 8 in. x 8 in. or Smaller 3 in. Thick Glass Block)

20 BLOCK KIT

Model #PV320



ProVantage 3 in. Thick Series Silicone System Glass Block Installation Kit (**20 Block Kit** for 8 in. x 8 in. or Smaller 3 in. Thick Glass Block)

40 BLOCK KIT


Model #PV340




ProVantage 3 in. Thick Series Silicone System Glass Block Installation Kit (**40 Block Kit** for 8 in. x 8 in. or Smaller 3 in. Thick Glass Block)

What's included and how to use:

ProVantage Horizontal Spacer

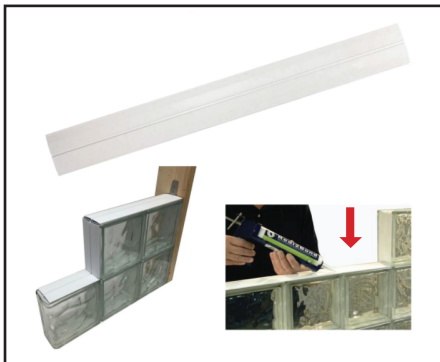

ProVantage Vertical Spacer

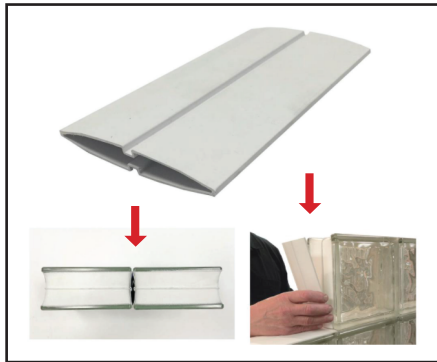

ProVantage Panel Anchor



Redi2Bond Glass Block Silicone




ProVantage Vertical Half Spacer



Vertical Half Spacer with 2 different sides
Flat side for use against vertical wall/jamb
Grooved side for use against block

Vertical *Half* Spacer vs. Vertical Spacer

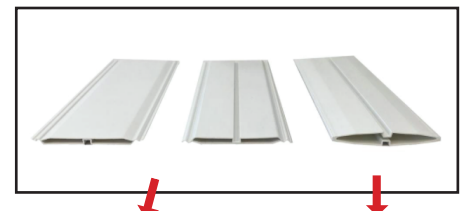

Vertical Half Spacer, with 2 different sides

Flat side for use against vertical wall/jamb

Grooved side for use against the block

Vertical Spacer, same on both sides

For use between each individual block