


# RDJ32

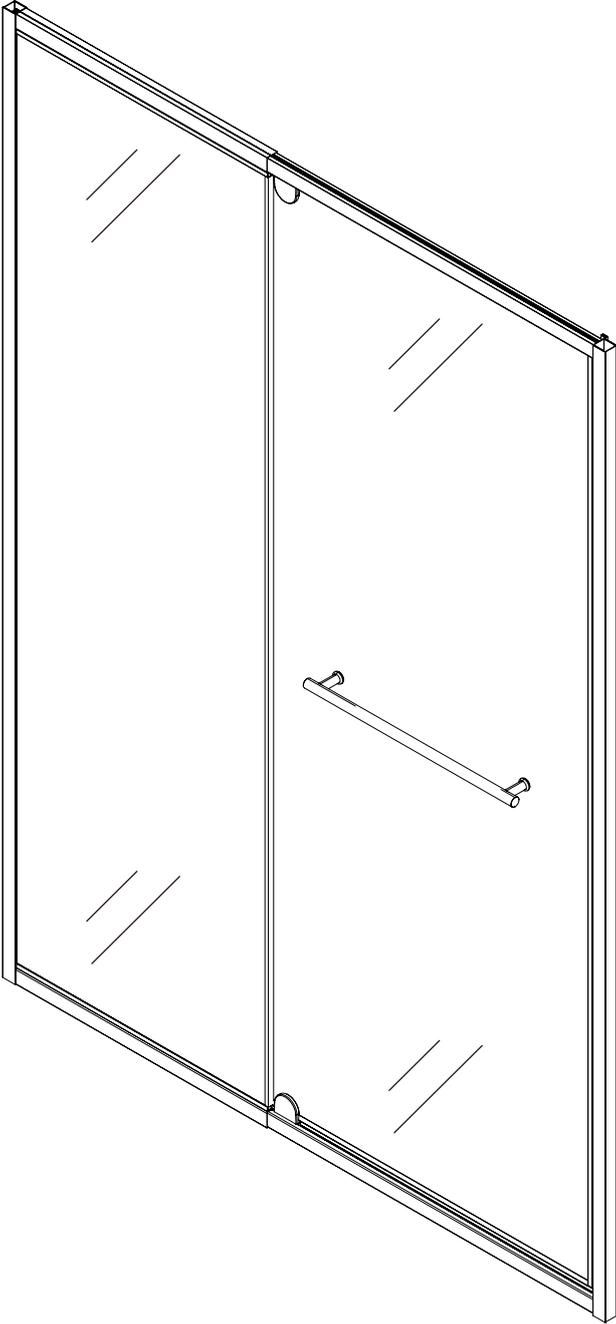

**Please keep the boxes if you need return;  
Check before installation;  
Return won't be accepted afterwards;**

**For any question, please contact: [info@royoltd.com](mailto:info@royoltd.com)**





















Youtube




TikTok

Videos for installation instruction

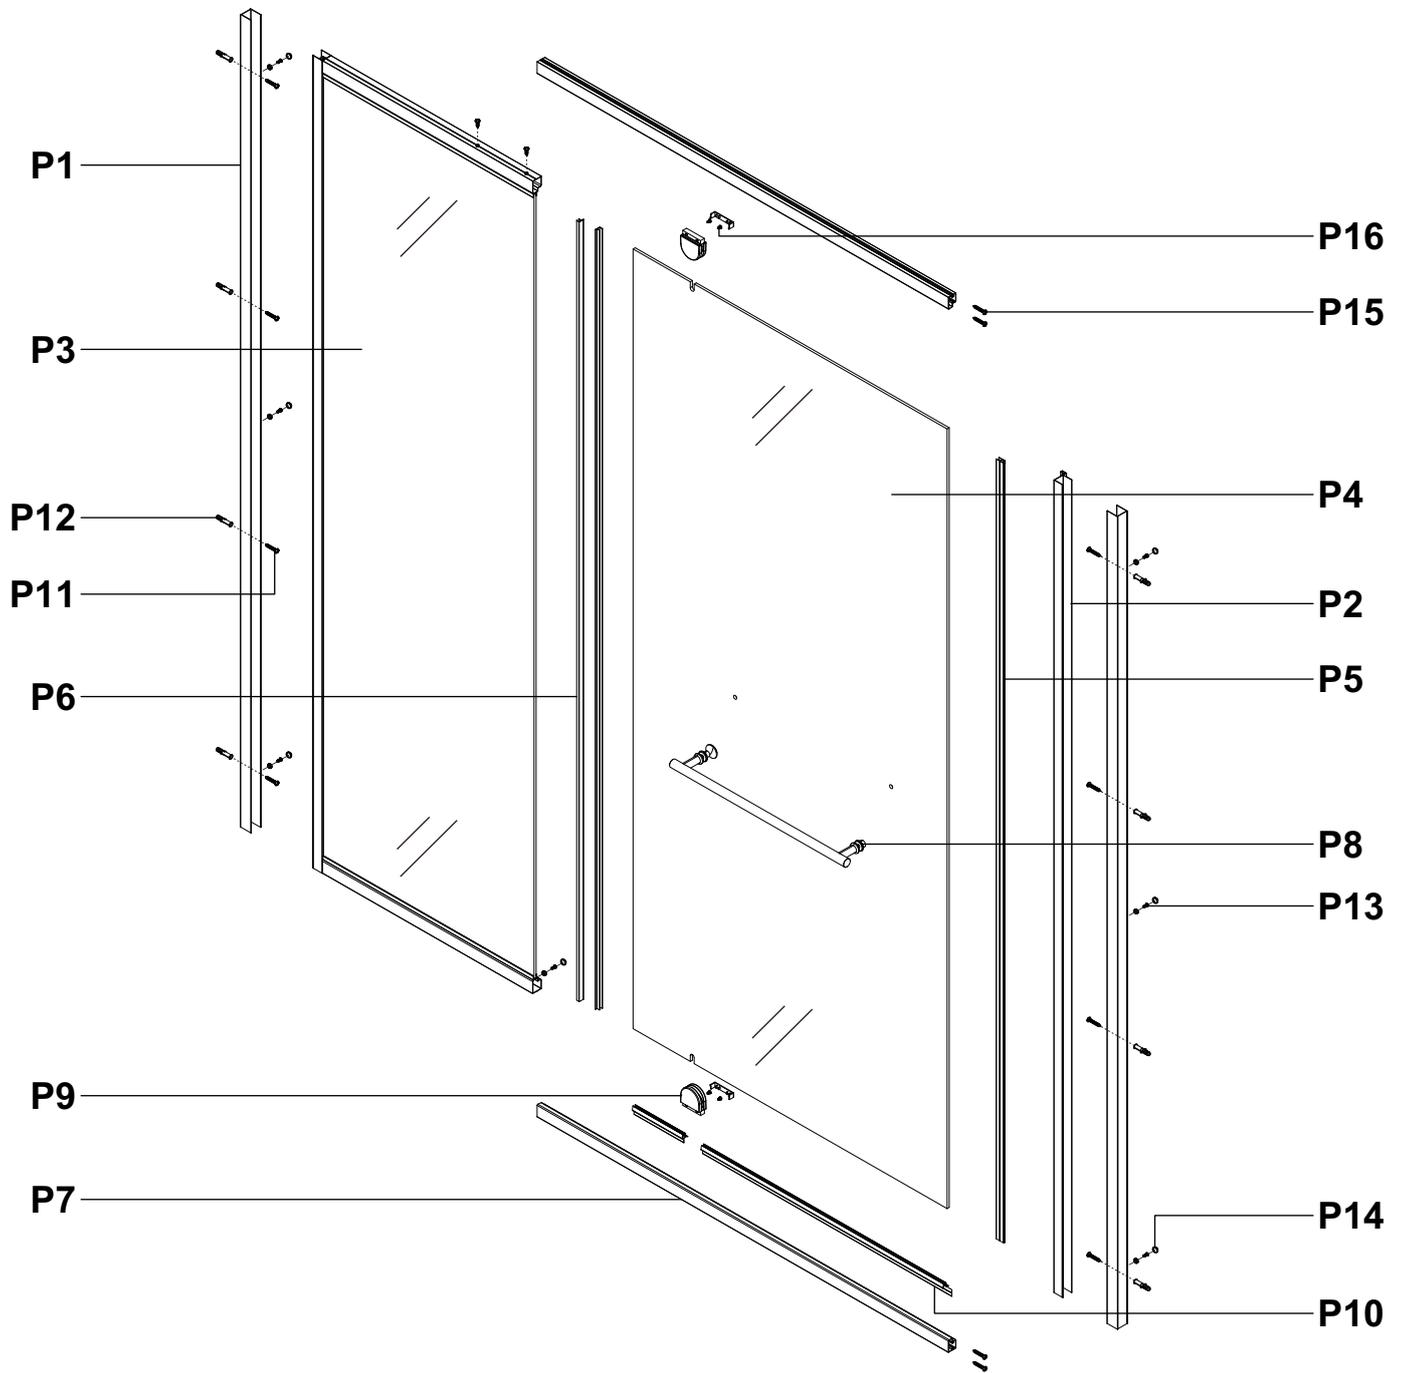


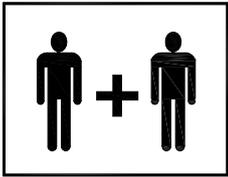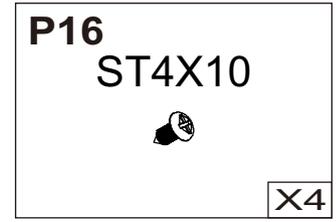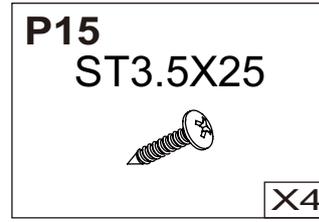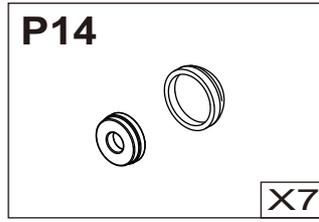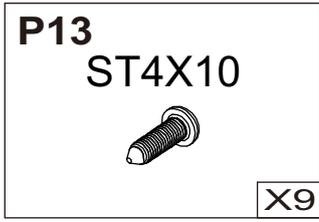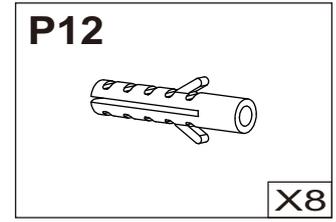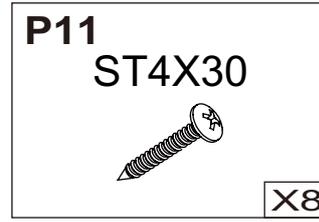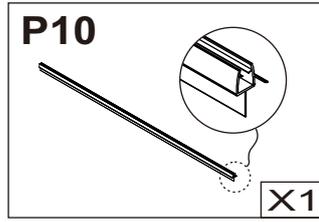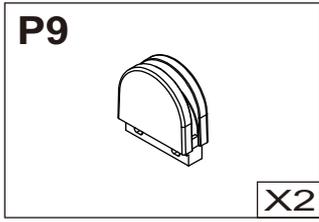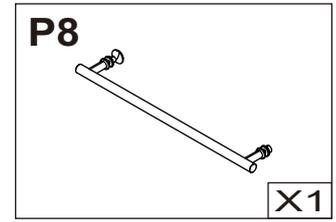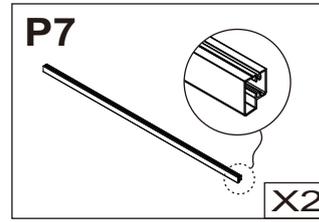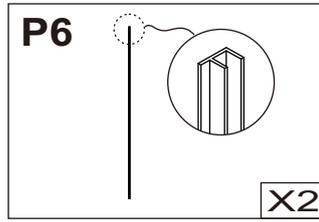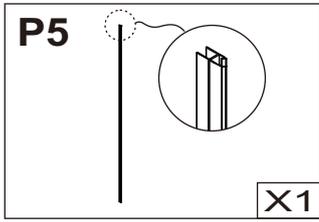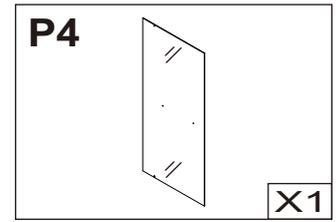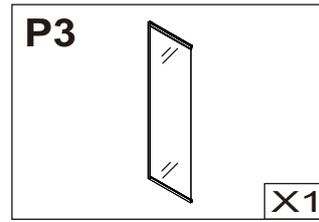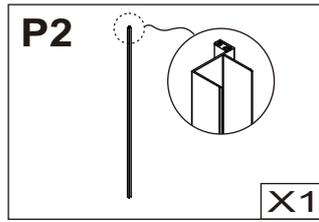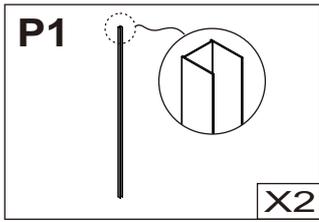




# Model Specific Preparation

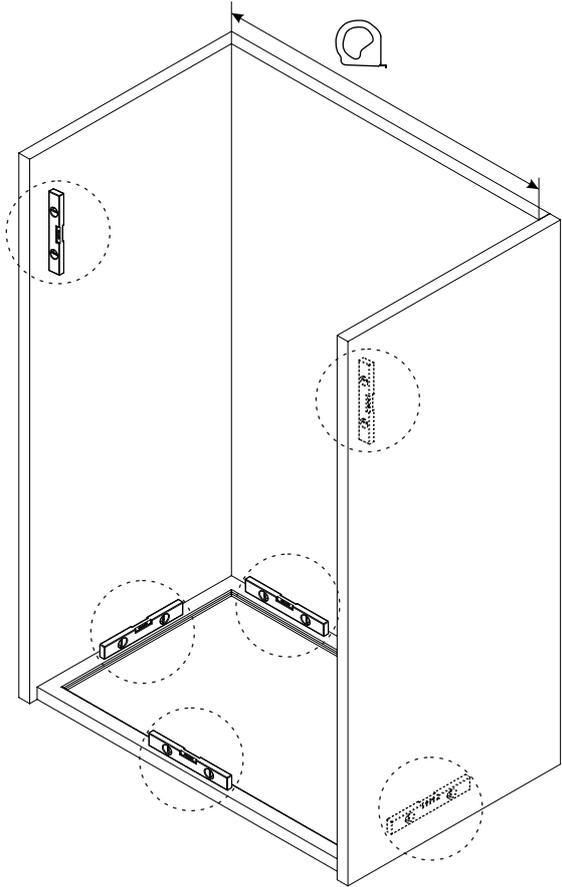

 Verify threshold and wall with a level.



Picture	NO.	Qty.
	P3	x1
	P7	x2

## Top & Bottom Rails & Expandable rails cap Installation

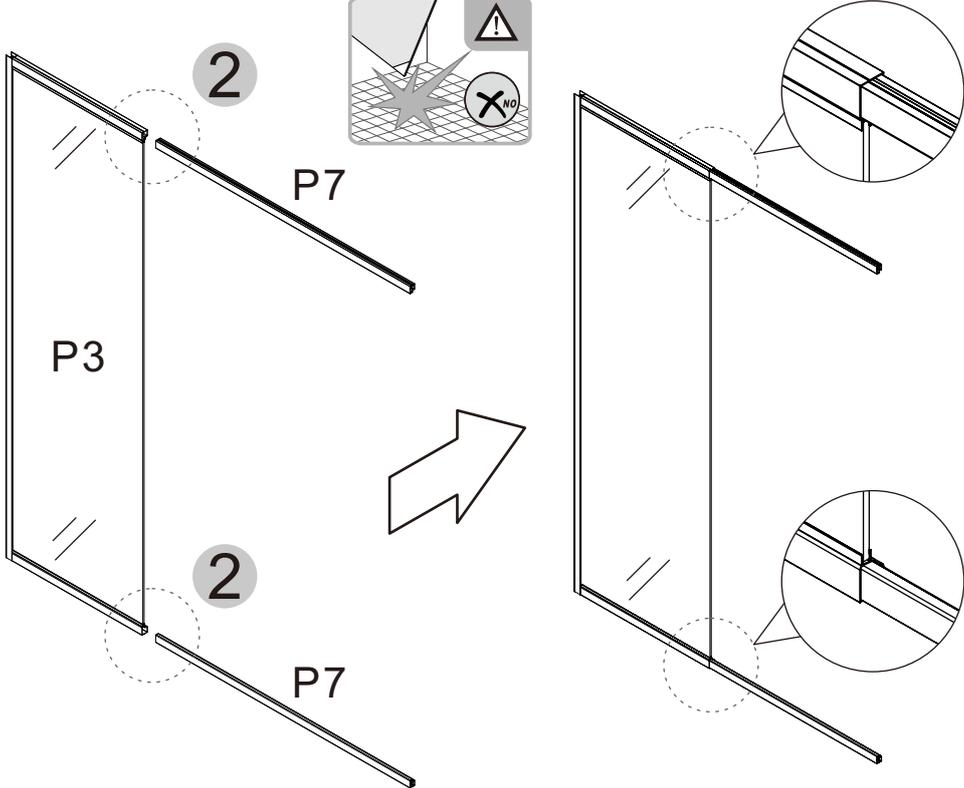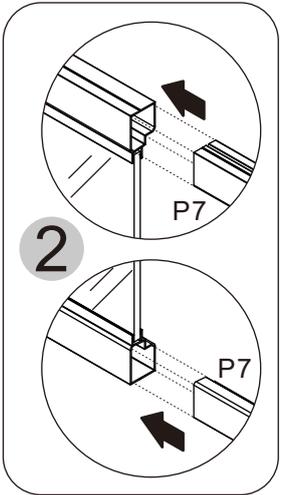



### Magnetic Strike profile Installation

Picture	NO.	Qty.
	P2	x1
 ST3.5X25	P15	x4

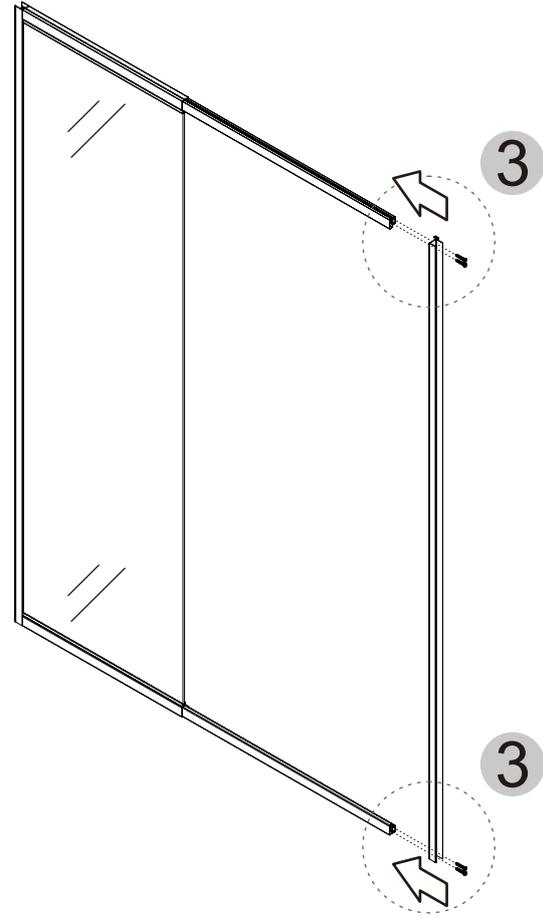
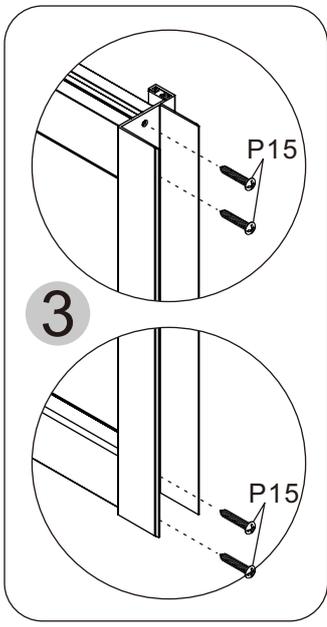


### Wall Jamb Installation






Picture	NO.	Qty.
	P1	x2

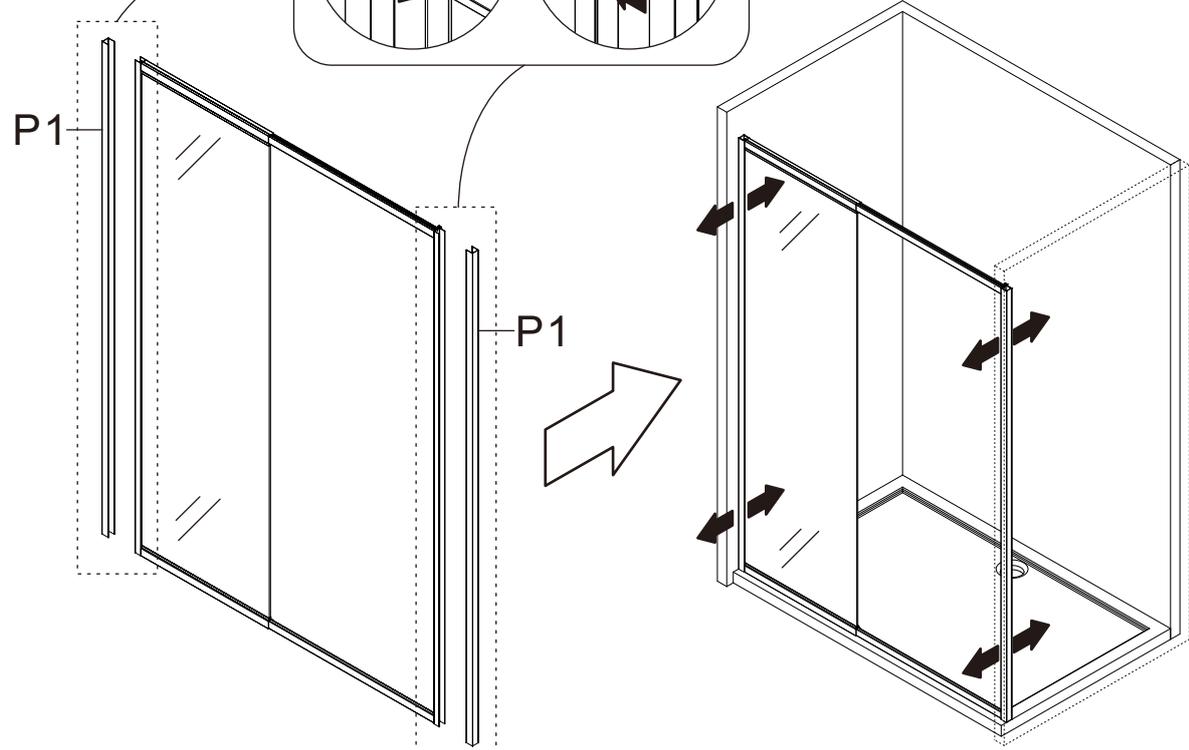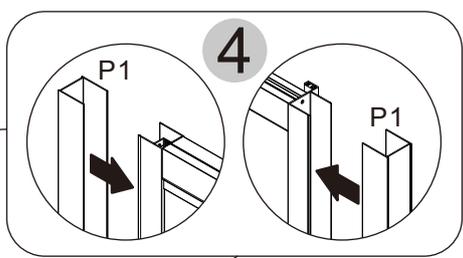

# Door Assembly Adjustment


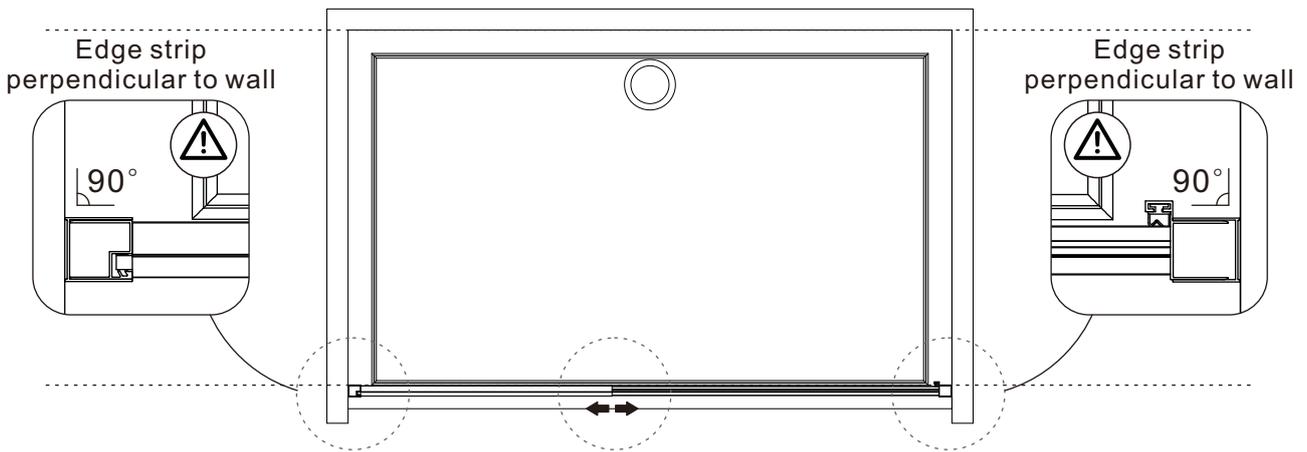
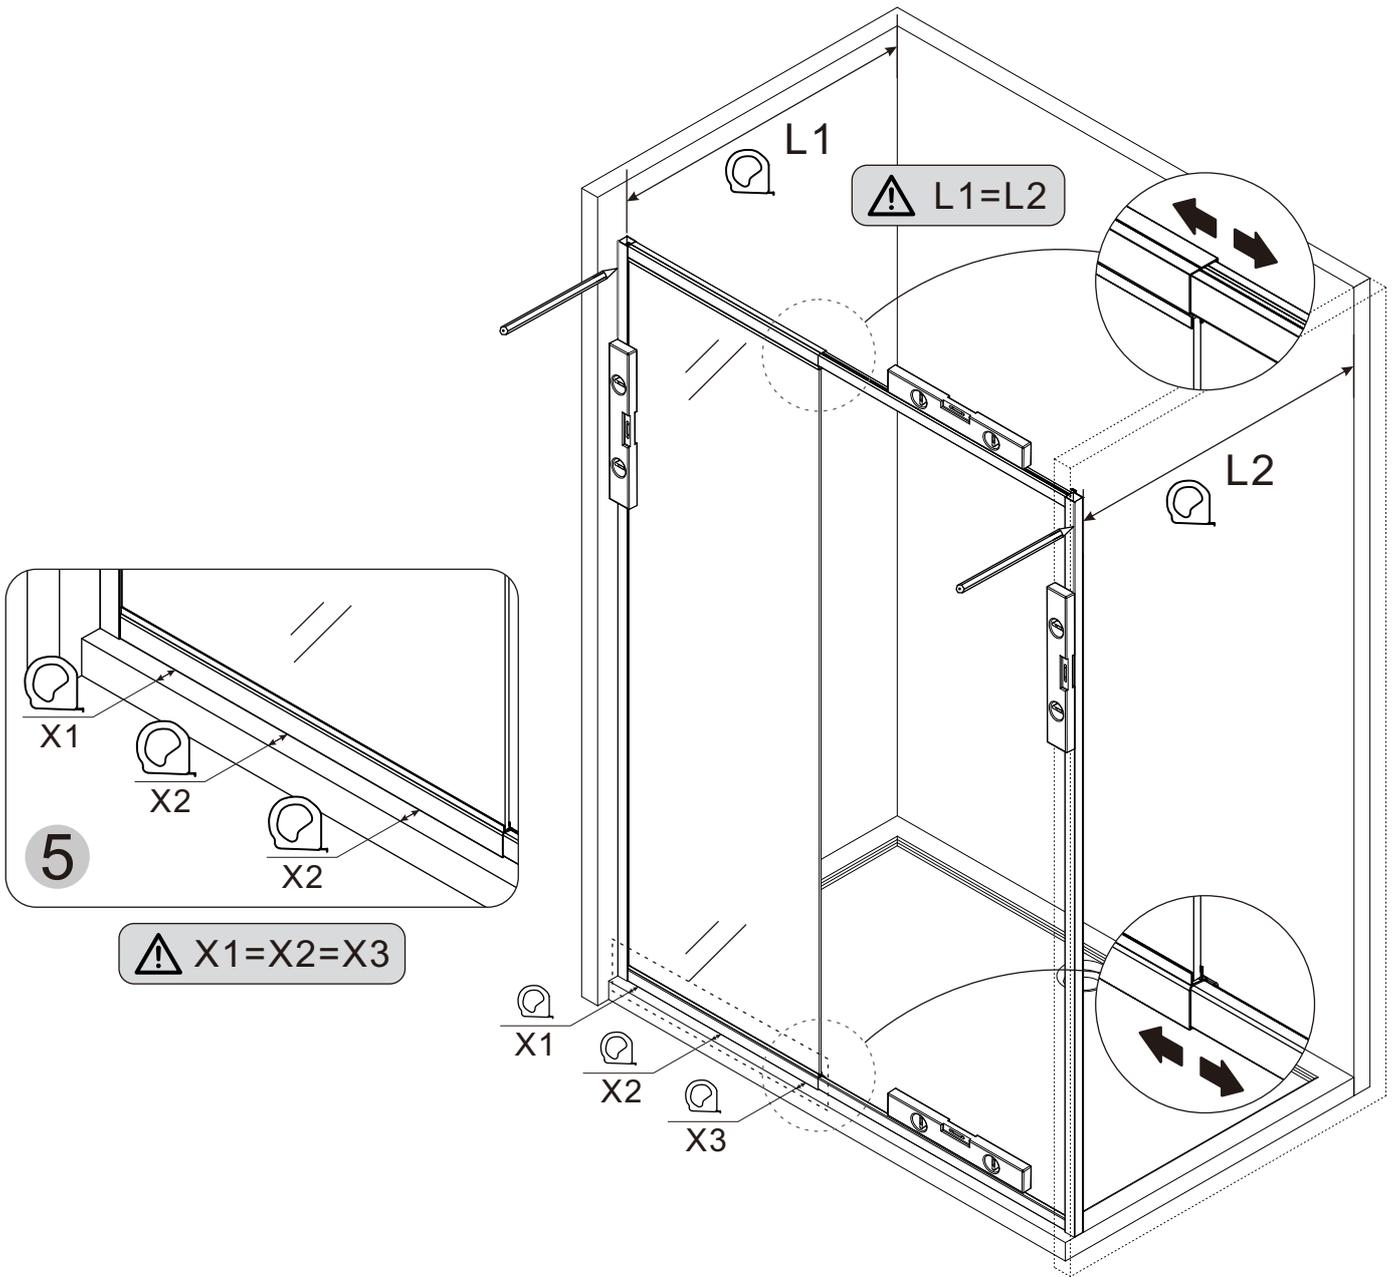


# Wall Jamb Installation

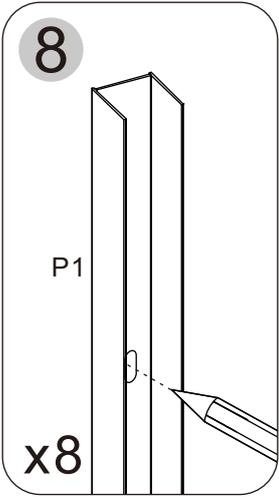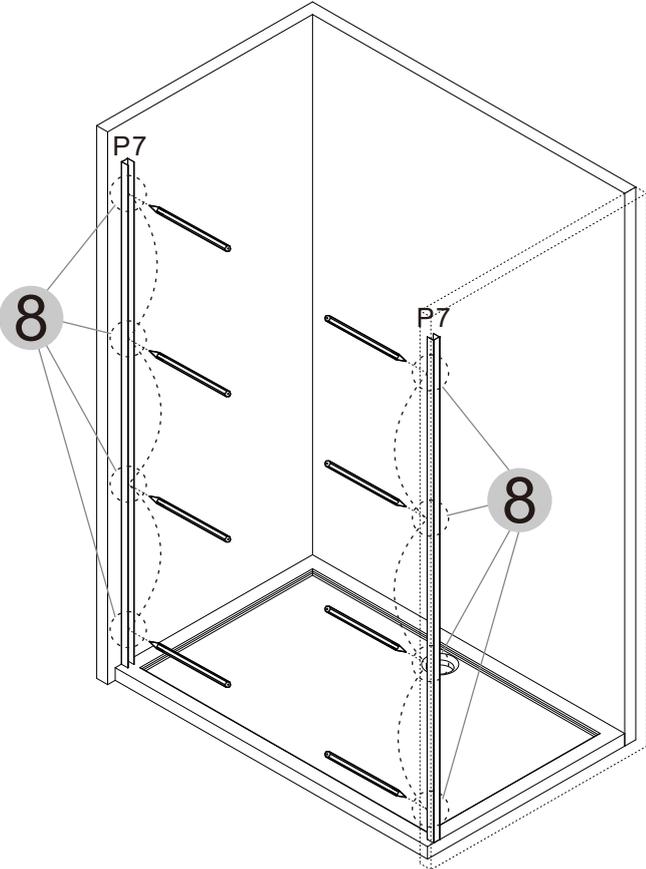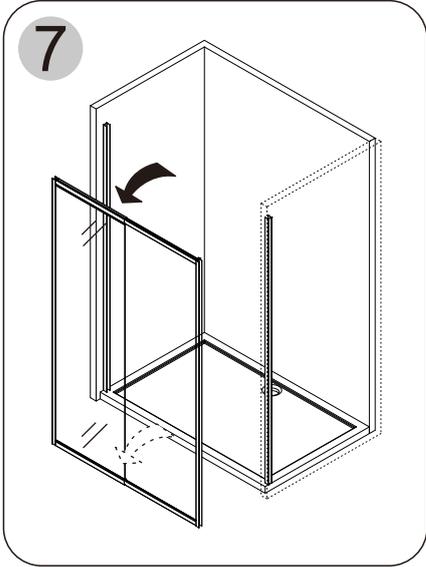
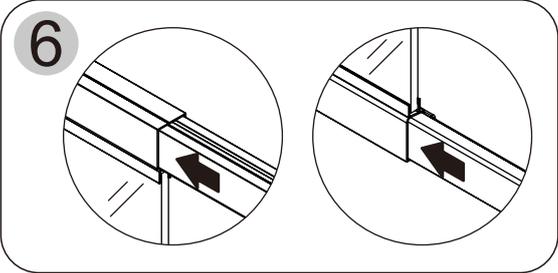
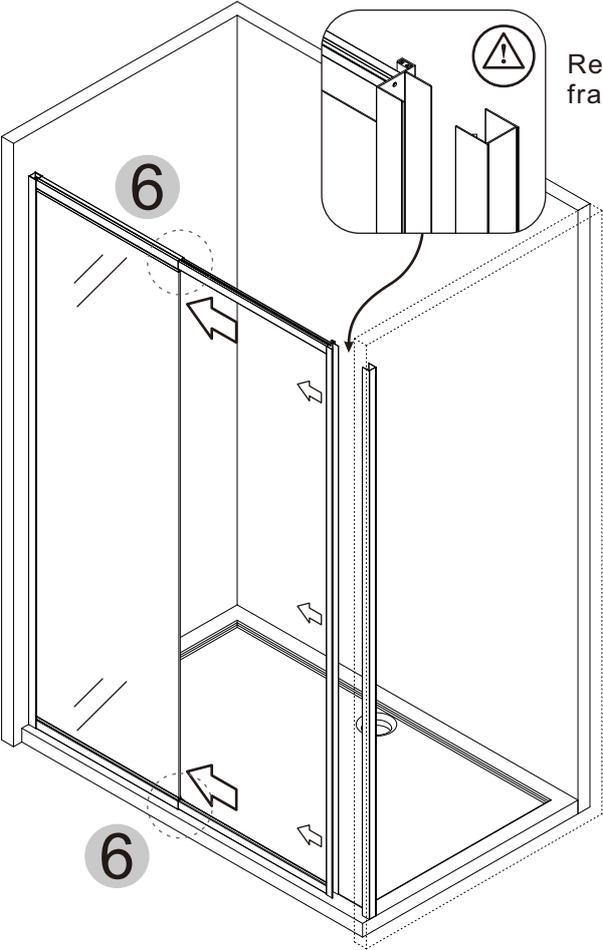


# Wall Jamb Installation

Picture	NO.	Qty.
 ST4X30	P11	x8
	P12	x8

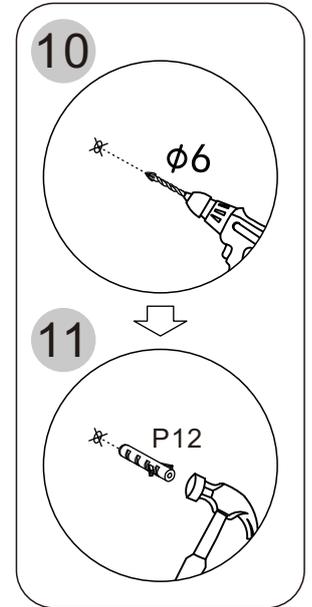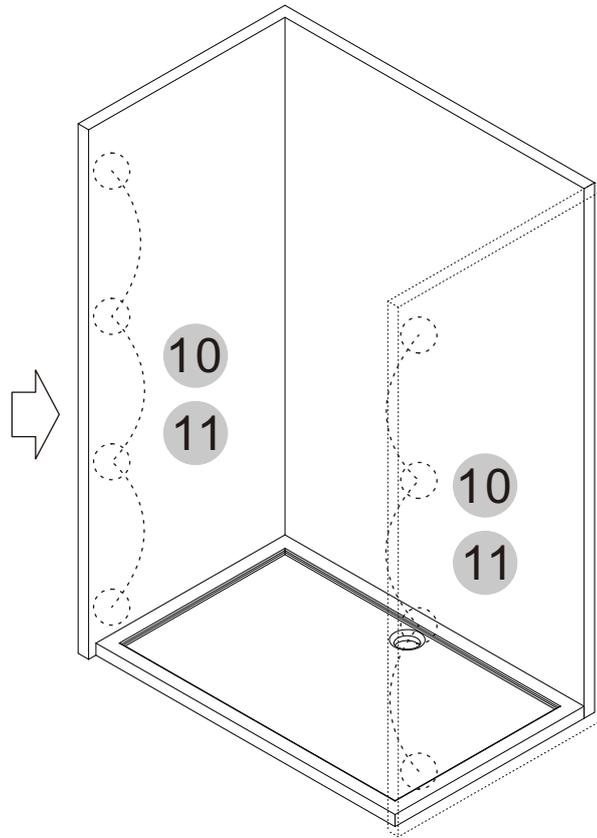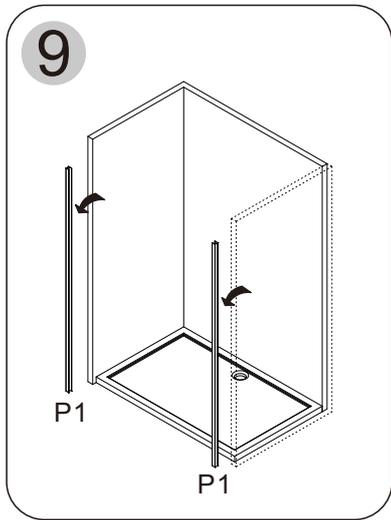


x8

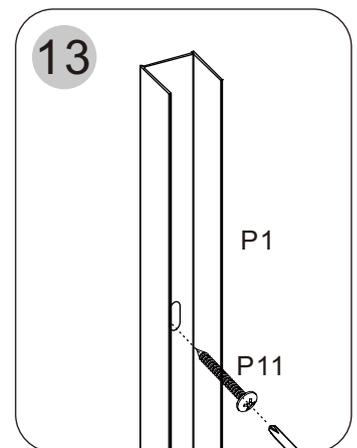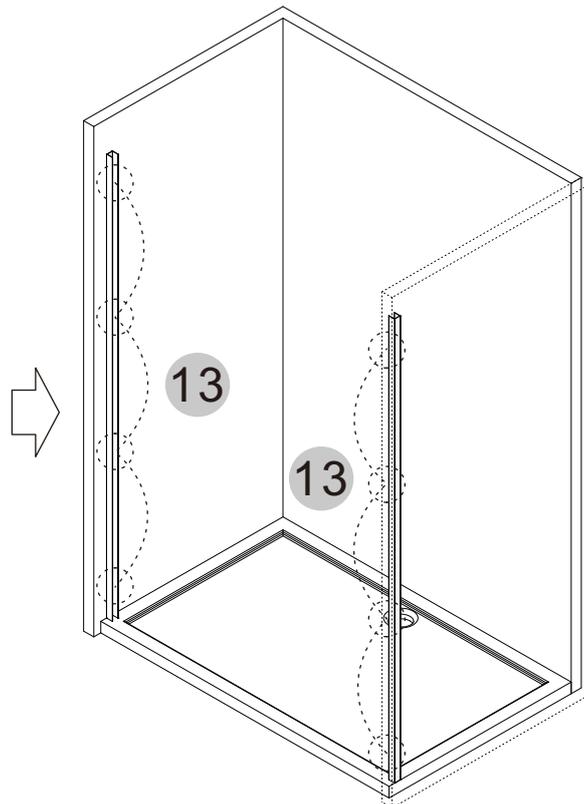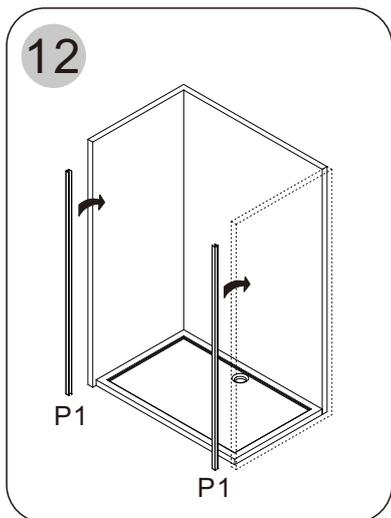

x8



# Door Assembly Installation

Extend the track to join the frame with the edge strip

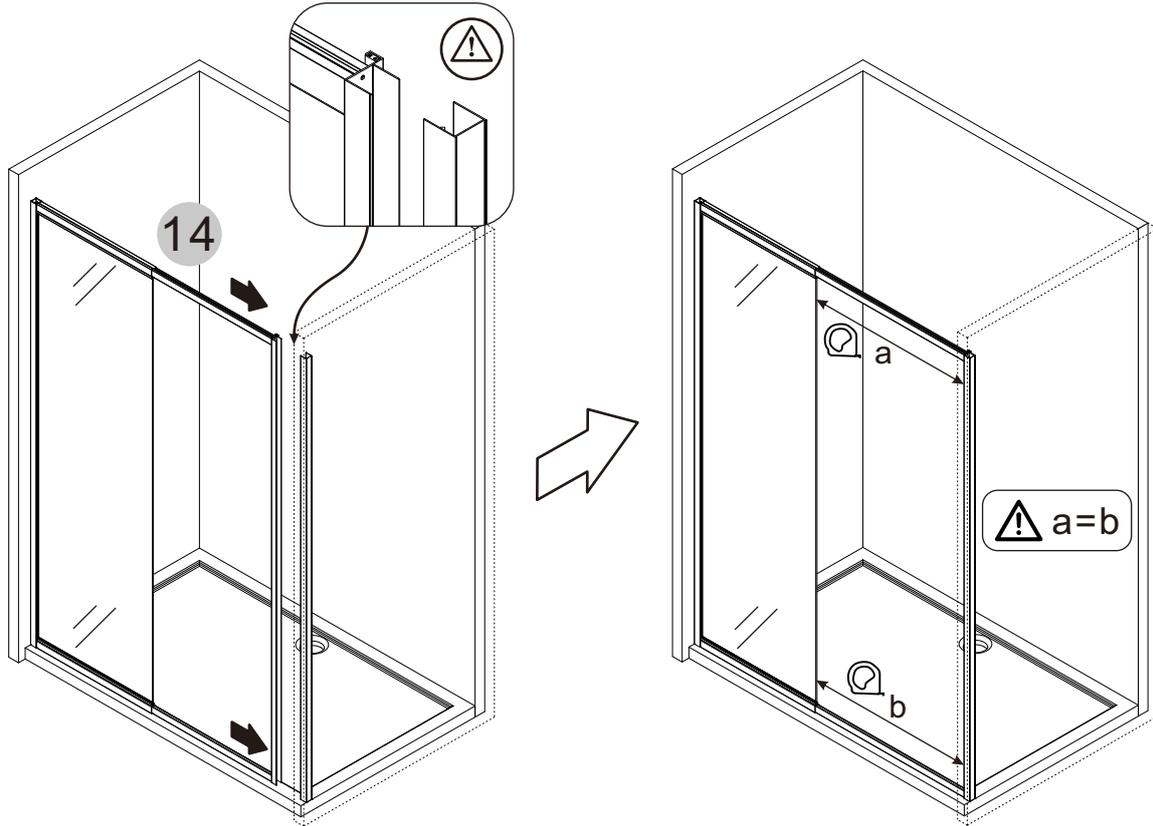





Picture	NO.	Qty.
	P9	x2

# Pivot Installation

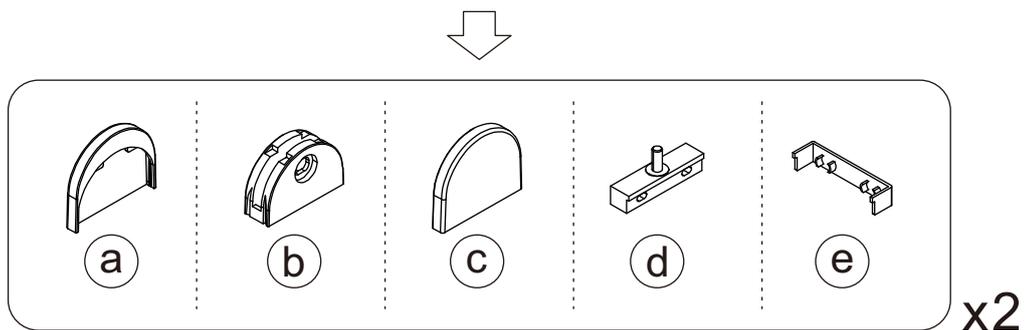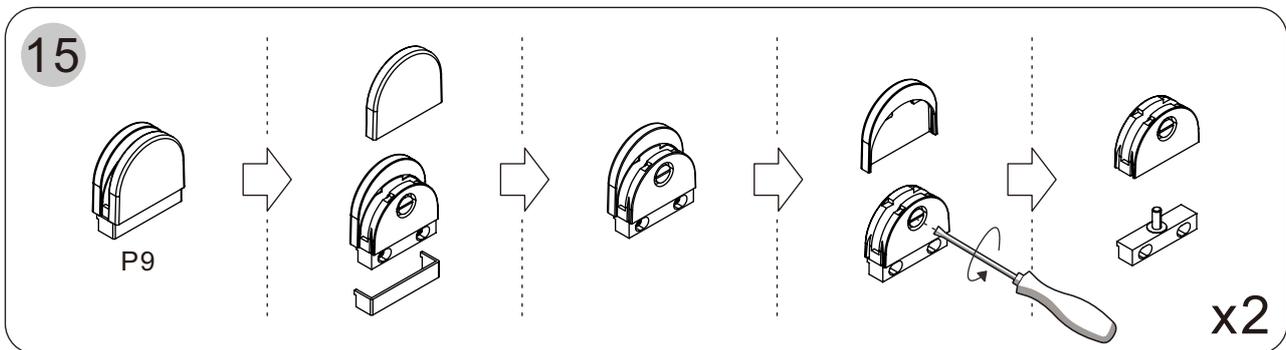



Glass Door Installation

Picture	NO.	Qty.
	P4	x1

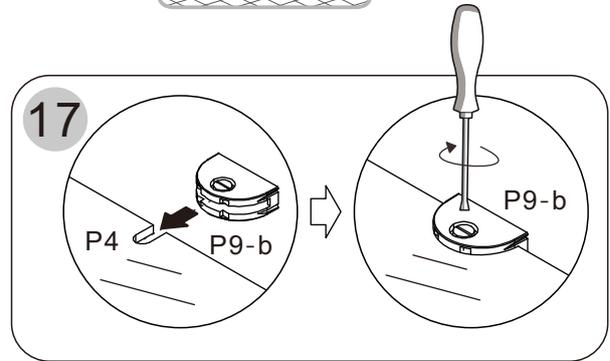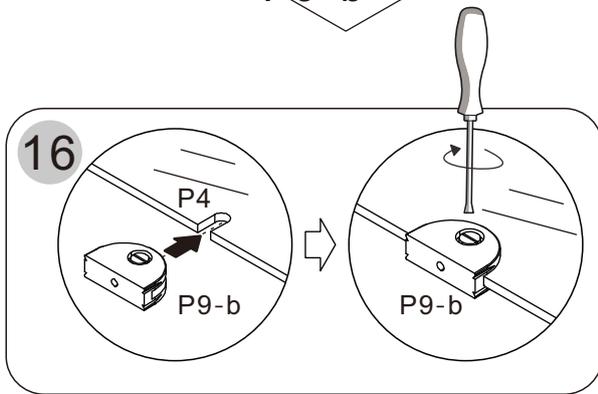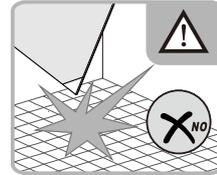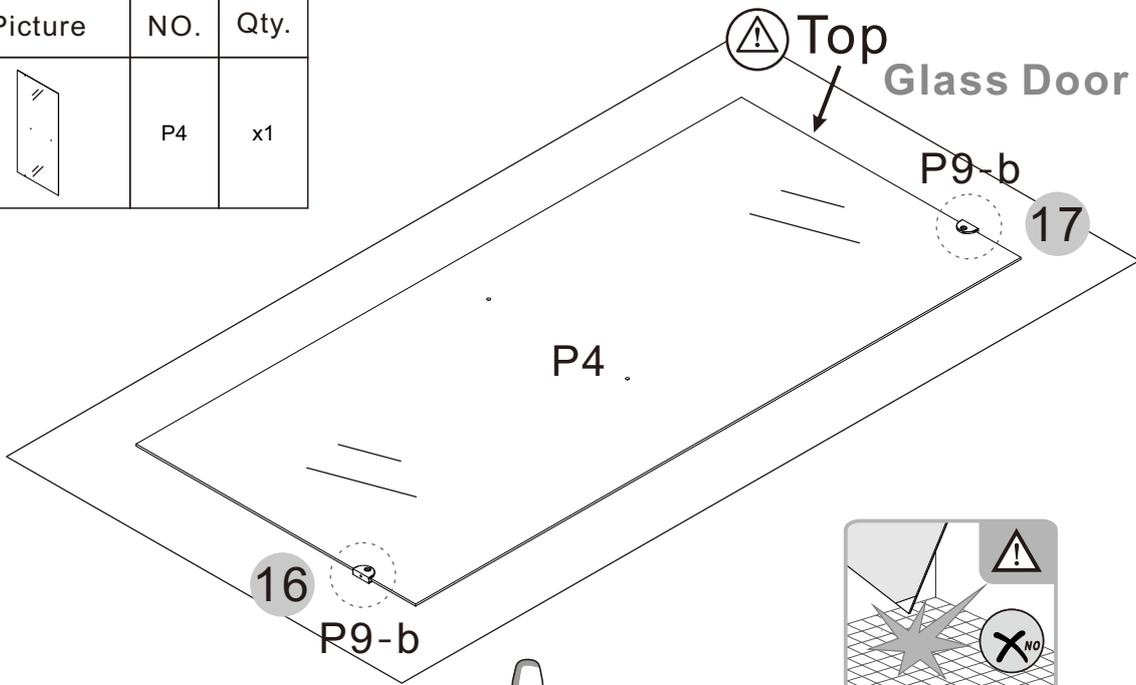







Picture	NO.	Qty.
 ST4X10	P16	x2

Pivot Installation

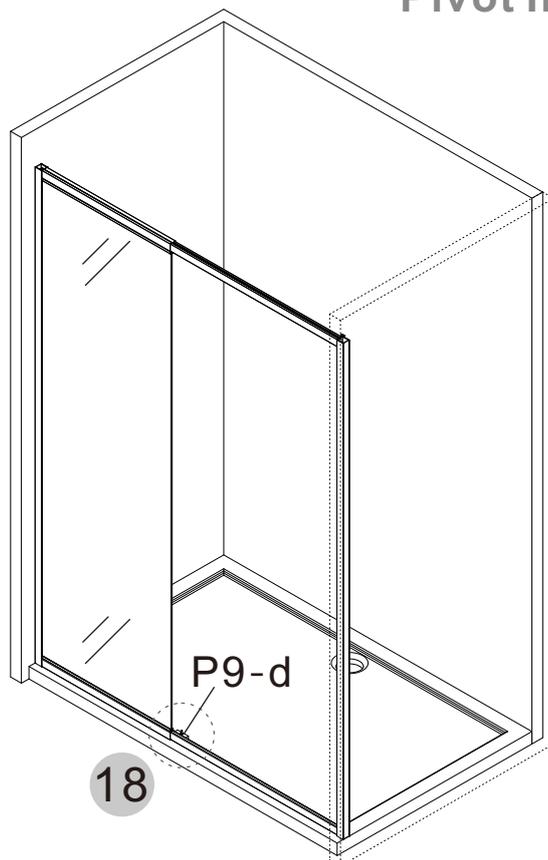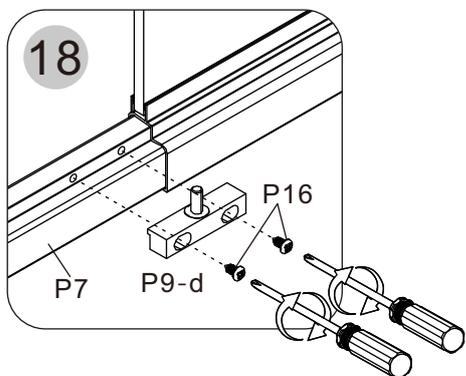




# Glass Door Installation

Picture	NO.	Qty.
 ST4X10	P16	x2

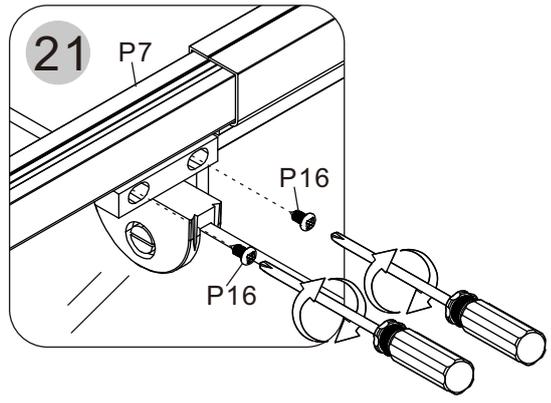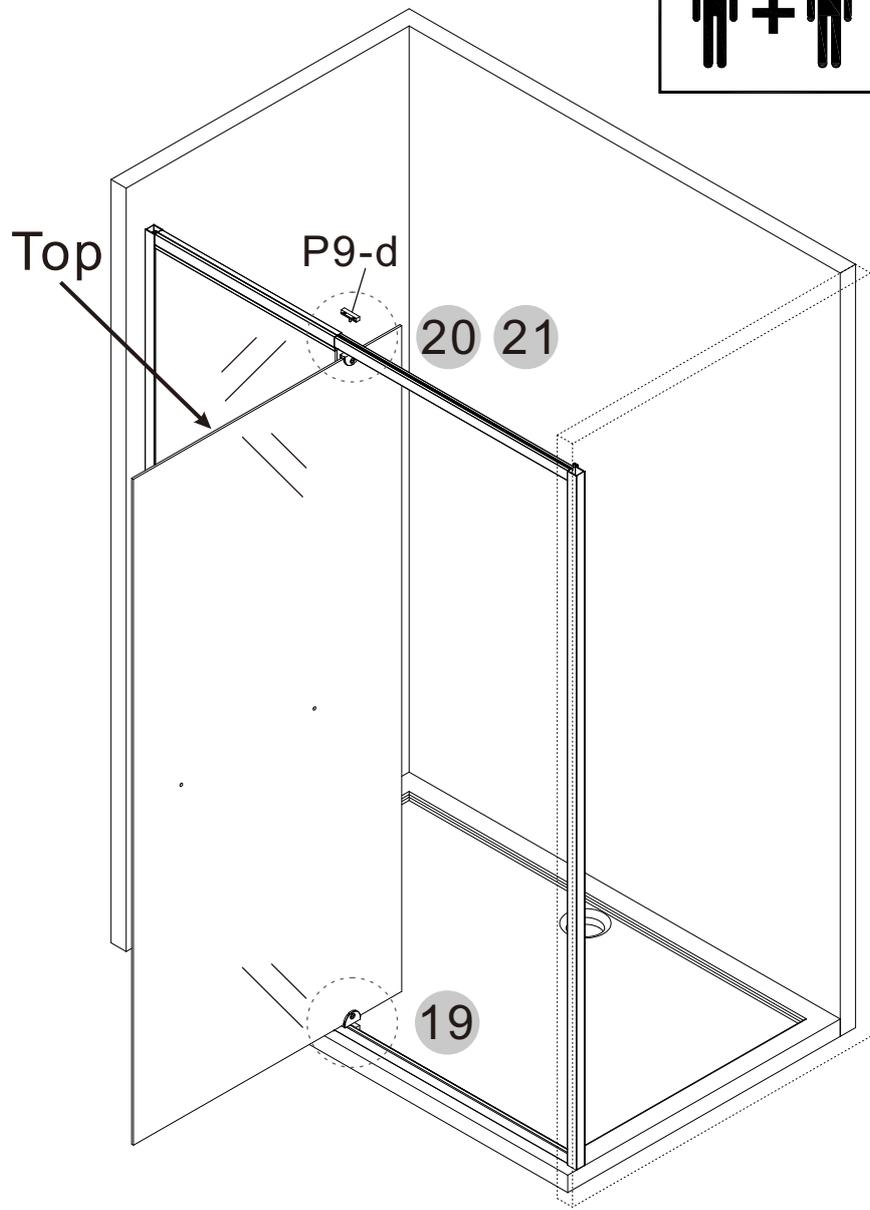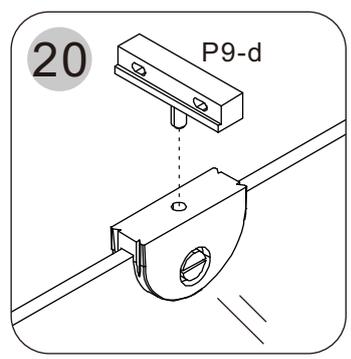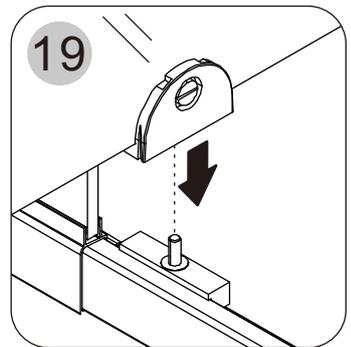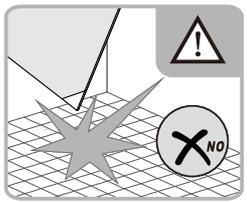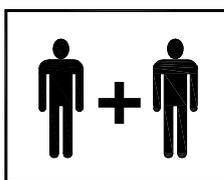





Picture	NO.	Qty.
	P5	x1
	P6	x1

### Anti-water Strip Installation

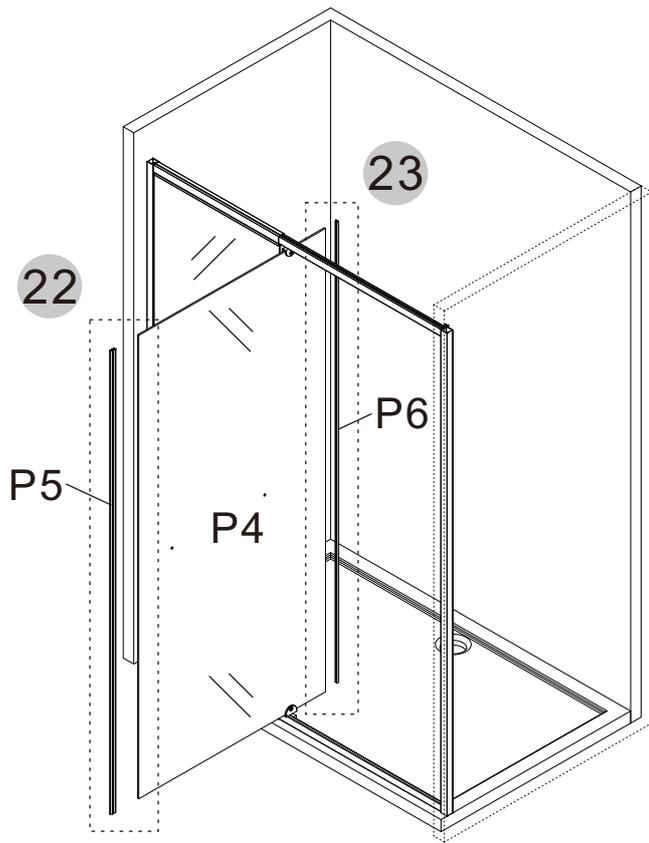
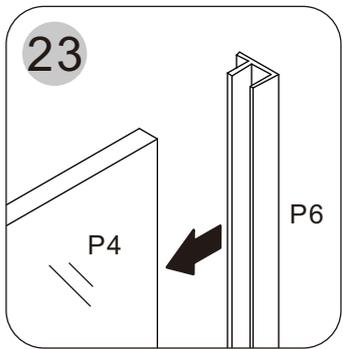
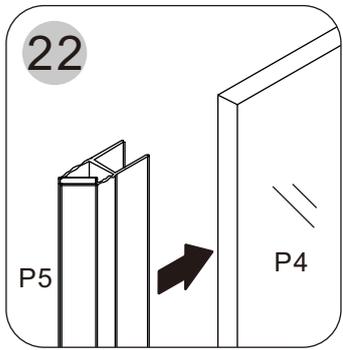


Picture	NO.	Qty.
	P10	x1

### Bottom Anti-water Strip Installation

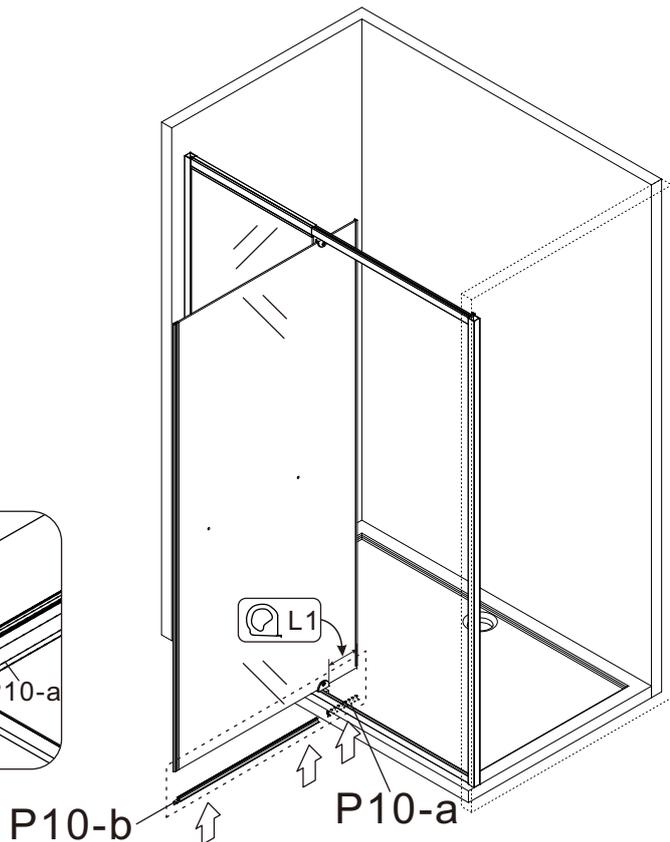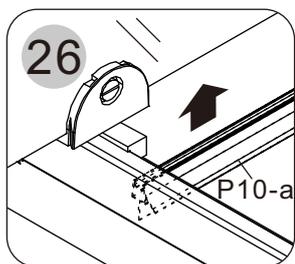
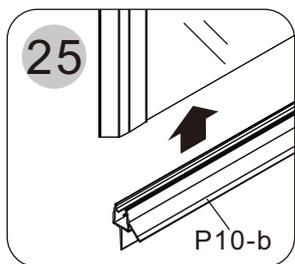
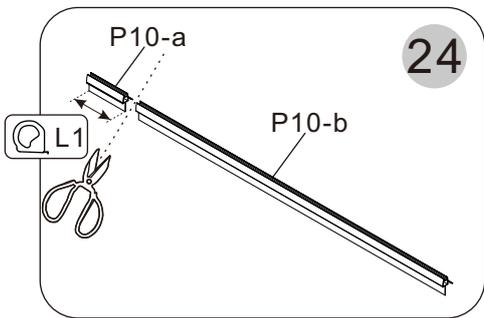


## Bottom Anti-water Strip Installation

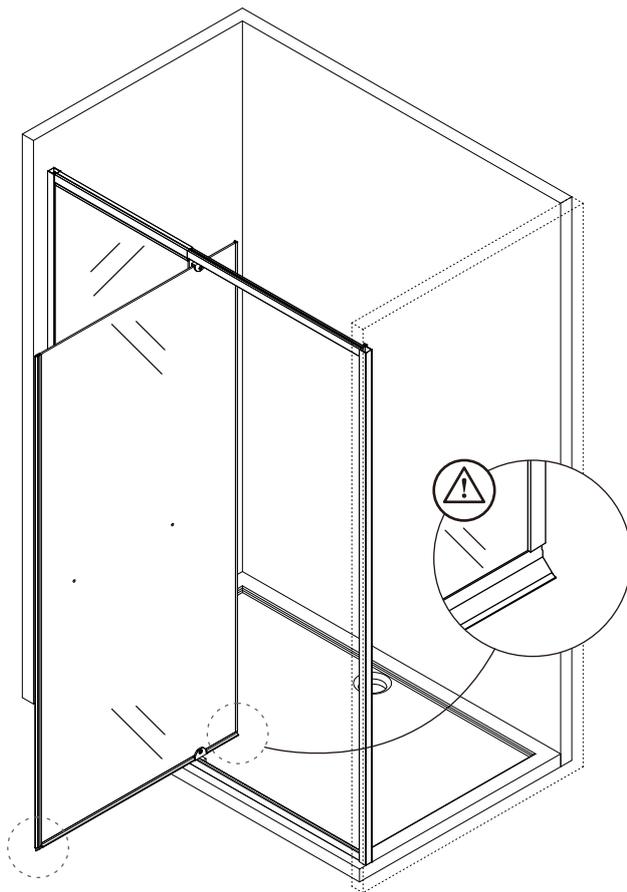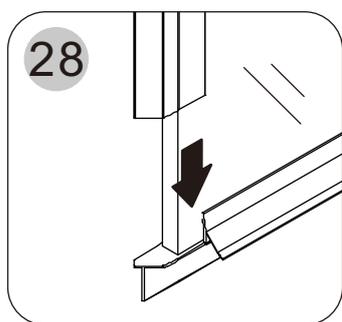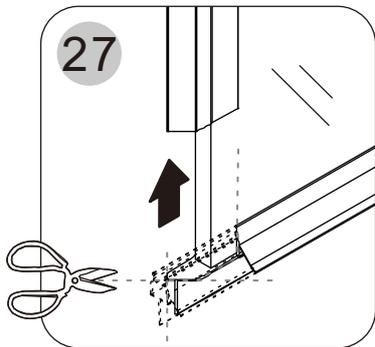



Picture	NO.	Qty.
	P8	x1

## Handle Installation

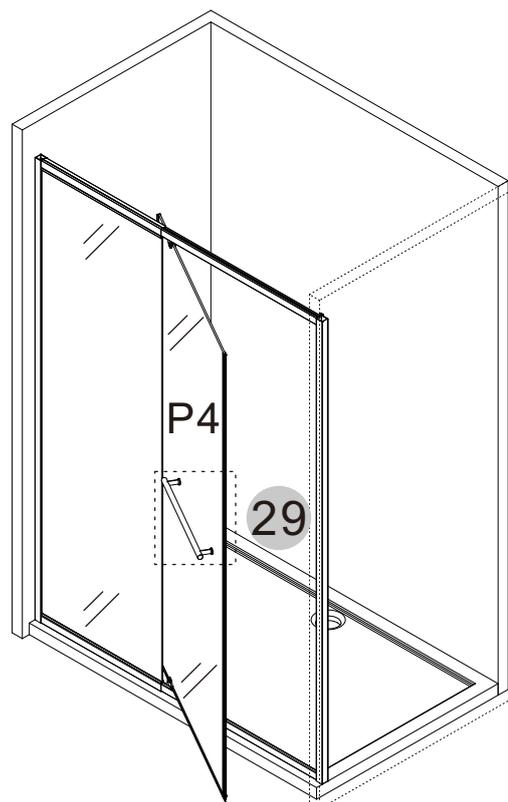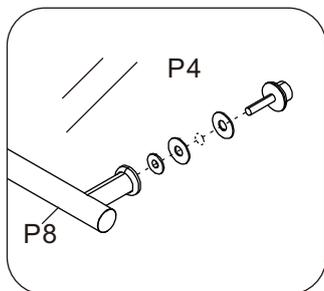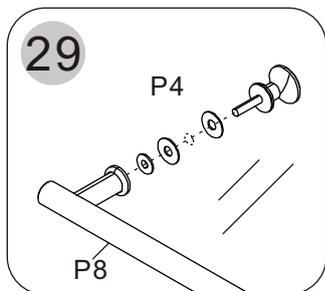




Picture	NO.	Qty.
	P6	x1

## Anti-water Strip Installation

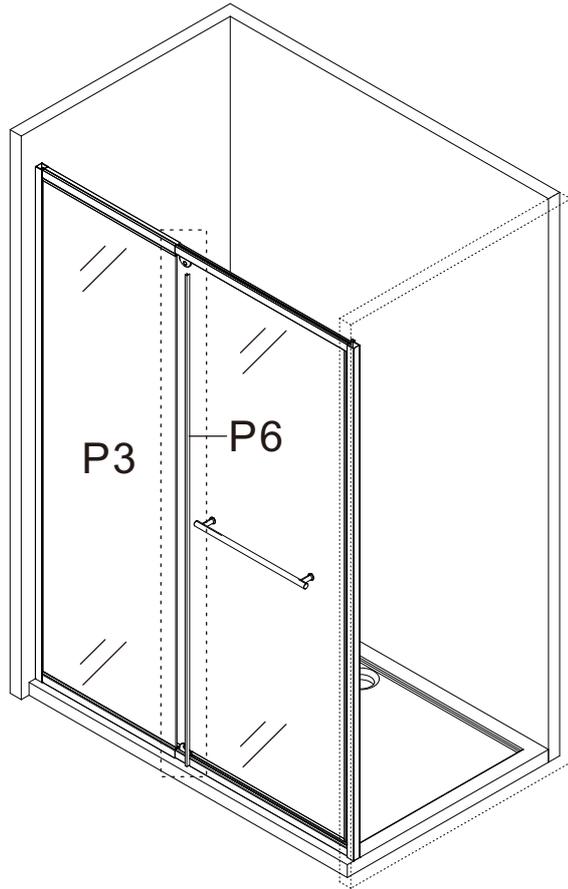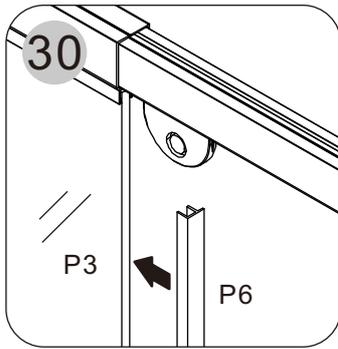







Picture	NO.	Qty.
	P13	x3
	P14	x1

## Top & Bottom Rails Fixation

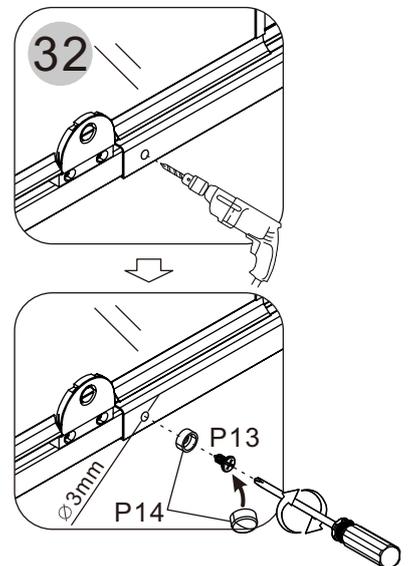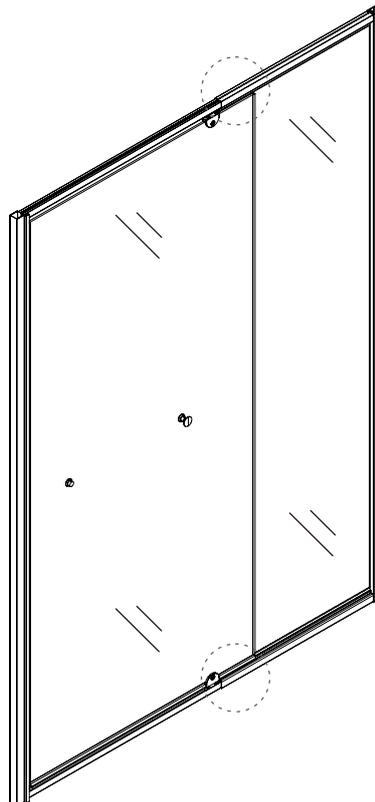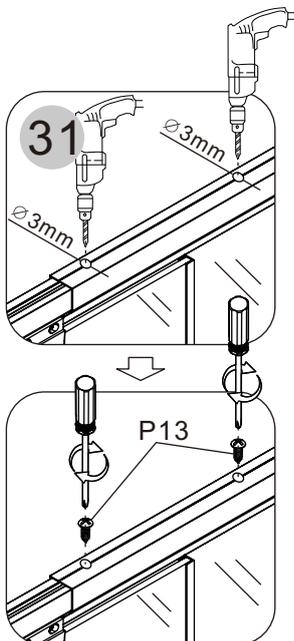

# Assembly Fixation

Picture	NO.	Qty.
 ST4X10	P13	x6
	P14	x6

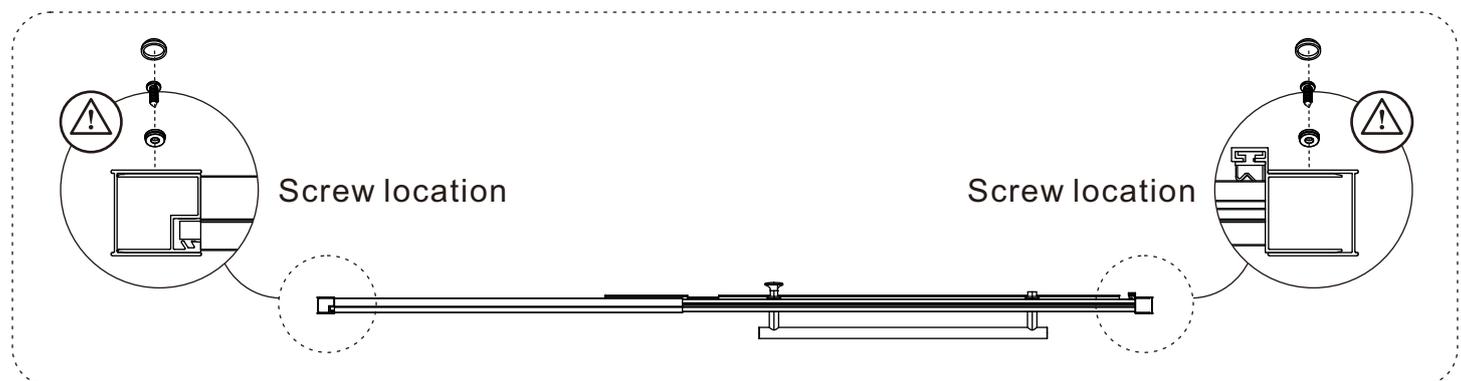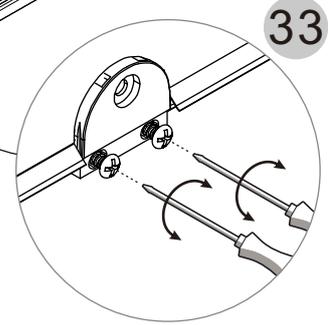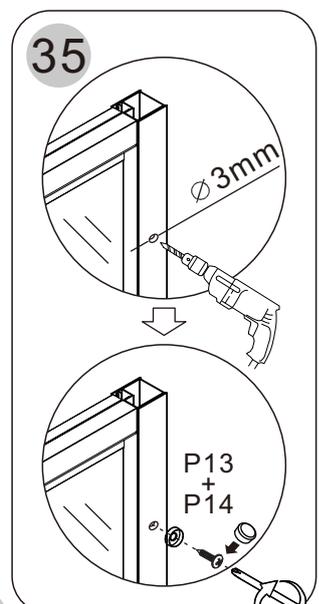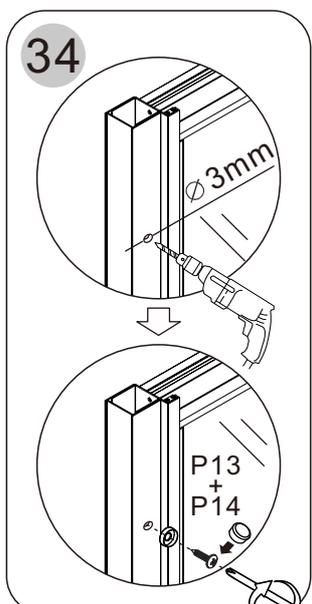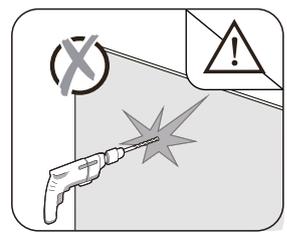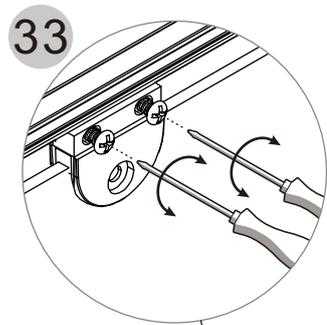

# Glass Door Installation

