


# ASSEMBLY INSTRUCTION


## DINNING SET

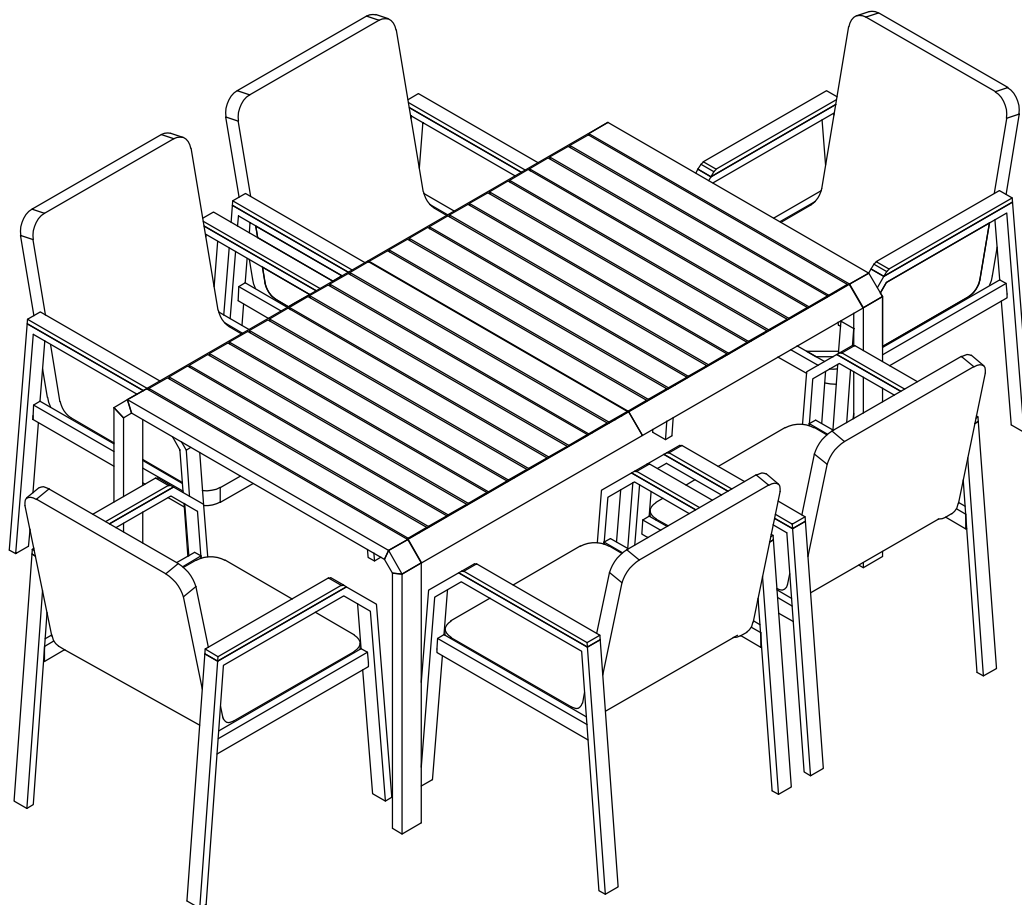


**N704P221200;N704P221201;N704P221202**

**Notice:**

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.





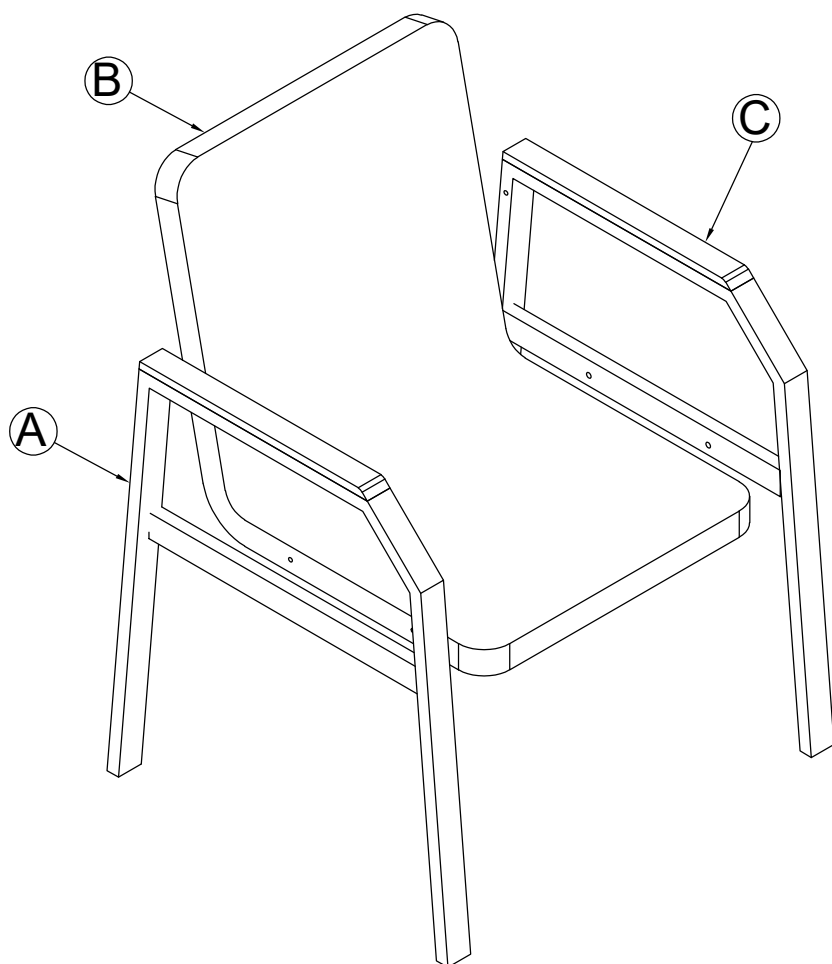


**x6**

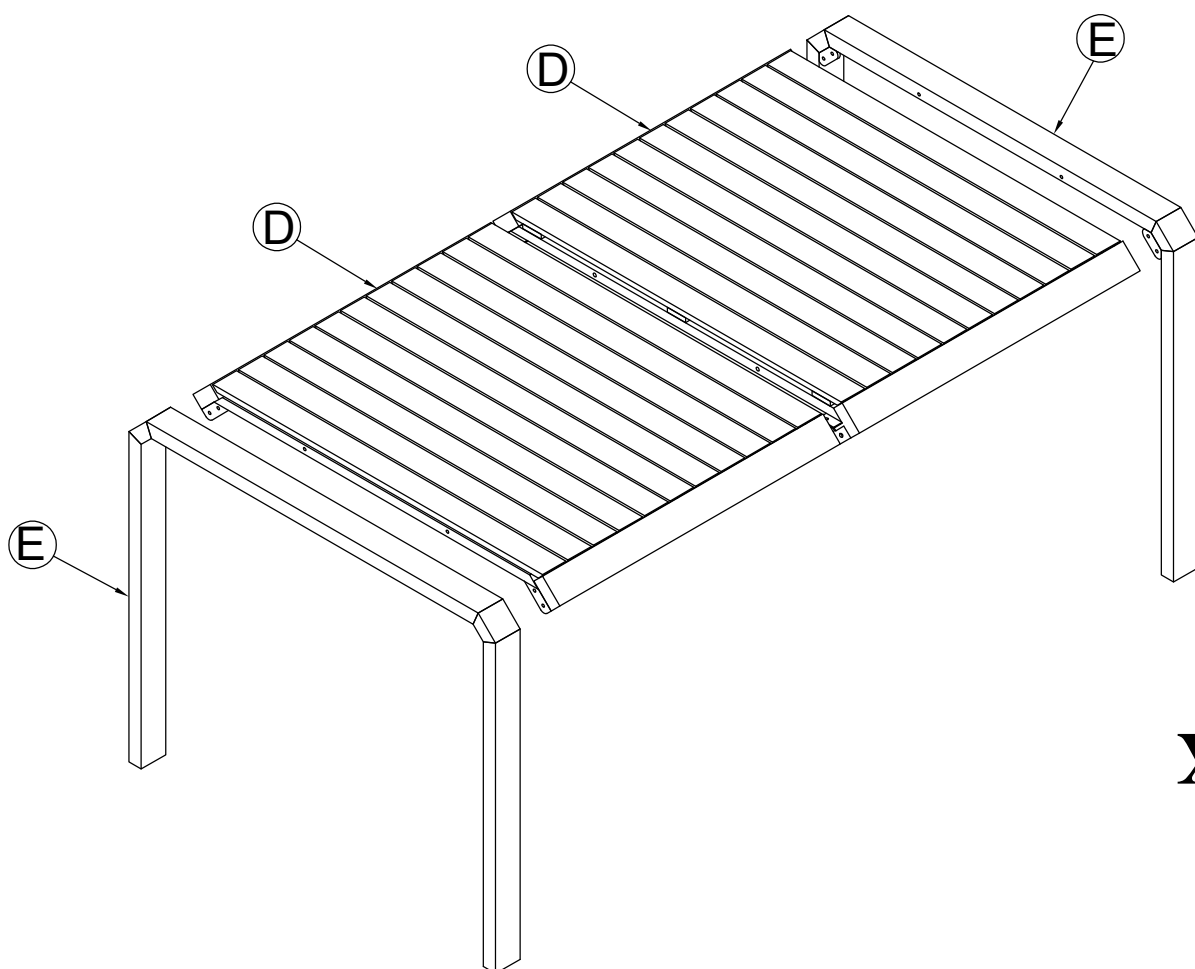
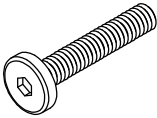
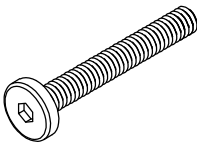
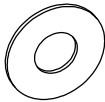
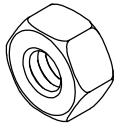
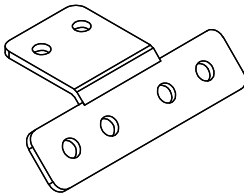
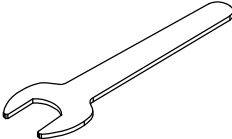



**x1**

## Part List:
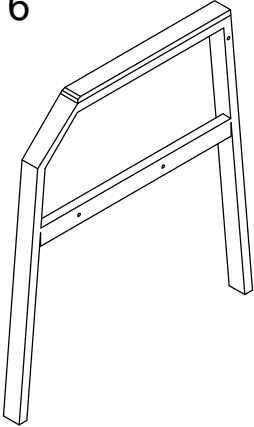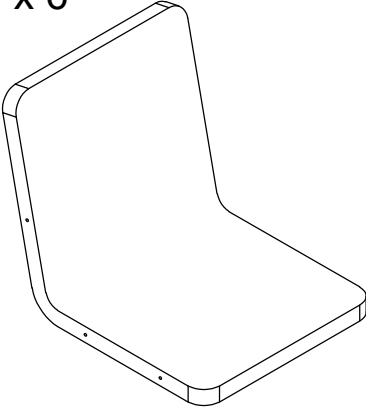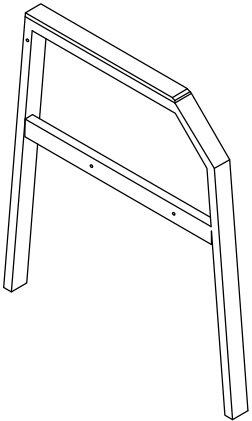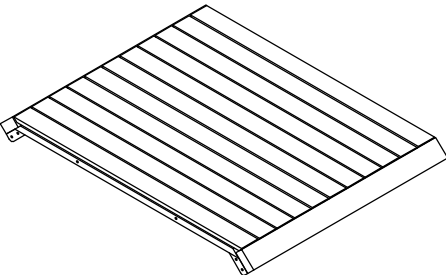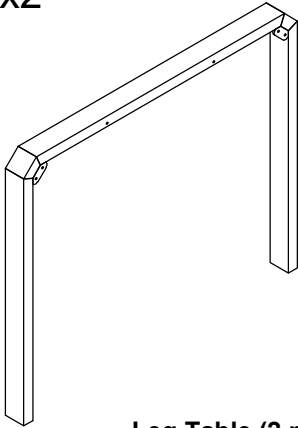
<b>A</b> x 6  <b>Right Leg (6 pcs)</b>	<b>B</b> x 6  <b>Seat Chair Frame (6 pcs)</b>	<b>C</b> x 6  <b>Left Leg (6 pcs)</b>
<b>D</b> x2  <b>Top Table (2 pcs)</b>	<b>E</b> x2  <b>Leg Table (2 pc)</b>	


## Hardware List:

<b>1</b> x 20 pcs  <b>Extra (2 pcs)</b> <b>BOLT M6 x 20 MM</b>	<b>2</b> x 40 pcs  <b>Extra 2 pcs</b> <b>BOLT M6 x 40 MM</b>	<b>3</b> x 2 pcs  <b>Extra 1 pc</b> <b>BOLT M6 x55MM</b>	<b>4</b> x 64 pcs  <b>Extra 3 pcs</b> <b>Flat Washer M6</b>
<b>5</b> x 2 pcs  <b>Extra 1 pc</b> <b>ERU M6</b>	<b>6</b> x 2 pcs  <b>CONNECTOR</b>	<b>7</b> x 1 pc  <b>KEY</b>	<b>8</b> x 2 pcs  <b>ALLEN KEY</b>


CARTON CONTENT:

N704P221200



A x 3

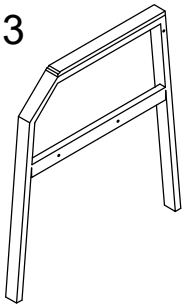

B x 3

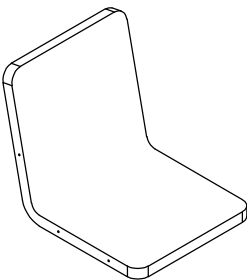


C x 3

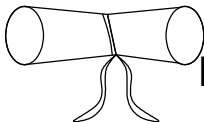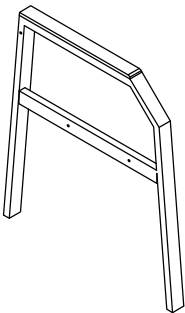


Hardware

N704P221201



A x 3

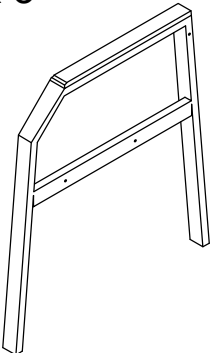

B x 3

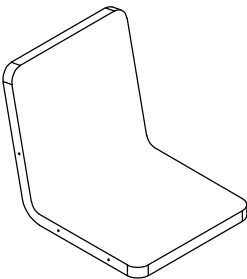


C x 3

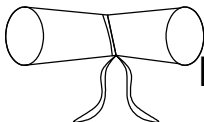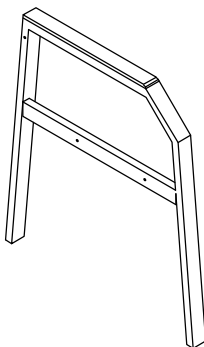



Hardware

N704P221202

E x 2


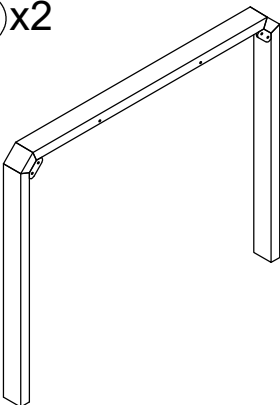



D x 2

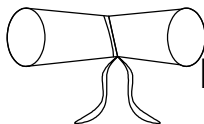
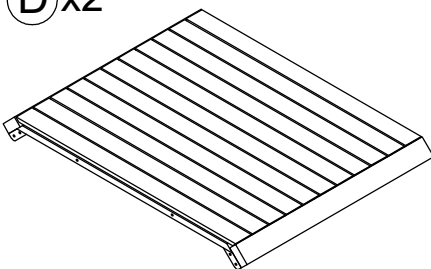



Hardware


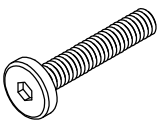
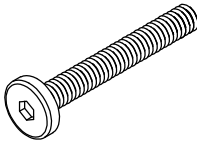
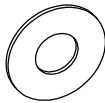
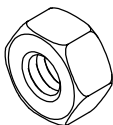
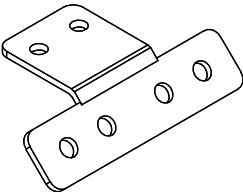
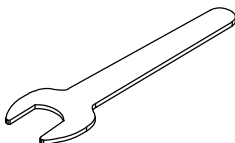

## N704P221200
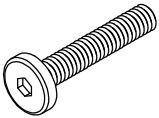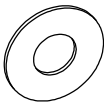
<b>2</b>	x 18 pcs	<b>4</b>	x 18 pcs	<b>8</b>	x 1 pcs	
						
BOLT M6 x 40MM		Flat Washer M6		ALLEN KEY		

## N704P221201

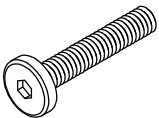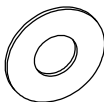
<b>2</b>	x 18 pcs	<b>4</b>	x 18 pcs	<b>8</b>	x 1 pcs	
						
BOLT M6 x 40MM		Flat Washer M6		ALLEN KEY		

## N704P221202

<b>1</b>	x 20 pcs	<b>2</b>	x 4 pcs	<b>3</b>	x 2 pcs	<b>4</b>	x 28 pcs
							
BOLT M6 x 20 MM		BOLT M6 x 40MM		BOLT M6 x55MM		Flat Washer M6	
<b>5</b>	x 2 pcs	<b>6</b>	x 2 pcs	<b>7</b>	x 1 pc	<b>8</b>	x 1 pcs
							
ERU M6		CONNECTOR		KEY		ALLEN KEY	

**STEP 1**


<b>A</b>	<b>x1</b>
<b>B</b>	<b>x1</b>
<b>2</b>	<b>x2</b>
<b>4</b>	<b>x2</b>

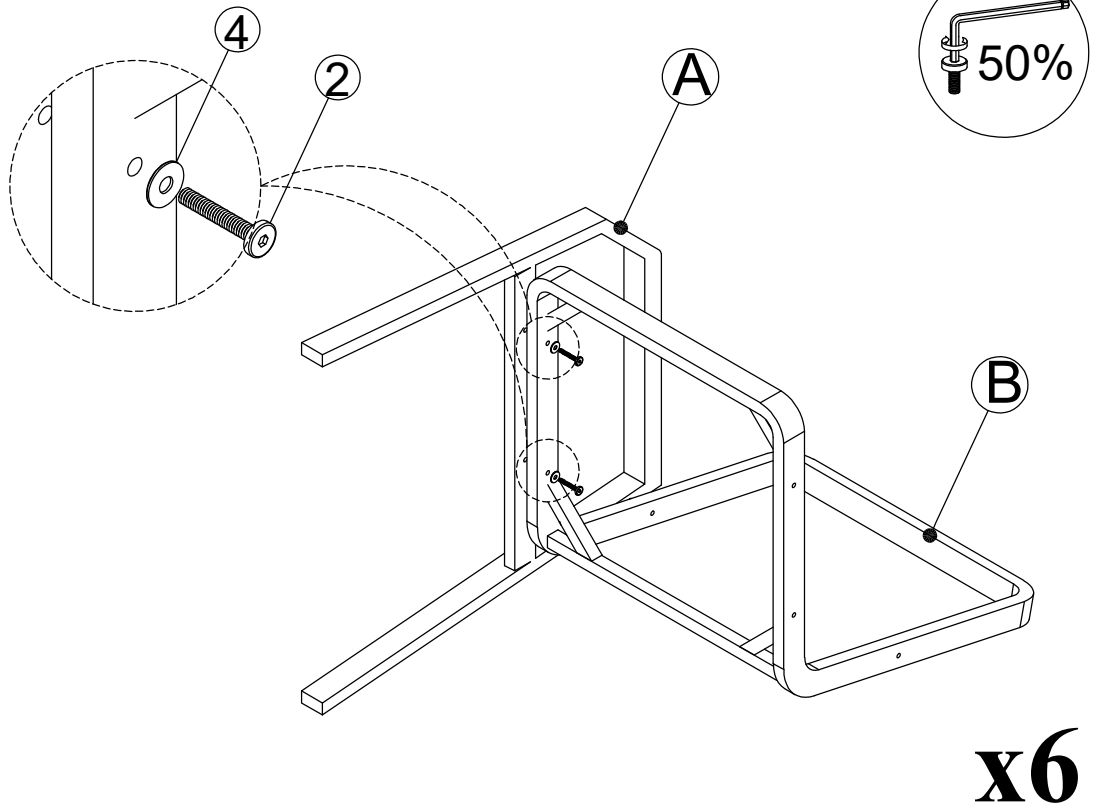

Connect Seat Chair (B) & Right Leg (A), Tighten Bolt (2) & Flat Washer (4) with Allen Key (8).

**STEP 2**



<b>C</b>	<b>x1</b>
<b>2</b>	<b>x2</b>
<b>4</b>	<b>x2</b>

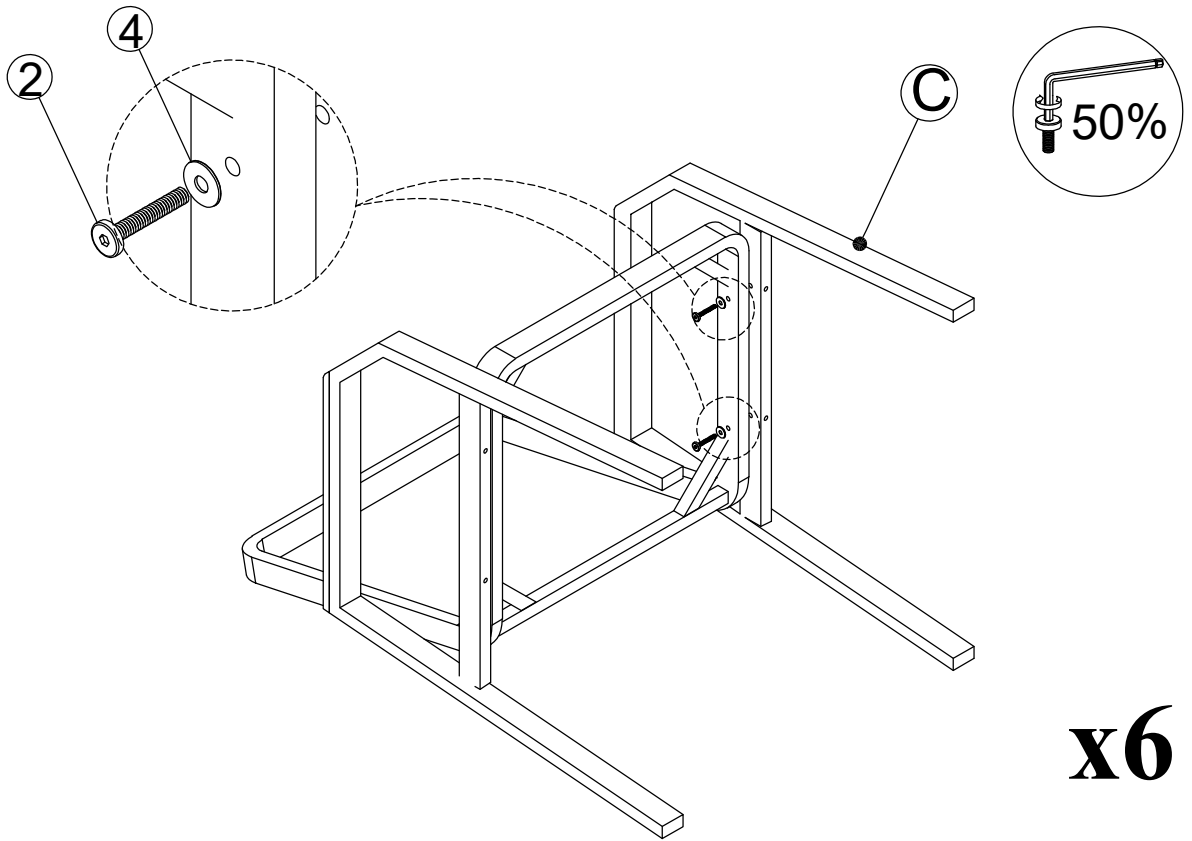

Connect the part from step 1 & Right Leg (C), Tighten Bolt (2) & Flat Washer (4) with Allen Key (8).


**STEP 3**

- |   |    |
|---|----|
| 2 | x2 |
| 4 | x2 |

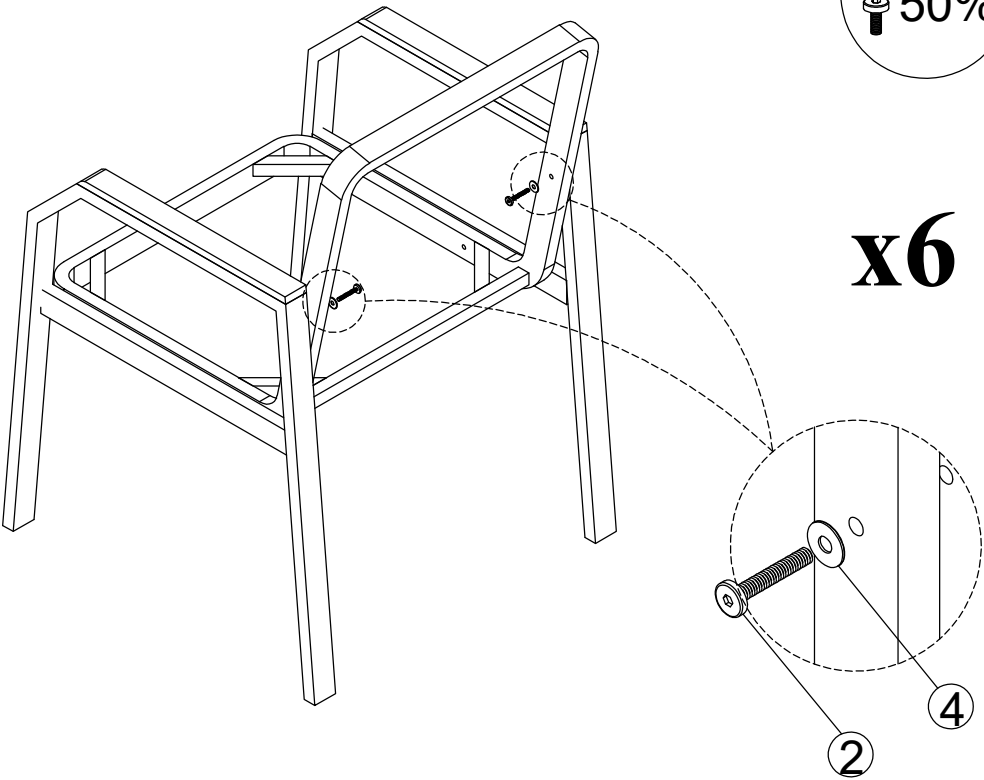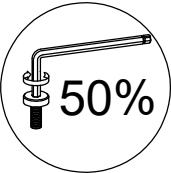

Connect the part from step 2 with Tighten Bolt (2) & Flat Washer (4) with Allen Key (8).

**STEP 4**

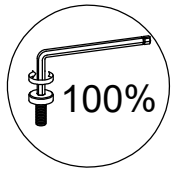

Finish Chair.

## STEP 5


D	x2
---	----

3	x2
---	----

4	x4
---	----

5	x2
---	----

7	x1
---	----

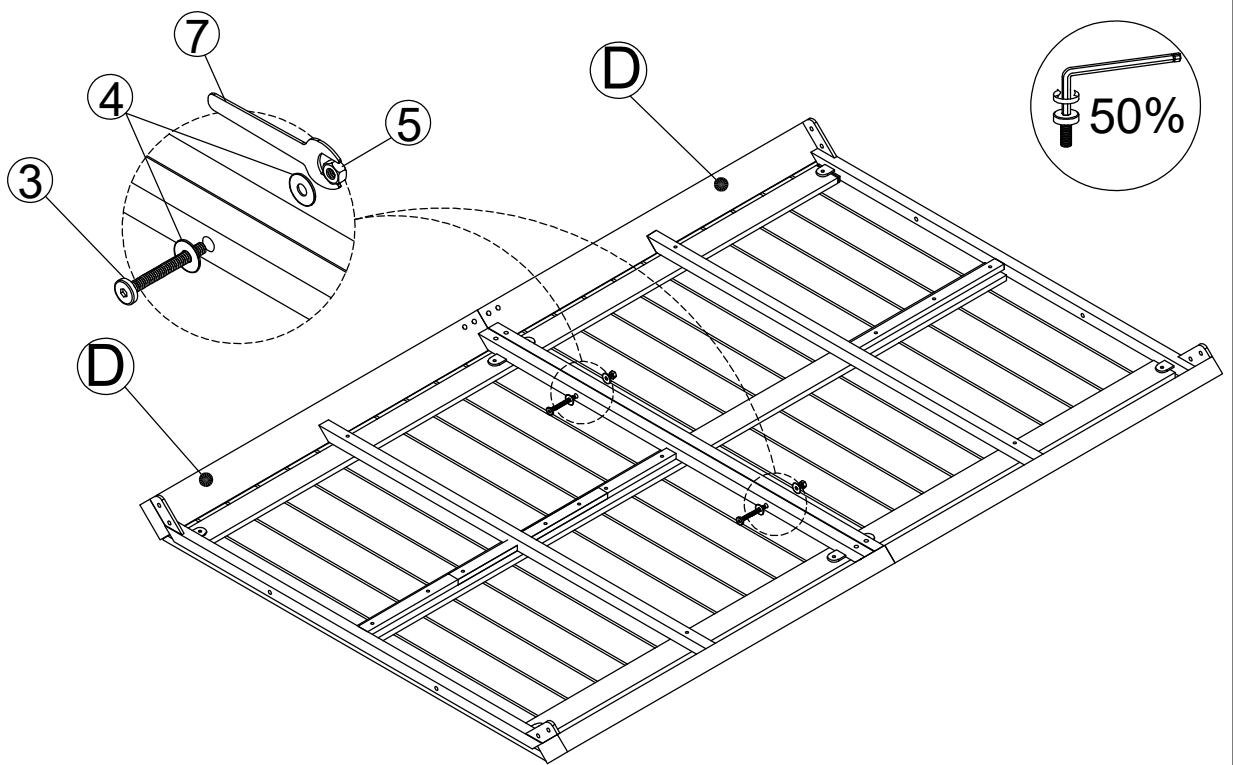


Connect Top Table (D) Tighten Bolt (3) & Flat Washer (4) & Nut (5), Key (7) & with Allen Key (8) .

## STEP 6

1	x12
---	-----

4	x12
---	-----

6	x 2
---	-----

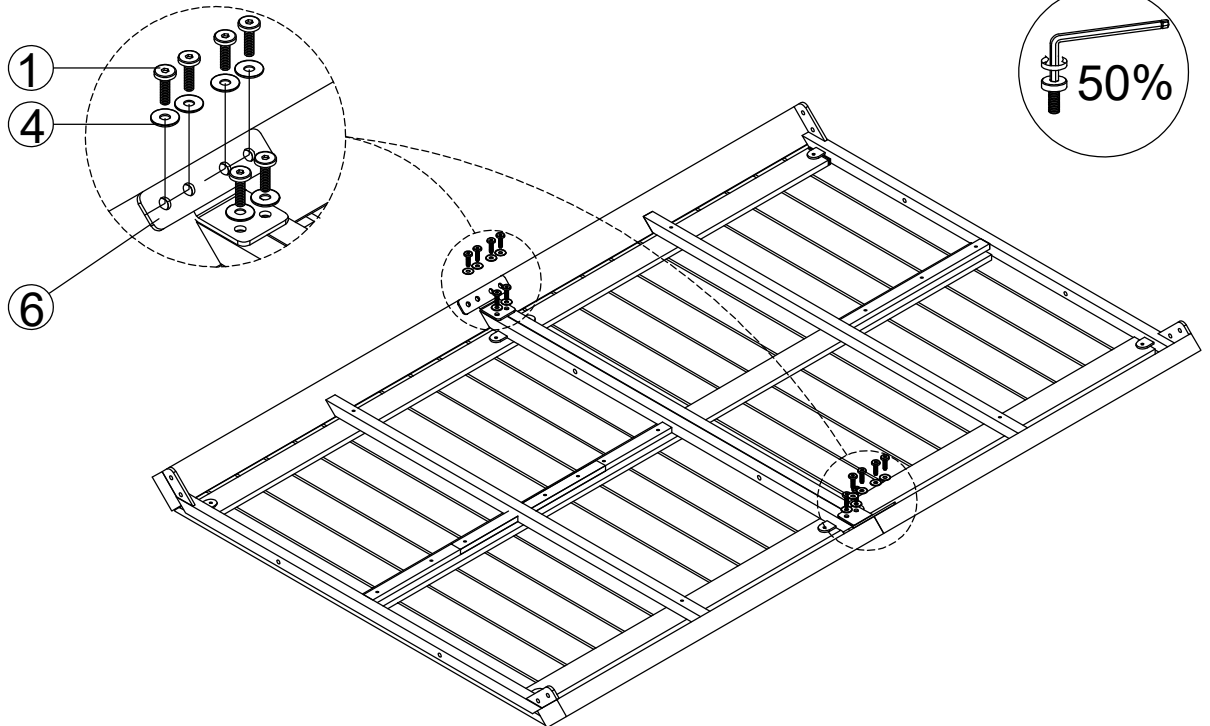

Connect the part from step 5 with Connector (6), Tighten Bolt (1) & Flat Washer (4) with Allen Key (8).




## STEP 7

E	x2
---	----

1	x8
---	----

4	x8
---	----

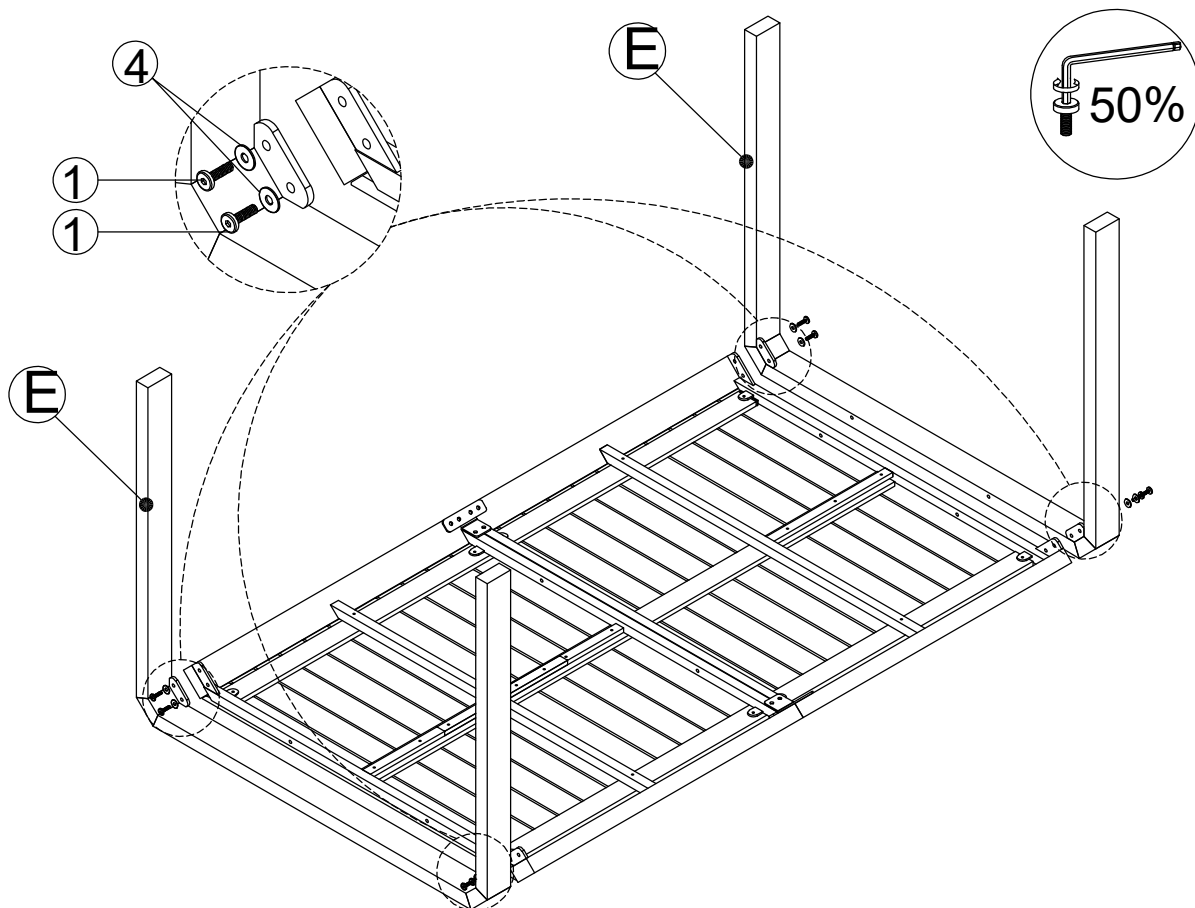


Connect the part from step 6, Leg Table (E), Tighten Bolt (1) & Flat Washer (4) with Allen Key (8).

## STEP 8



2	x4
---	----

4	x4
---	----

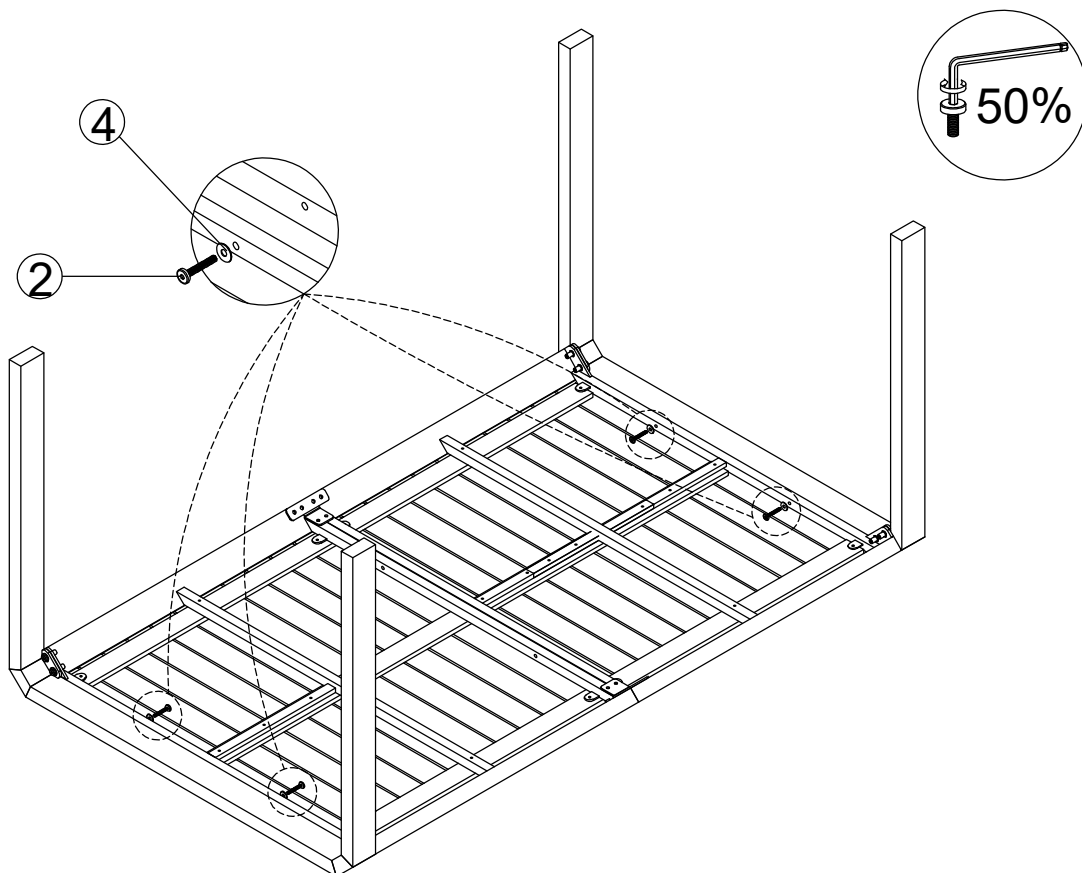


Connect the part from step 7, Tighten Bolt (2) & Flat Washer (4) with Allen Key (8).

**STEP 9**

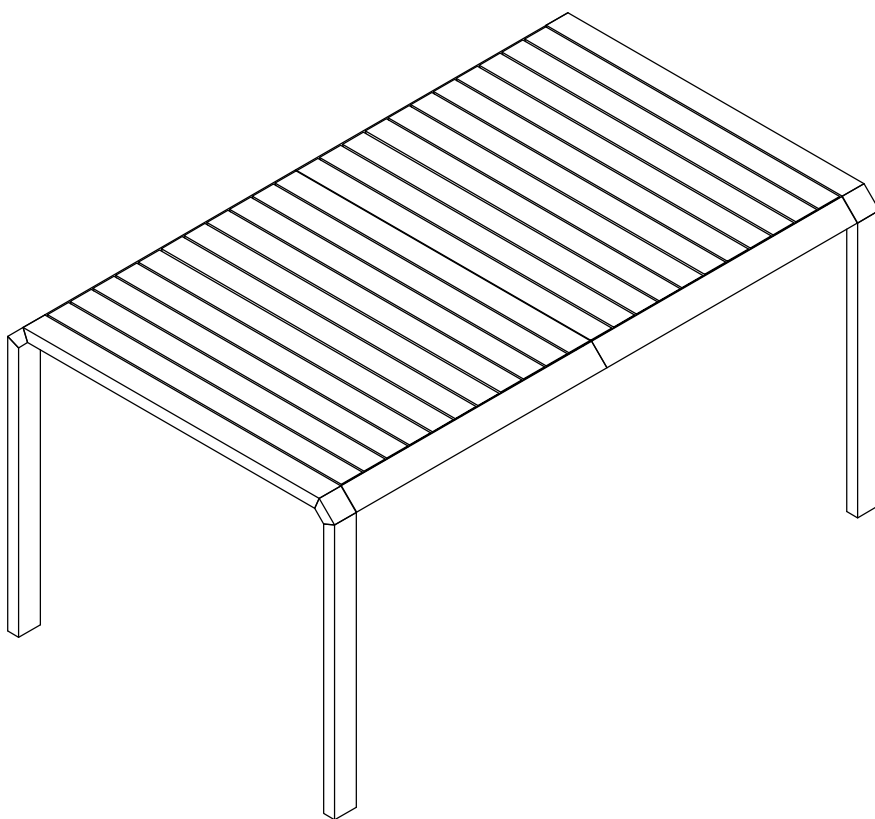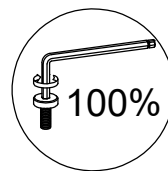

Finish Table.

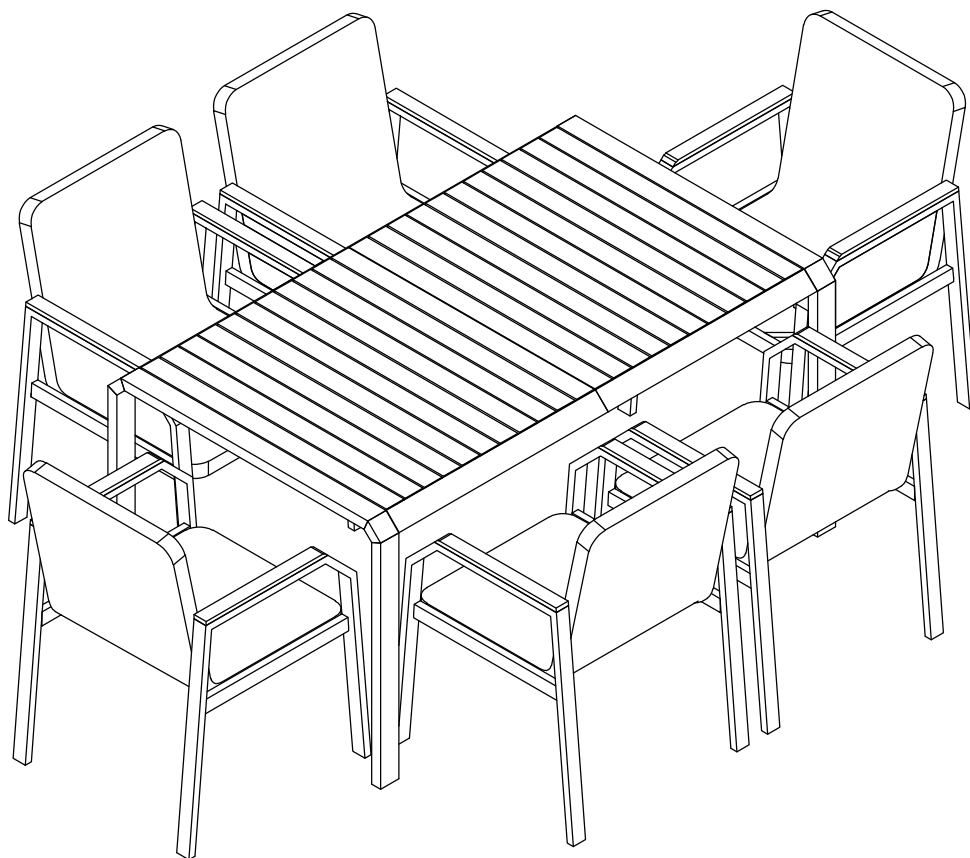

Finish.