



Vinyl Privacy Gates

INSTALLATION INSTRUCTIONS

For use with Emblem & Everton Panels



Read all instructions prior to installing product.

Refer to manufacturers safety instructions when operating any tools.

To register your product, please visit:

freedomproduct.com

⚠ WARNING:


- Improper installation of this product can result in personal injury. Always wear safety goggles when cutting, drilling and assembling the product.
- Incorrect installation may cause harm to the product or individual.
- Not pool code approved.

NOTICE:

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store, for assistance or replacement parts call: 1-800-336-2383.

BEFORE YOU BEGIN:

Vinyl gate posts require an internal support system for weight-bearing purposes therefore a post stiffener is required. Post stiffener needs to be purchased separately.

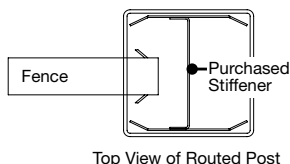


TOOLS/MATERIALS NEEDED:

Emblem/Everton Panel
Phillips Screwdriver
Safety Glasses
Line Level
Tape Measure
Drill
#2 Square Drive Bit
2" Wood Blocks
3/32" Bit
Square
Pencil

Emblem/Everton Gate Component list:


Description
Boards
U-Channels
Top Rail
Bottom Rail
Gate Uprights
Upright Inserts
Upright Caps
Screws
Vinyl Cement
Boerboel® Hinges
Boerboel® Latch

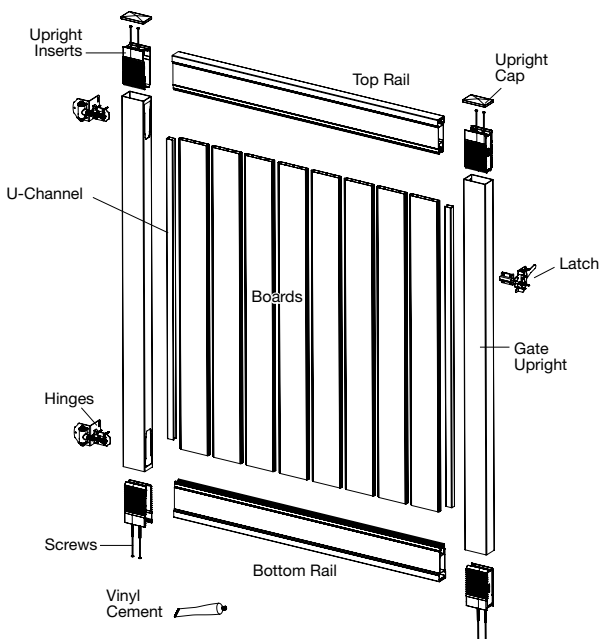

To obtain and review a copy of the warranty please go to: Freedomproduct.com/warranty. You can also contact 1.888.418.4400 or write to Freedom Outdoor Living, 7830 Freeway Circle, Middleburg Heights, Ohio 44130 to obtain a copy of the warranty. For spanish version of instructions please visit FreedomProduct.com.


1

Lay gate upright on a smooth, flat and clean surface. Slide upright inserts inside ends of gate uprights (Fig. 1).

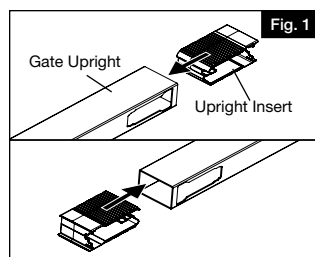


2

Apply vinyl cement to all inside surfaces of the first upright where the rails will be inserted (Fig. 2).

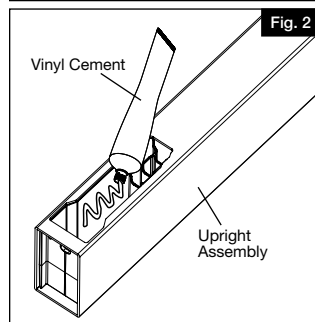


3

Insert both rails into one upright assembly (Fig. 3).

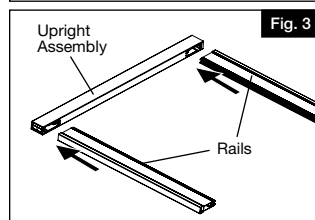


4

- Place the U-channels on the end boards, then slide boards into rails, locking them together (Fig. 4).
- Apply vinyl cement to all inside surfaces of the second upright where rails will be inserted.
- Attach the remaining upright assembly to the rails making sure boards fit snug.

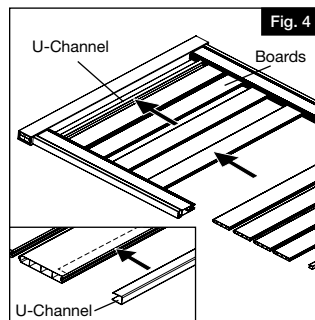


5

Measure diagonally from top of left corner rail (A) to bottom of right corner rail (B) and note the length. Then, measure diagonally from top of right corner rail (C) to bottom of left corner rail (D). Note the length. Make sure both measurements are the same before installing screws into uprights (Fig. 5).

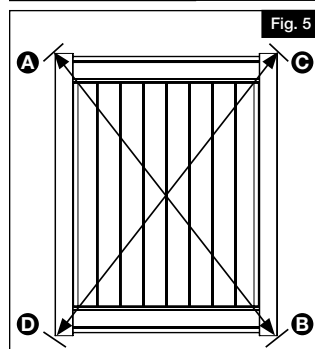


6

Install two 6" screws (provided) through each upright insert and into the rail using the molded grooves on the insert as a guide (Fig. 6).

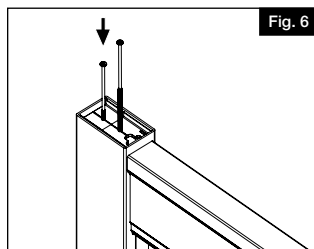

7

Install upright caps onto the top of each upright with provided vinyl cement (Fig. 7).

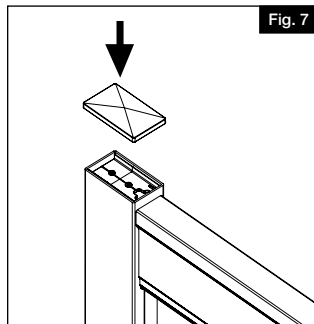

8

Check the included Boerboel® hinge & latch kit for hardware instructions or visit BoerboelGateSystems.com to obtain a copy.

BARRETTE OUTDOOR LIVING

7830 FREEWAY CIRCLE
MIDDLEBURG HEIGHTS, OHIO 44130

TEL: (800) 336-2383
WWW.FREEDOM.BARRETTEOUTDOORLIVING.COM

