


Installation Manual






BV331

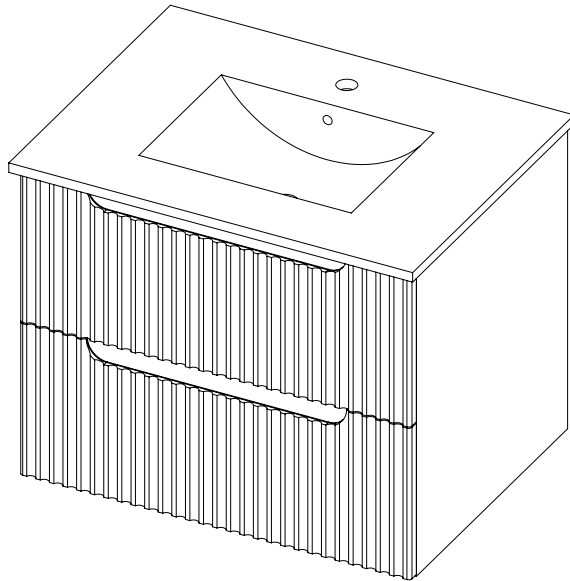

**Please keep the boxes if you need return;
Check before installation;
Return won't be accepted afterwards;**

For any question, please contact: info@royoltd.com

Pre-installation preparation


 Cross Screwdriver	 Hammer	 Tapeline
 Pencil	 Electric Drill	 Glass Cement
 Levelling Rod	 Electric Drill	 Allen Key



Spare Parts List


	H1 x32 (φ4× 14mm)	H2 x53 (φ6× 40mm)
	H3 x4 (φ6× 40mm)	H4 x53
H6-S S x2	H7 x2 (φ5× 60mm)	H8 x2 (φ8× 40mm)
H6-M M (12 Inches)		
H9 x2	H10 x18 (φ3× 16mm)	H11 x2

Structural Diagram

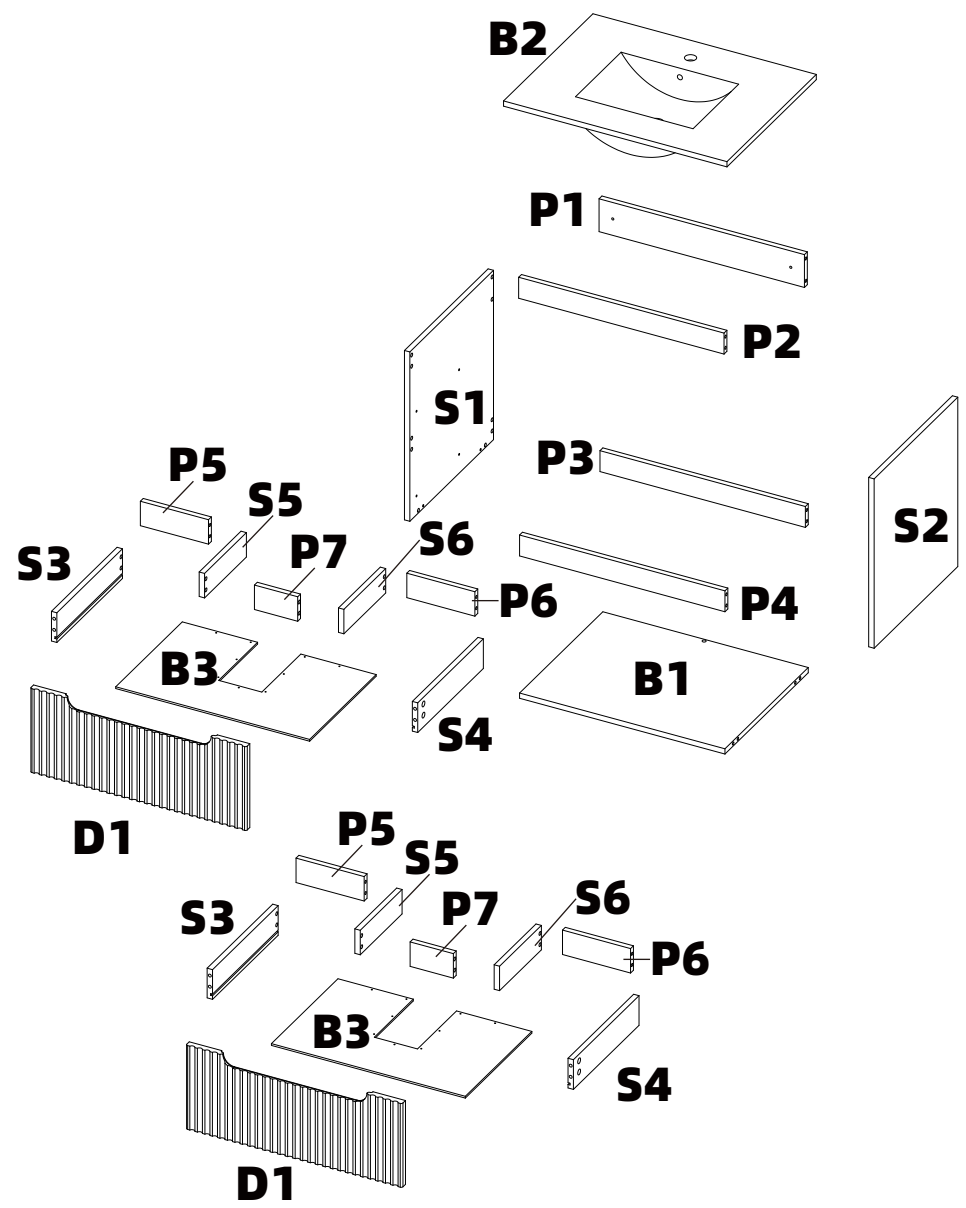


1


Neutral Board Installation

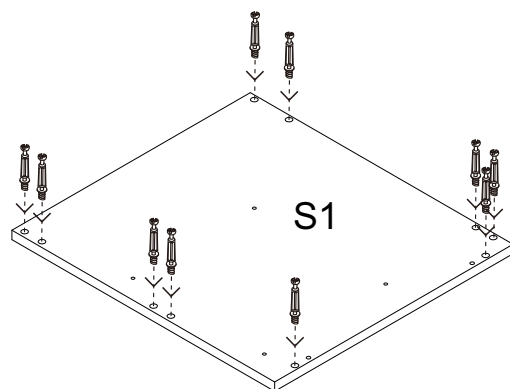


S1

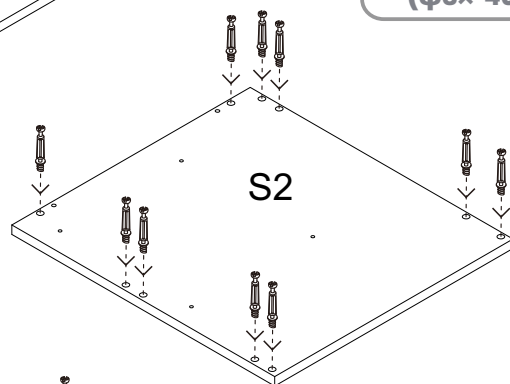

S2

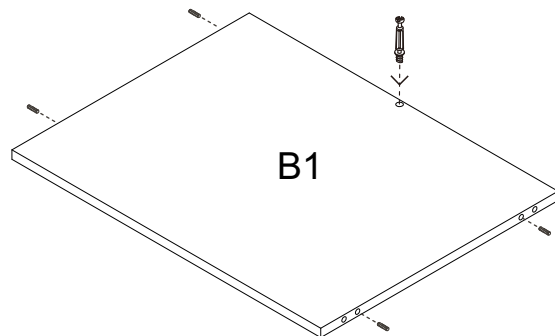


B1

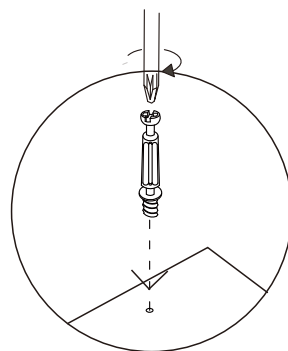



Make sure all "H2" screws are straight and right in place, not loose

2


Slider Installation

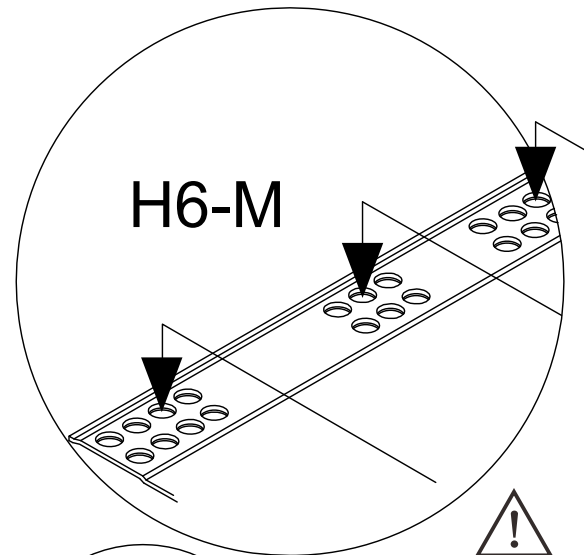

H6-M



Pay attention to the direction of the slide

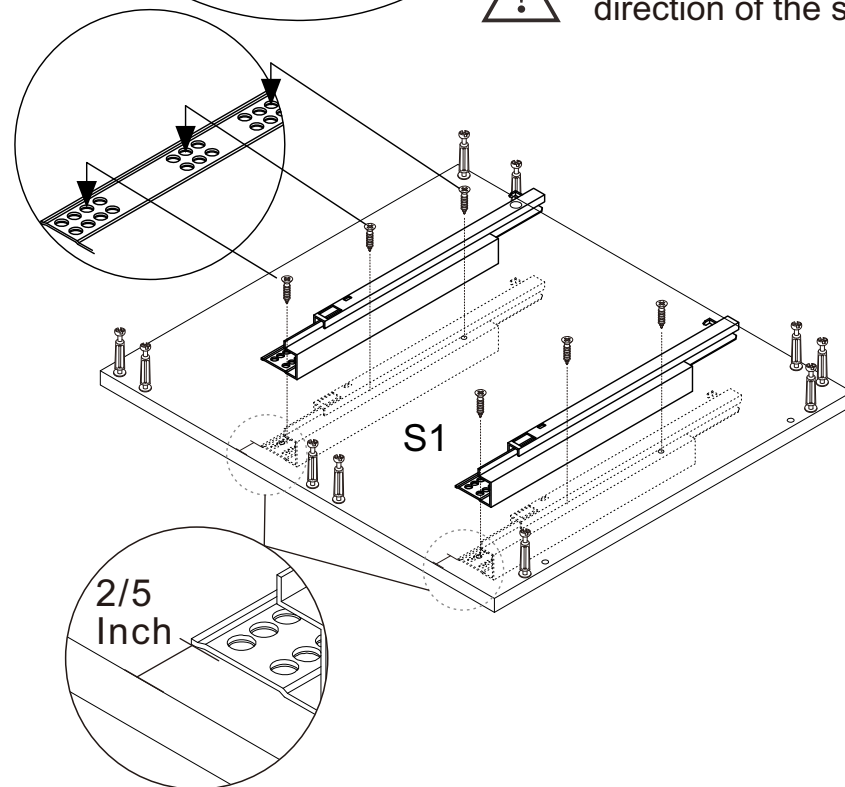


S1


2/5
Inch

3

Slider Installation

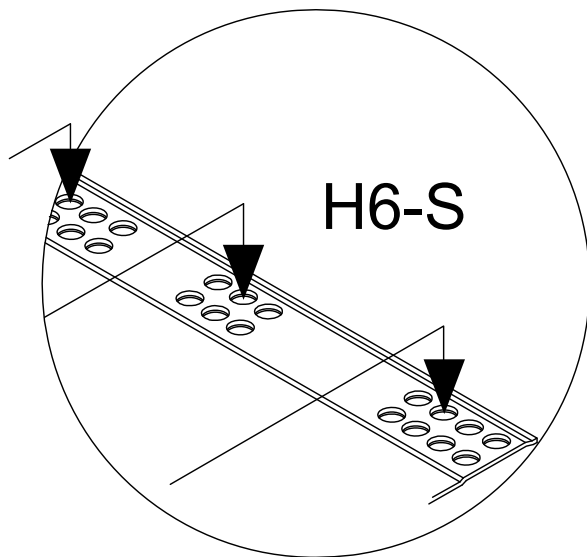


Pay attention to the direction of the slide




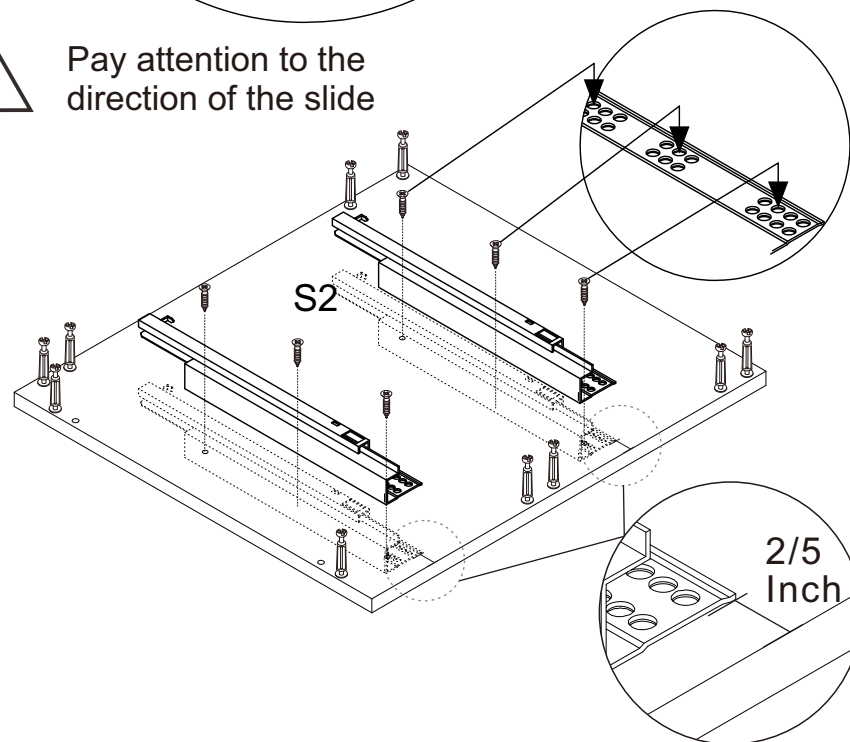


4

Neutral Board Installation

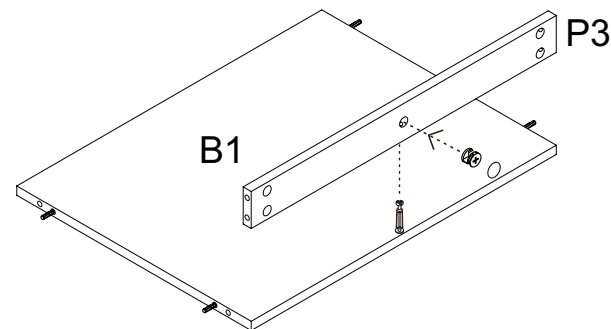

NO ELECTRIC SCREW DRIVER



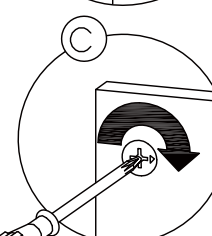
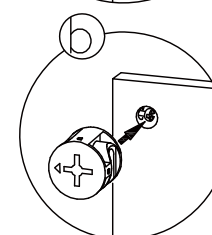
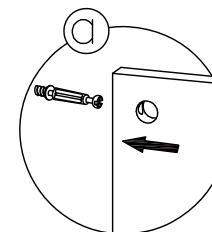
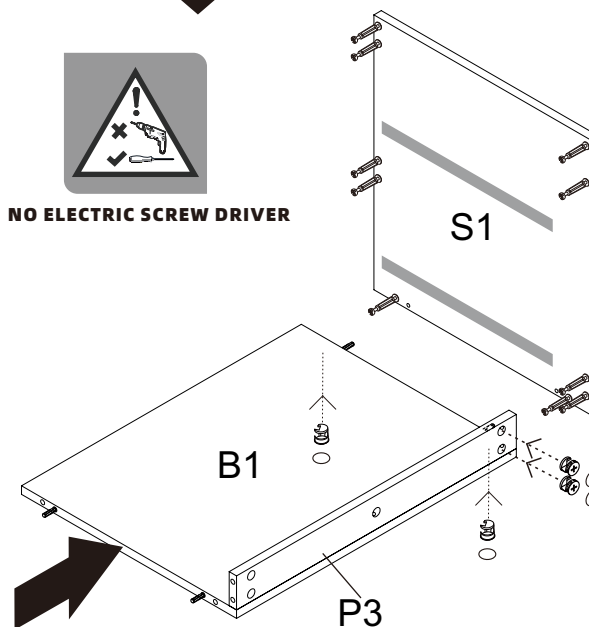


5

Neutral Board Installation



NO ELECTRIC SCREW DRIVER

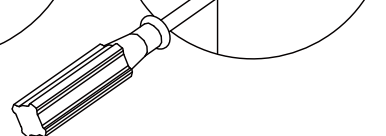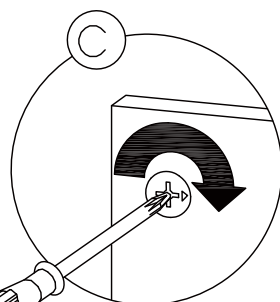
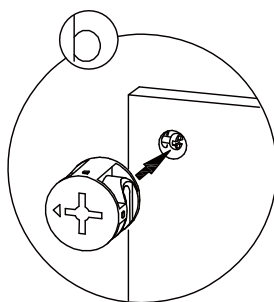
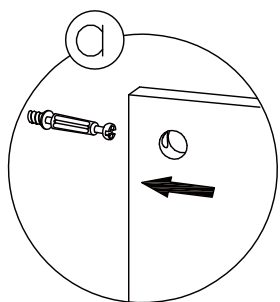
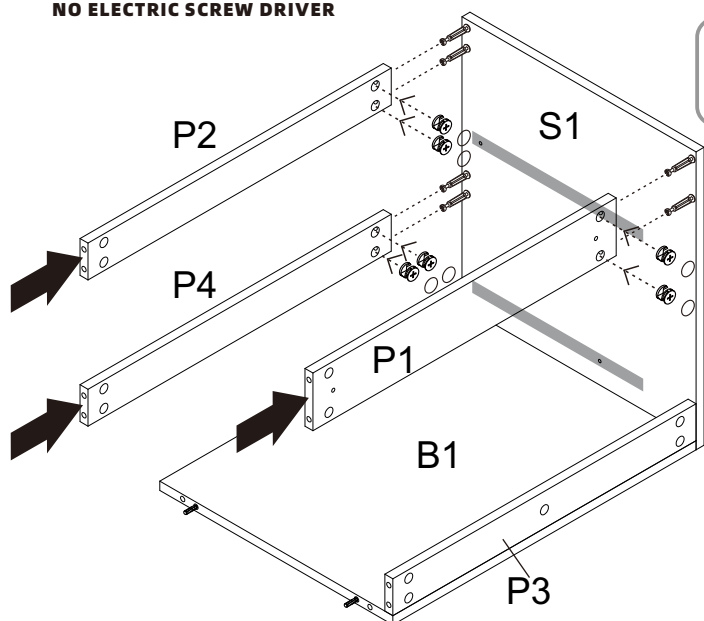



6

Neutral Board Installation







NO ELECTRIC SCREW DRIVER

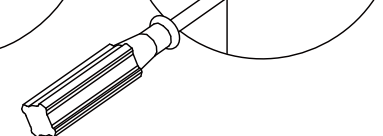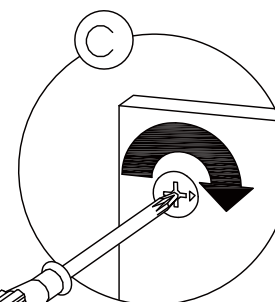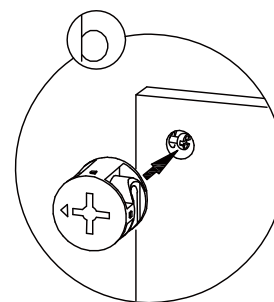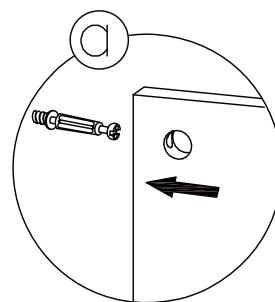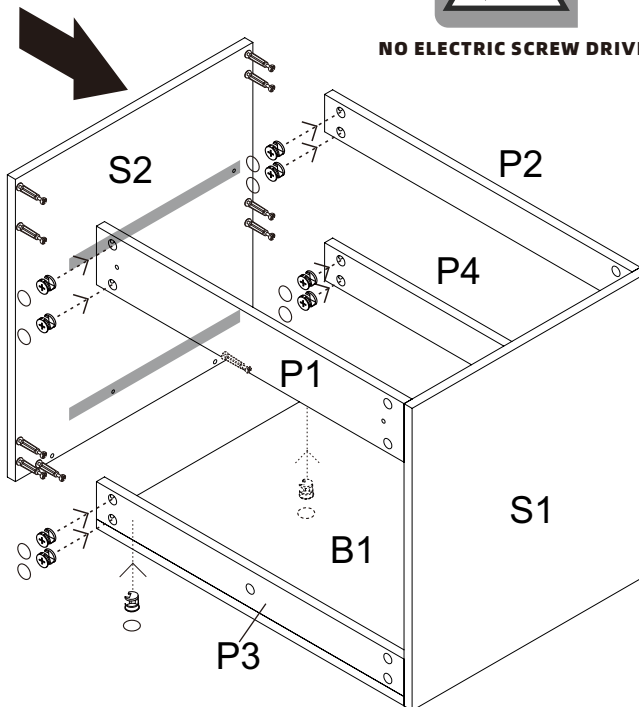

7








Drawer Installation

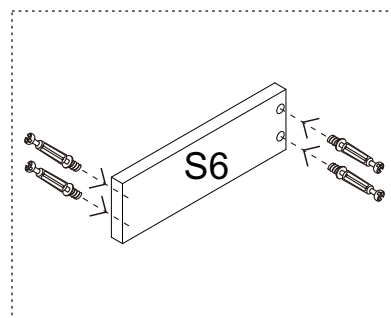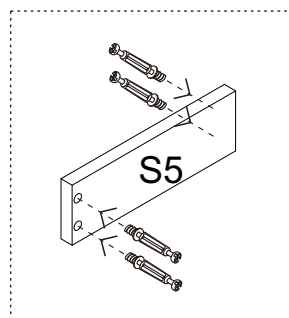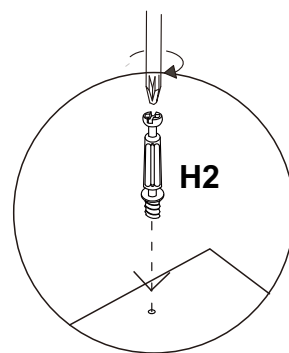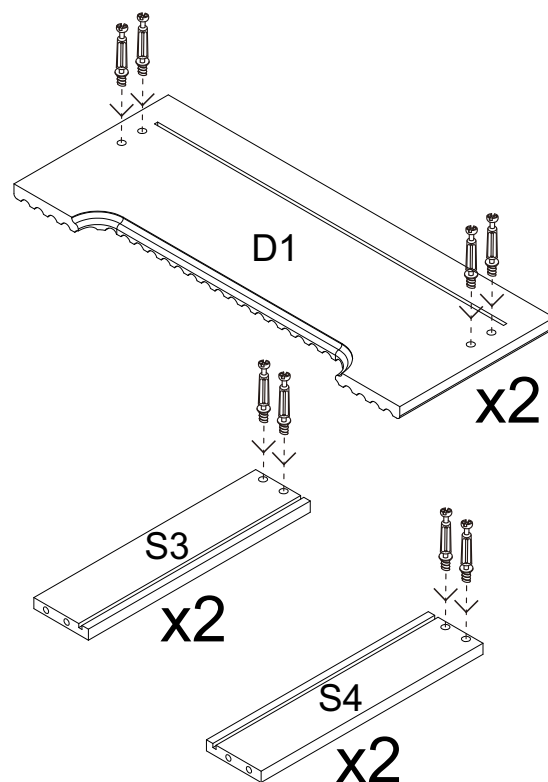

Make sure all "H2" screws are straight and right in place, not loose



8

Drawer Installation

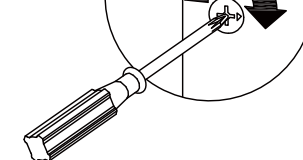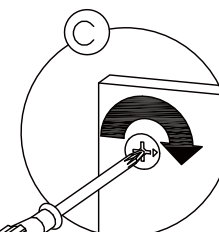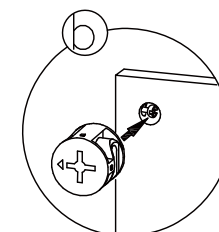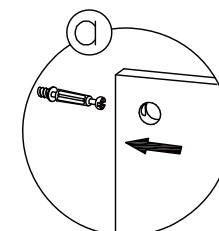
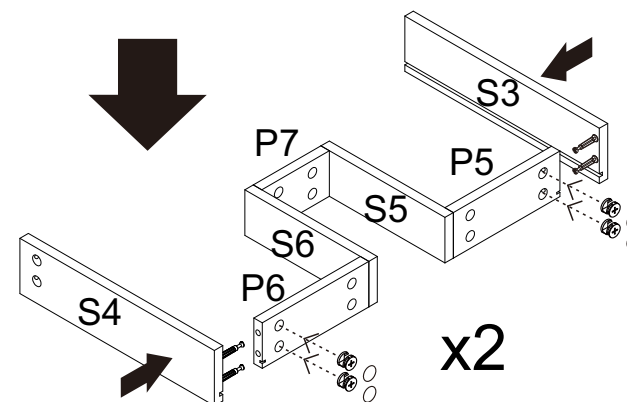
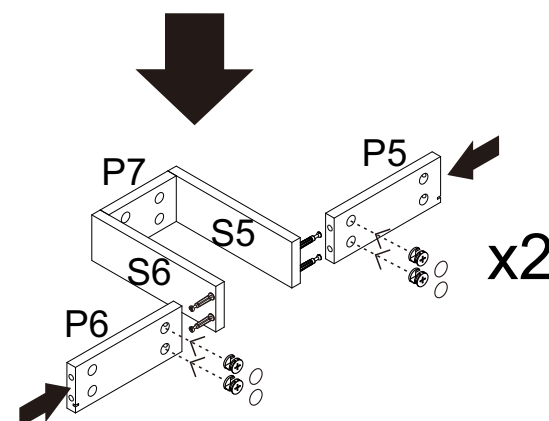
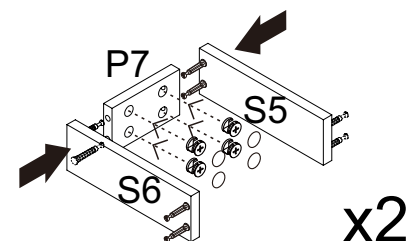


9

Drawer Installation



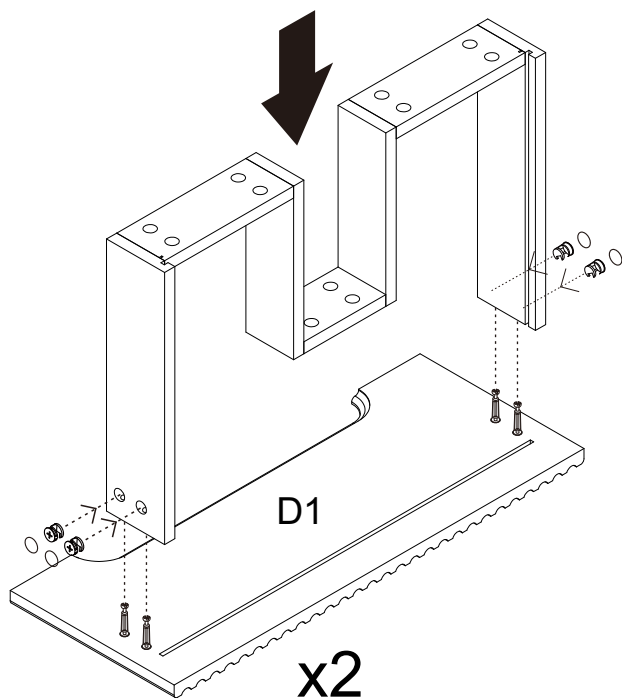



NO ELECTRIC SCREW DRIVER

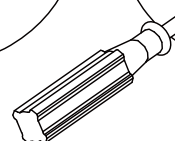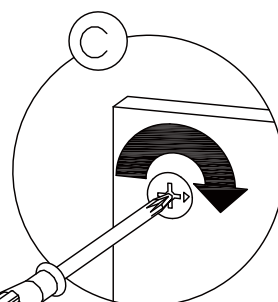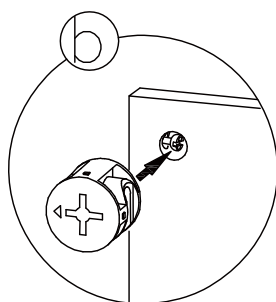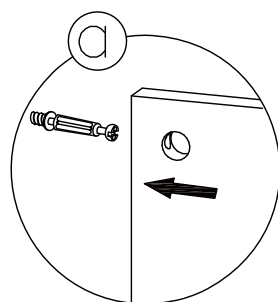




10

Drawer Installation

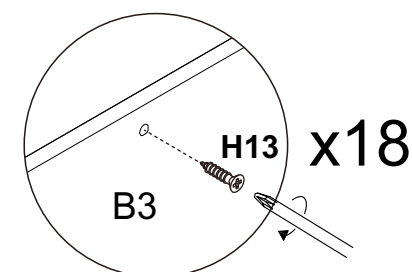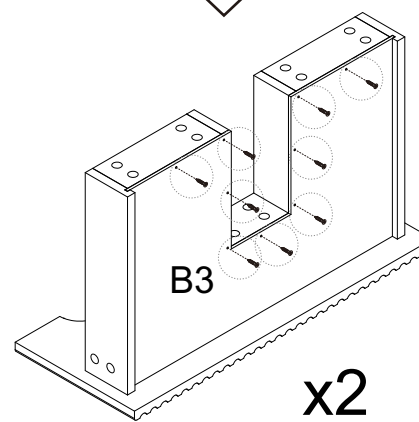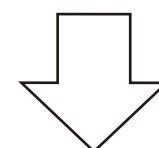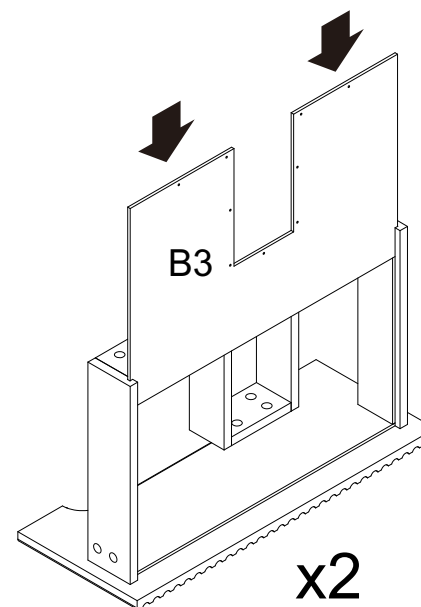


11

Drawer Installation

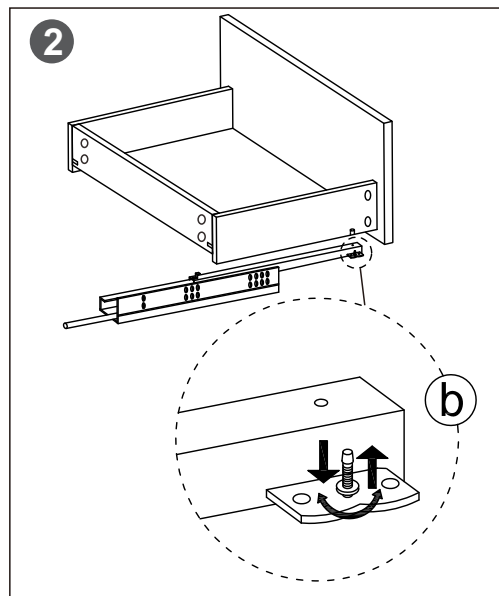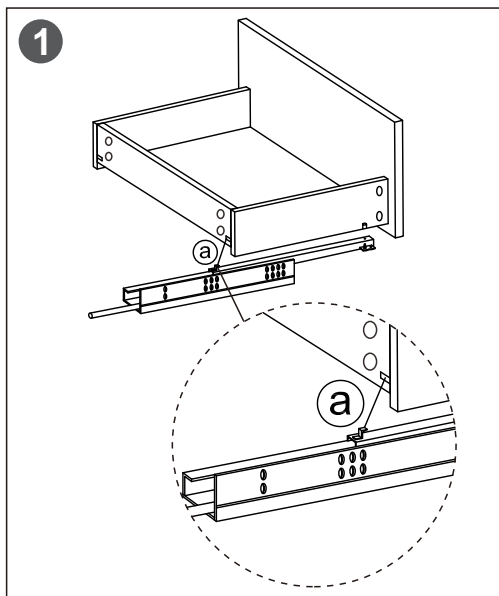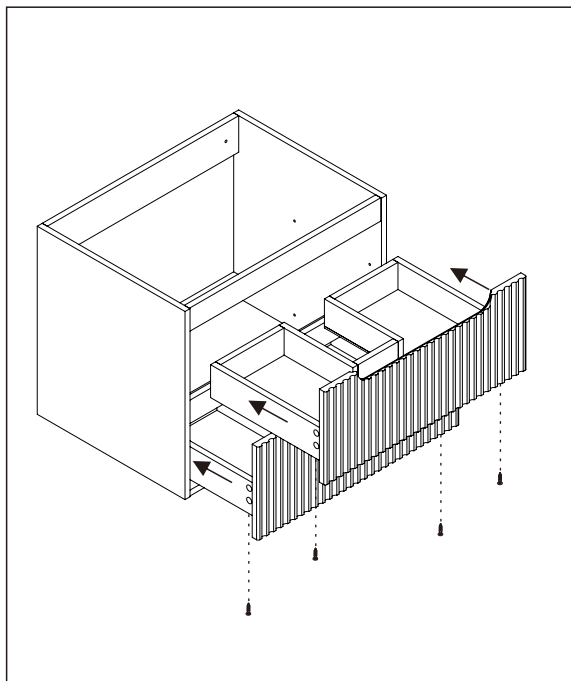


12


Cabinet Installation

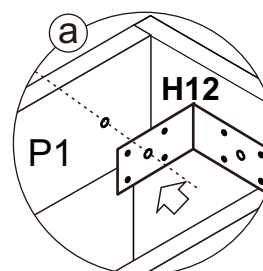



x2

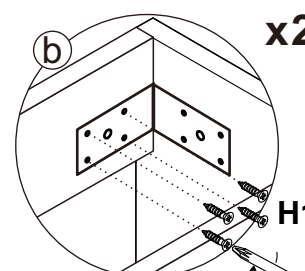

x2

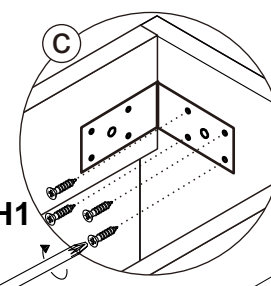

x2

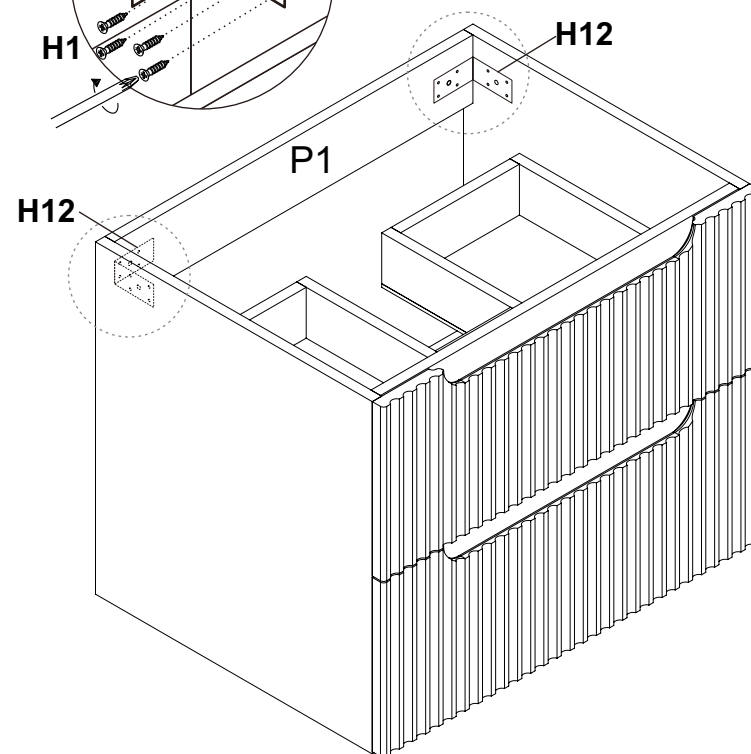


13


Cabinet Installation



Tapeline



Pencil



Electric Drill



Electric Drill



Hammer




H7 x2
($\phi 5 \times 60\text{mm}$)




H8 x2
($\phi 8 \times 40\text{mm}$)




H9 x2

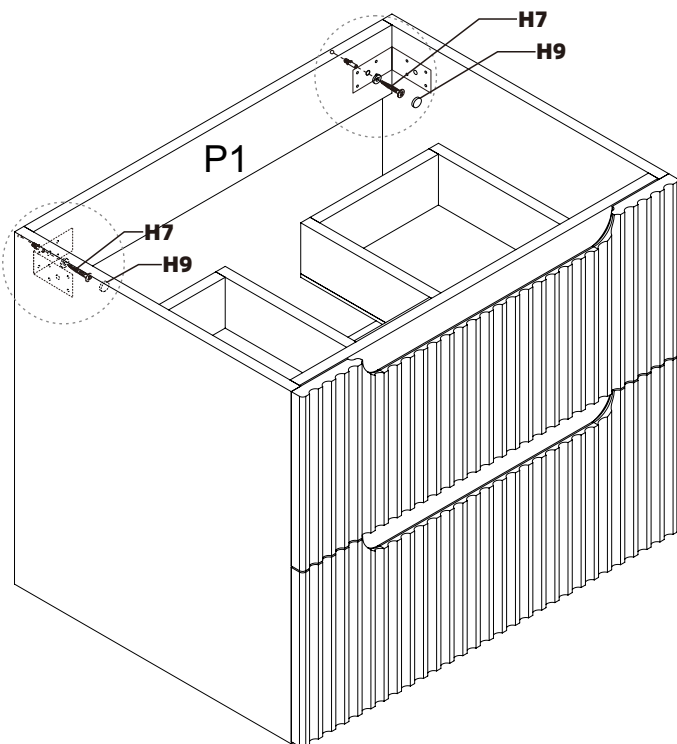

1

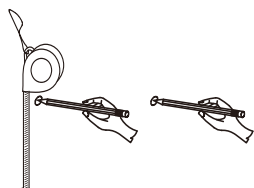

2



3



14

Top Installation



Glass Cement

