


Quick-Mount Design Bathroom Accessories ~ Installation Manual

EASY INSTALLATION – By just Clicking in a Second!


According to the different bathroom accessories to install, firstly check the corresponding distance needed between the mounting plate(s) for marking proper locations for the mounting plate(s) on wall.

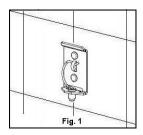

 Place the Quick-Mount design mounting plate(s), Fig. 1, vertically at the corresponding location(s) on wall with the spring-pin on the bottom side. Then, mark the screw holes locations on wall through the upper & lower holes at mounting plate.





2) Take away the mounting plate. Drill holes at the marked screw locations, Fig.2. On ceramic tiles, try to locate screw hole(s) on grout line. If mounting on tile surface, use masking tape to do marking & to prevent sliding during drilling.

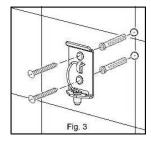

3) Push plastic anchors provided into the holes until flush with wall. Then, screw mounting plate to the wall with the screws provided, with spring-pin on bottom side, Fig. 3.

Note: Molly or toggle bolts (not included) may be required for hollow wall.

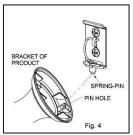

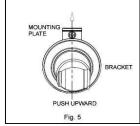

- 4) At last, clip the Bracket over the mounting plate by :
 - ~ Position Bracket with its pin hole on bottom side. Match its pin hole with the spring-pin of mounting plate, Fig.4.
 - ~ Then, push Bracket upward against the spring-pin until the upper side of Bracket clips with the top of mounting plate, Fig.5. Mounting is finished when clipping is done.

For product with two Brackets such as towel bars & some of the tissue paper holders, suggest to mount one Bracket first, then put the towel bar or tissue paper holder in place. Check to ensure the assembly is level and finish the mounting of the other Bracket.

Important

- : To check that the product is securely mounted after assembly, pull the product slightly. If not mounted properly, repeat the clipping step.(4)
- : For easy removal; the bracket can be simply detached by pushing the spring-pin upward,(with any small tool), through the pin hole of the bracket and unclipping.

WT International Inc.

www.aristabath.com