



ASSEMBLY INSTRUCTIONS

ITEM CODE: WF312180

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

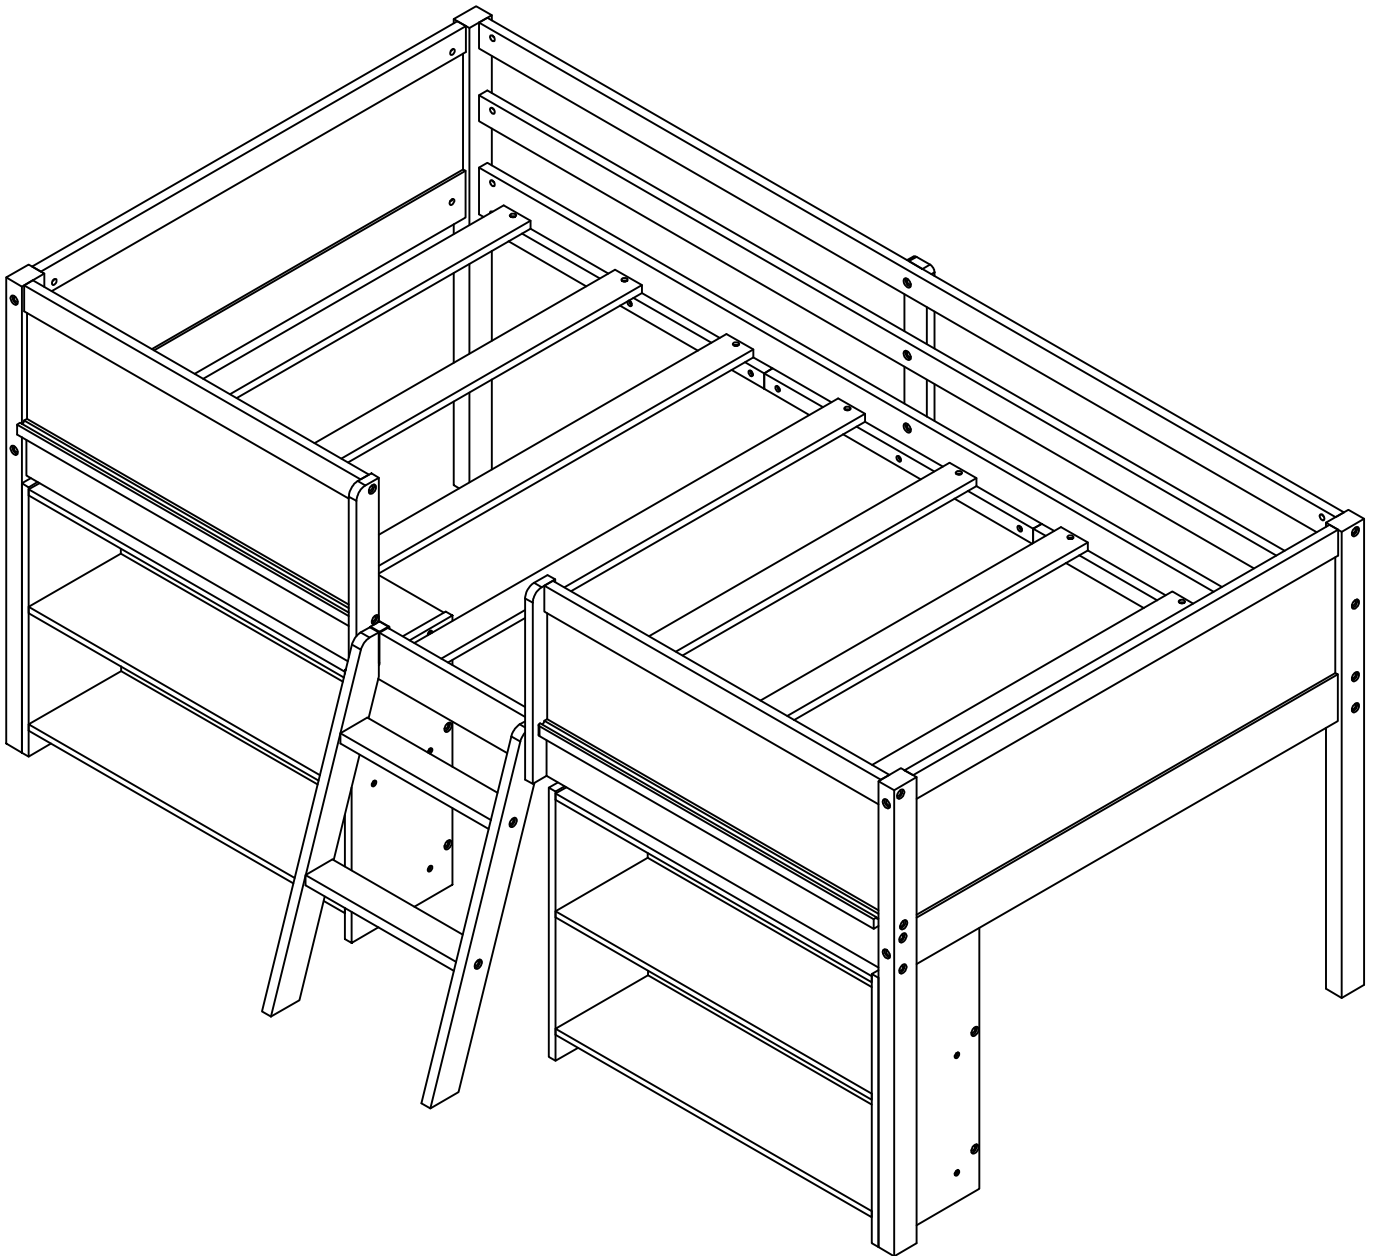

DETAIL VIEW

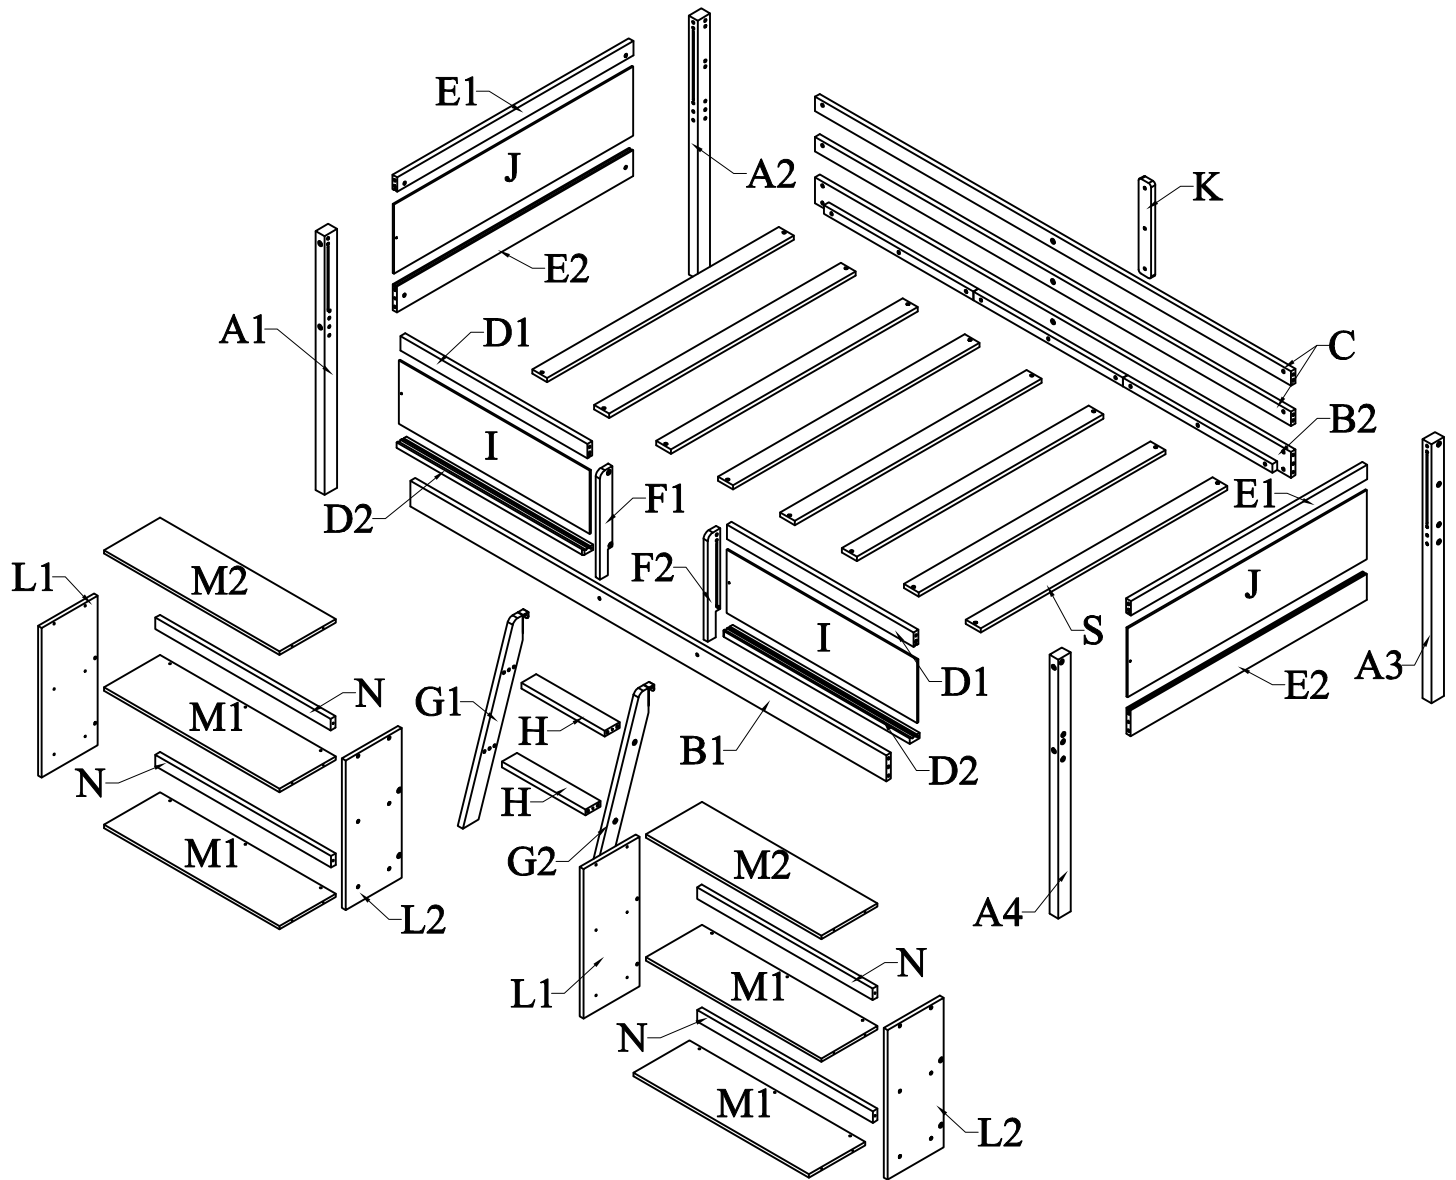

BOX: WF312180

A1



Front leg - left (1pc)

A2



Back leg - left (1pc)

A3




Back leg - right (1pc)

A4




Front leg - right (1pc)

B1

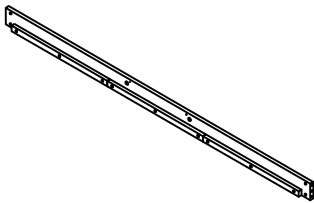


Frane rail - front (1pc)

B2

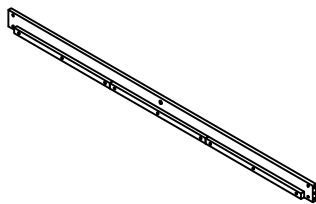


Frane rail - back (1pc)

C

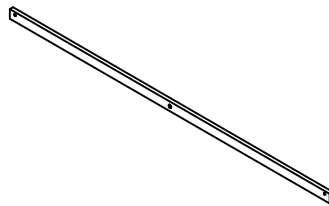


Top rail - back (2pcs)

D1

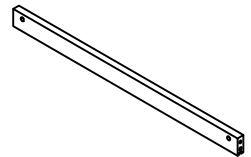


Front rail - Top (2pcs)

D2

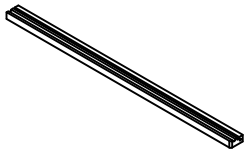


Front rail - middle (2pcs)

E1

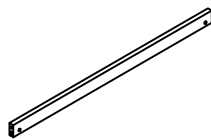

Side rail - top (2pcs)

E2

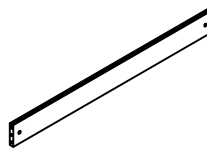

Side rail - bottom (2pcs)

F1



Vertical rail - left (1pc)

BOX: WF312180

F2




Vertical rail - right (1pc)

G1




Stairs vertical - left (1pc)

G2




Stairs vertical - right (1pc)

H

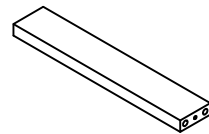


Stairs bar - right (2pcs)

I

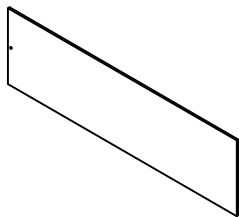

Front pannel (2pcs)

J

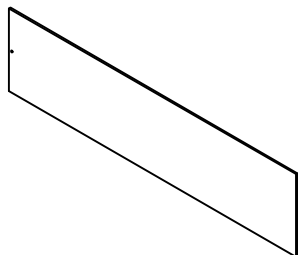

Side pannel (2pcs)

K




Vertical rail (1pc)

L1




Side pannel - left (2pcs)

L2




Side pannel - right (2pcs)

M1

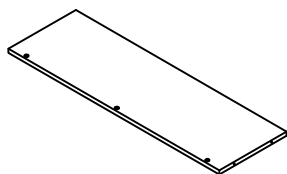


Bottom pannel (4pcs)

M2

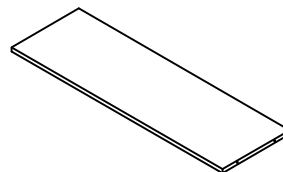


Top pannel (2pcs)

N

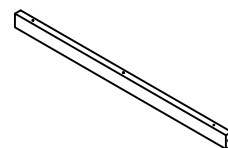











Support bar (4pcs)

S

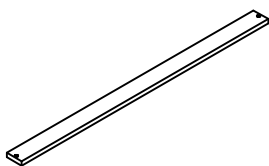


Slats (8pcs)

HARDWARE LIST: WF312180

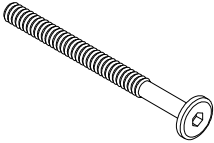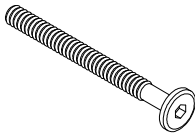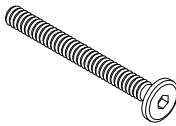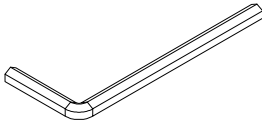1  Hex - Head bolts Ø1/4" * 90- 8pcs	2  Hex - Head bolts Ø1/4" * 70- 14pcs	3  Hex - Head bolts Ø1/4" * 50- 2pcs	4  Hex - Head bolts Ø1/4" * 25- 3pcs
5  Hexagonal bolts catch wood Ø1/4" * 50 - 16pcs	6  Hexagonal bolts catch wood Ø1/4" * 35 - 2pcs	7  Horizontal - Hold bolts Ø1/4" - 24pcs	8  Canopy head though Ø1/4" - 3pcs
9  Wood dowel Ø8 * 30 - 32pcs	10  Allen key K4 - 2pcs	11  Wood crews M4 * 30 - 56pcs	12  Wood crews M4 * 15 - 2pcs
13  Bracket - 2pc			

STEP 1

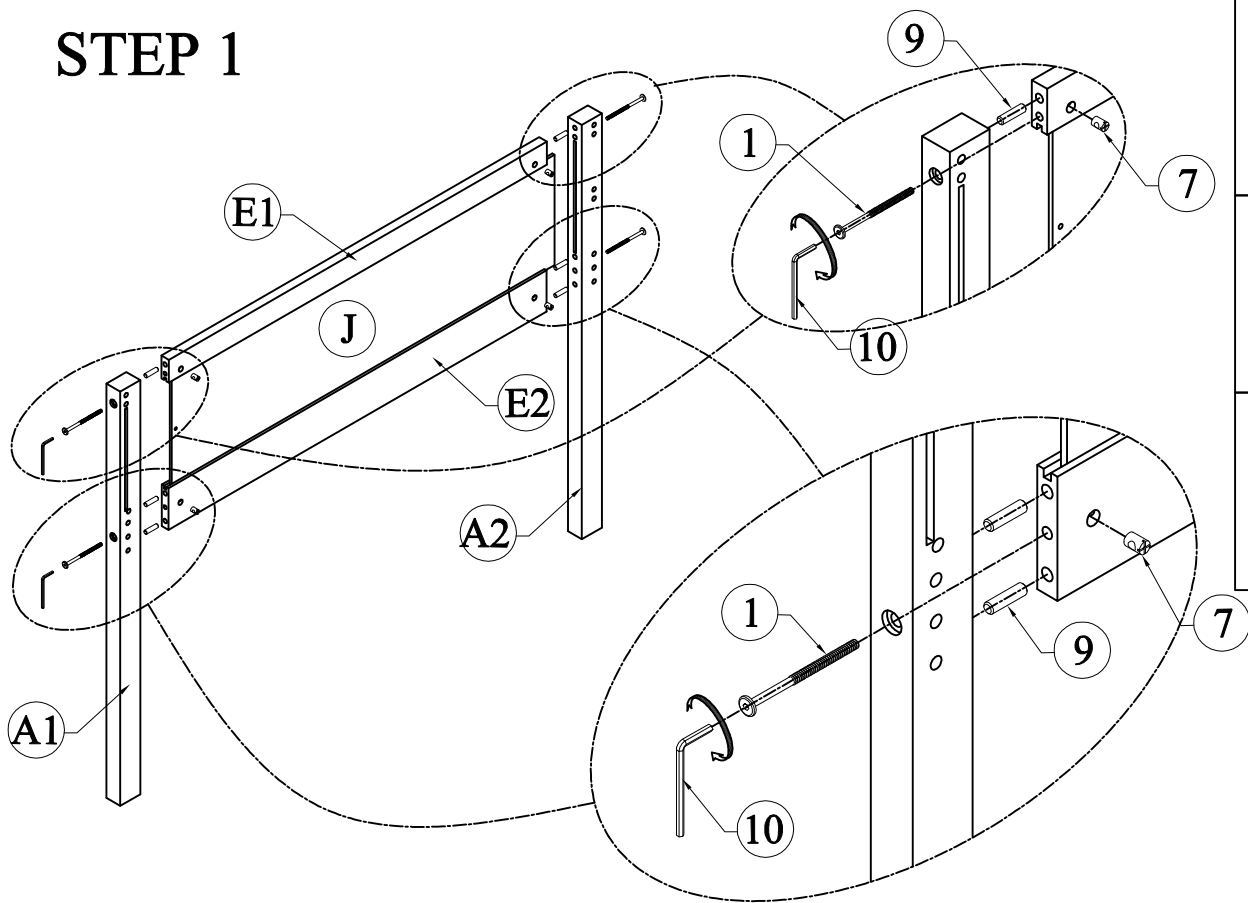

1



Hex - Head bolts
Ø1/4" * 90- 4pcs

7




Horizontal - Hold bolts
Ø1/4" - 4pcs

9



Wood dowel
Ø8 * 30 - 6pcs

STEP 2

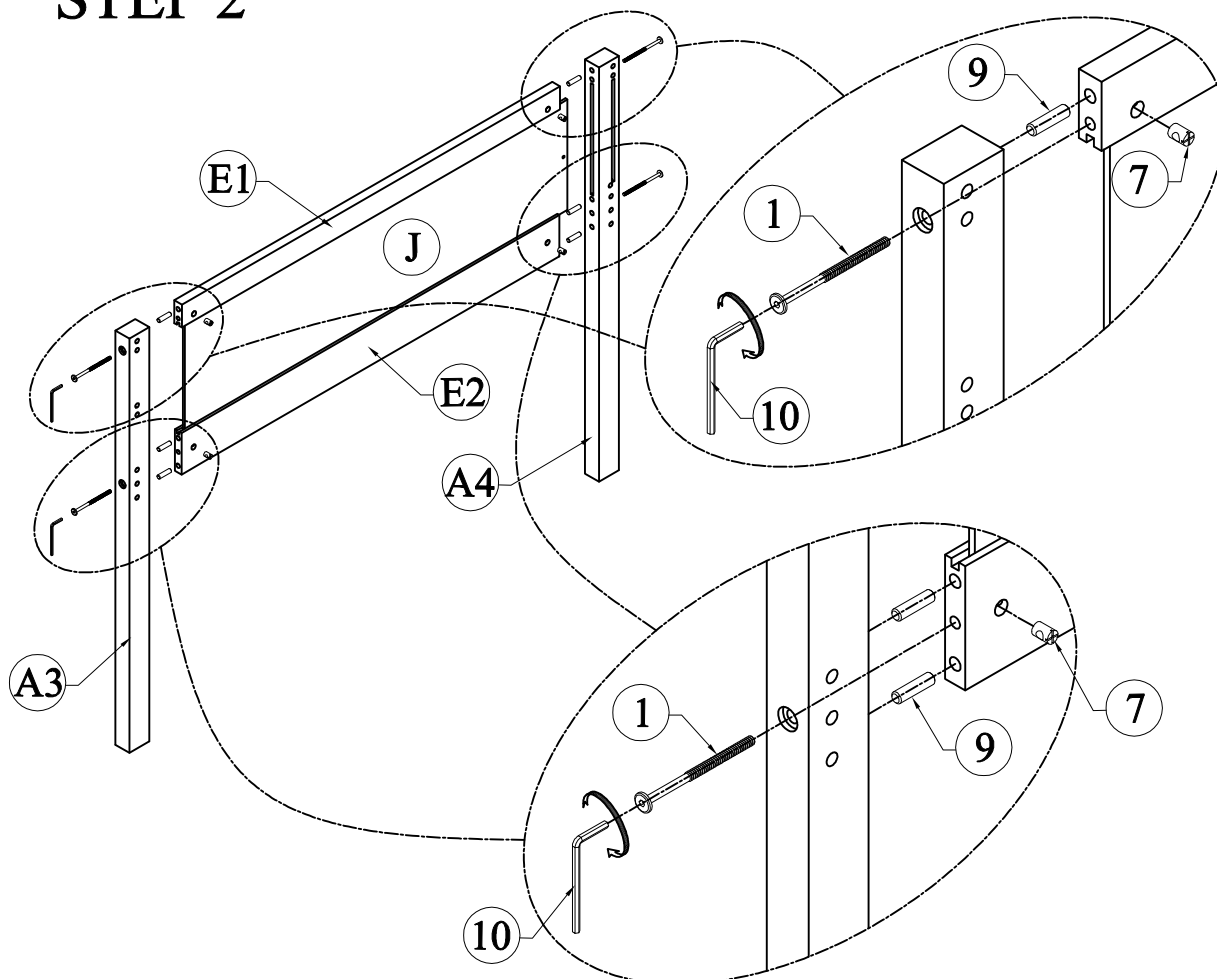

1



Hex - Head bolts
Ø1/4" * 90- 4pcs

7




Horizontal - Hold bolts
Ø1/4" - 4pcs

9



Wood dowel
Ø8 * 30 - 6pcs

STEP 3

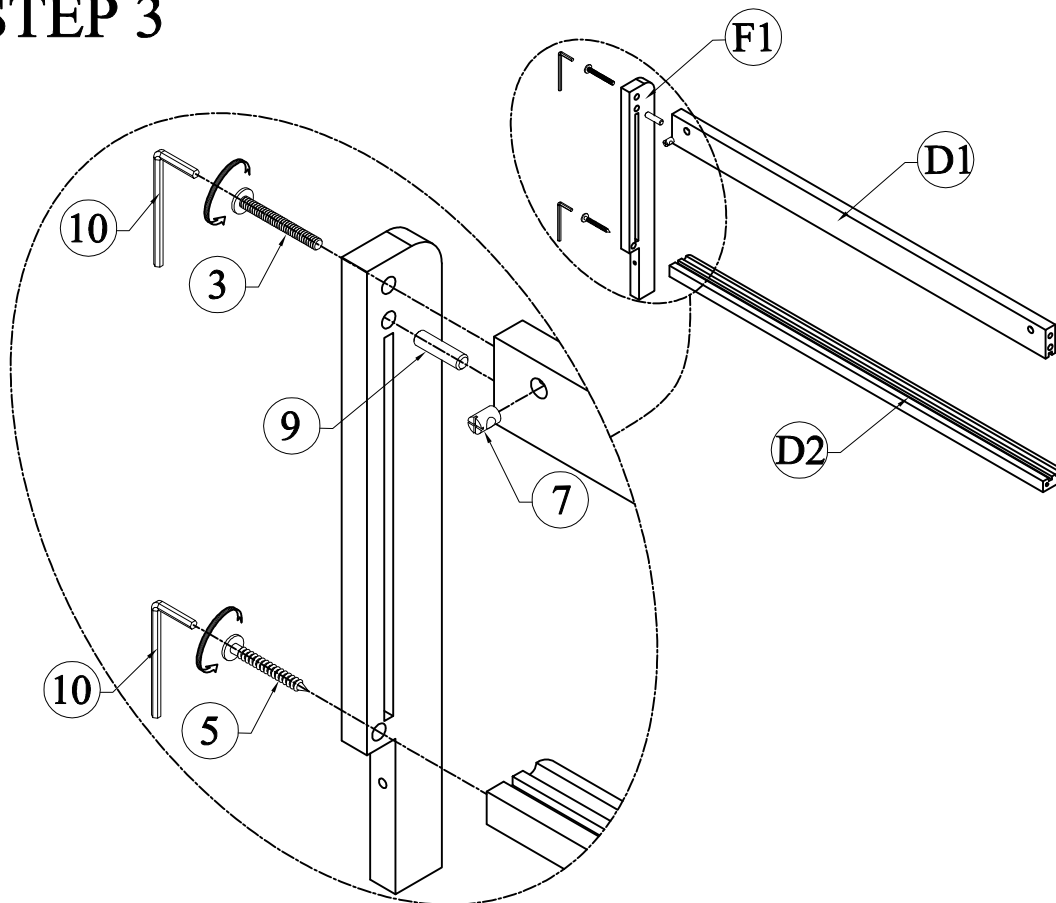

3



Hex - Head bolts
Ø1/4" * 60- 1pc

5



Hexagonal bolts catch wood
Ø1/4" * 50 - 1pc

7




Horizontal - Hold bolts
Ø1/4" - 1pc

9



Wood dowel
Ø8 * 30 - 1pc

STEP 4

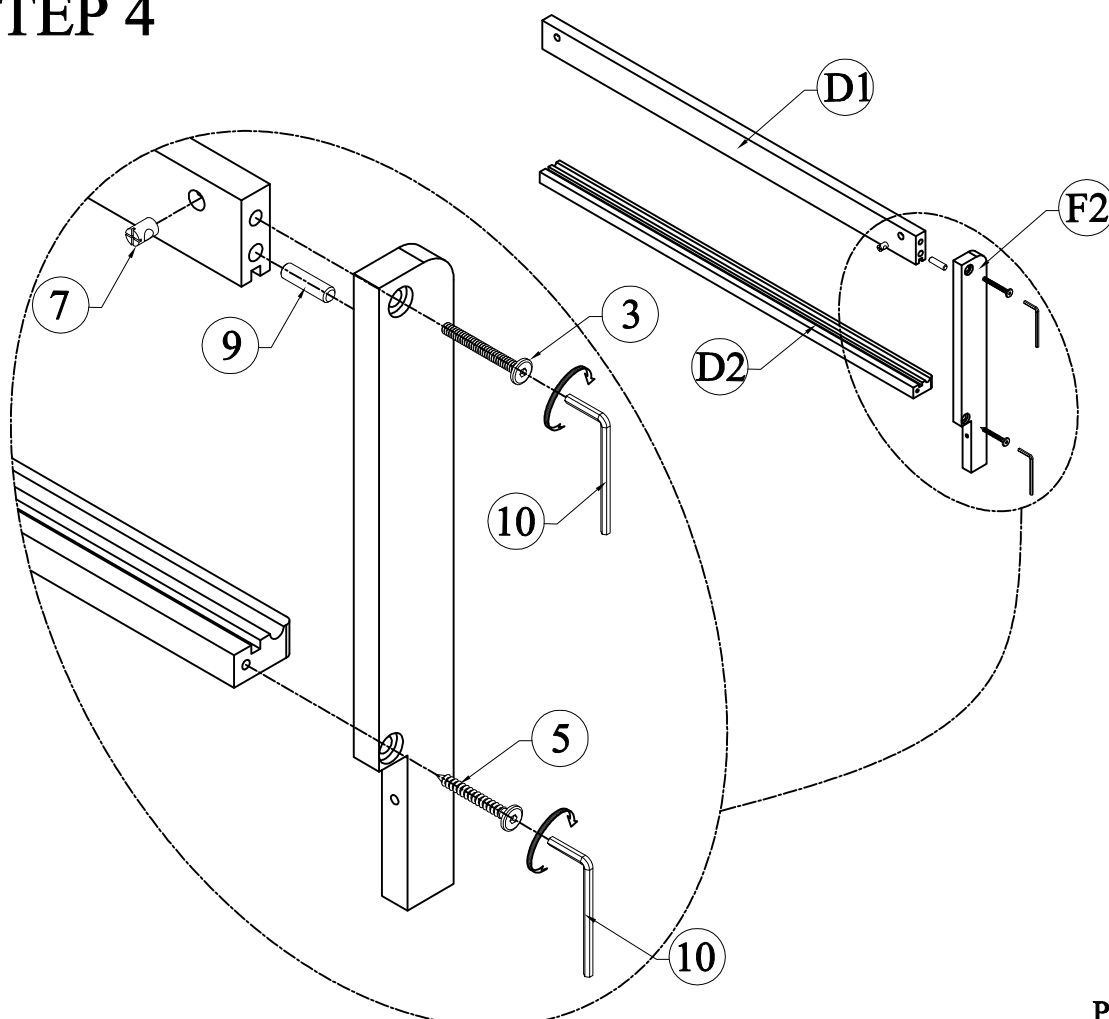

3



Hex - Head bolts
Ø1/4" * 60- 1pc

5



Hexagonal bolts catch wood
Ø1/4" * 50 - 1pc

7




Horizontal - Hold bolts
Ø1/4" - 1pc

9




Wood dowel
Ø8 * 30 - 1pc


STEP 5

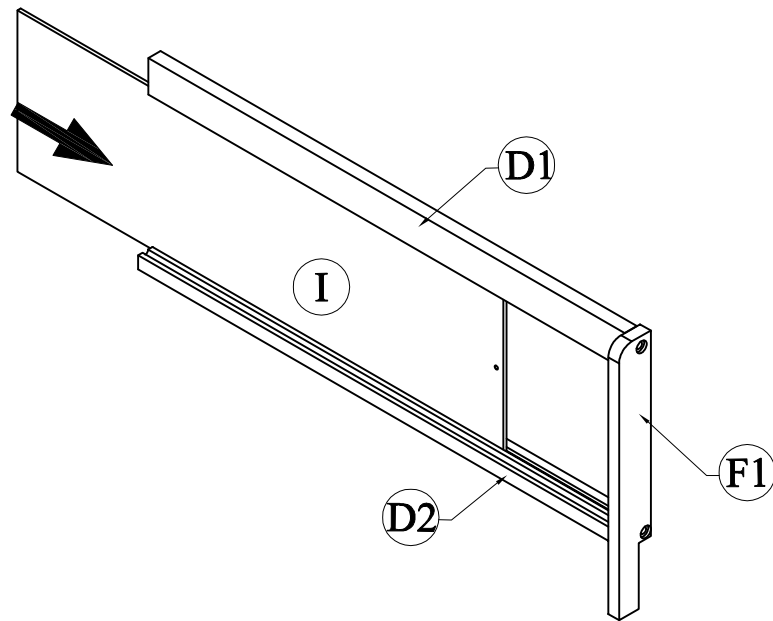

STEP 6

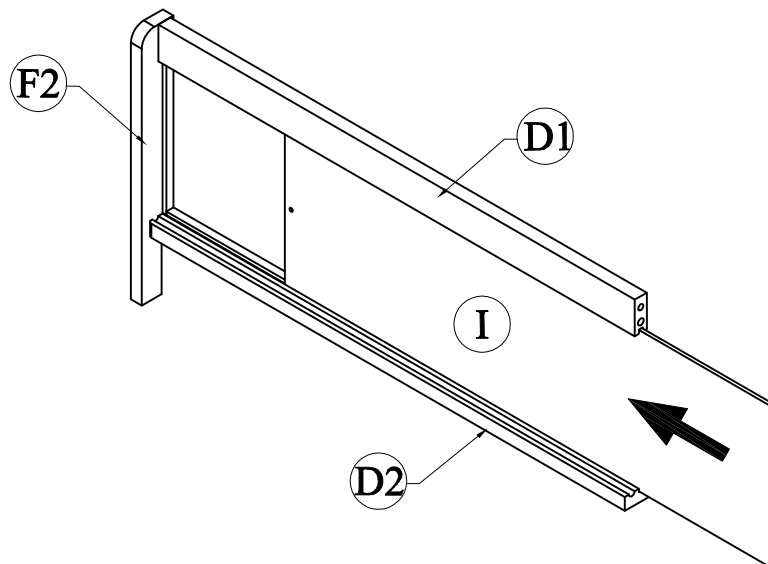

STEP 7

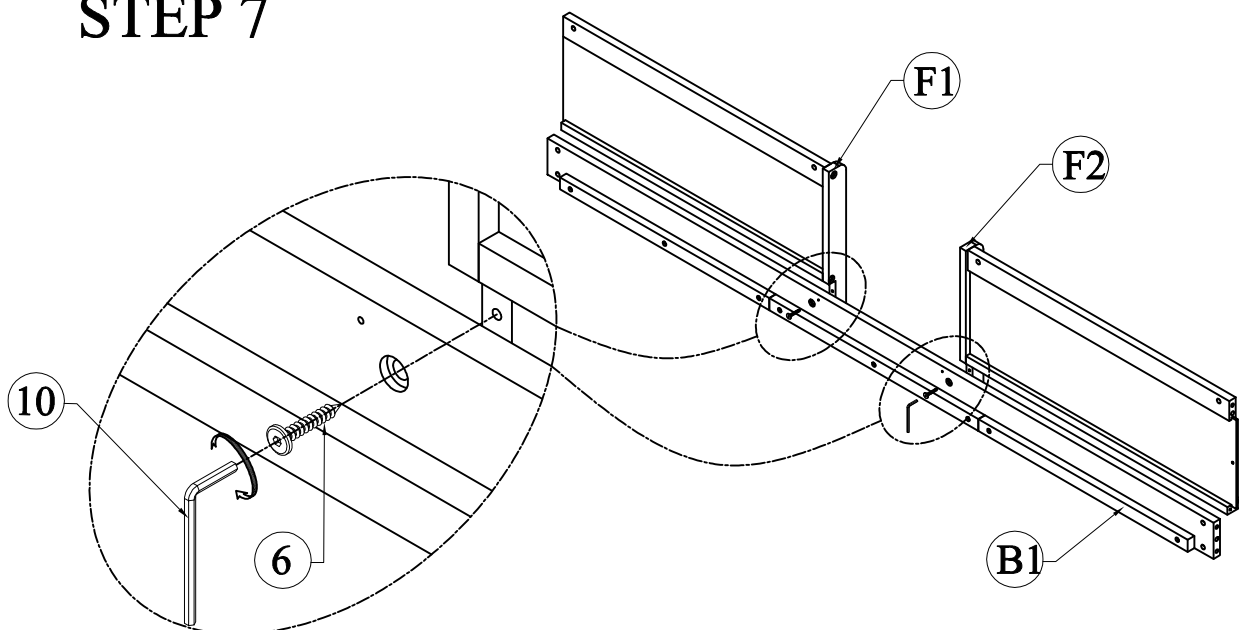


6



Hexagonal bolts catch wood
Ø1/4" * 35 - 2pcs

STEP 8

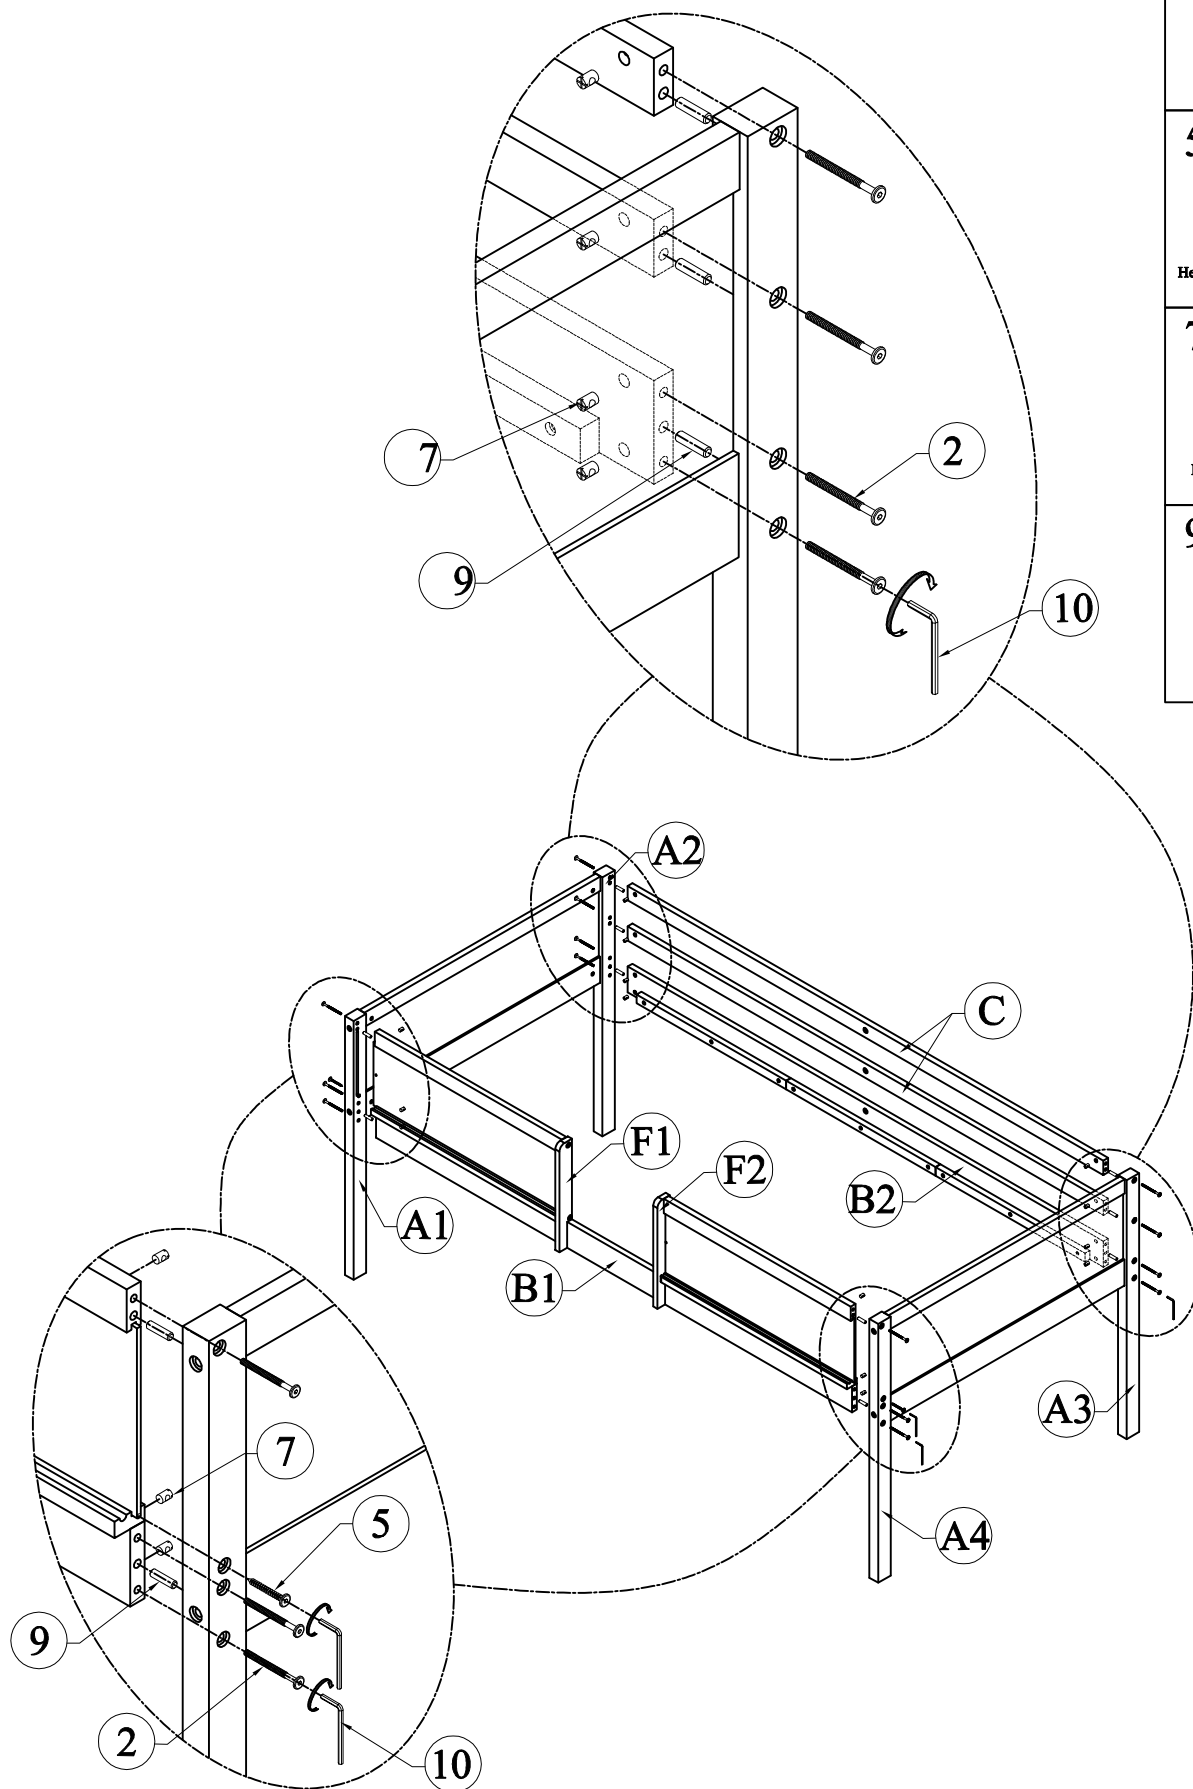


2
Hex - Head bolts
Ø1/4" * 70 - 14pcs

5
Hexagonal bolts catch wood
Ø1/4" * 50 - 2pcs

7
Horizontal - Hold bolts
Ø1/4" - 14pcs

9
Wood dowel
Ø8 * 30 - 10pcs

STEP 9

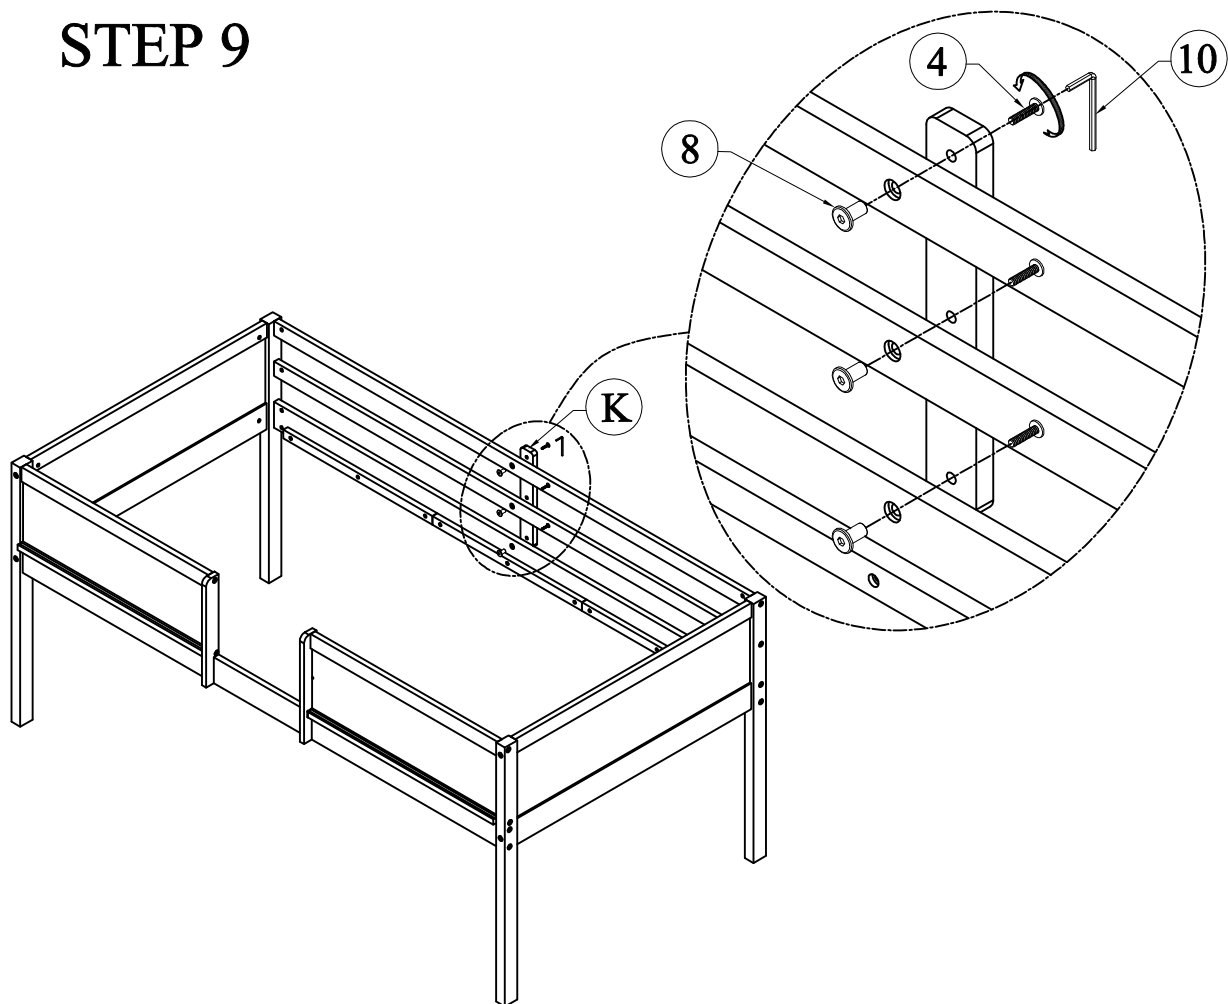

4




Hex - Head bolts
Ø1/4" * 25- 3pcs

8



Canopy head through
Ø1/4" - 3pcs

STEP 10

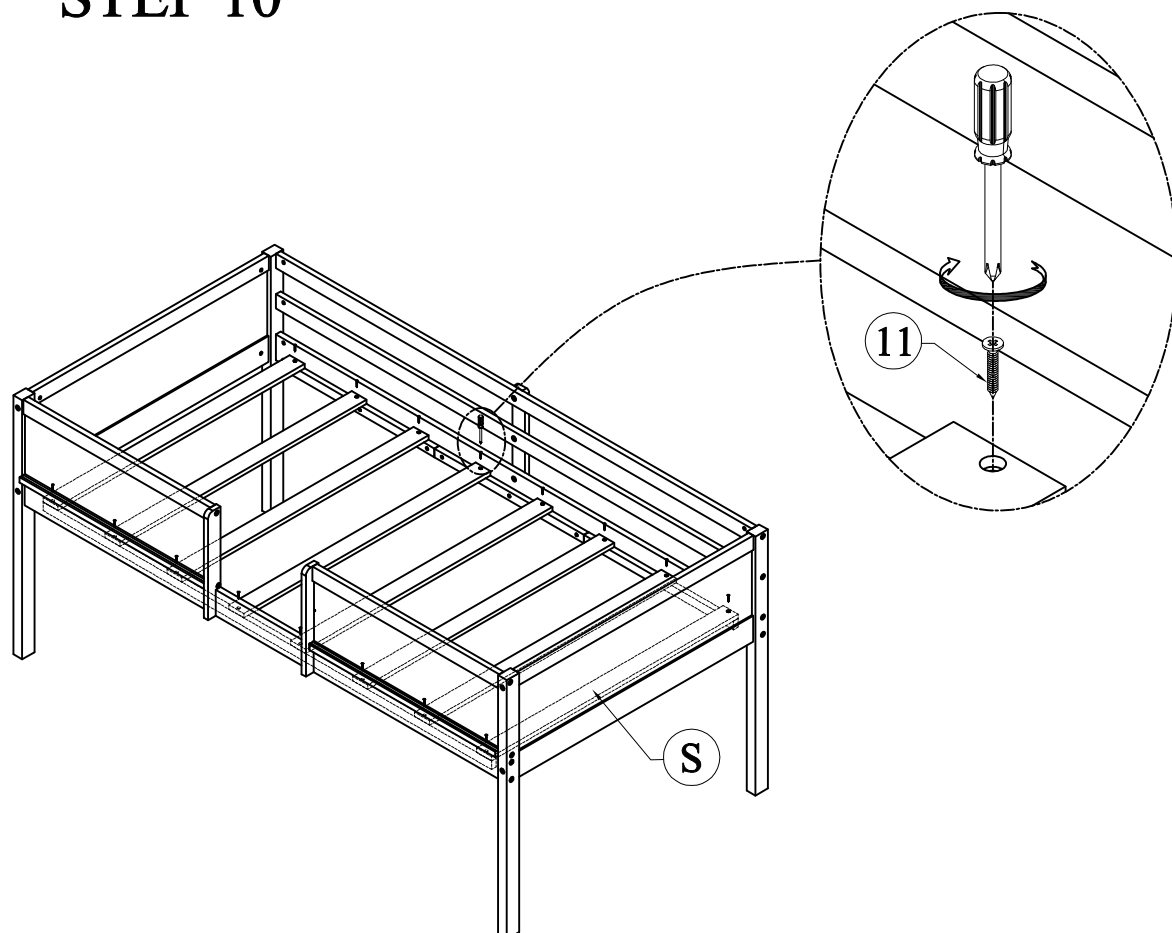


11




Wood crews
M4 * 30 - 16pcs

STEP 11

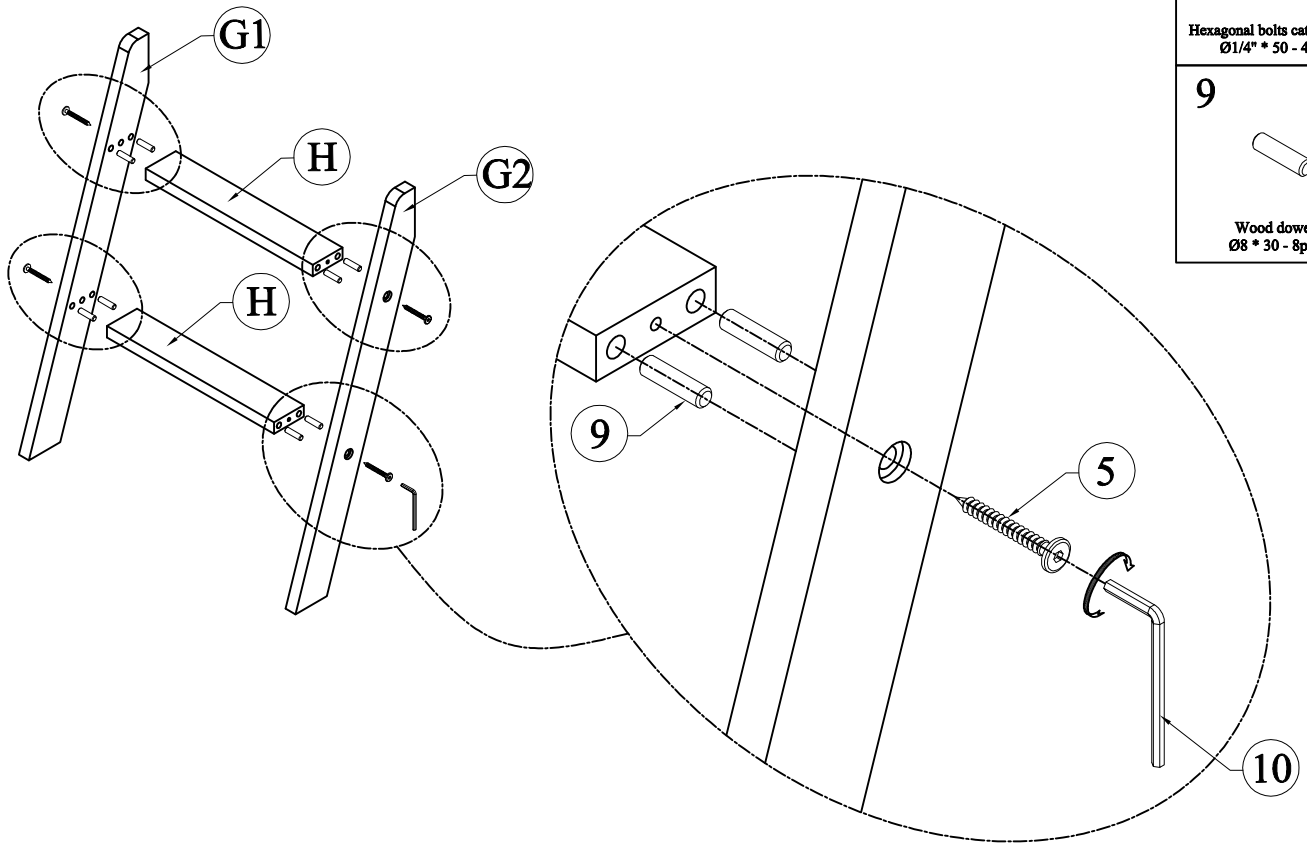

STEP 12

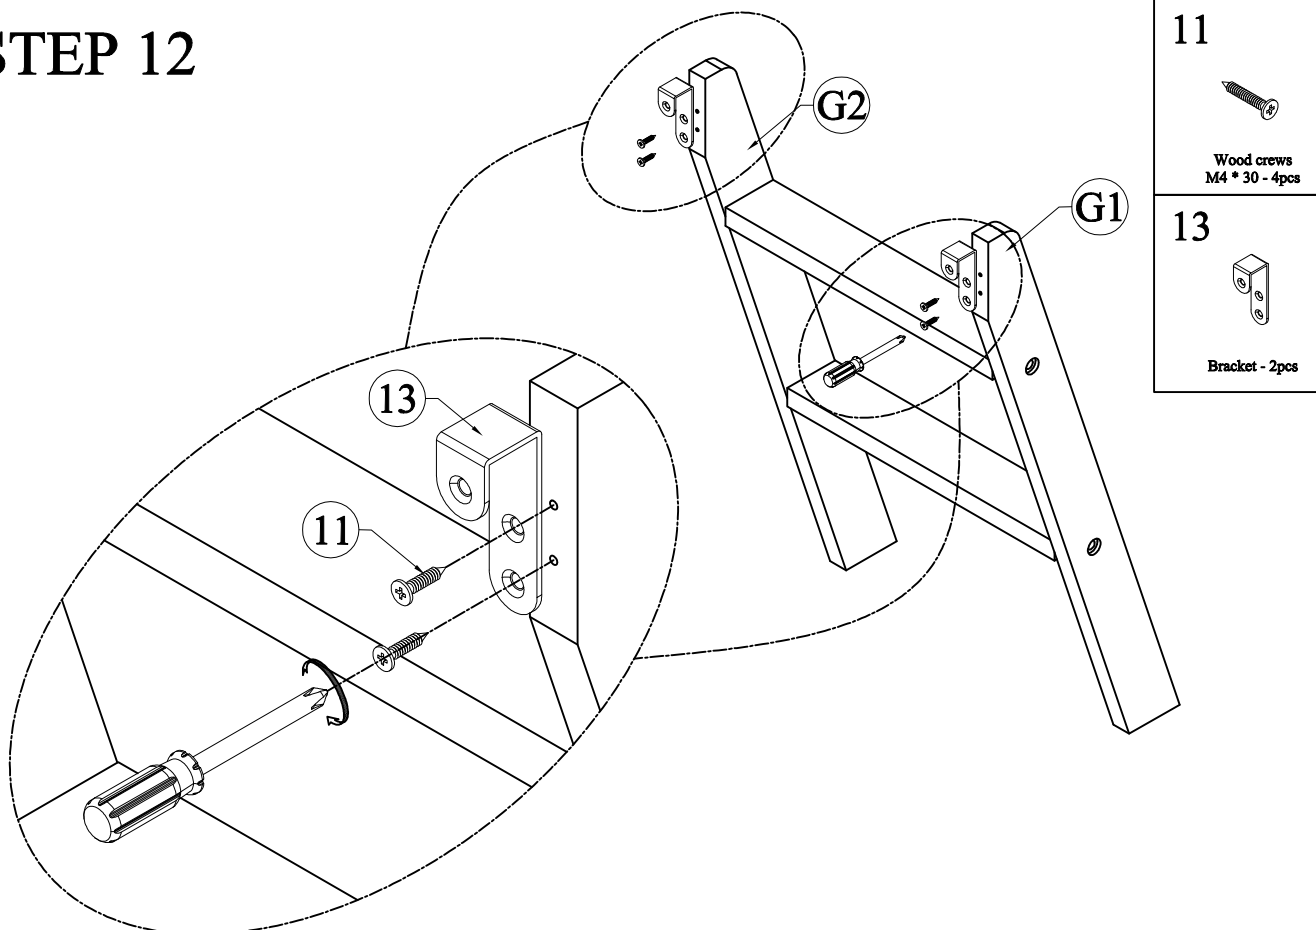


STEP 13

12



Wood crews
M4 * 15 - 2pcs

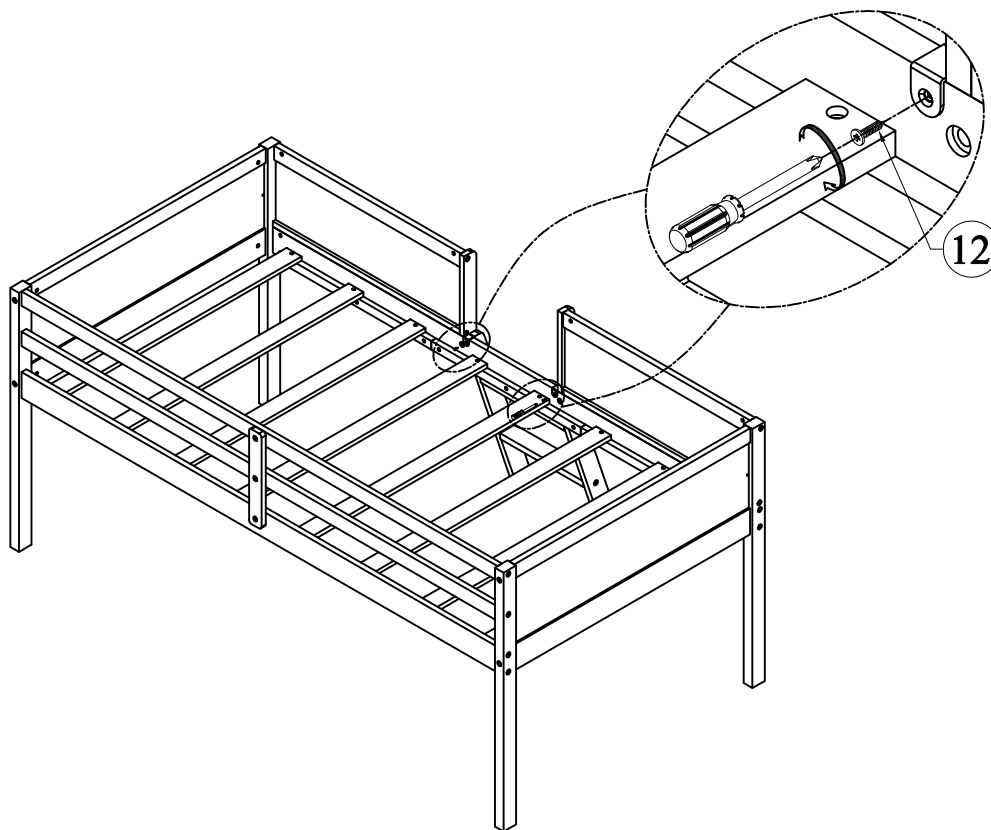


STEP 14


11



Wood crews
M4 * 30 - 12pcs

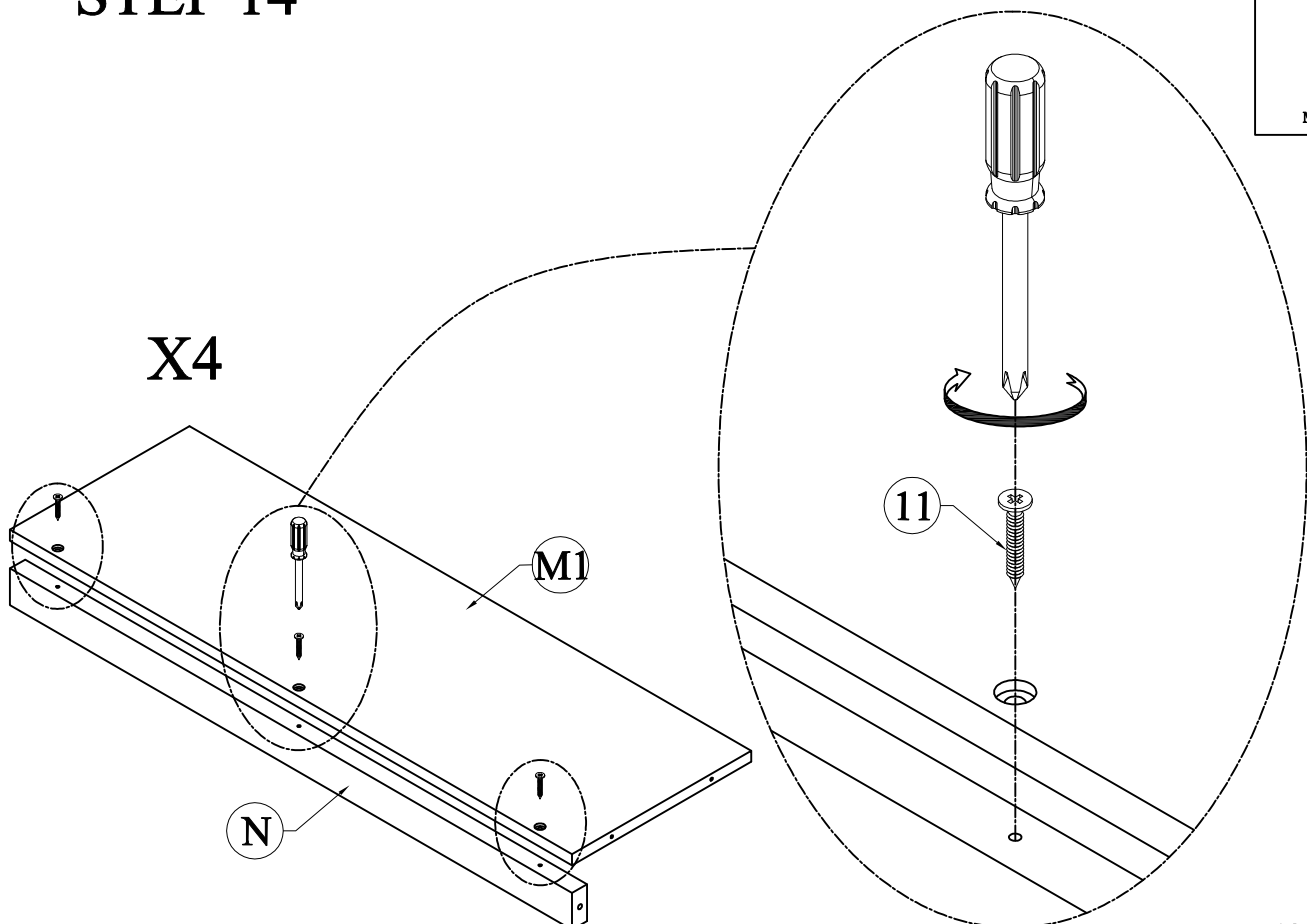

STEP 15

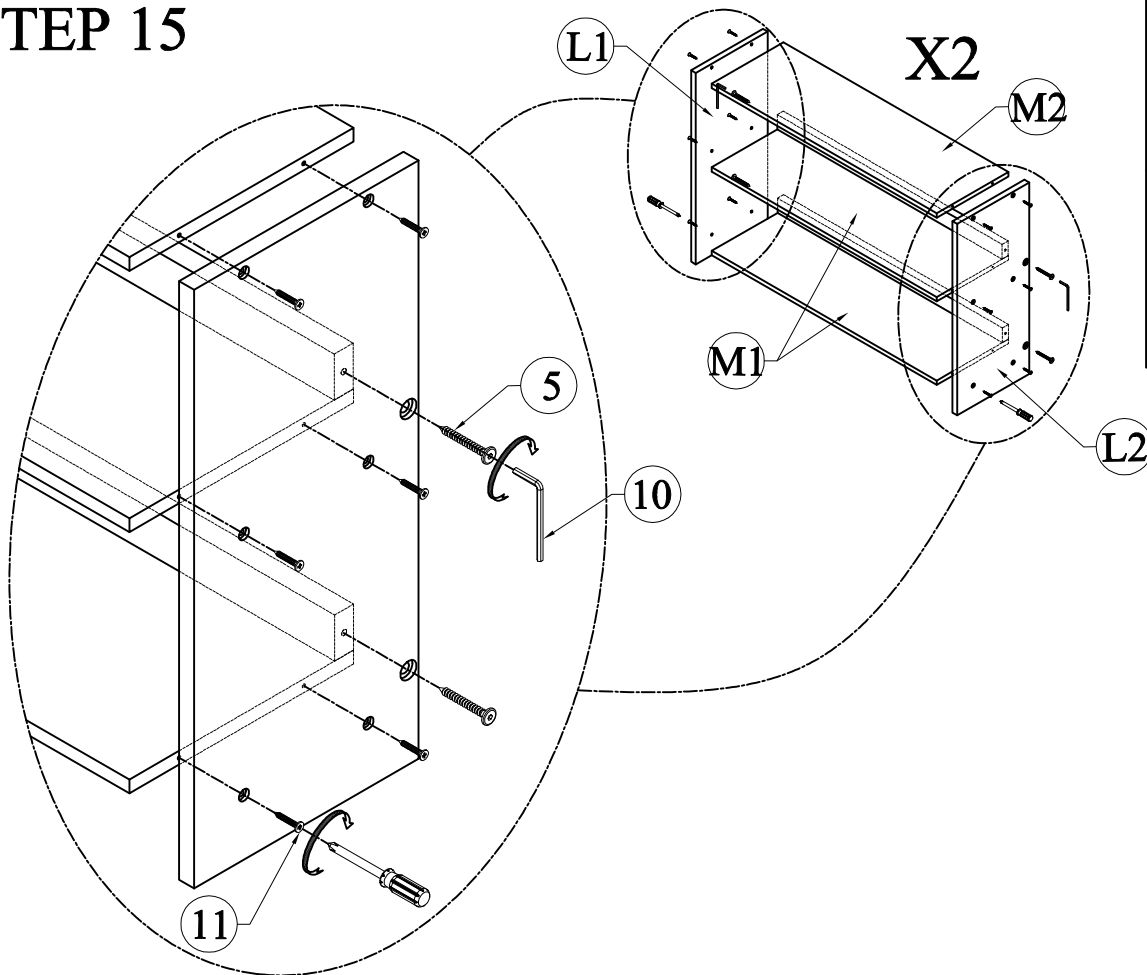

5




Hexagonal bolts catch wood
Ø1/4" * 50 - 8pcs

11



Wood crews
M4 * 30 - 24pcs

STEP 16

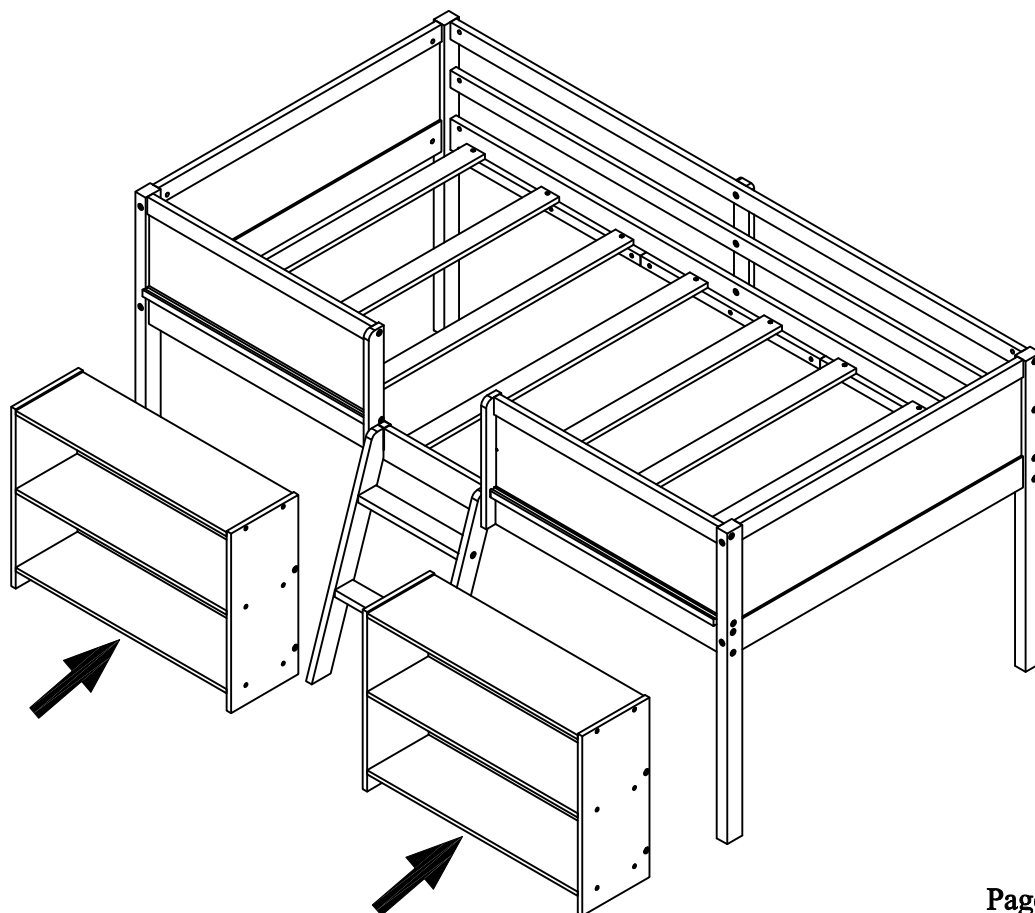

COMPLETED

