

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening
- * This item may require a pair of pliers to unscrew the screws to a suitable length during assembly when feet are too short to fit into the item.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 5 minutes.

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Table top		1X
B	Right board		1X
C	Back support board		2X
D	Left board		1X
E	Upper middle board		1X
F	Middle Shelf		1X
G	Lower middle board		1X
H	Bottom board		1X
I	Feet		4X
J	Wood dowel		18X
K	Cam lock set (bolt, nut, cover)		16X
L	Flat head screw		4X

 **SAFAVIEH**
FURNITURE

Item# ACC5742

Product Dimensions: 31.5"W x 14"D x 31.6"H



 WARNING 

Weight Capacity: 40LBS

Warning: Do not stand on the desk

Warning: Do not over torque bolts.

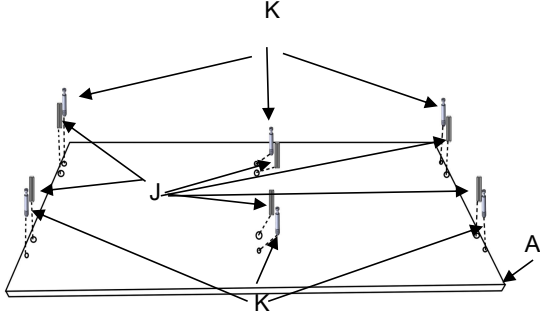
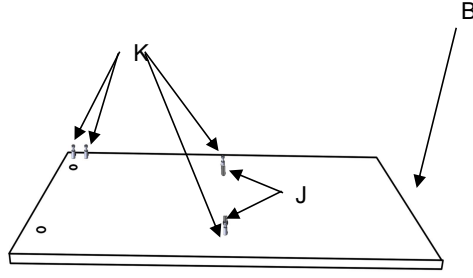
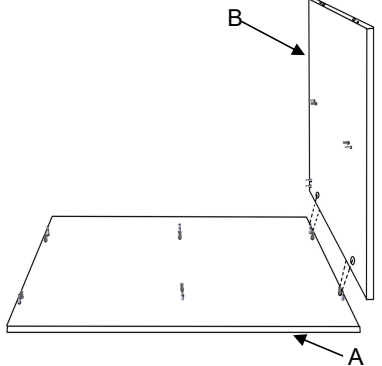
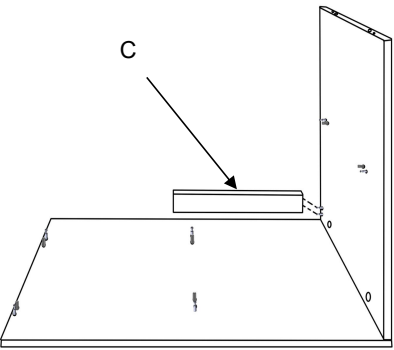
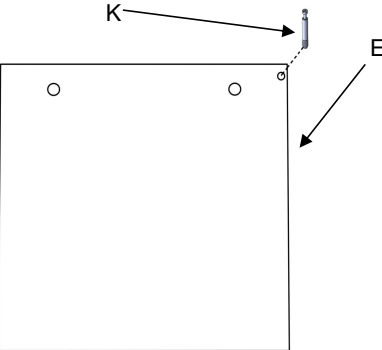
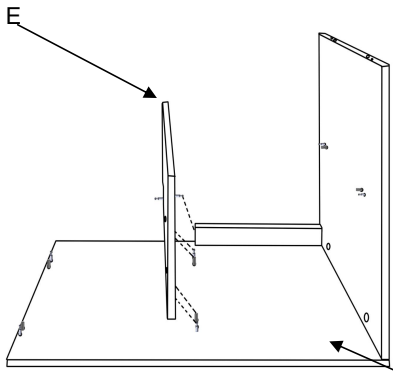
PREPARATION

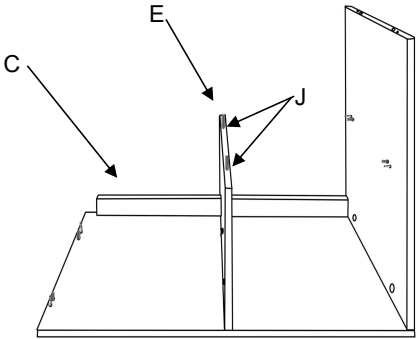
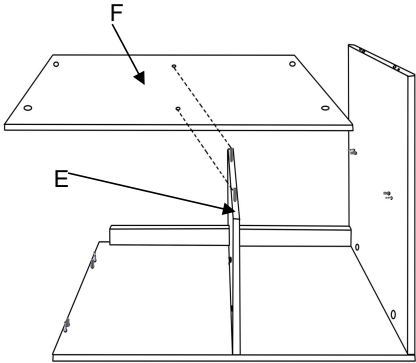
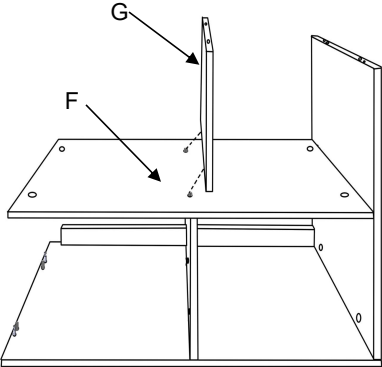
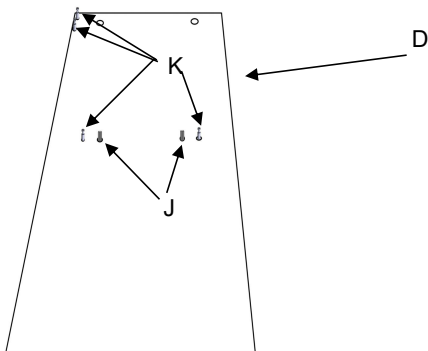
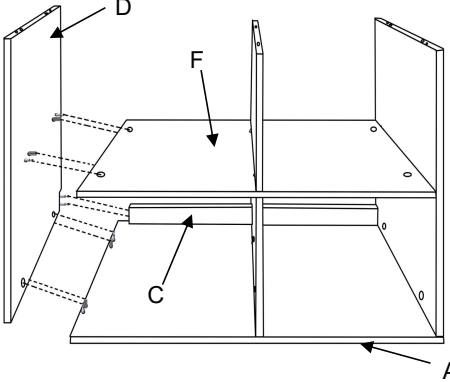
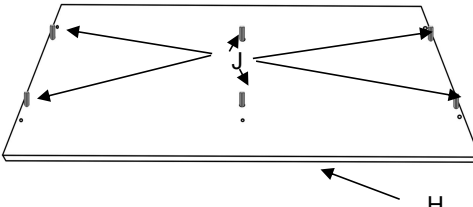
*Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

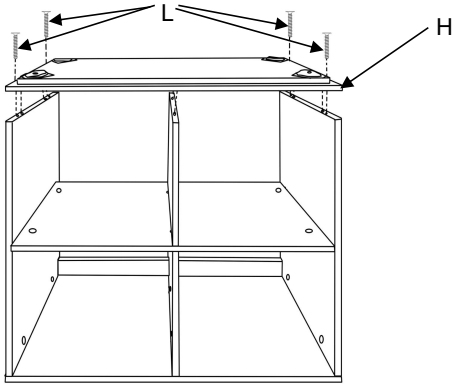
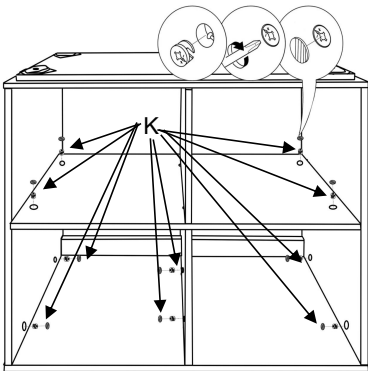
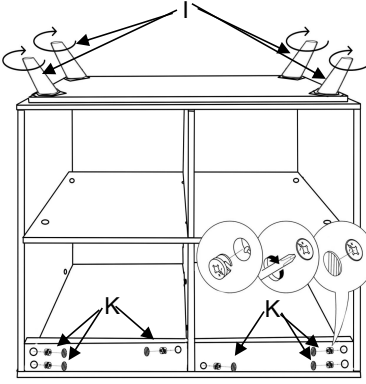
*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 30 minutes.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

		
Step 1: Take all packaging off the table. Turn over table top A and insert 6pcs wood dowels J and 6pcs cam lock bolts K into table top A.	Step 2: Insert 4pcs cam lock bolts K and 2pcs wood dowels J into right board B.	Step 3: Insert the right board B into the wood dowels and cam lock bolts on the right side of table top A.
		
Step 4: Insert 1pc back support board C into the cam lock bolts of the right board B	Step 5: Insert 2 cam lock bolts K onto the edge of upper middle board E on both sides.	Step 6: Slightly lift the back support board C to allow the cam lock bolt of the upper middle board E to be inserted into the back support board C, and then insert the upper middle board E into the wood dowels and cam lock bolts on the middle of the table top A.

		
Step 7: Insert the rest back support board C into the cam lock bolts of the upper middle board E. Insert 2 wood dowels J into the 2 pre-embedded holes on the cross section of the upper middle board E.	Step 8: Place the 2 holes in the middle of the middle shelf F onto the wood dowels of the upper middle board E.	Step 9: Insert lower middle board G into the wood dowels of the middle shelf F.
		
Step 10: Insert 4pcs cam lock bolts K and 2pcs wood dowels J into left board D.	Step 11: Slightly lift the back support board C and middle shelf F to allow the cam lock bolts of the left board D to be inserted into the back support board C and middle shelf F, and then insert the left board D into the wood dowels and cam lock bolts on the left side of the table top A.	Step 12: Insert 6pcs wood dowels J into bottom board H.

		
Step 13: Align the 6pcs wooden dowels of the bottom board H and insert them into the 6 pre-drilled holes in the left board, lower middle board and right board. Then, use 4pcs flat head screws to lock the bottom board H into the left board and right board.	Step 14: Align the 10pcs cam lock nuts into the pre-drilled holes in the left board, upper middle board, middle shelf and right board. Use a screwdriver to rotate clockwise to lock the cam lock nuts, and then attach 10pcs cam lock covers to the corresponding holes.	Step 15: Align the 6pcs cam lock nuts into the pre-drilled holes in the back support board C. Use a screwdriver to rotate clockwise to lock the cam lock nuts, and then attach the 6pcs cam lock covers to the corresponding holes. Attach the 4pcs feet I into the holes of the iron plate on the bottom board. The table installation is now