


ASSEMBLY INSTRUCTIONS

TWIN LOFT BED WITH SHELF

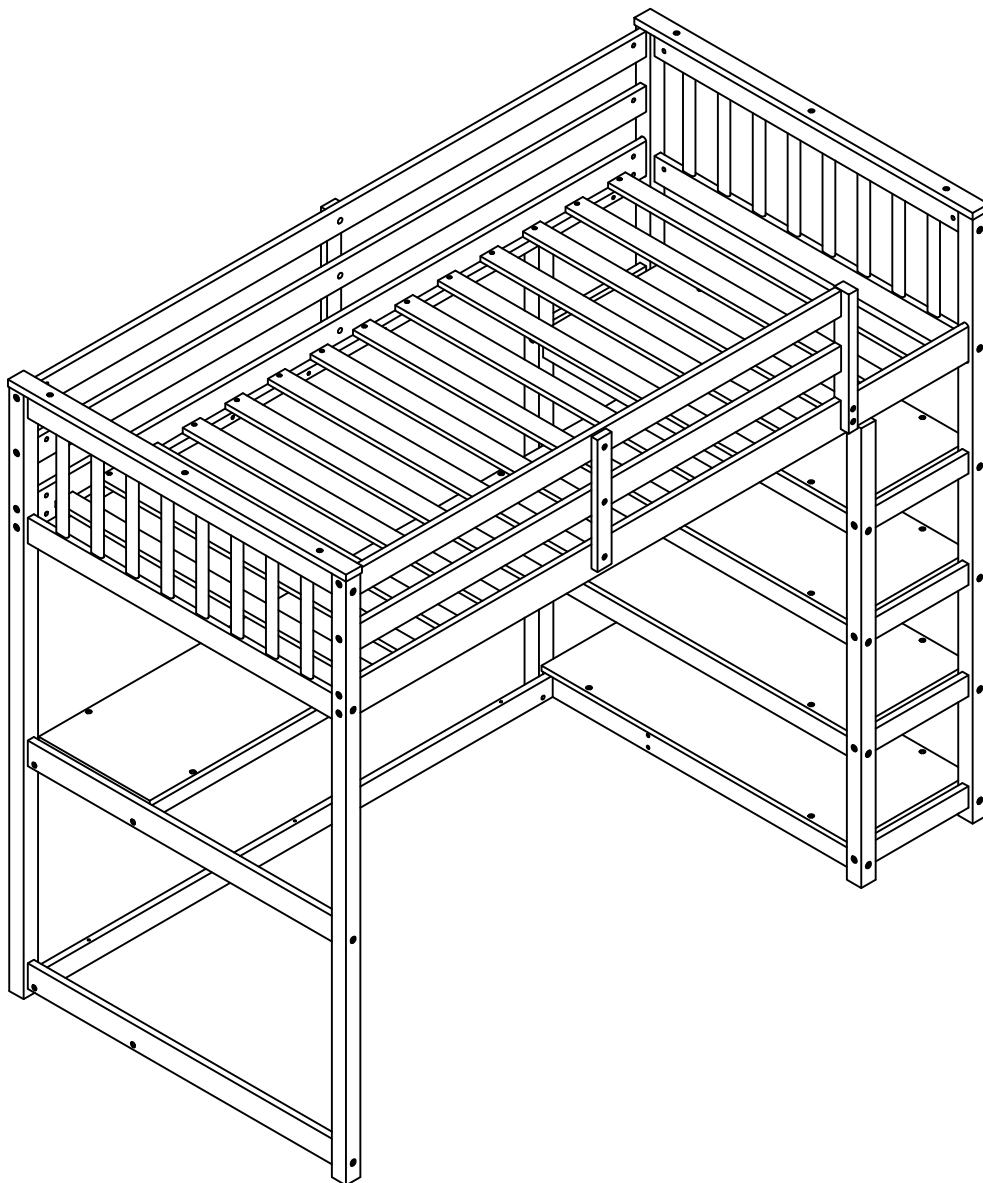

If you have any questions, please feel free to contact us.

Email: service@qualfurn.net

WF291351 / WF291352

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-tight may provide added safely precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 38 1/2" WIDE ON UPPER AND ON LOWER BUNKS. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:















Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

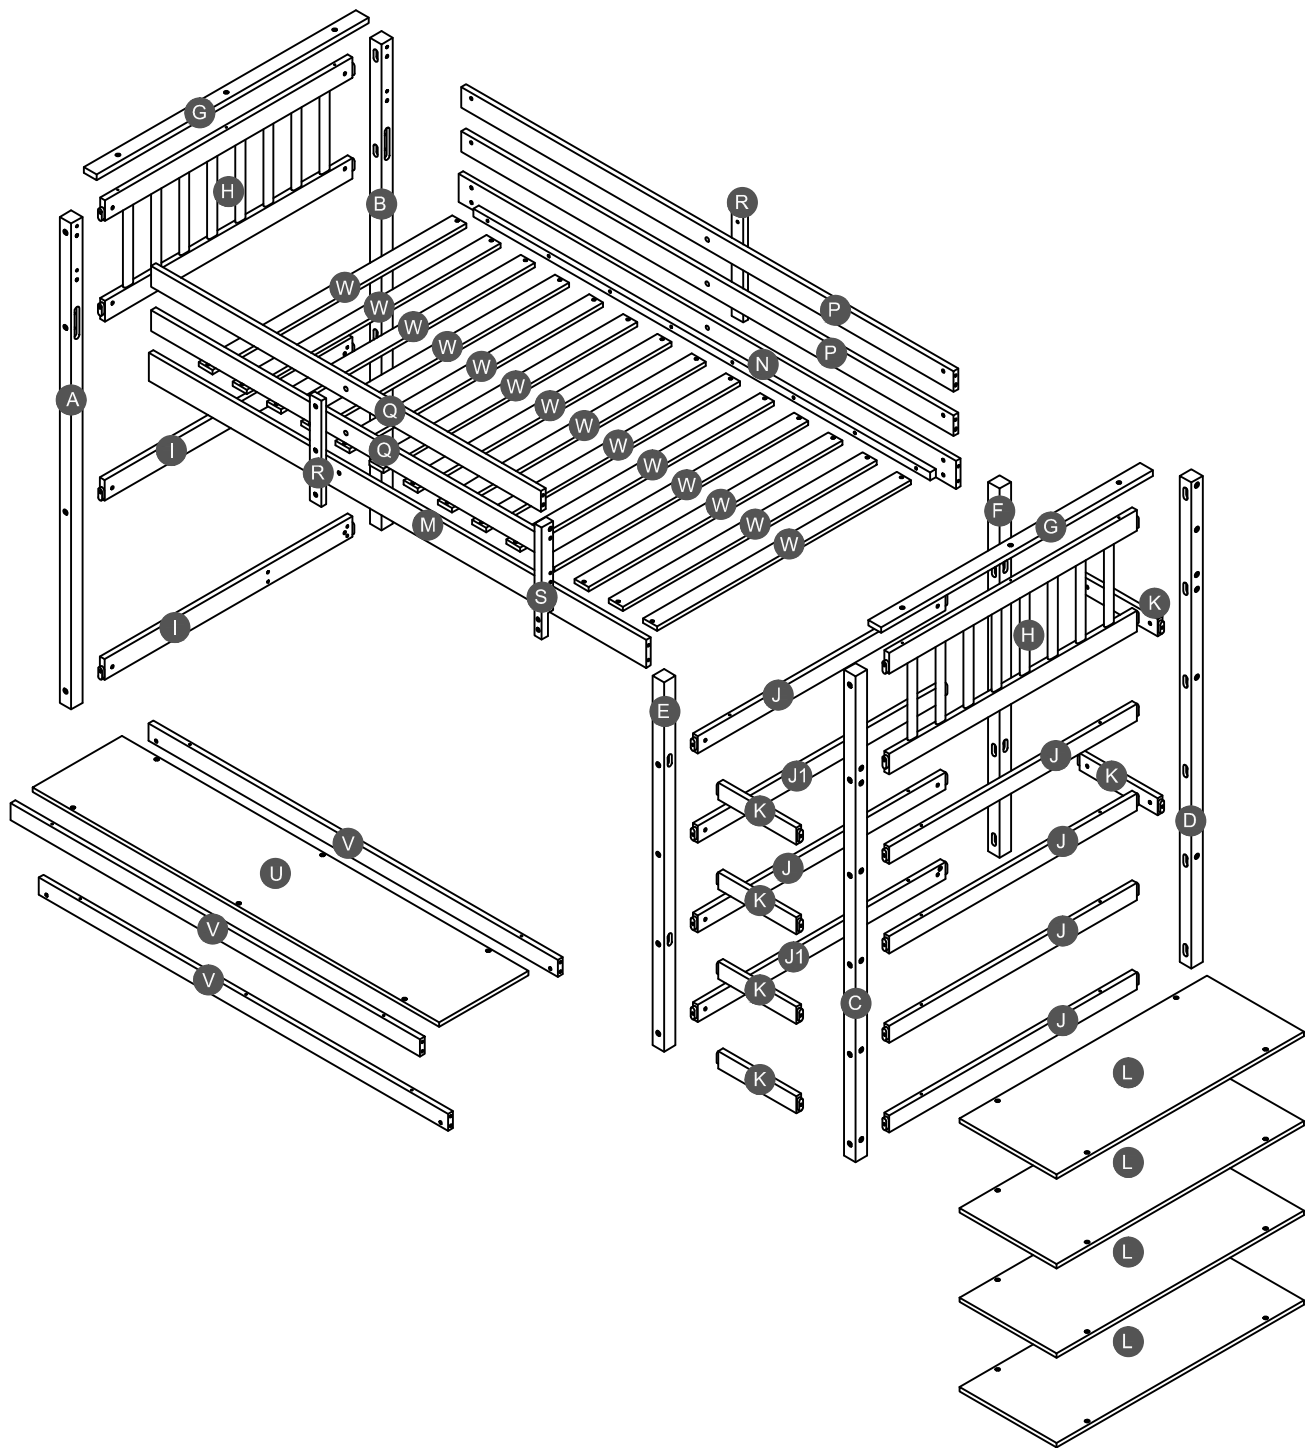Detail View











Part List














Hardware List WF291351

A		B		C	
	Leg (Left front) - 1pc		Leg (Left back) - 1pc		Leg (Right front) - 1pc
D		E		F	
	Leg (Right back) - 1pc		Leg short (Front) - 1pc		Leg short (Back) - 1pc
M		N		P	
	Side rail (front) - 1pc		Side rail (back) - 1pc		Long guard rail (back) - 2pcs
Q		R		S	
	Short guard rail (front) - 2pcs		Vertical guard rail - 2pcs		Support guard rail (Right) - 1pc
U		V			
	Top panel - 1pc		Horizontal bar - 3pcs		


WF291352

G		H		I	
	Cap for upper HB-FB - 2pcs		Frame HB - FB - 2pcs		Horizontal bar HB - 2pcs
J		J1		K	
	Horizontal bar FB - 6pcs		Horizontal bar FB - 2pcs		Step ladder - 6pcs
L		W			
	Shelf - 4pcs		Slat - 14pcs		

Hardware List WF291351


1  Ø8*30mm Wood dowel (6pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (42pcs)
4  (Ø12)1/4"*60mm Hex-Head bolts (6pcs)	5  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	6  (Ø12)1/4"*30mm Hex-Head bolts (6pcs)
7  1/4"*15 (9.5mm) Horizontal-Hole bolts (62pcs)	8  (Ø12)1/4"*40mm Hex-Head bolts (28pcs)	9  (1/4")4.5*58mm Allen key (1pc)
10  Ø3.5*15mm Wood screws (4pcs)	11  Ø4*30mm Wood screws (28pcs)	12  24*28*28*2mm Metal bracket (2pcs)
13  Ø10*40mm Wood dowel (8pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

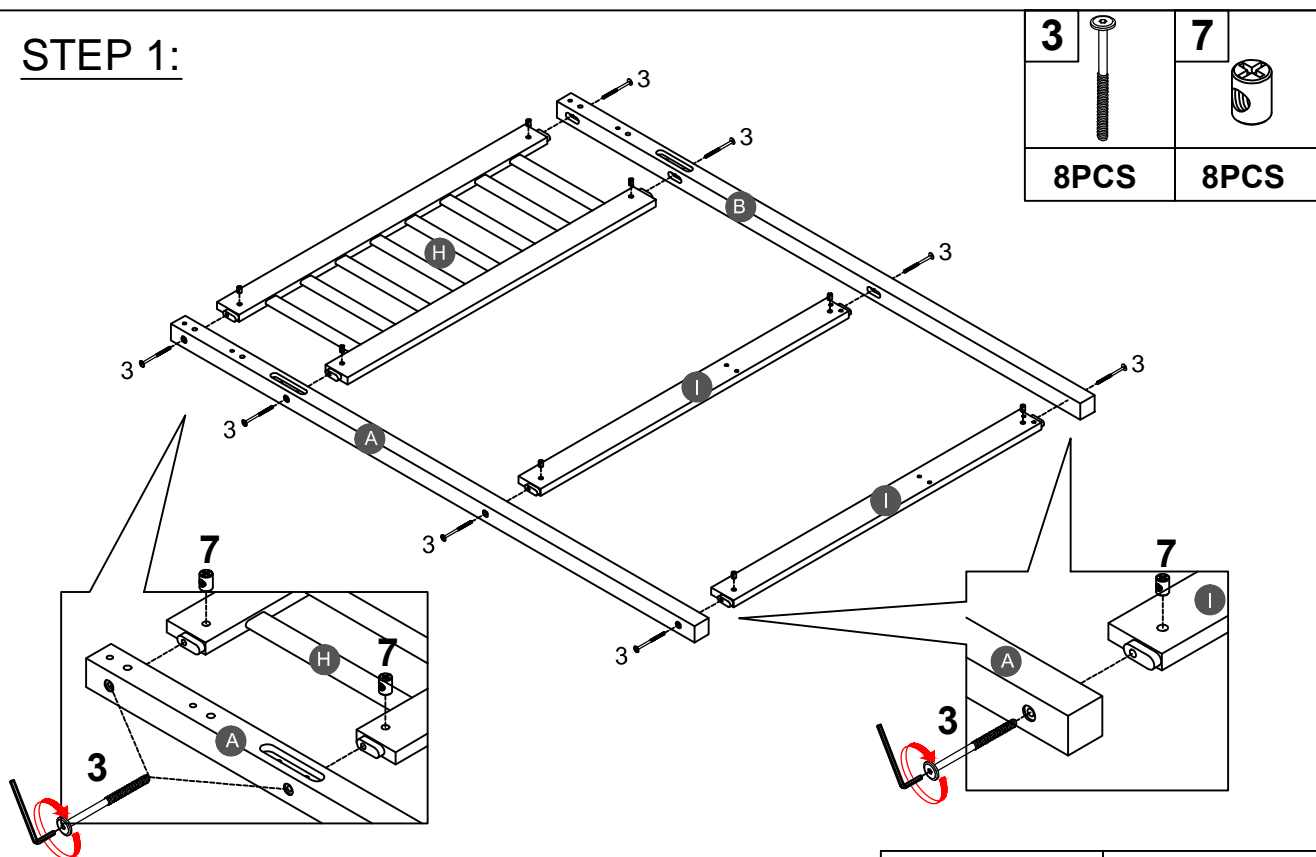


3		7	
8PCS		8PCS	

Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened

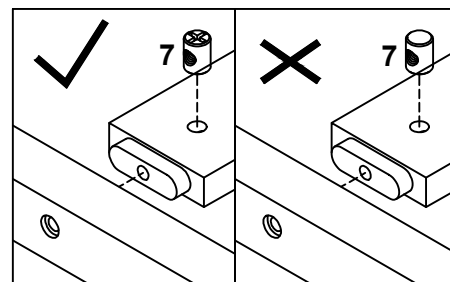

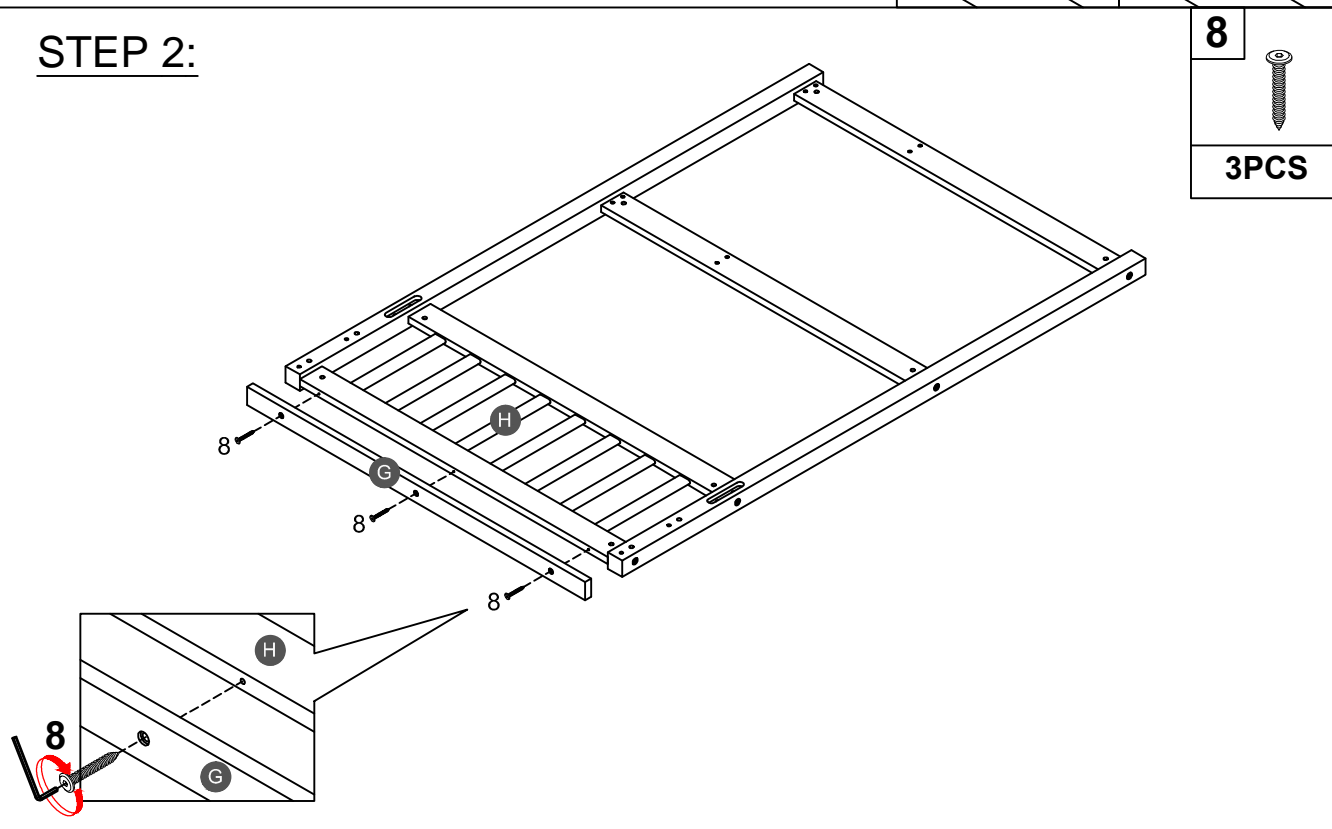


STEP 2:




8	
3PCS	

STEP 3:


3	7
	
12PCS	12PCS

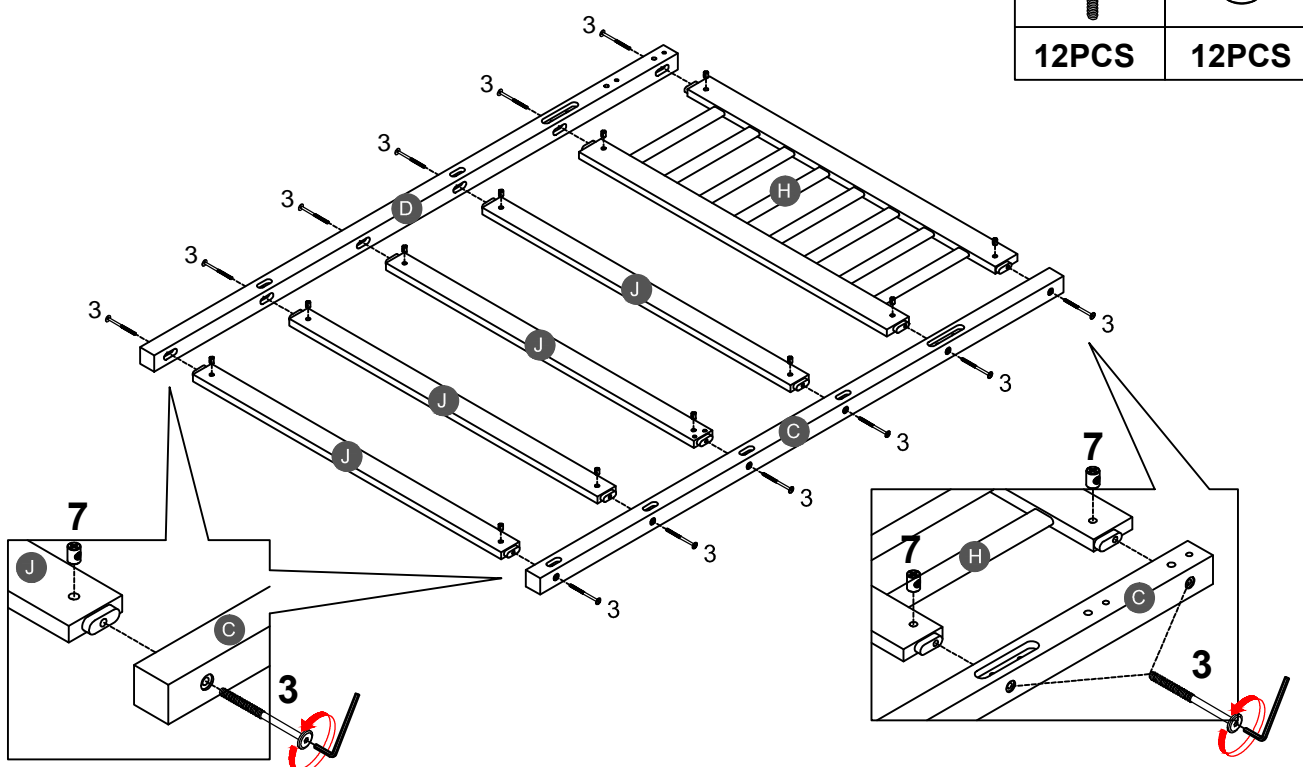


Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened

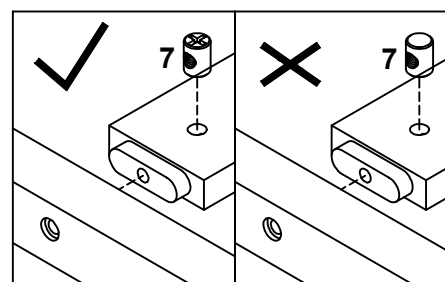




STEP 4:

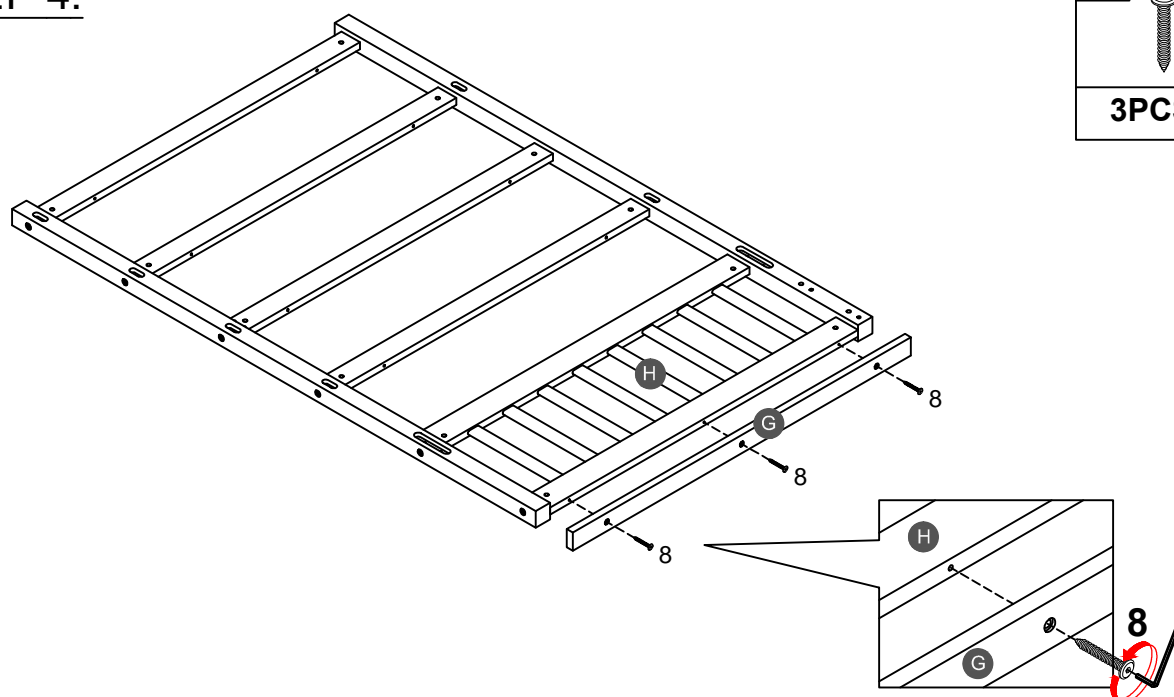8

3PCS

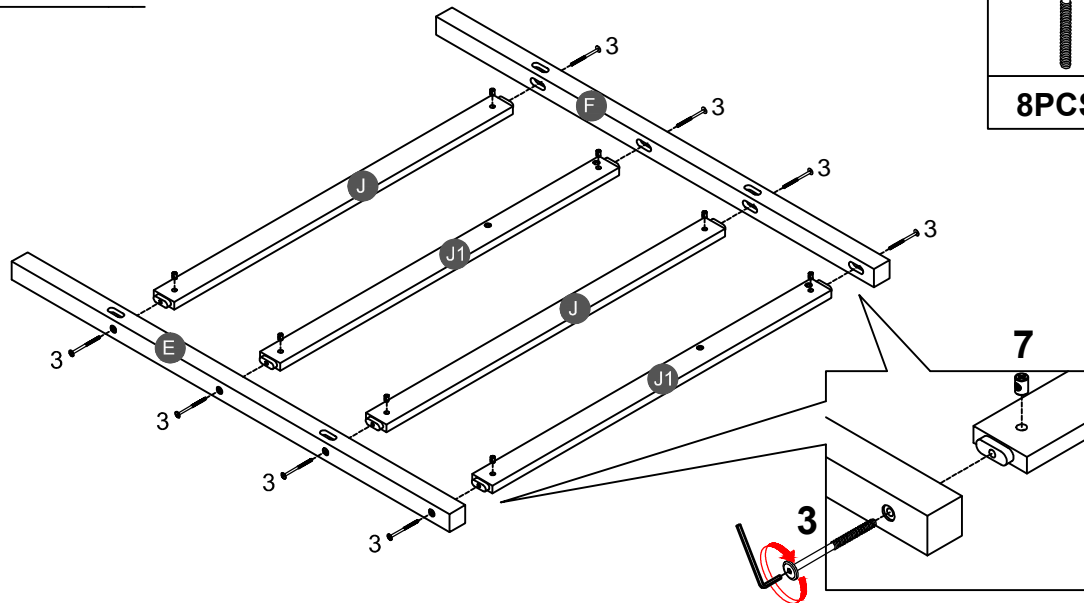


STEP 5:








3		7	
8PCS		8PCS	

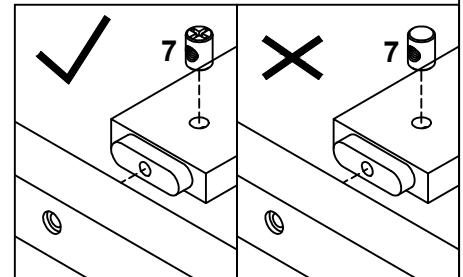Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened







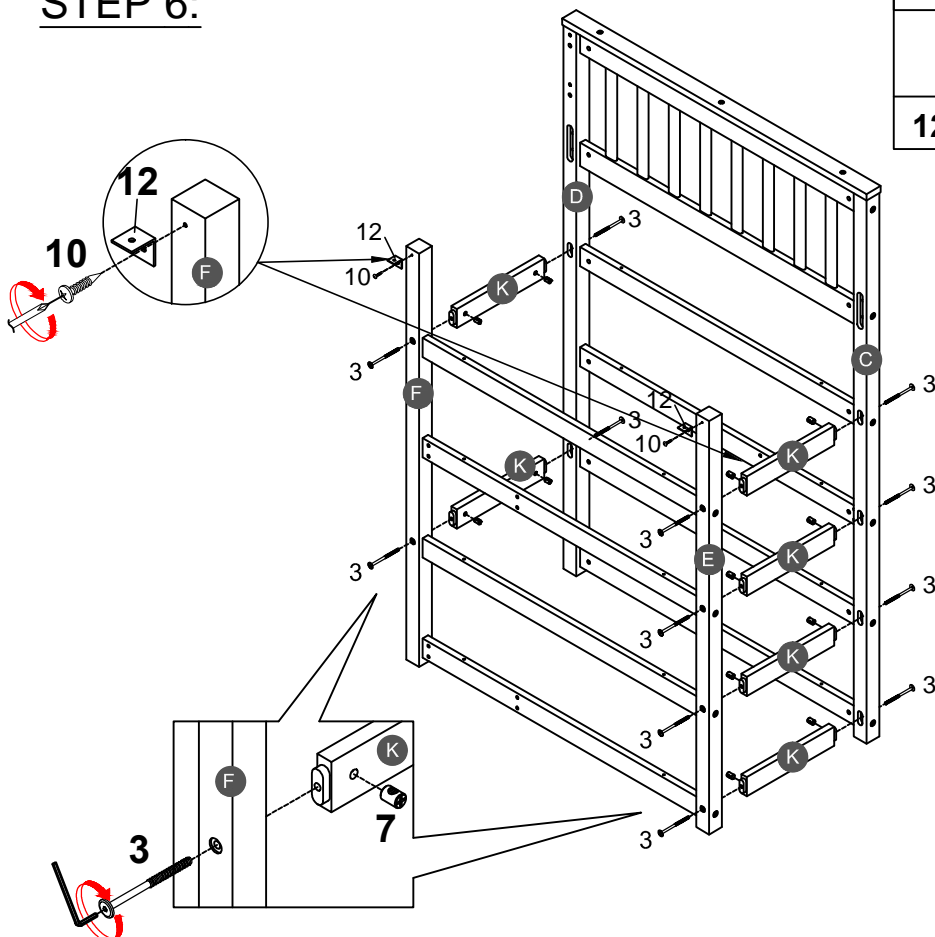





STEP 6:

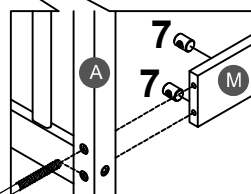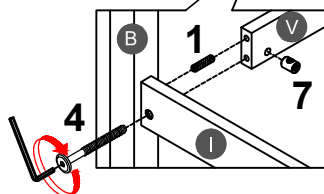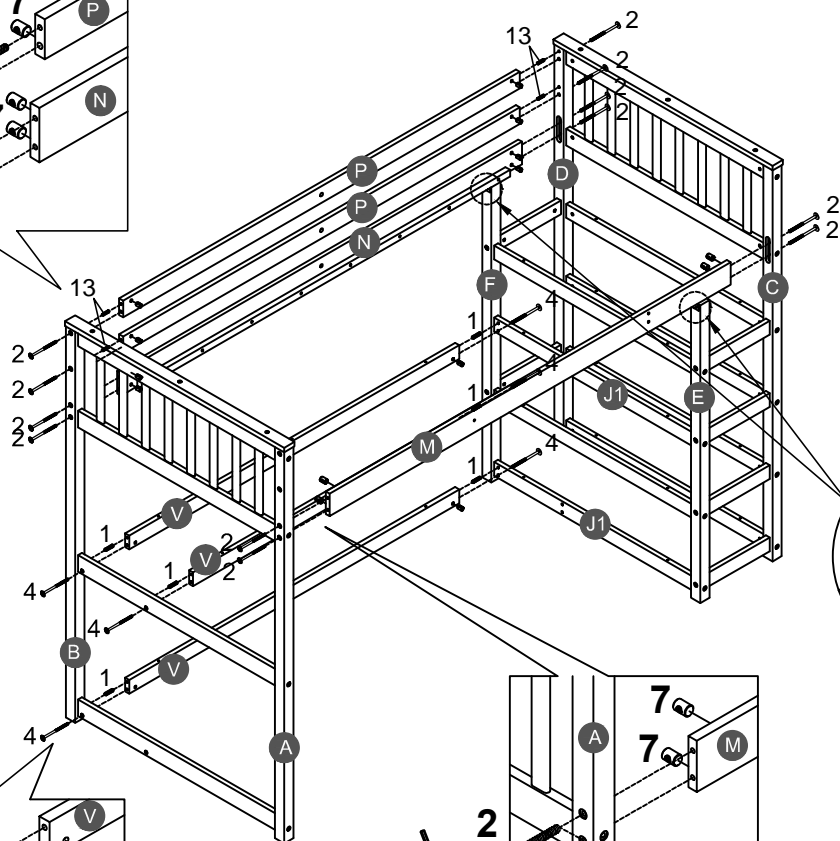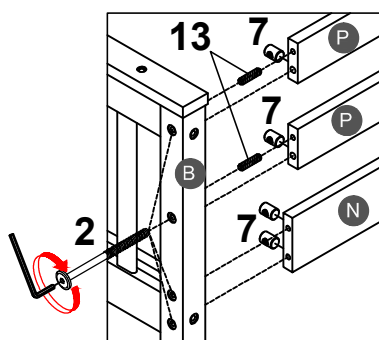



3		7		12	
12PCS		12PCS		2PCS	
				10	
				2PCS	


STEP 7:




1		2		4		7	
6PCS		12PCS		6PCS		18PCS	
							10
							
							2PCS
							13
							
							4PCS

STEP 8:

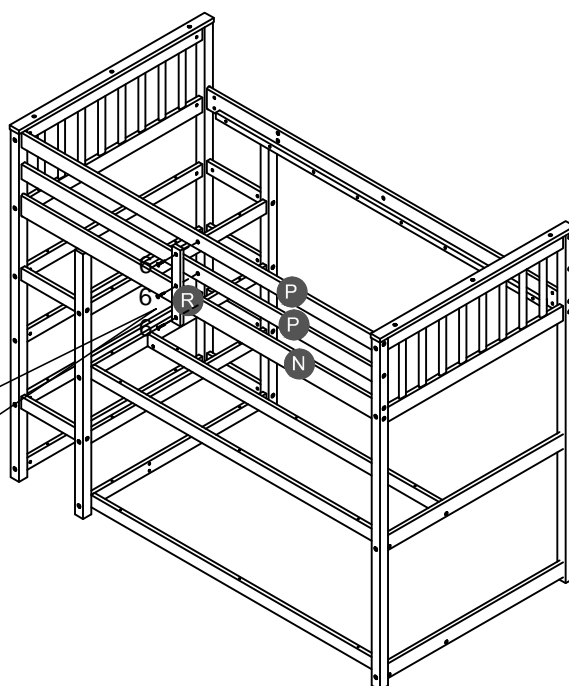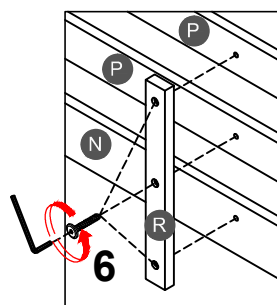


6	
3PCS	


STEP 9:

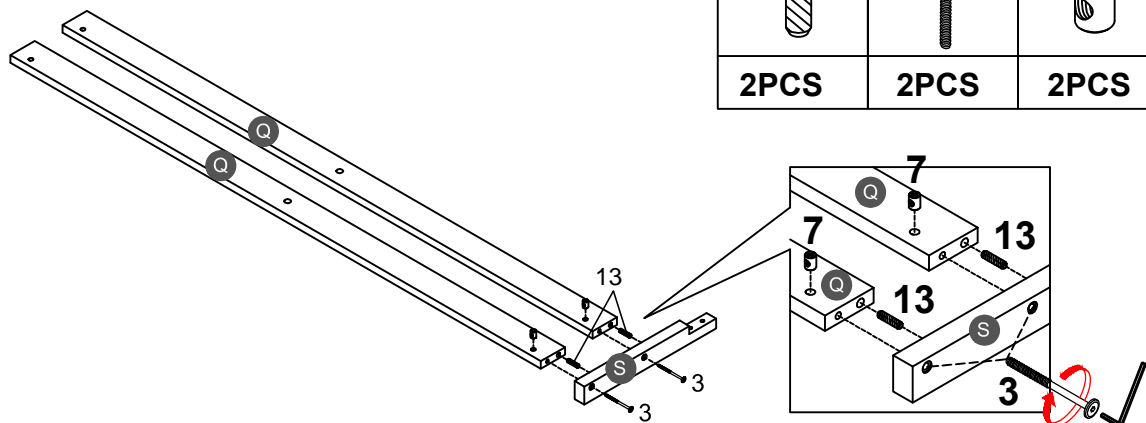


STEP 10:

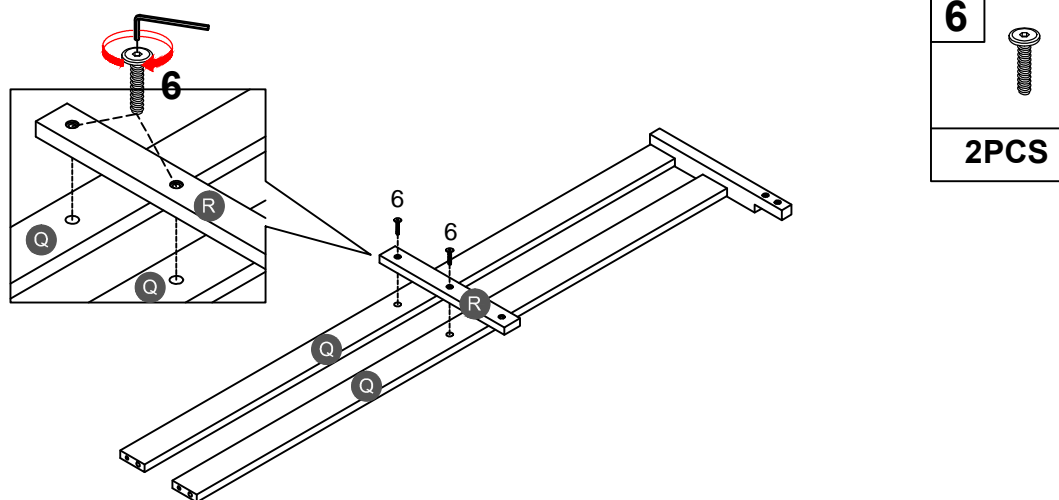

STEP 11:

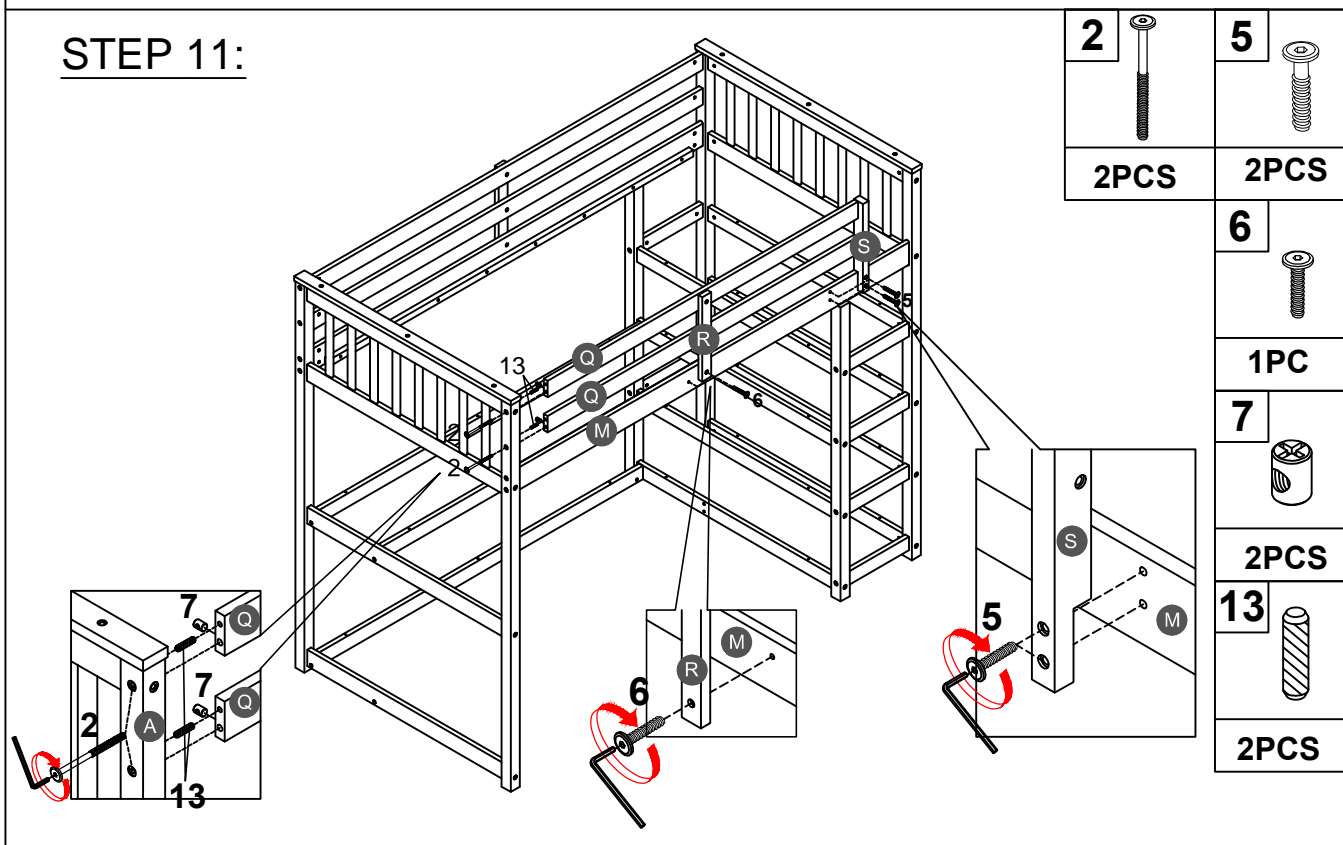

STEP 12:

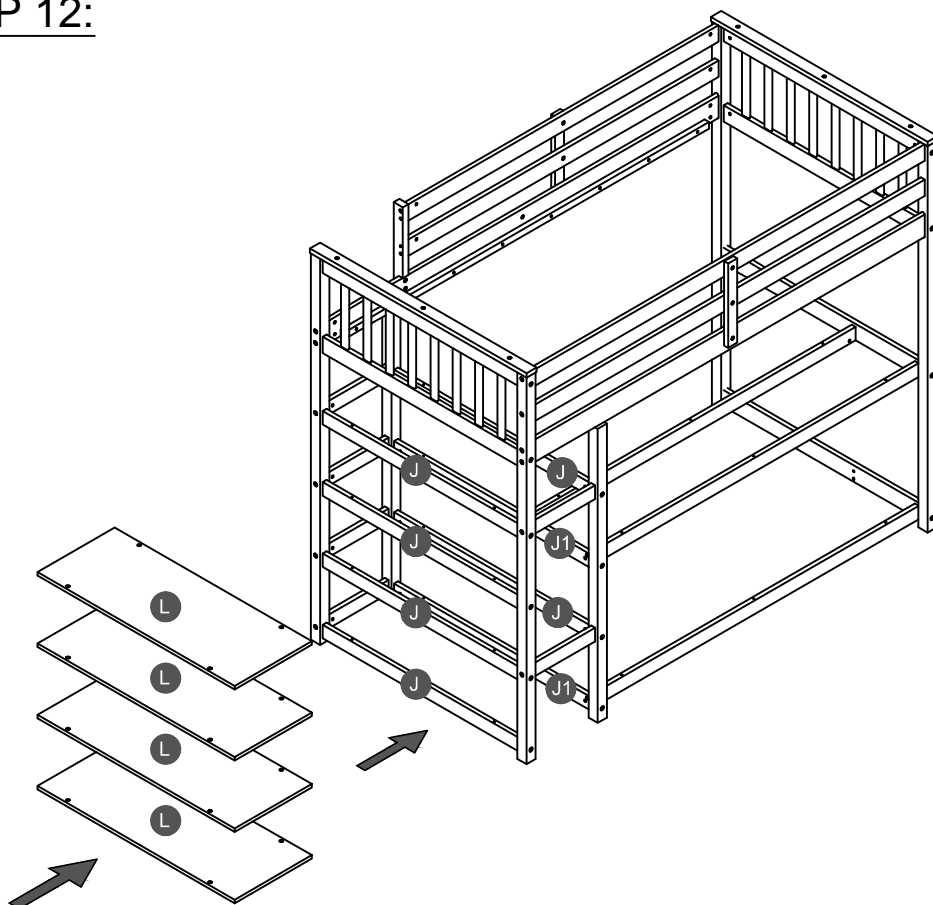


STEP 13:

8



16PCS

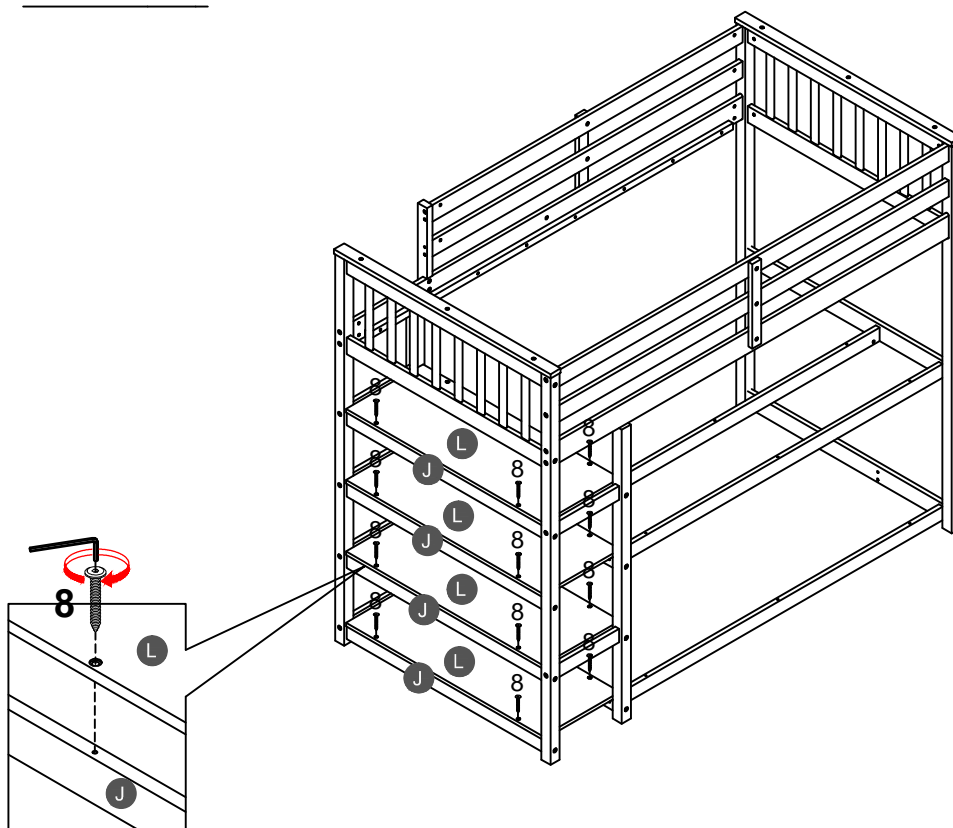


STEP 14:

8



6PCS



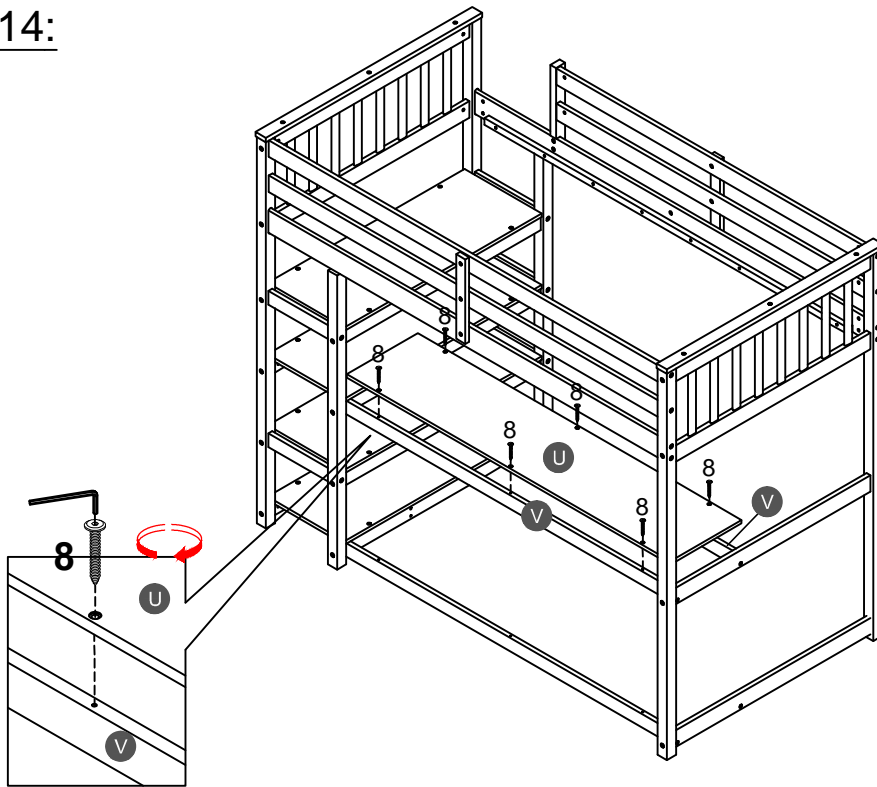


STEP 15:

12



28PCS

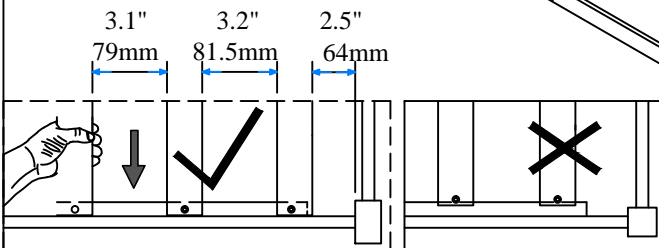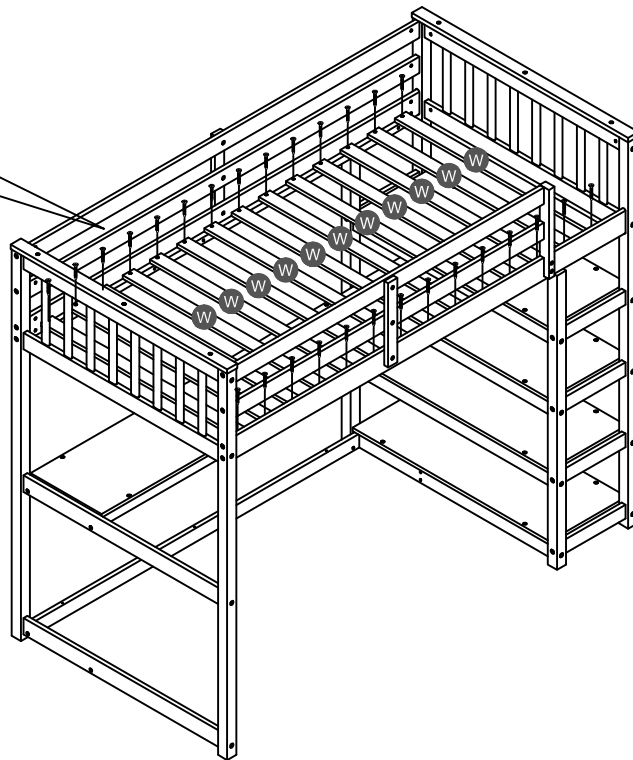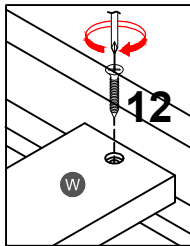

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.