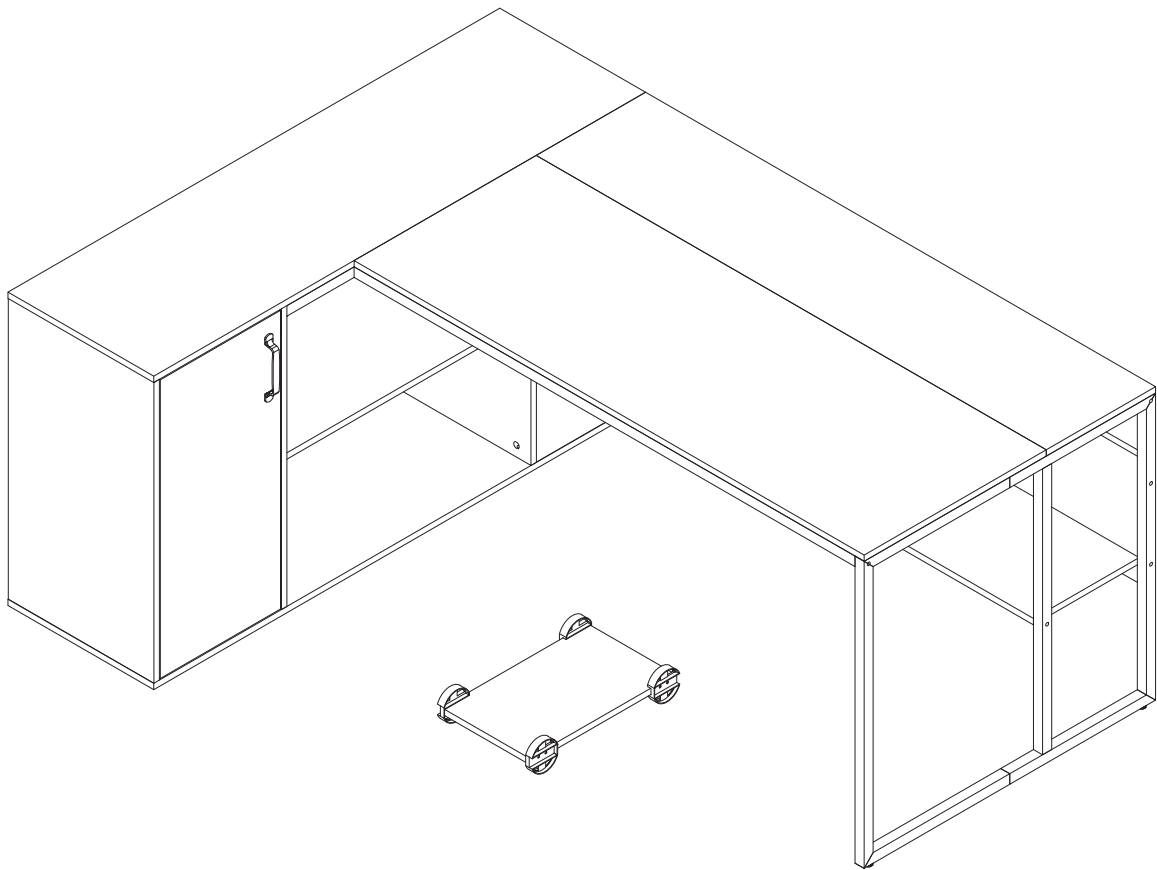




DESIGNED FOR LIFE

Assembly Instructions



Boss Table

Model No.
HOGA-YS0120\YS0121
HOGA-YS0122\YS0298



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com

Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1


Scan the QR code.



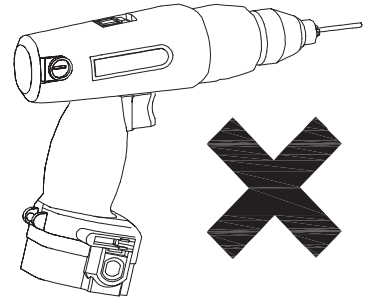
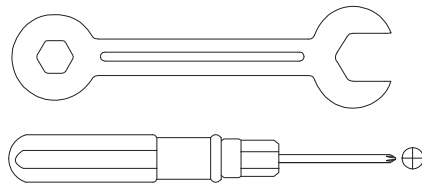
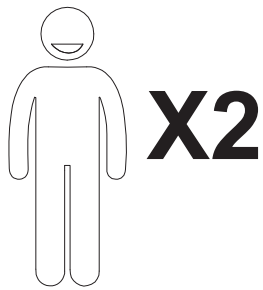
Installation Video

Step2

Search with the Model No.
(on the bottom left corner of the title page)

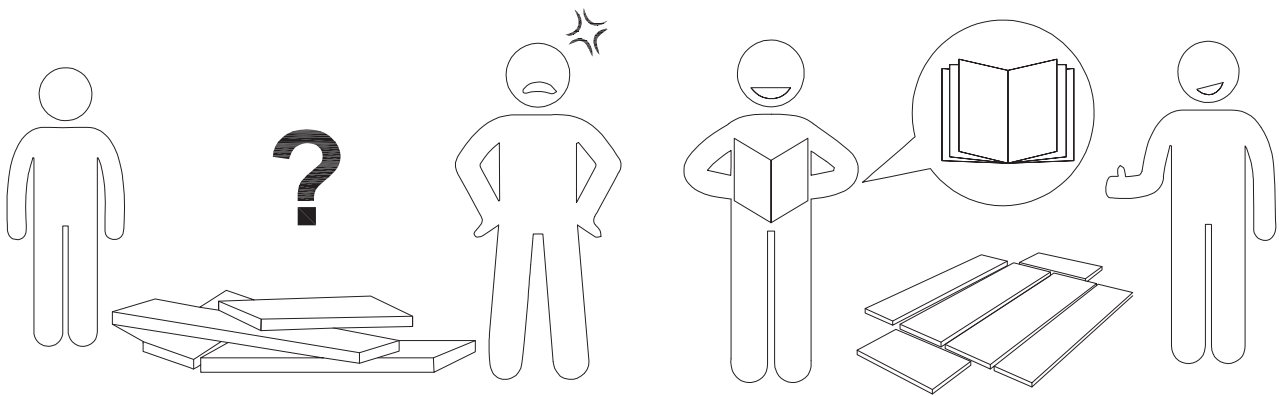


Note: If you can't find the assembly video, please contact us.



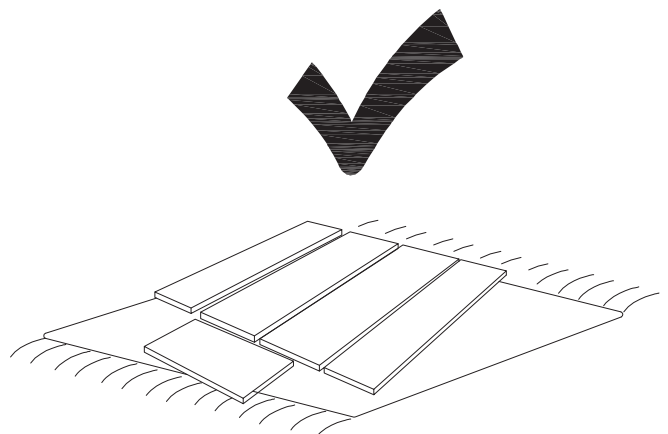
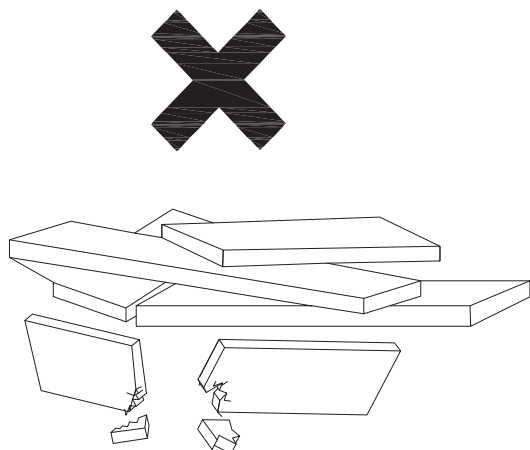
We recommend using hand tools for assembly.

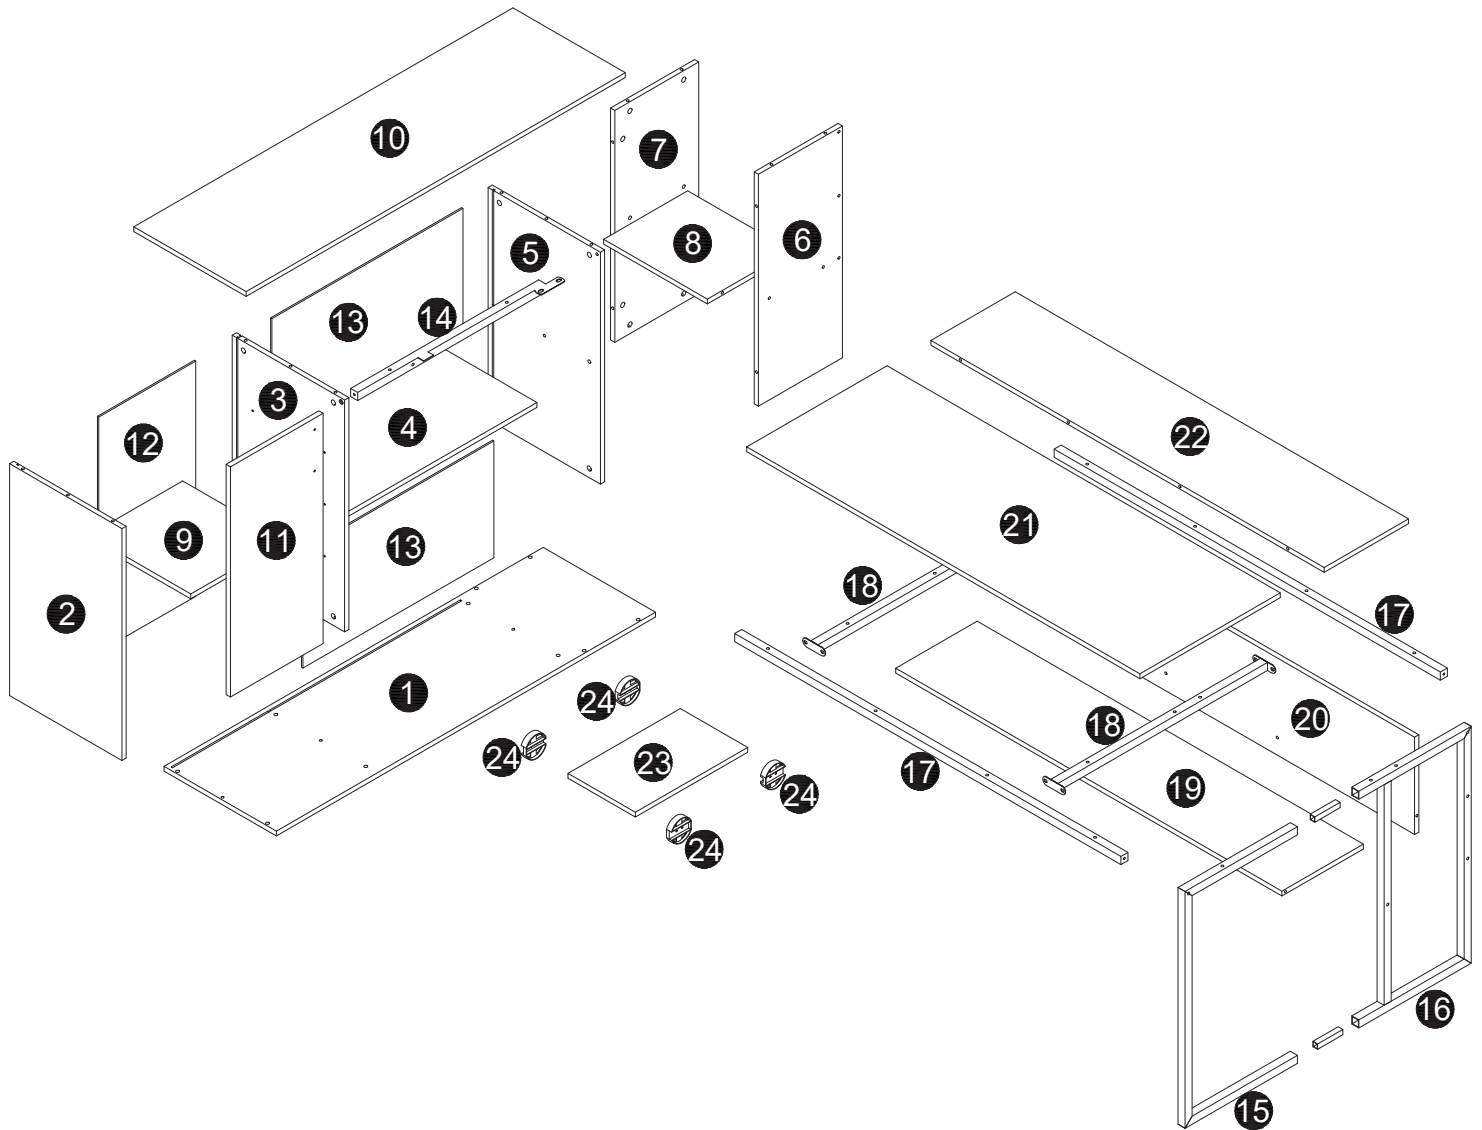
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.



AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

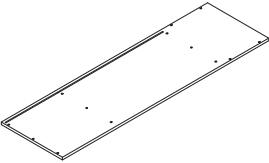
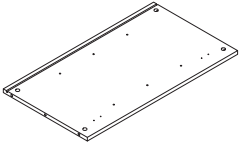
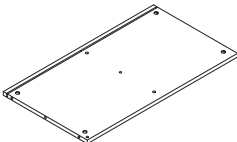
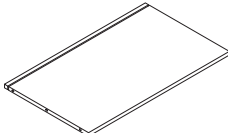
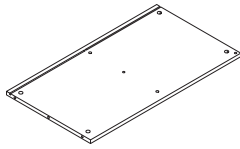
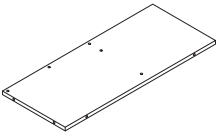
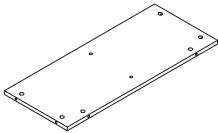
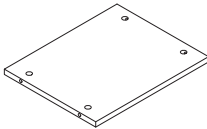
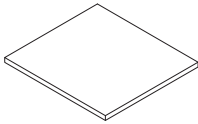
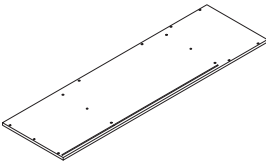
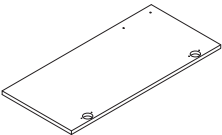
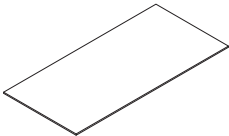
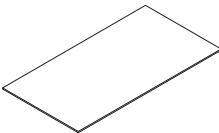

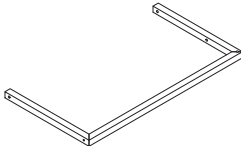
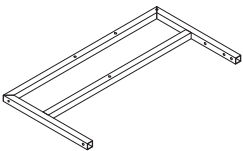
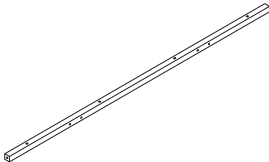
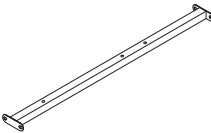
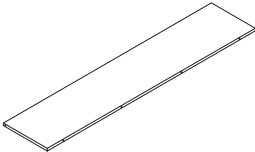
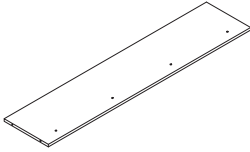
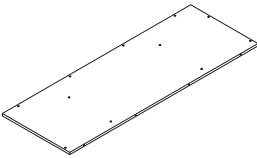
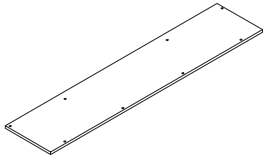
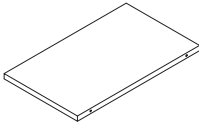





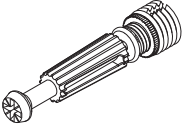

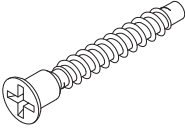


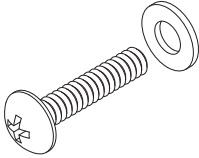
⚠ Caution

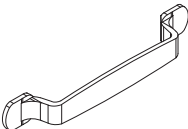
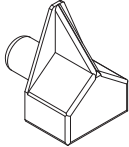
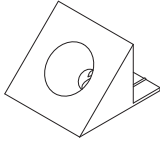
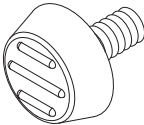


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


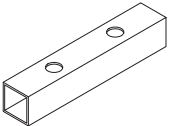



Parts List

<div>1</div> <div></div> <div>1 pc</div>	<div>2</div> <div></div> <div>1 pc</div>	<div>3</div> <div></div> <div>1 pc</div>	<div>4</div> <div></div> <div>1 pc</div>	<div>5</div> <div></div> <div>1 pc</div>
<div>6</div> <div></div> <div>1 pc</div>	<div>7</div> <div></div> <div>1 pc</div>	<div>8</div> <div></div> <div>1 pc</div>	<div>9</div> <div></div> <div>1 pc</div>	<div>10</div> <div></div> <div>1 pc</div>
<div>11</div> <div></div> <div>1 pc</div>	<div>12</div> <div></div> <div>1 pc</div>	<div>13</div> <div></div> <div>2 pcs</div>	<div>14</div> <div></div> <div>1 pc</div>	<div>15</div> <div></div> <div>1 pc</div>
<div>16</div> <div></div> <div>1 pc</div>	<div>17</div> <div></div> <div>2 pcs</div>	<div>18</div> <div></div> <div>2 pcs</div>	<div>19</div> <div></div> <div>1 pc</div>	<div>20</div> <div></div> <div>1 pc</div>
<div>21</div> <div></div> <div>1 pc</div>	<div>22</div> <div></div> <div>1 pc</div>	<div>23</div> <div></div> <div>1 pc</div>	<div>24</div> <div></div> <div>4 pcs</div>	

Hardware List

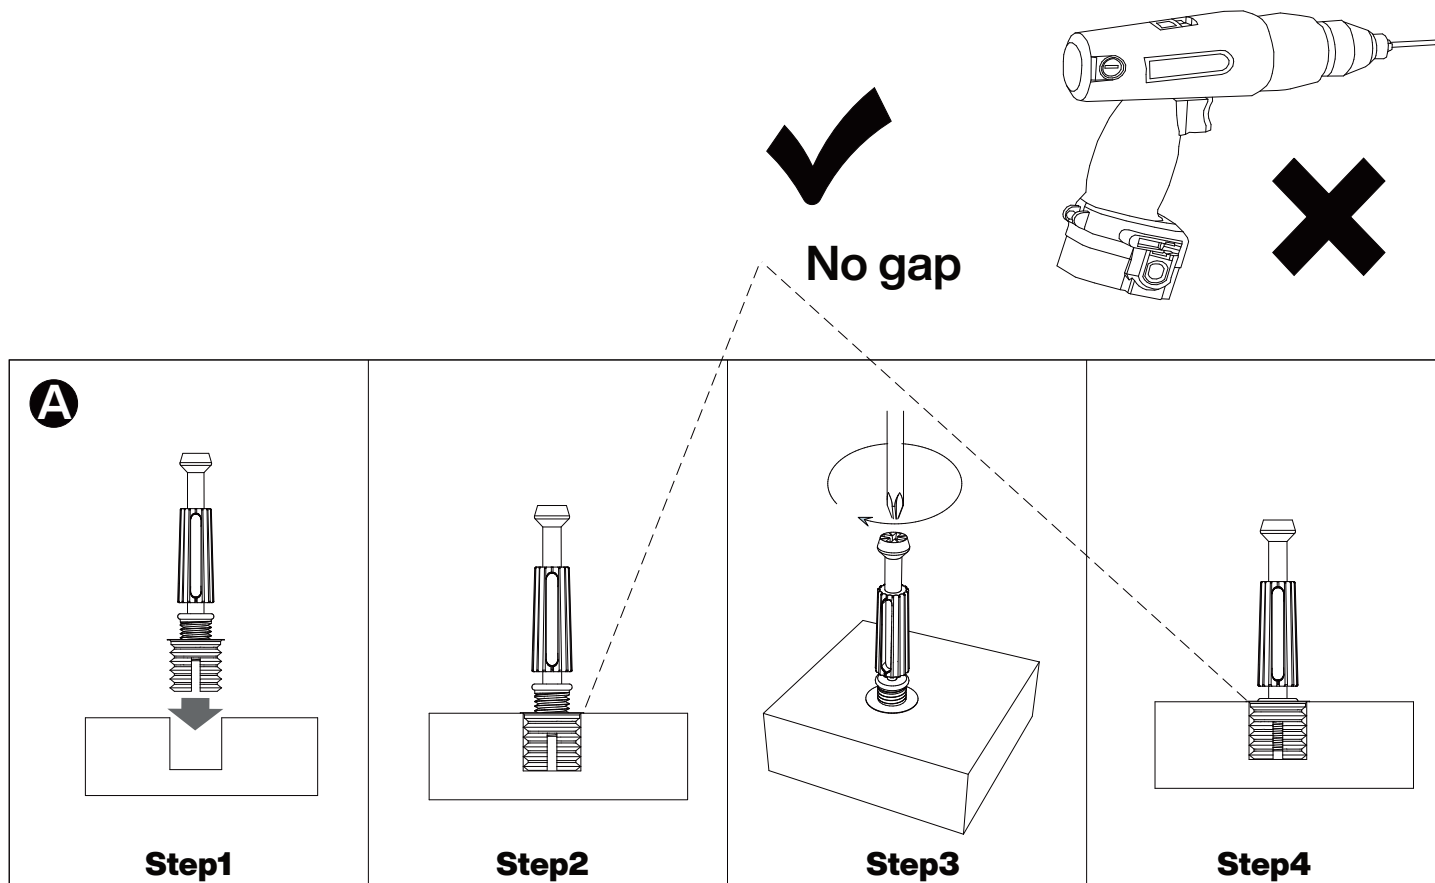
A	B	C	D	E	F
			 <p>E X6 Ø3.5x14mm</p>		
M6x35mm	Ø8x30mm	Ø7x48mm		Ø3.5x14mm	Ø4x20mm
32pcs	12 pcs	11 pcs	2 pcs	20 pcs	2 pcs

G	H	I	J	K	L
					
128mm			M6x6mm	M6x12mm	M6x35mm
1 pc	4 pcs	12 pcs	8 pcs	14 pcs	22 pcs

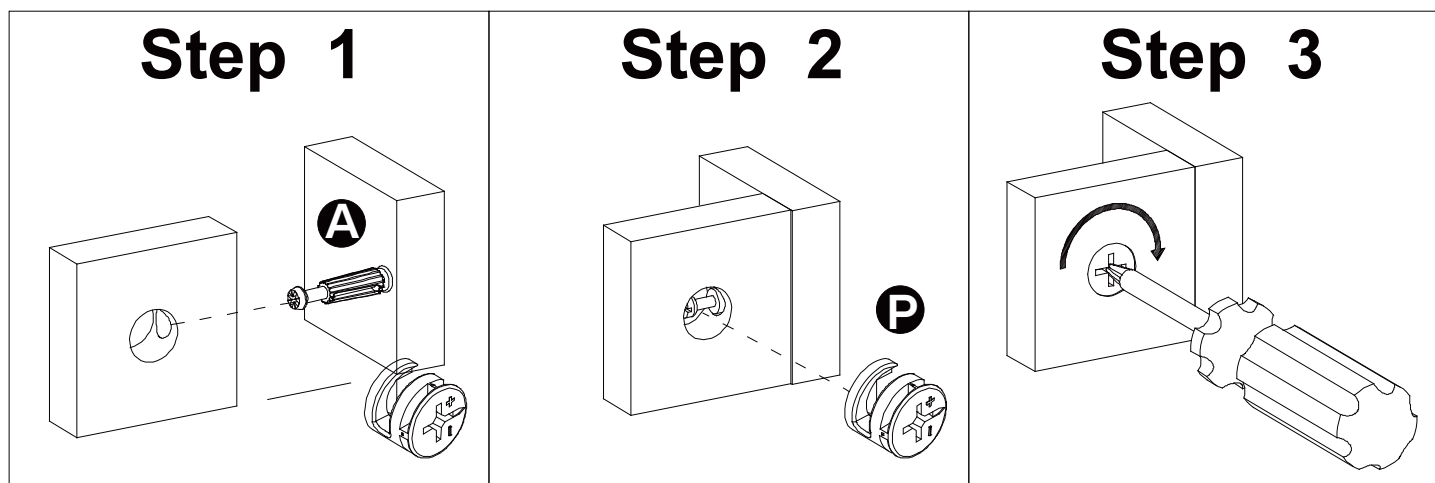
M	N	O	P		
					
M6x40mm		M4	Ø15x12mm		
3 pcs	2 pcs	1 pc	32pcs	1 pc	

Installation of Cams and Pins

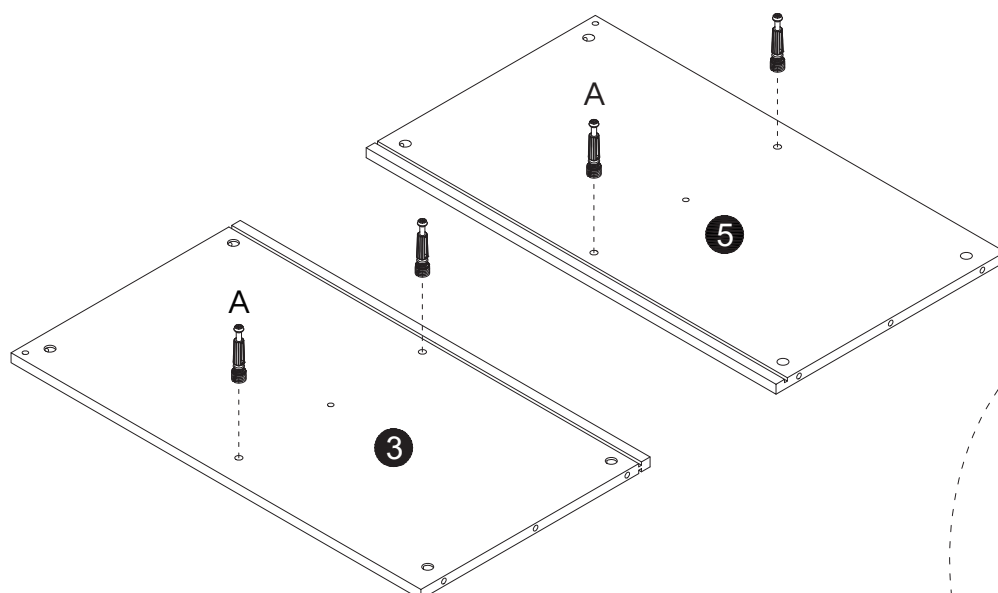
Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.




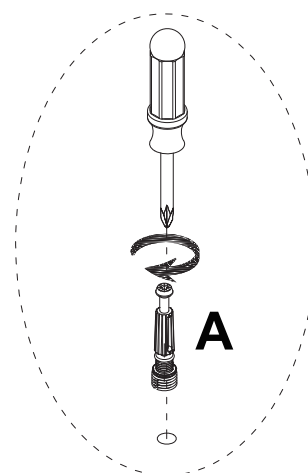
Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.



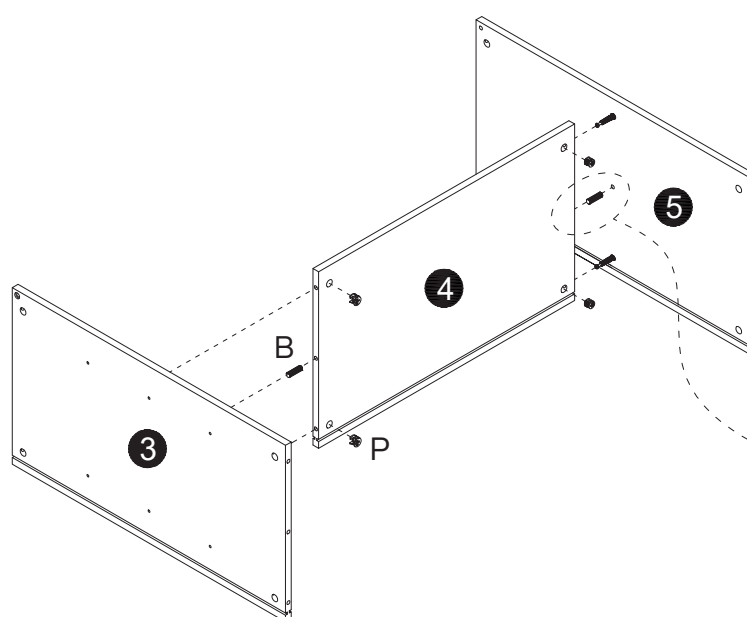
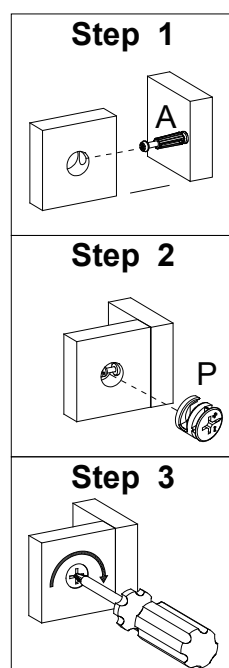
1





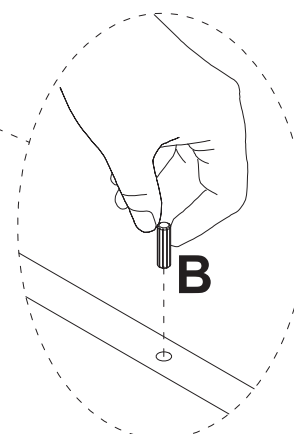
A

M6x35mm
4 pcs



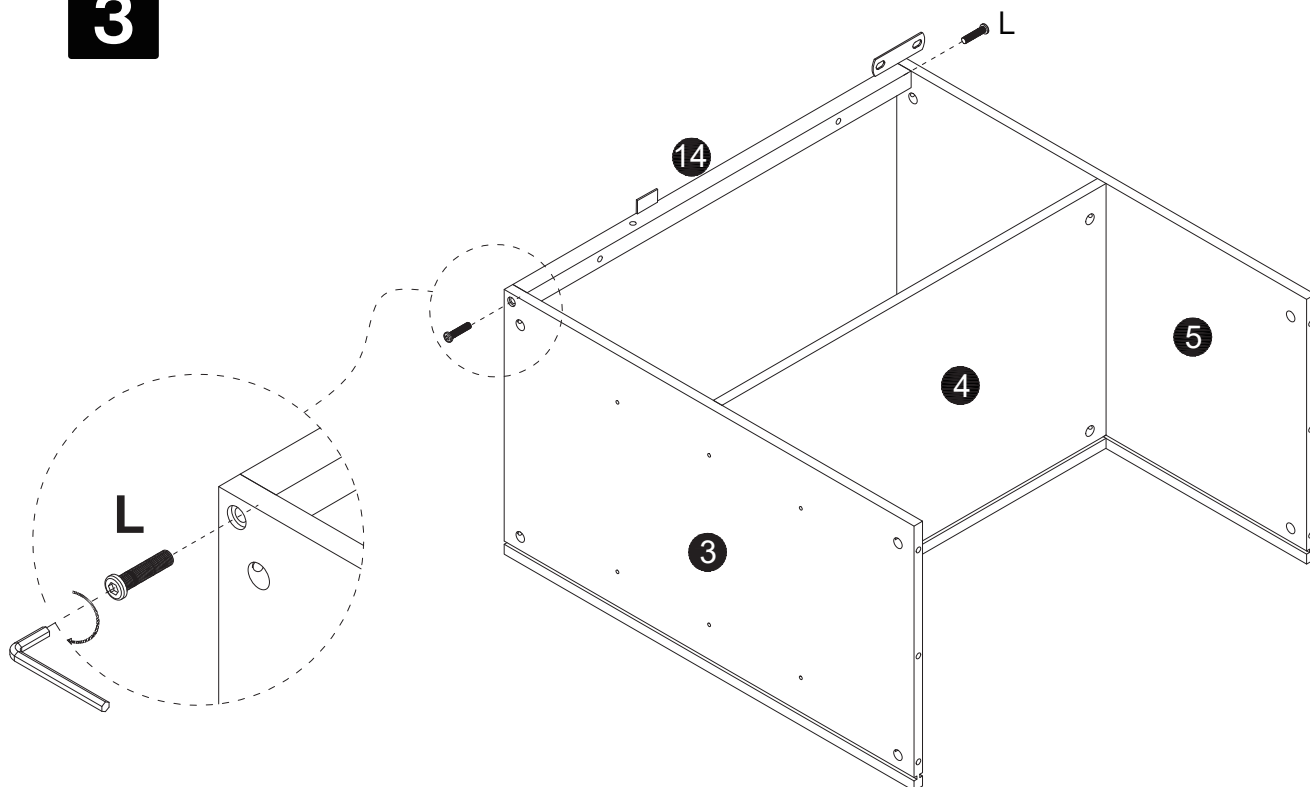
2




P	B
	
Ø15x12mm	Ø8x30mm
4 pcs	2 pcs

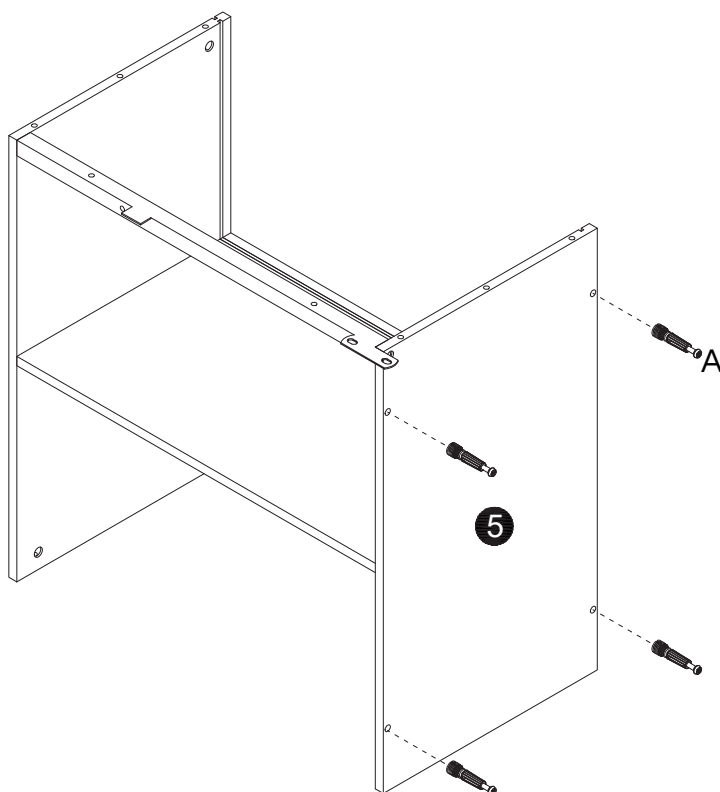



3

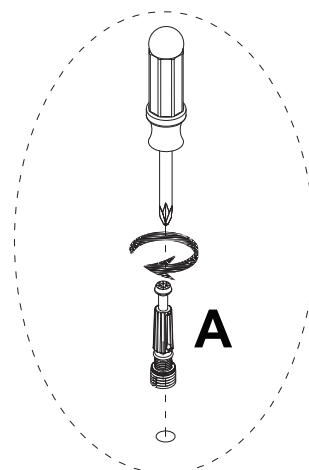


L

M6x35mm
2 pcs

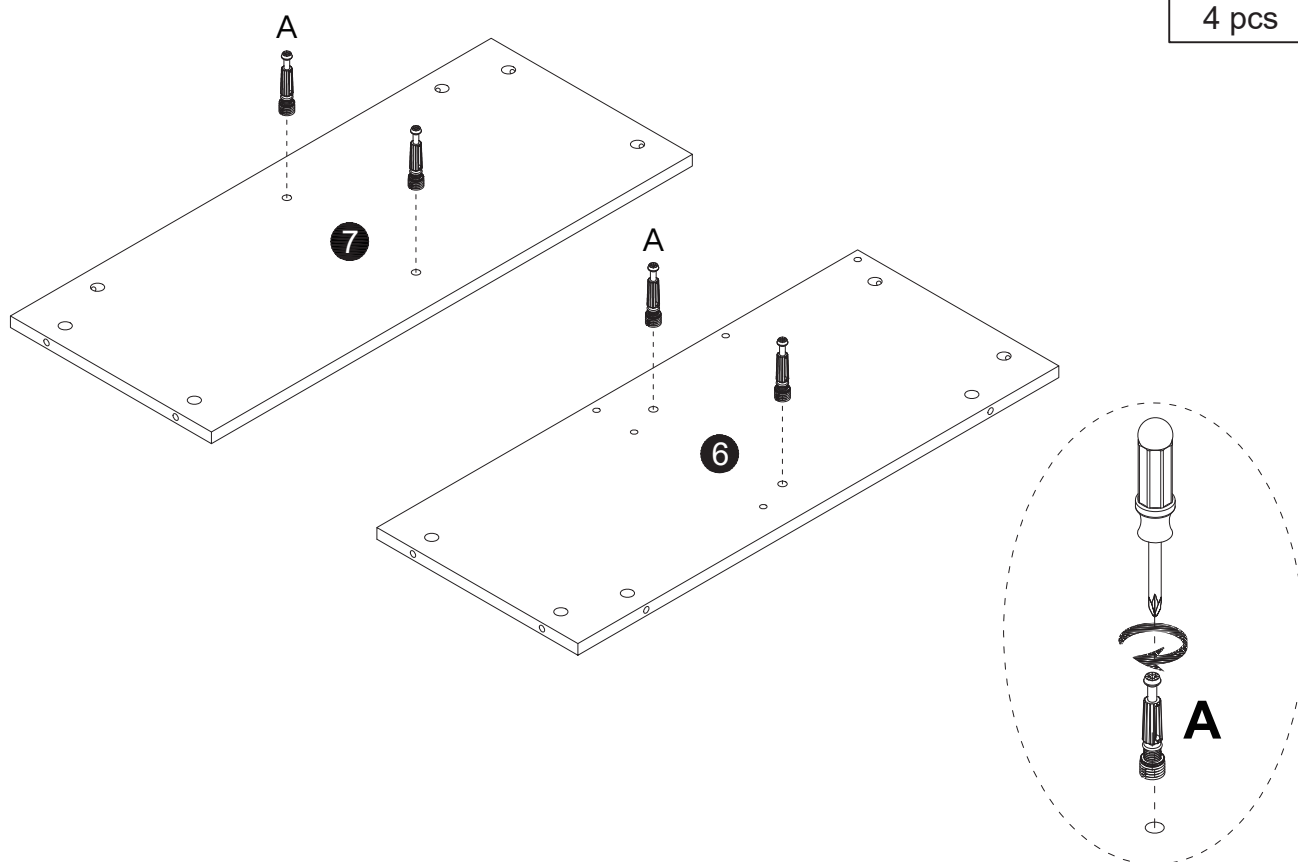
4



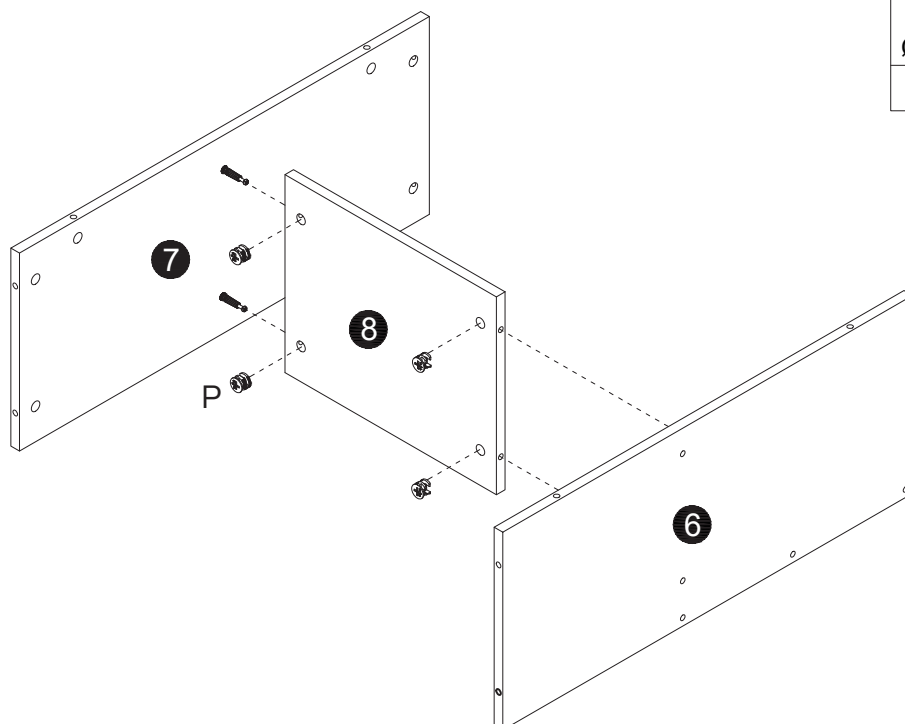
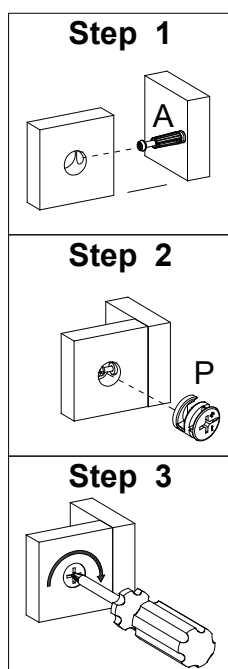
A

M6x35mm
4 pcs




5

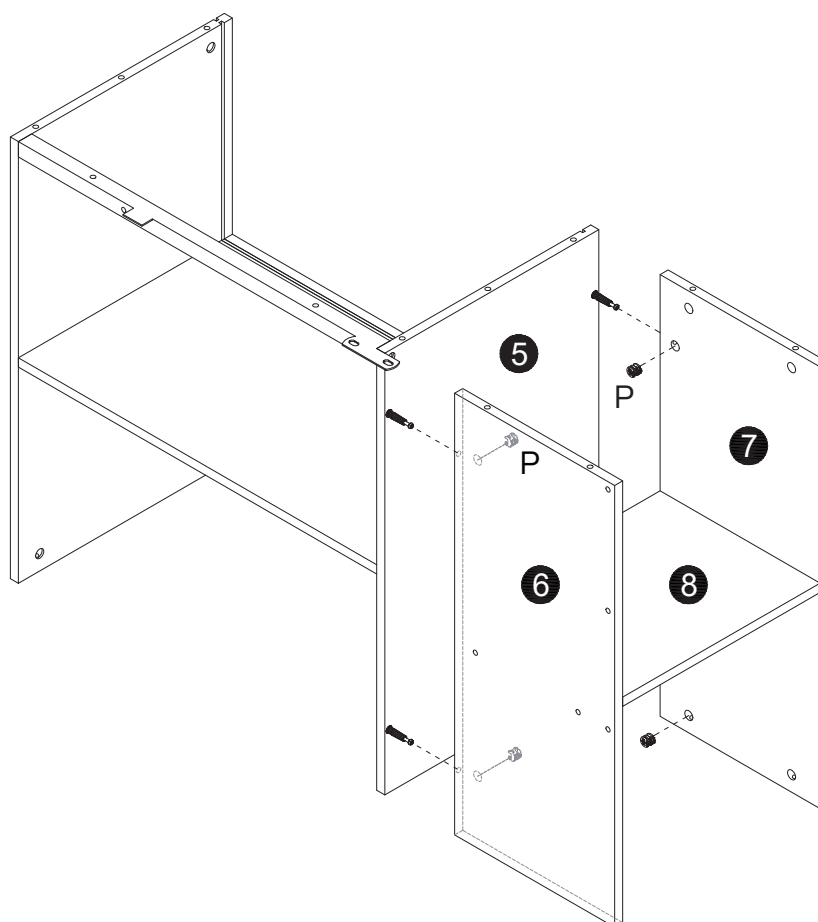
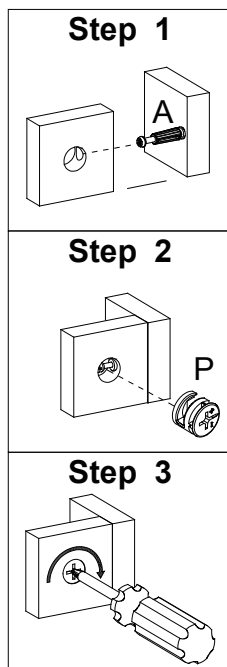


6




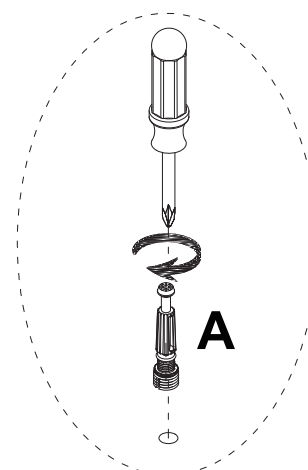
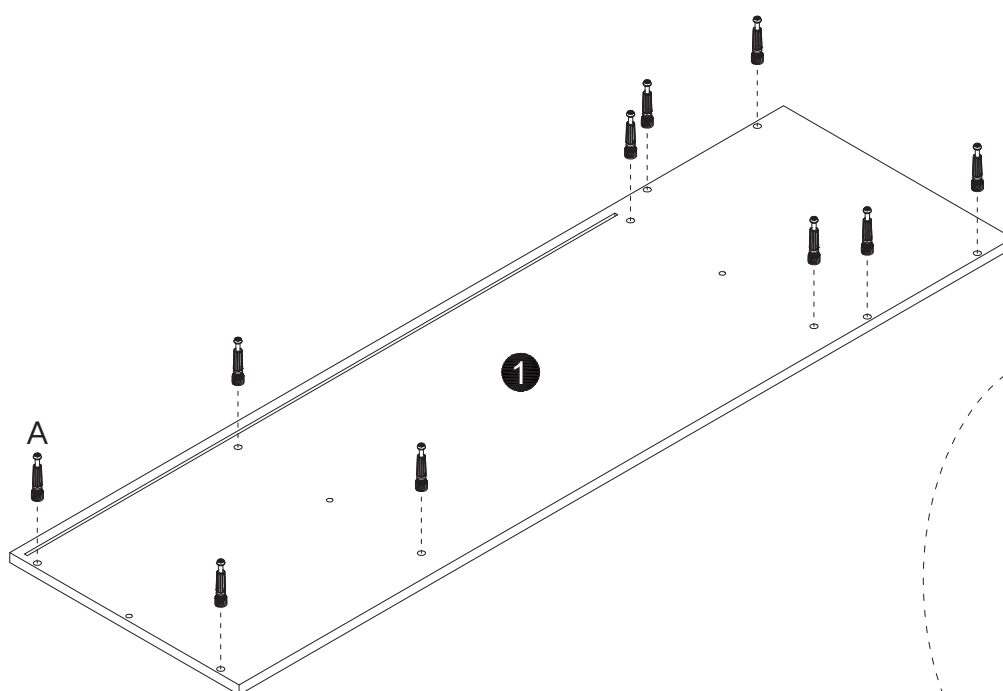
7

P

Ø15x12mm
4 pcs





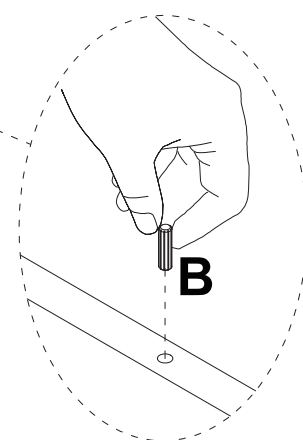
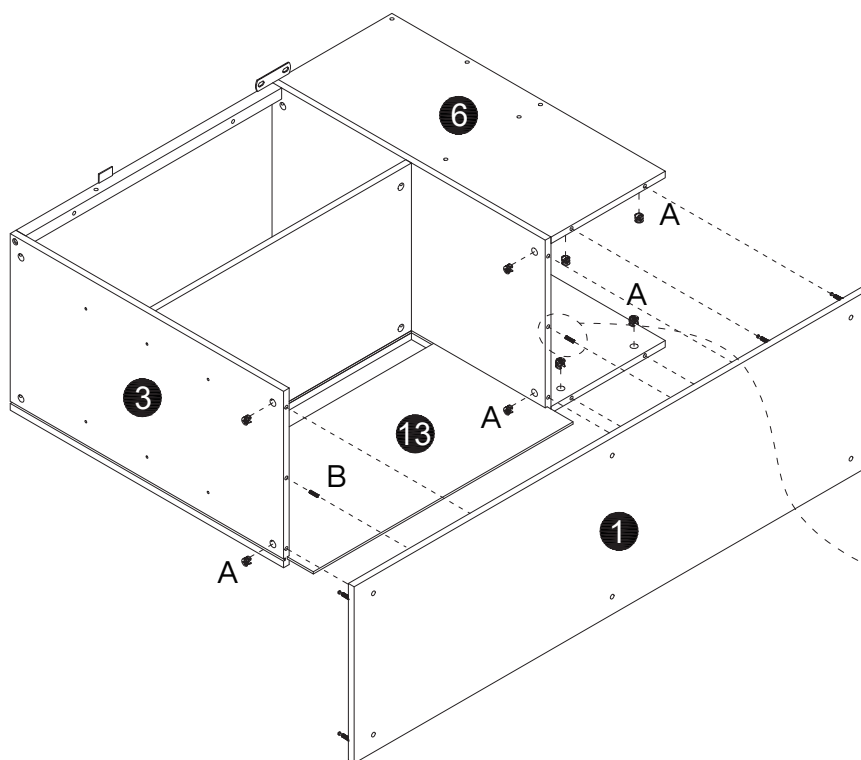
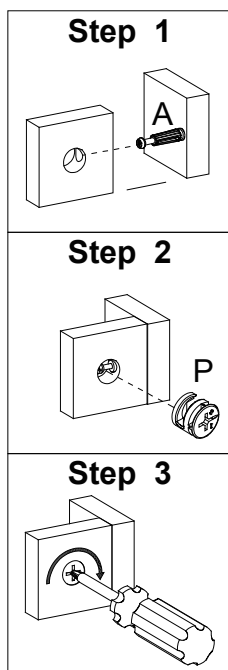
8

A

M6x35mm
10 pcs




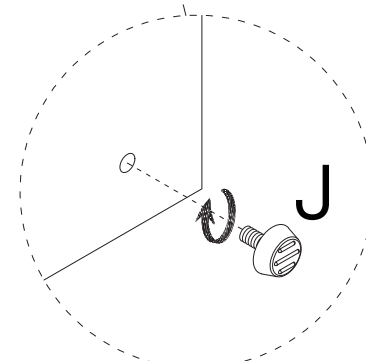
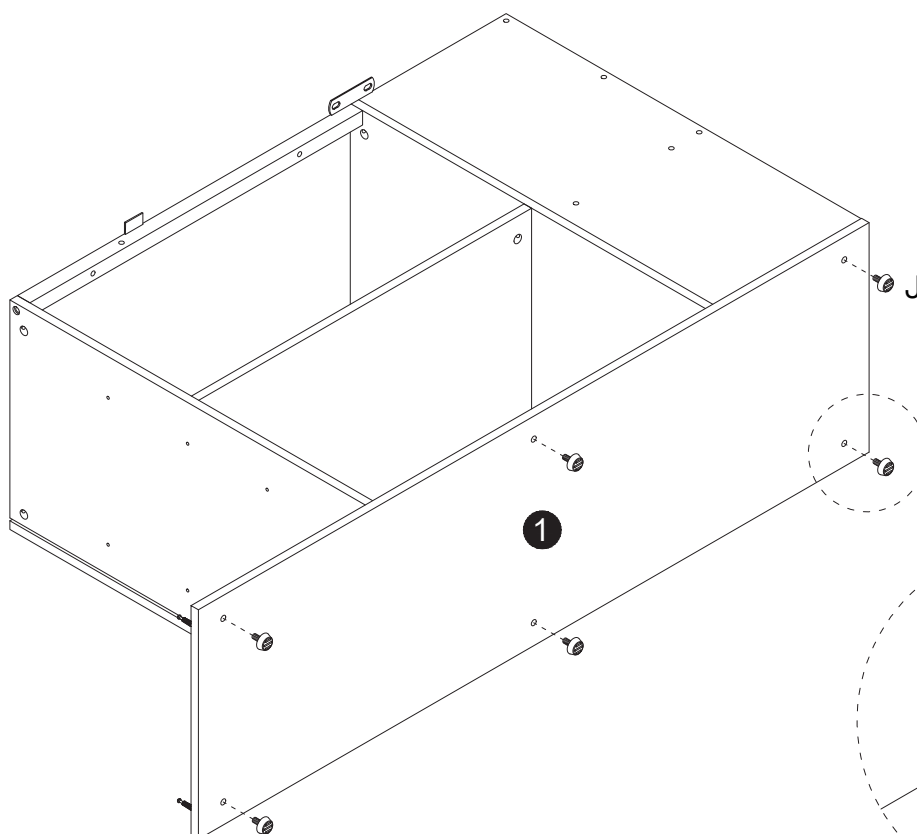
9

P	B
	
Ø15x12mm	Ø8x30mm
8 pcs	2 pcs

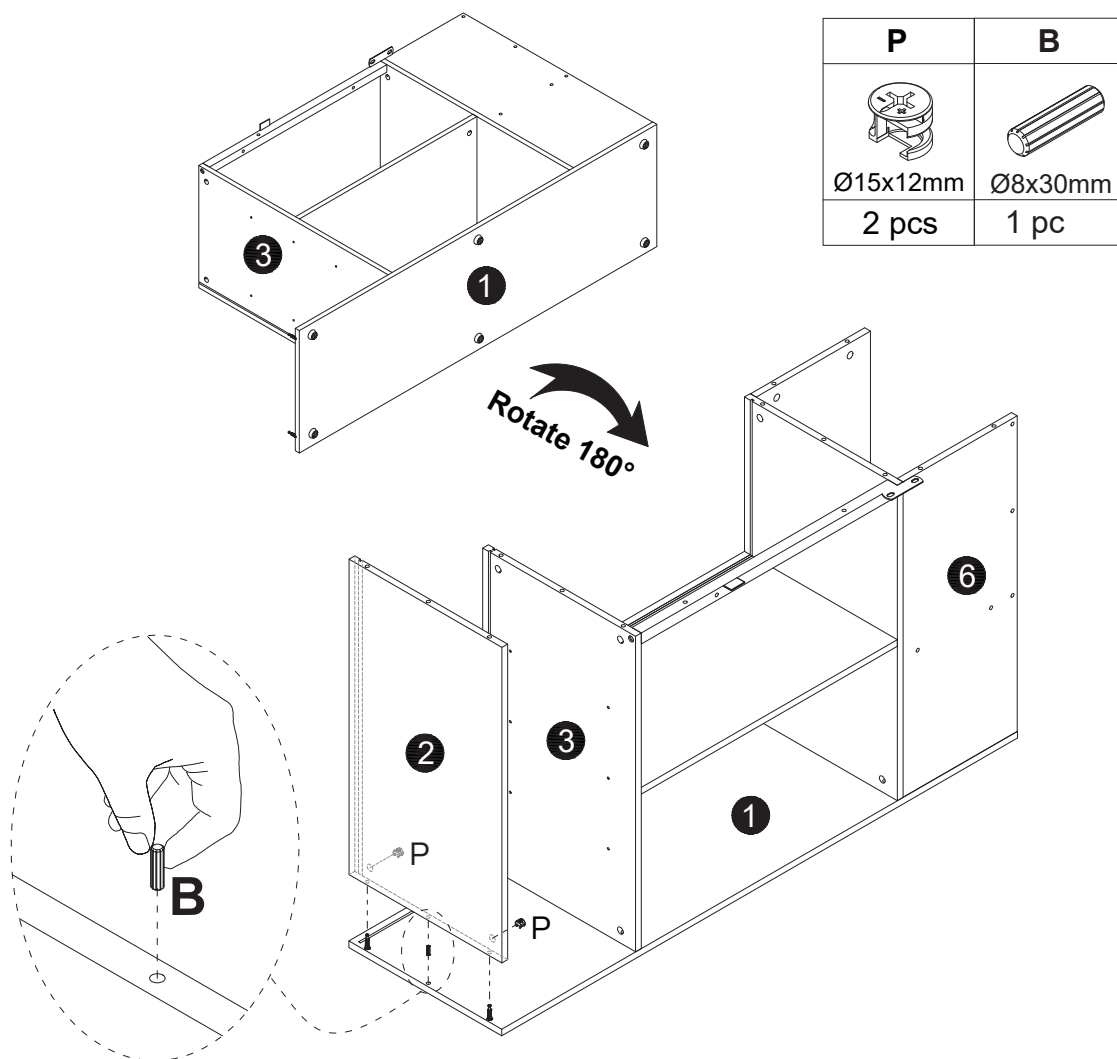
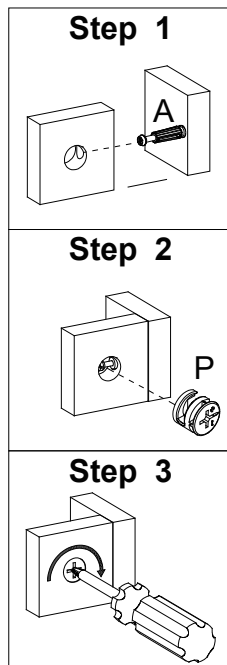


10

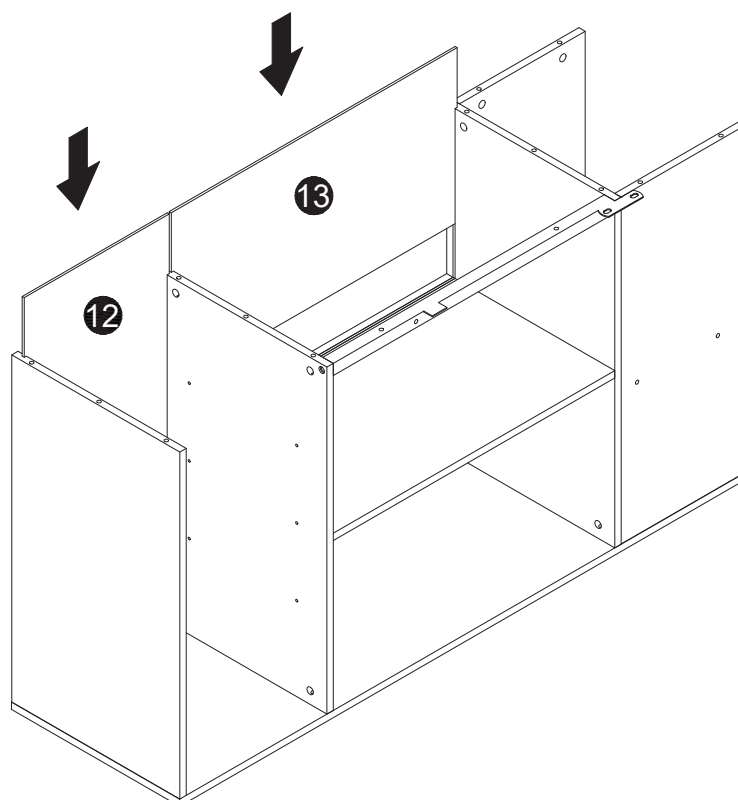
J

M6x6mm
6 pcs



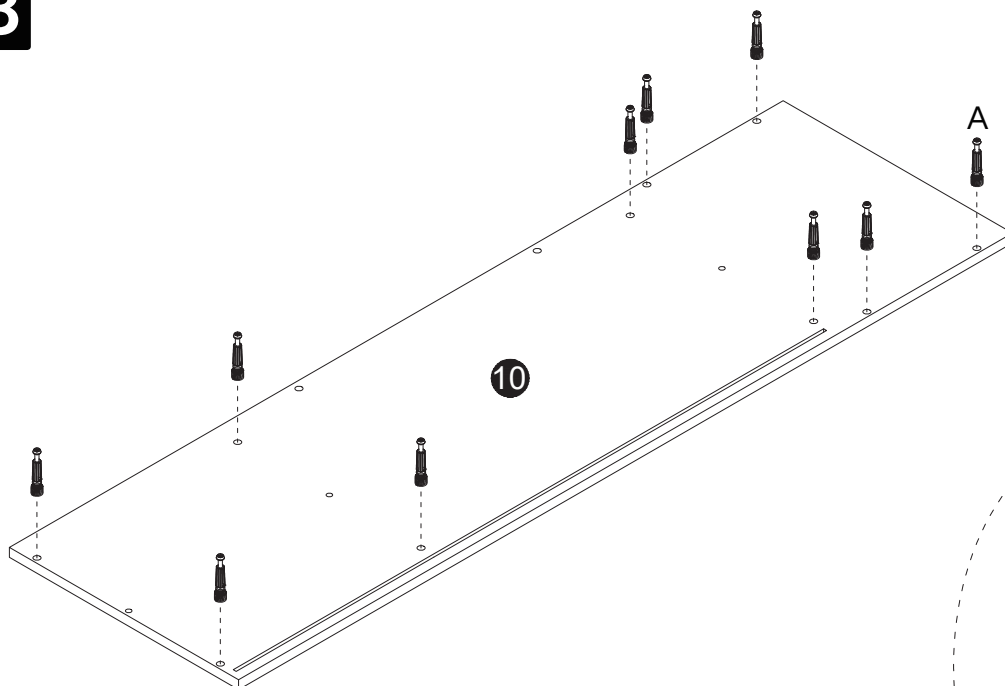
11




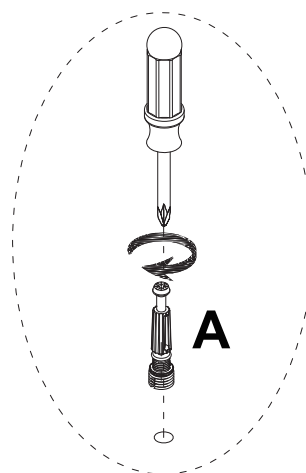
12



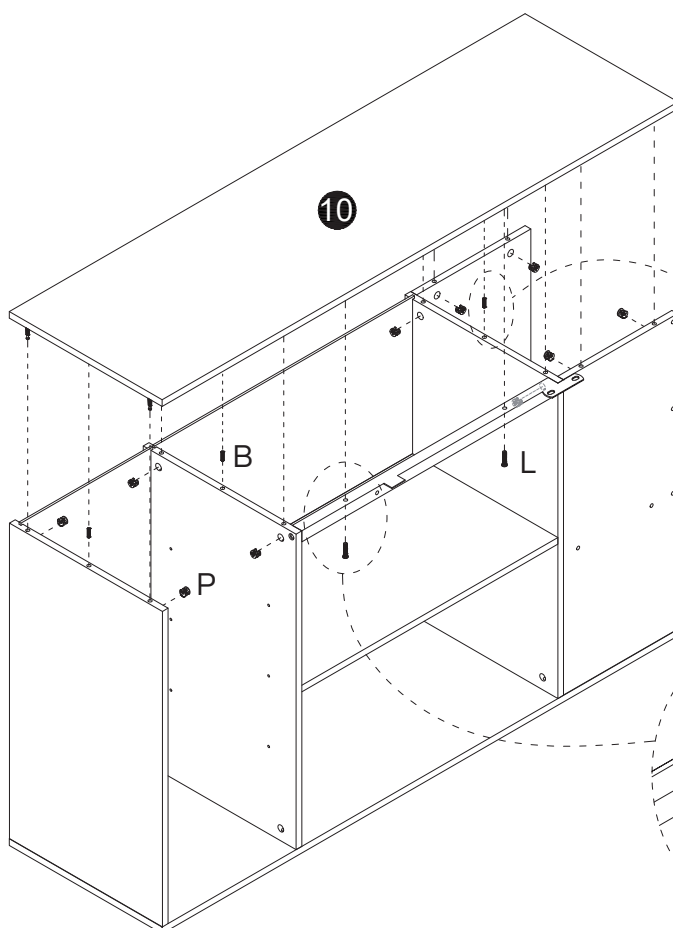
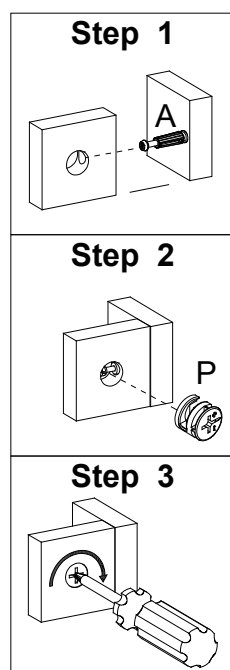
13






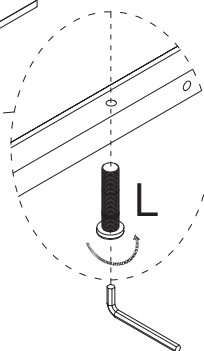
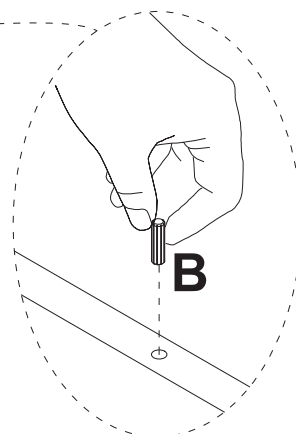
A

M6x35mm
10 pcs



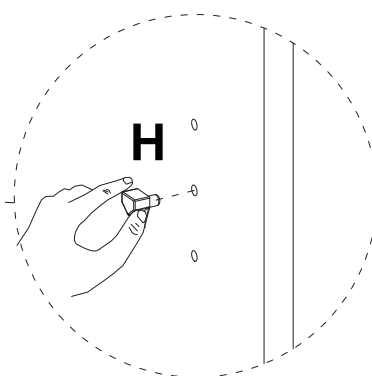
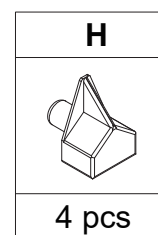
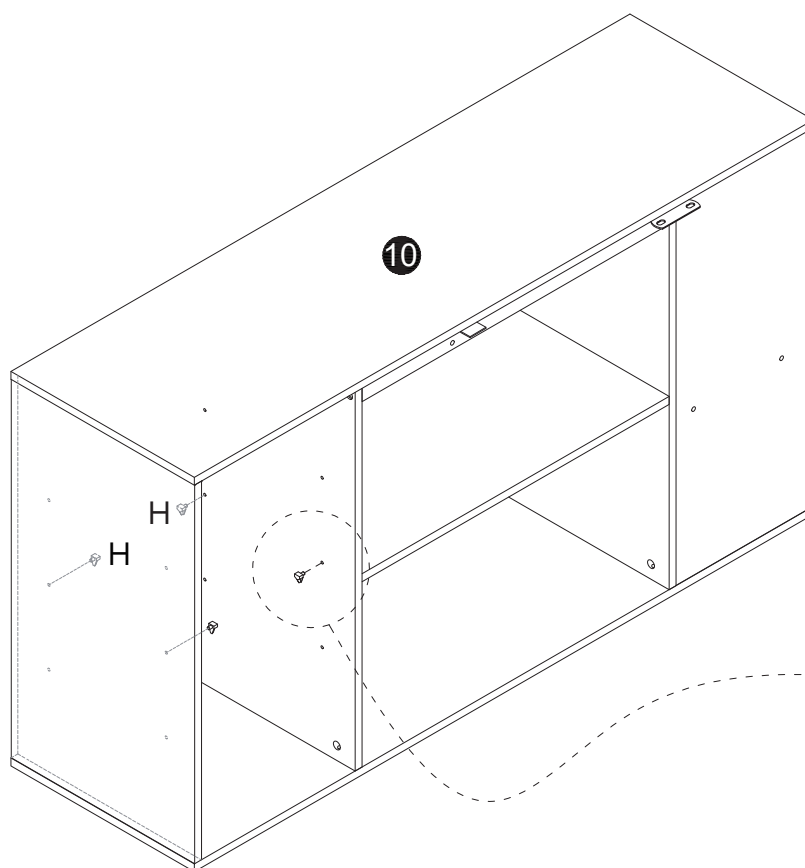
14



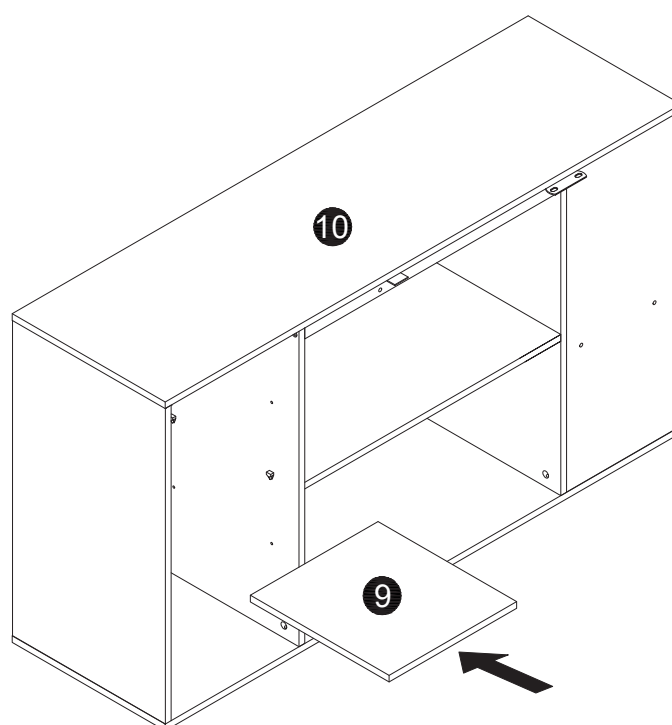
P	B	L
		
Ø15x12mm	Ø8x30mm	M6x35mm
10 pcs	3 pcs	2 pcs



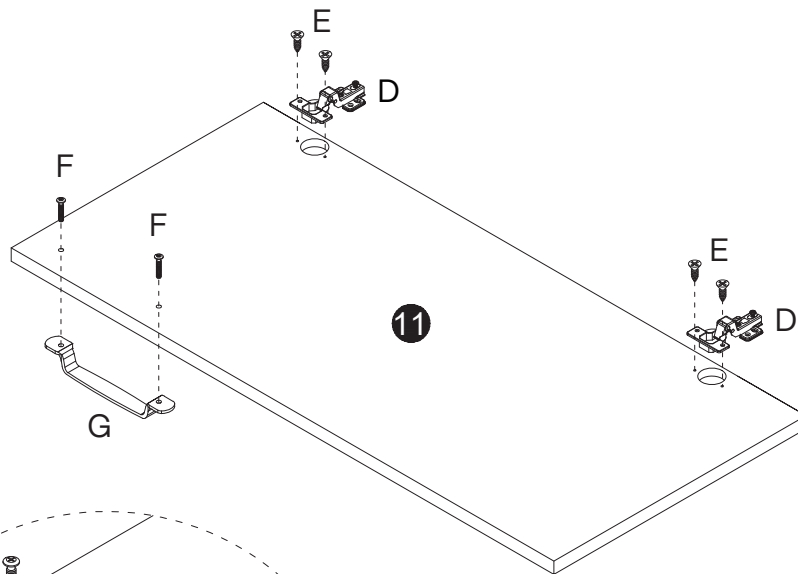
15







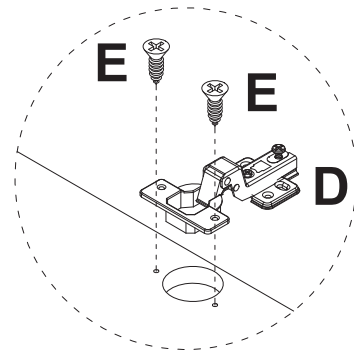
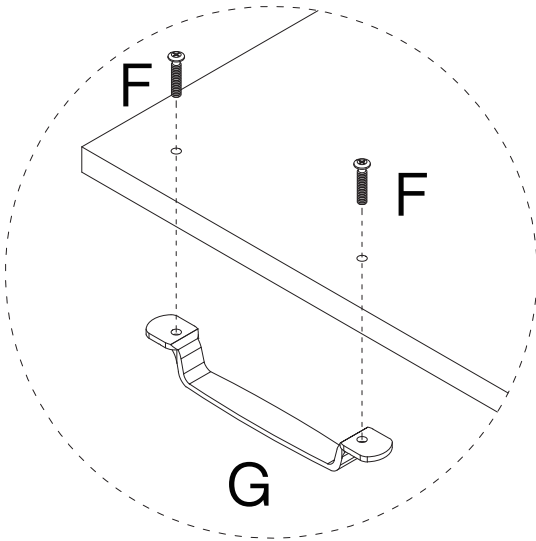
16



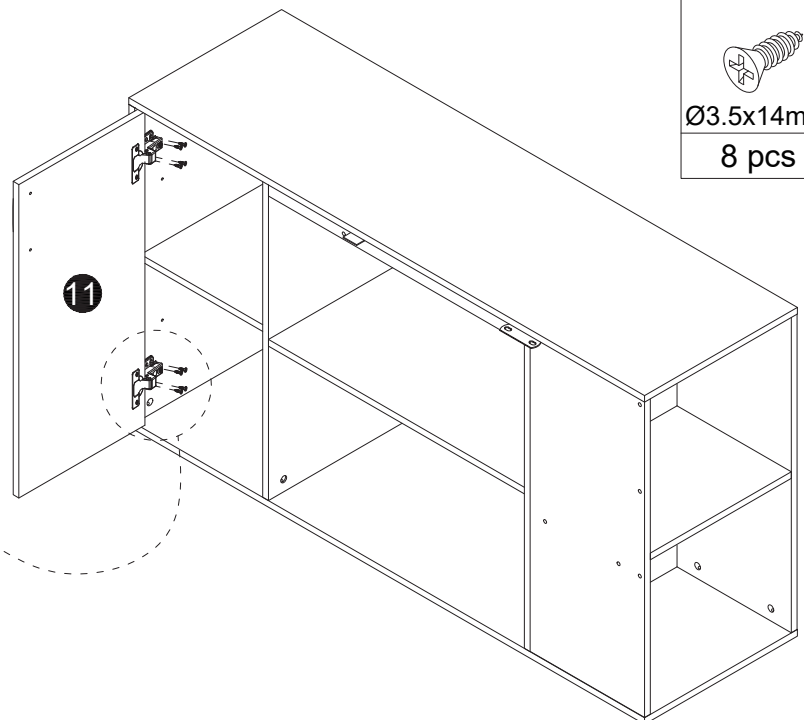
17




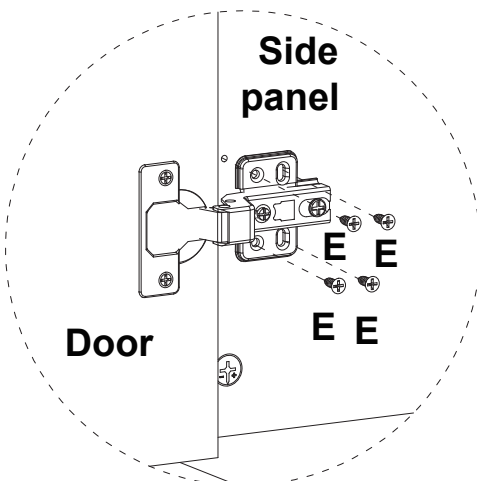
F	G
	
Ø4x20mm	128mm
2 pcs	1 pcs
D	E
	
2 pcs	Ø3.5x14mm
	4 pcs



18



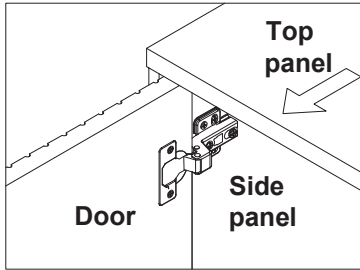
E

Ø3.5x14mm
8 pcs



To prevent the door hinge from falling off, please install 4 screws

Step 1

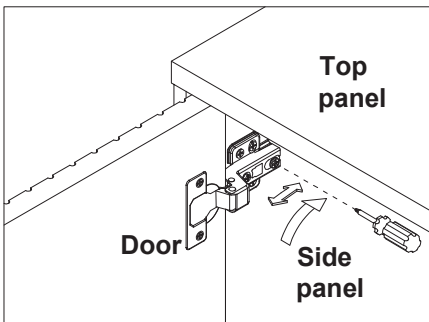
Open the door.



ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

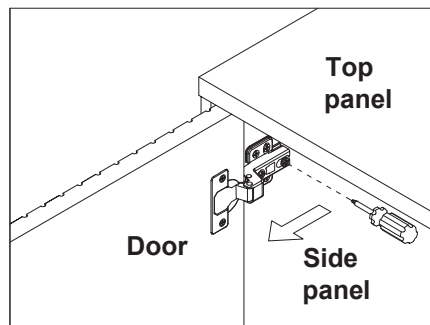
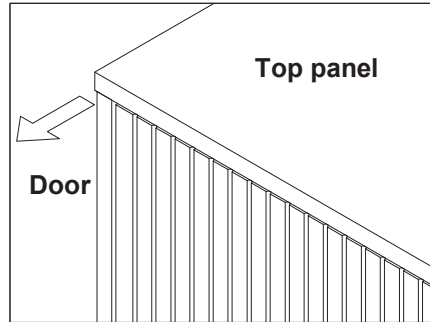
Step 2

Adjust the door panel to be flush with side panel and top panel edge.



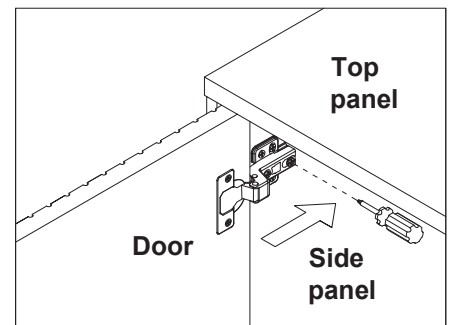
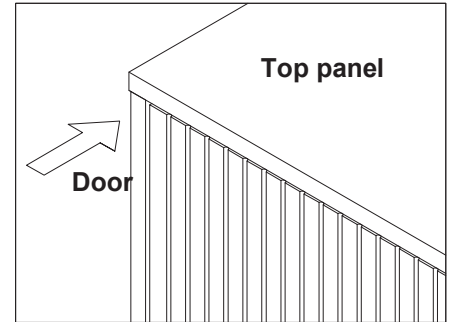
Loosen the screw indicated a little, adjust the hinge to the right position (see step 2a & 2b), then tighten the screw.

Step 2a MOVE DOOR OUT



Pull the hinge forward a little.

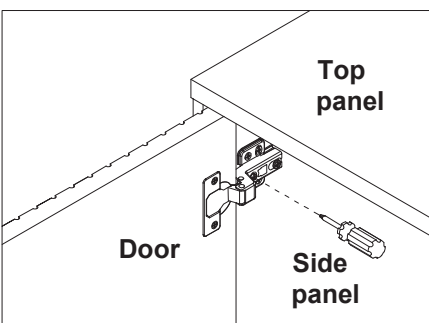
Step 2b MOVE DOOR IN



Push the hinge back a little.

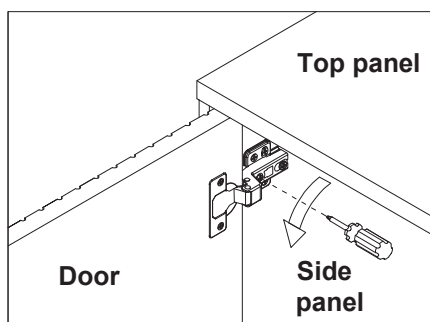
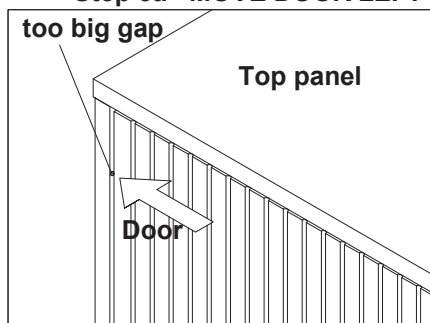
Step 3

Adjust the gap between the door panel and the side panel.



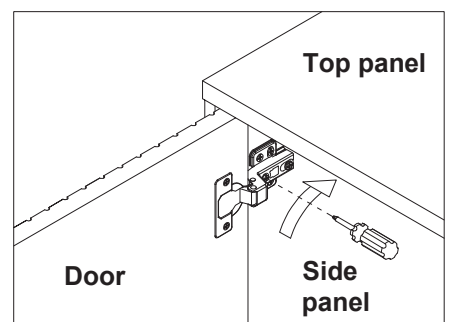
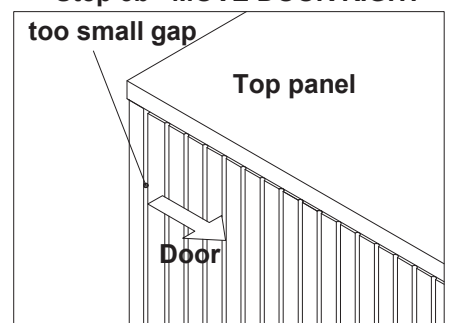
Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to the right position (see step 3a & 3b).

Step 3a MOVE DOOR LEFT



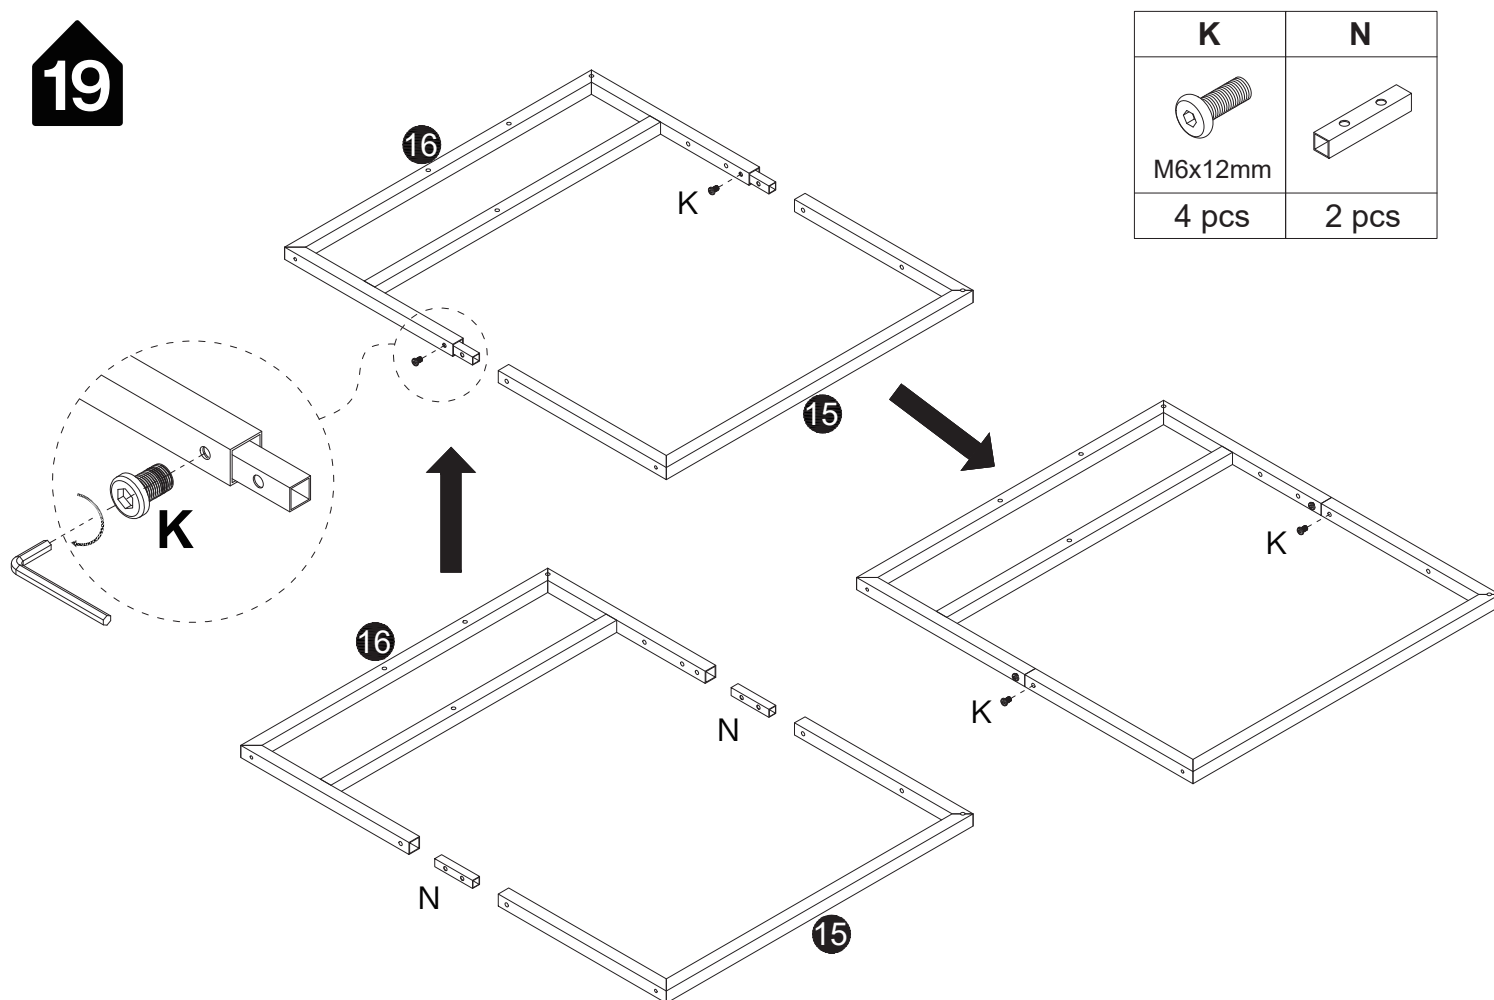
Turn the screw clockwise a little as shown to make the gap smaller

Step 3b MOVE DOOR RIGHT

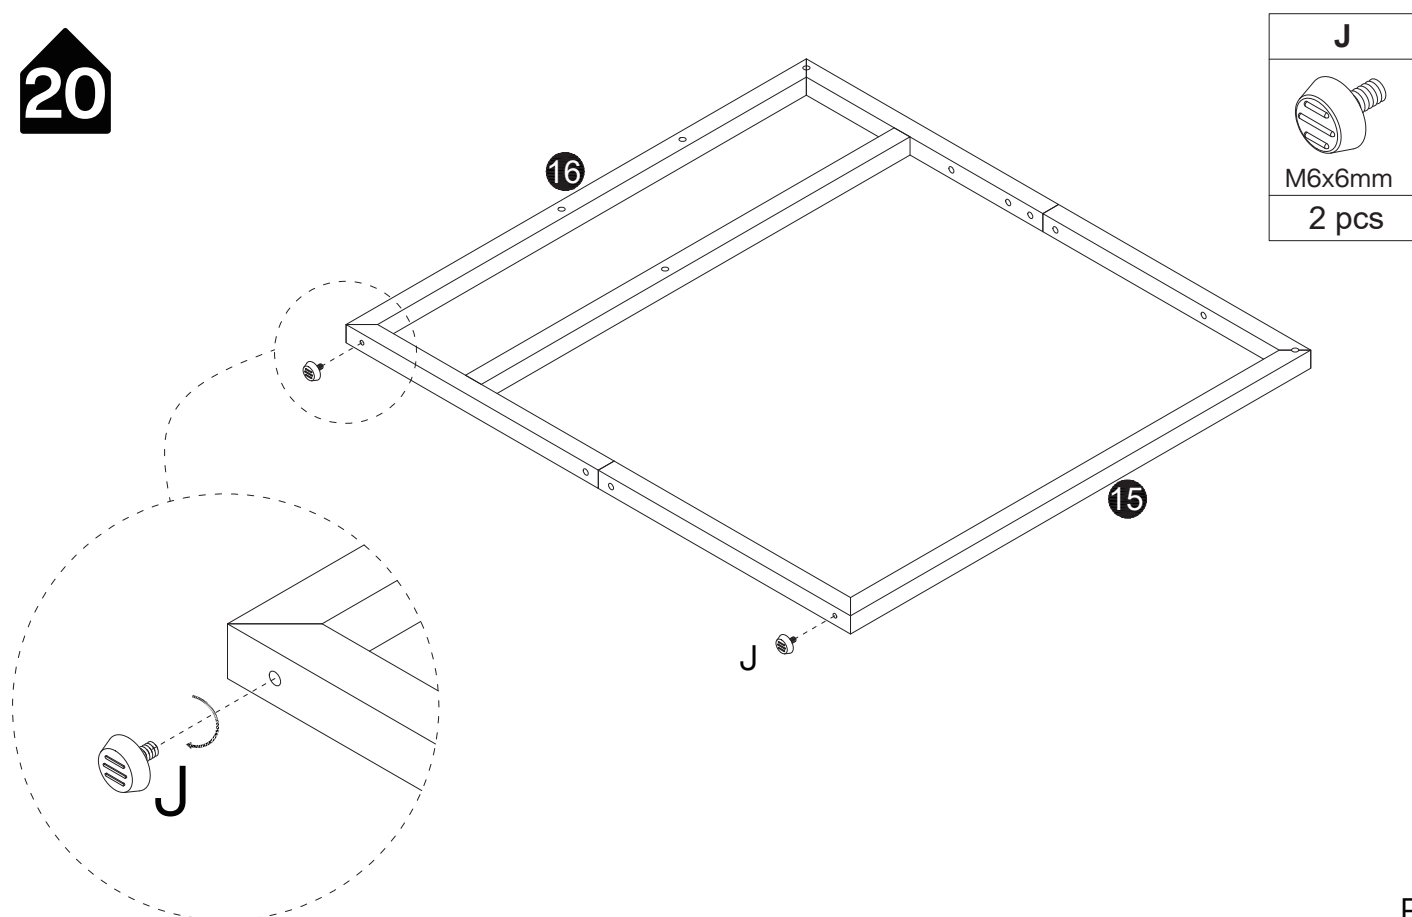


Turn the screw counterclockwise a little as shown to make the gap bigger

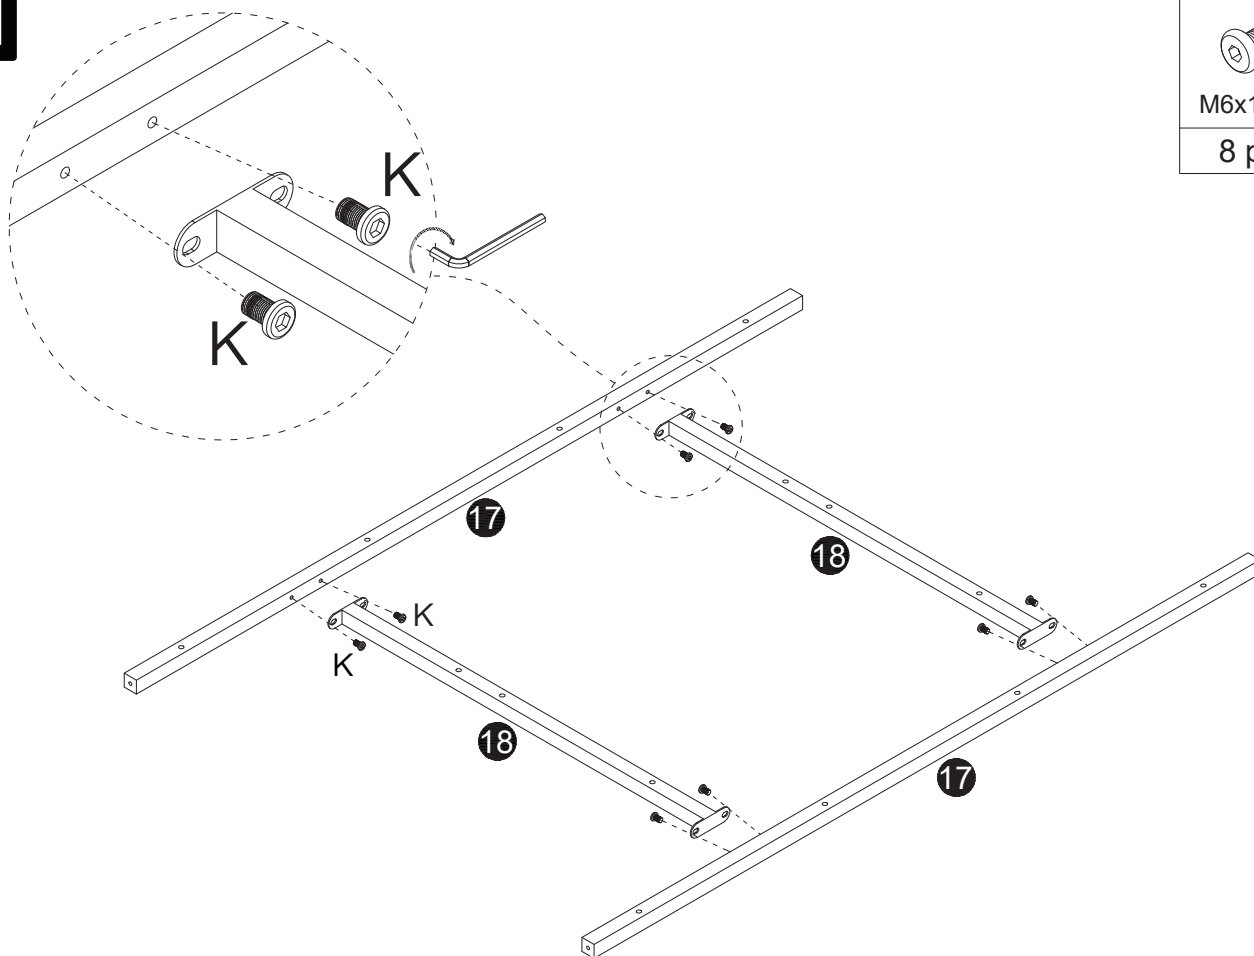
19




20

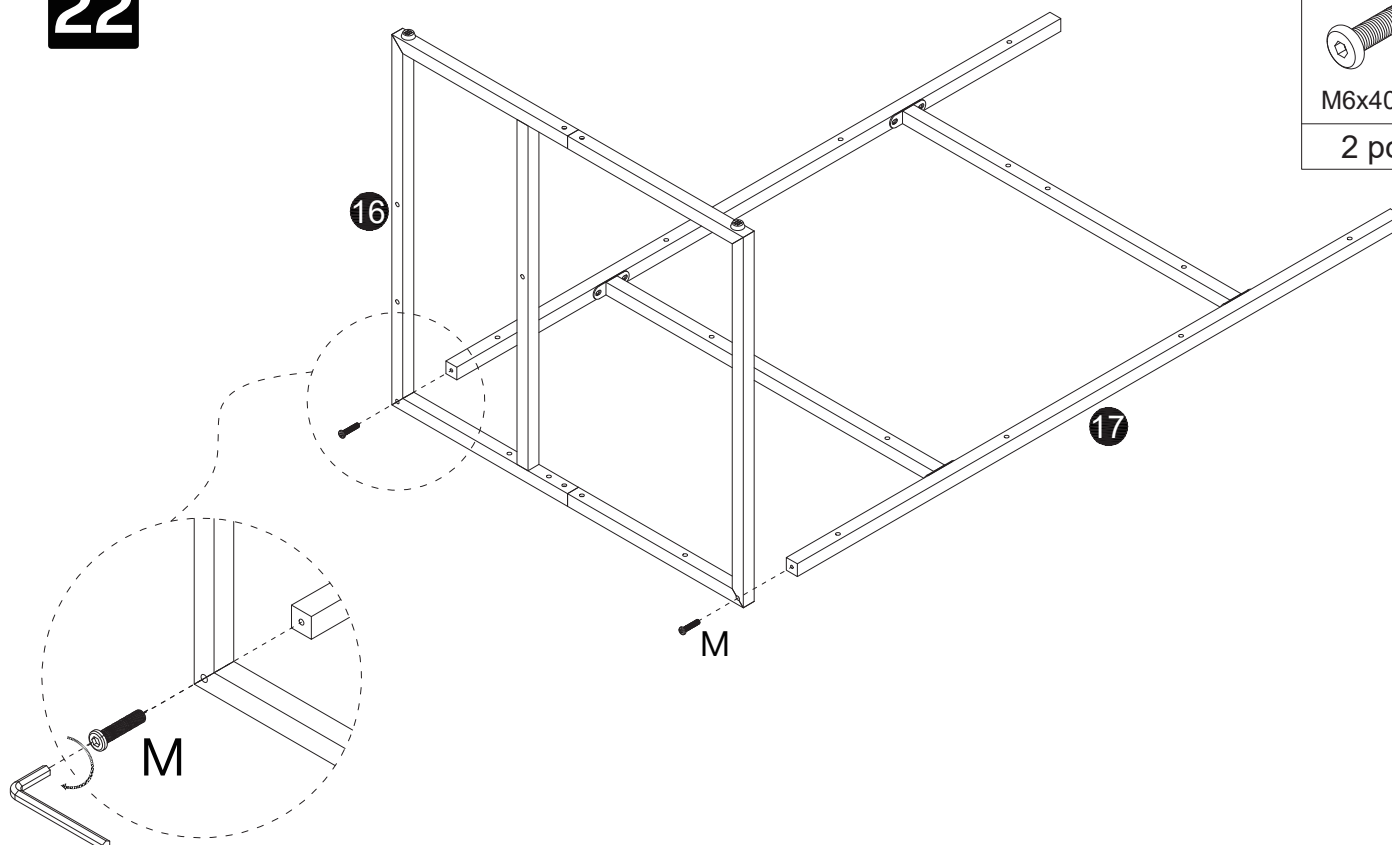



21



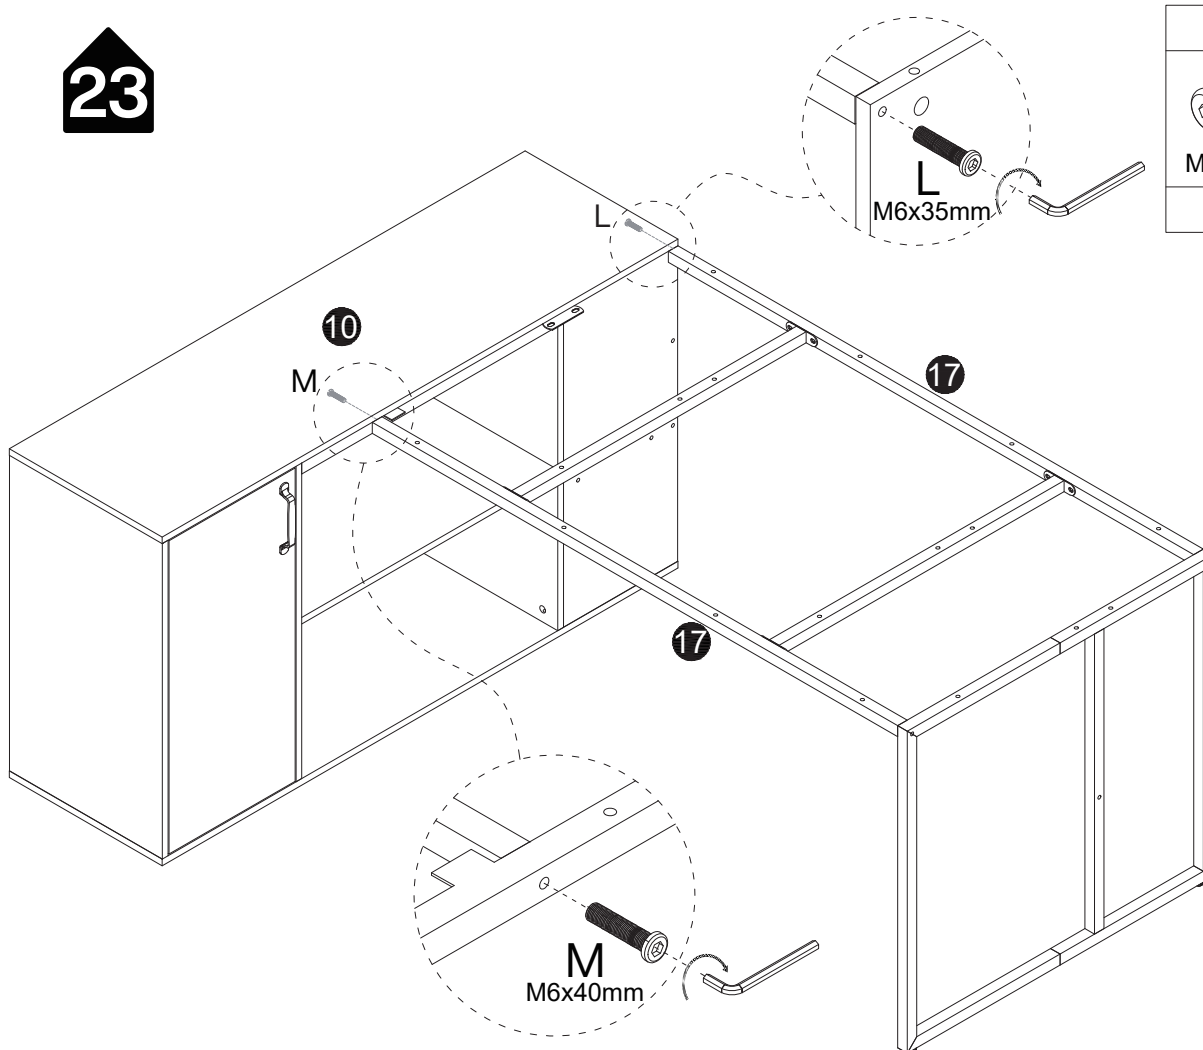
K

M6x12mm
8 pcs



22



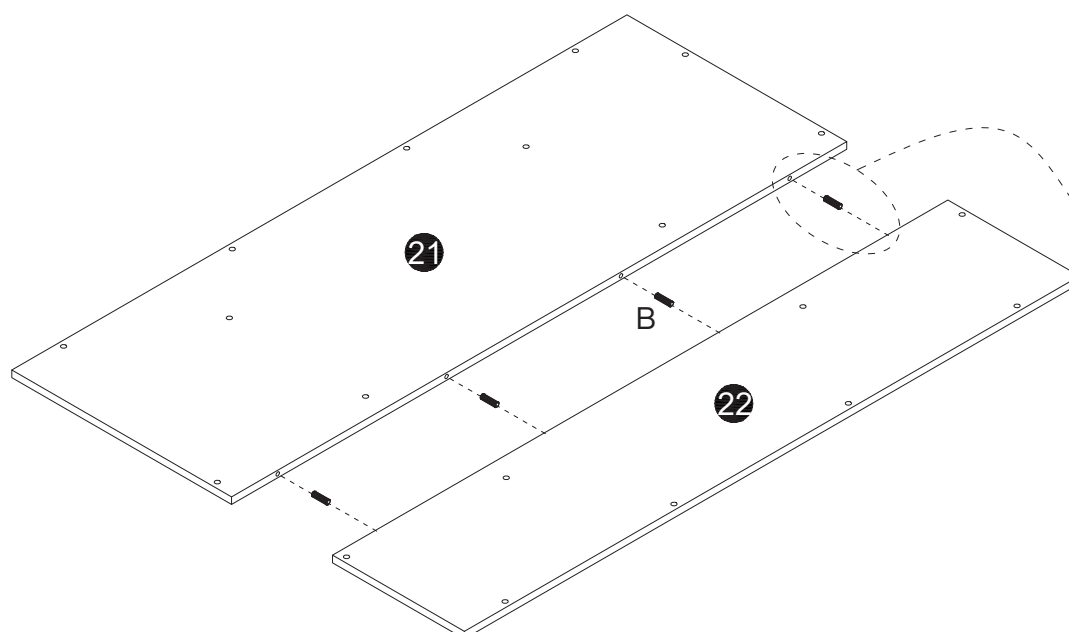
M

M6x40mm
2 pcs


23

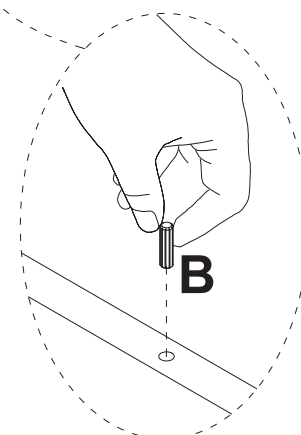


L	M
	
M6x35mm	M6x40mm
1 pc	1 pc

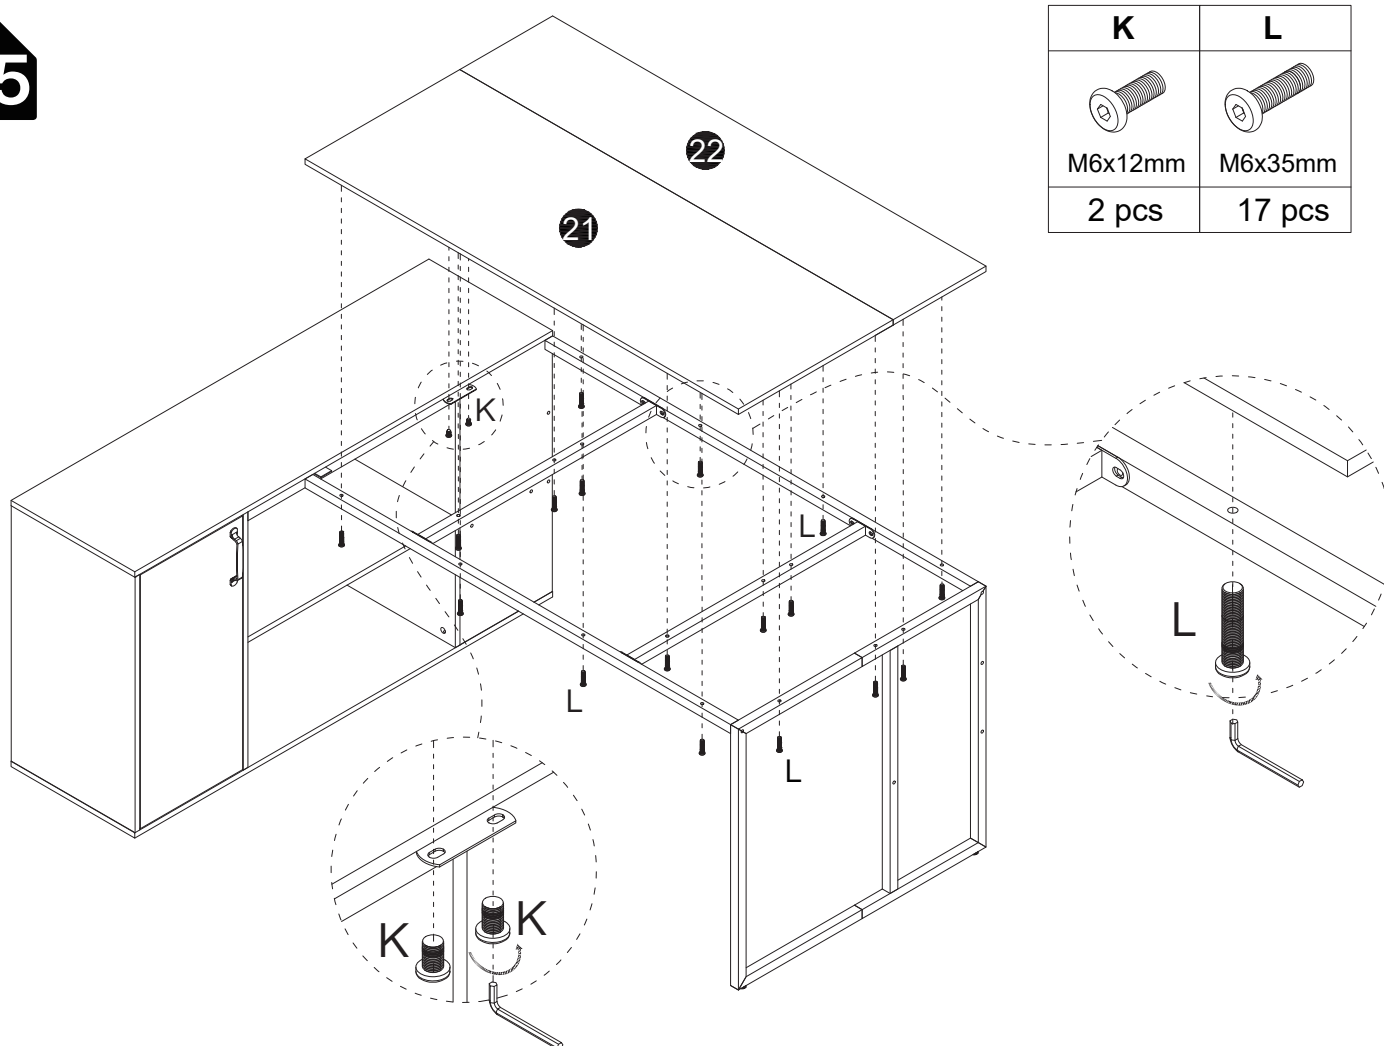
24



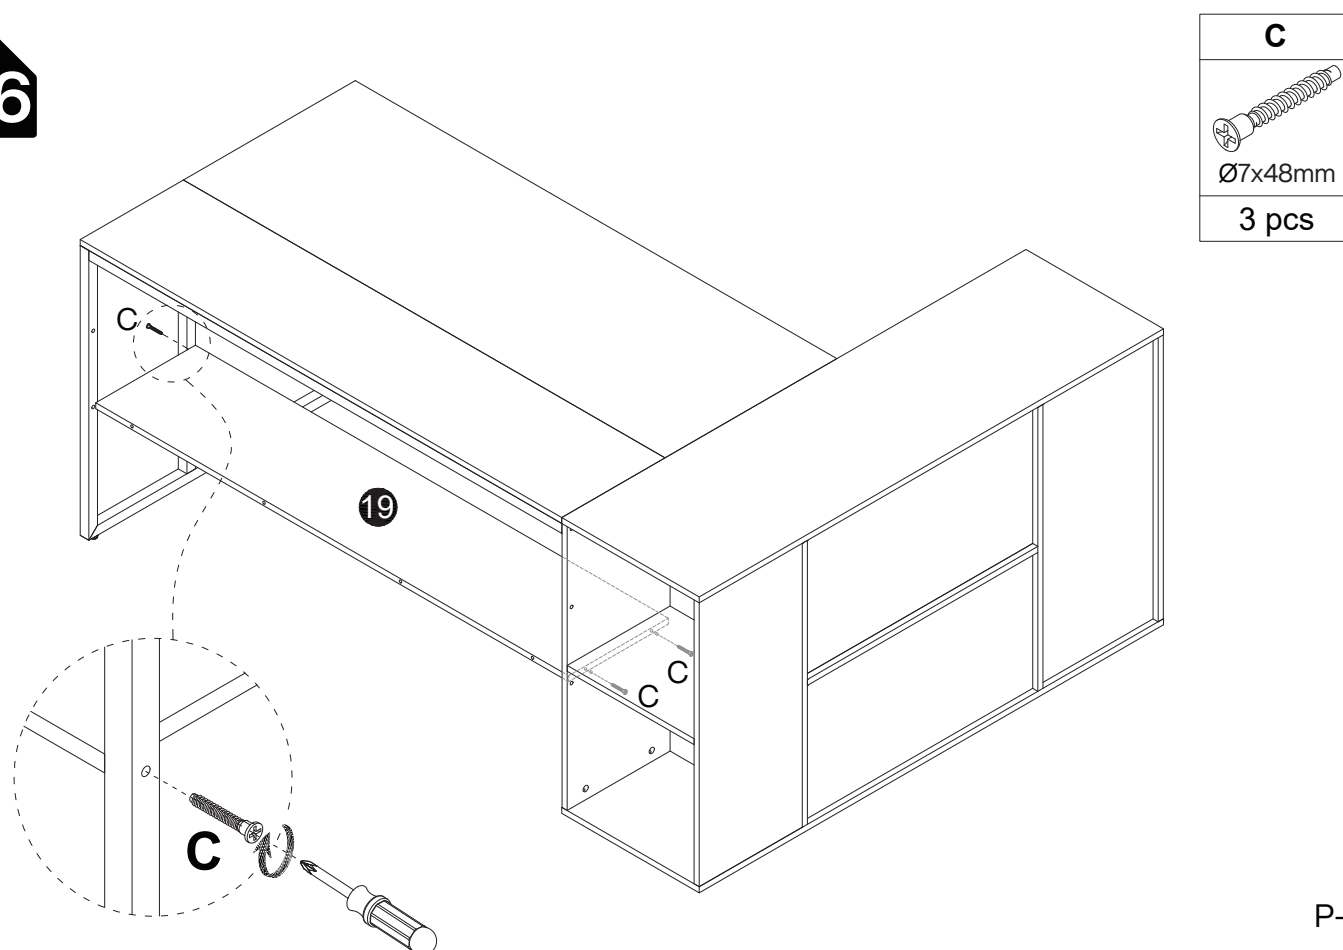
B

Ø8x30mm
4 pcs




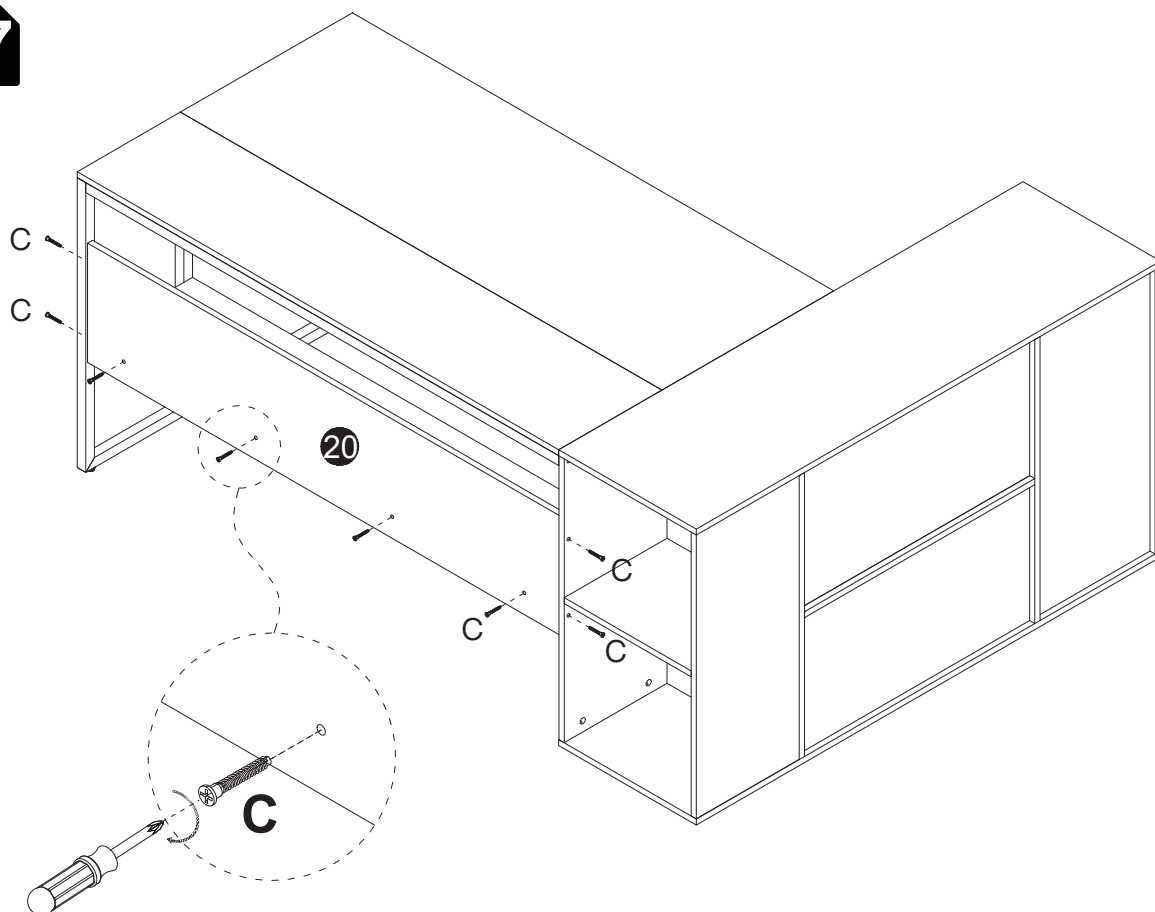
25



26



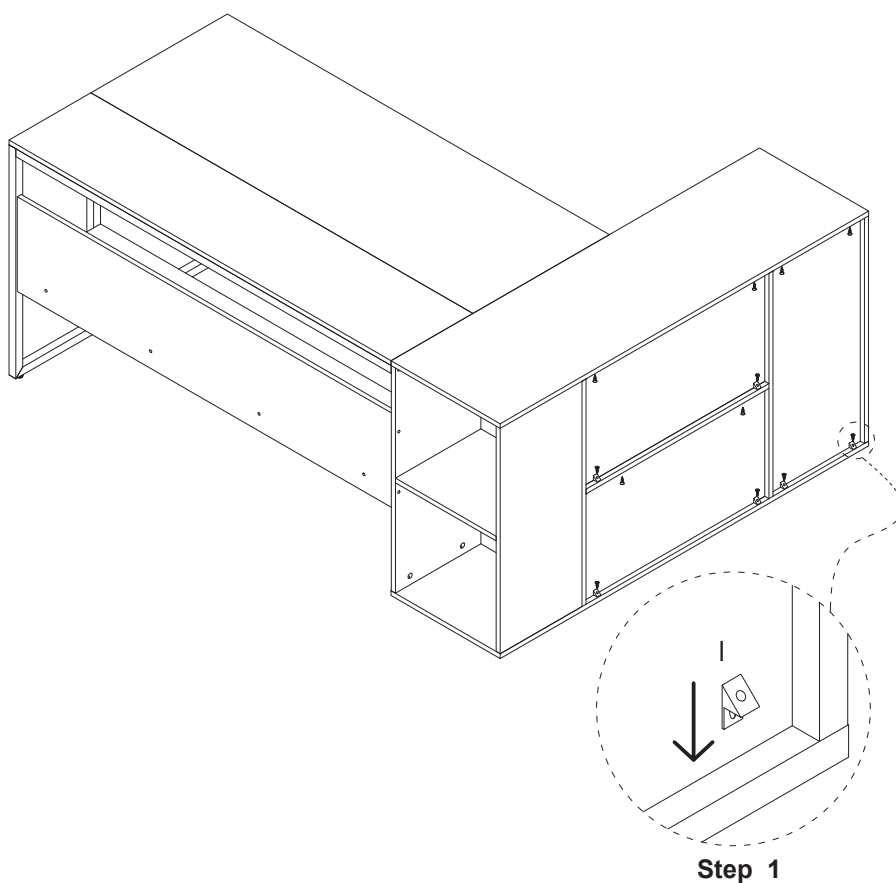
27




Ø7x48mm

8 pcs

28



1



12 pcs

E



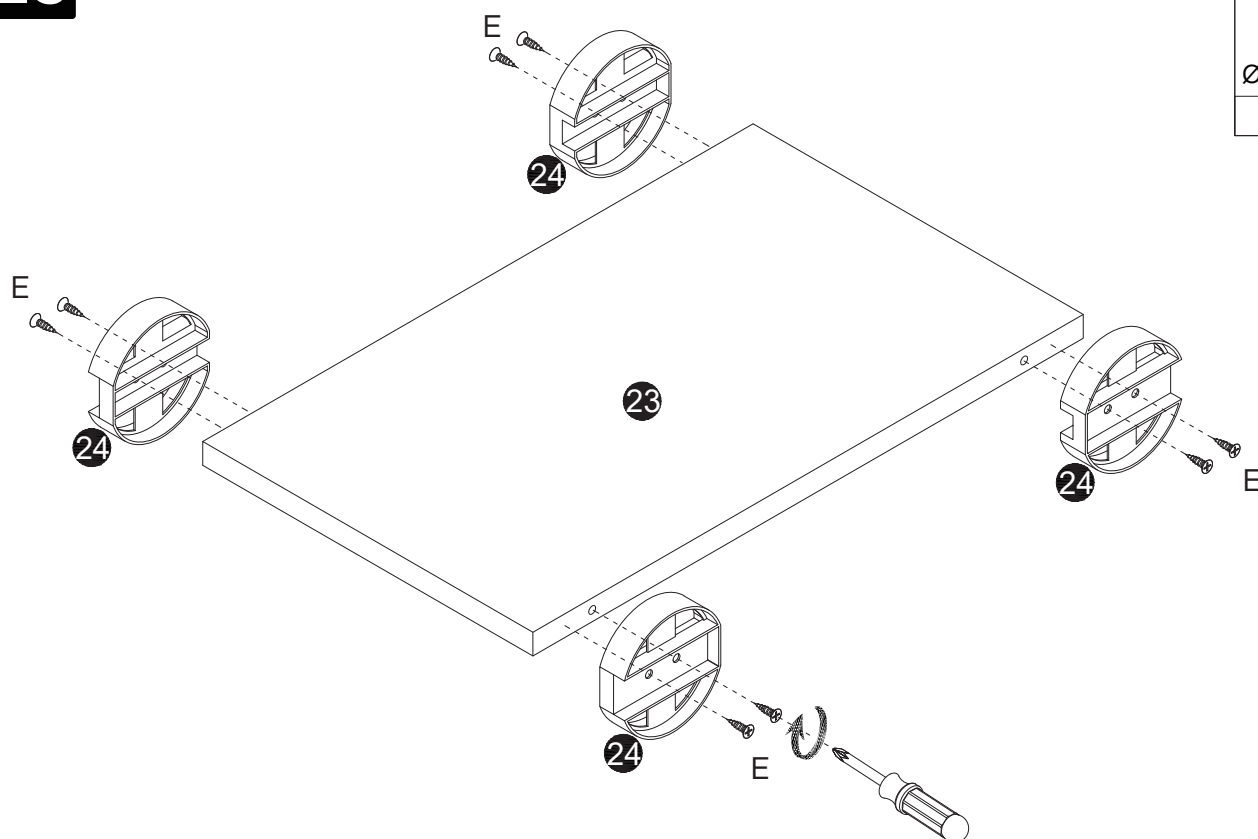
Ø3.5x14mm


12 pcs

Step 1

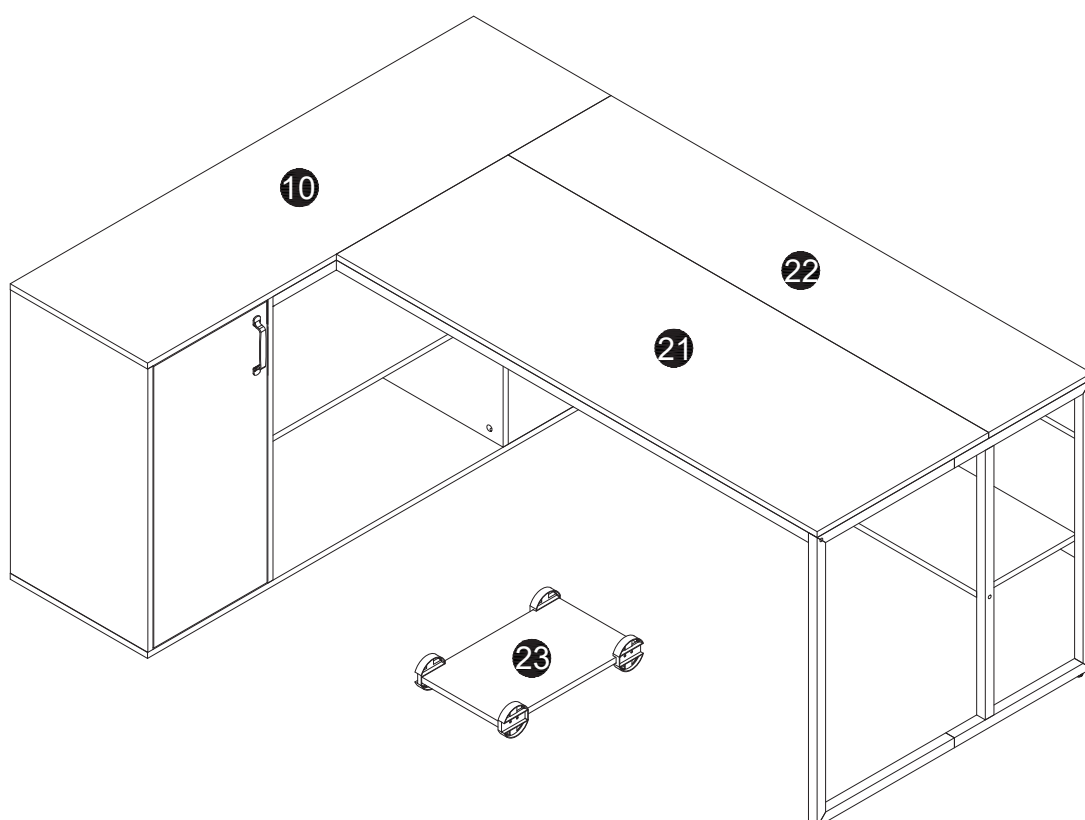
Step 2

29



E

Ø3.5x14mm
8 pcs

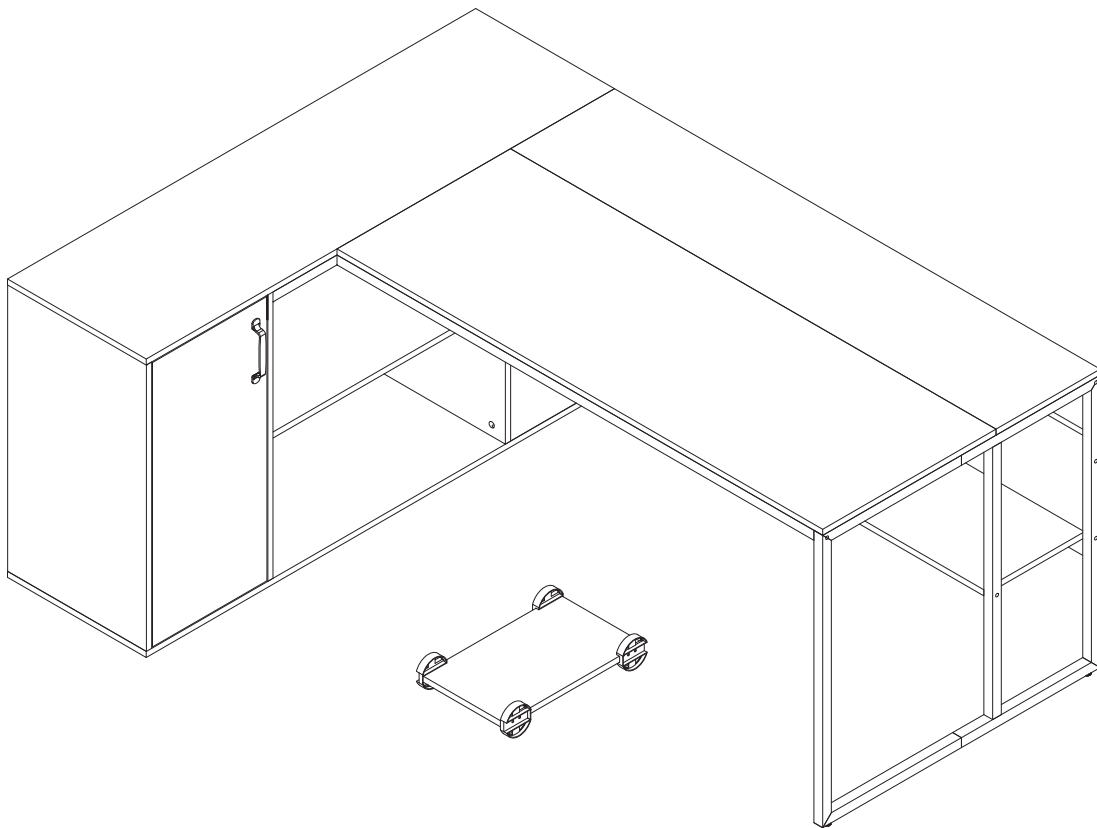
30





DESIGNED FOR LIFE

Thank you for your support!



Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

Contact us anytime except
12:00 AM to 8:00 AM EST.

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp