

# ASSEMBLY INSTRUCTION

## ITEM # : BED SIDE TABLE


Thank you for purchasing this quality Product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. Identify and count all parts and compare with the parts list below.

### **ASSEMBLY INSTRUCTION :**


1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered assure fast and easy assembly.

### **WARNING !**











1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time 1/2 hours.
5. Component parts and fittings contained in the box. Please sort out all parts before you begin to assemble the item. This is to make sure you always use the correct part.
6. It is STRONGLY RECOMMENDED that you ANCHOR this product. Tipping furniture can cause serious injuries and death. To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided appropriate fixings.

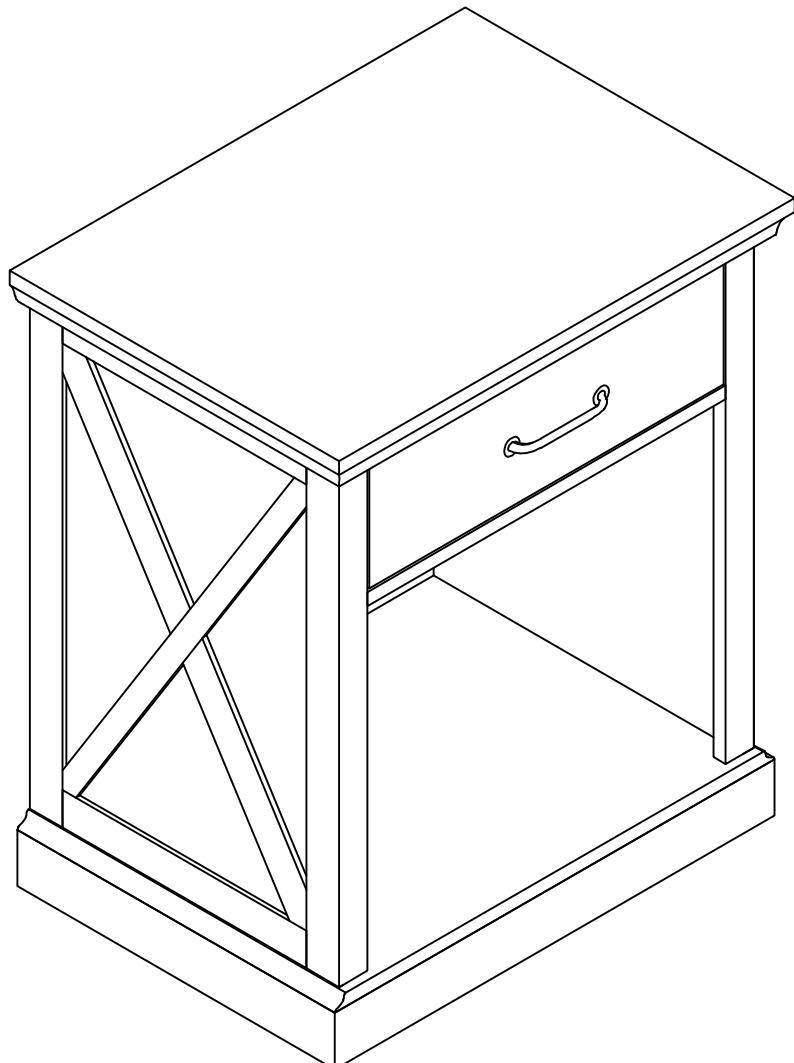


## Detail View - BED SIDE TABLE


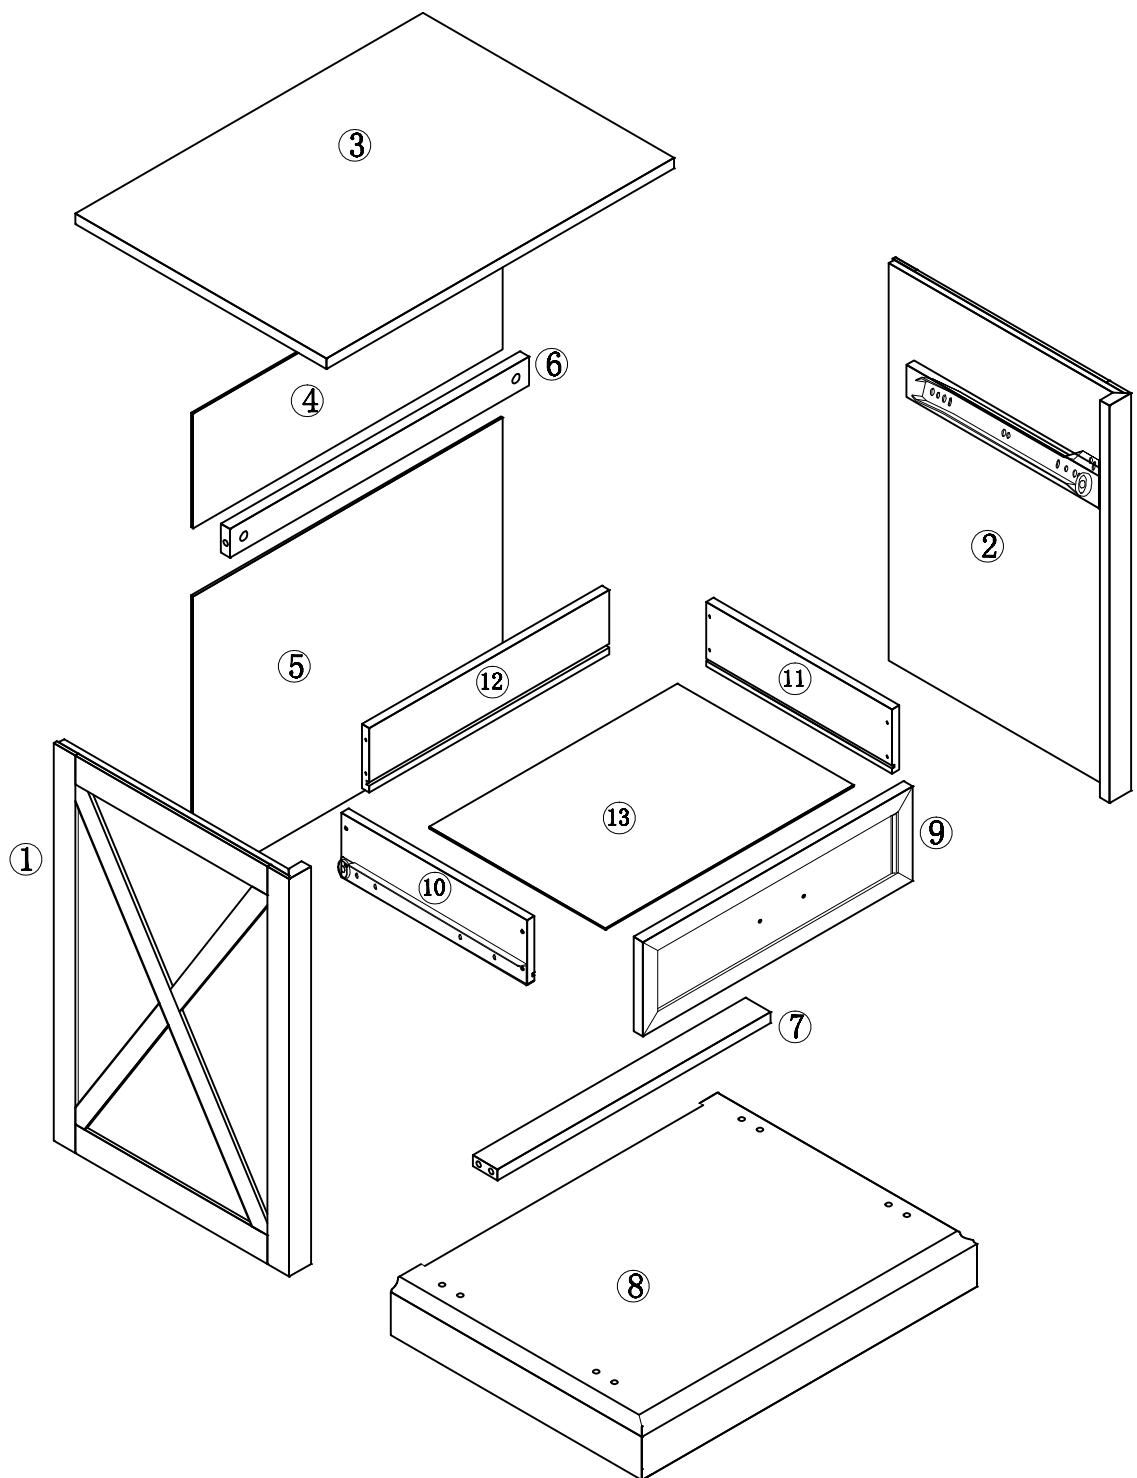


# Part List



No.	Component	Q'ty
①		Left side box
②		Right side box
③		panel
④		Backplane
⑤		Backplane
⑥		Rear cross plate
⑦		Front cross plate
⑧		Cabinet base
⑨		Drawer panel
⑩		Left side board of drawer
⑪		Drawer right side panel
⑫		Drawer back plate
⑬		Drawer bottom plate

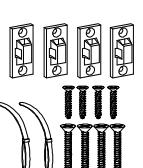No.	Component	Q'ty
A		ø6x35mm Three in one bolts
B		ø14.5x12mm Three in one lock
C		ø7xø3.5x15mm screw
D		ø8x30mm Wood dowel
E		ø5/32"x20mm screw
F		handle
H		ø7xø3.5x12mm screw
L		Anti fall hardware



## STEP:1

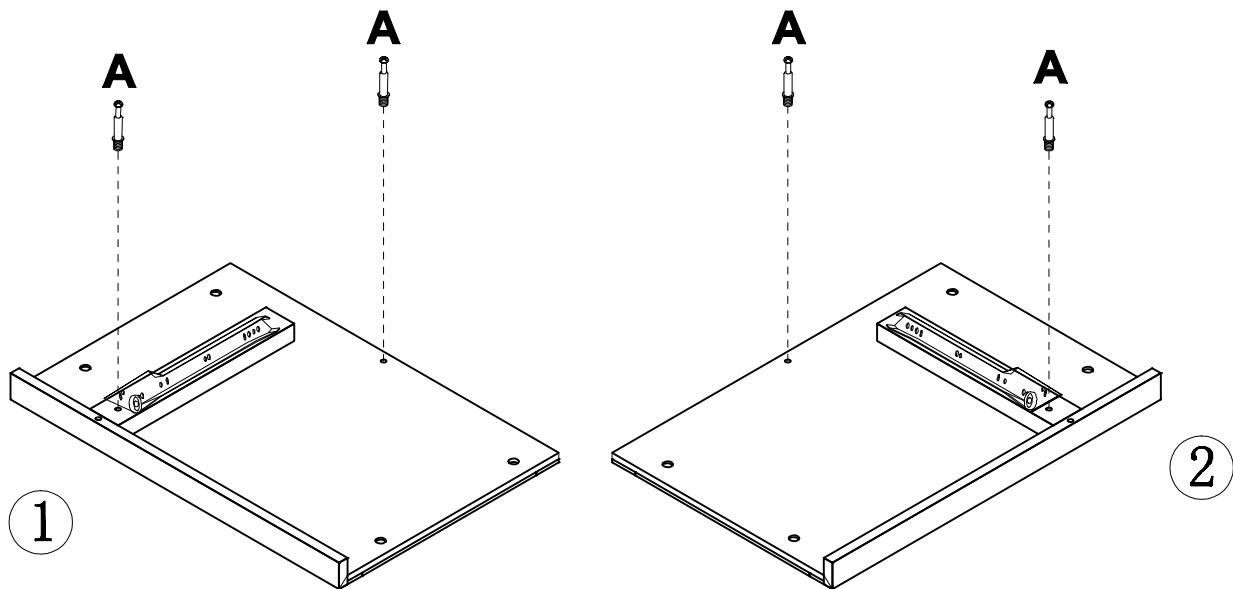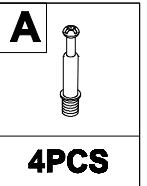



## STEP:2

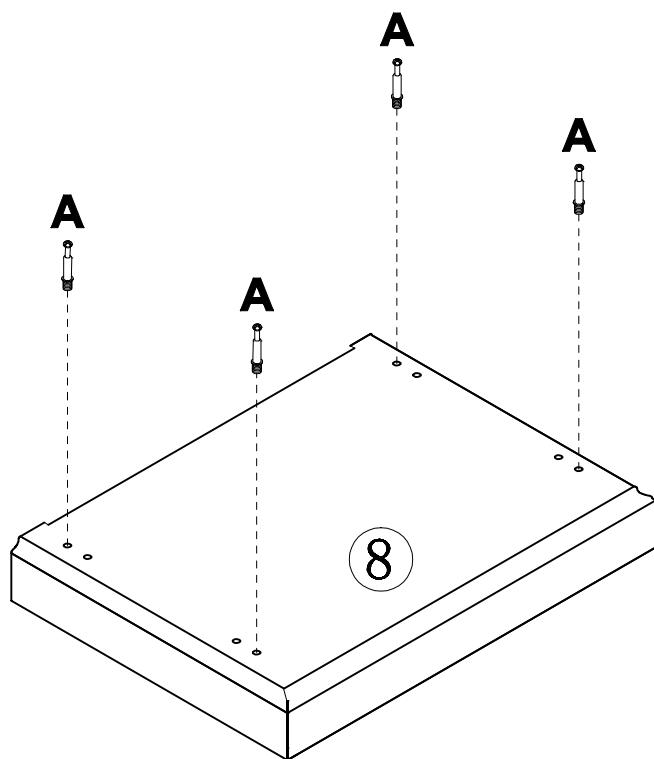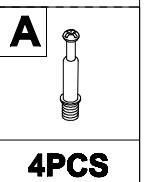


## STEP:3

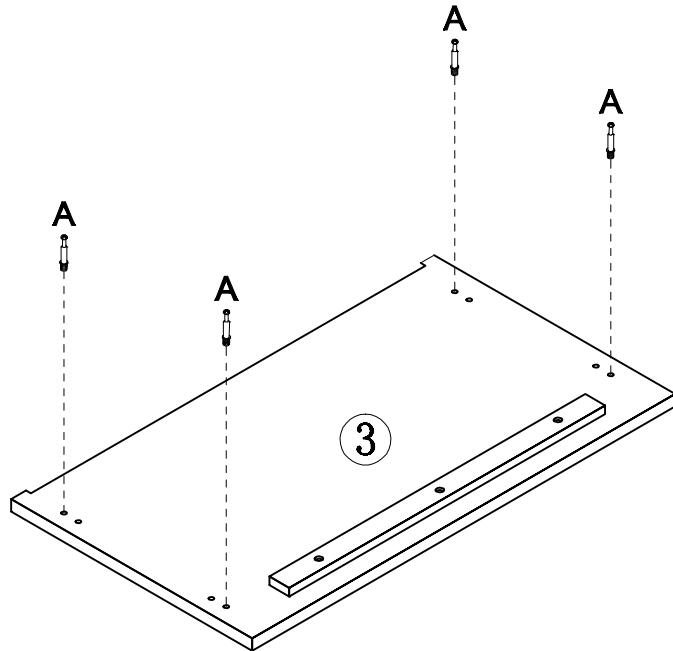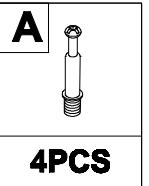

## STEP:4

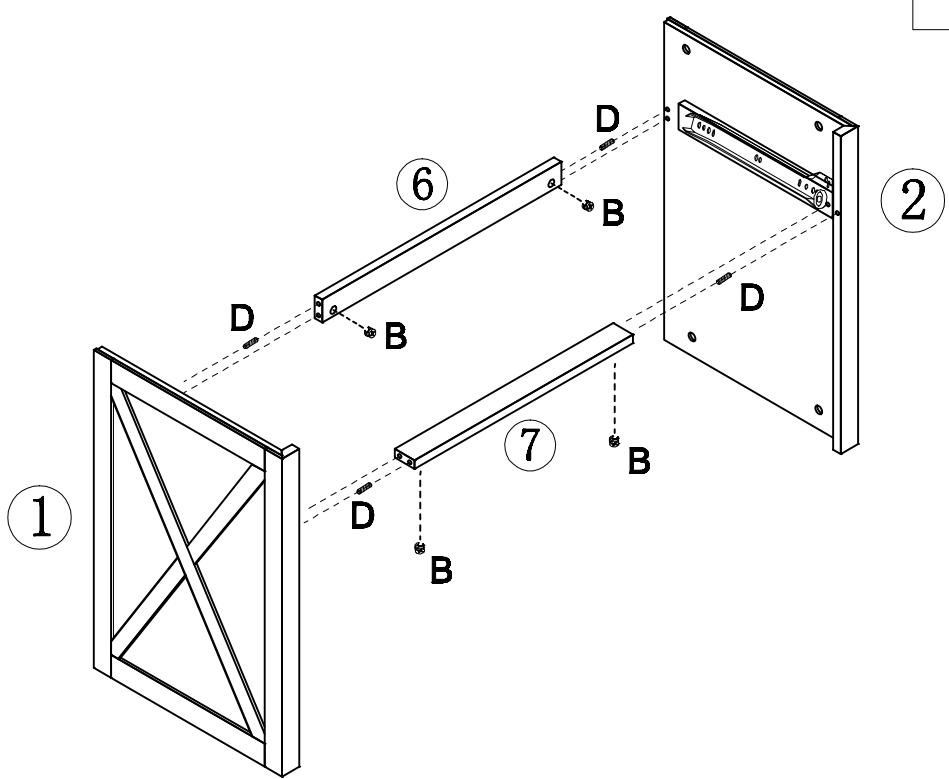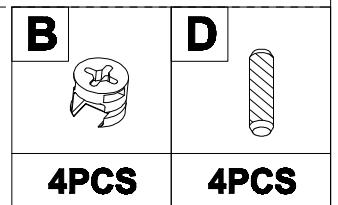


## STEP:5

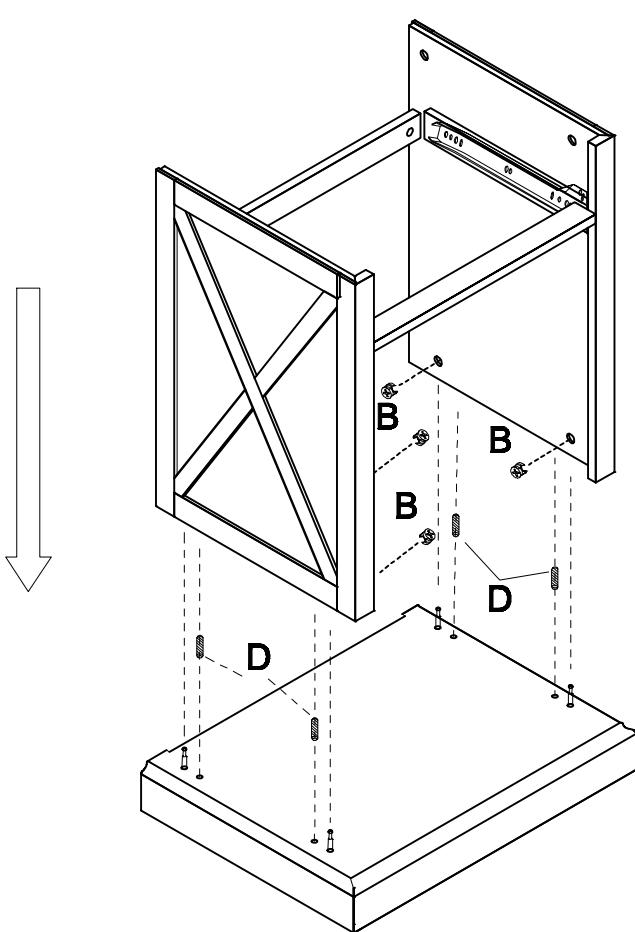



<b>B</b>	<b>D</b>
4PCS	4PCS

## STEP:6


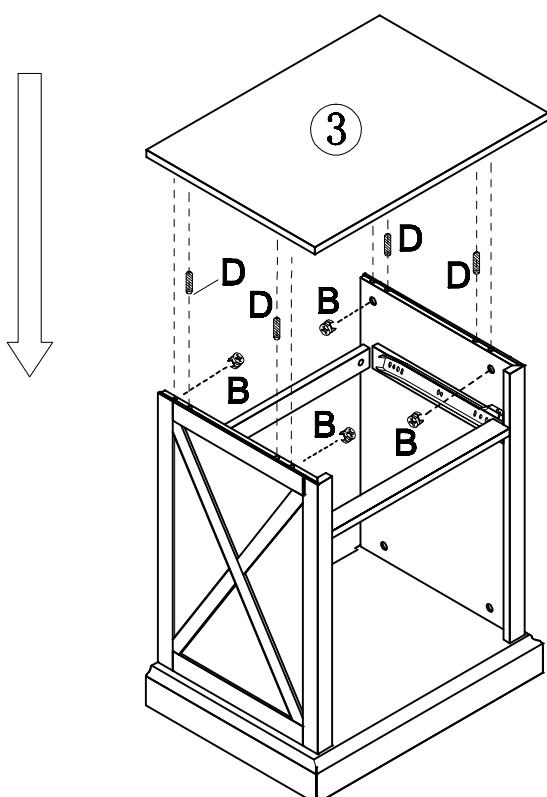


<b>B</b>	<b>D</b>
4PCS	4PCS

## STEP:7

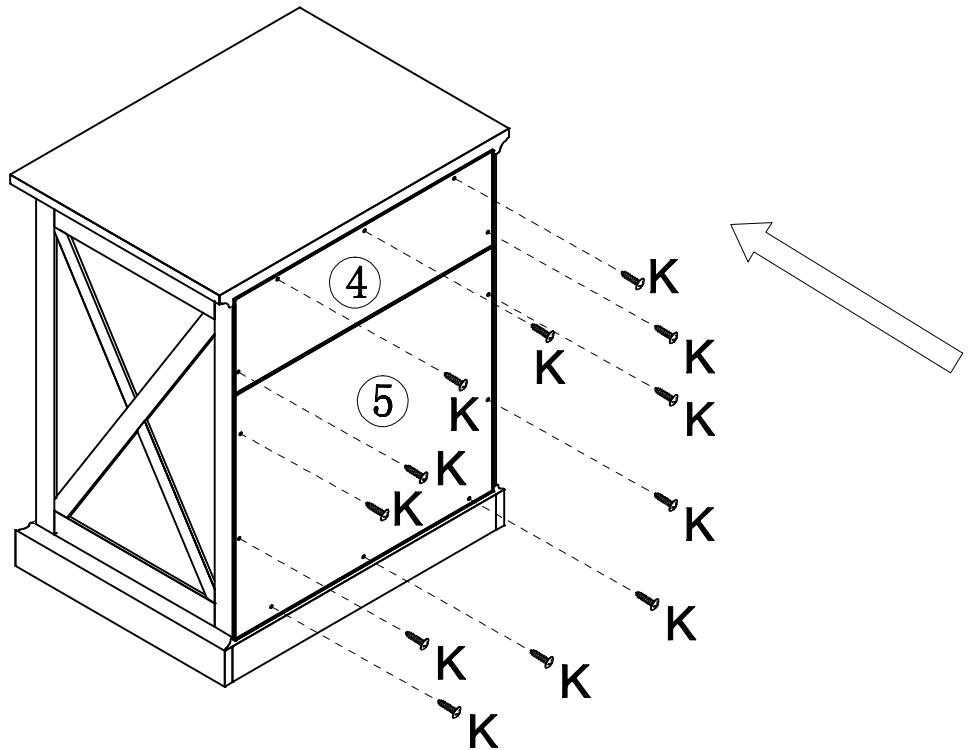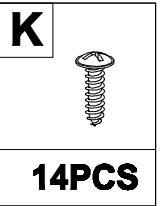


## STEP:8

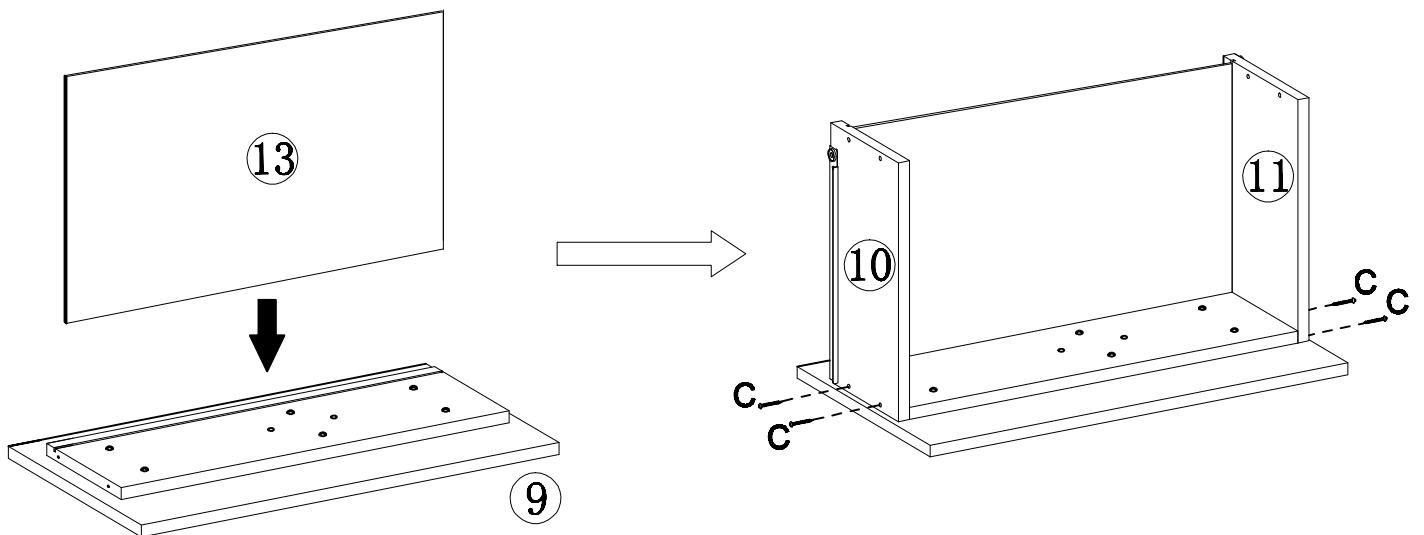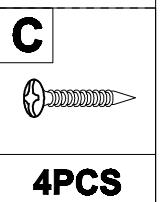


## STEP:9


<b>E</b>	<b>F</b>	<b>C</b>
2PCS	1PCS	4PCS

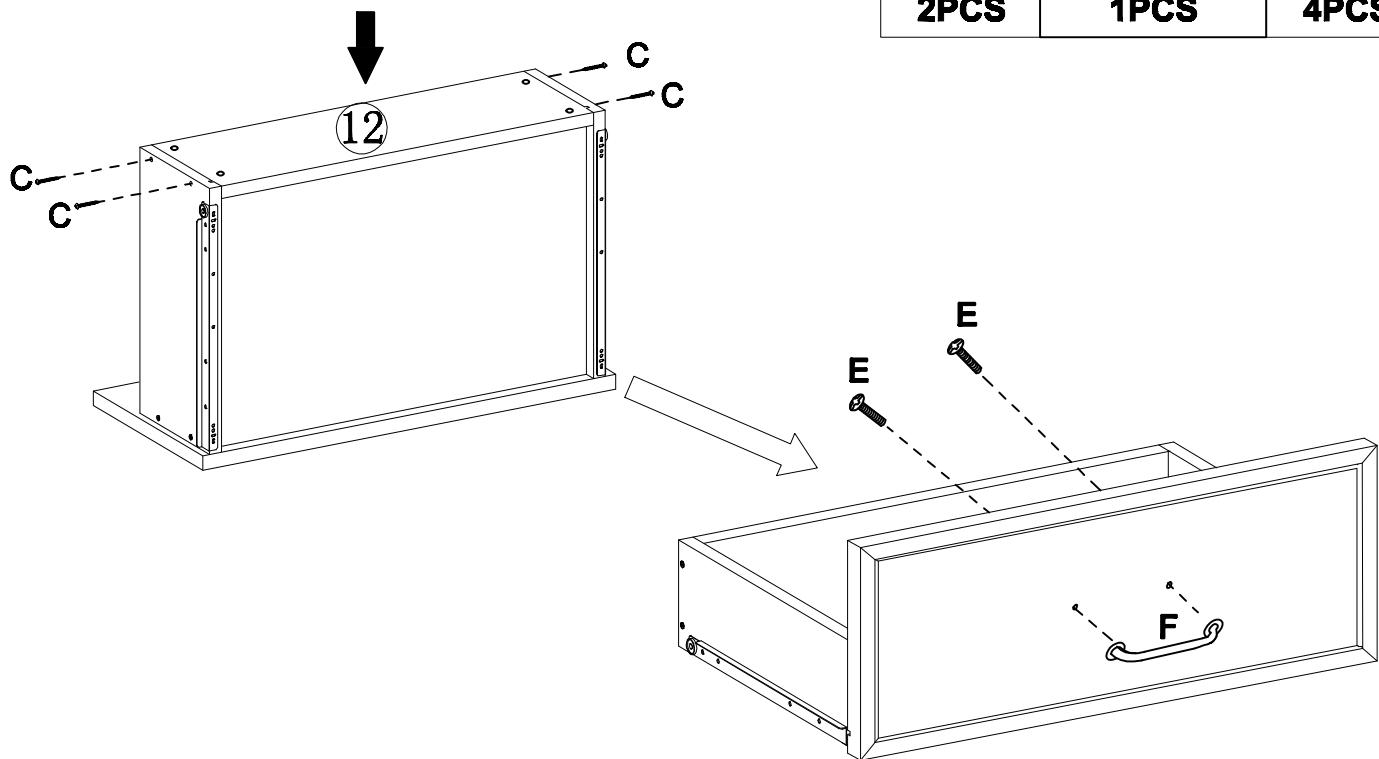

## STEP:10

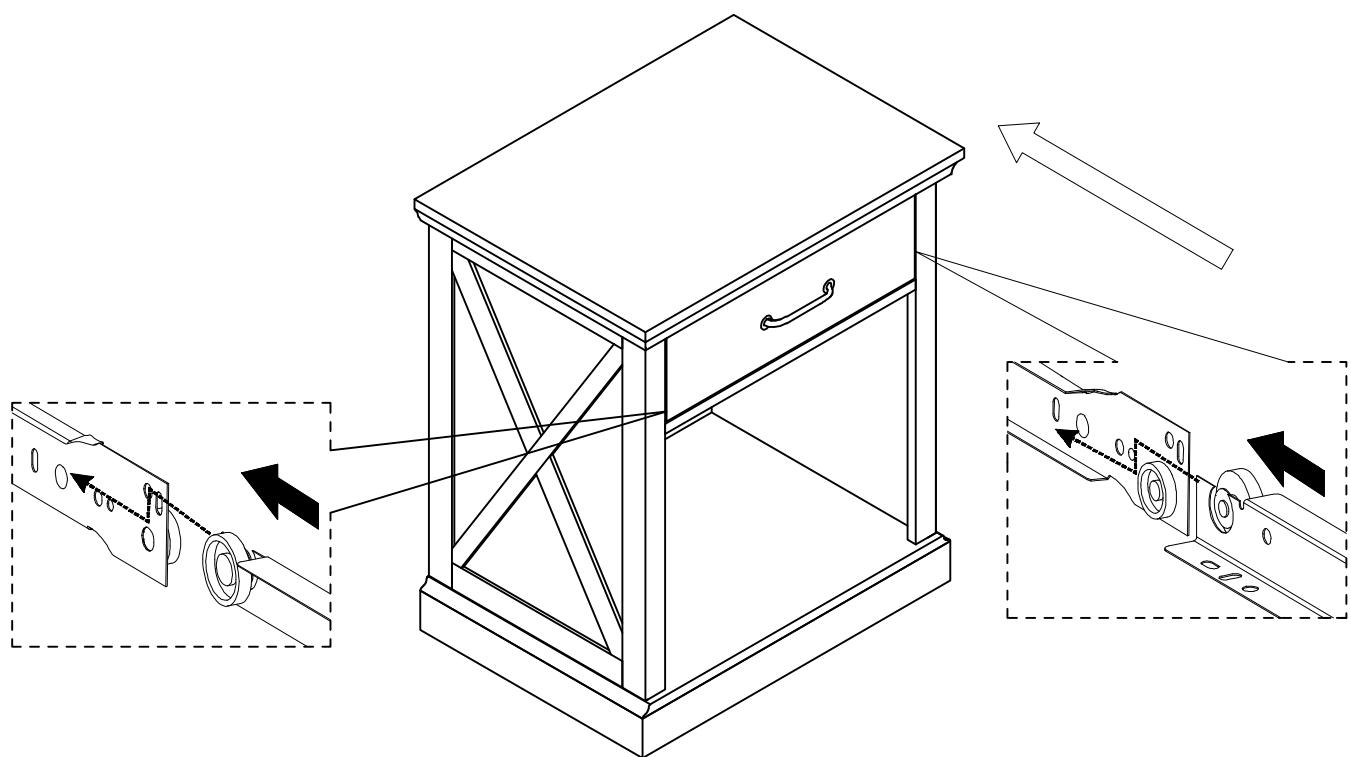

## **STEP:11**

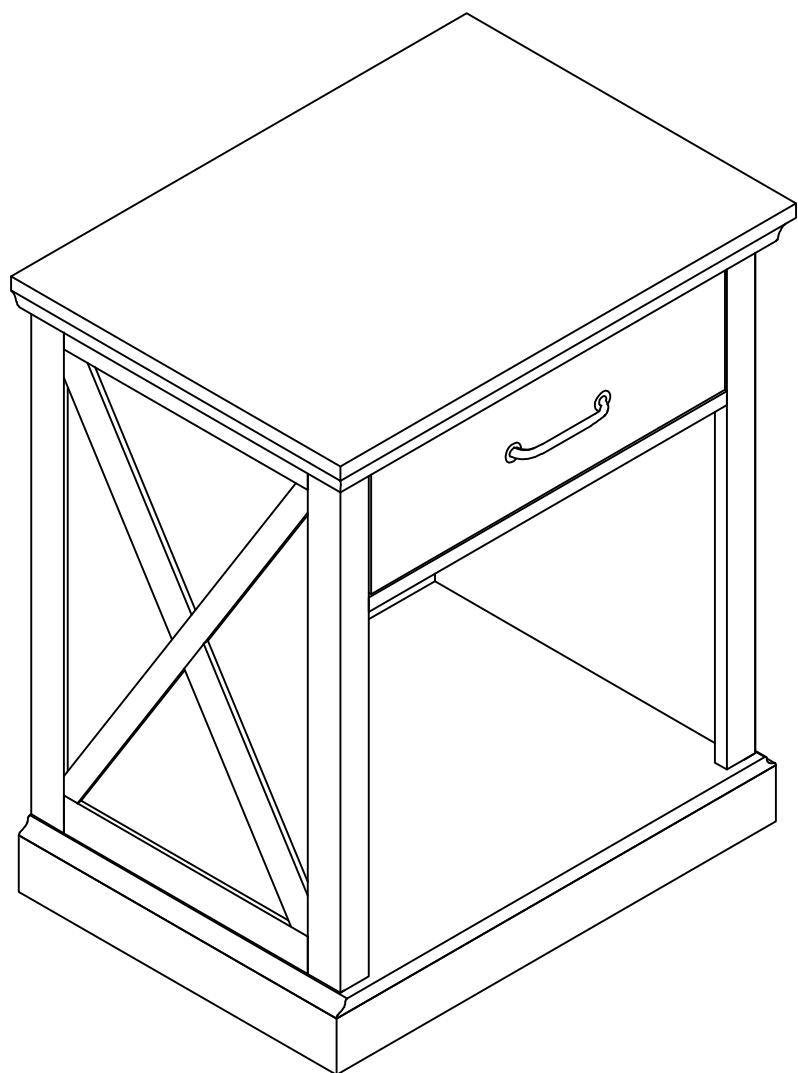

If you have any questions, please feel free to contact us.

Email: [service@qualfurn.net](mailto:service@qualfurn.net)