


ADIRONDACK SIDE TABLE

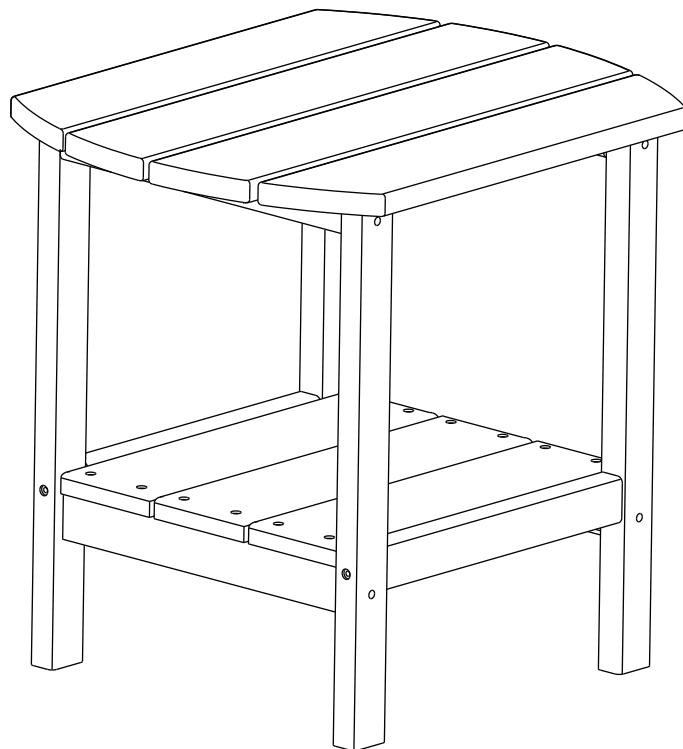







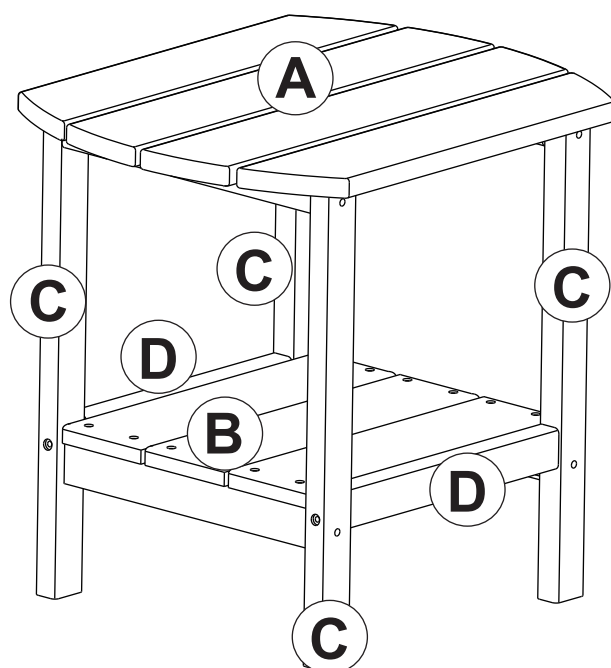
Assembly Consideration

- Do not overtighten screws(Insert All screws before tighten screws)
- Follow Assembly Instructions Step by Step
- Do not discard original packaging if your received items damaged or with missing parts
- Count all Hardware parts before starting assembly
- Assemble items in a clear area and away from clutter to avoid misplacing assembly items


Safety Precautions

- Avoid Using strong powertools to help prevent wood from cracking when assembly


A		1pc	1	 M6.3X50	12pcs
B		1pc	2		1pc
C		4pcs			
D		2pcs			



STEP:1

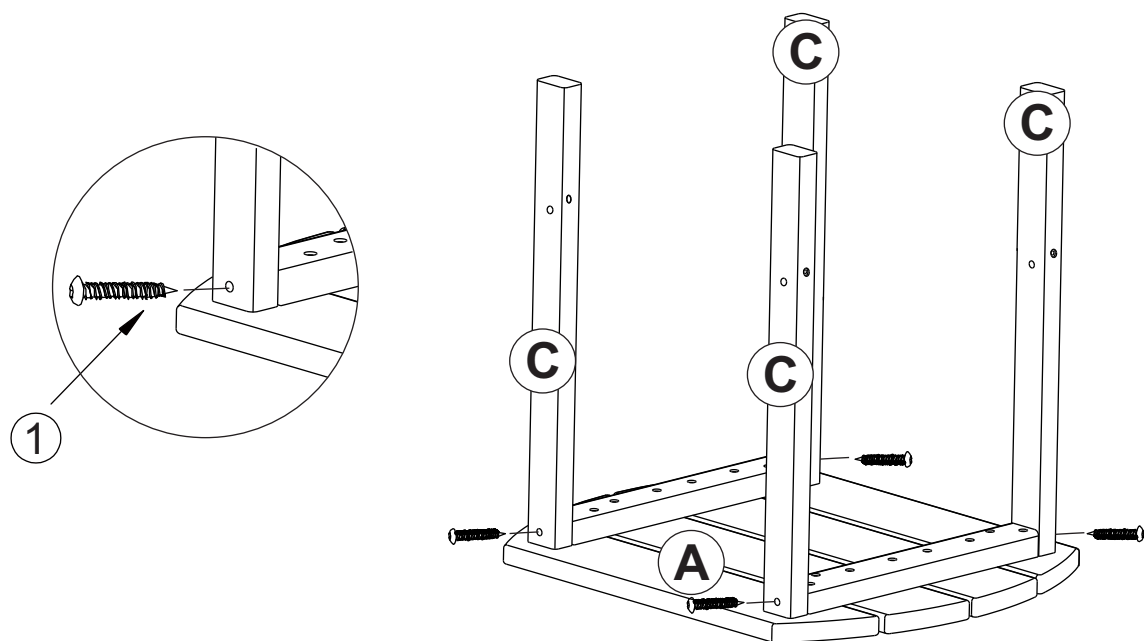

STEP:2

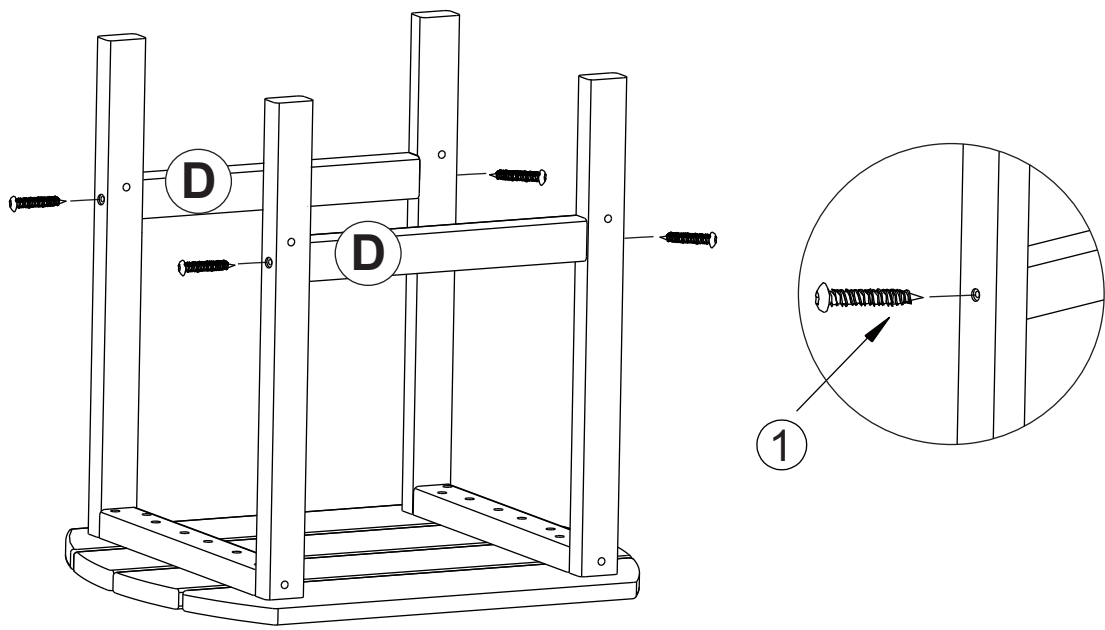

STEP:3

