

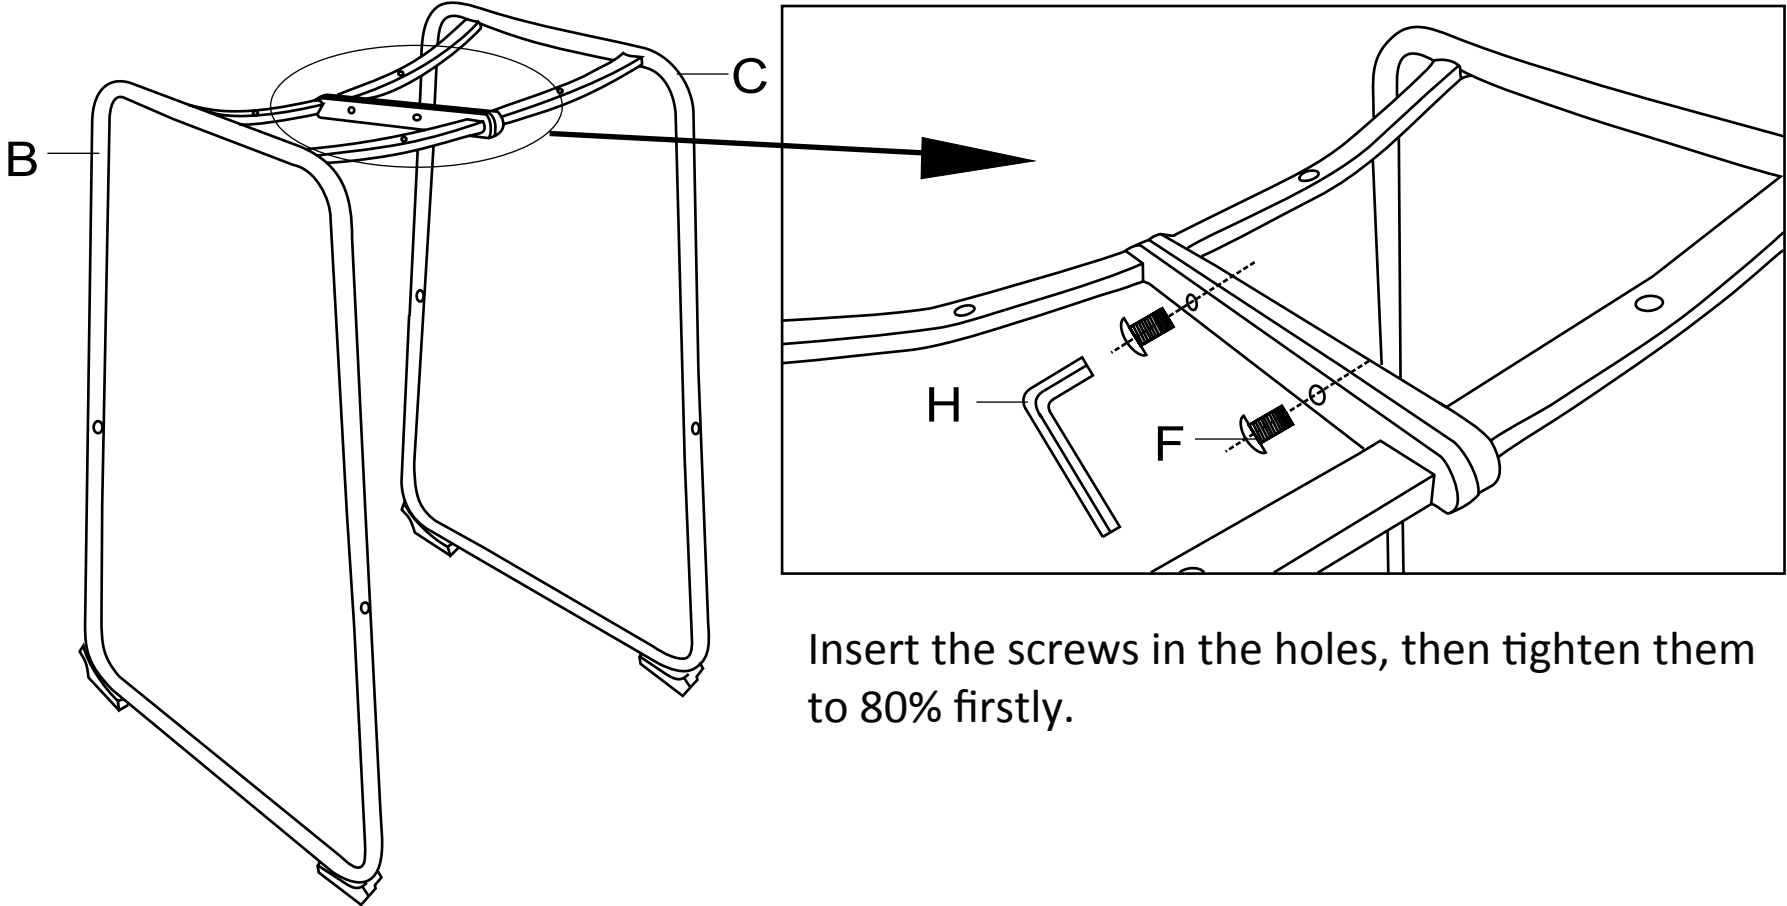
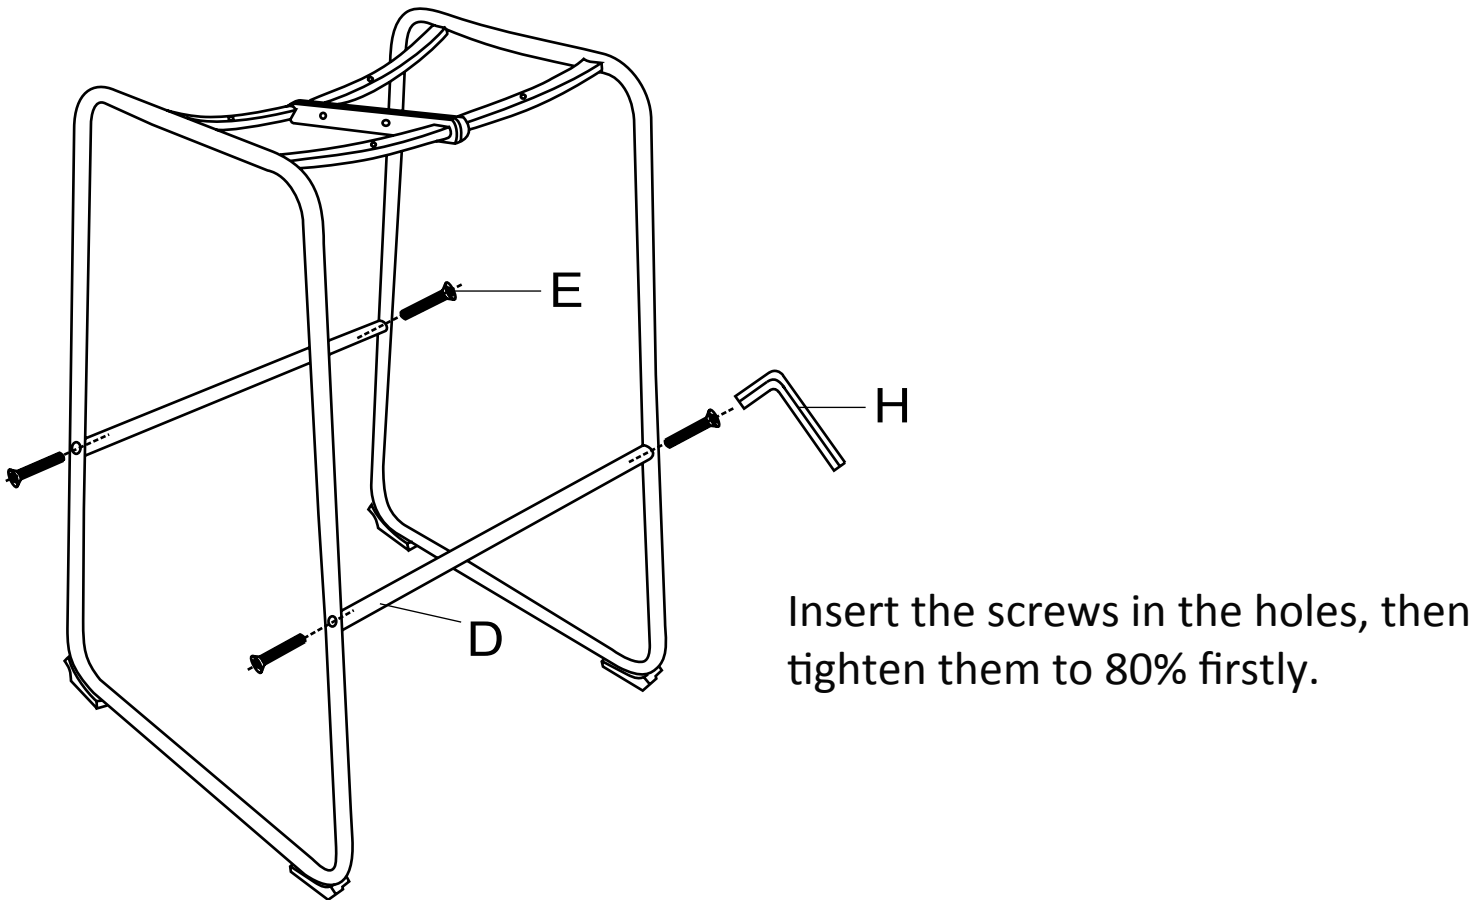
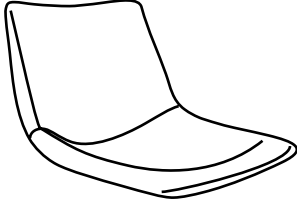


Step 1

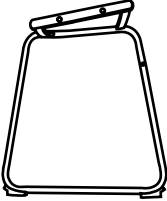


Step 2

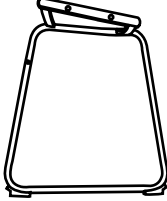


HARDWARE LIST	CODE	PARTS	QTY.	CODE	PARTS	QTY.	CODE	PARTS	QTY.
	A		1	C		1	G	 M6 X 22MM	4
							H	 M6	1
	B		1	D		2			
				E	 M6 X 30MM	4			
				F	 M8 X 14MM	2			

Step 3

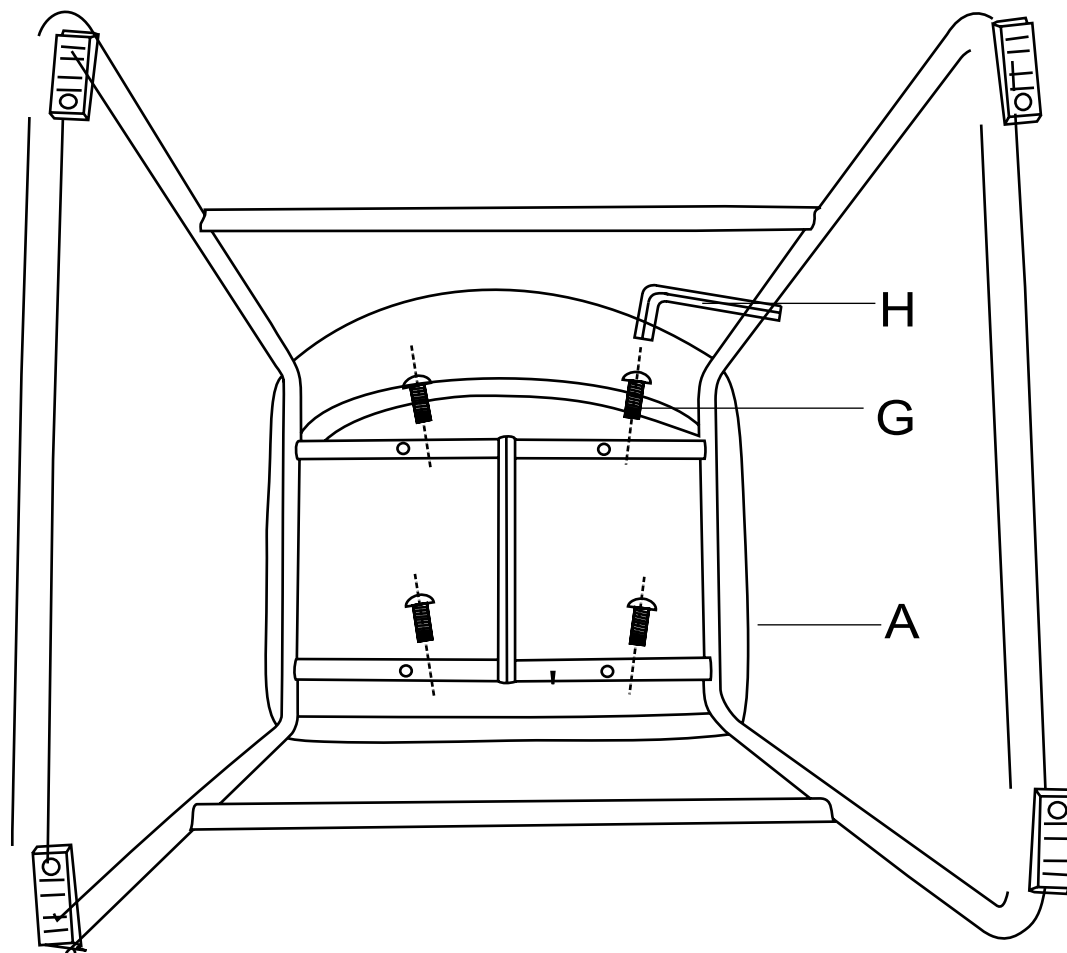


Insert the screws in the holes, then tighten them to 80% firstly.

Step 4

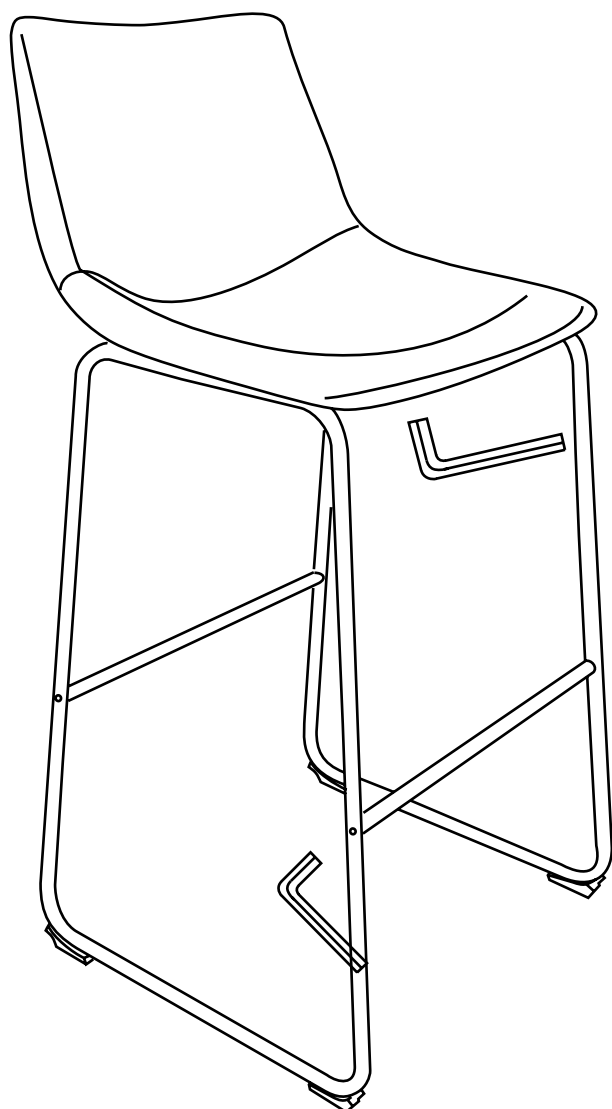

Use body weight to adjust balance of chair, then tighten all the screws to 100% all the way.

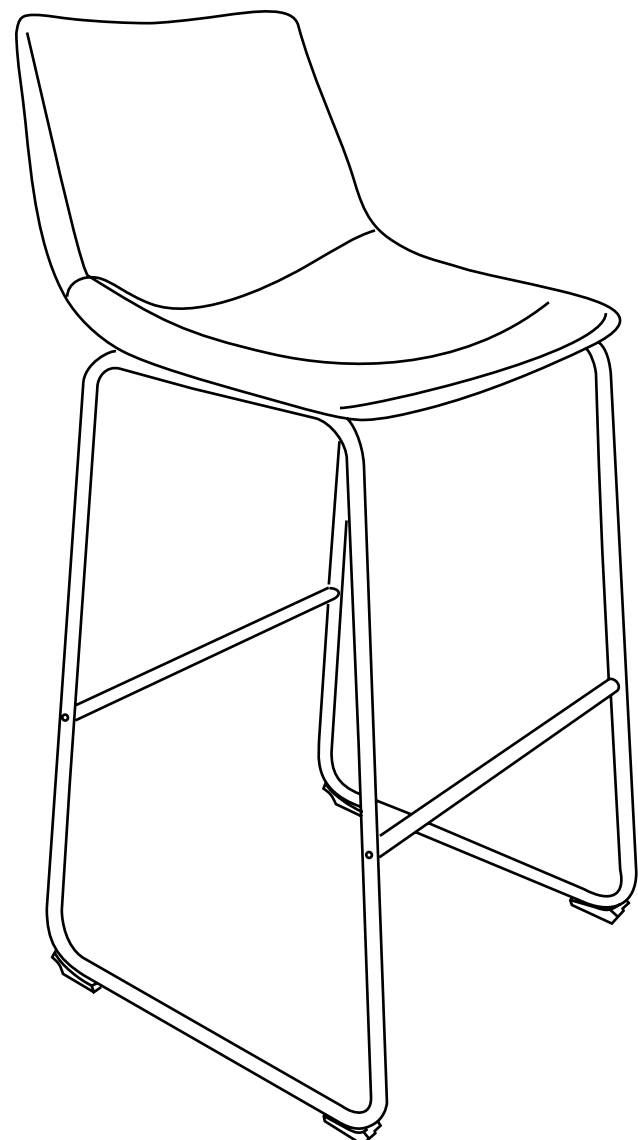

A few days after initial assembly, the product may acclimate to its new environment. Please ensure all screws are still securely tightened.