


# CONVENIENCE CONCEPTS

## AMERICAN HERITAGE FLIP TOP STORAGE END TABLE

7105059

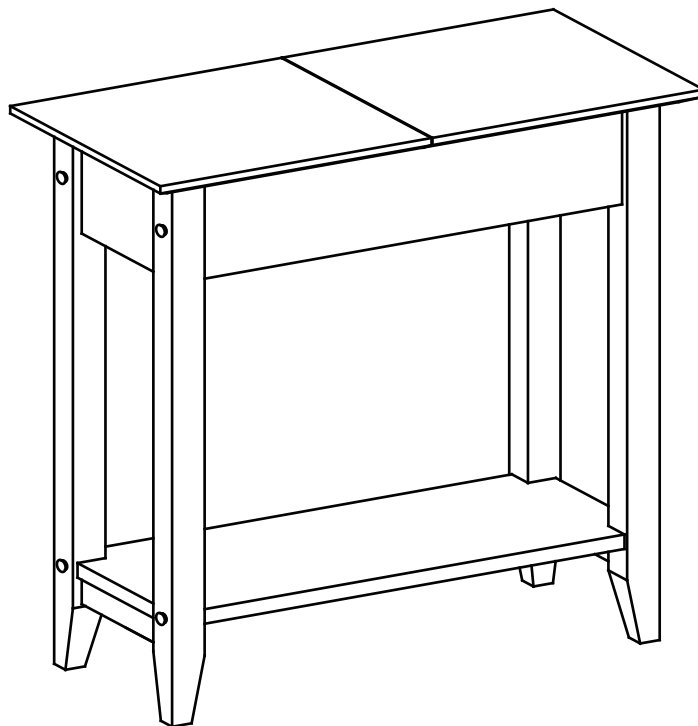

### ASSEMBLY INSTRUCTIONS

---

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .

---



Please do not return to the store







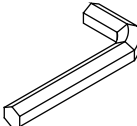


Broken or missing parts?


Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at [parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)






Hardware List

Part List

<b>A</b>	
Camlock (4pcs)	
<b>B</b>	
Cambolt (4pcs)	
<b>C</b>	
Wood dowel (8pcs)	
<b>D</b>	
Nut (8pcs)	
<b>E</b>	
Allen screw (8pcs)	
<b>F</b>	
Plugs (8pcs)	
<b>G</b>	
Allen wrench (1pc)	
<b>H</b>	
Wood glue(1pc)	
<b>I</b>	
Color stick (1pc)	

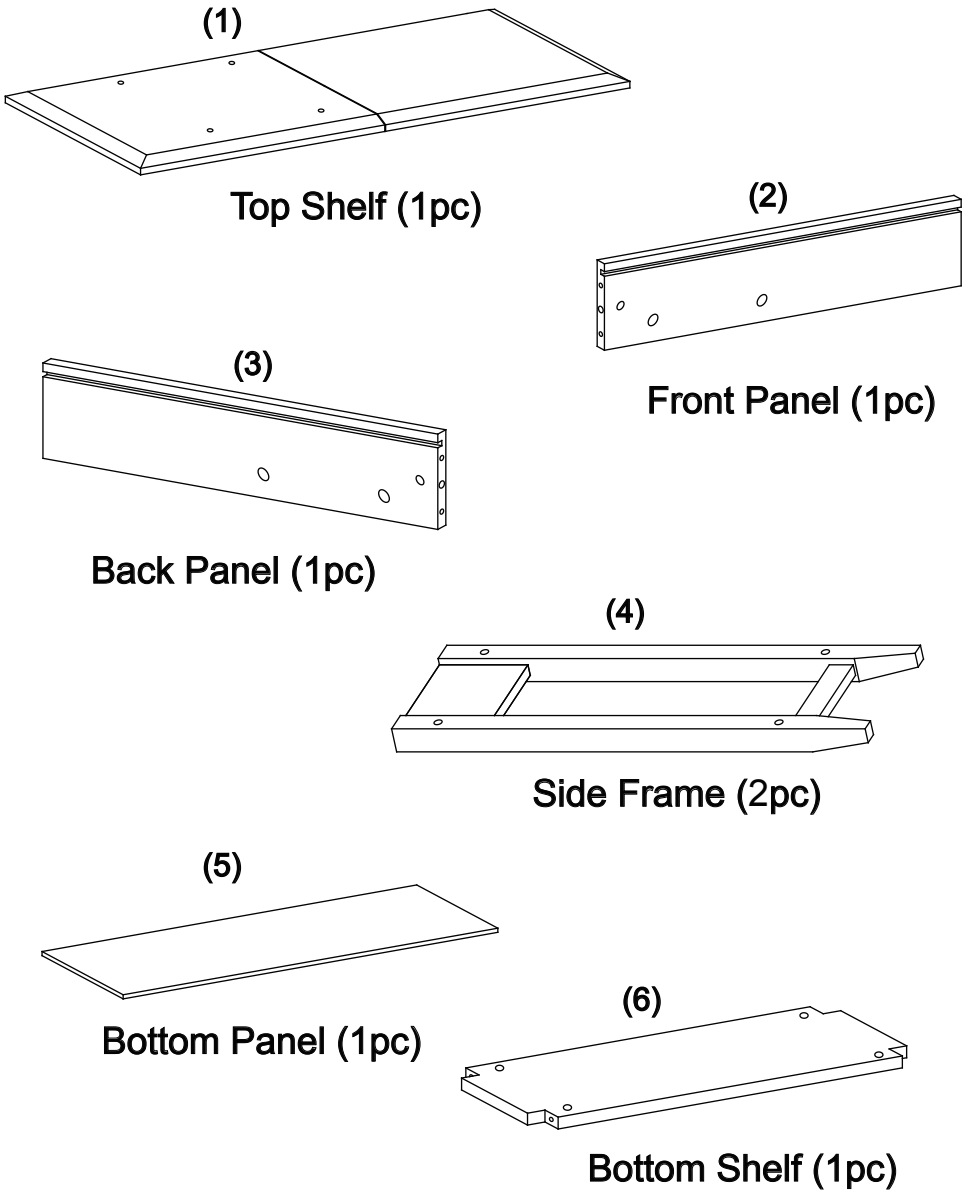

Assembling the unit with camlocks and wood dowels.

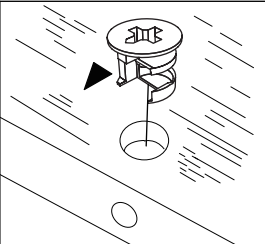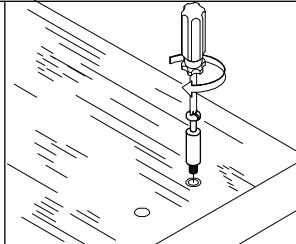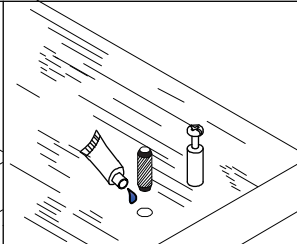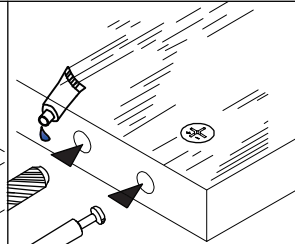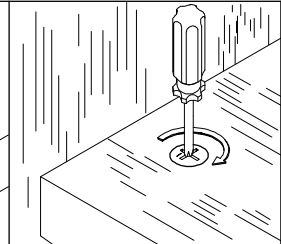				
Insert camlock, arrow must face bolt hole.	Gently screw cambolt into the threaded anchor	Lightly glue one end of wood dowel and tap into hole.	Lightly glue dowel and connect to second panel by inserting cambolt and dowel into holes	Gently screw the cam clockwise into locked position. Do not overtighten.


## Step1

1. Screw Cambolts ( B ) into Top Shelf ( 1 ) and place Cam Locks ( A ) into Front Panel ( 2 ) and Back Panel ( 3 ).

**\*\*Arrow on Cam Lock Faces Outward Opening\*\***

2. Connect Panels ( 2 ) and ( 3 ) to Top Shelf ( 1 ) as shown and gently tighten Camlock (A).

**\*\*Turn only 1/4 of the way for lock position\*\*** by turning Cam Locks ( A ) Clockwise.

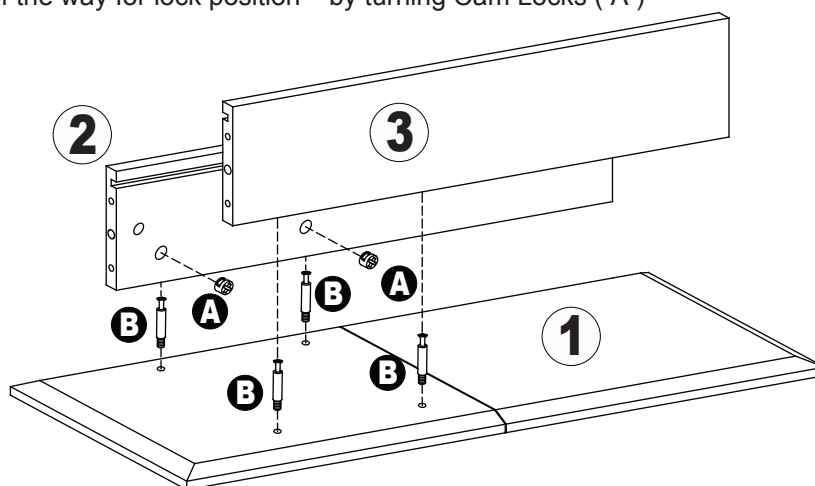


## Step2

1.) Insert Wood Dowels ( C ) into Panels ( 2 ) and ( 3 ) and insert Nuts ( D ) as shown.


**\*\*Opening on Nut Needs to Face Outward Opening on Panel\*\***

2.) Attach Side Frame ( 4 ) to Top Shelf Assembly using Allen Wrench ( G ), and Allen Screws ( E )

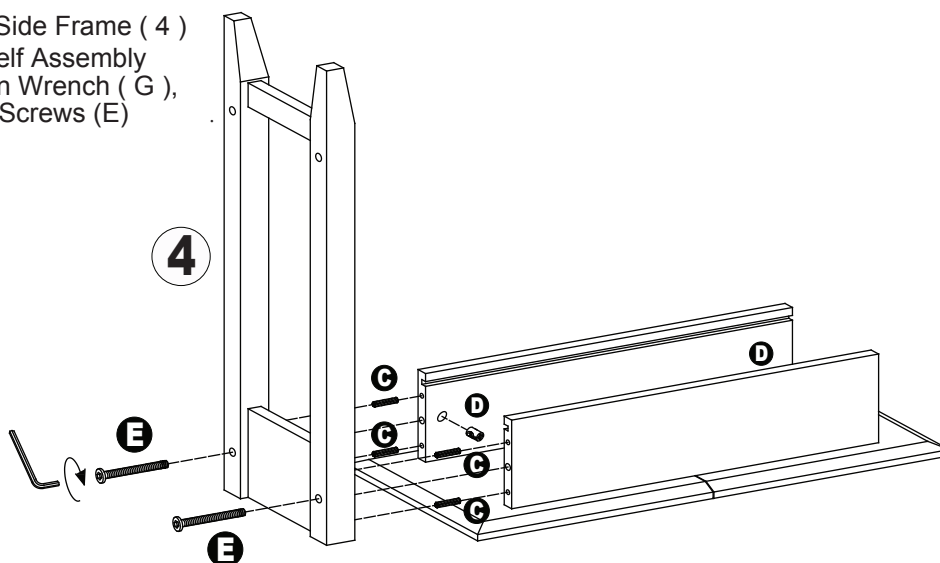


## step3

1. Slide Bottom Panel ( 5 ) into grooves of Panels ( 2 ) and ( 3 ) and into groove of Side Panel ( 4 ).

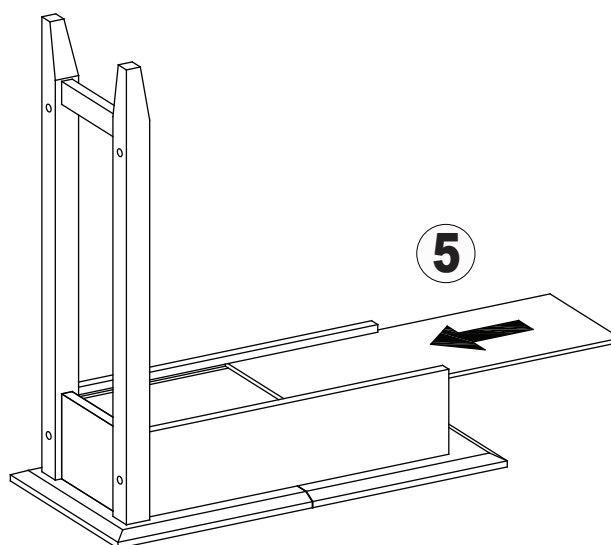


## step4

1. Insert Wood Dowels ( C ) into Panels ( 2 ) and ( 3 ).
2. Attach Side Frame ( 4 ) to Top Shelf Assembly using Allen Wrench ( G ) and Allen Screws (E).

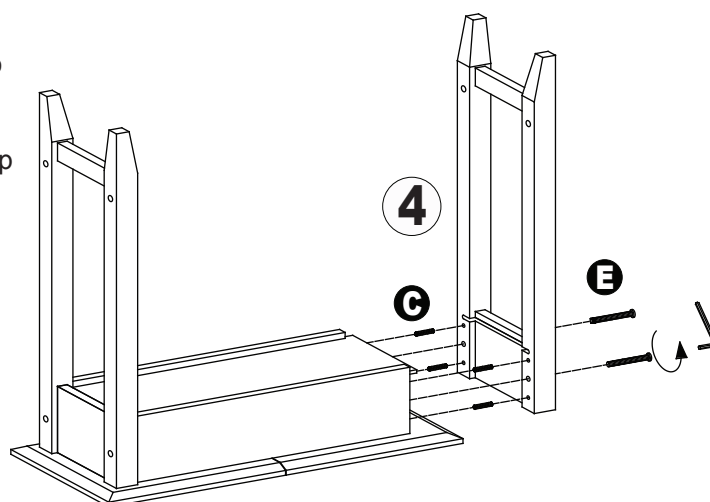

## step5

1. Holding Bottom Shelf ( 6 ) at an angle slowly, guide Shelf until it is flush against bottom bar of Side Frame ( 4 ).

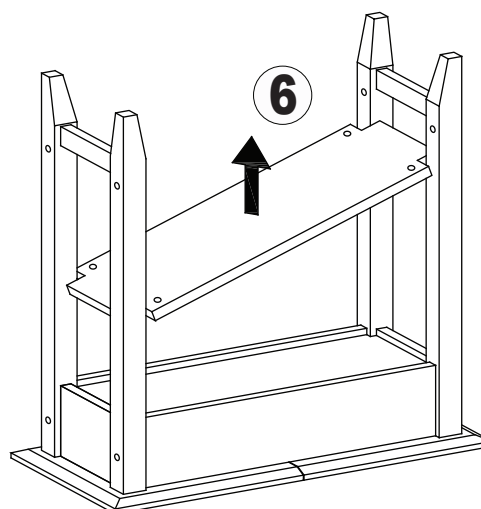


## step6

1.Insert Nuts ( D ) as shown.

**\*\*Opening on Nut Needs to Face Outward  
Opening on Panel\*\***

2.Secure Bottom Shelf ( 6 ) to Side Frames ( 4 )  
using Allen Screw (E) and Allen Wrench (G).

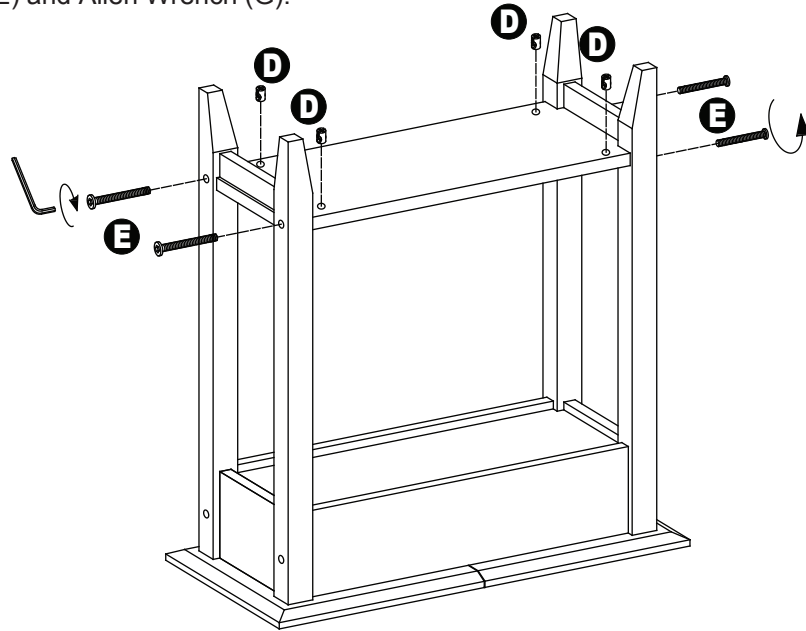

## step7

1. Turn Table Over.

2. Insert Plugs ( F ) as shown.

3.) Enjoy your new quality piece of  
furniture for years to come!

