


NS015

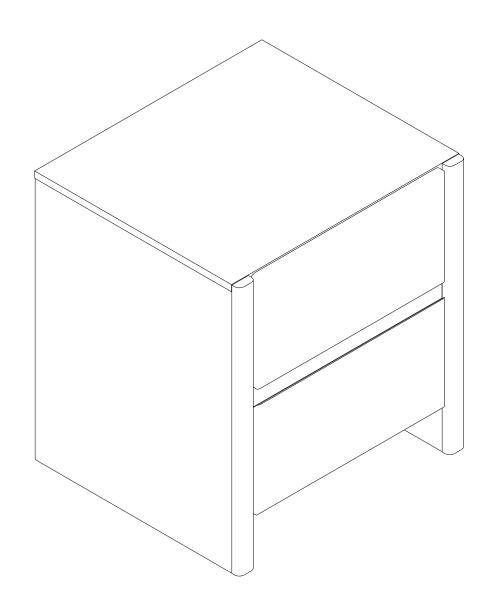




STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

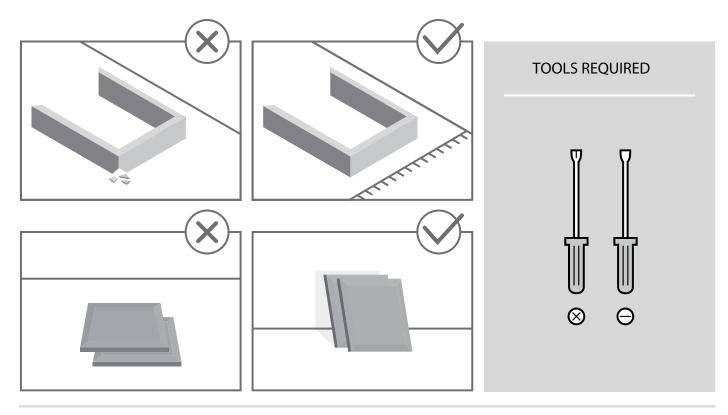



View our assembly video online: www.manhattancomfort.com



Stuck? Question? We are here to help.

tel: 908-888-0818


e-mail: help@manhattancomfort.com

Support Site



Included in this package:

- A. TOP PANEL(1)
- B. BACK LOWER PANEL(1)
- C. LEFT PANEL (1)
- D. RIGHT PANEL (1)
- E. BACK UPPER PANEL (1)
- F. FRONT UPPER HORIZONTAL PANEL (2)
- G. DRAWER UPPER FRONT PANEL (1)
- H. DRAWER LOWER FRONT PANEL (1)
- I. DRAWER SUPPORT PANEL (2)
- J. DRAWER LEFT PANEL (2)
- K. DRAWER RIGHT PANEL (2)
- L. DRAWER BACK PANEL (2)
- M. DRAWER BOTTOM PANEL (2)

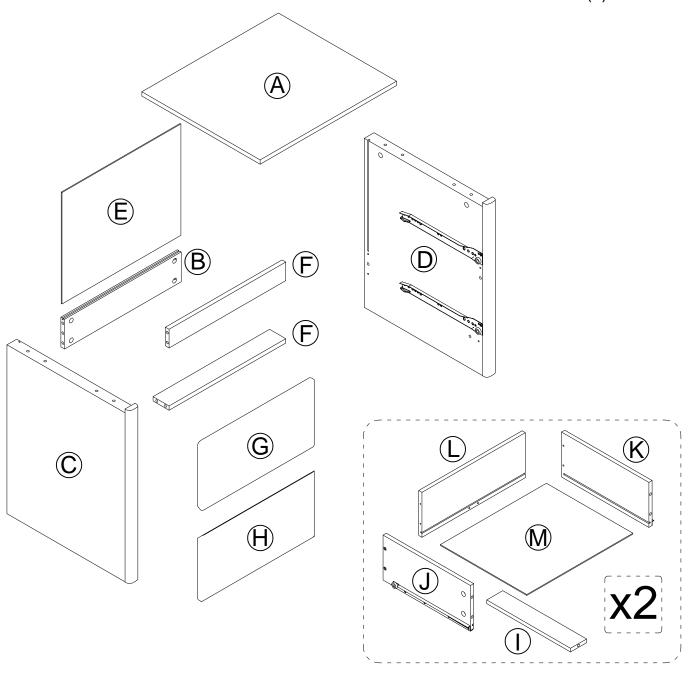


Hardware Identification





3 COVER CAP - 22pcs







4 WOOD DOWEL - 10pcs Ø8*30mm












7 PLASTIC WEDGE - 6pcs








Page 4 NS015

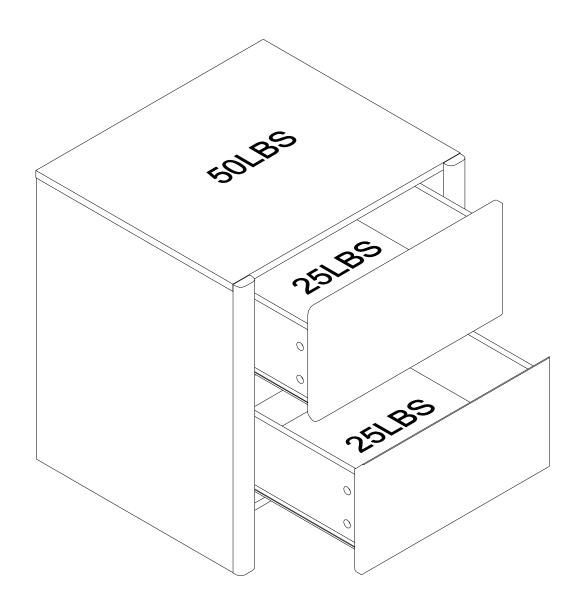

Step 1:


 * Insert Twelve KD BOLT (1) to the TOP PANEL (A), LEFT PANEL (C) and RIGHT PANEL (D).

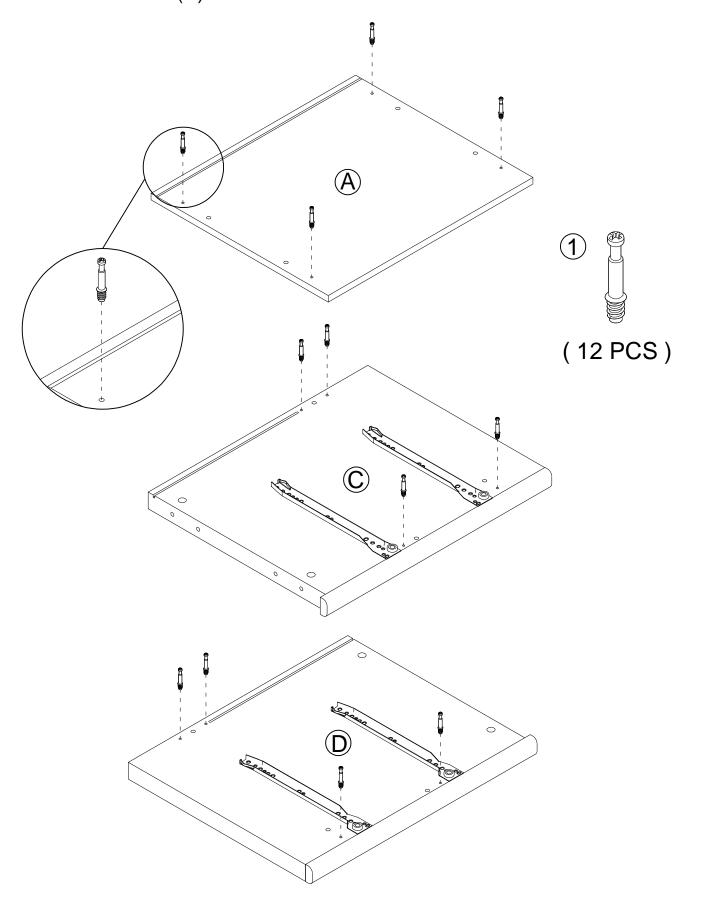


Page 6 NS015


 * Attach the Two FRONT UPPER HORIZONTAL PANEL (F) and BACK LOWER PANEL(B) to the LEFT PANEL (C) by the Four KD LARGE CAM (2) , Four

COVER CAP (3) and Three WOOD DOWEL (4).

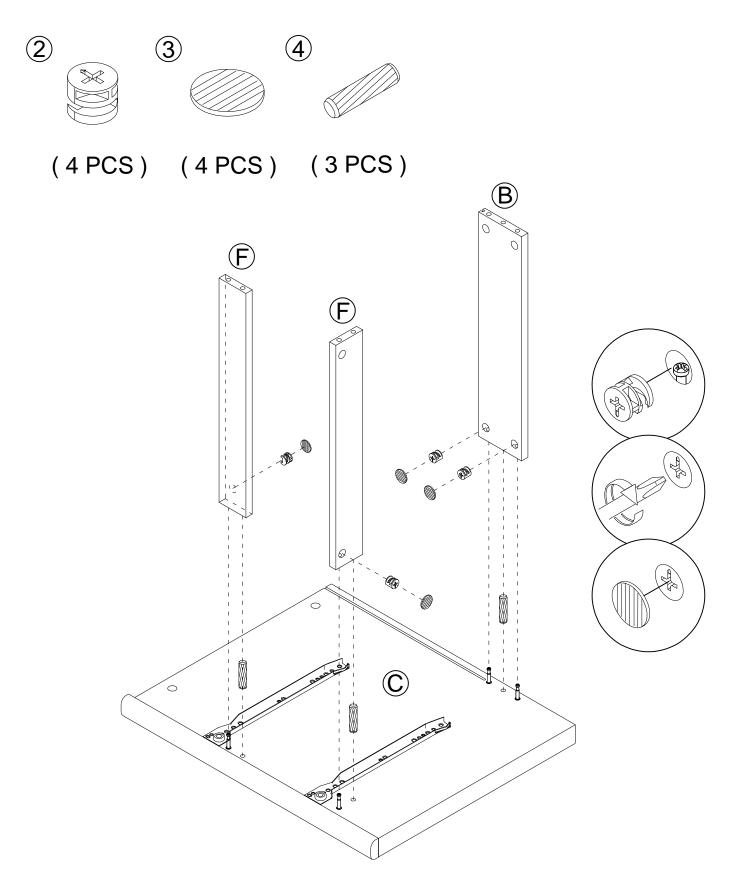


* Attach the Two FRONT UPPER HORIZONTAL PANEL (F) and BACK LOWER PANEL(B) to the RIGHT PANEL (D) by the Four KD LARGE CAM (2), Four COVER CAP (3) and Three WOOD DOWEL (4).

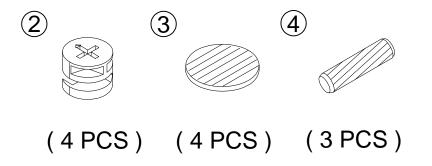

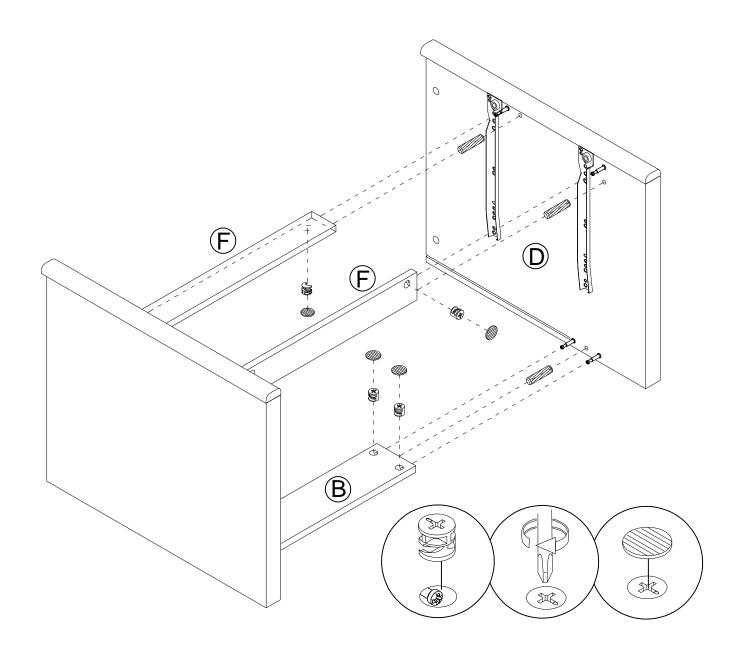


Page 8 NS015

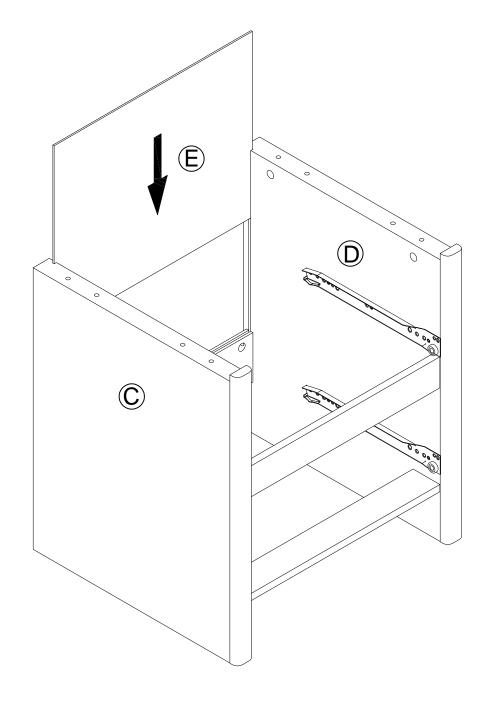


^{*} Insert the BACK UPPER PANEL (E) to the stand.

* Attach the TOP PANEL(A) to the LEFT PANEL(C) and RIGHT PANEL(D) by the Four KD LARGE CAM (2) , Four COVER CAP (3) and Four WOOD DOWEL (4) .

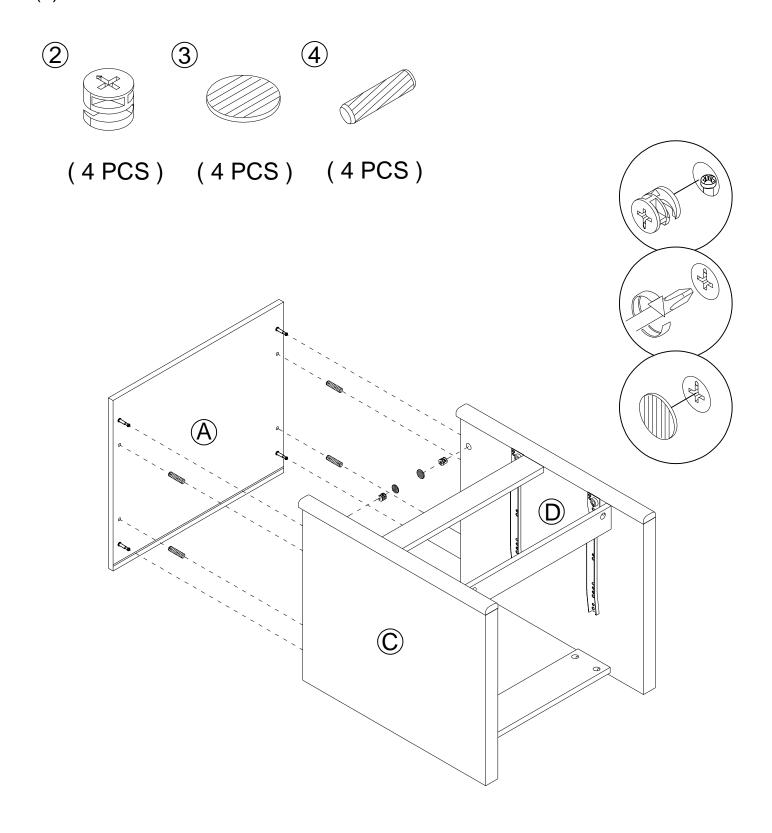


Page 10 NS015

Step 6:

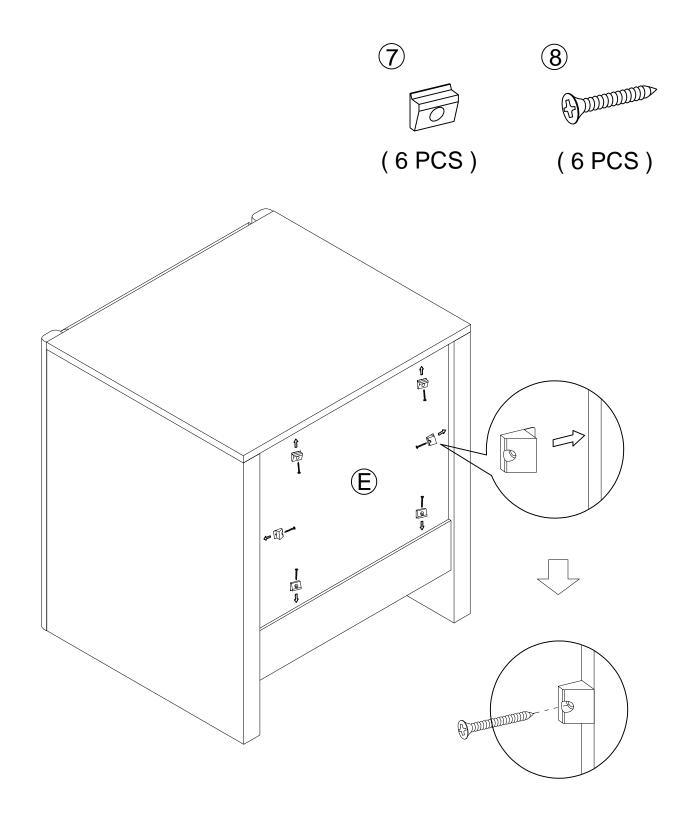

^{*} Insert Six PLASTIC WEDGE(7) and Six SCREW(8) to the BACK UPPER PANEL (E).


* Assemble the DRAWER BACK PANEL(L) to the DRAWER LEFT PANEL (J) and DRAWER RIGHT PANEL (K) by the SCREW (6) .

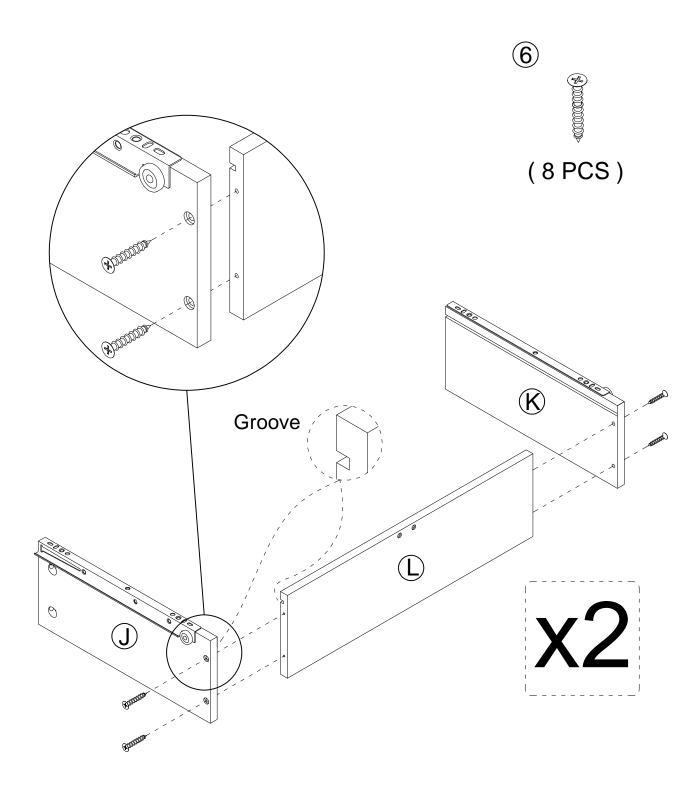

Page 12 NS015


Step 8:


- * Slide in the DRAWER BOTTOM PANEL (M).
- * Assemble the DRAWER SUPPORT PANEL (I) to the DRAWER TRAY by the SCREW (6) .

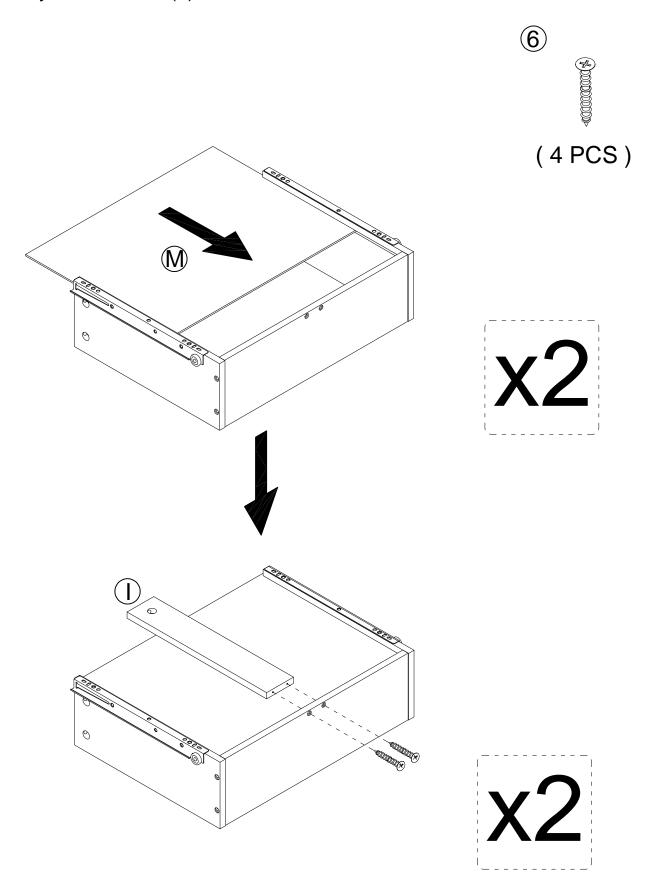

Step 9:


* Insert Ten KD BOLT (1) to the DRAWER UPPER FRONT PANEL (G) and DRAWER LOWER FRONT PANEL (H).



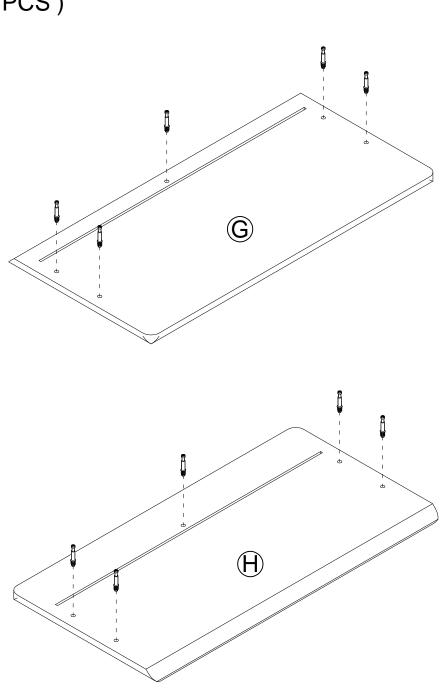



Page 14 NS015

^{*} Assemble the DRAWER UPPER FRONT PANEL (G) and DRAWER LOWER FRONT PANEL (H) to the DRAWER TRAY by the Ten KD SMALL CAM (5) and Ten COVER CAP (3).

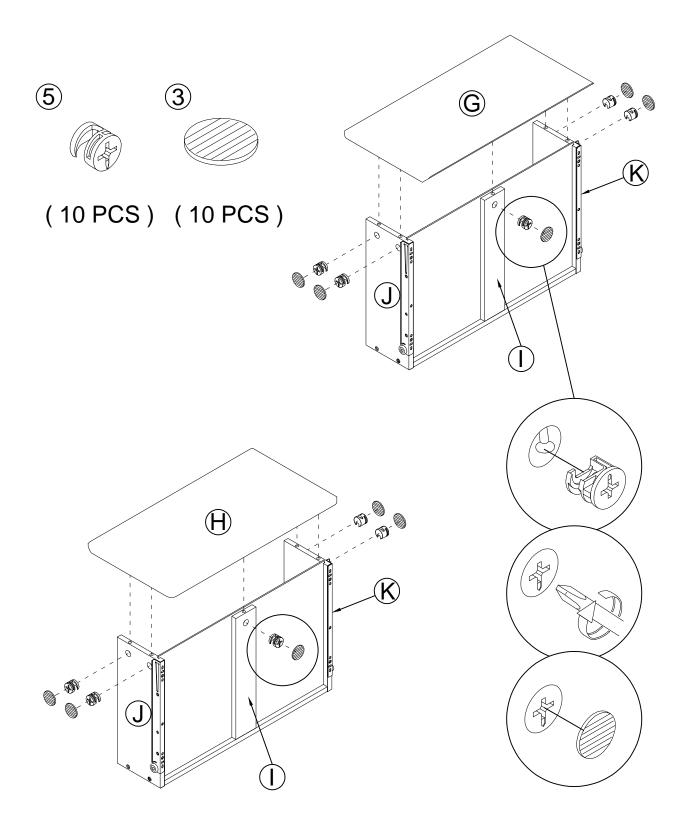

Step 11:

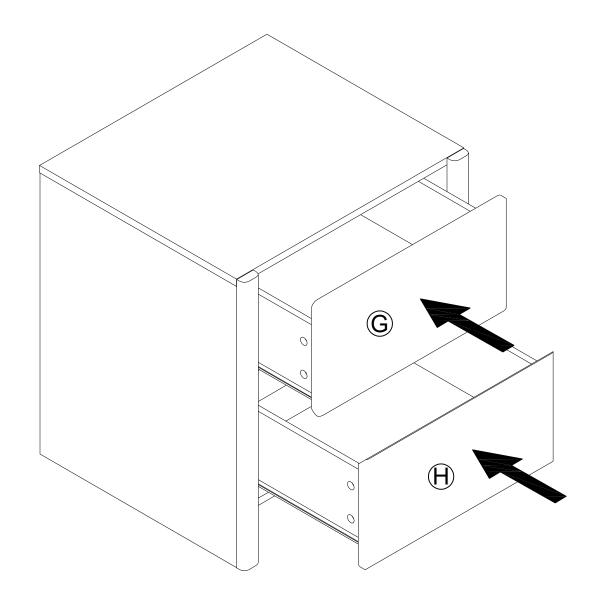

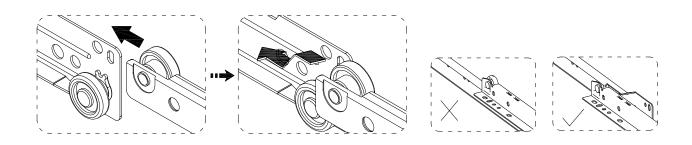

Page 16 NS015

^{*}Input Two Drawer tray to the stand.



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.