







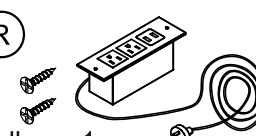









Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


(A)  Cam Bolt x 42	(B)  Cam lock x 42	(C)  6*30mm Dowel x 40	(D)  4*35mm Screw x 22
(E)  3.5*12mm Screw x 116	(F)  Hold hands x 2	(G)  4*16mm Screw x 4	(H)  6*45mm Screw x 8
(I)  Vertical nut x 8	(J)  hinge x 8	(K)  Caster x 3	(L)  Locking caster x 2
(M)  6*14mm Screw x 20	(N)  hinge x 6	(O)  Pivot x 8	(P)  Hold hands x 3
(Q)  26mm x 4	(R)  Pulley x 1	(S)  Pressure ball x 4	(T)  Screwdriver x 1
(U)  4*10mm Screw x 3	(V)  4*25mm Screw x 20	(W)  Back plate buckle x 12	(X)  3*14mm Screw x 12
(CR)  Runner 350mm x 3	(CL)  Runner 350mm x 3	(DR)  Runner 350mm x 3	(DL)  Runner 350mm x 3

Tools required

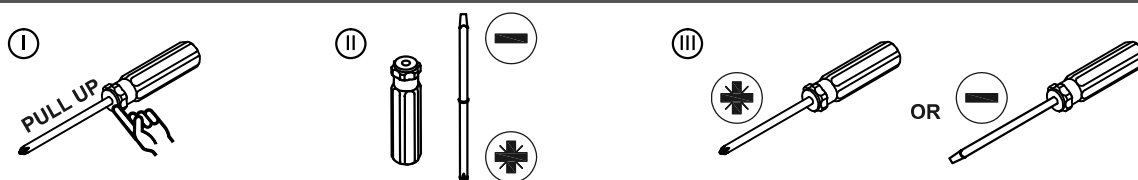

Screwdrivers can be converted to Phillips and Slotted.

Ruler - Use this ruler to help correctly identify the screws

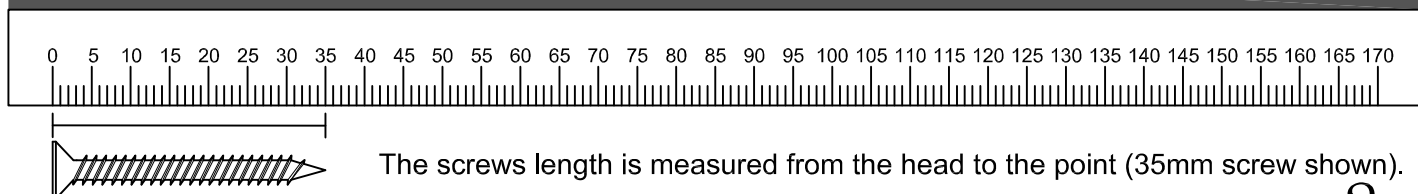


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

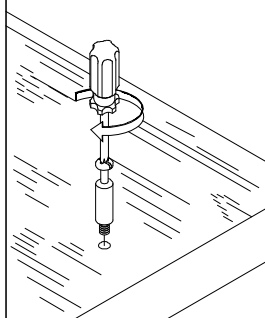

Step 2

Push the male camlock into the entry hole.

2

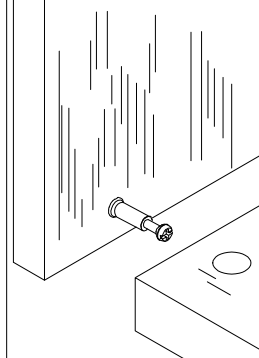


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

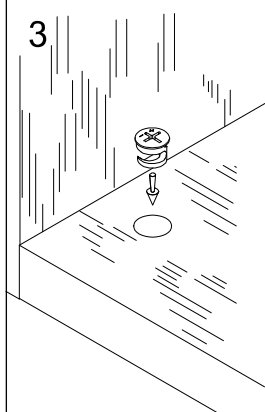


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.














4

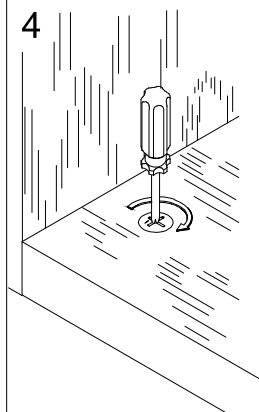















Assembly Instructions

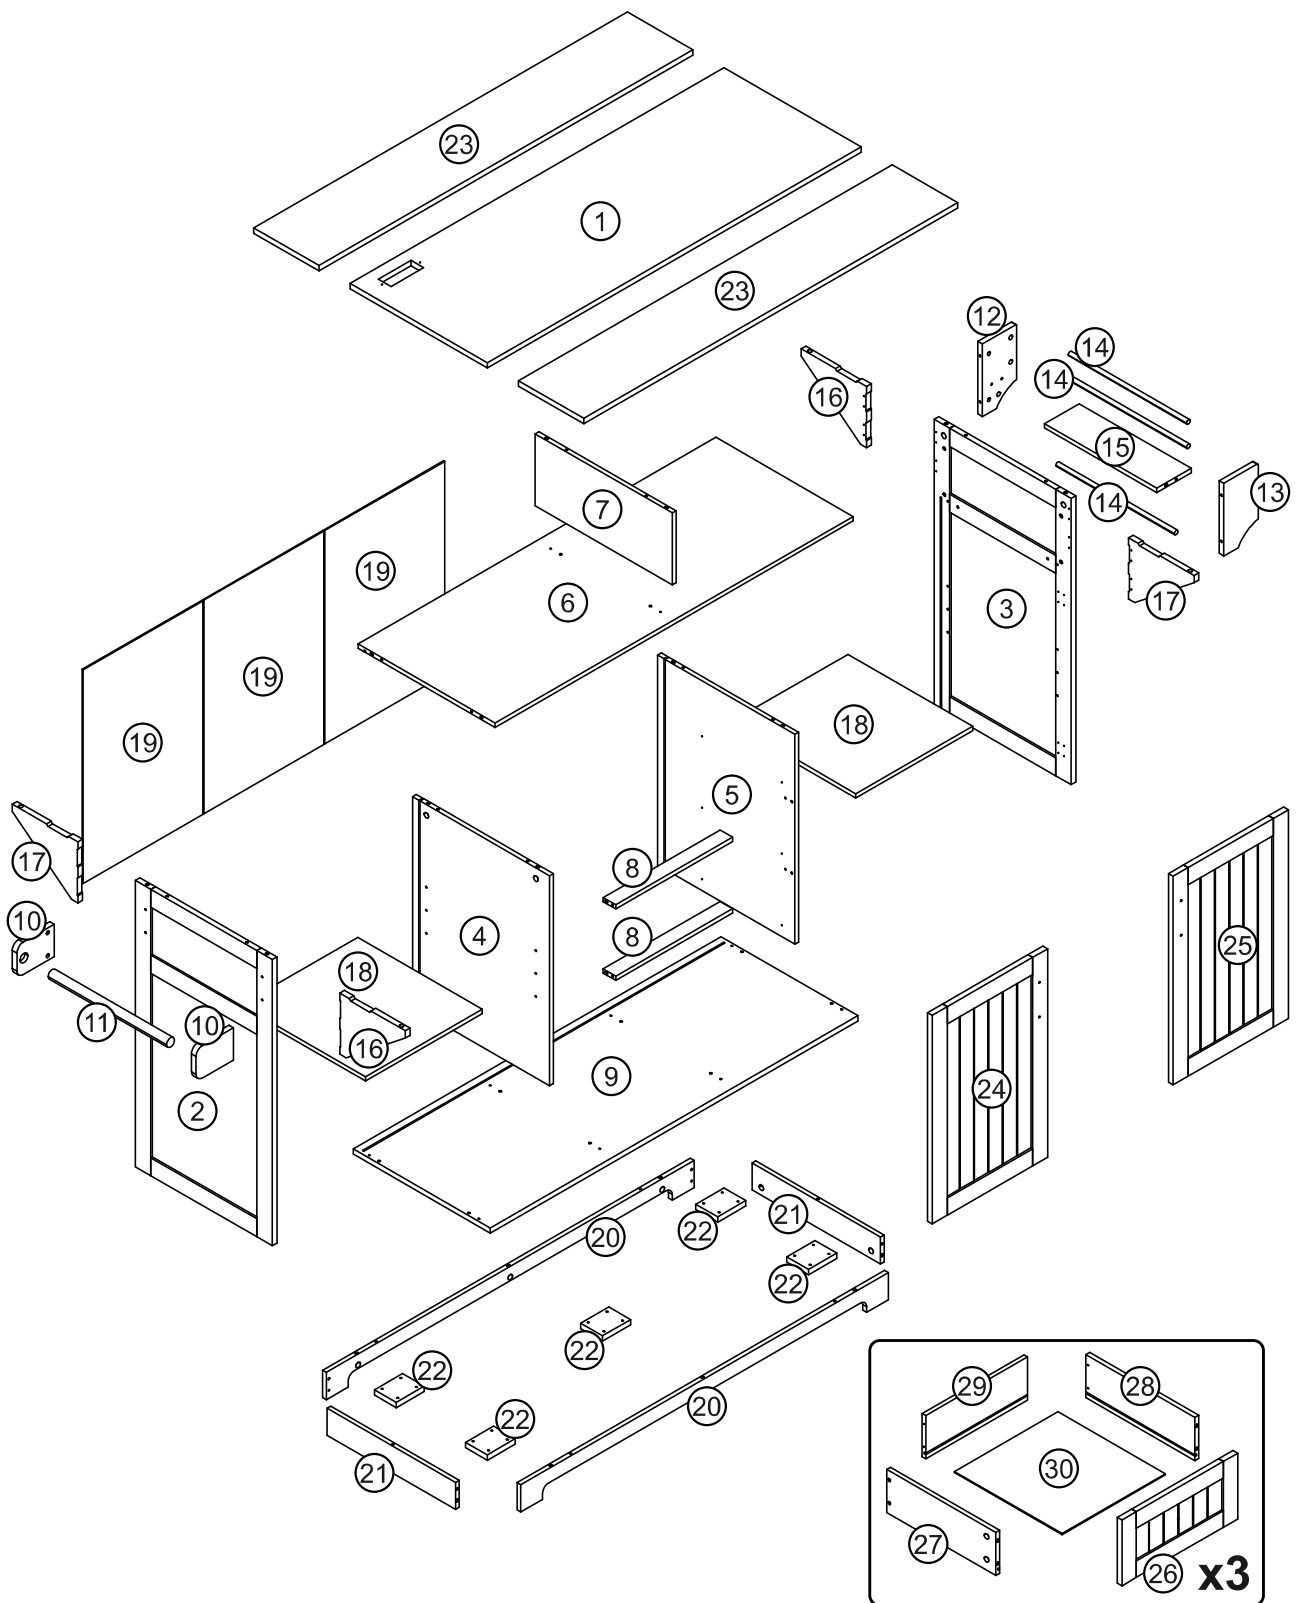

Assembly Instructions

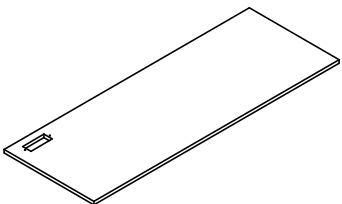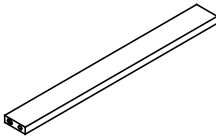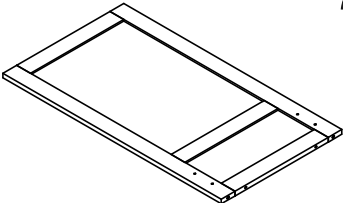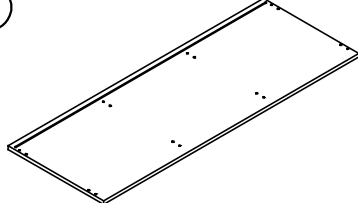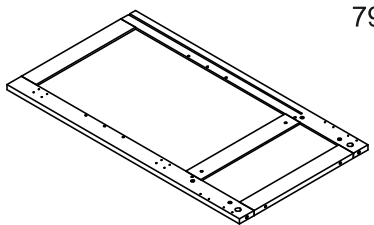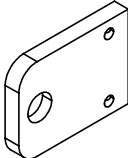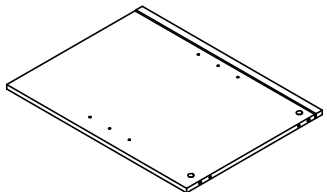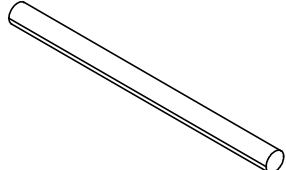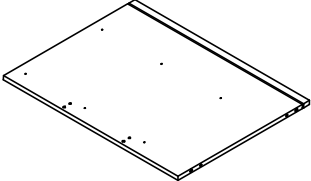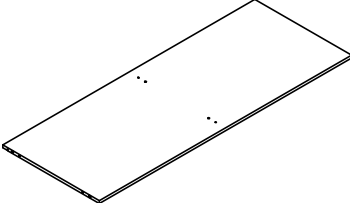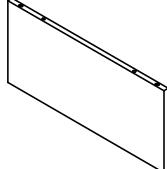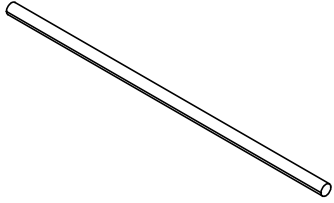
①  1200 x 440 x 15 mm 1	⑧  375 x 40 x 12 mm 2
②  792 x 440 x 15 mm 1	⑨  1180 x 440 x 15 mm 1
③  792 x 440 x 15 mm 1	⑩  120 x 90 x 15 mm 2
④  583 x 440 x 15 mm 1	⑪  381 x 25 x 25 mm 1
⑤  583 x 440 x 15 mm 1	⑫  202 x 110 x 15 mm 1
⑥  1150 x 440 x 12 mm 1	⑬  202 x 110 x 15 mm 1
⑦  440 x 200 x 12 mm 1	⑭  382 x 12 x 12 mm 3

Assembly Instructions

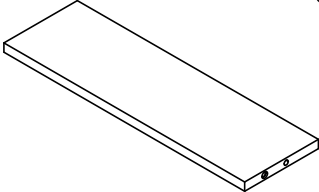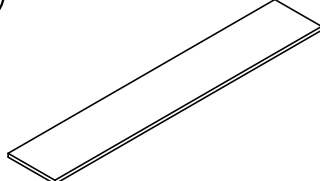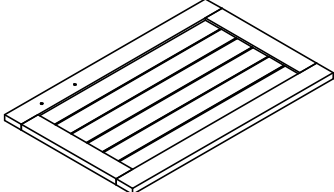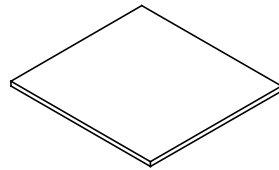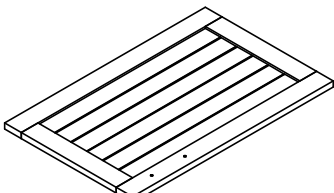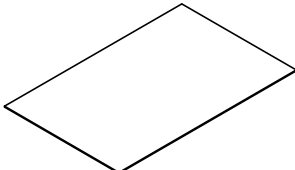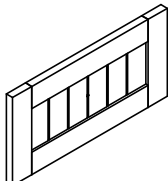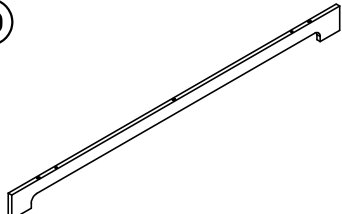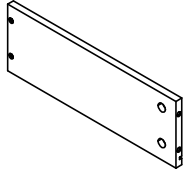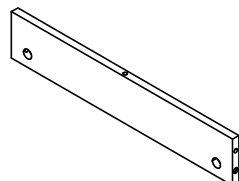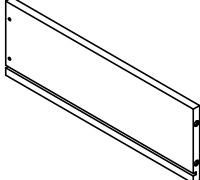15  361 x 110 x 12 mm 1	22  90 x 70 x 18 mm 5
16  207 x 170 x 15 mm 2	23  1200 x 207 x 15 mm 2
17  207 x 170 x 15 mm 2	24  578 x 370 x 12 mm 1
18  405 x 375 x 12 mm 2	25  578 x 370 x 12 mm 1
19  592 x 382 x 15 mm 3	26  370 x 183 x 12 mm 3
20  1180 x 76 x 12 mm 2	27  350 x 117 x 12 mm 3
21  416 x 76 x 12 mm 2	28  350 x 117 x 12 mm 3

Assembly Instructions


29

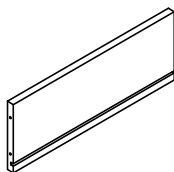

326 x 117 x 12 mm

3

30

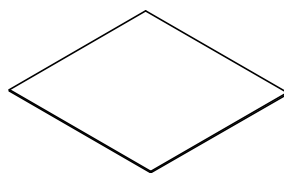


345 x 334 x 3 mm


3

Assembly Instructions

Step 1

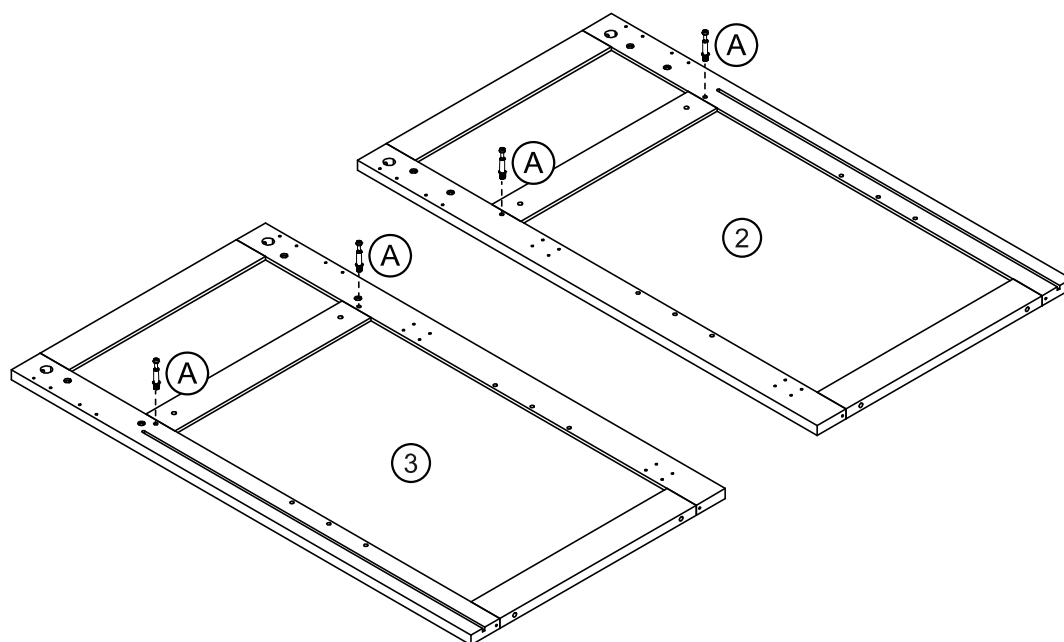


A




Cam Bolt x 4

Step 2

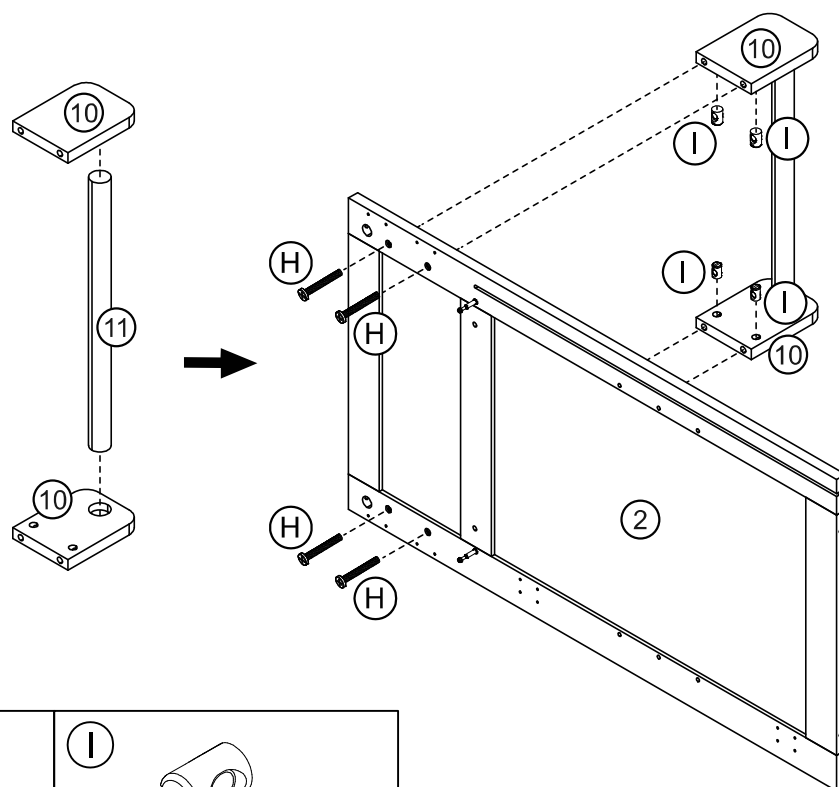

H



6*45mm Screw x 4


I




Vertical nut x 4

Assembly Instructions

Step 3



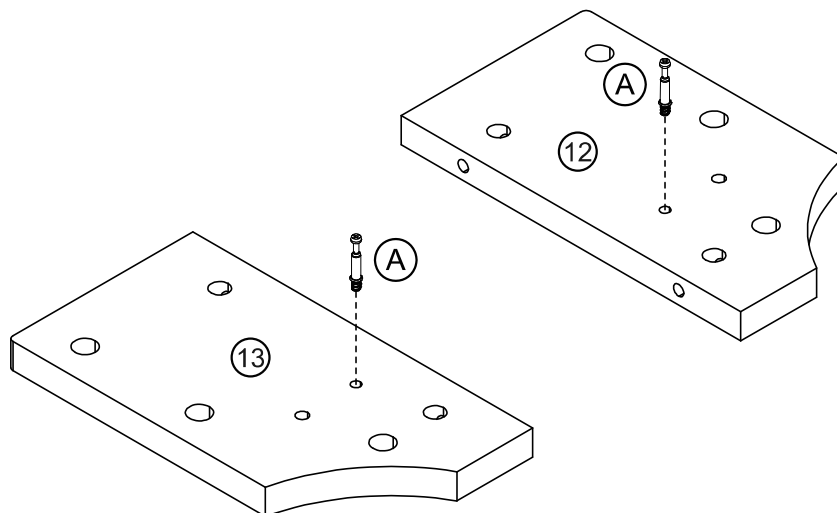


(A)



Cam Bolt x 2

Step 4

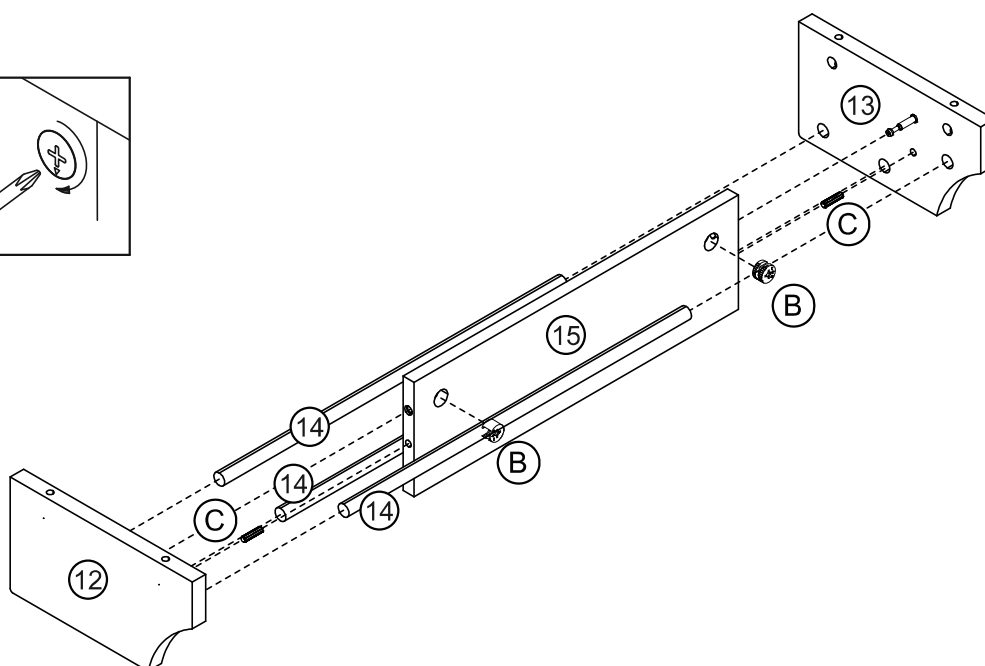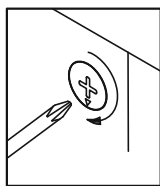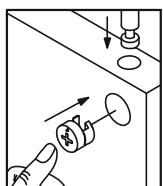

(B)



Cam lock x 2


(C)




6*30mm Dowel x 2

Assembly Instructions

Step 5

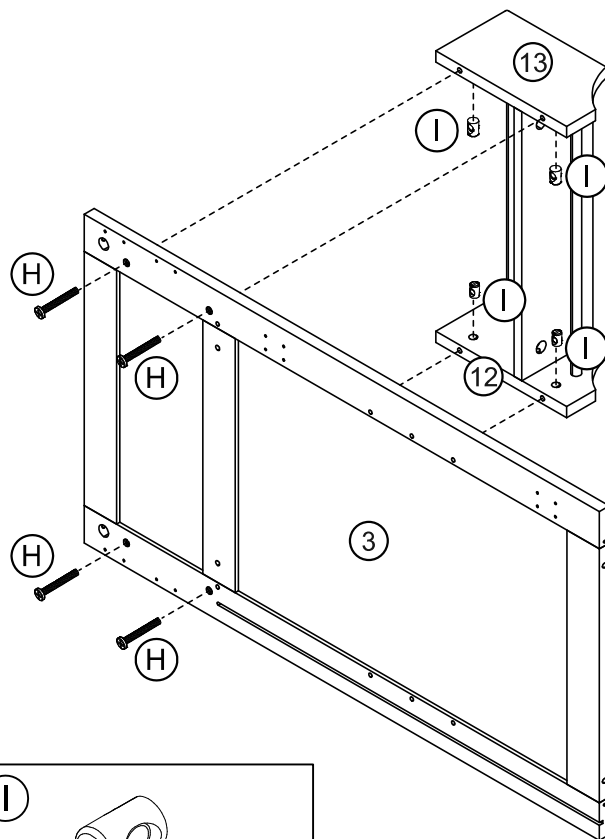


(H)




6*45mm Screw x 4

(I)




Vertical nut x 4

Step 6

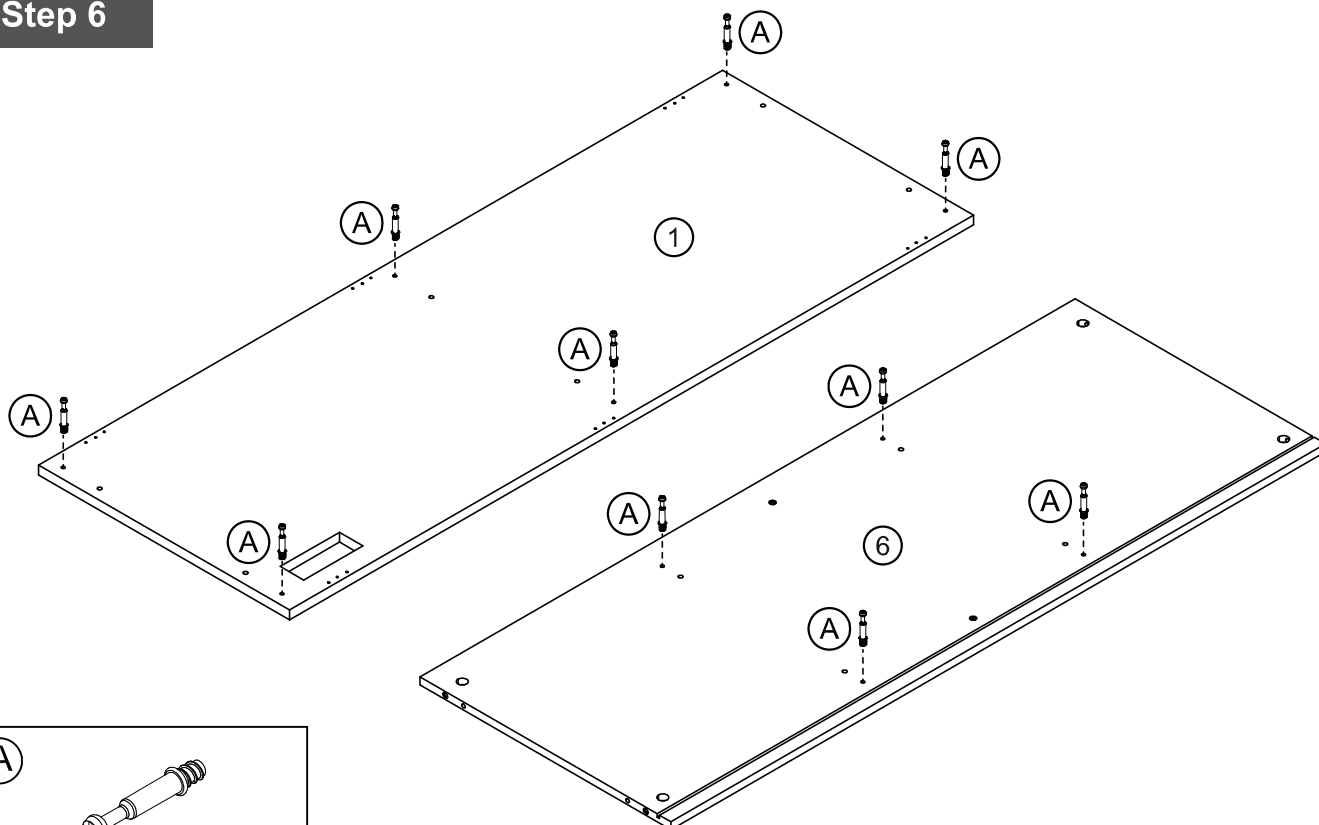


(A)



Cam Bolt x 10

Assembly Instructions

Step 7

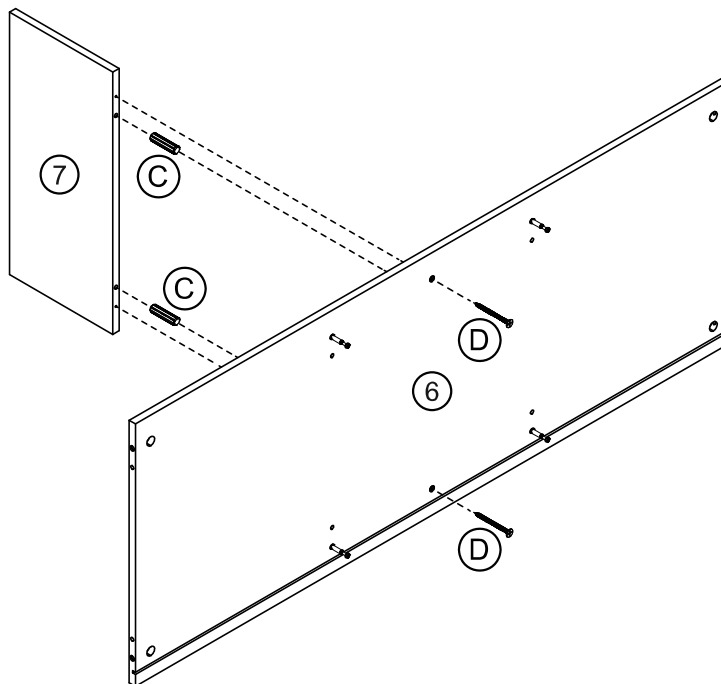

(C)




6*30mm Dowel x 2

(D)



4*35mm Screw x 2

Step 8

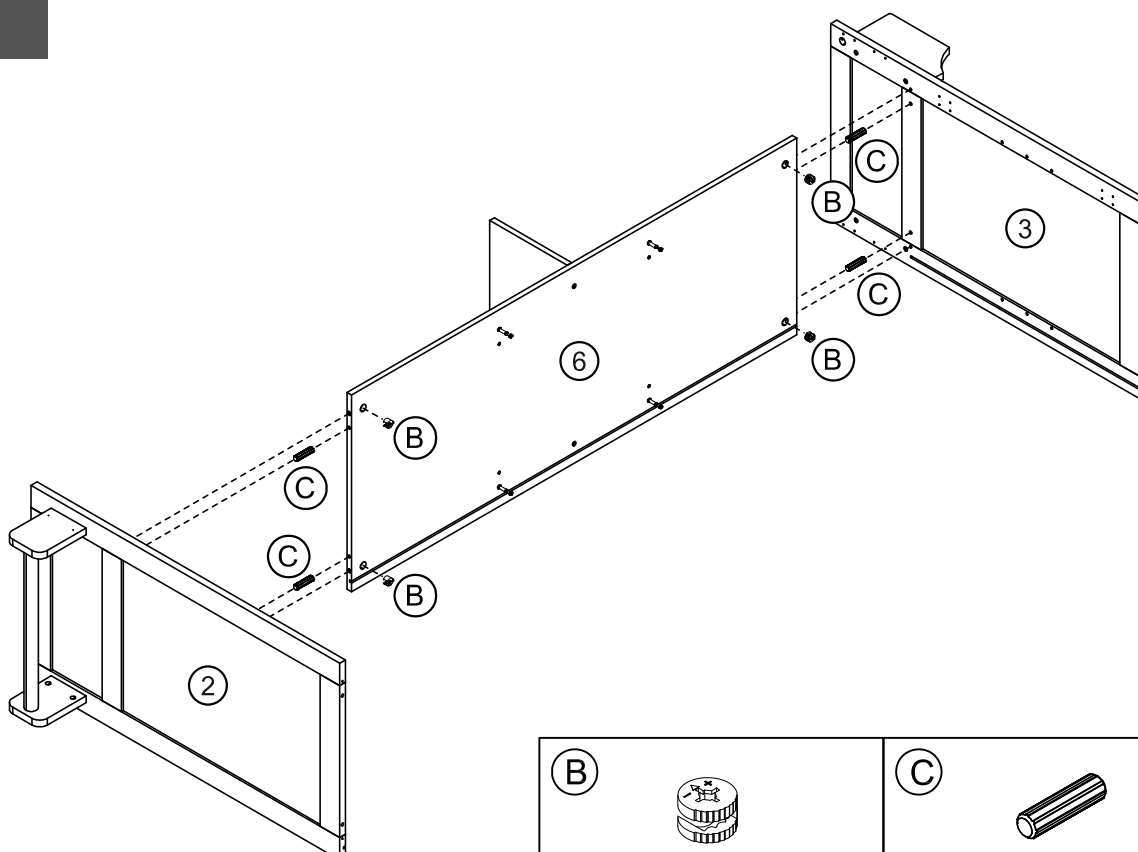

(B)



Cam lock x 4


(C)



6*30mm Dowel x 4

Assembly Instructions

Step 9

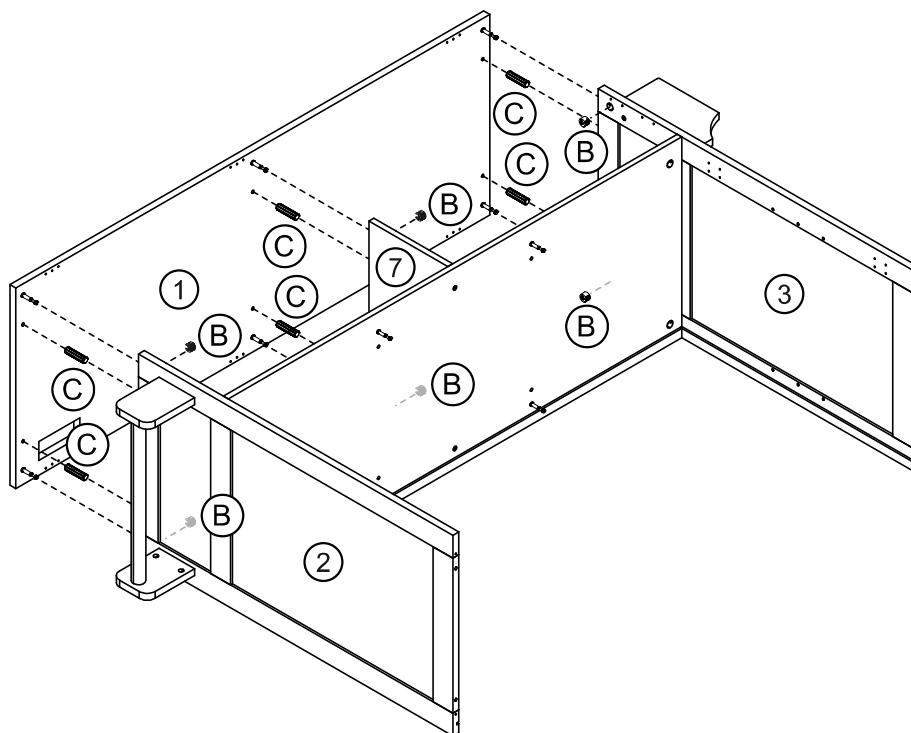

(B)




Cam lock x 6

(C)




6*30mm Dowel x 6

Step 10

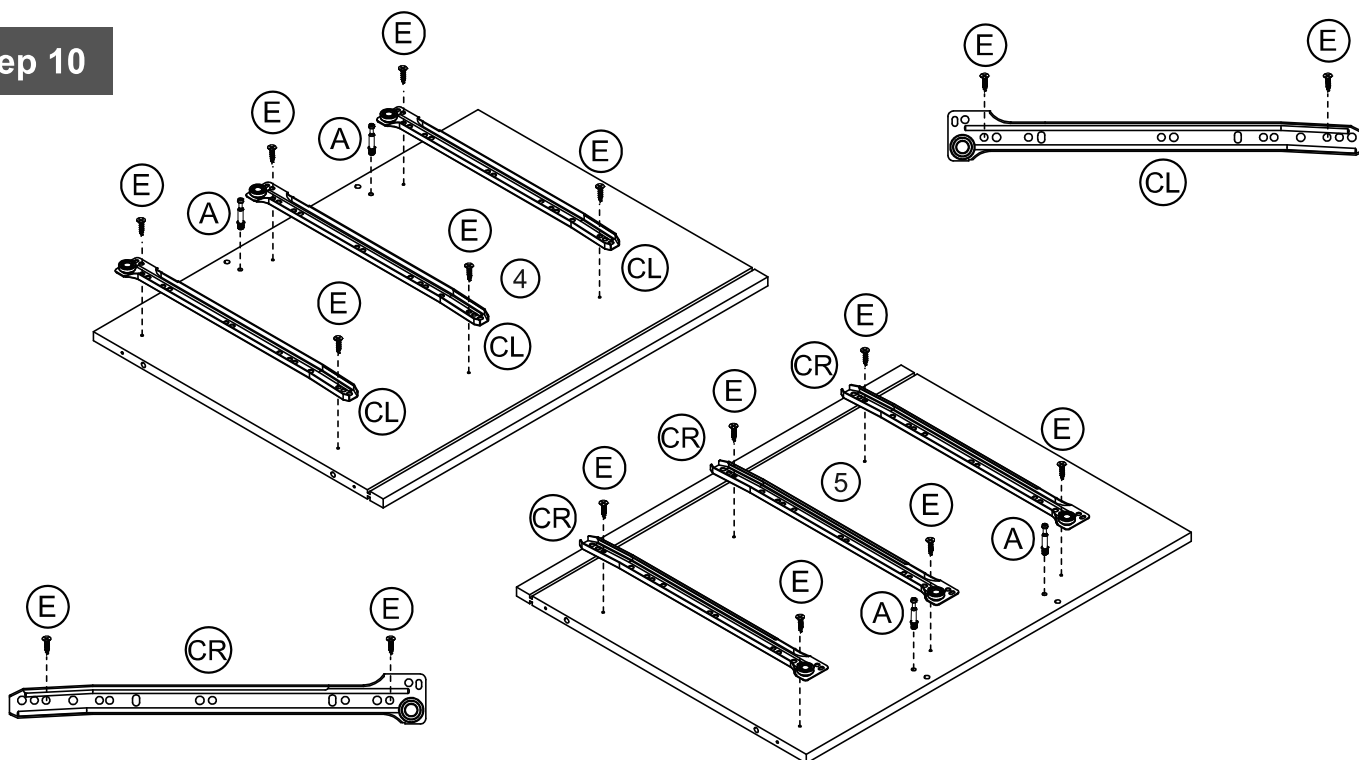

(A)




Cam Bolt x 4

(E)



3.5*12mm Screw x 12

(CR)



Runner 350mm x 3


(CL)



Runner 350mm x 3

Assembly Instructions

Step 11

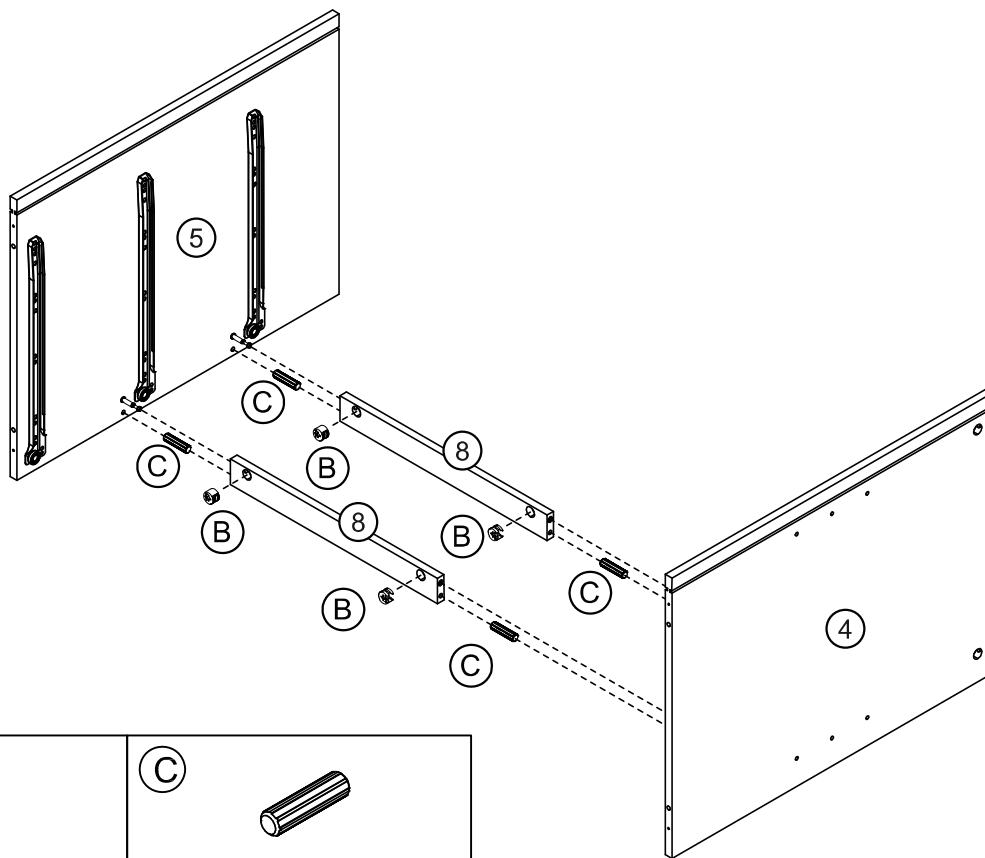

(B)




Cam lock x 4

(C)



6*30mm Dowel x 4

Step 12

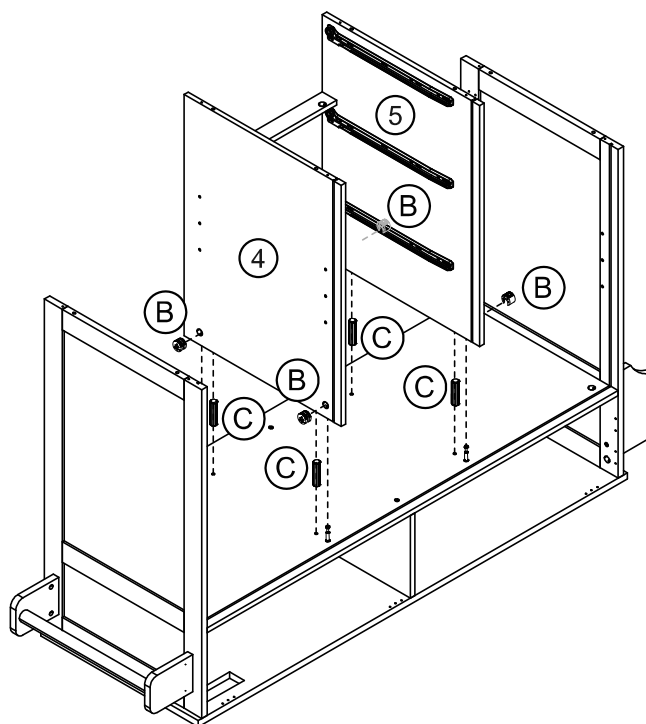

(B)



Cam lock x 4


(C)




6*30mm Dowel x 4

Assembly Instructions


Step 13

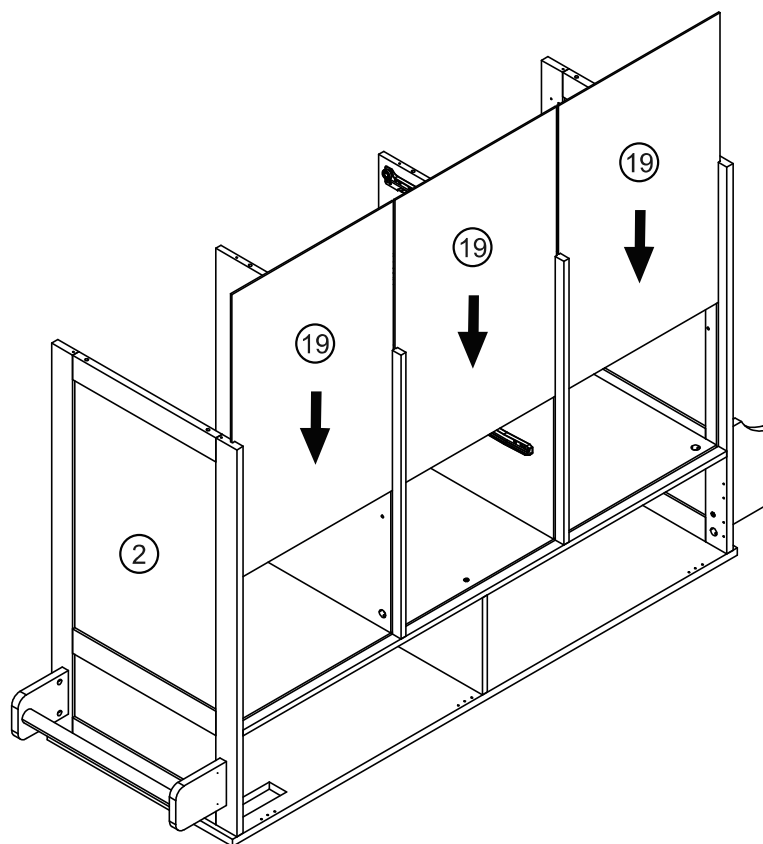

Step 14

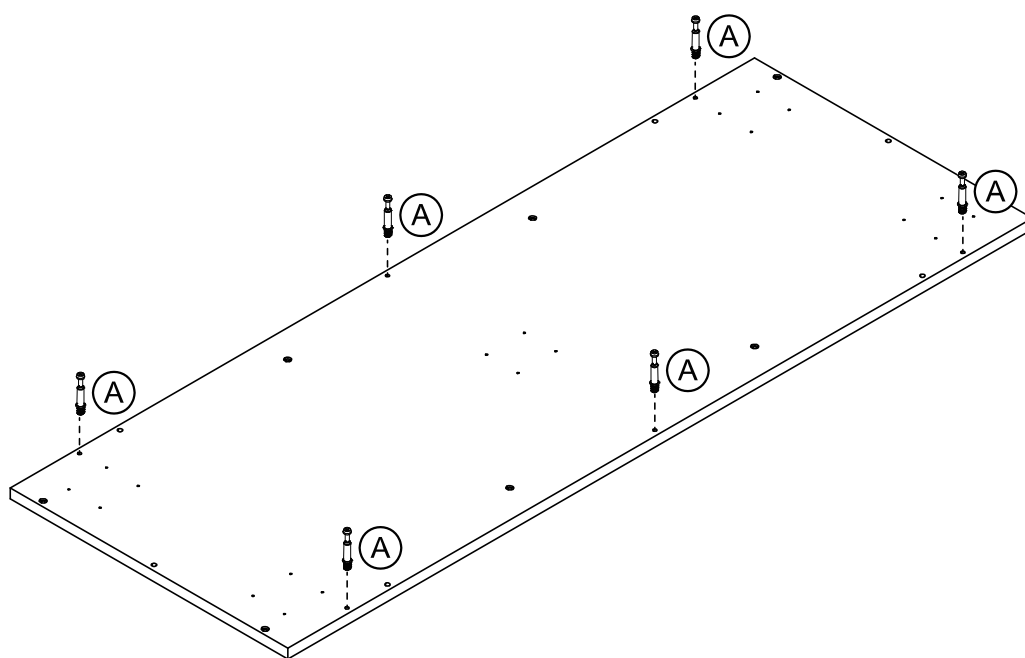


A



Cam Bolt x 6

Assembly Instructions

Step 15

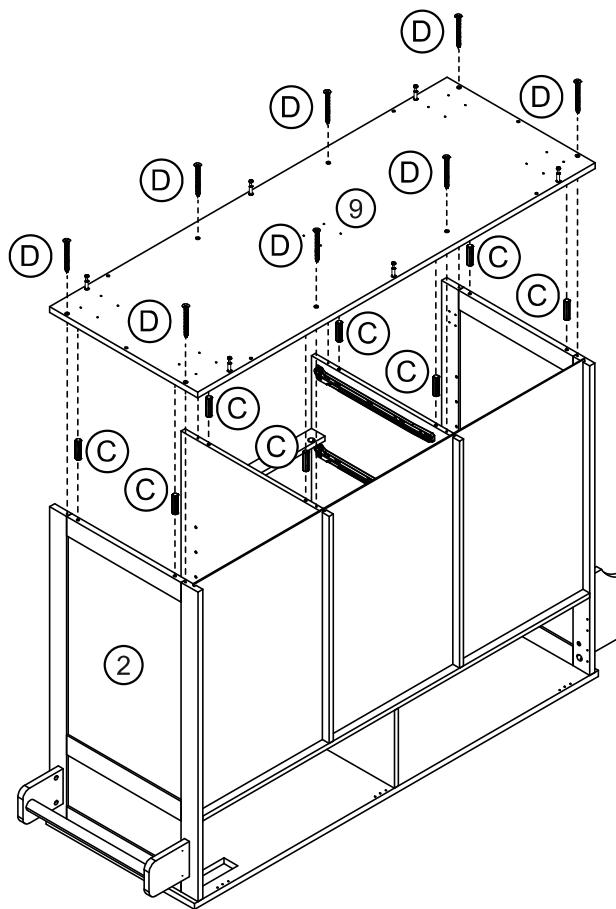

(C)




6*30mm Dowel x 8

(D)




4*35mm Screw x 8

Step 16

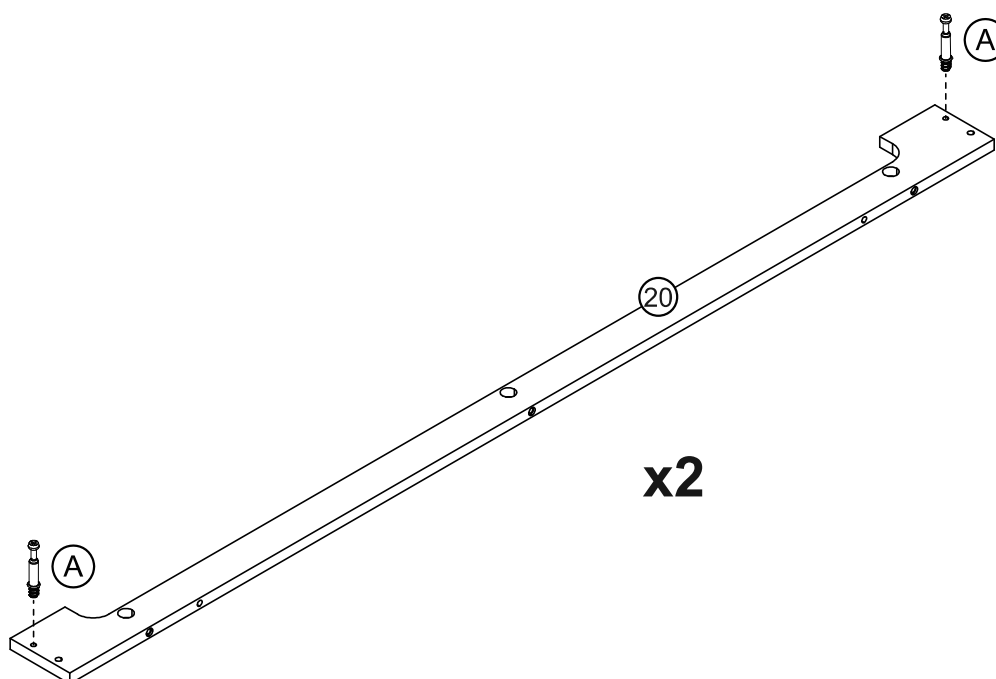


(A)



Cam Bolt x 4

Assembly Instructions

Step 17

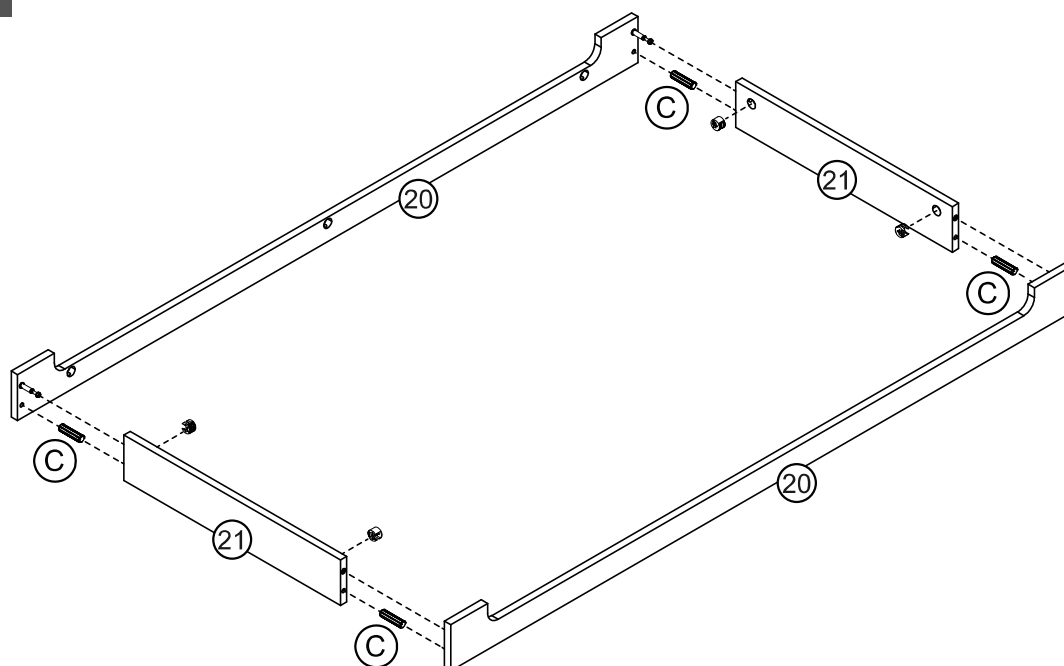

(B)




Cam lock x 4

(C)



6*30mm Dowel x 4

Step 18

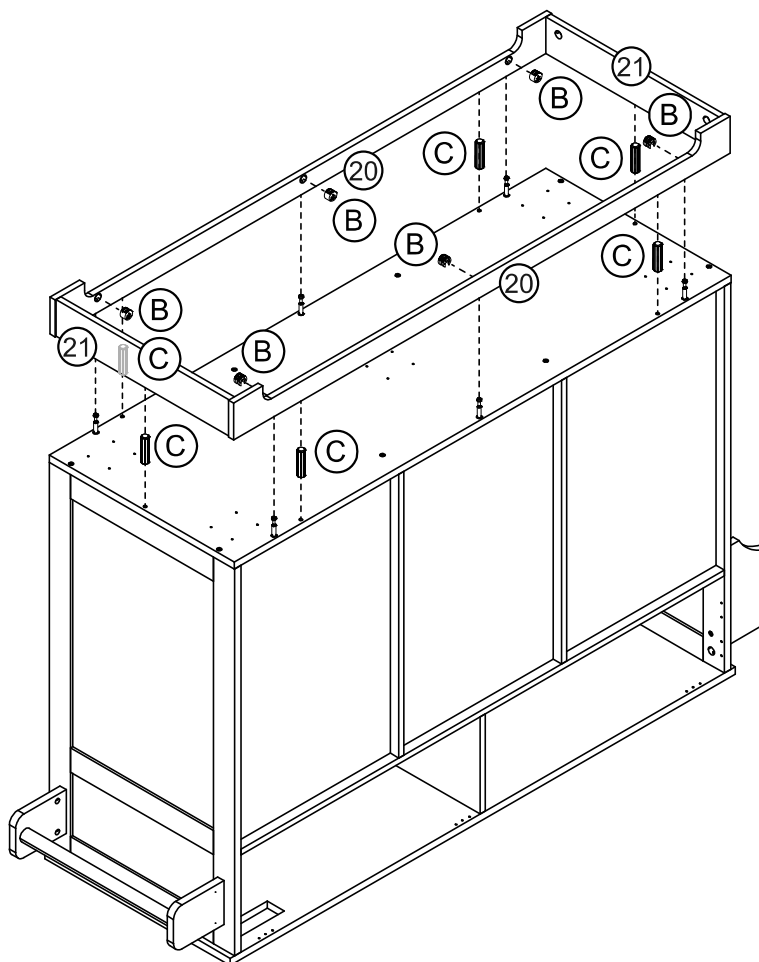

(B)



Cam lock x 6

(C)




6*30mm Dowel x 6


Assembly Instructions

Step 19

If you do not want to move this kitchen island cart, you may not install this step.

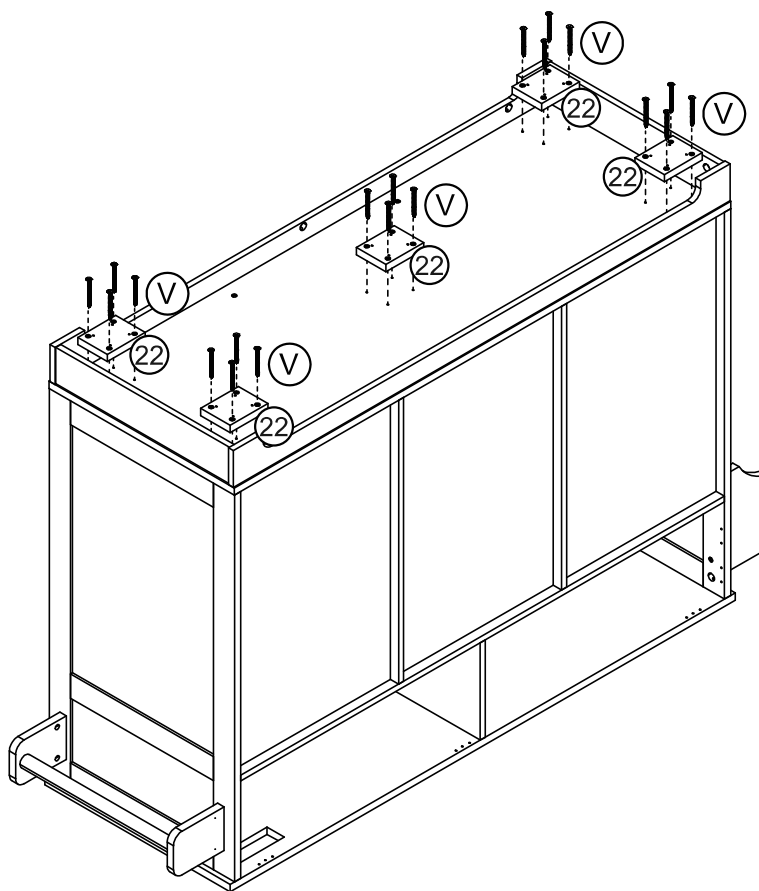


(V)



4*25mm Screw x 20

Step 20

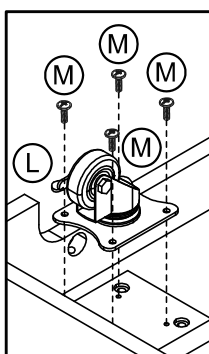


(M)




6*14mm Screw x 20

(L)




Locking caster x 2

(K)




Caster x 3

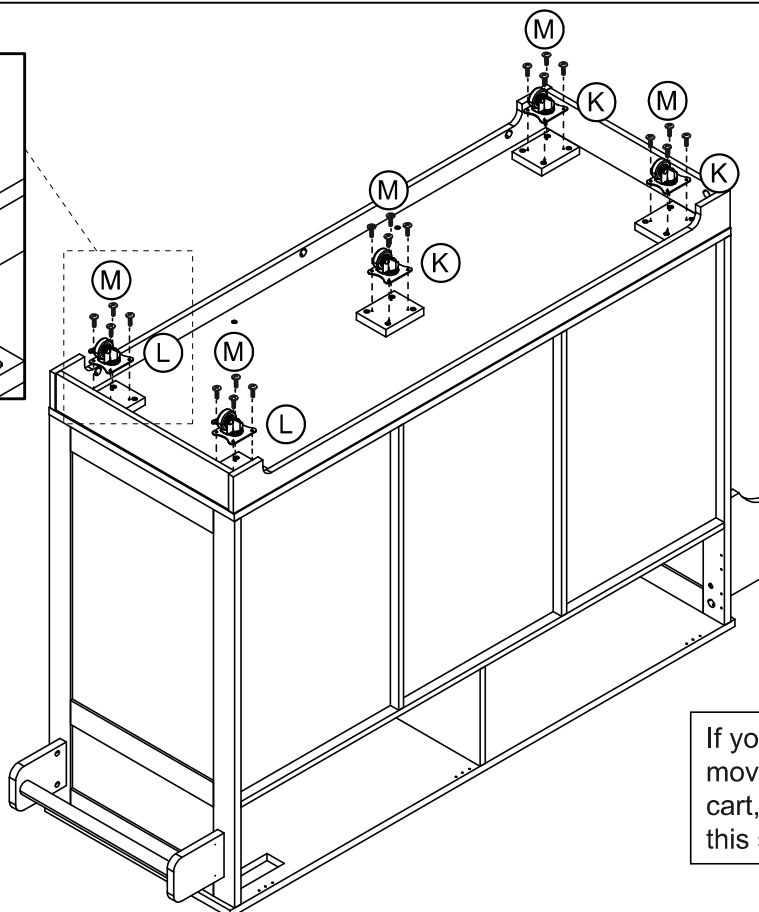

If you do not want to move this kitchen island cart, you may not install this step.

Assembly Instructions

Step 21

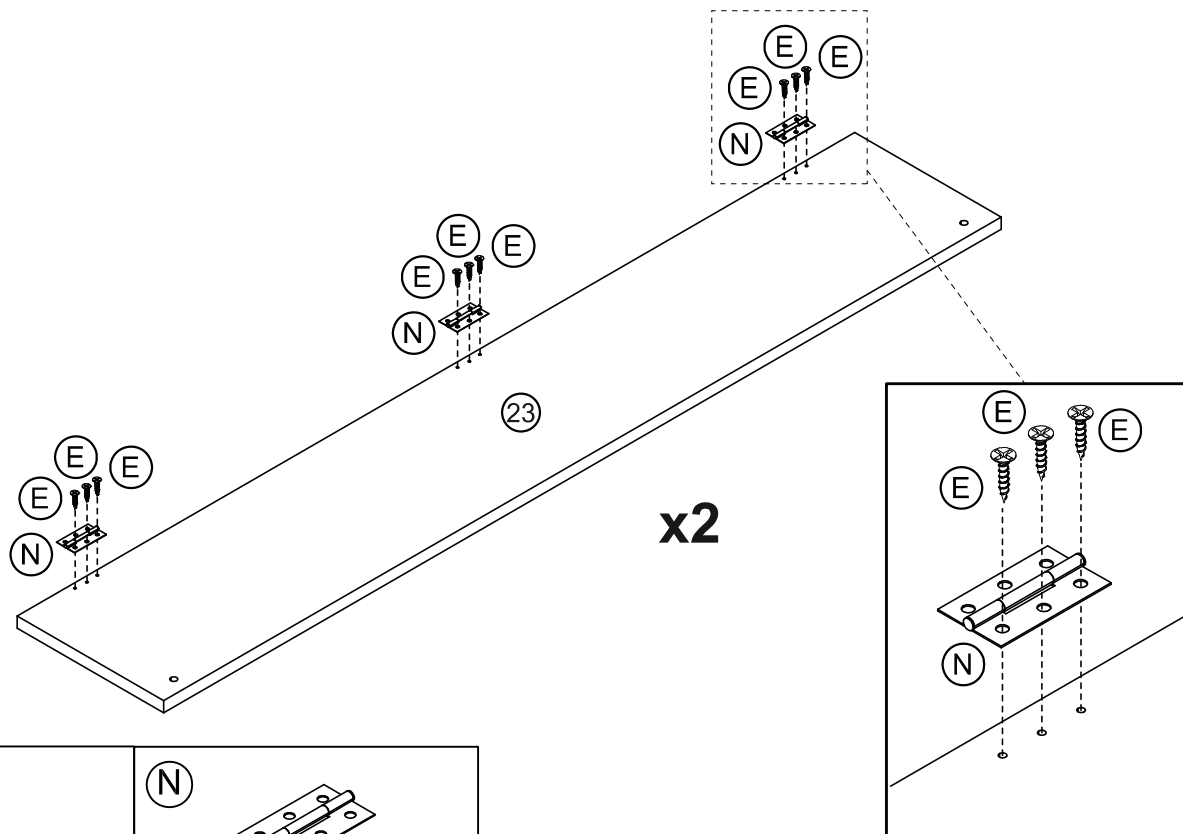


(E)




3.5*12mm Screw x 18

(N)



hinge x 6

Step 22

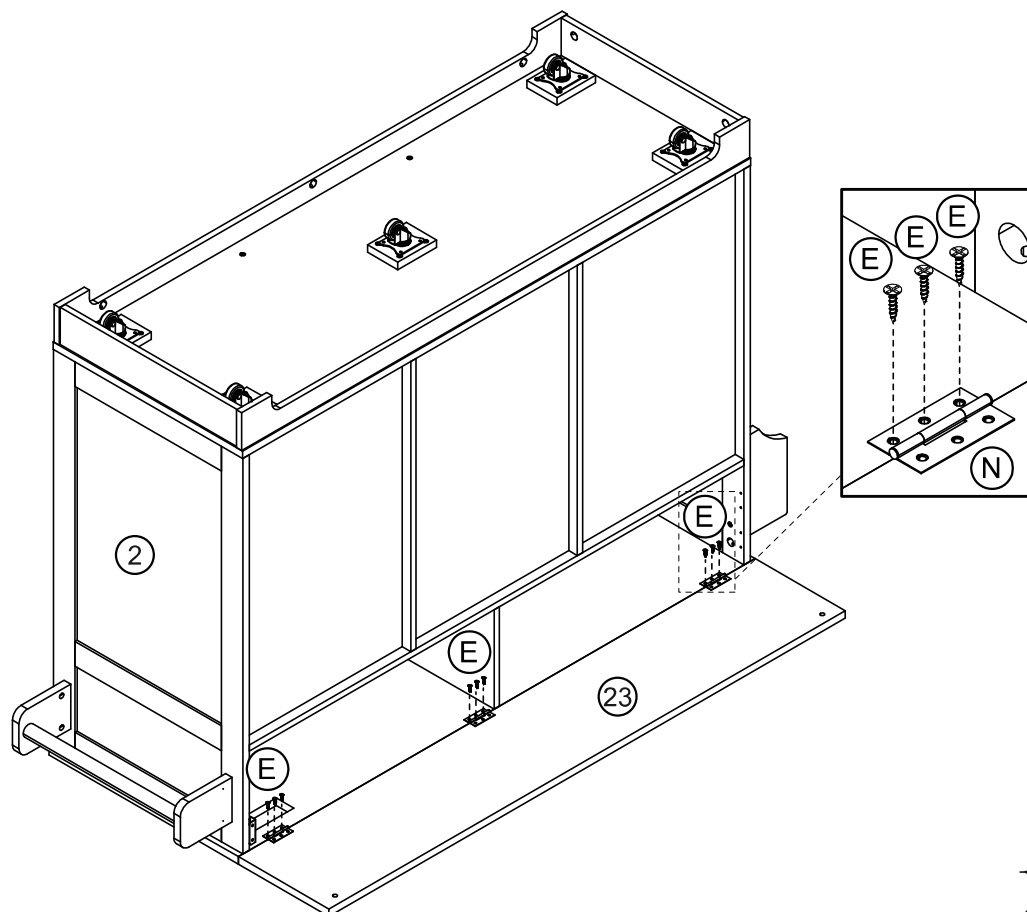


(E)



3.5*12mm Screw x 9

Assembly Instructions

Step 23

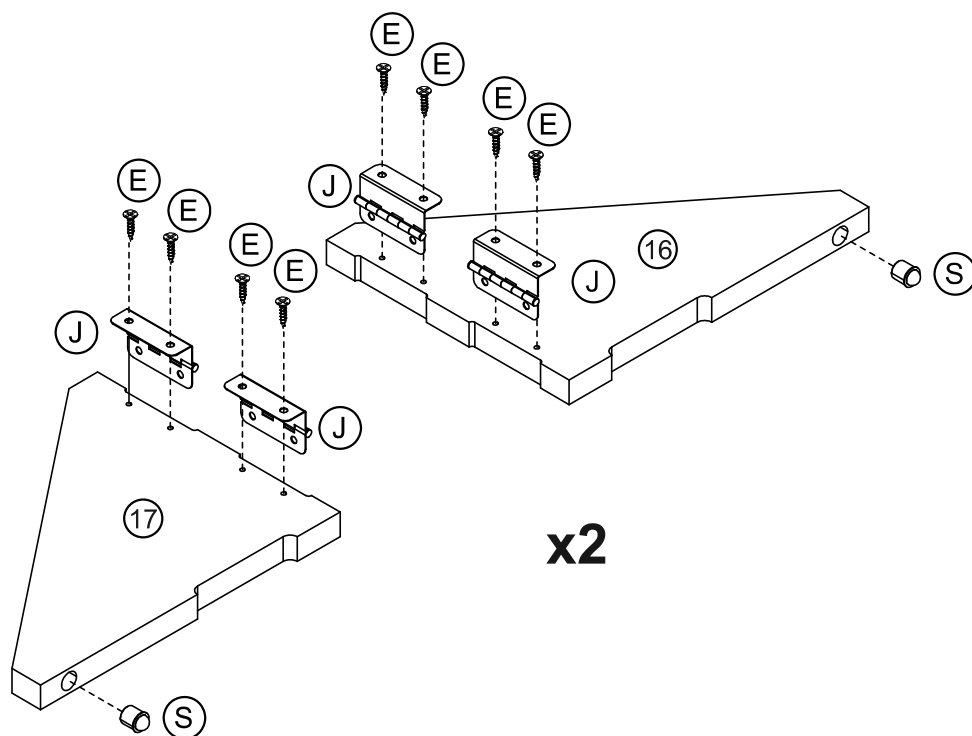


(E)



3.5*12mm Screw x 16

(J)

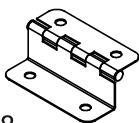


hinge x 8

(S)



Pressure ball x 4

Step 24

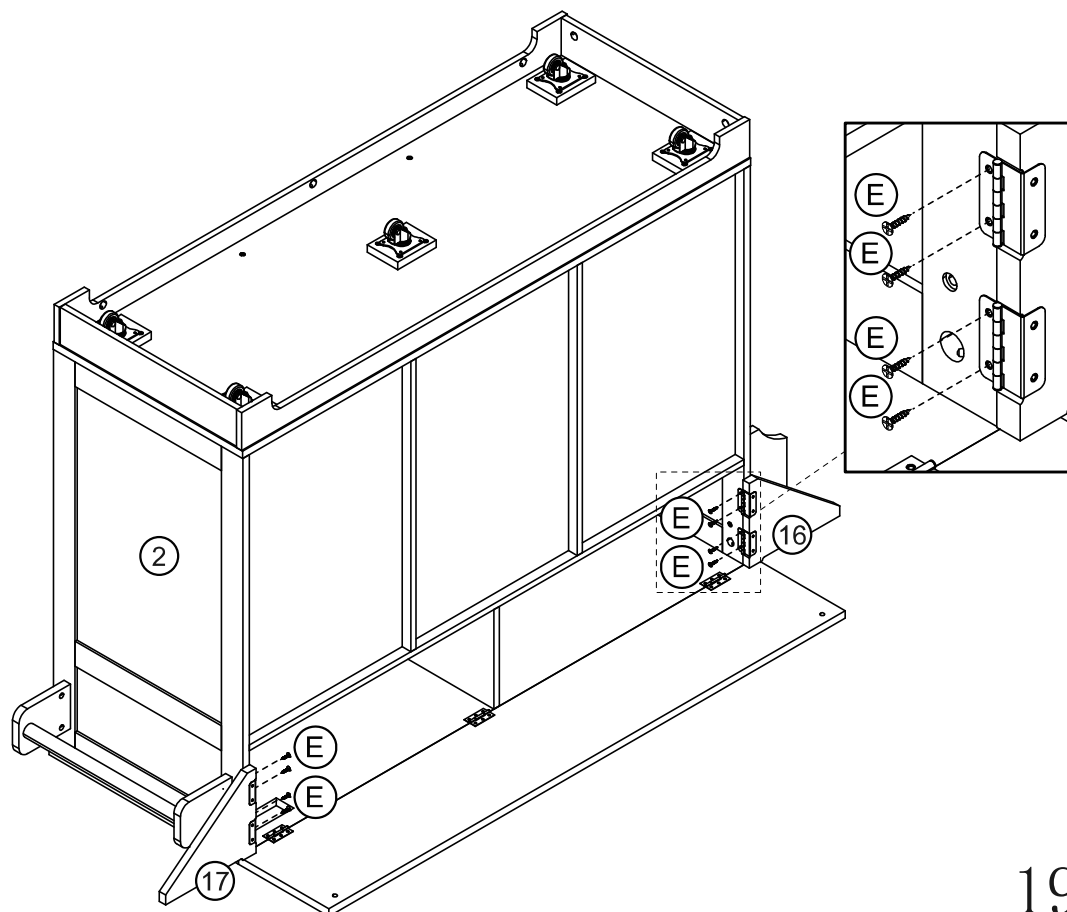


(E)



3.5*12mm Screw x 8

Assembly Instructions

Step 25

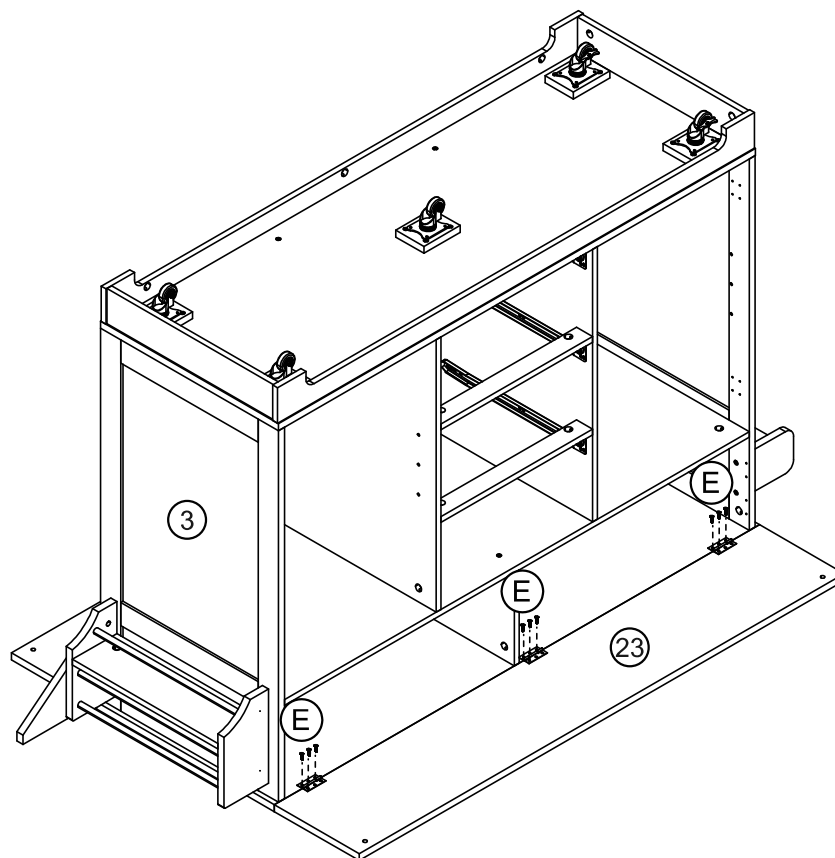


(E)



3.5*12mm Screw x 9

Step 26

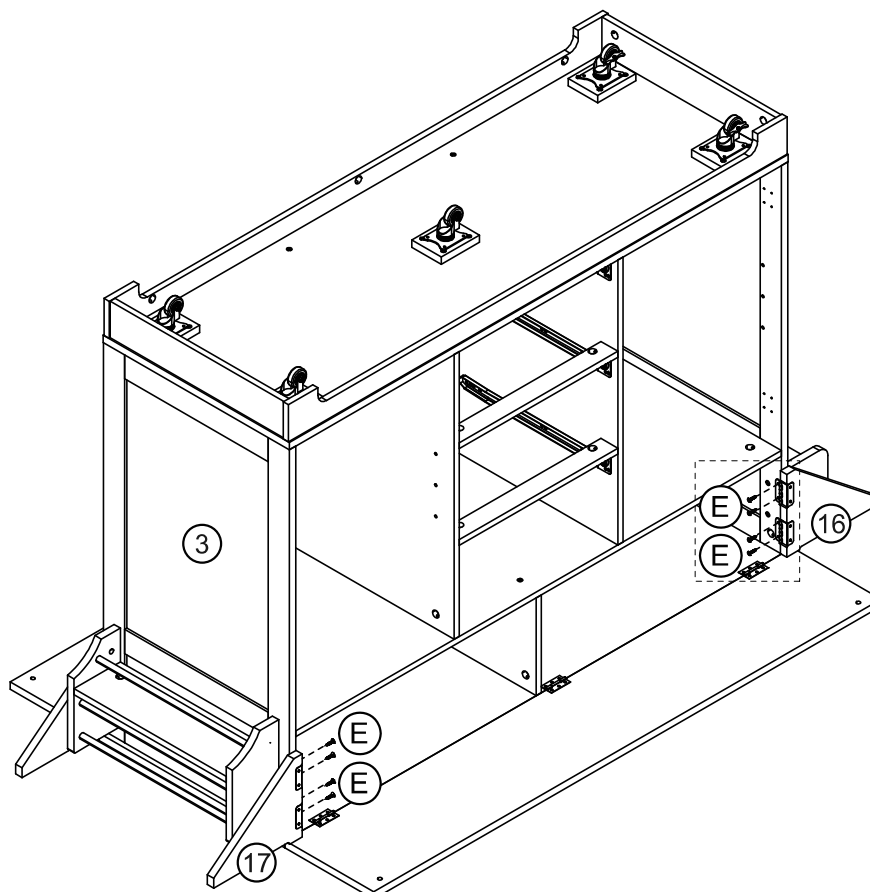




(E)



3.5*12mm Screw x 8


Assembly Instructions

Step 27

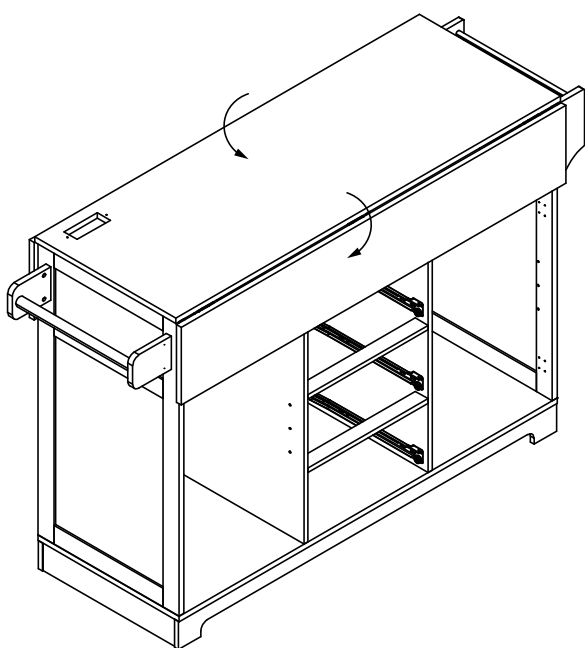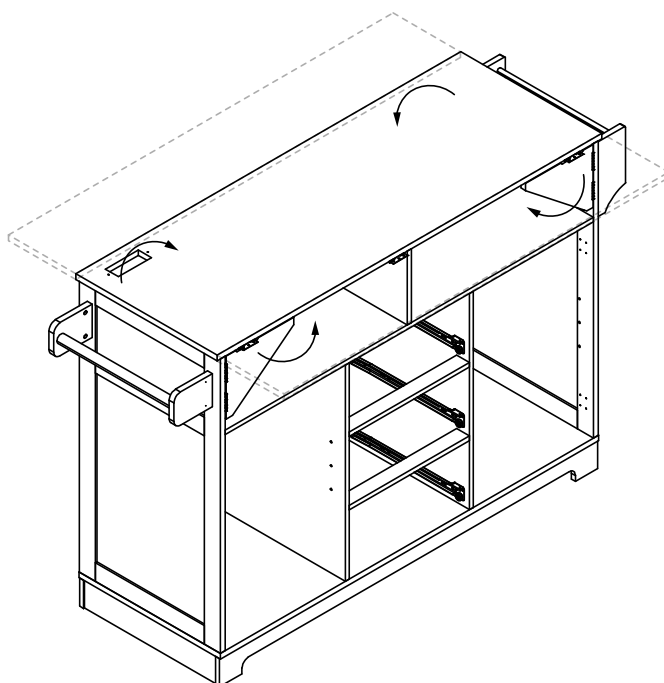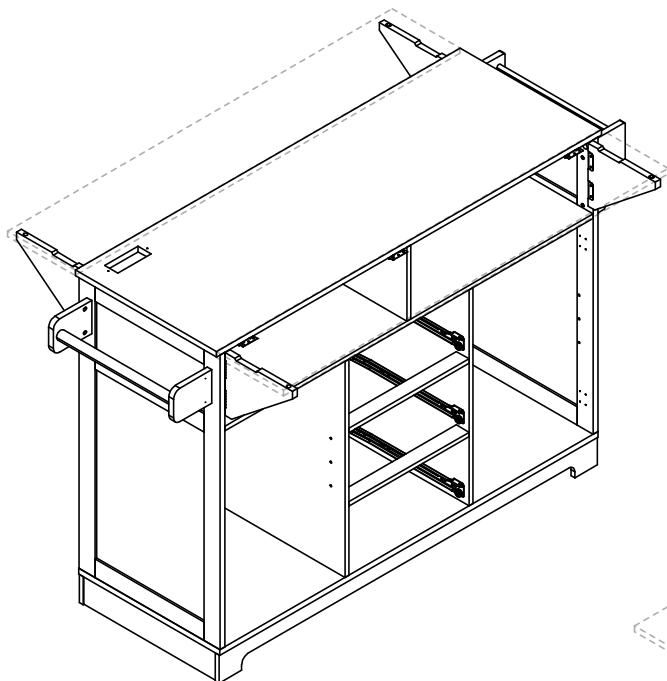

Assembly Instructions

Step 28

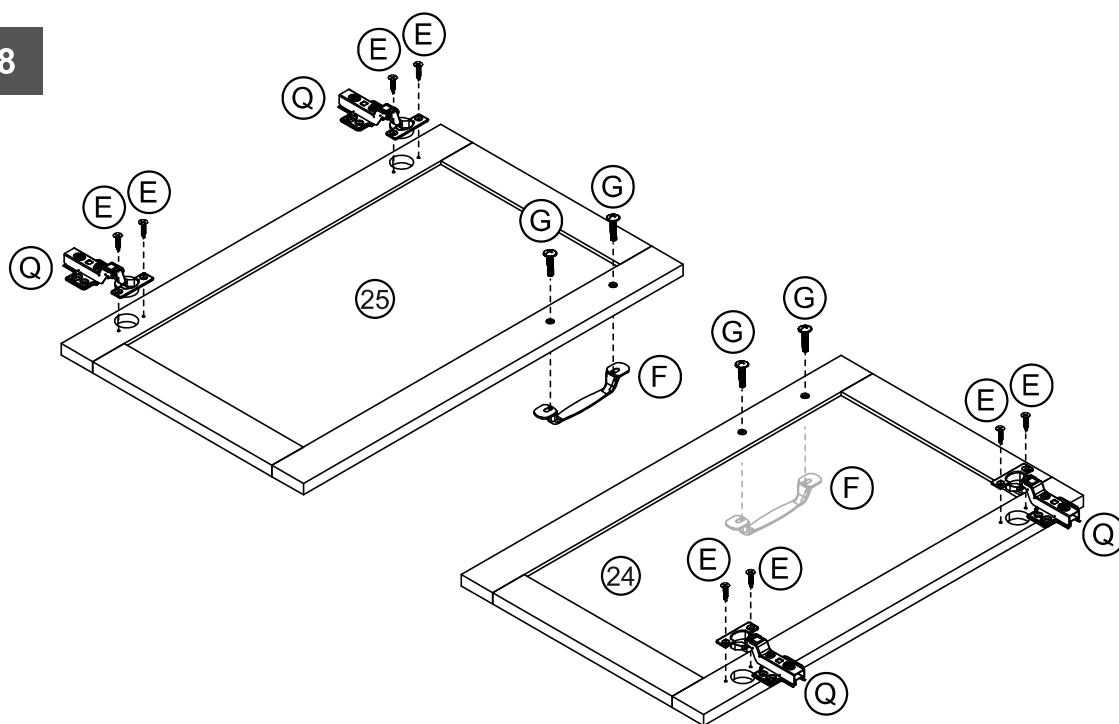


(E)



3.5*12mm Screw x 8

(F)




Hold hands x 2

(G)




4*16mm Screw x 4

(Q)



26mm x 4

Step 29

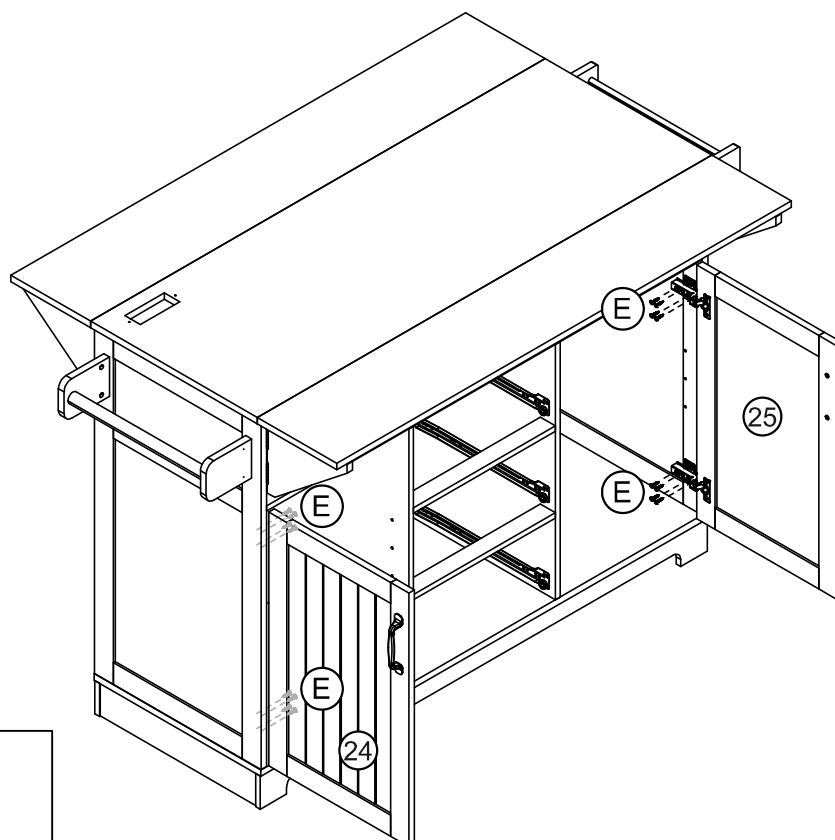


(E)




3.5*12mm Screw x 16

Assembly Instructions

Step 30

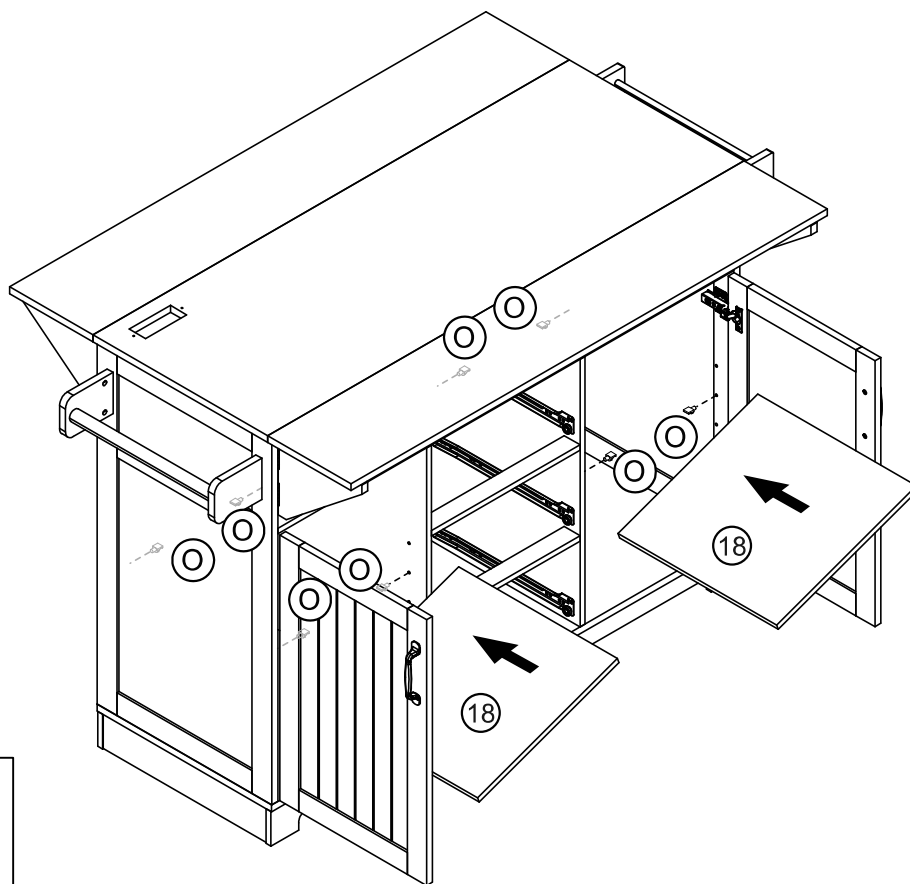


O




Pivot x 8

Step 31

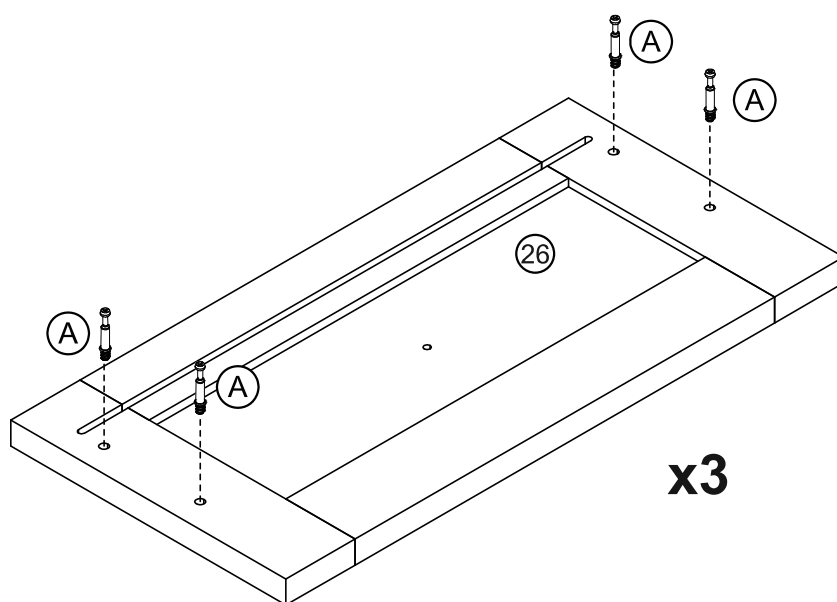


A



Cam Bolt x 12

Assembly Instructions

Step 32

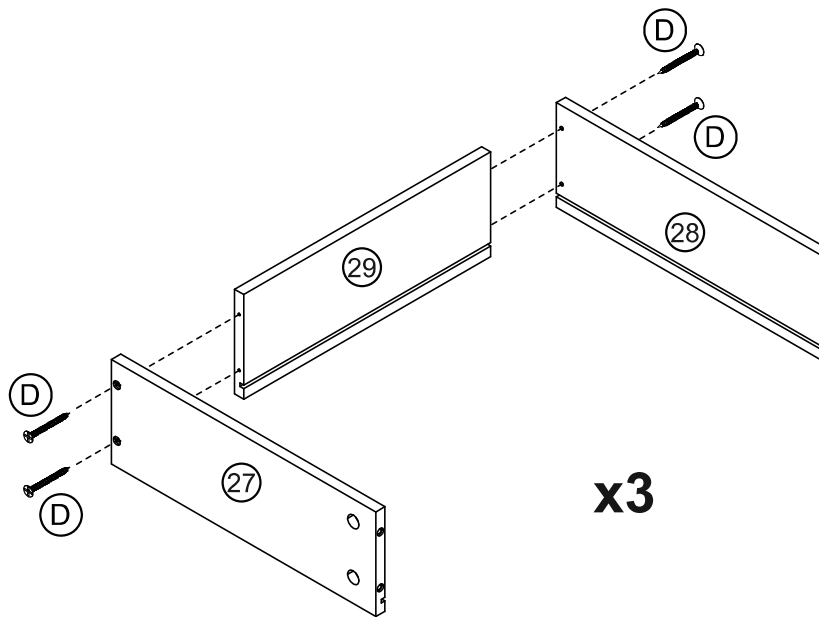


(D)




4*35mm Screw x 12

Step 33

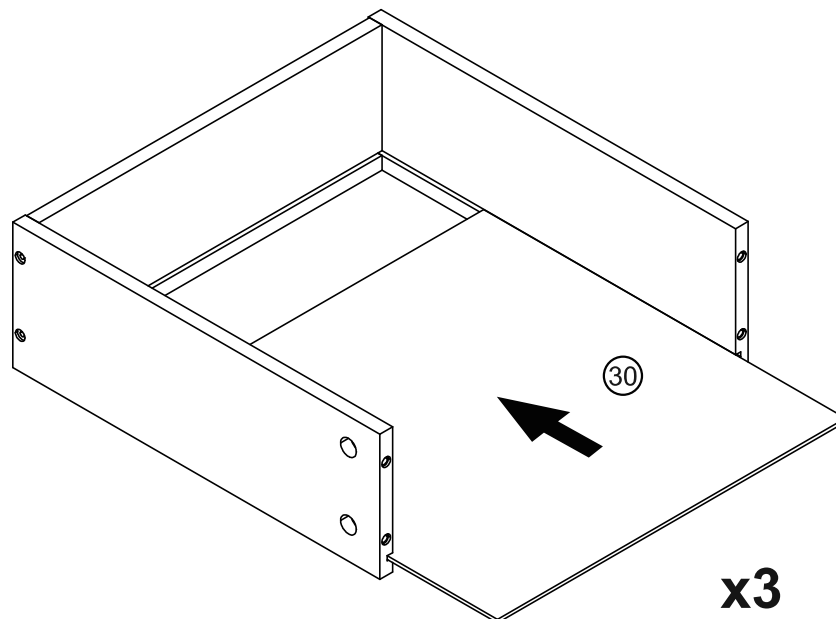

Assembly Instructions

Step 34

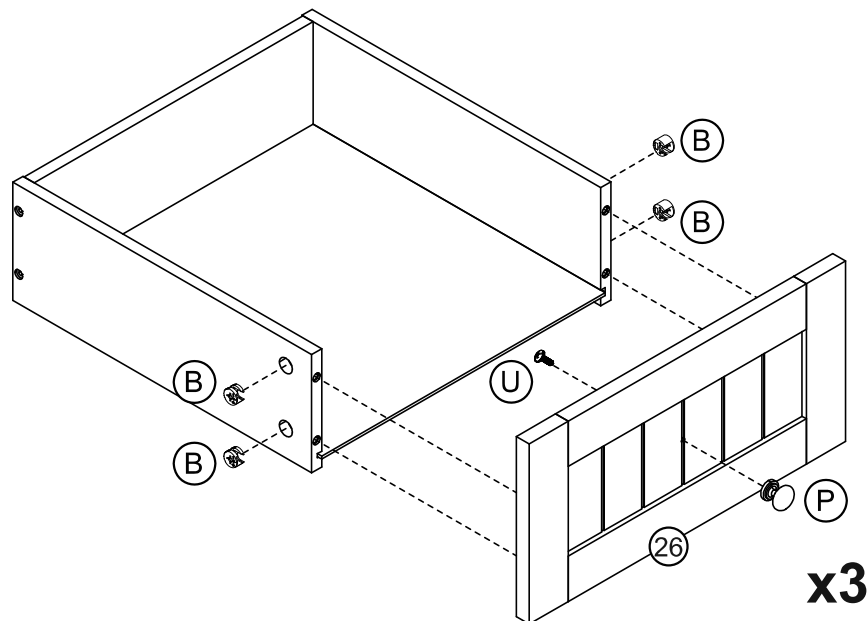

(B)



Cam lock x 12

(P)




Hold hands x 3

(U)



4*10mm Screw x 3

Step 35

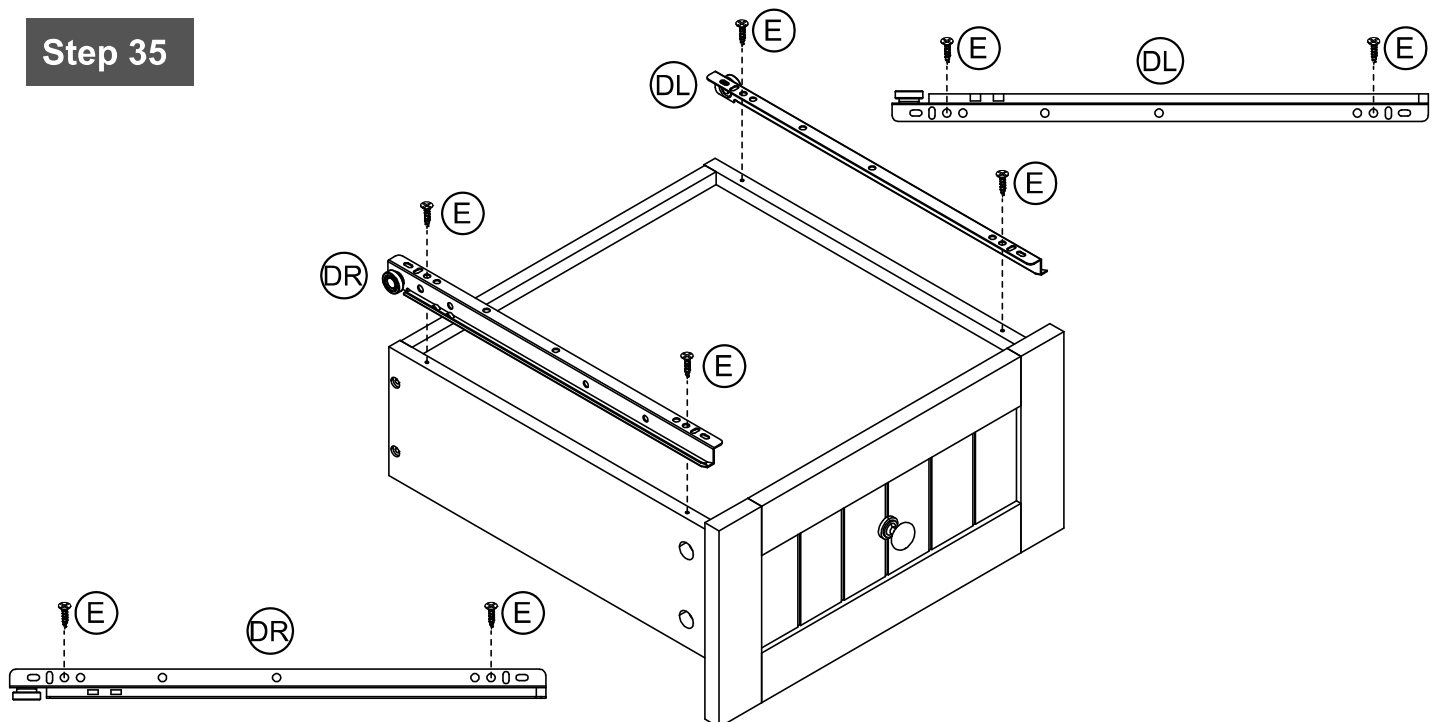


(E)




3.5*12mm Screw x 12

(DR)



Runner 350mm x 3


(DL)





Runner 350mm x 3

Assembly Instructions

Step 36


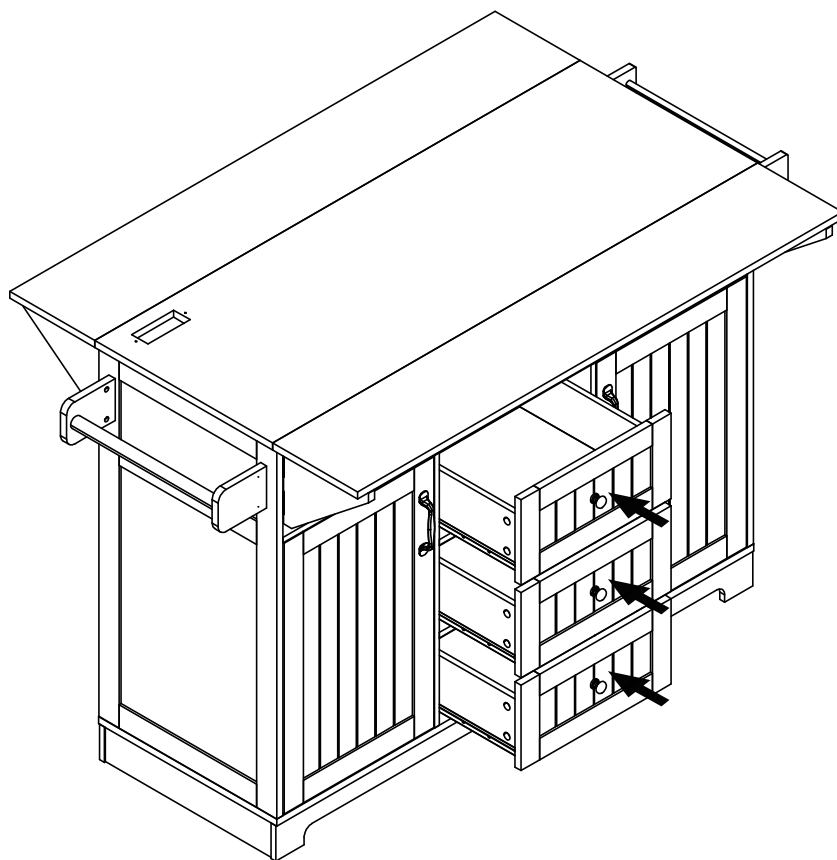


Step 37

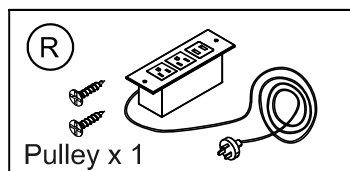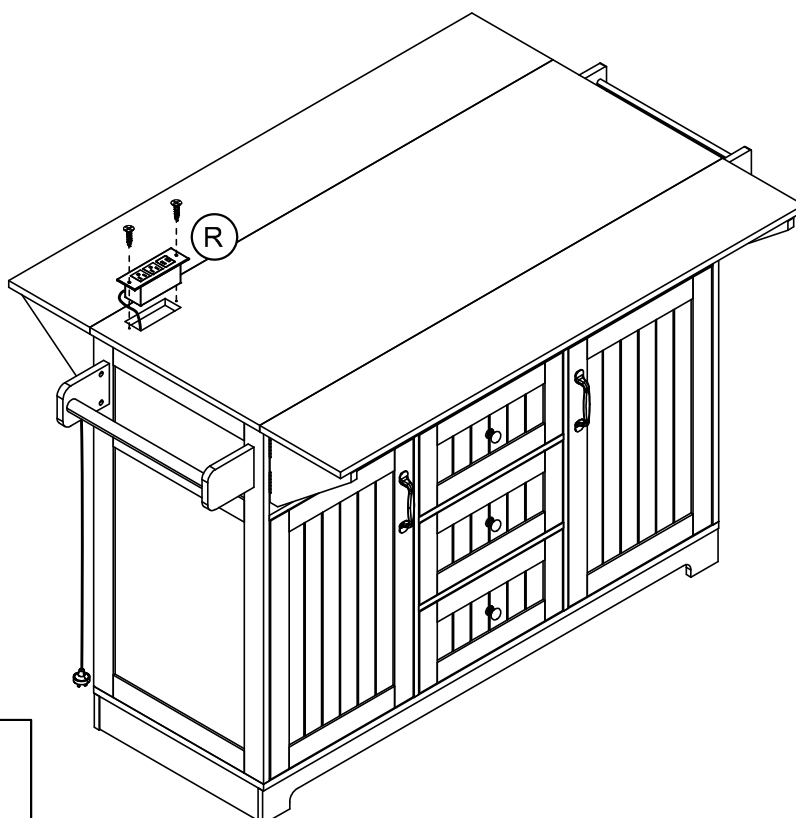

Assembly Instructions

Step 38

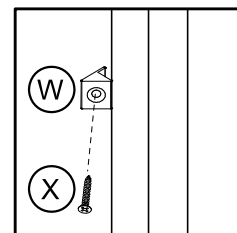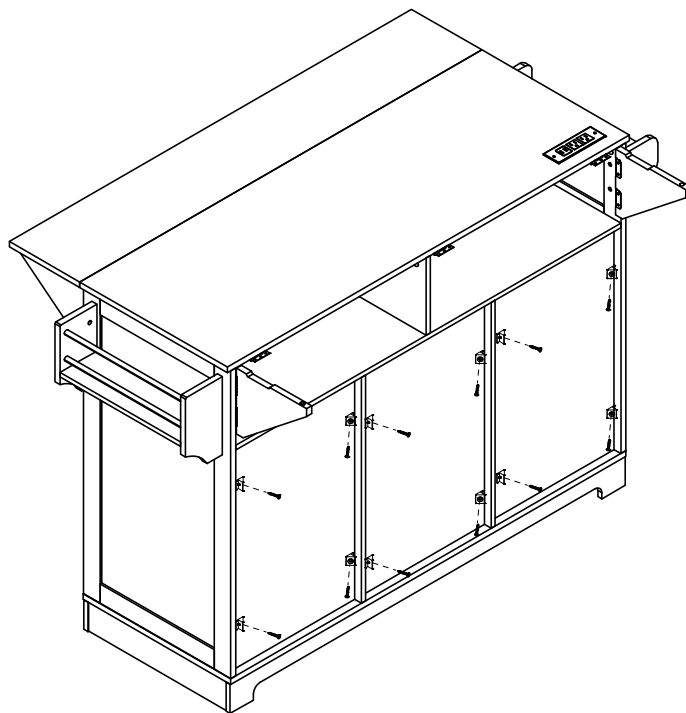


(W)



Back plate buckle x 12

(X)



3*14mm Screw x 12

Step 39

