


ASSEMBLY INSTRUCTIONS

TEAK TROLLEY CART IT-300240T

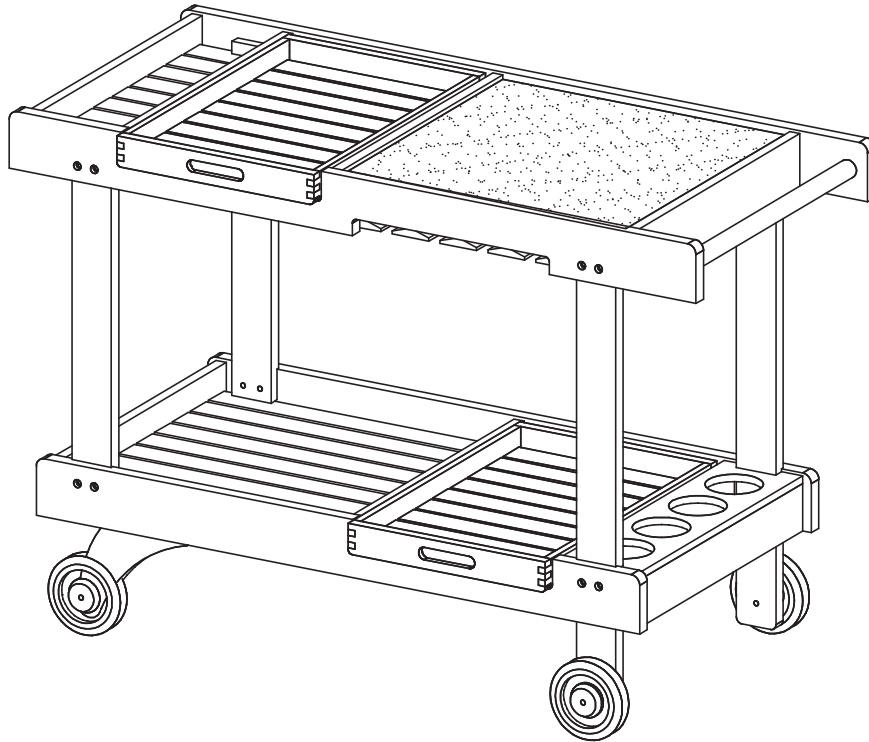

Scan me for assembly video
A gift is waiting for you!

Customer Service Information

Please email us at info@cambridge-casual.com for assembly tips, report damage, or request parts.
For faster response, please write down item number, code for missing parts,
attach the purchase receipt and picture of damaged parts.
Toll free number : 1-888-287-4275 from 9:00am to 5:00pm CST (Monday to Friday)

GENERAL INFORMATION & TIPS


1. Please read the assembly instructions prior to assembling the Trolley cart.
2. To avoid damage, assemble the Trolley cart on a non-abrasive surface such as carpet.
3. Make sure all bolts tightly fastened before the Trolley cart is used.
4. This Trolley cart is not for commercial use.

Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts.

1. Ø5 mm Allen Wrench (provided).
- For tightening all Ø 5/16" bolts.









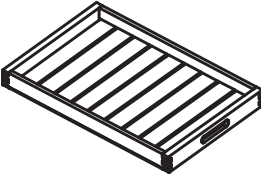
2. Wrench (provided).
- For tightening all Ø nuts.







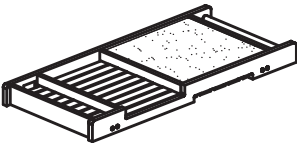

3. 8" Philips screwdriver (Not provided).
- For tightening all bolts and screws.




PARTS AND HARDWARE LIST

A1. Top frame	A2. Bottom frame	B1. Long leg	B2. Short leg
			
Qty : 1 Pc	Qty : 1 Pc	Qty : 2 Pcs	Qty : 2 Pcs
C1. Right bottom leg	C2. Left bottom leg	D. Tray	
			
Qty : 1 Pc	Qty : 1 Pc	Qty : 2 Pcs	

PARTS AND HARDWARE LIST


E. 3" Bolt	F. 1 1/2" Bolt	G. Nut	H. Washer
			
Qty : 4 Pcs + 1	Qty : 16 Pcs + 1	Qty : 4 Pcs + 1	Qty : 8 Pcs + 1
I. Wheel	J. 1" Screw		
			
Qty : 4 Pcs	Qty : 6 Pcs + 1		

STEP 1

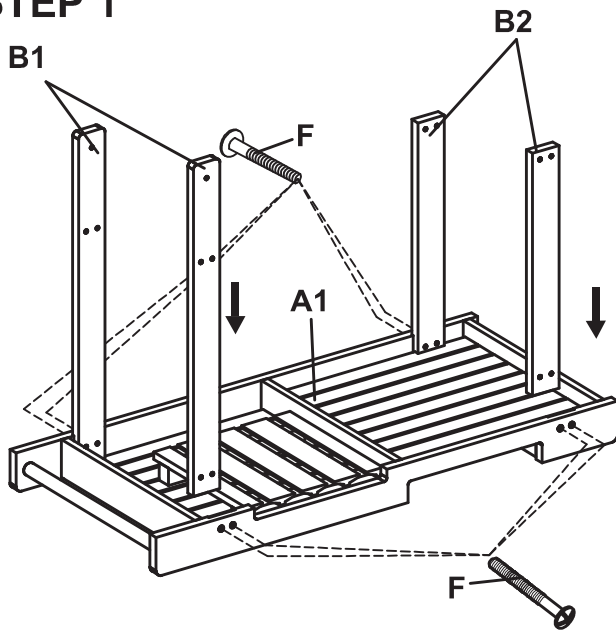


Attach long legs (B1) and short legs (B2) on to top frame (A1). Insert 1 1/2" Bolts (F) using screwdriver. As picture shown.

STEP 2

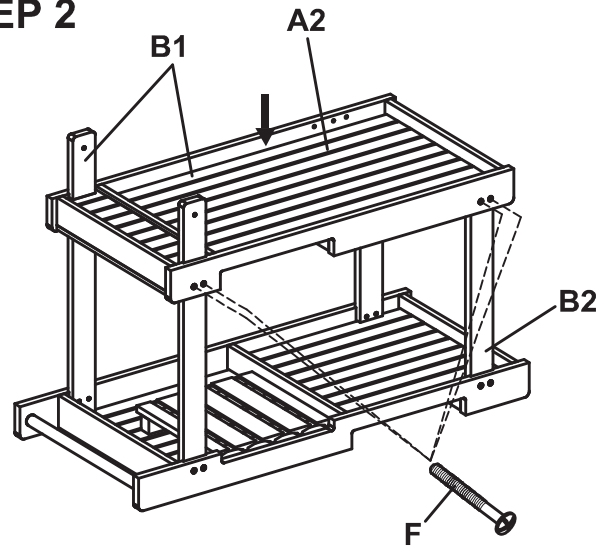


Attach bottom frame (A2) on to legs (B1&B2). Insert 1 1/2" Bolts (F), make sure all part are correctly connected and fully tighten the bolts using screwdriver.

STEP 3

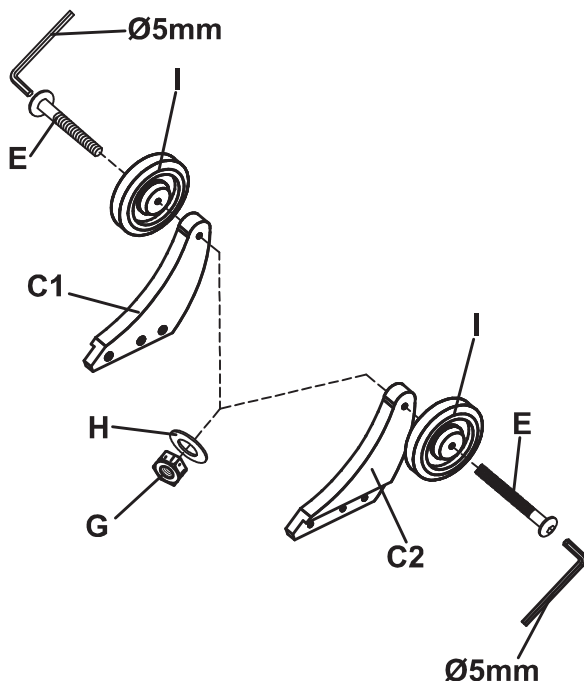


Attach wheel (I) on to right & left bottom leg (C1&C2). Insert 3" Bolts (E), Washer(H), and nut (G) hold on the bolts using Ø5mm Allen wrench, and tighten nut using wrench.

STEP 4

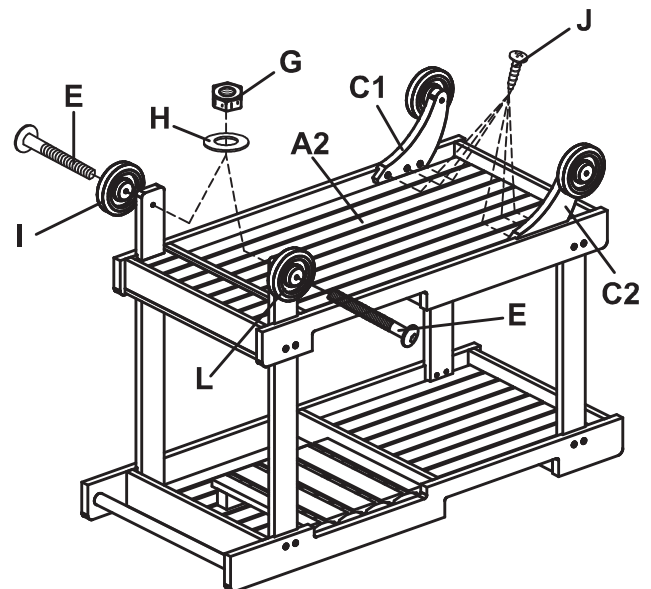


Attach right and left bottom leg (C1&C2) which has wheels attached on to Bottom frame (A2) secure using 1" screws (J). Attach wheel (I) on to long leg (B1). Insert 3" Bolts (E), Spring washer(H), and nut (G) hold on the bolts using Ø5mm Allen wrench, and tighten nut using wrench.

STEP 5

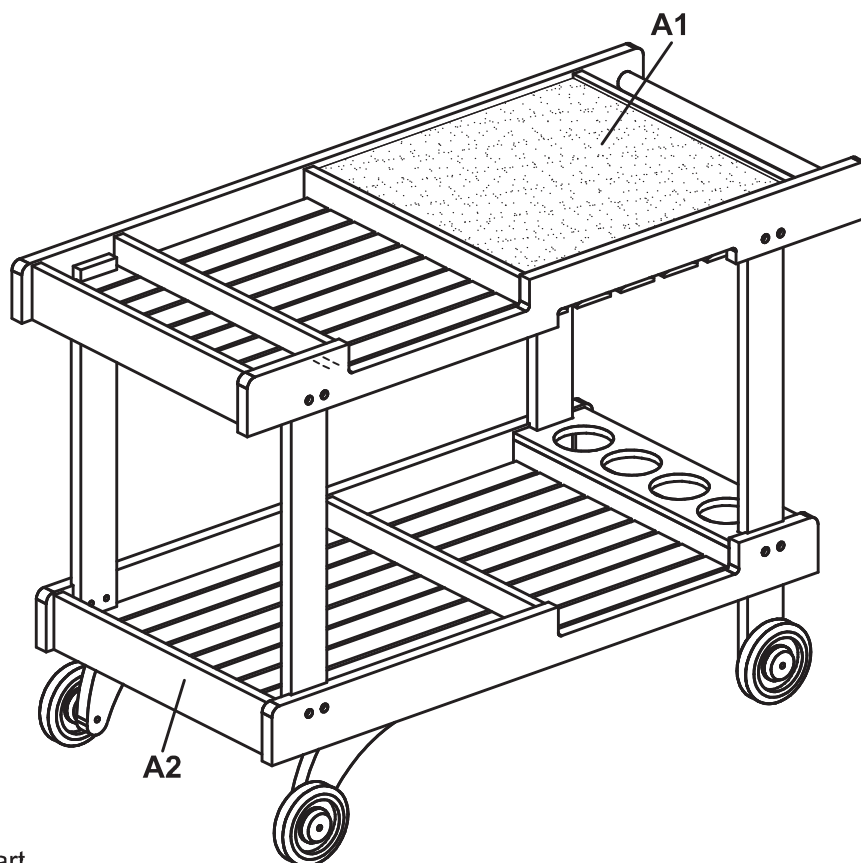

Up right the Trolley cart

STEP 6

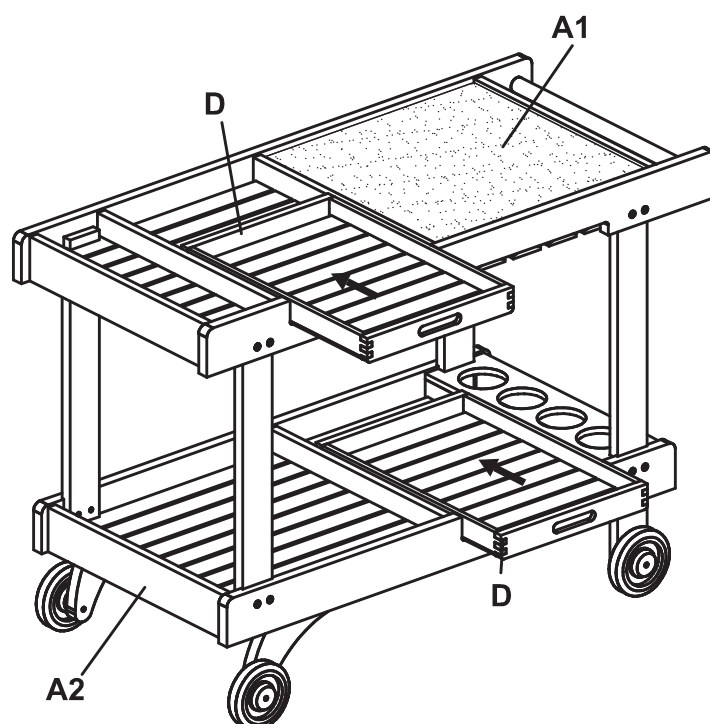

Attach the trays (D) to the section Top frame (A1) and bottom frame (A2).
THE TROLLEY CART IS NOW READY FOR USE.