


Tribesigns

LITTLE TREE

Assembly Instructions

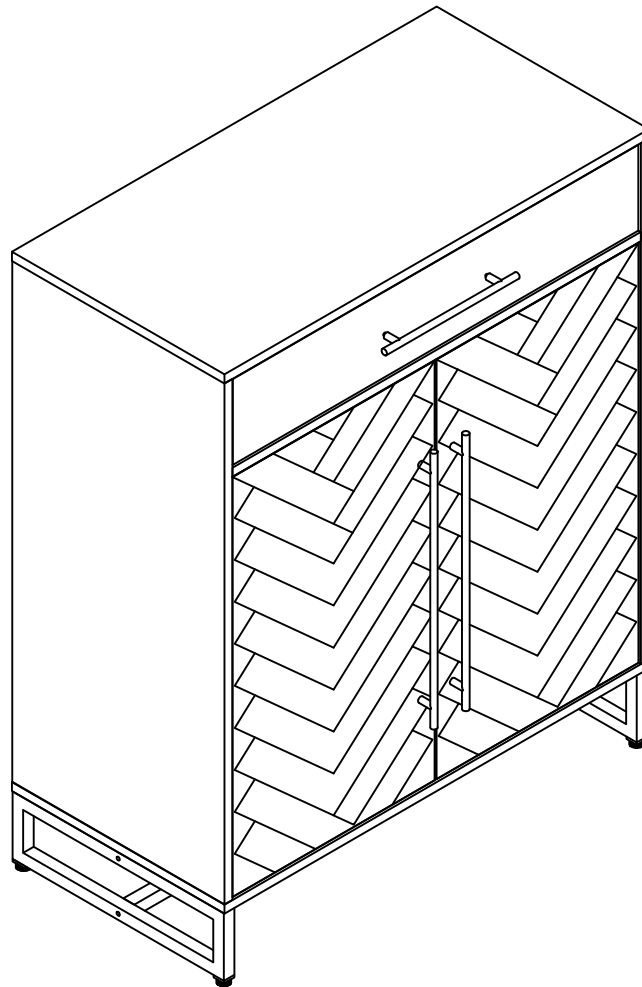

Model No. YS0051

Shoe Cabinet

Call us!

We're here to help!

If you have any issues with this product, please contact our customer service team **before returning** it.



We want you to be completely satisfied with your purchase! If anything is missing, damaged, incorrect, or not what you expected, don't worry. Please keep the outer packaging and take photos of both the packaging and products, and then reach out to us at support@tribesigns.com or call us at **1-424-220-6888**. We'll take care of everything and send you a free replacement, so you can enjoy your purchase as soon as possible without any hassle.

Assembly Instructions:

1. Carefully read these instructions and keep them for future reference.
2. Refer to the parts list for guidance and ensure that you have all the pieces before starting the assembly process, if anything is missing, damaged, incorrect, contact us **FIRSTLY BEFORE** assembling.
3. When assembling, place all parts on a soft, clean, and flat surface, such as a carpet, to prevent any scratches.
4. To avoid misalignment of the holes, Please don't full tighten the screws until you ensure all parts in place.

Follow Tribesign:



Facebook



Twitter




Pinterest





YouTube








Instagram

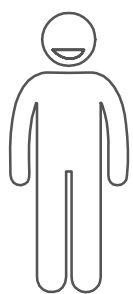

X2

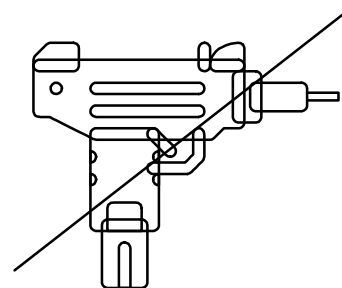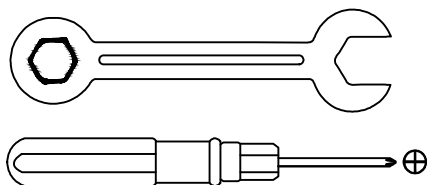


When using the electric screwdriver ,
Reduce the power and torque to avoid damaging the furniture

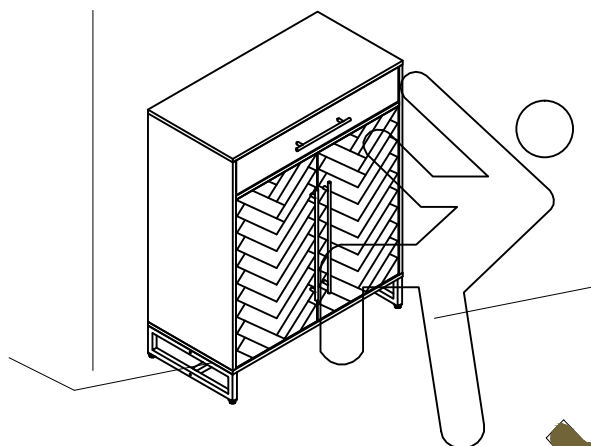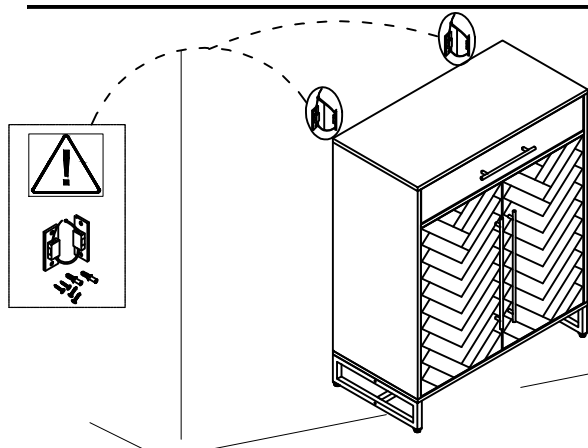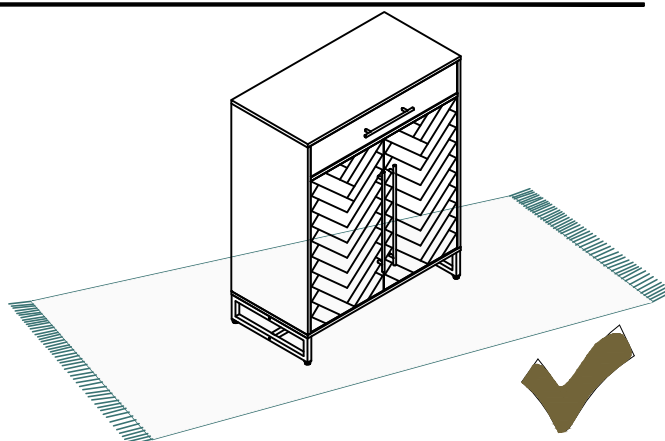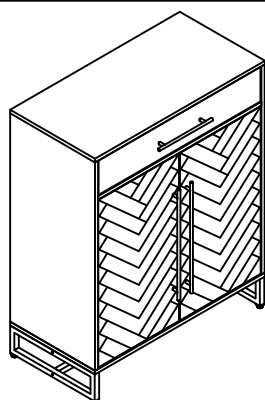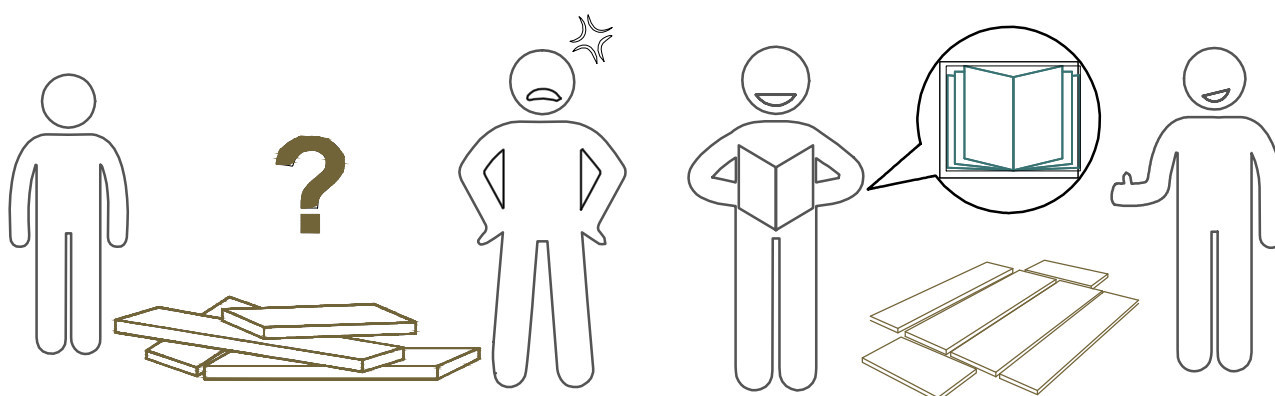

(Install tip-over restraint provided)


Use of tip-over restraints may only reduce but not eliminate ,
the risk of tip-over.

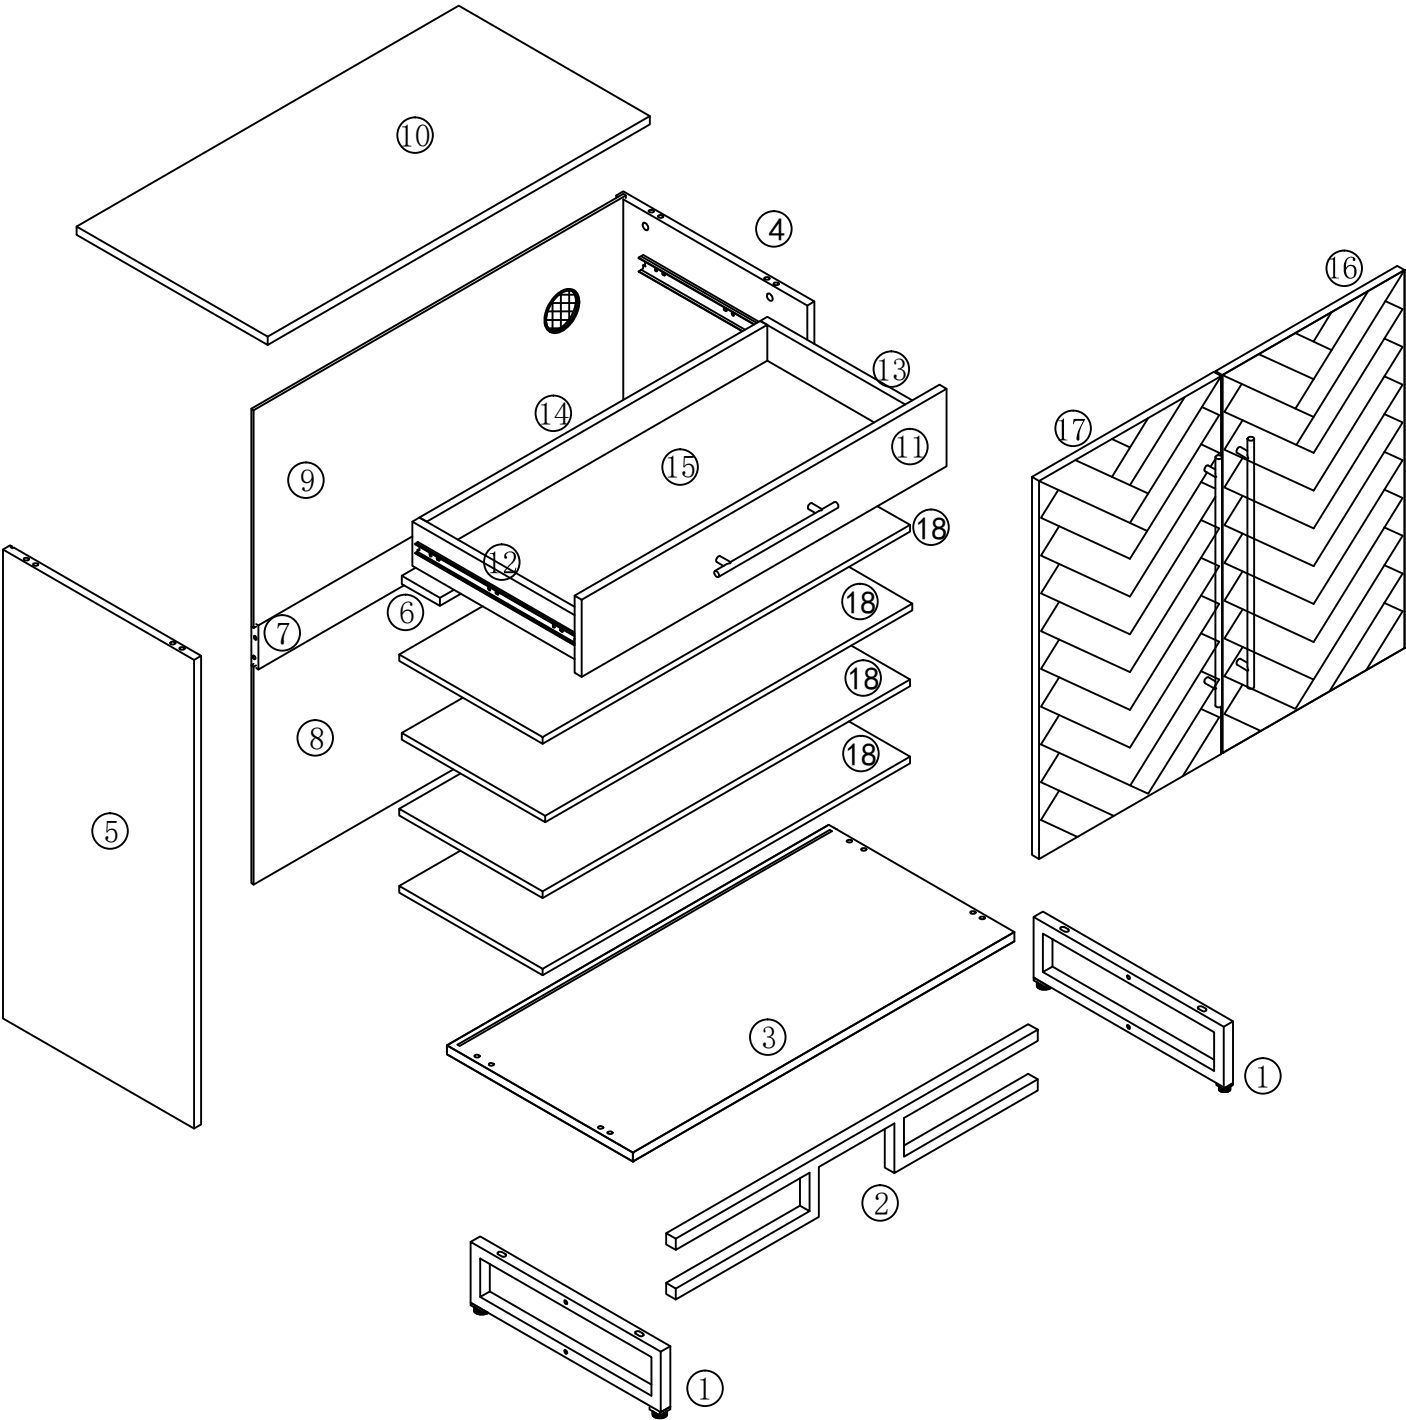


⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contach us for free replacement if having damaged or missing parts.


Parts & Hardware List



① 2pc

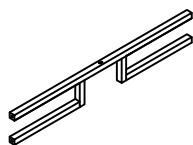

② 1pc

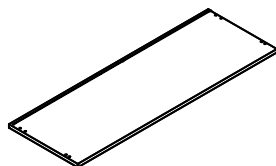

③ 1pc




④ 1pc




⑤ 1pc




⑥ 1pc

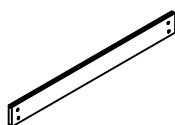


⑦ 1pc

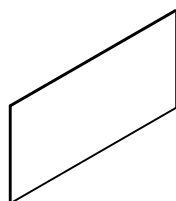

⑧ 1pc

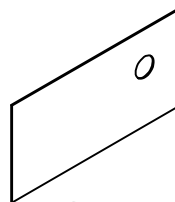

⑨ 1pc

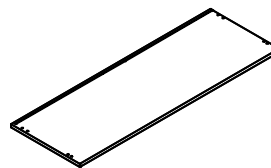

⑩ 1pc



⑪ 1pc




⑫ 1pc



⑬ 1pc




⑭ 1pc

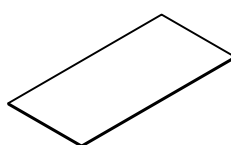


⑮ 1pc




⑯ 1pc



⑰ 1pc

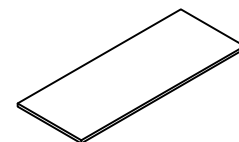

⑱ 4pc

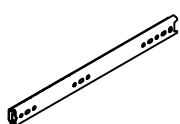

⑲ 2pc

M330

Hardware List

w-1
20pcsw-2
20pcsw-3
8pcsw-4
4pcs

M7x38MM

w-5
4pcs

M6x35MM

w-6
5pcs

M6x30MM

w-7
16pcsw-8
8pcs

M4x20MM

w-9
1pcs

M4x18MM

w-10
36pcsw-11
4pcsw-12
2pcs



M4x18MM

w-13
1pcs


M4x18MM

w-14
6pcs


M4x18MM



w-15
1pcsw-16
1pcs

①




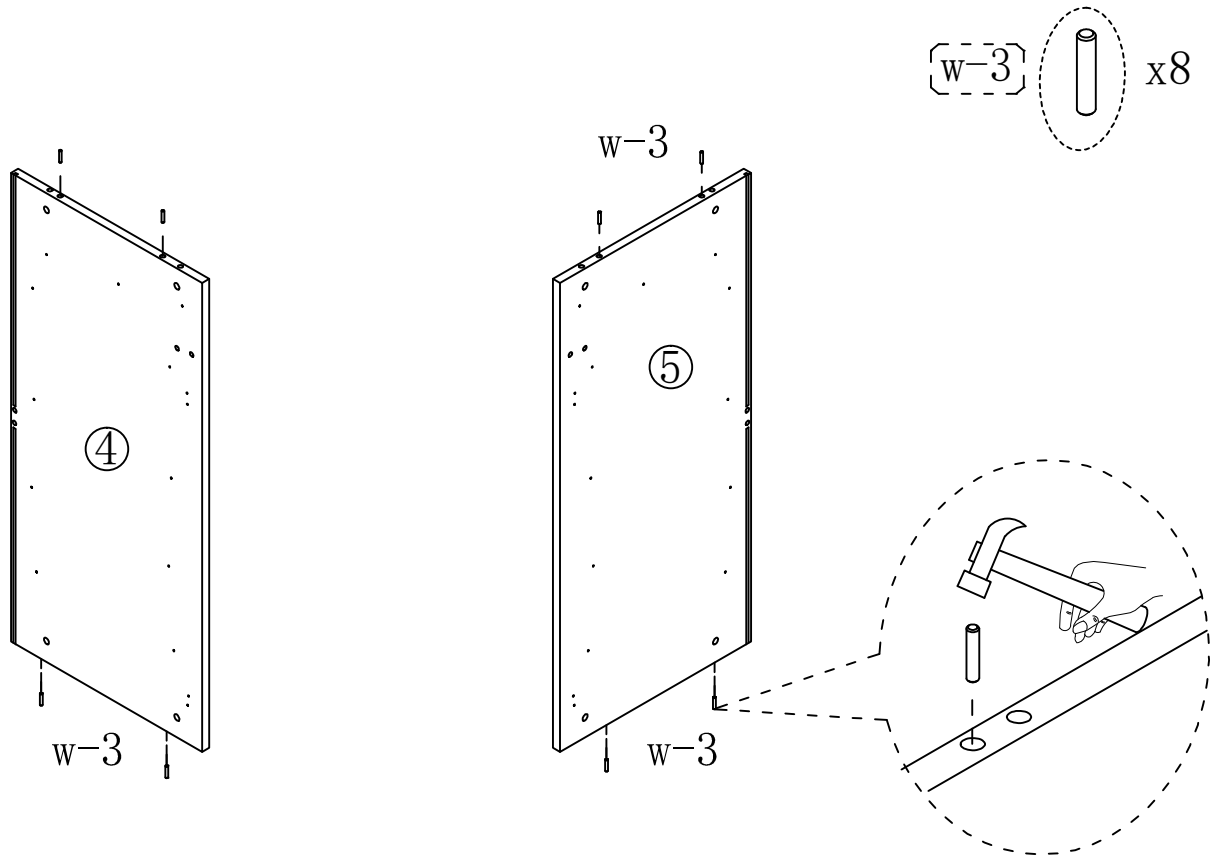


②





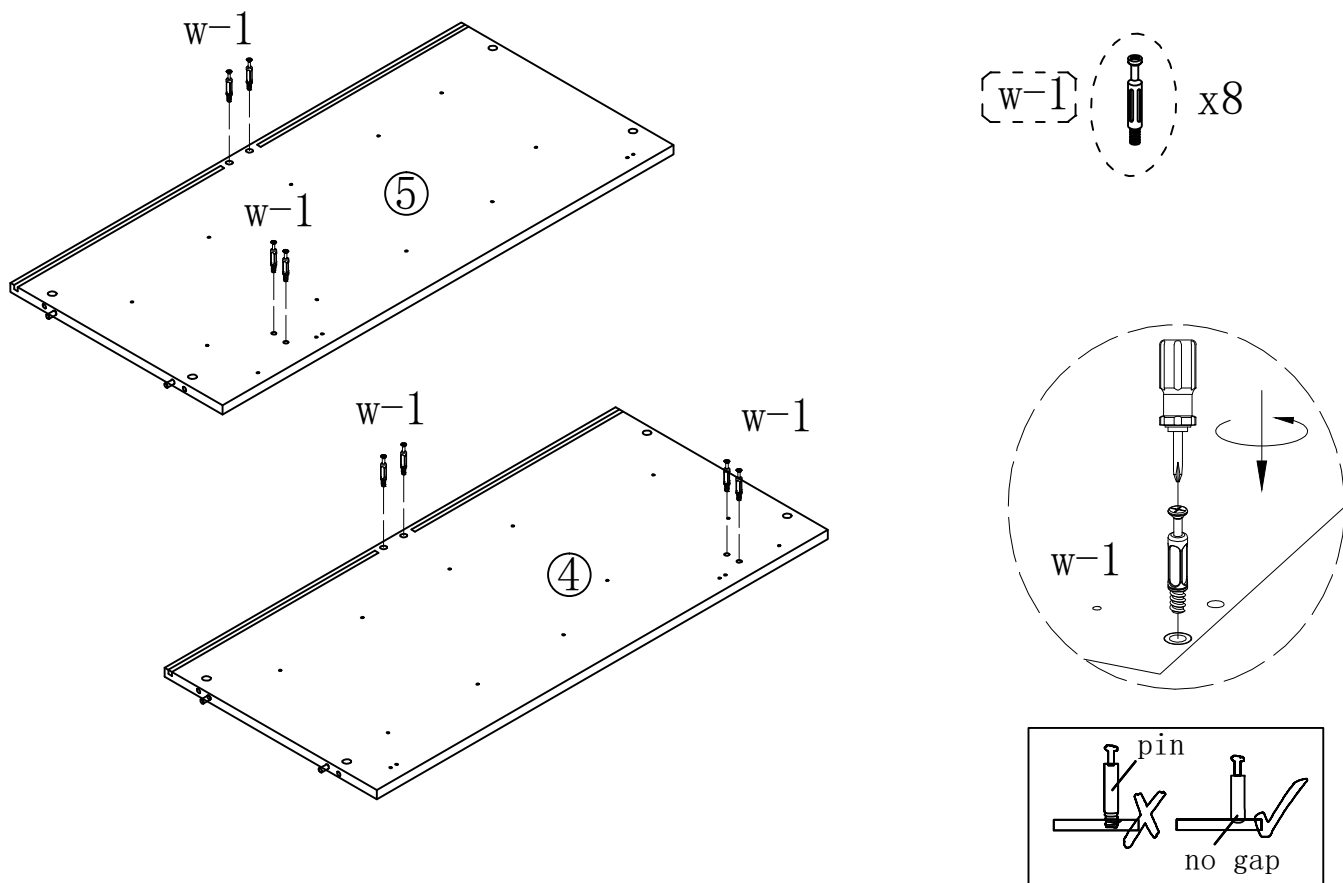


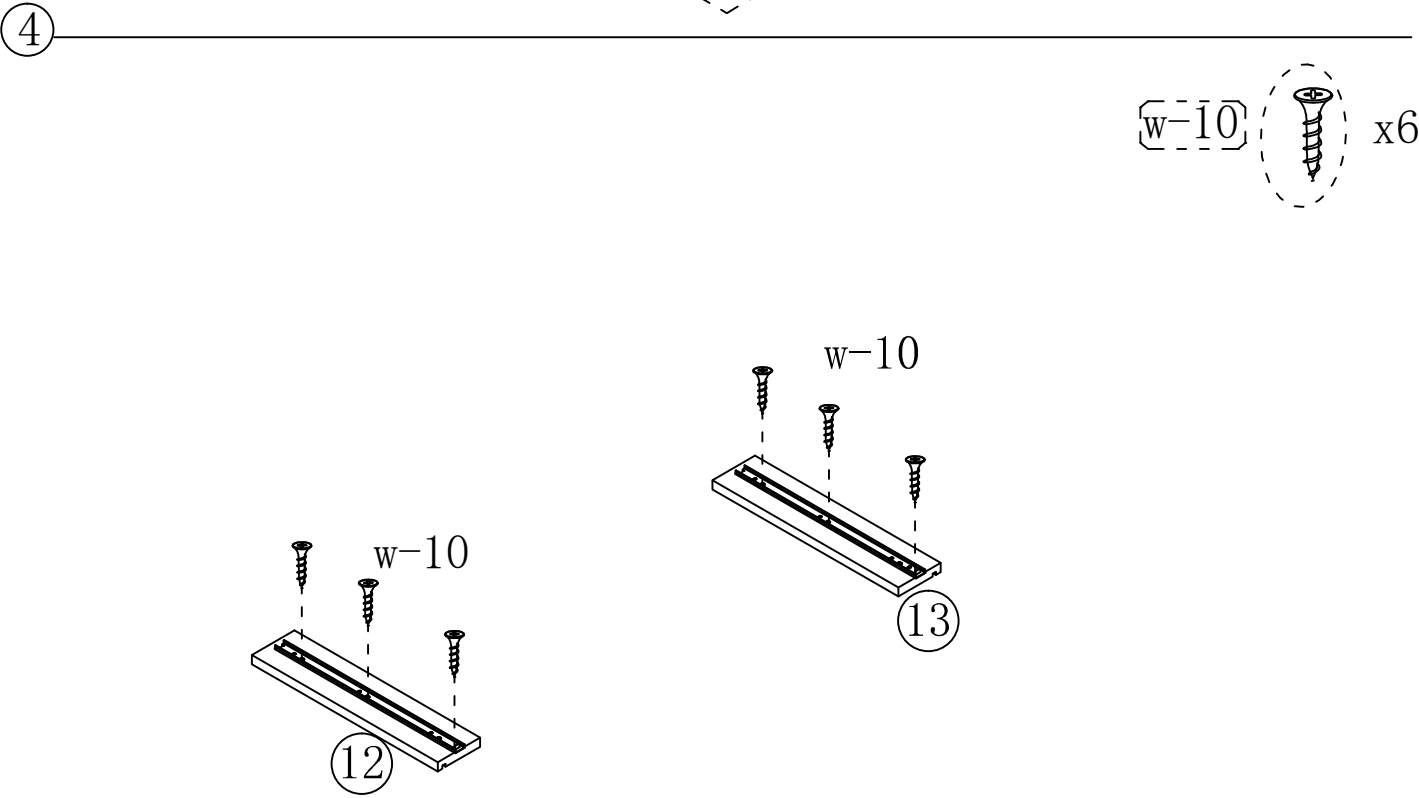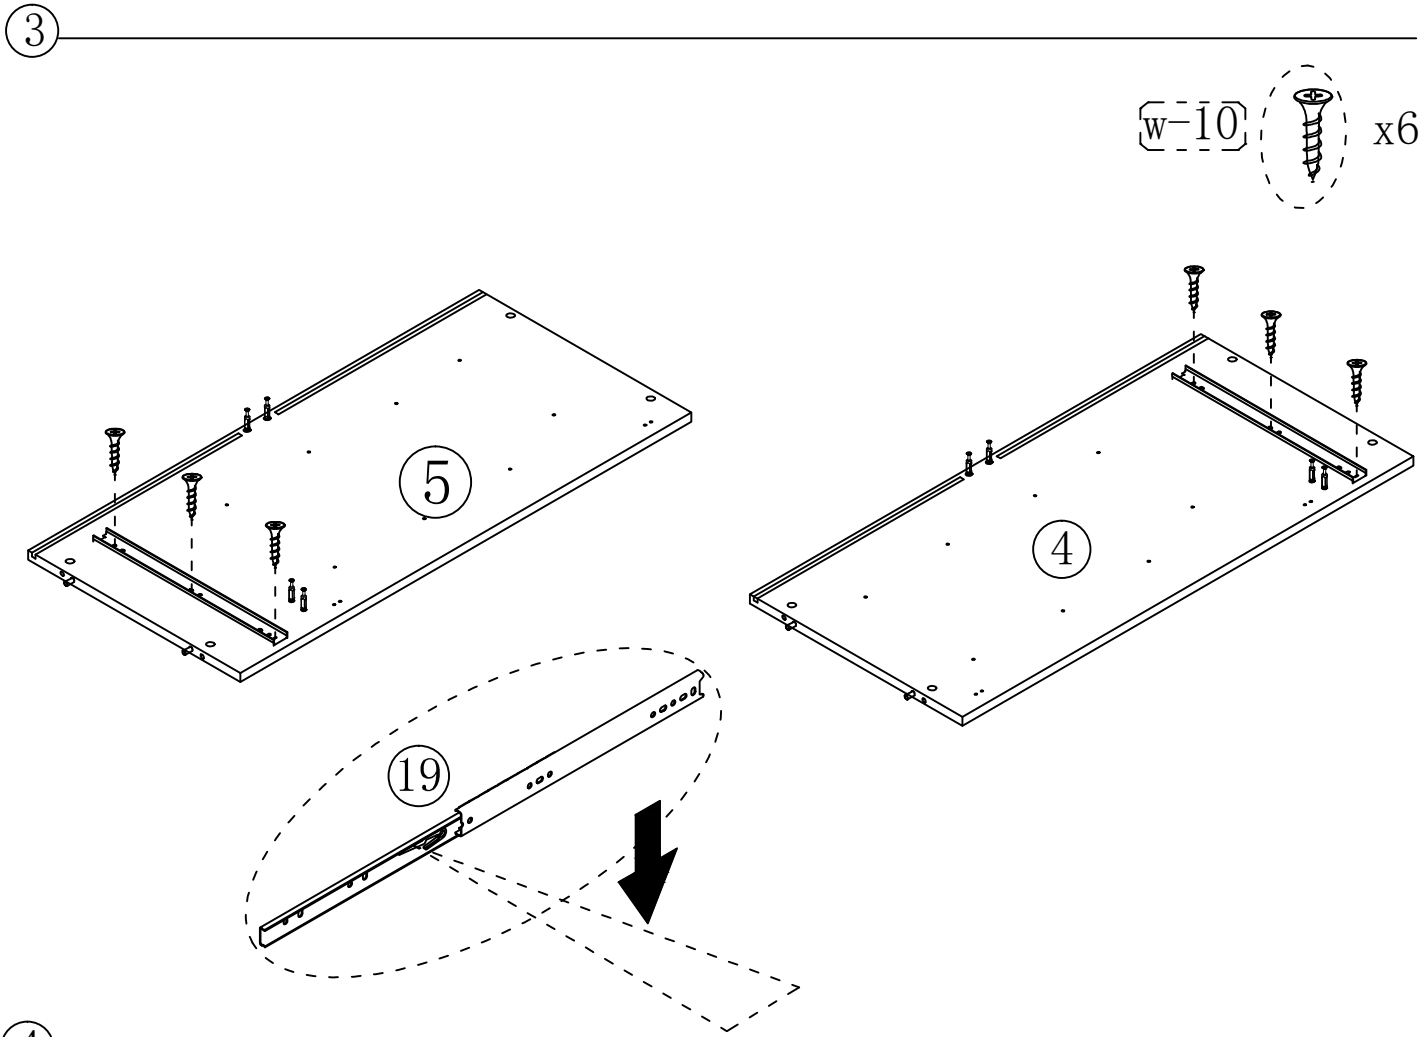





5

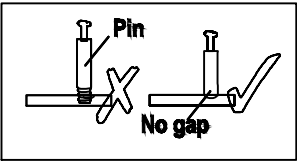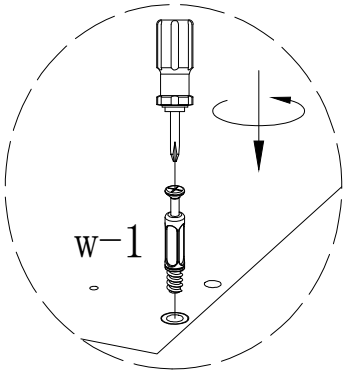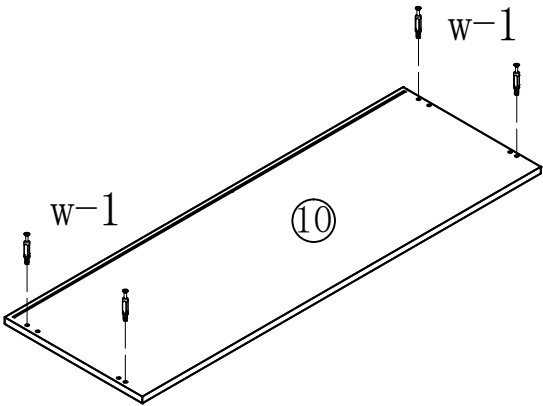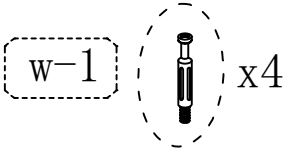





6

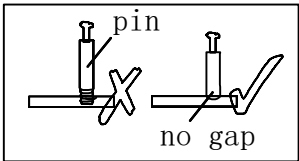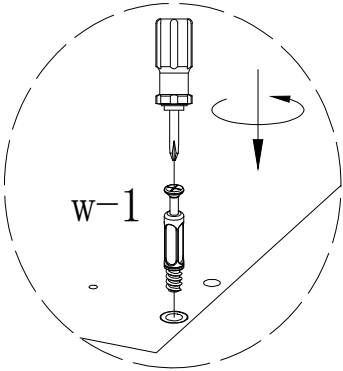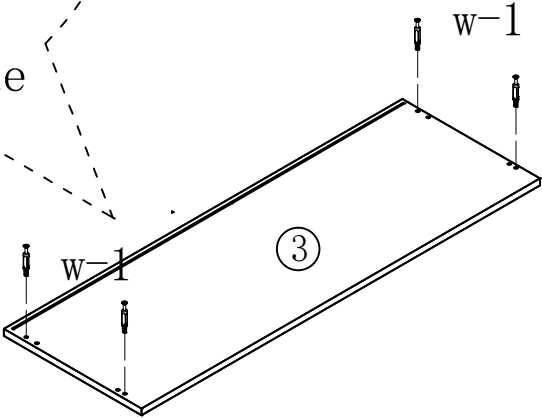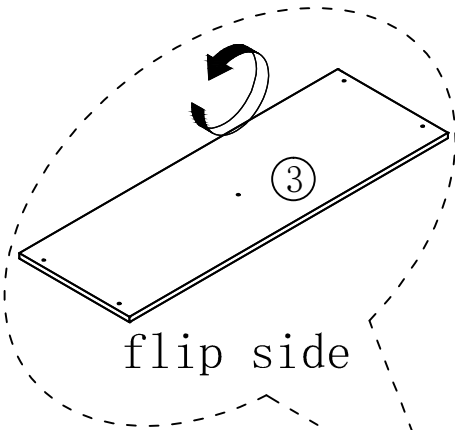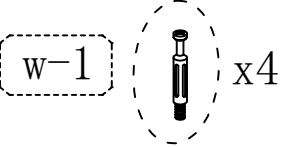


7

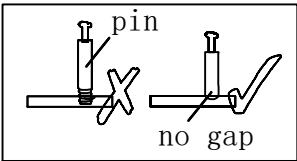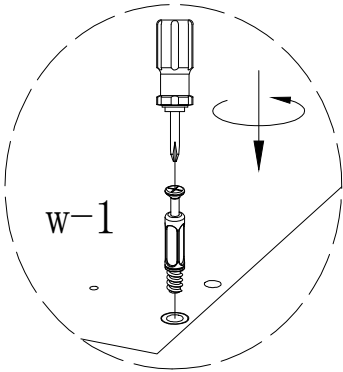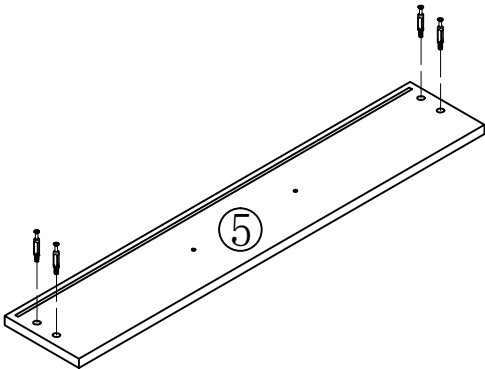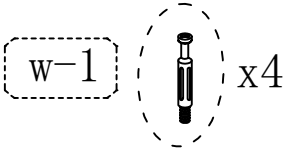


8

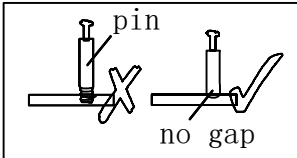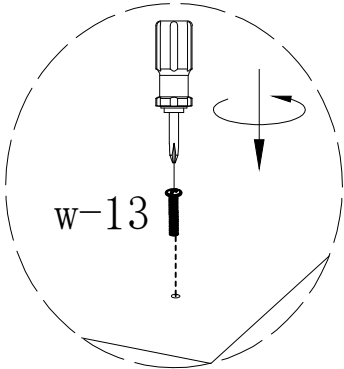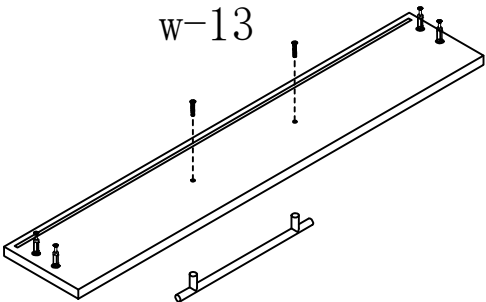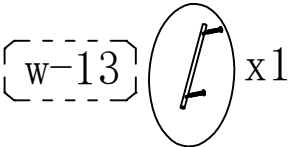



9

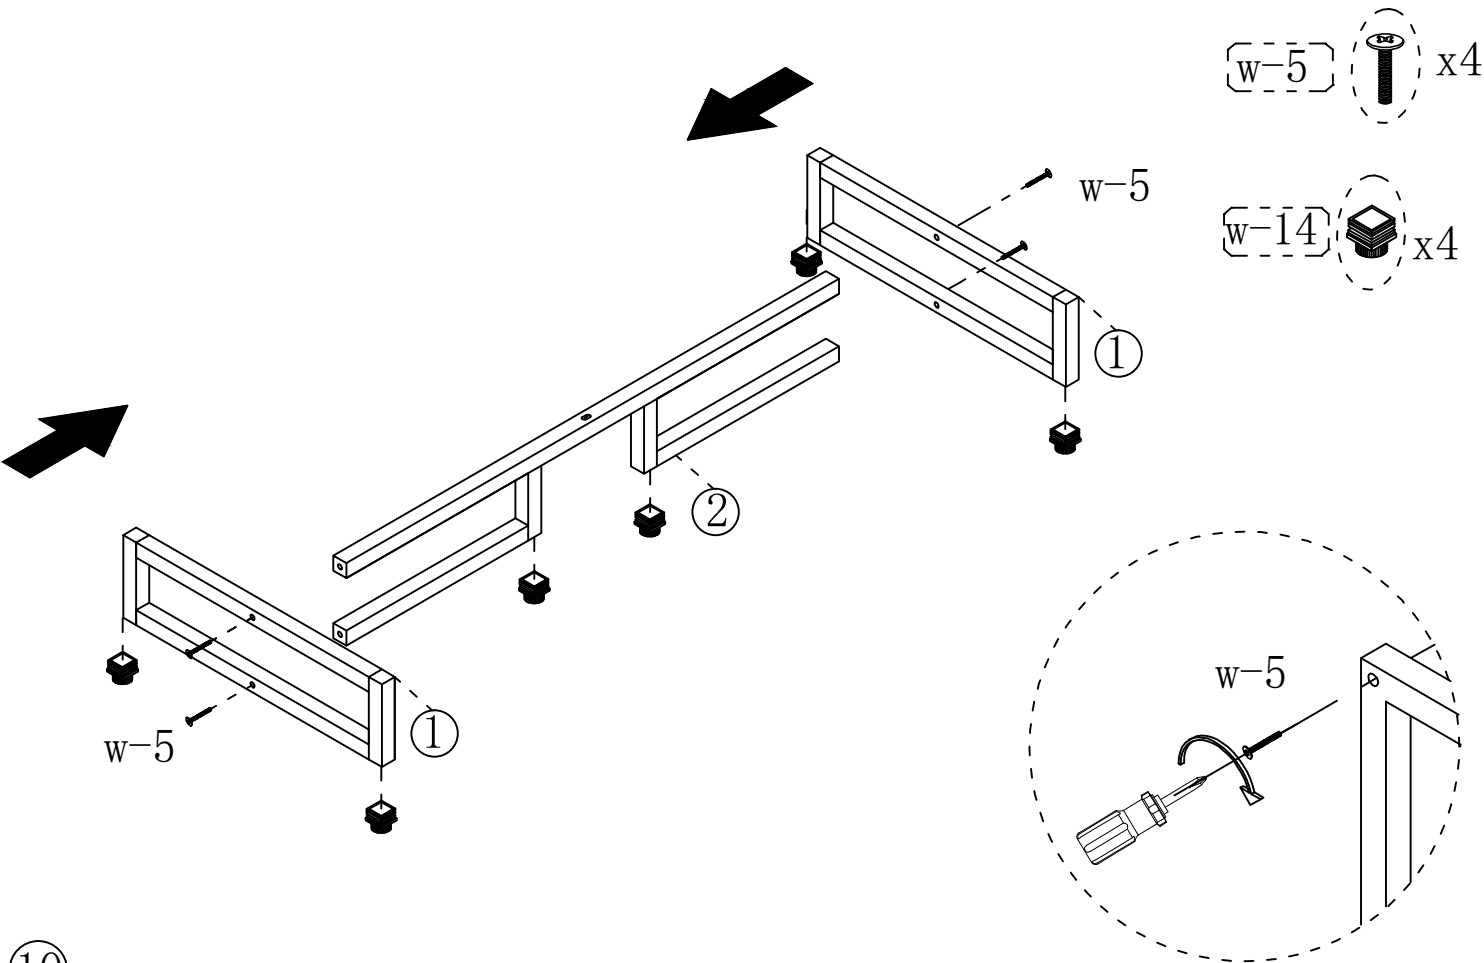





10

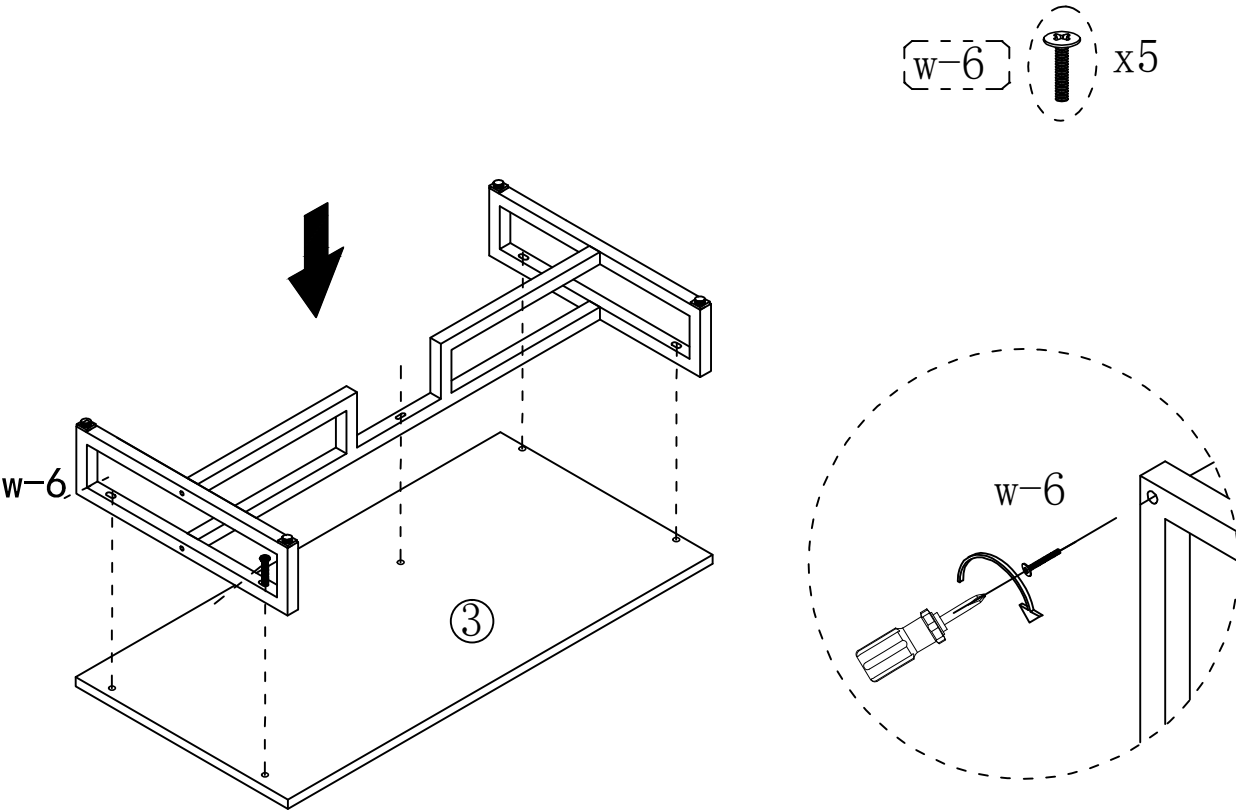


11

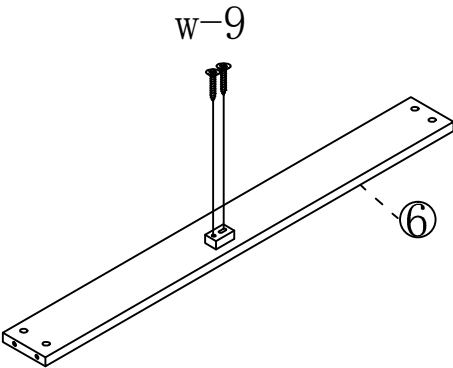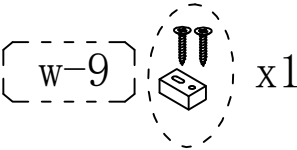


12

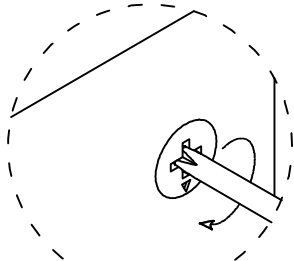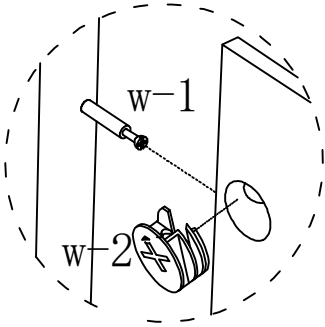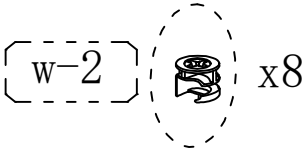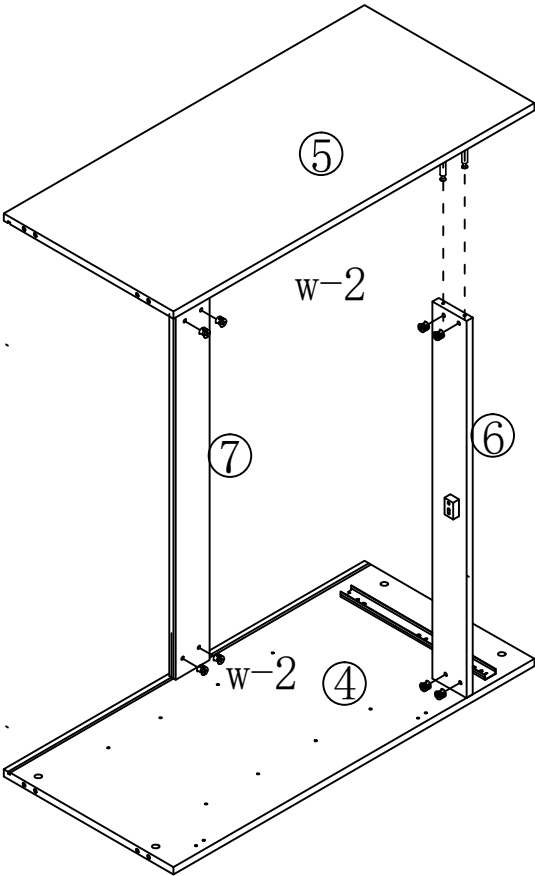


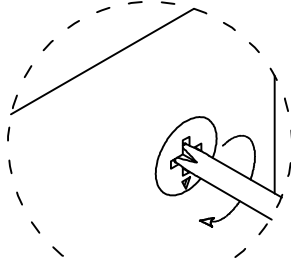
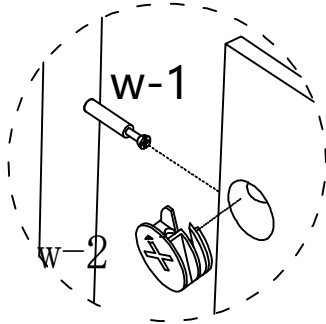
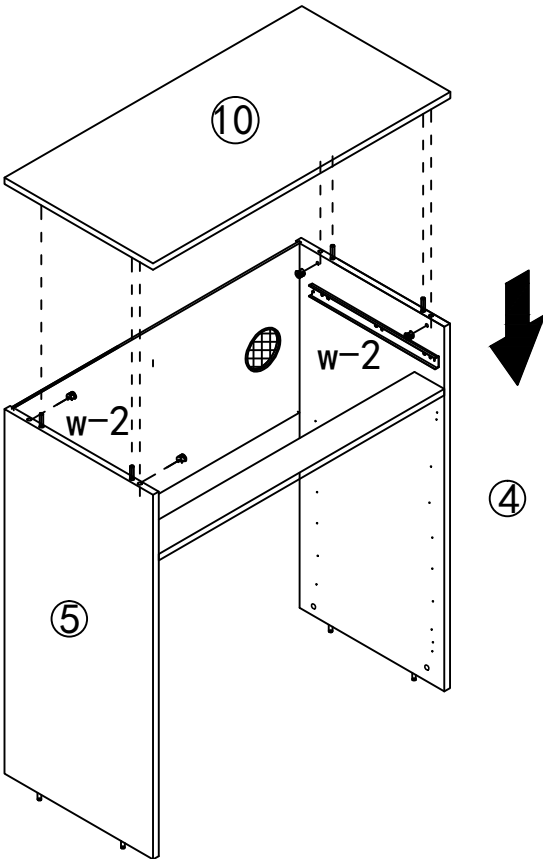
13

[w-15]  x1

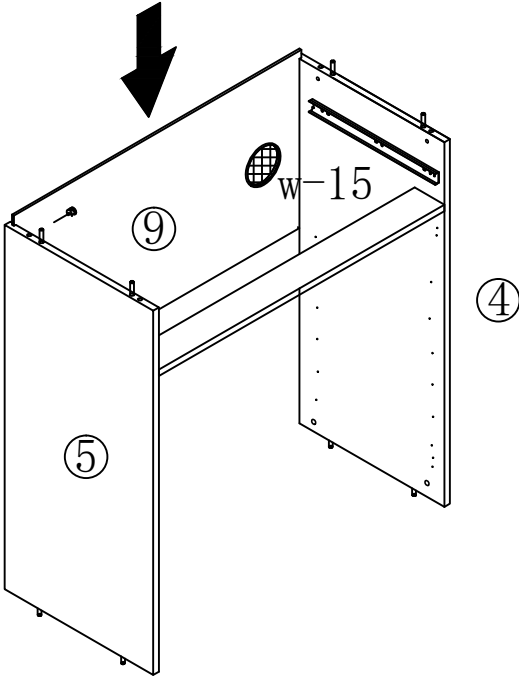


14


[w-2]  x4






15

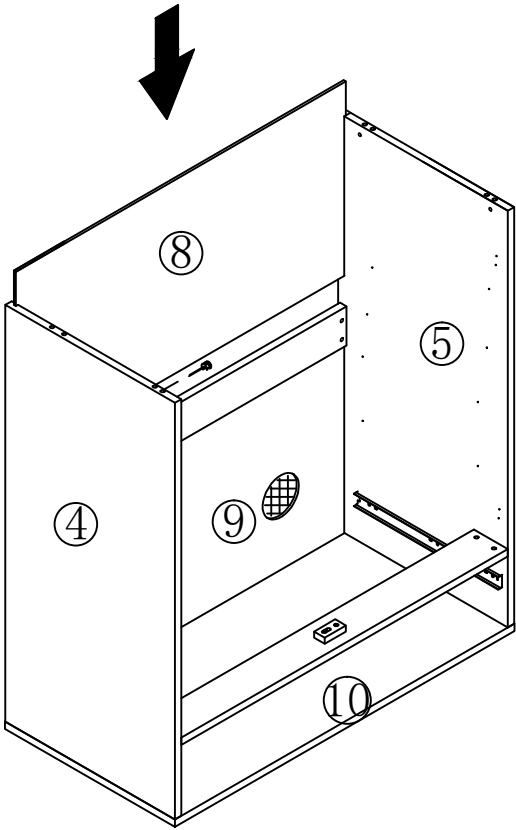


16


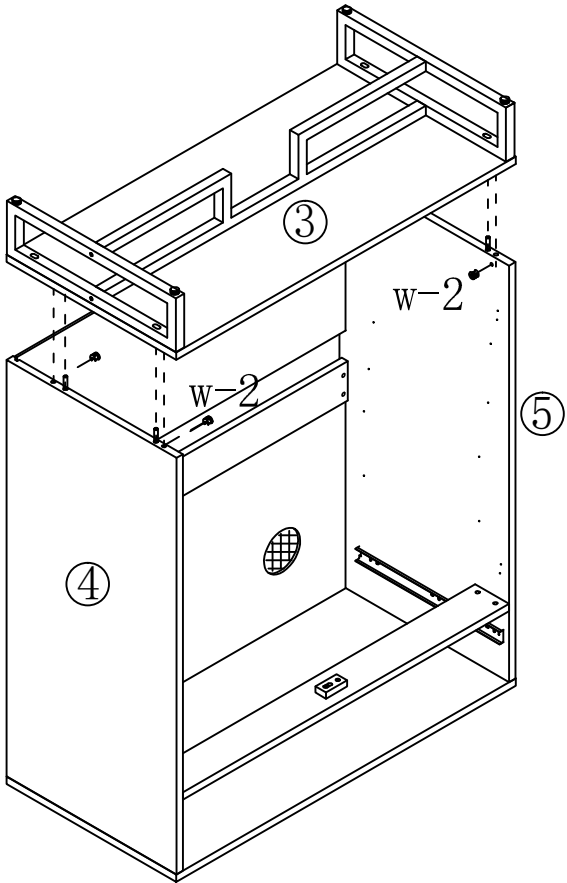


17

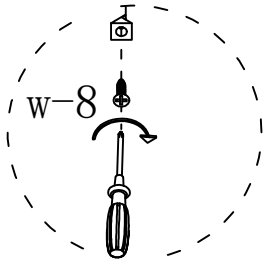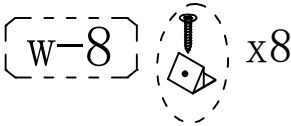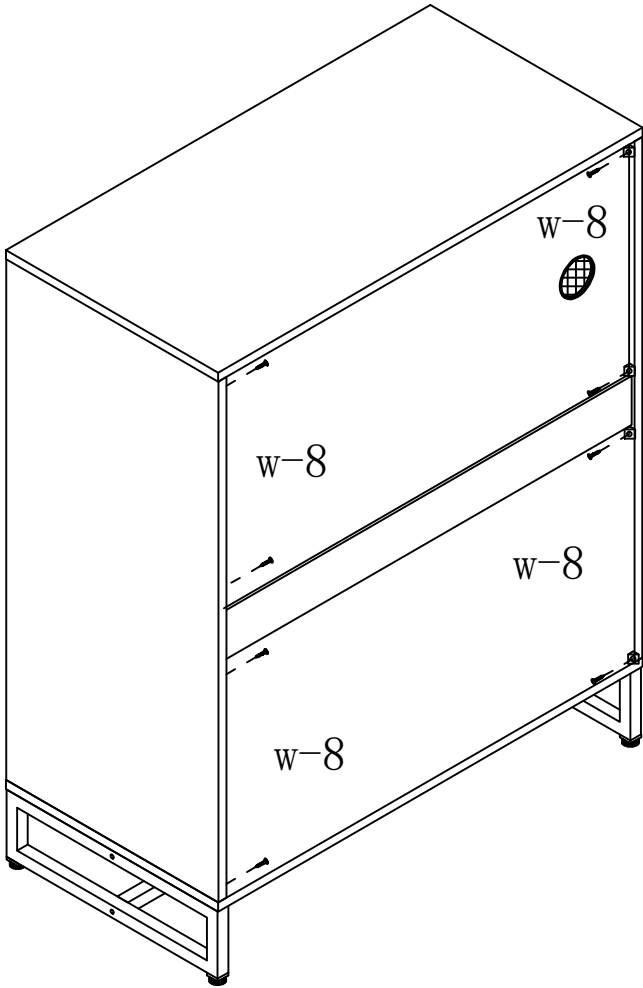


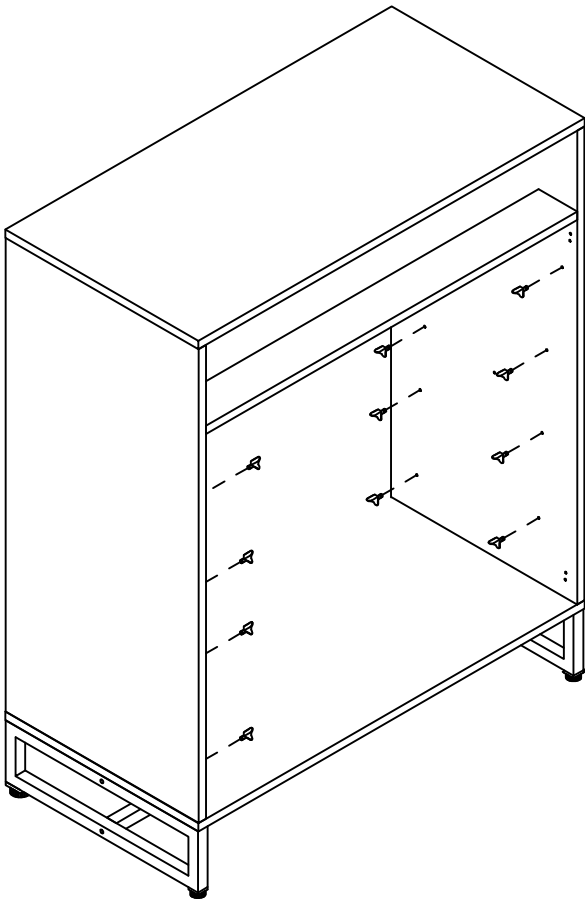

18

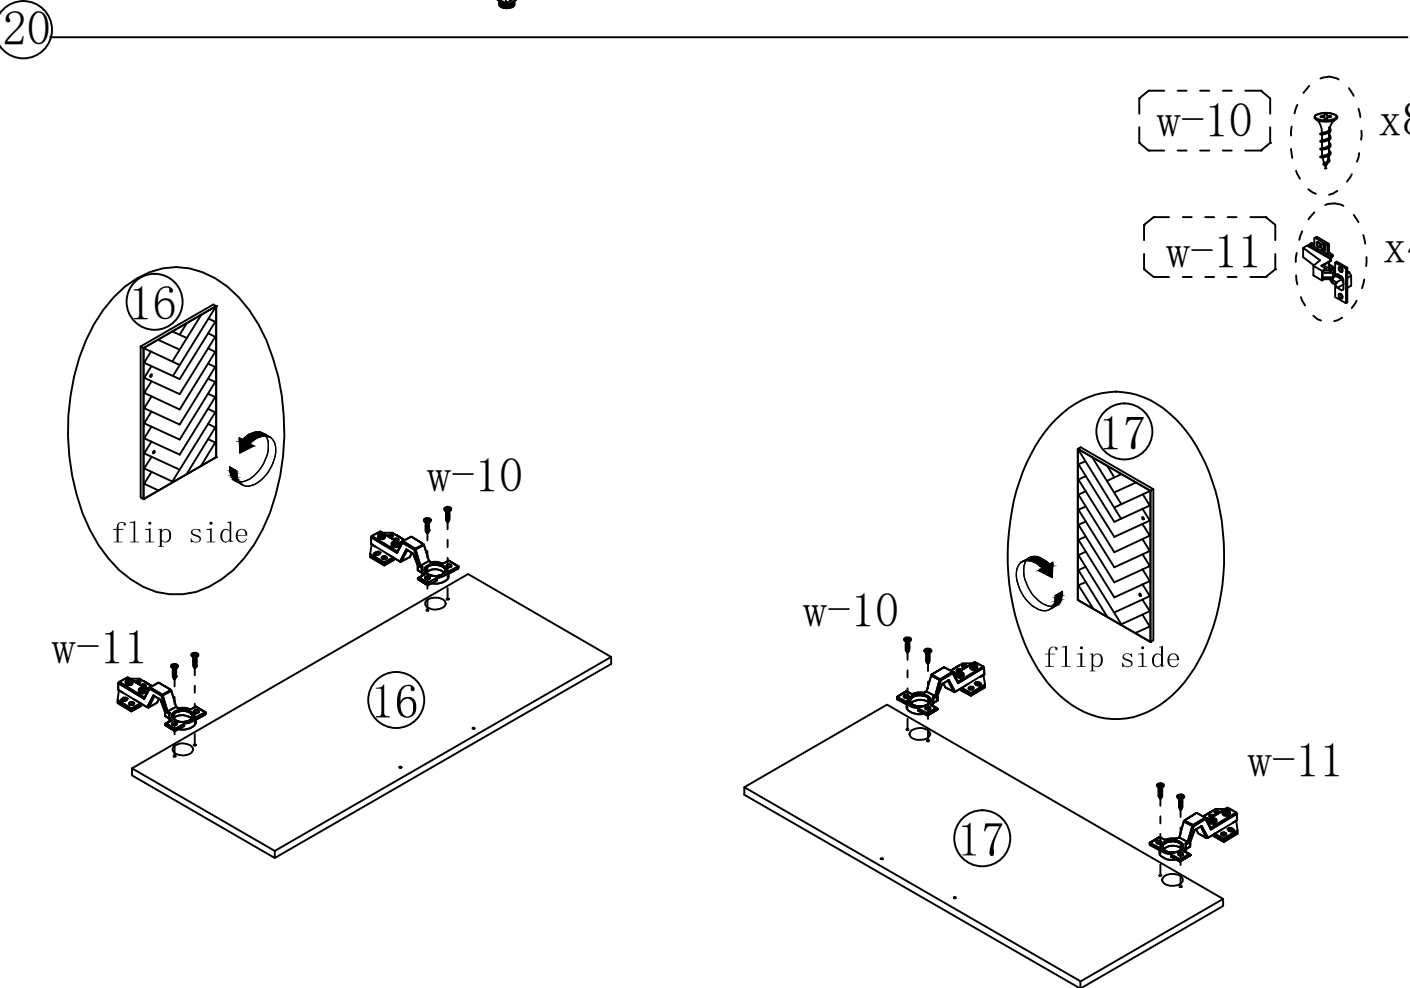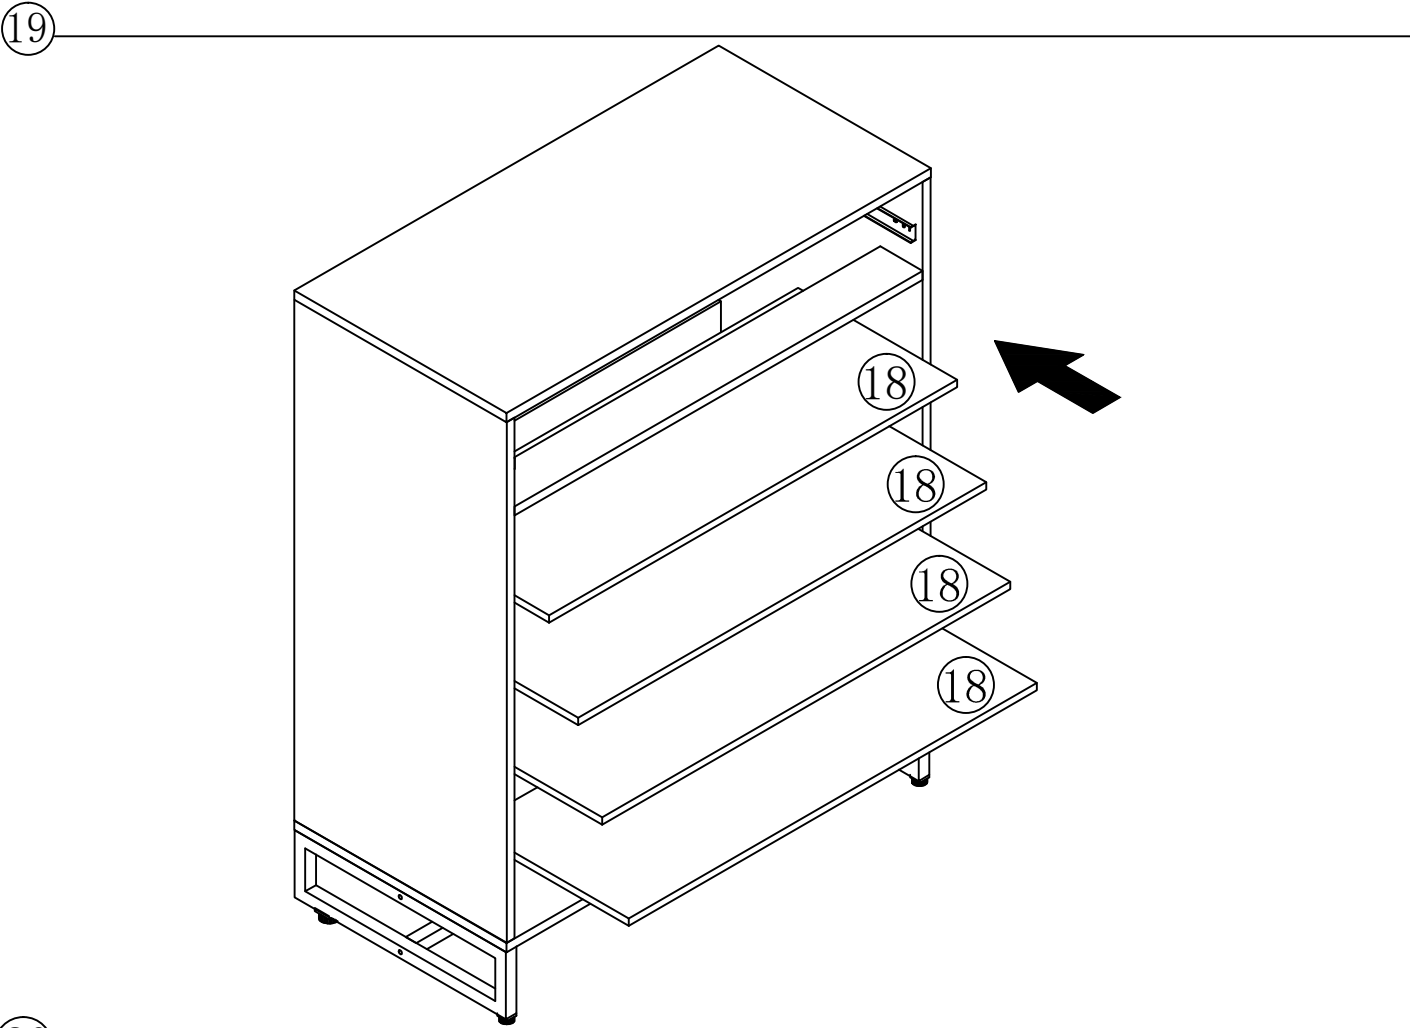




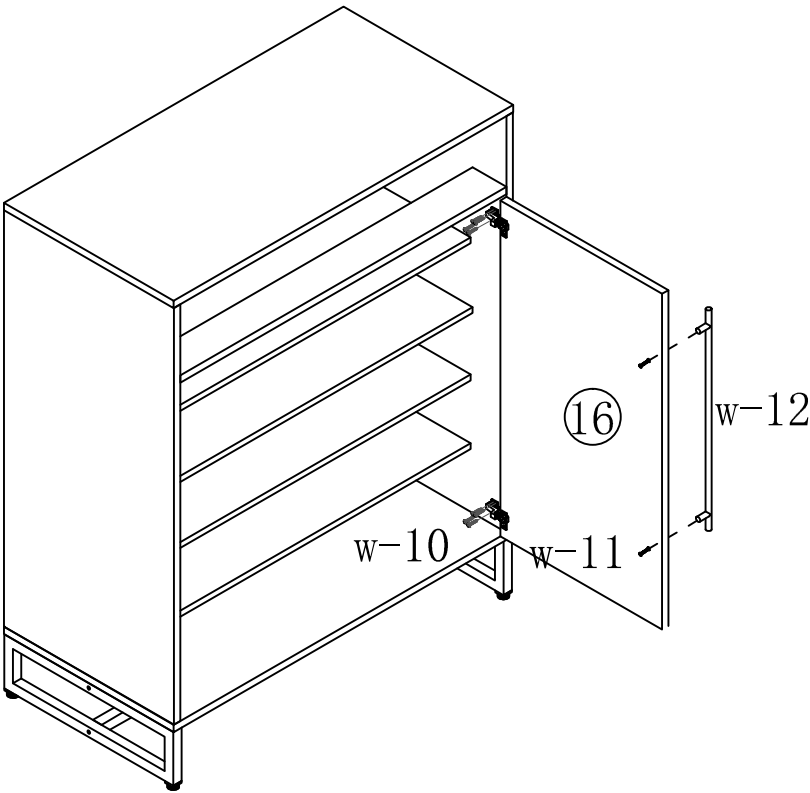

21



- w-10  x8
- w-12  x1

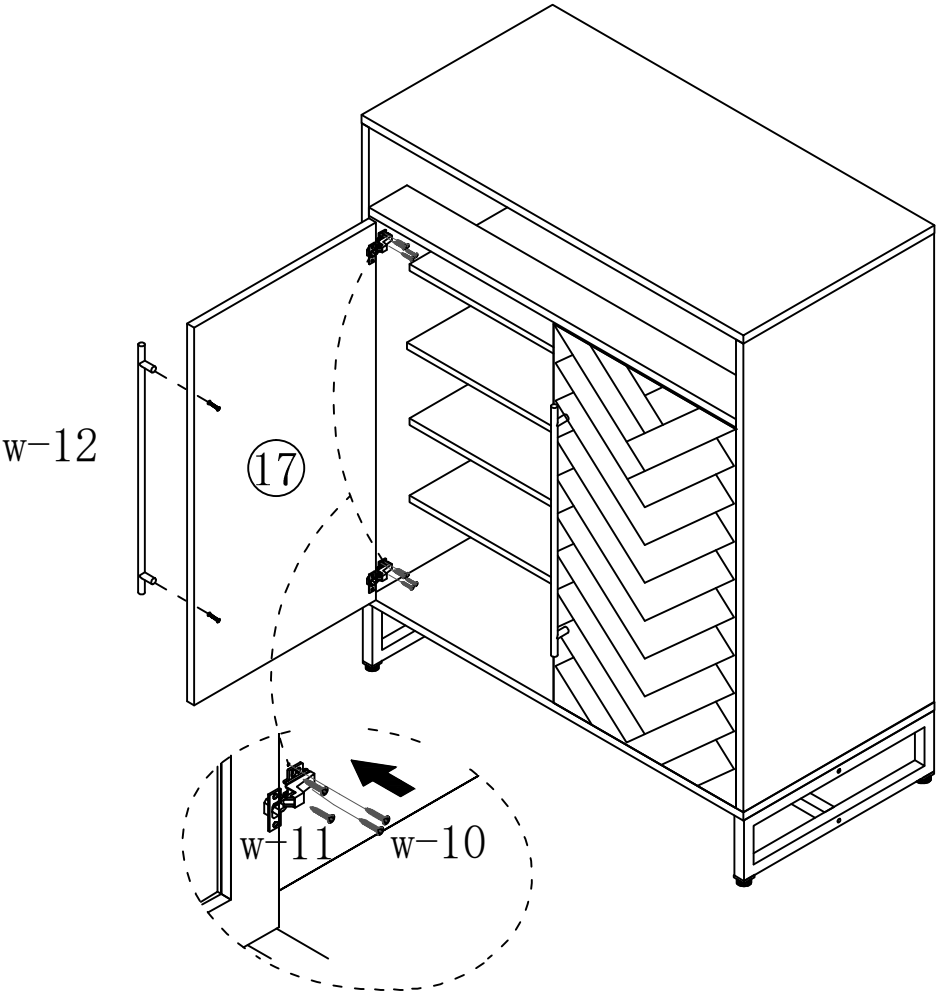
22




- w-10  x8
- w-12  x1




23

W-4  x4

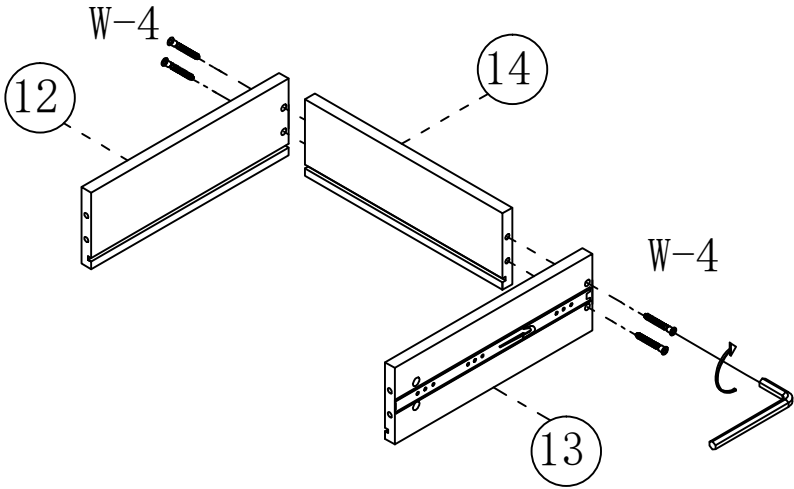

24


W-2  x4

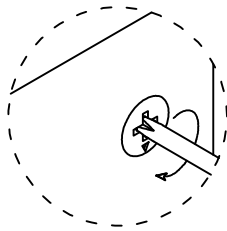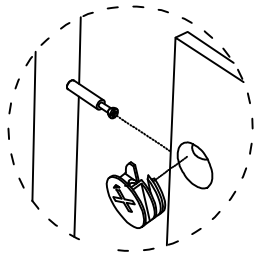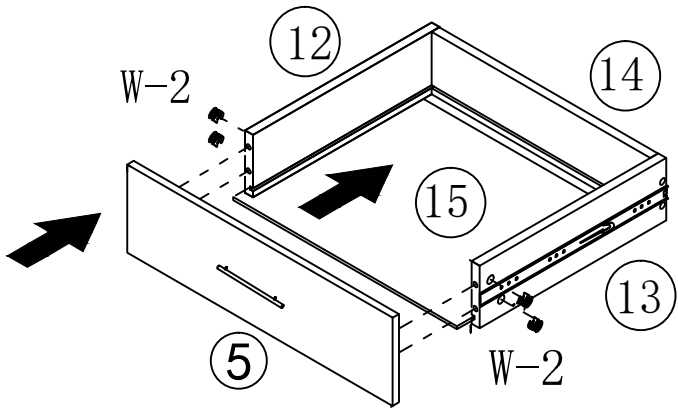

25














press down the device on the guide so that the drawer can be removed from the filing cabinet.

push the iron sheet to the top, and you can put the drawer in smoothly.

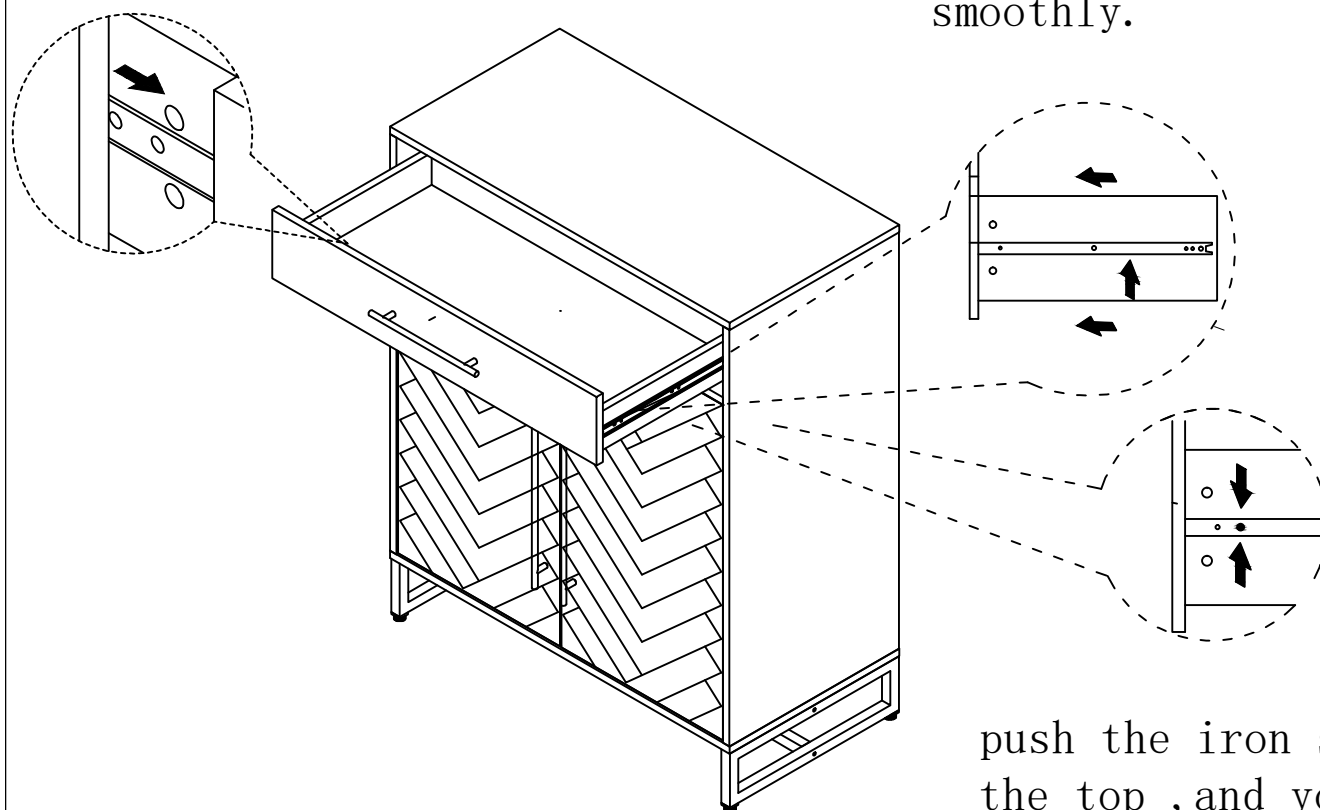


push the iron sheet to the top, and you can put the drawer in smoothly.

26

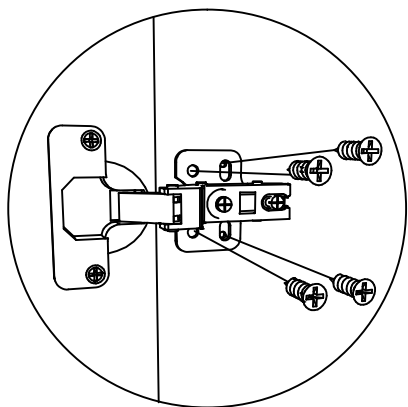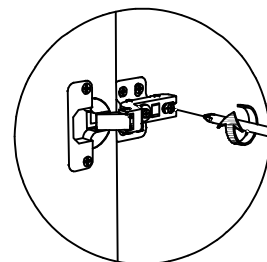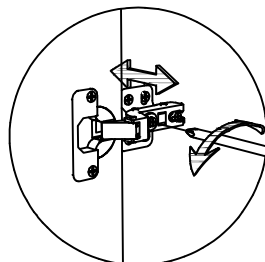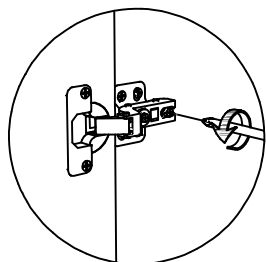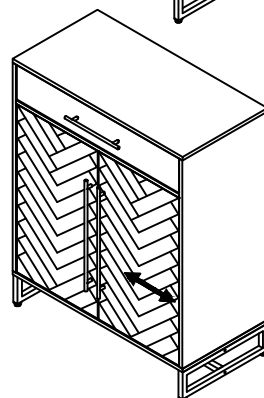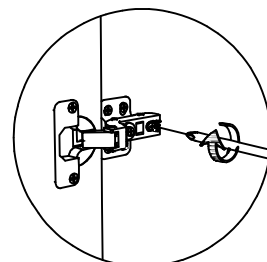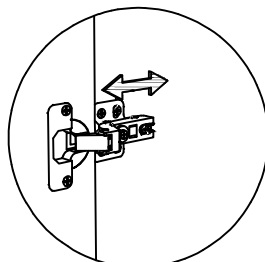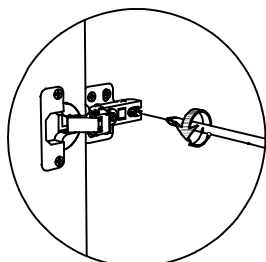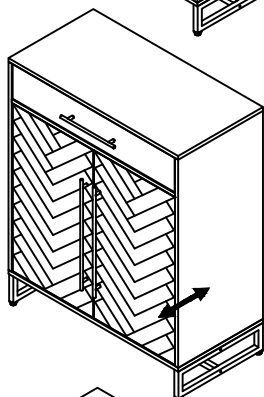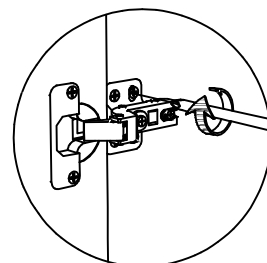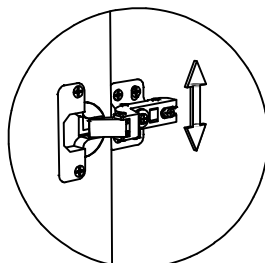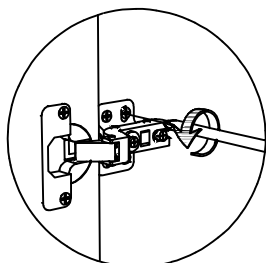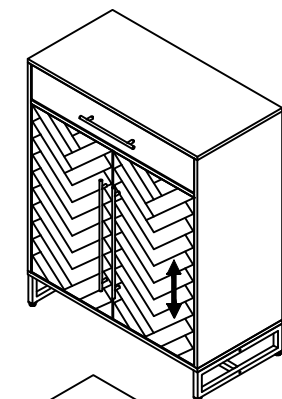


if there is misalign
after you install.
adjust the screw to the
best condition.


27

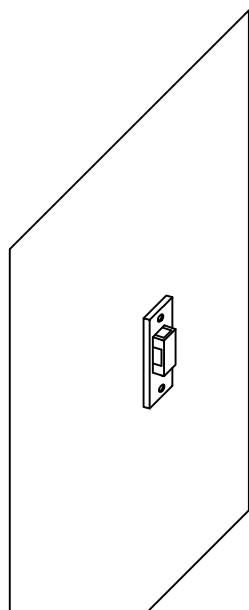


step1:mark
holes on the wall

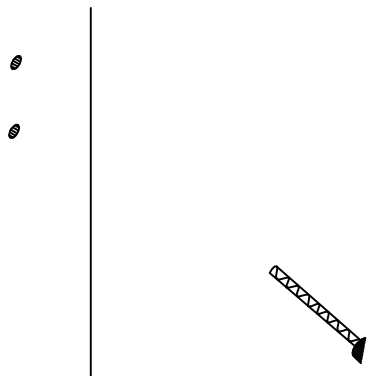

Step2:Drill holes

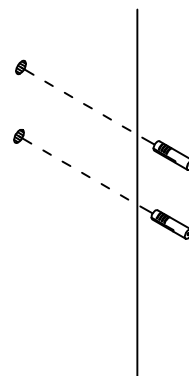


Step3:Push the plastic
plug tu the hole

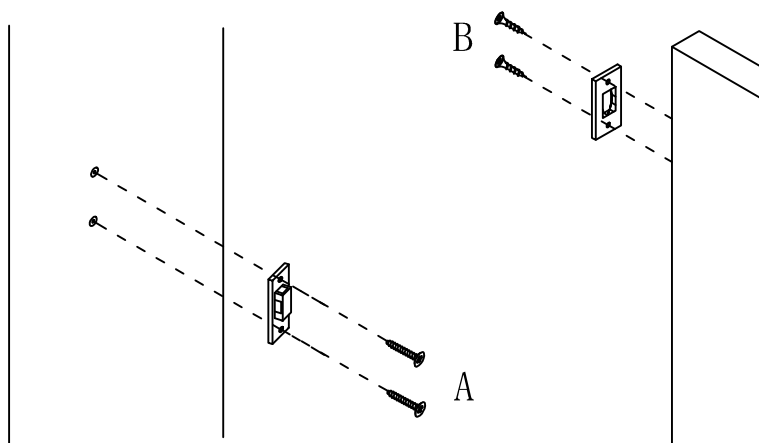

Step4:Tighten
screws

Step5:Install plastic
tap to the side board
of the 8th shelf (#D)

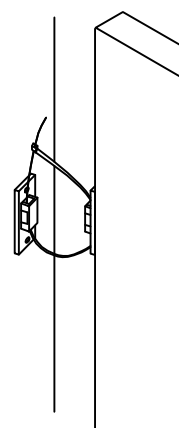

Step6: COMPLETE



A

2 pcs


3.5x30



B

2 pcs

3.5x16

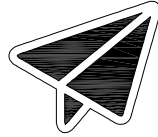

No heartburn,
when we handle
the return

Our way



support@tribesigns.com



Replacement/Refund



You

Their way



Re-package item



Schedule pick-up



Track package



Replacement



You

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888