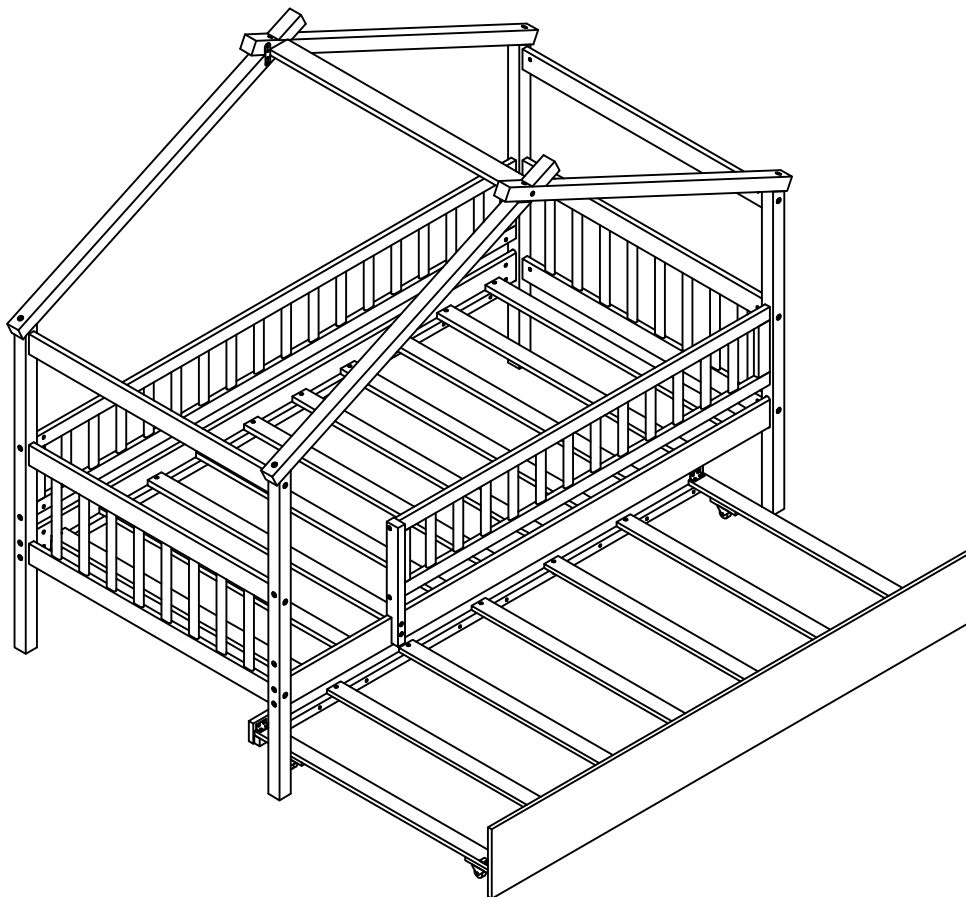


ASSEMBLY INSTRUCTIONS


TWIN HOUSE BED WITH TRUNDLE

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net






















WF302178



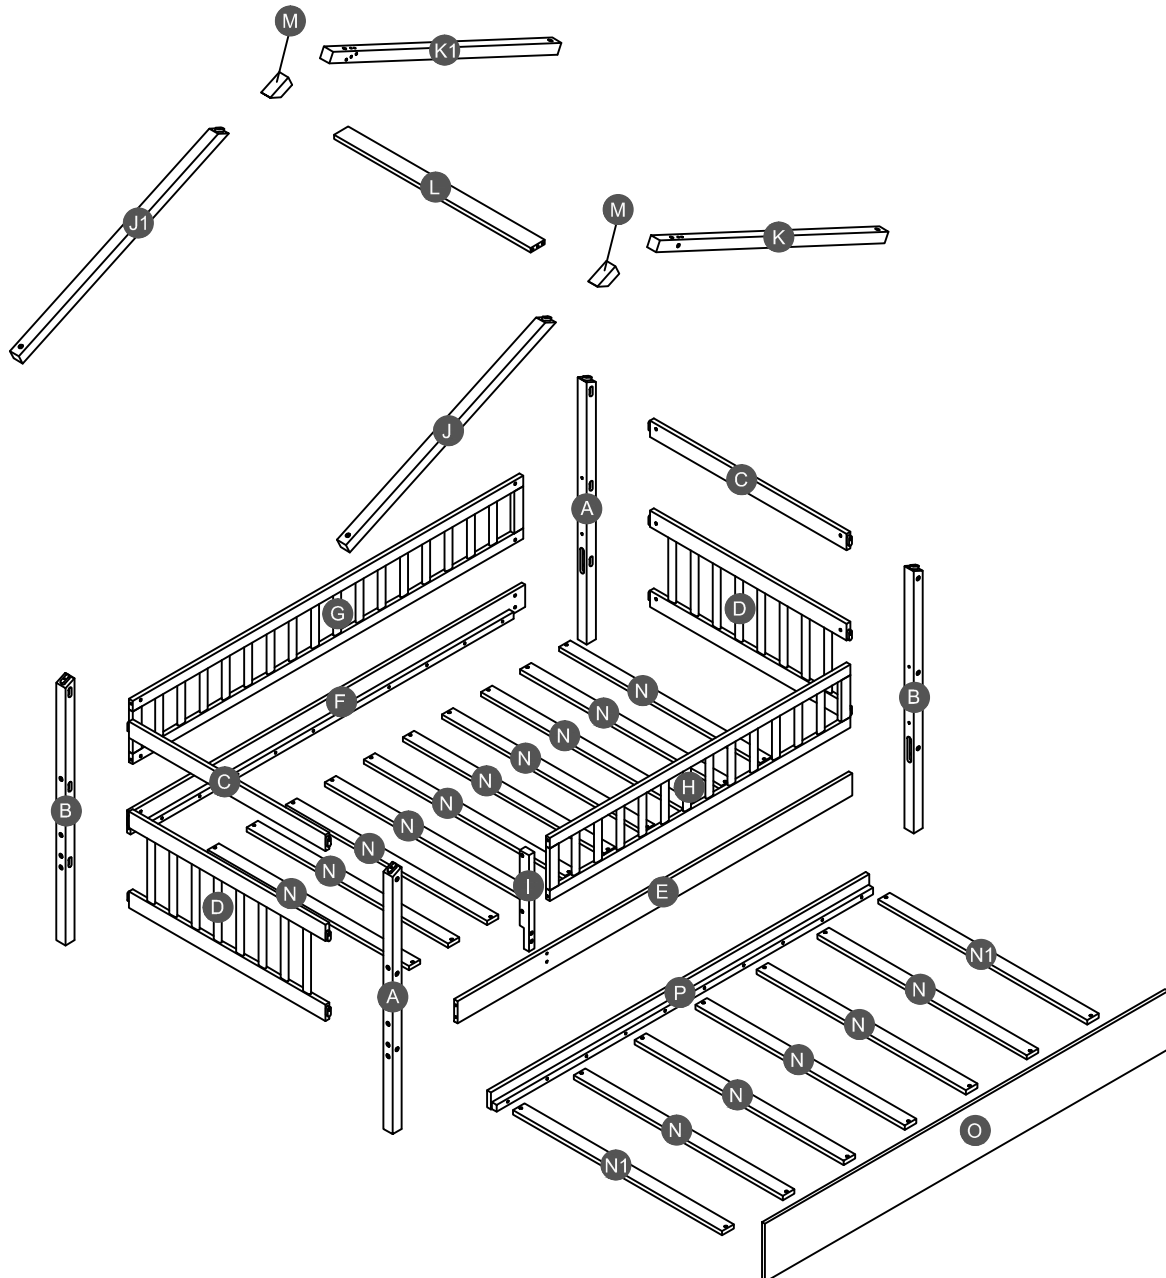











Detail View




Part List

| | | |
|---|---|---|
| A  Leg (Left Front/Right Back) - 2pcs | B  Leg (Left Back/Right Front) - 2pcs | C  Horizontal bar HB/FB - 2pcs |
| D  Frame HB/FB - 2pcs | E  Side rail (Front) - 1pc | F  Side rail (Back) - 1pc |
| G  Long guard rail (Back) - 1pc | H  Short guard rail (Front) - 1pc | I  Support guard rail(Left) - 1pc |
| J  Upper (Left Front) - 1pc | J1  Upper (Left Back) - 1pc | K  Upper (Right Front) - 1pc |
| K1  Upper (Right Back) - 1pc | L  Upper horizontal bar - 1pc | M  Block - 2pcs |
| N  Slats - 15pcs | N1  Slats - 2pcs | O  Front panel of Trundle - 1pc |
| P  Back panel side rail of Trundle -1pc | | |

Hardware List


| | | |
|--|--|--|
| 1  Ø8*30mm Wood dowel (6pcs) | 2  (Ø15)1/4"*100mm Hex-Head bolts (14pcs) | 3  (Ø15)1/4"*80mm Hex-Head bolts (16pcs) |
| 4  (Ø12)1/4"*35mm Hex-Head bolts (2pcs) | 5  (Ø12)1/4"*65mm Hex-Head bolts (8pcs) | 6  1/4"*15 (9.5mm) Horizontal-Hole bolts(30pcs) |
| 7  (1/4")4.5*58mm Allen key (1pc) | 8  Ø4*30mm Wood screws (42pcs) | 9  Ø3.5*19mm Wood screws (8pcs) |
| 10  75*20*2 mm Metal bracket (2pcs) | 11  100*63*20mm Wheels (4pcs) | 12  95*95*18*3mm Metal bracket (2pcs) |
| 13  40*18*18*2mm Metal bracket (2pcs) | 14  Ø3.5*15mm Wood screws (16pcs) | |

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

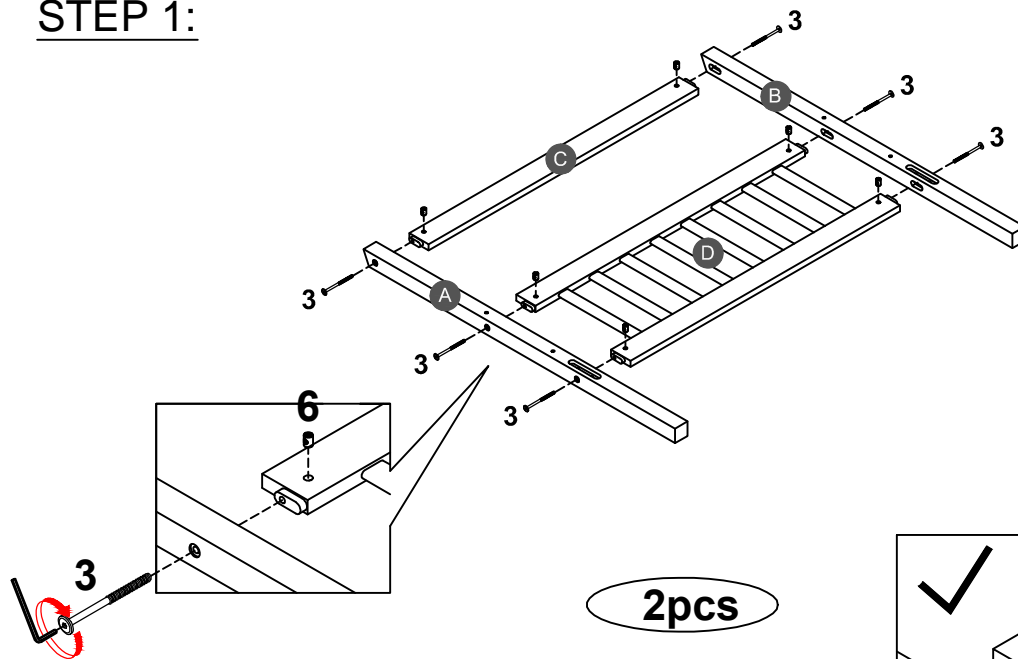

3




12PCS

6




12PCS

Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened

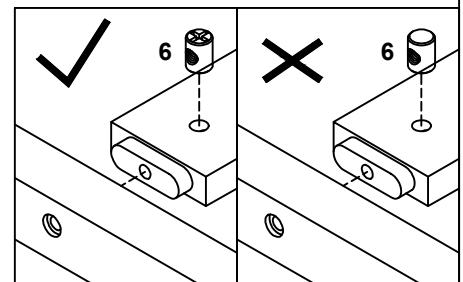

STEP 2:

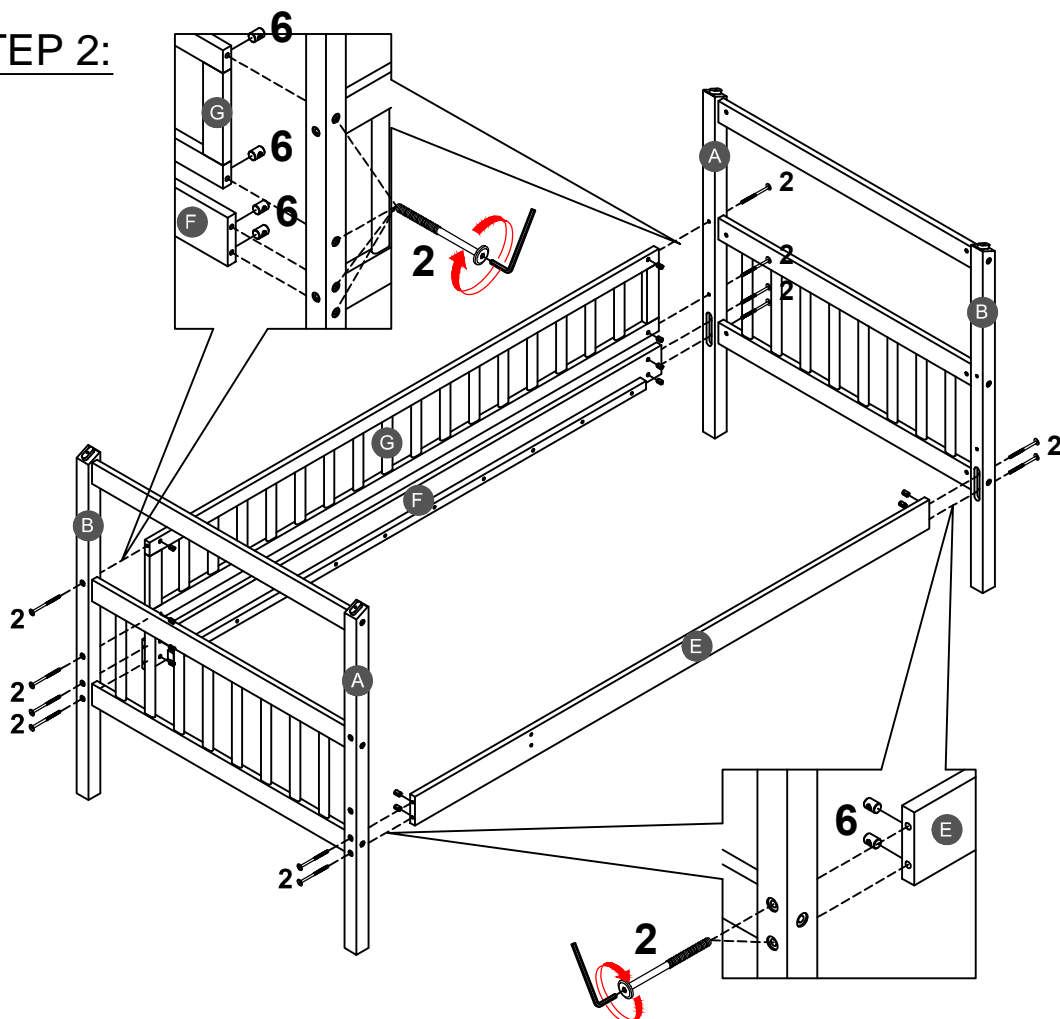

2







12PCS


6




12PCS

STEP 3:


| | | | | | | | |
|-------------|---|-------------|---|-------------|---|-------------|---|
| 2 |  | 3 |  | 4 |  | 6 |  |
| 2PCS | | 2PCS | | 2PCS | | 4PCS | |

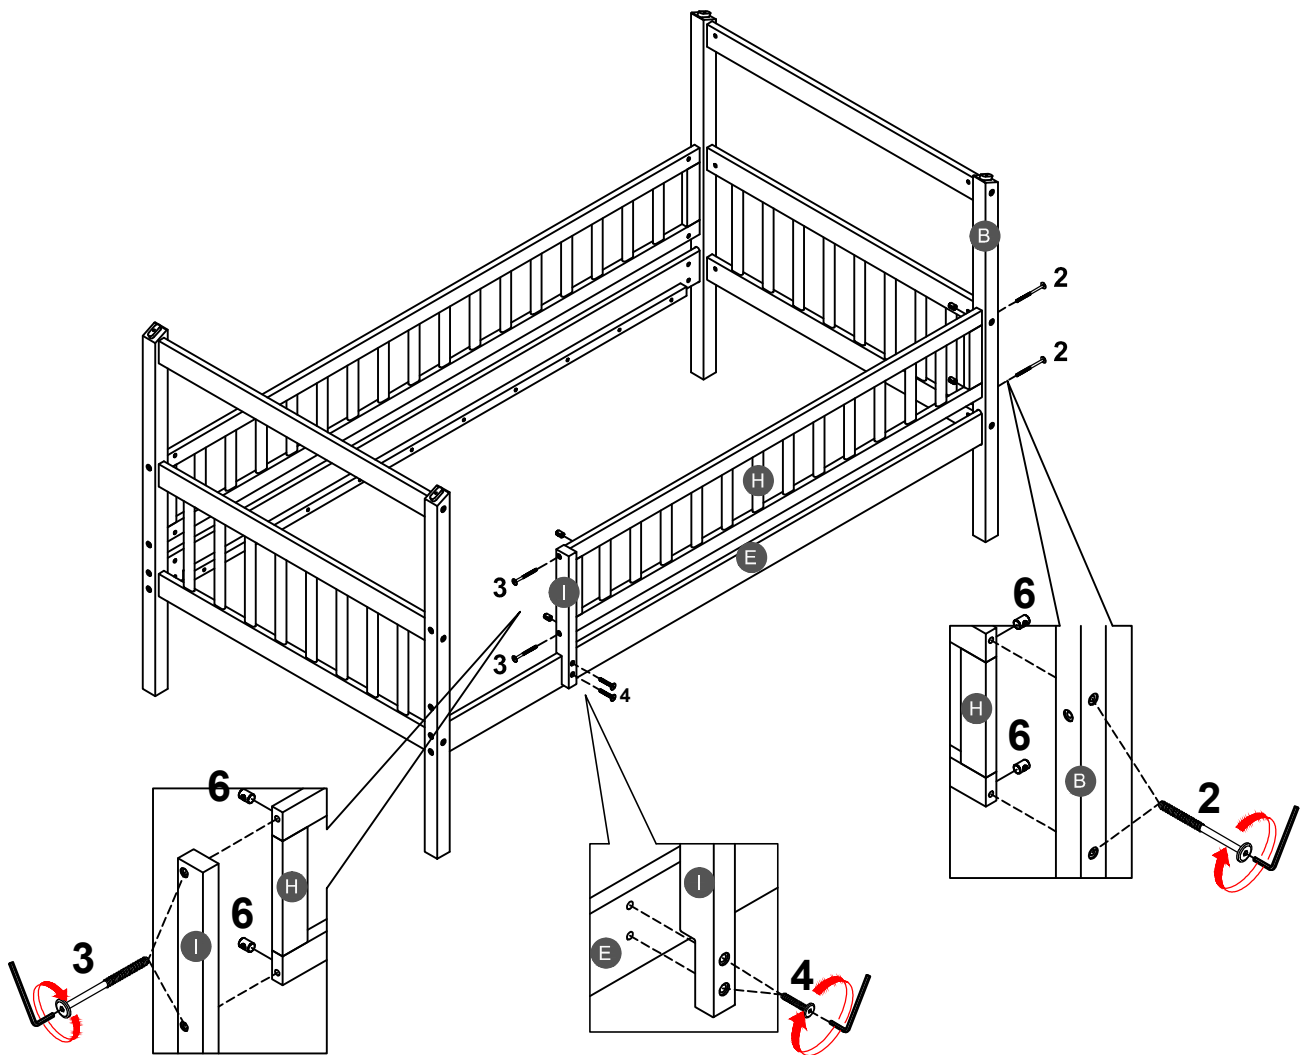



STEP 4:

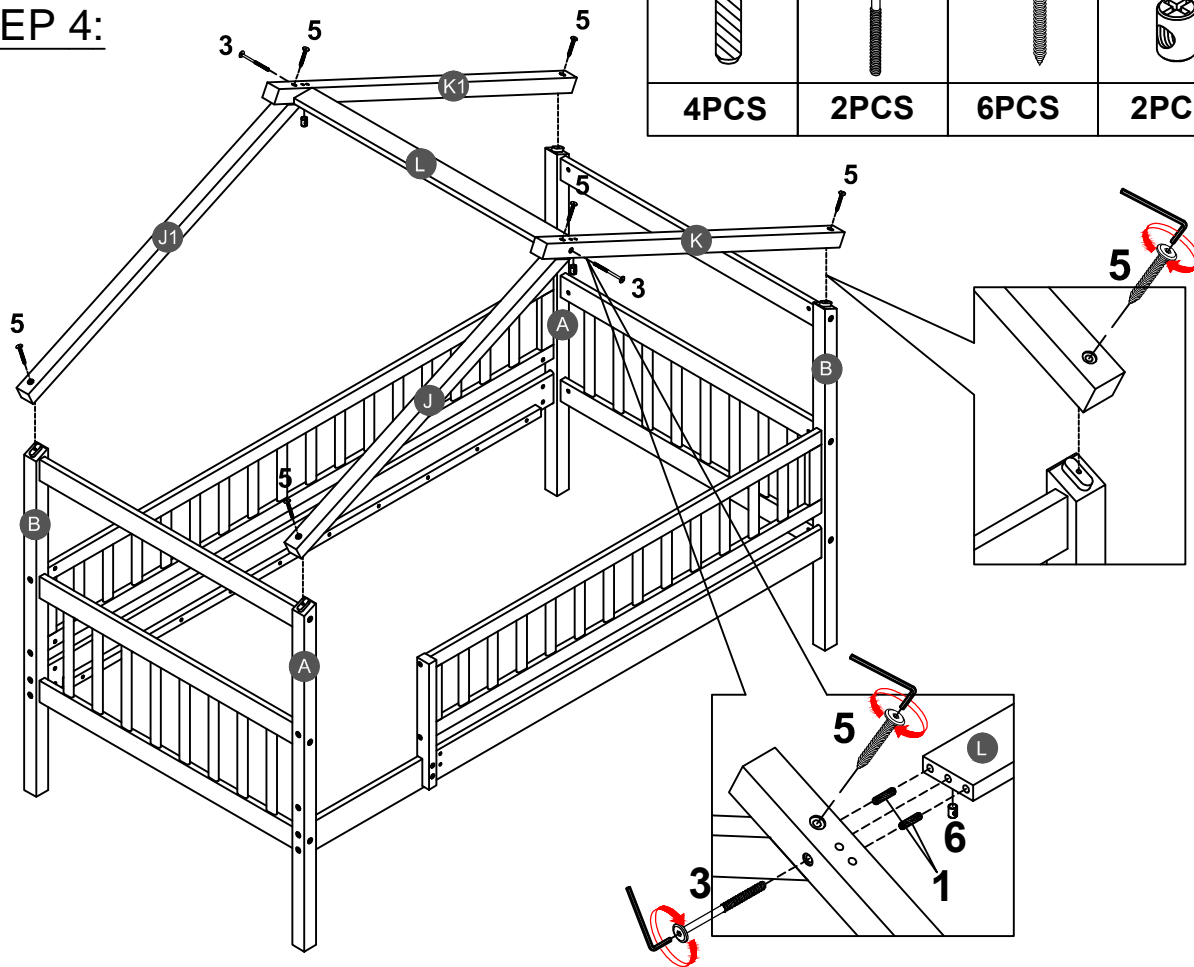

STEP 5:

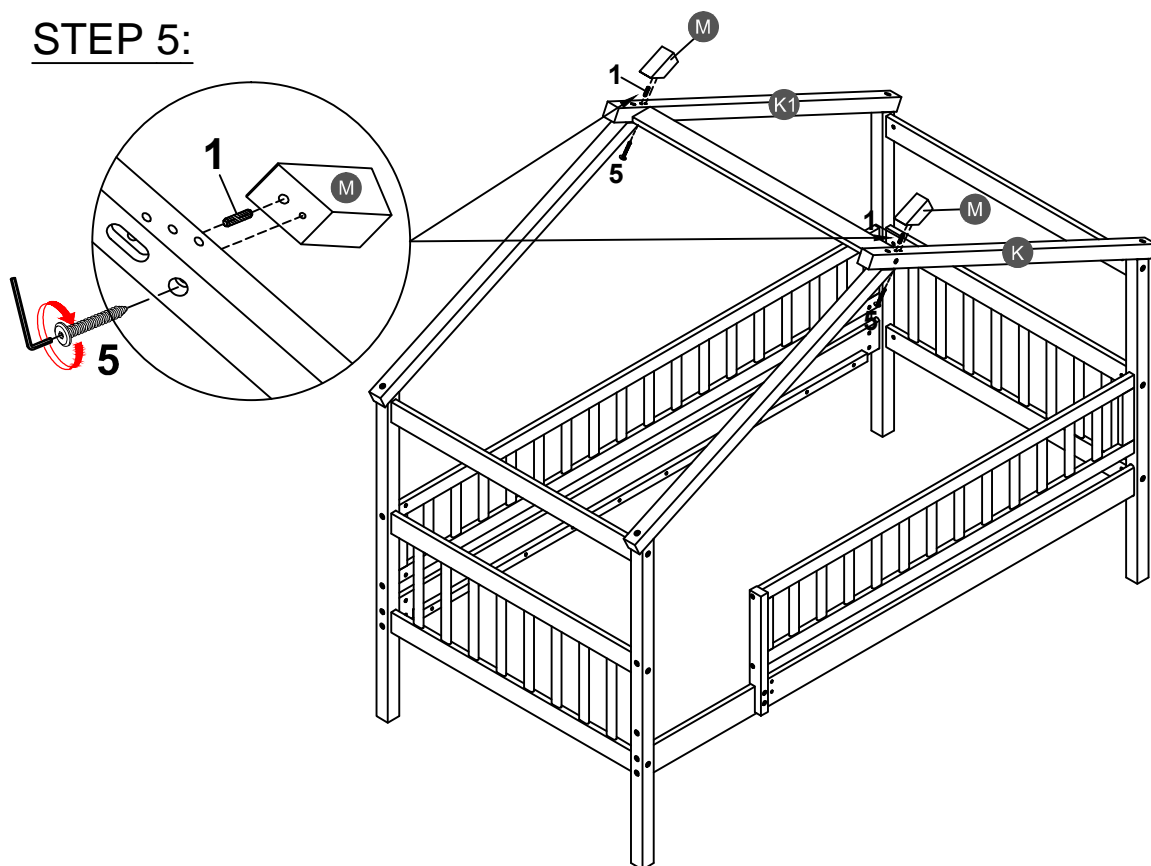

STEP 6:

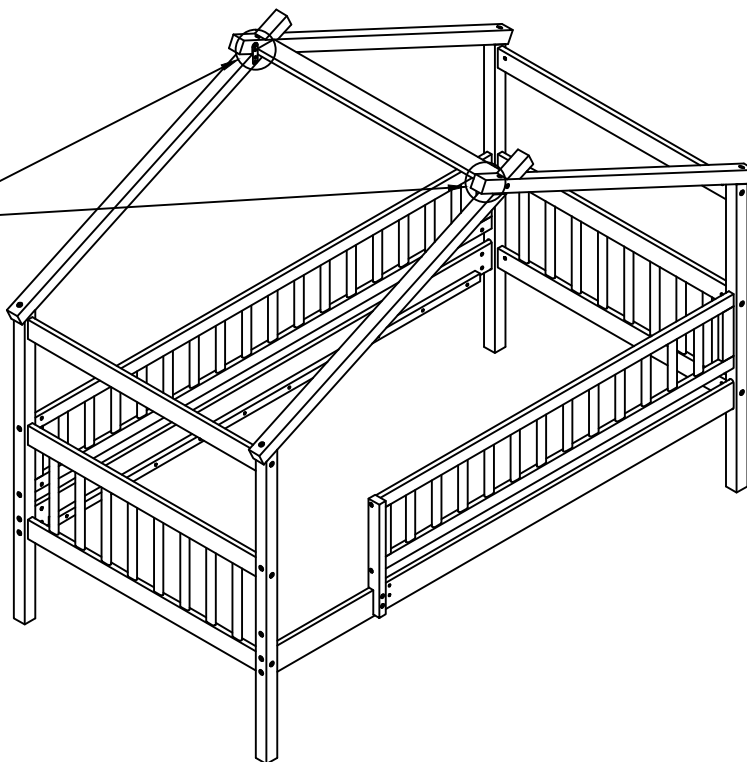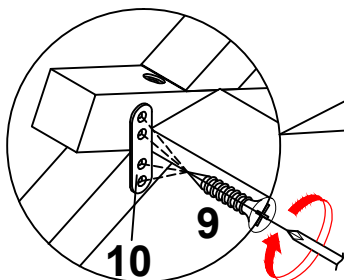

9




8PCS

10



2PCS



STEP 7:

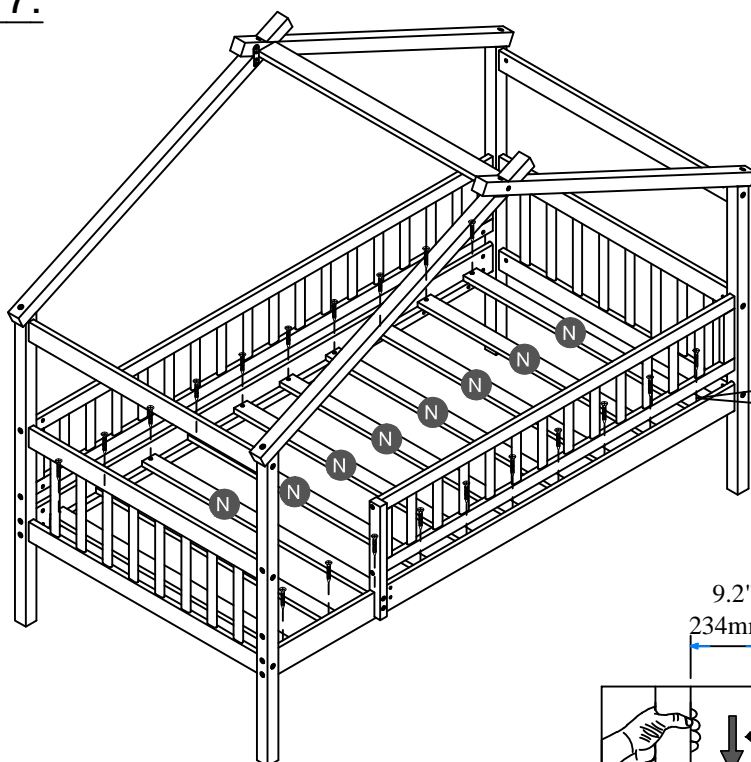

8




20PCS

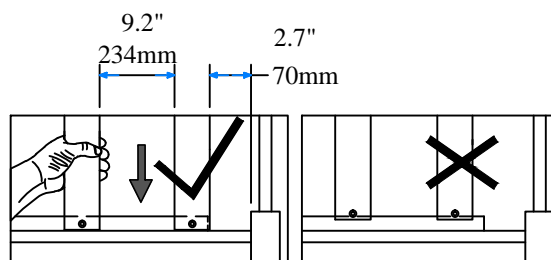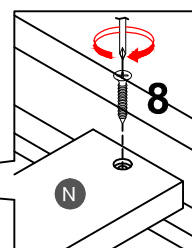

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 8:

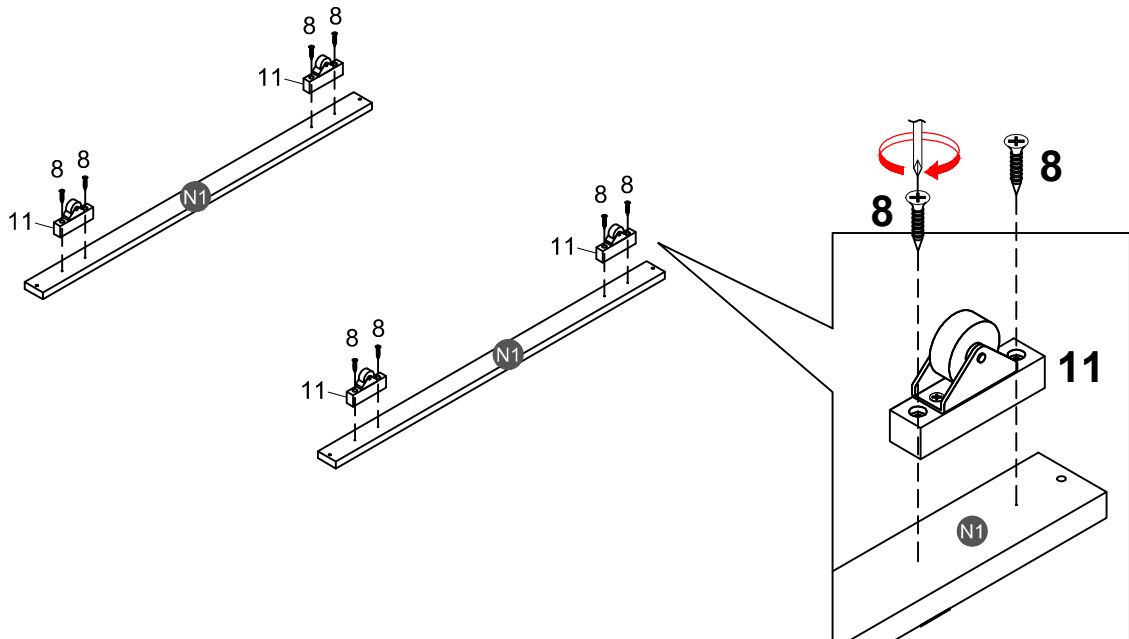

8




8PCS

11



4PCS



STEP 9:

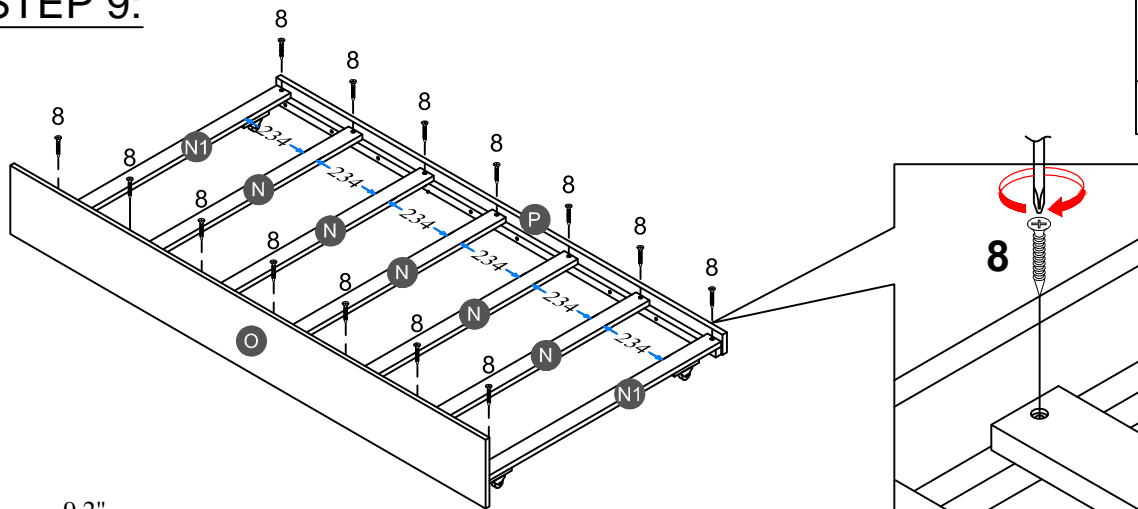

8



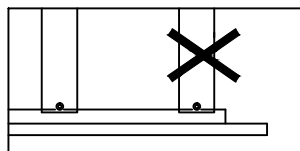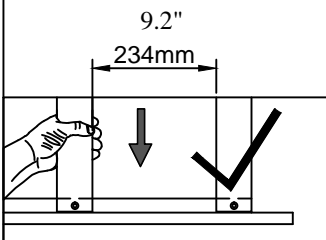


14PCS





Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.


STEP 10:

| | |
|---|---|
| 12 | 14 |
|  |  |
| 2PCS | 8PCS |

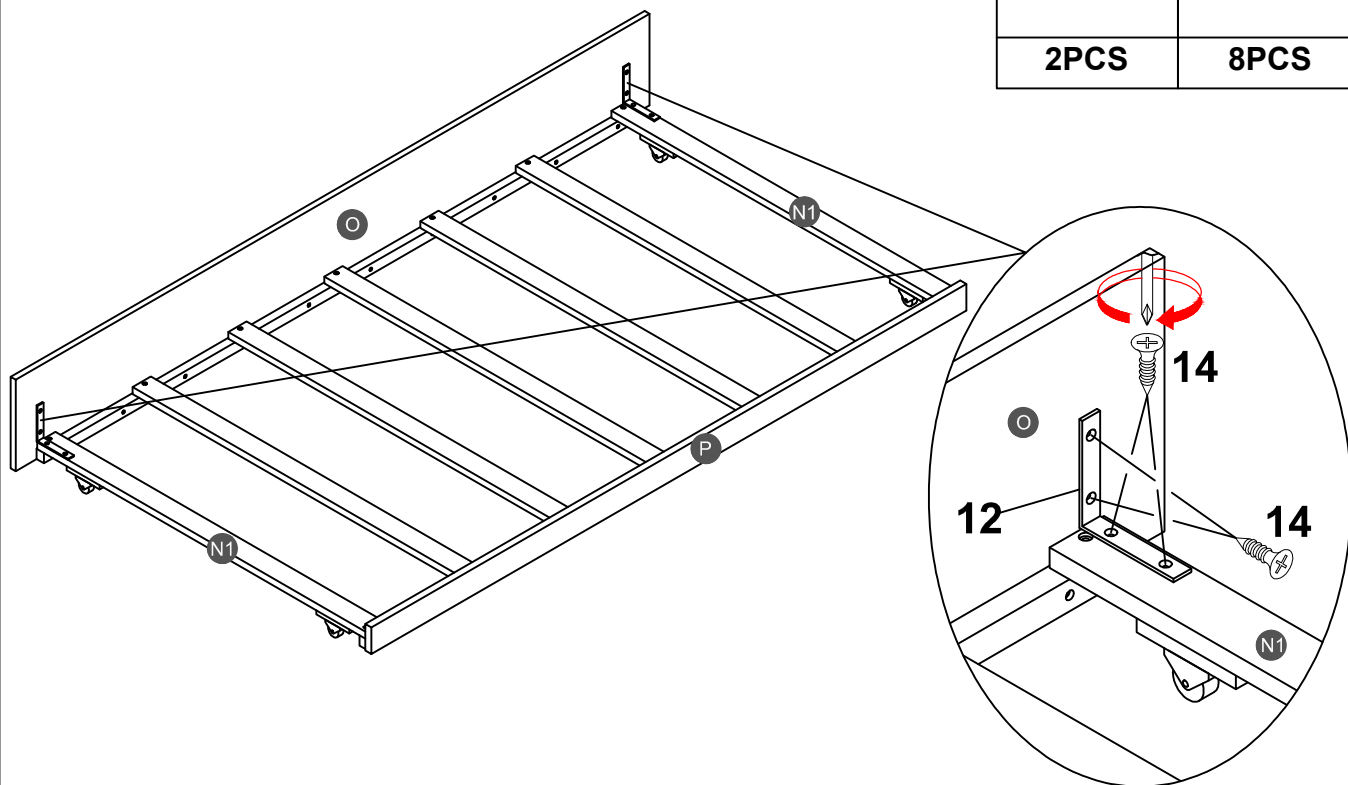


STEP 11:

| | |
|---|---|
| 13 | 14 |
|  |  |
| 2PCS | 8PCS |

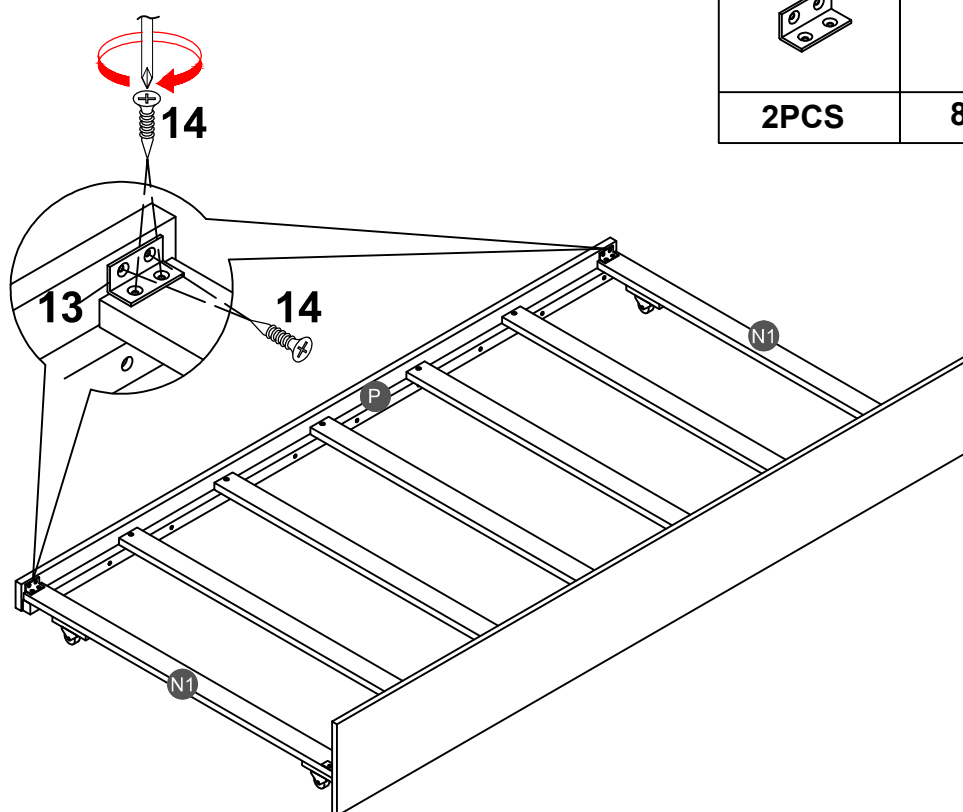

STEP 12:

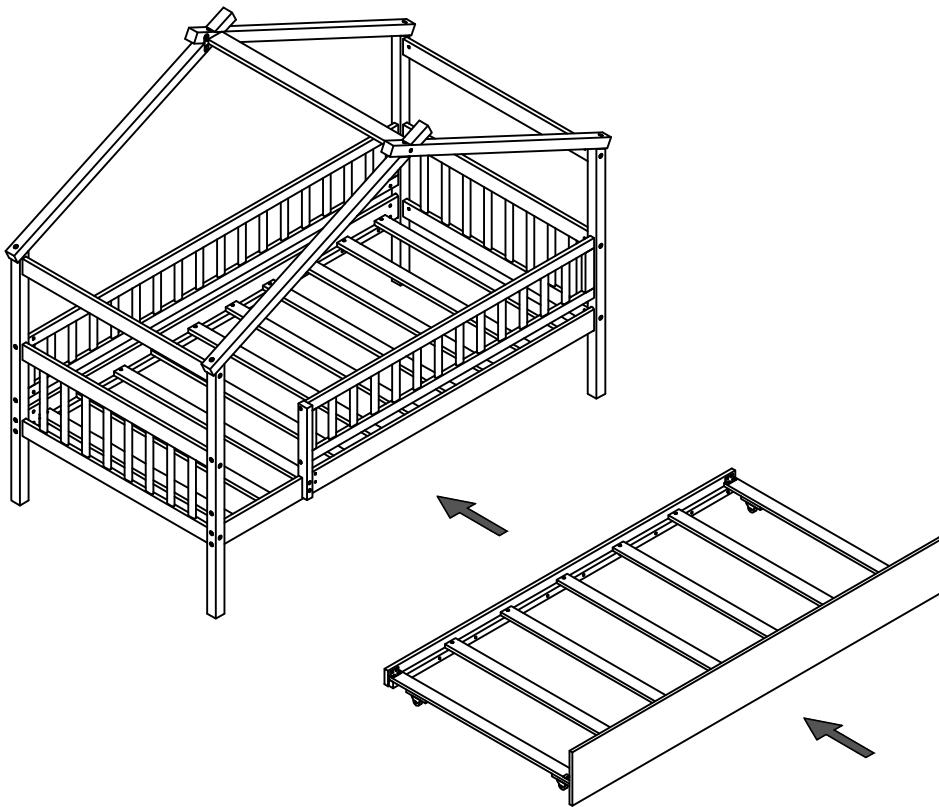

Push Trundle and Drawer under the bottom of Bunkbed.

