



**COUNT AND INSPECT ALL PARTS CONFIRMING ALL
WERE RECEIVED AND ARE IN GOOD CONDITION.
FOR ANY REPLACEMENT PARTS OR HARDWARE,
AND/OR HELP WITH ASSEMBLY;**

CONTACT US AT:


info@camaflexi.com

OR CALL US AT:

(347)844-9307

**PLEASE HAVE THE MODEL NUMBER AND/OR PART
NUMBER NEEDED AS SHOWN IN THE PACKAGING OR
ASSEMBLY MANUAL**

Mid Century Modern DayBed - Twin Size

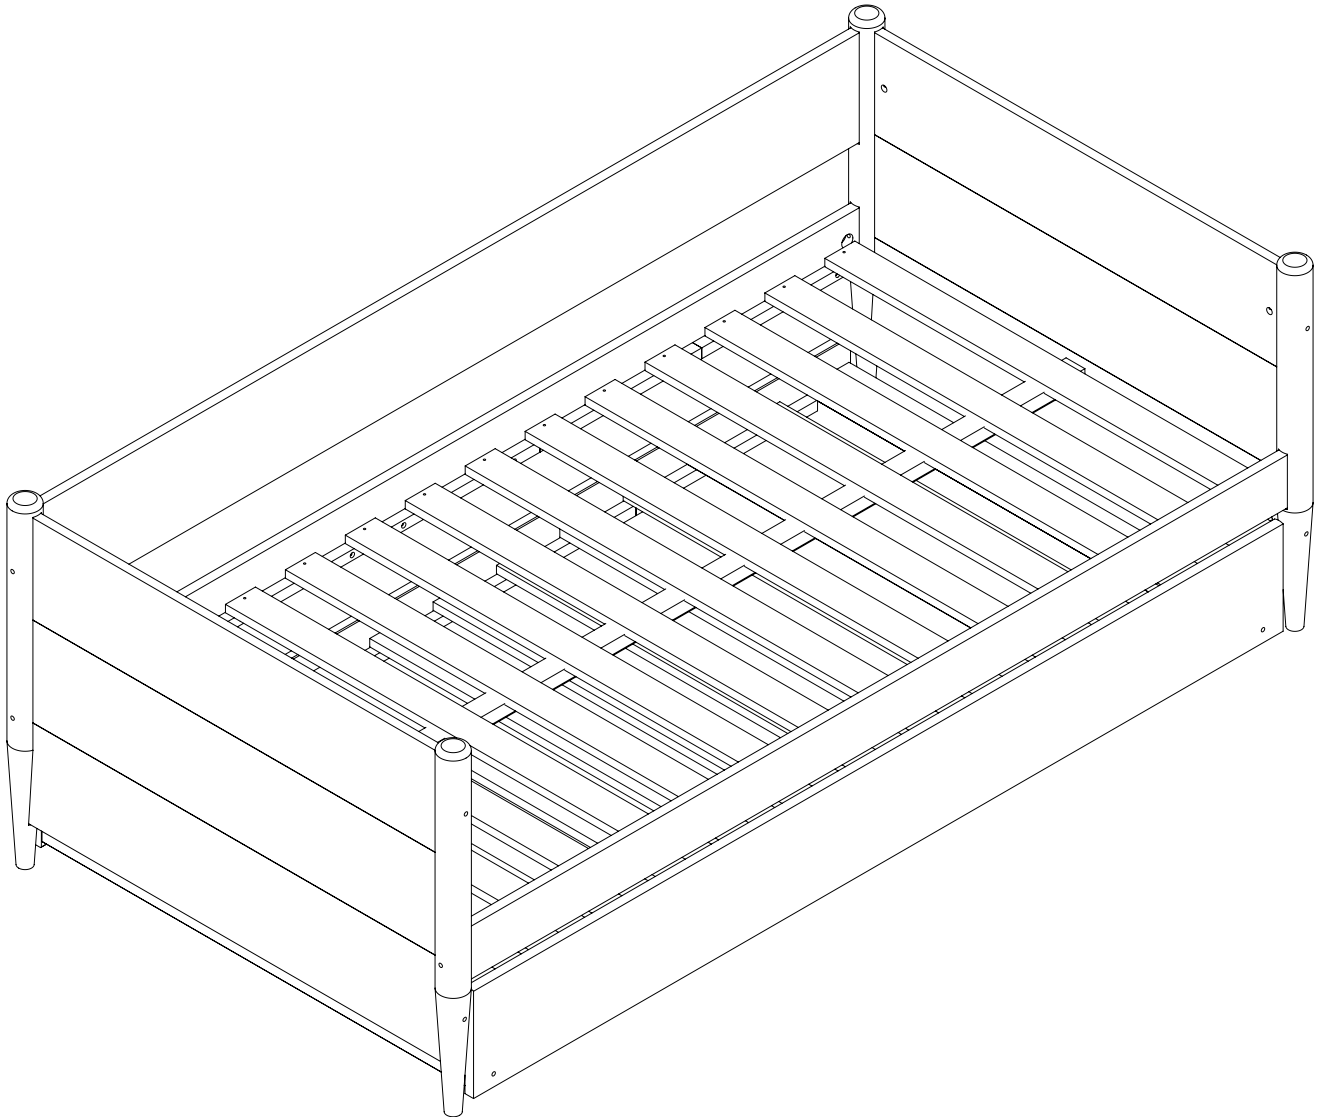













ATTENTION

- 1 - Read and observe carefully all the assembly instructions before beginning assembly.
- 2 - The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- 3 - The screws must be tightened periodically.
- 4 - Avoid contact with sharp objects.
- 5 - Avoid banging pieces together.

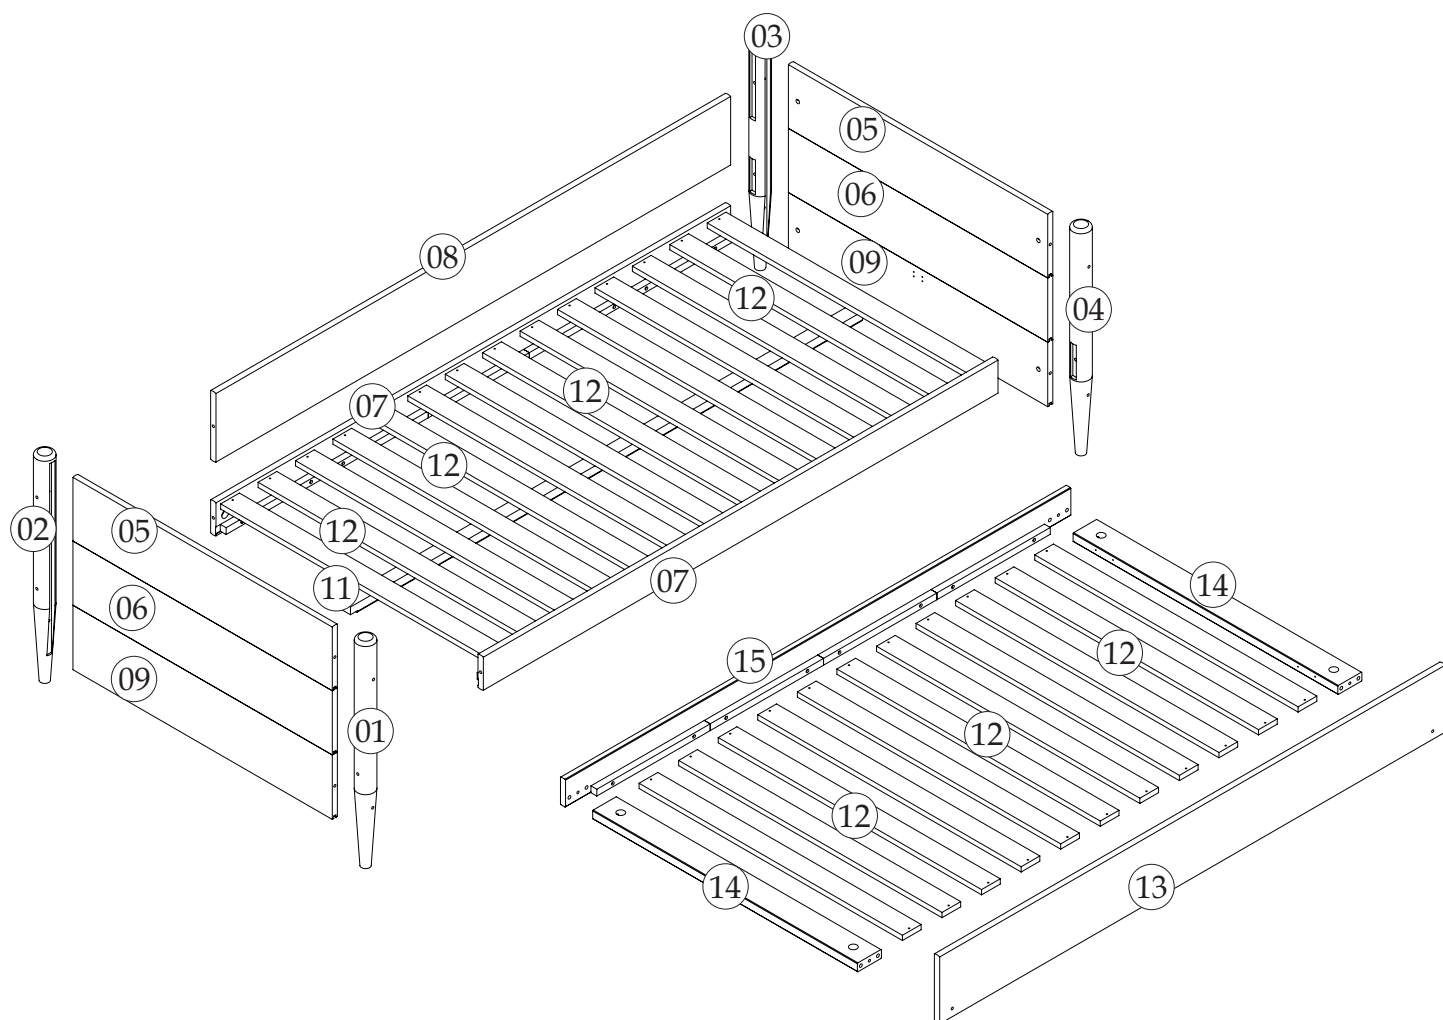


Parts and hardware list for assembly.
Please confirm all parts available before assembly.




A +2x spare 08x  $\varnothing 3/8" \times 1 9/16"$	F +1x spare 01x  $1/4" \times 4 1/4"$	I +2x spare 48x  $\varnothing 1/8" \times 1 3/8"$	J 02x 
Y 04x  2"	Z +2x spare 28x  $\varnothing 1/8" \times 5/8"$	AA +1x spare 10x  $1/4" \times 1/2"$	BC +1x spare 08x  $1/4"$
BW 02x  $3 1/4"$	BZ +2x spare 18x  $\varnothing 1/4" \times 3 1/2"$	BX +2x spare 06x  $3/4"$	


Step - 01

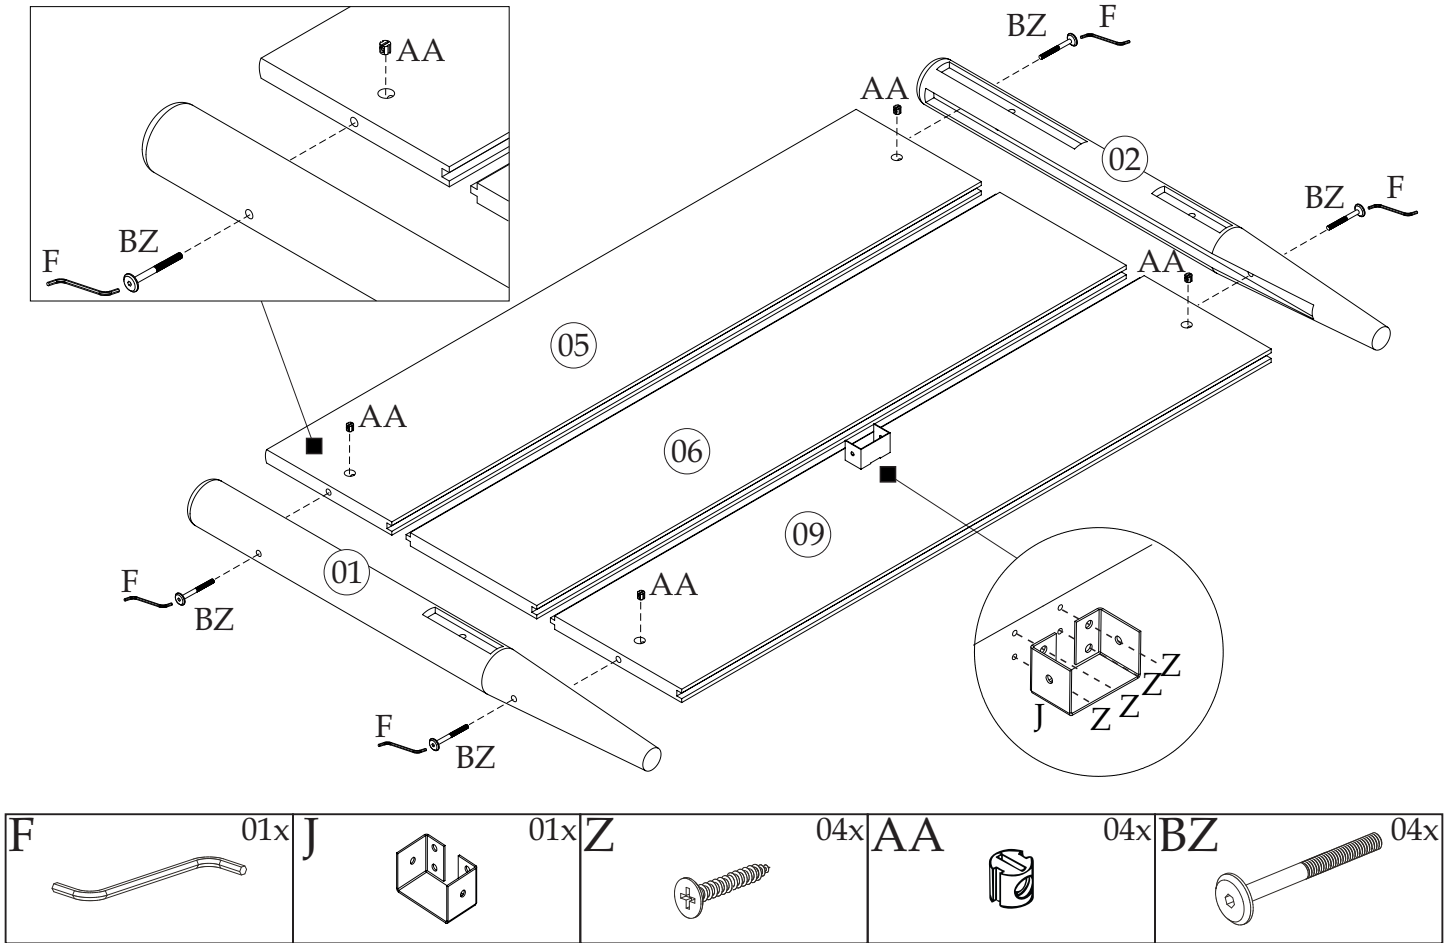


Step - 02

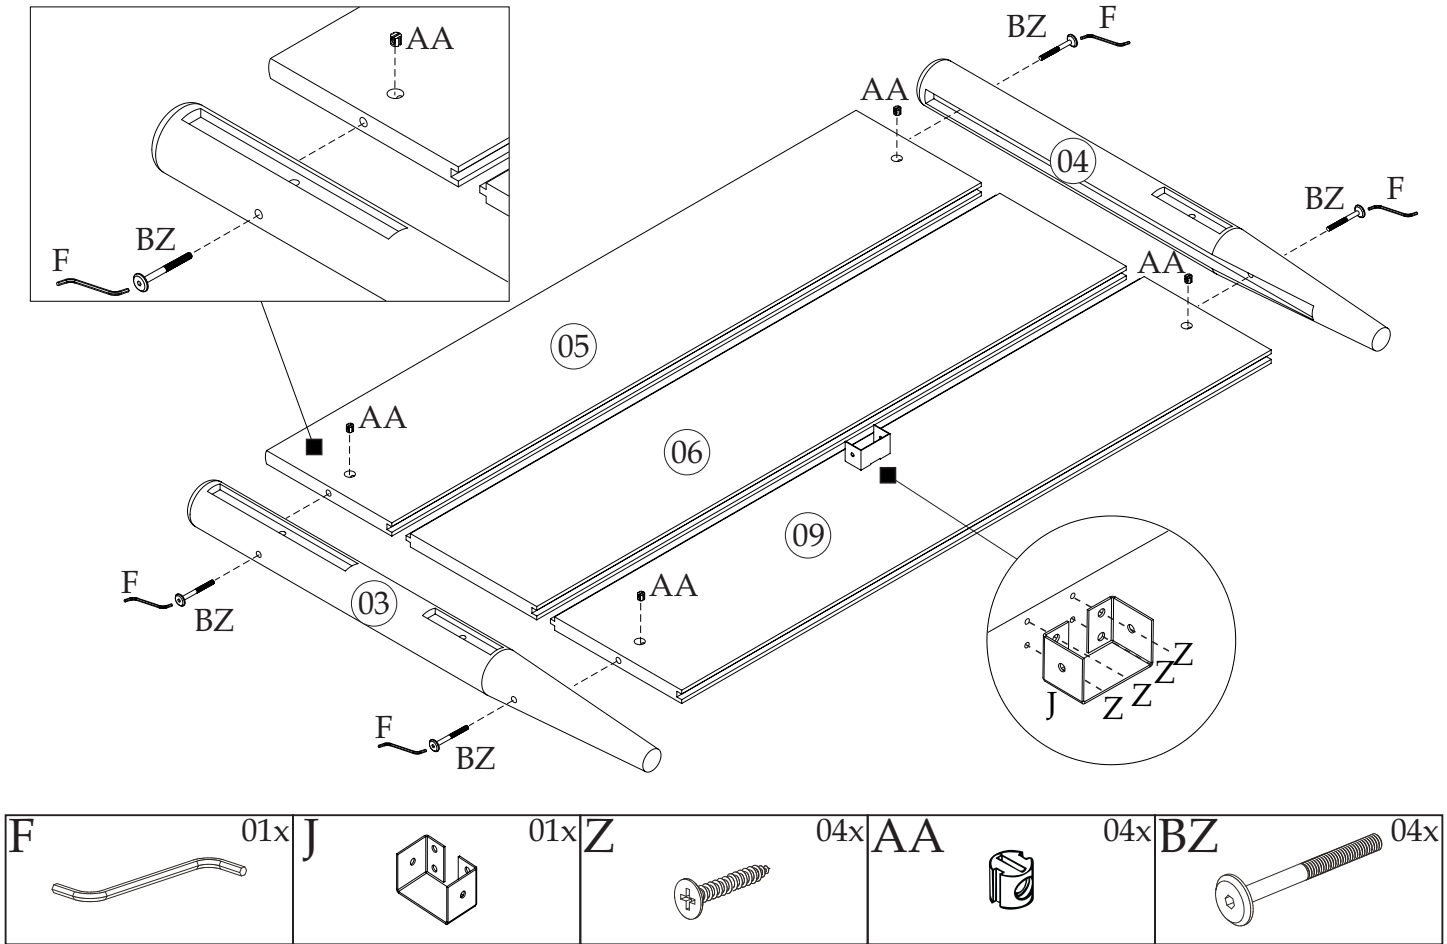


Step - 07

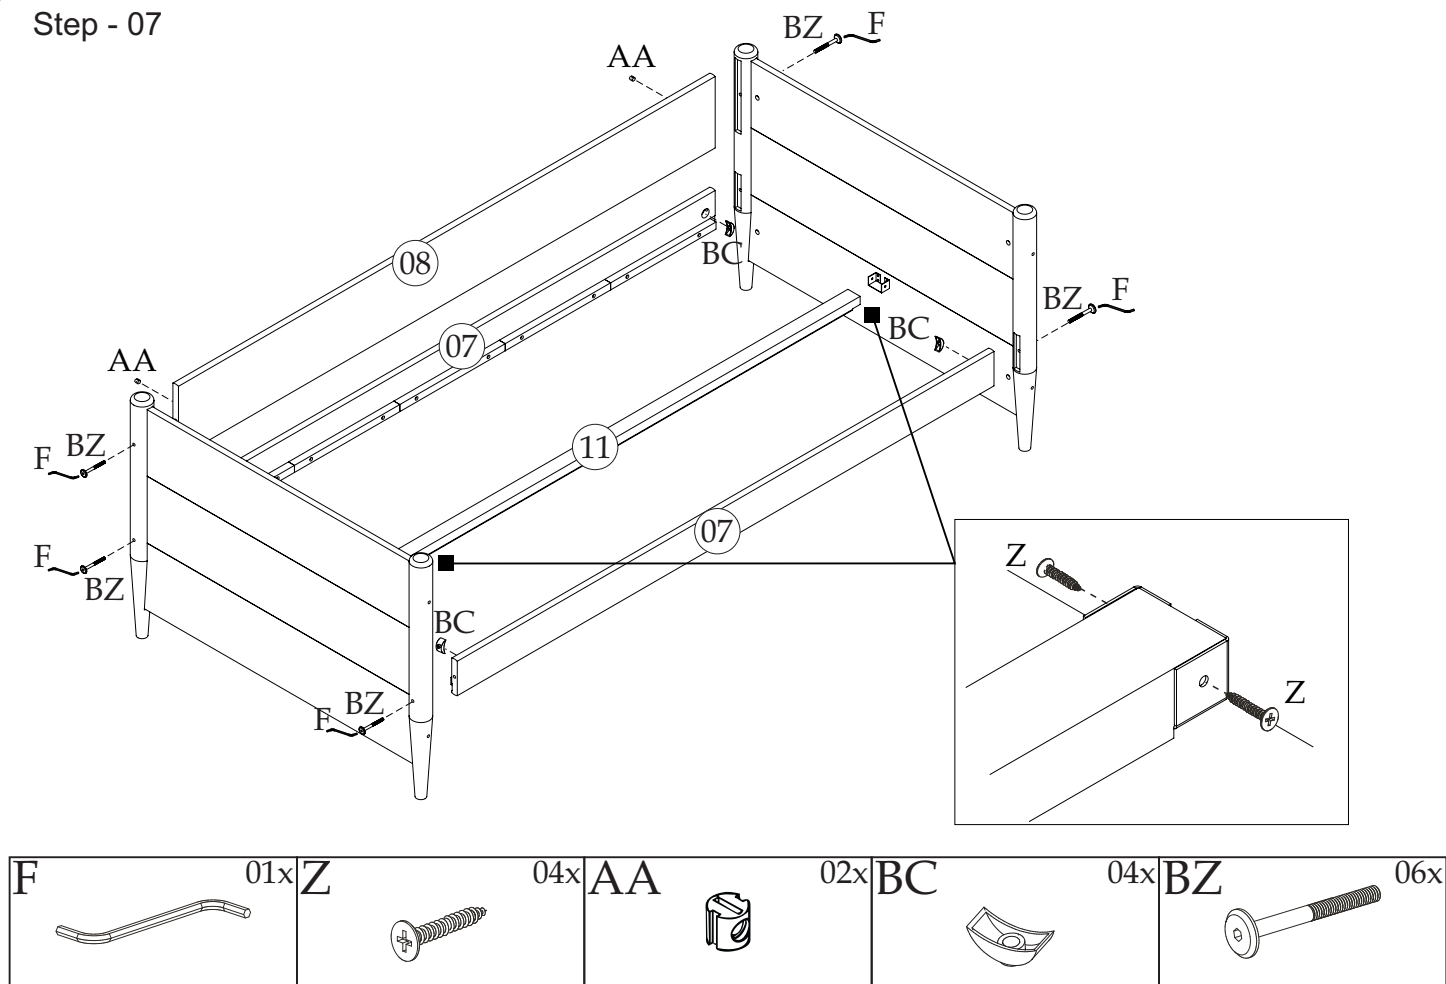

Step - 08

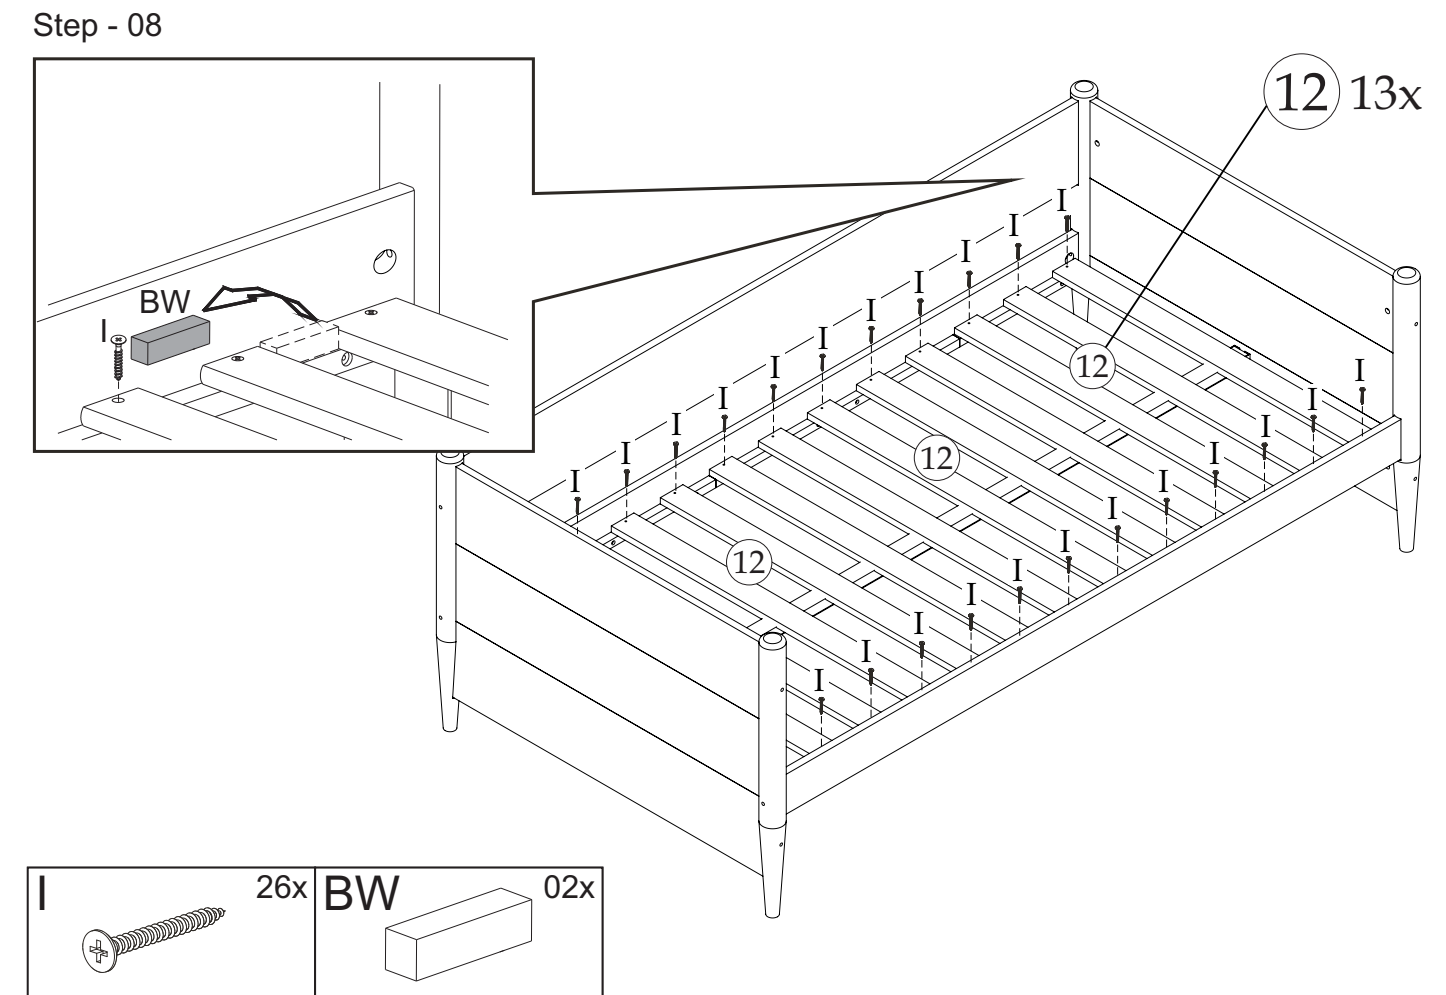

Step - 09

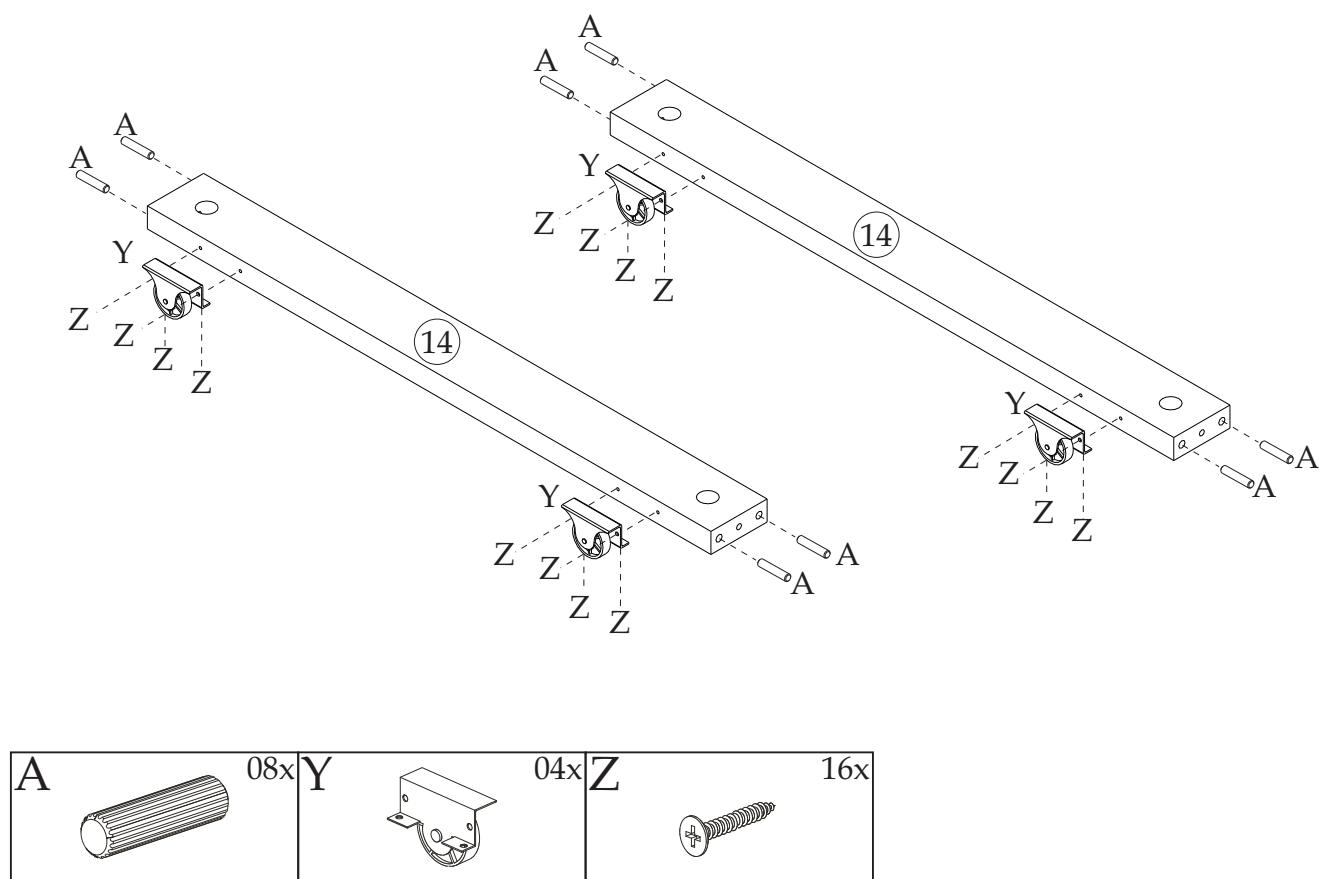

Step - 10

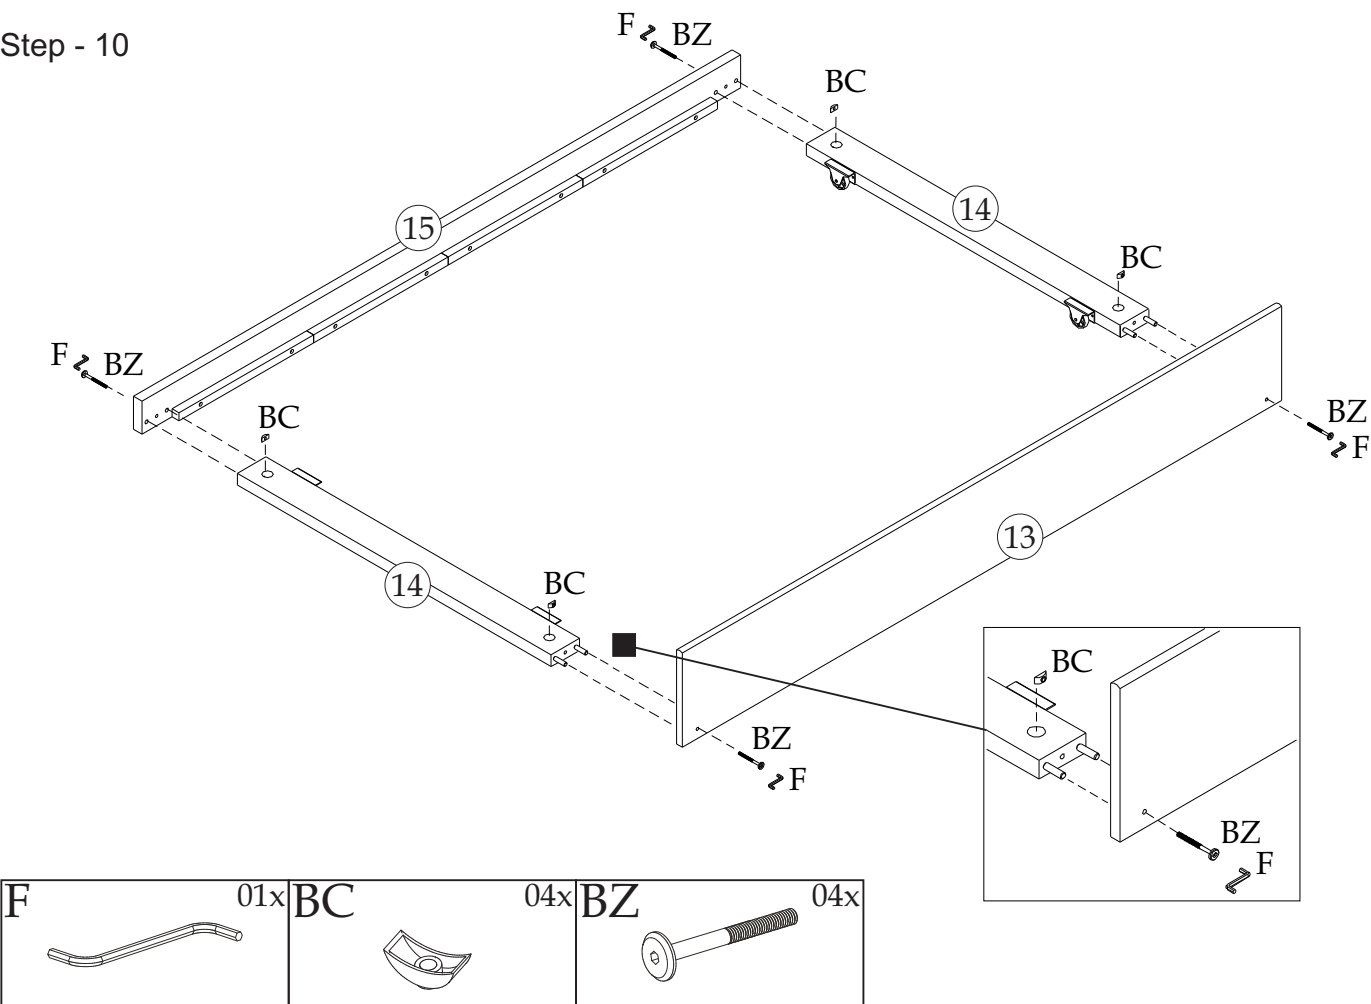


Diagram illustrating a window blind assembly. A bracket labeled "BW" is shown attached to the side of the blind. A dashed line indicates a distance of "2" (2 inches) from the bracket to the edge of the blind. A curved arrow points to the bracket.

