



Tommy Docks

4003 Dixie Ave, Wausau, WI 54401

Phone : 715-842-3804

Toll Free : 866-675-1880

Fax : 715-842-3420

## Support Brace

Assembly Instructions

Model #TD-30004 (Normal Duty), TD-30005 (Heavy Duty)

### Components



Lower and Upper Clamp



Support Brace

### Tools




1/2" Box  
End Wrench

**1**

Assemble Lower Clamp Assembly onto Pipe Leg with Nut and Bolt provided (1a). Do not over tighten the Bolt and Nut as the Clamp Assembly must fit loose on the Pipe Leg to allow it to be lowered to its lowest position.

Assemble Upper Clamp Assembly onto the adjacent Pipe Leg with Nut and Bolt provided and tighten securely (1b). The Upper Clamp Assembly should be located directly below the Pipe Leg Mounting Bracket as referenced in the diagram. The tightened Upper Bracket will hold the Support Bracket securely in place.

#### Lower Clamp Assembly

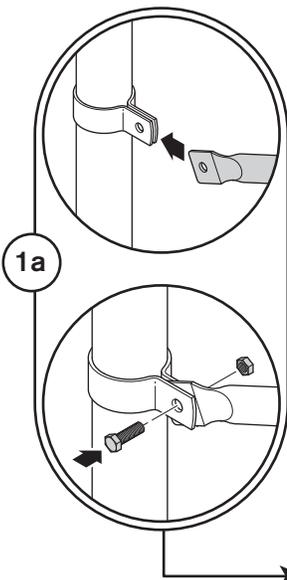

#### Upper Clamp Assembly

