


FURNITURE


SLIDING DOOR HARDWARE

MODEL No. FSDH-TOPKT*-6-DD

INSTALLATION MANUAL

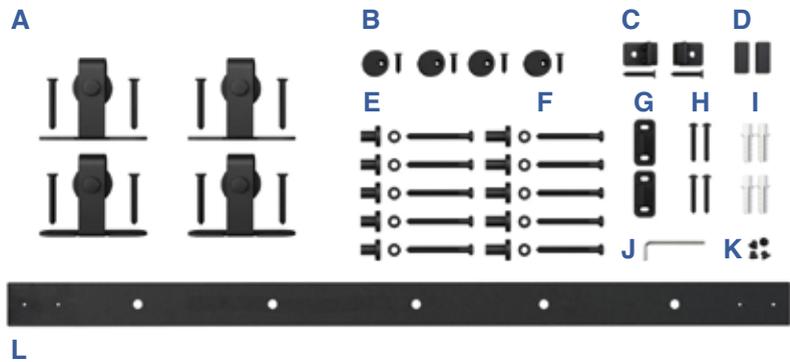

TOOLS REQUIRED

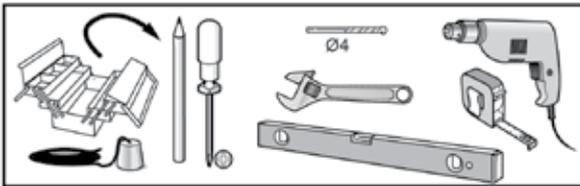

- Plumb Line
- Pencil
- Phillips Head Screwdriver
- 4mm Drill Bit
- Wrench
- Level
- Power Drill
- Tape Measure


INCLUDED IN KIT

A	Door Roller Hardware	x4
B	Anti-Jump Disk	x4
C	Door Stop Hardware	x2
D	End Cap	x2
E	Mounting Bracket for 3/4" and 1" Doors	x5 ea.
F	M6x60 Bolt + Washer	x10
G	Routed Door Guide	x2
H	ST4.2x35 Screw	x4
I	Anchor	x4
J	1.5mm Allen Key	x1
K	Hole Cover	x4
L	72" Rail	x1


PLEASE NOTE: The installation manual is a suggested guideline. Adjustments may need to be made based on your specific application.

Outwater Industries, Inc. assumes no liability for improper installation.


UNDERSTANDING YOUR RAIL

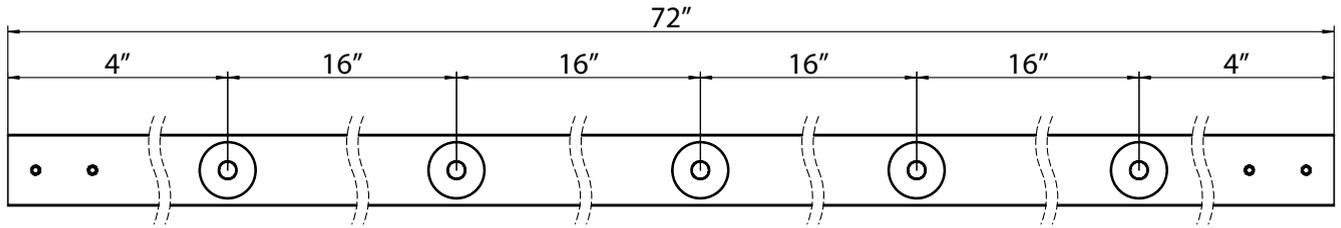

INSTALLATION

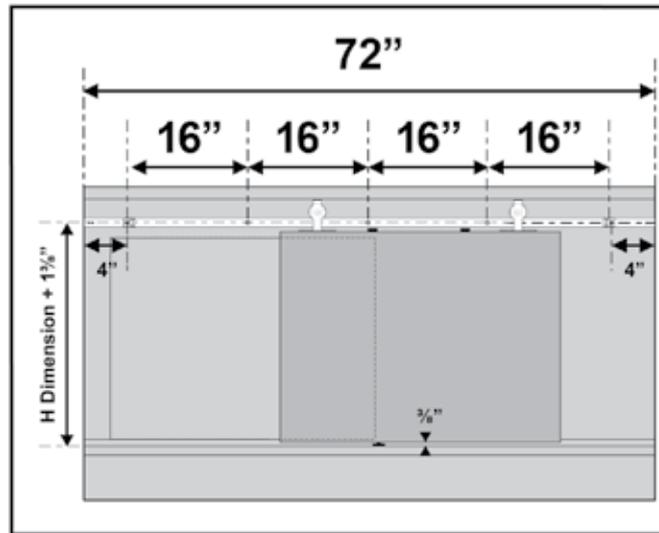


Using a pencil, mark the locations where you will drill holes as indicated.

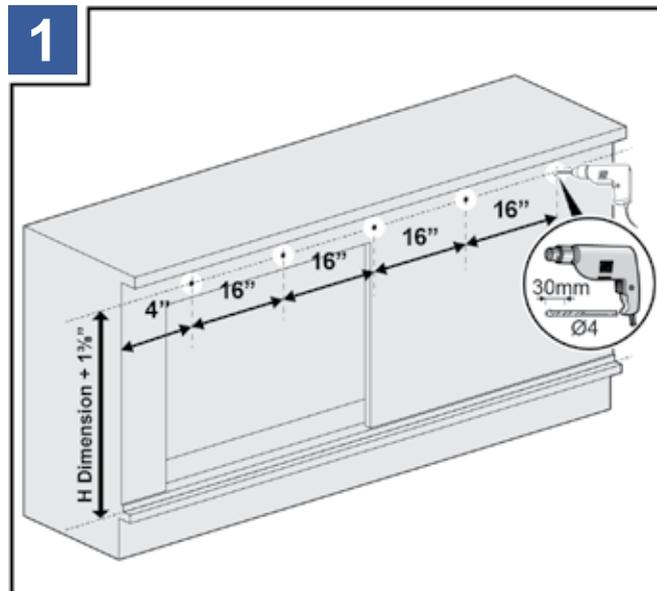


Using a power drill with a 4mm drill bit, drill holes as indicated.


Outwater Industries, Inc. assumes no liability for improper installation.

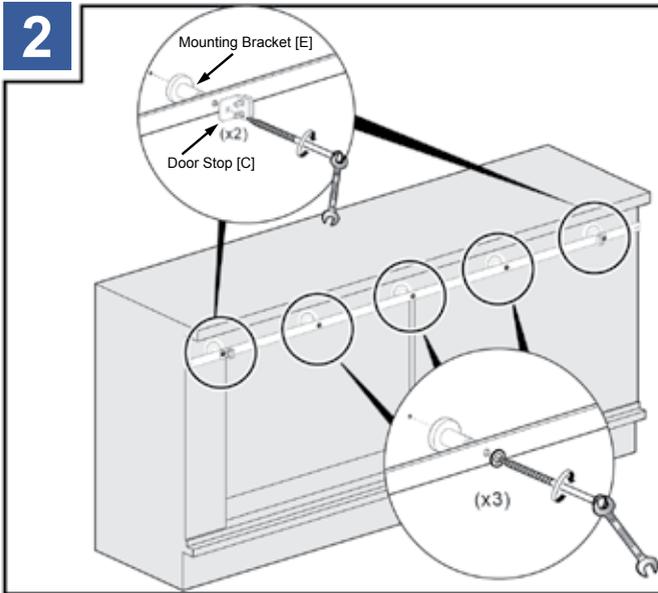

Install the rail, mounting brackets [E], and door stops [C].

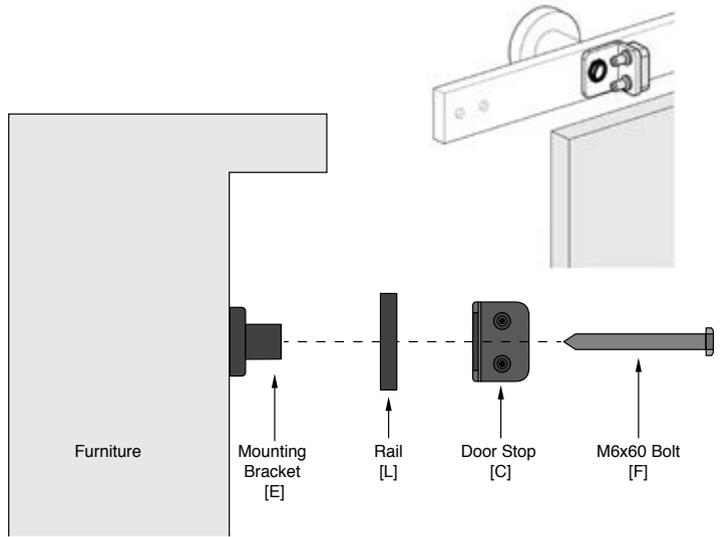

NOTE: Door stops [C] are installed on the outermost holes of the rail and shares the same mounting hardware [E].

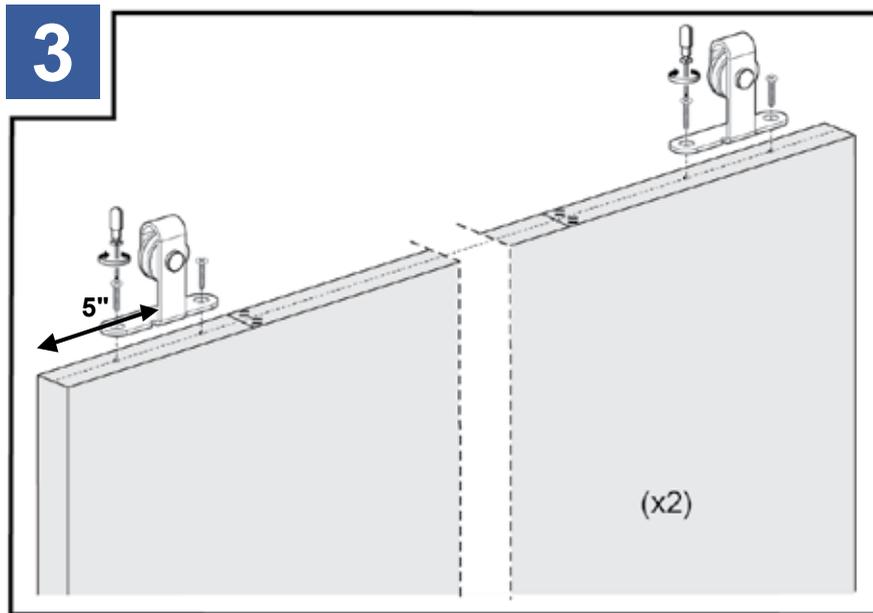


Drill holes into the doors as indicated. Attach the door rollers [A].


It is suggested that the door rollers [A] be mounted 5" from the edge of the doors to the neck of the rollers.

NOTE: Trimming the rail will alter the position of the roller hardware. Adjust accordingly.

FOR 3/4" DOORS

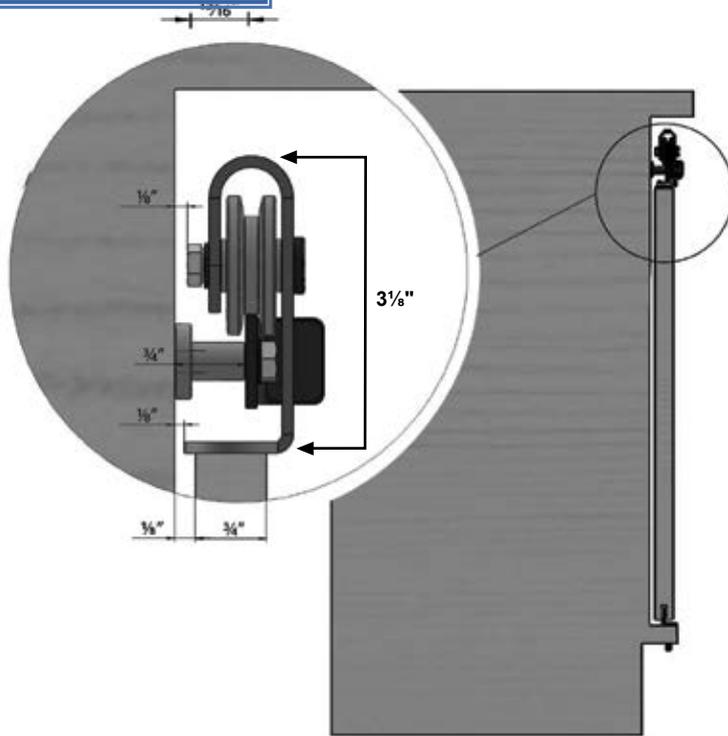


FOR 1" DOORS

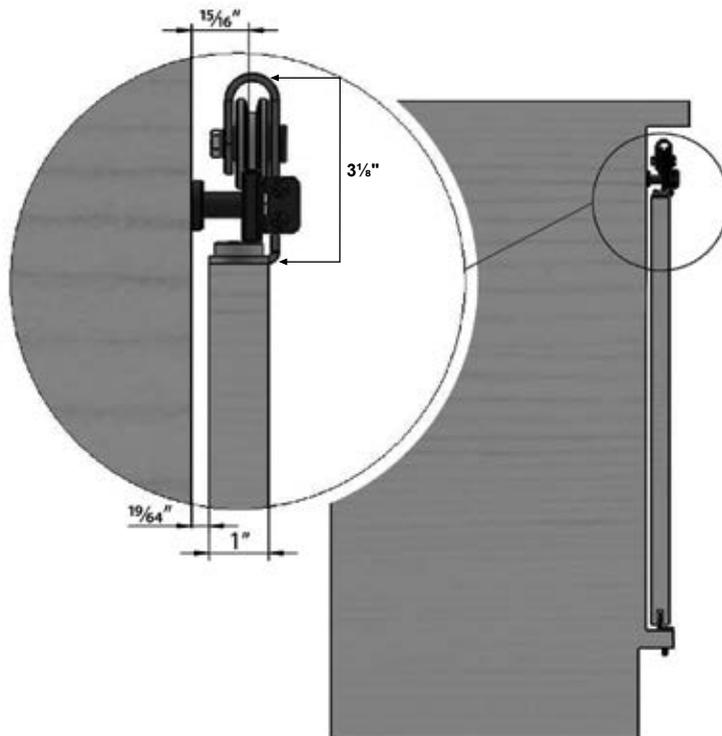


Allow a minimum 3-1/8" clearance above the doors.


Outwater Industries, Inc. assumes no liability for improper installation.

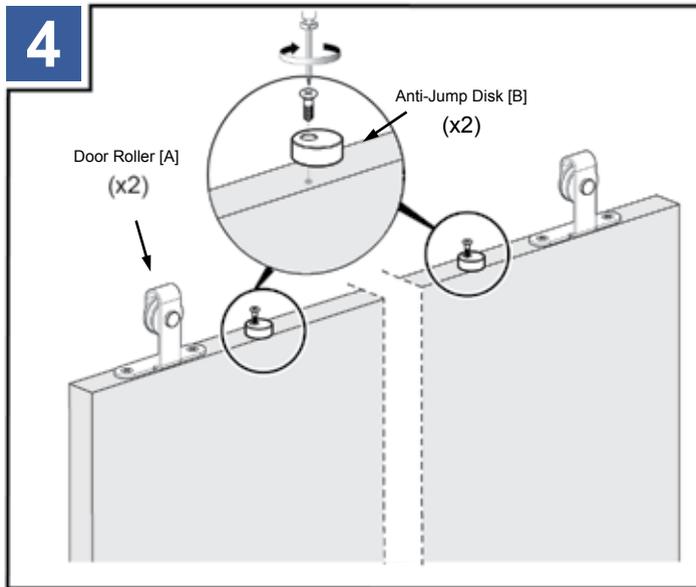


Attach the anti-jump disks [B] to the doors.

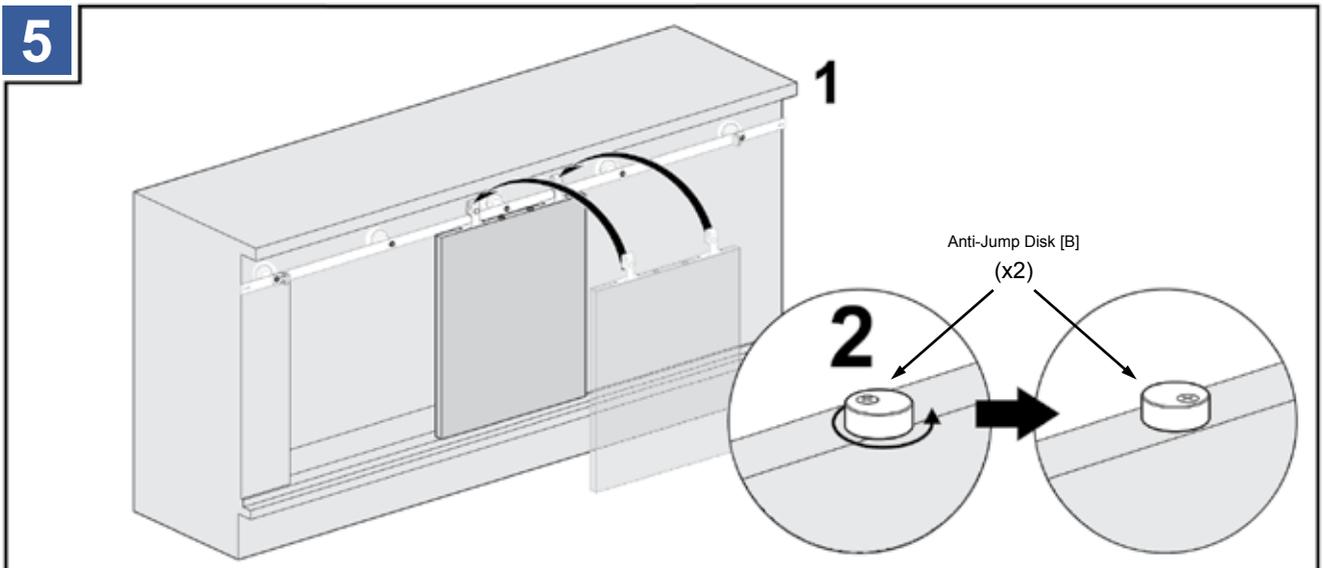


Attach the doors to the rail [L] and lock the anti-jump disks [B] into position. Doors should be routed beforehand if using the routed door guides [G].

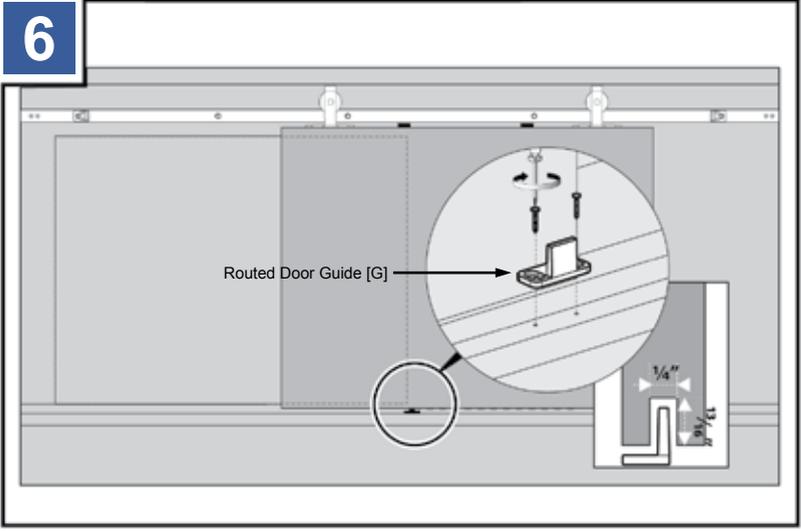

If using the routed door guides [G], install them at this time. Repeat steps 3-6 for additional door.

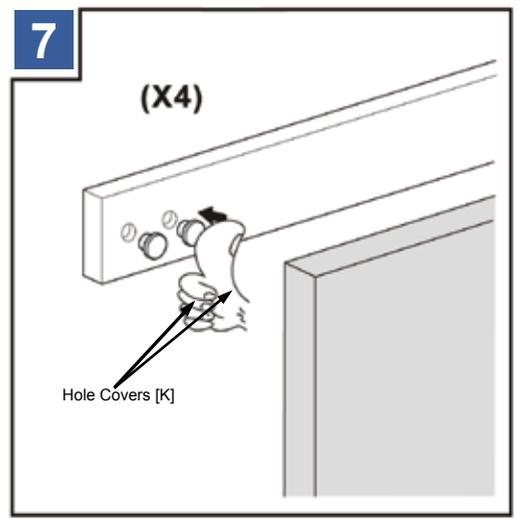


Use the hole covers [K] to give the rail a finished look.

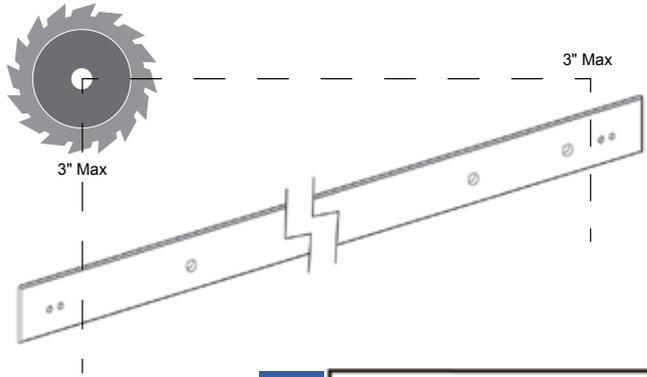

The rail can be trimmed if necessary using a band saw or hacksaw. Use blades suitable for iron or stainless steel depending on your rail.

NOTE: If you are trimming the rail, do so equally. Each rail can be trimmed equally up to 3" on both sides. However; trimming will alter the position of the roller hardware. Adjust accordingly.

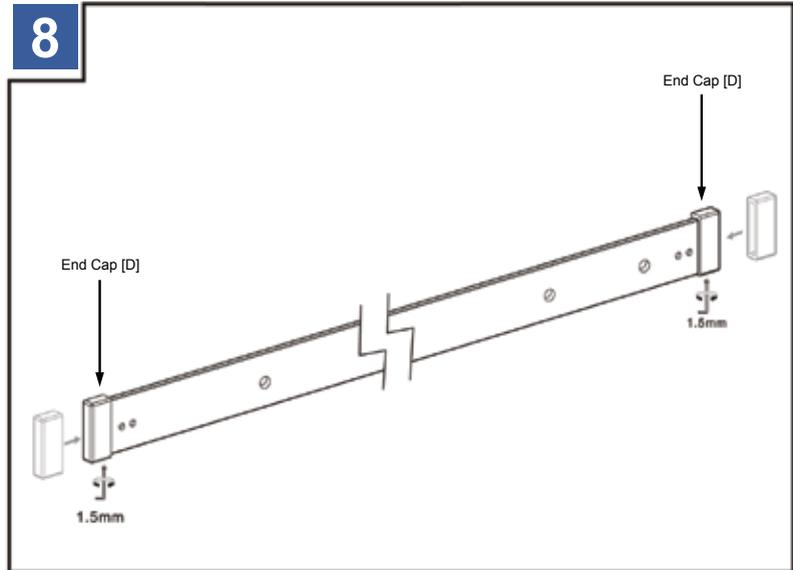

Once cut, add the end caps [D] to the ends of the rail and secure with a set screw.