

16949



STOP

DO NOT RETURN TO THE STORE!

If you discover missing or damaged parts, or if you have questions about the building process, please reach out to us directly for the fastest service.

24/7 Support

help.backyardproducts.com



- Answers to frequently asked questions
- Technical assistance and how-to videos
- Submit a help request
- Request replacement parts

Business Hours

(734) 242-6900

Monday - Friday 8:00am - 6:00pm EST
Saturday - Sunday Closed



Did you enjoy building your shed?

JOIN OUR TEAM

AND MAKE UP TO \$1,500/WEEK*

Call a Recruiter Today! 734-365-7000




Flexible schedule



No selling,
just building



Bonus incentives
available

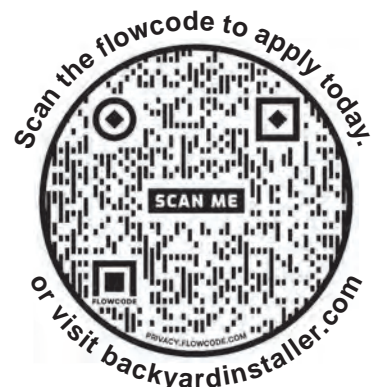

*based on number of completed installations




Win \$500

A new winner is selected every 2 months.

Review your product for the chance to win a **\$500 Visa Gift Card**.



How to Enter:

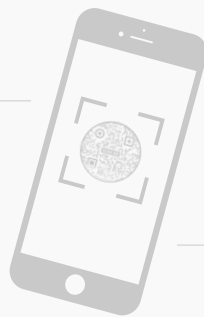

Open camera.
Aim. Tap.



1

Scan
QR code above.

2

Click
'write a review'

3

Find your product.
Tell us what you think.

4

Submit your review.
You'll be notified by e-mail if
you've won the \$500 gift card.


Write a Backyard Products, LLC. product review at backyardreviews.net for a chance to win a \$500 Visa gift card. No purchase necessary to enter. Must be legal U.S. resident (including DC & Puerto Rico), 18 or older to participate. Taxes on prize are responsibility of winner. Odds of winning depend on the number of eligible reviews received. Void where prohibited. For complete details and official rules, visit <https://backyardreviews.net/sweepstakes-rules>.

ASSEMBLY MANUAL

GABLE 12' x 20' (365,8 x 609,6 cm)

ACTUAL FLOOR SIZE: 144" x 240" (365,8 x 609,6 cm)

KEEP THIS MANUAL FOR FUTURE REFERENCE

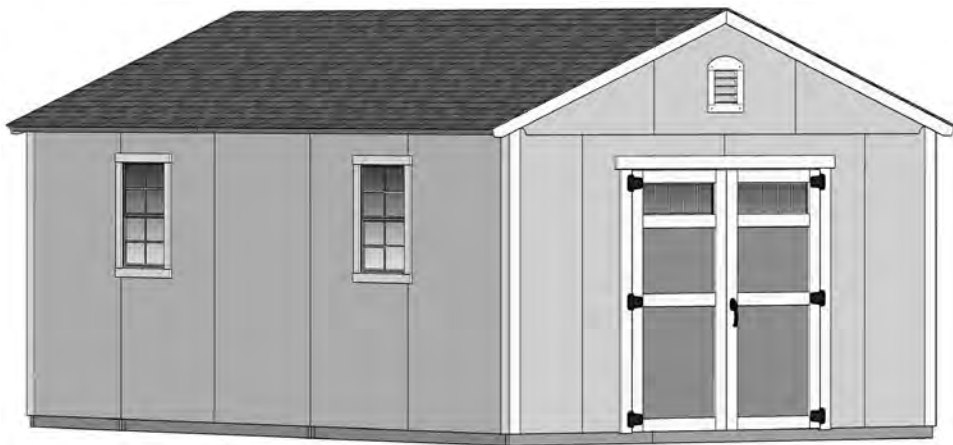

Eave Door with Optional Windows

(Instruction for window installation located in window kit.)



IMPORTANT!



READ INSTRUCTIONS THOROUGHLY PRIOR TO BEGINNING ASSEMBLY.

BEFORE YOU BEGIN

• **BUILDING RESTRICTIONS AND APPROVALS**

Be sure to check local building department and homeowners association for specific restrictions and/ or requirements before building.

• **ENGINEERED DRAWINGS**

Contact our Customer Service Team if engineered drawings are needed to pull local permits.

• **SURFACE PREPARATION**

To ensure proper assembly you must build your shed on a level surface.

Recommended methods and materials to level your shed are listed on page 15.

• **CHECK ALL PARTS**

Inventory all parts listed on pages 4-6.

• **ADDITIONAL MATERIALS**

You will need additional materials to complete your shed. See page 3 for required and optional materials and quantities.



*****CONTACT OUR CUSTOMER SERVICE TEAM
IF ANY PARTS ARE MISSING OR DAMAGED*****




- Order form and warranty at back of manual -

Call: 1-734-242-6900 email: customerservice@backyardproducts.com

TOOLS

Required


☐ Phillips Screwdriver 

☐ Drill / Driver
☐ 1/8" Drill Bit
☐ 1/4" Drill Bit
☐ 5/16" Drill Bit
☐ 1/2" Drill Bit
☐ #2 Philips Drive Bit


☐ Hammer 

☐ Level 

☐ Pencil 


☐ Tape Measure 


☐ Square  or 

☐ Utility Knife 

☐ Shingle Blades 

☐ Caulk Gun 


☐ Paint Tools 

☐ Safety Glasses 

☐ Hand Saw 


☐ Ladder 

Optional

☐ Tool Belt/ Nail Pouch 

☐ Tin Snips (for drip edge) 

☐ Chalk Line 

☐ Nail Gun
 • gun nails 


☐ Gloves 


Safety! Always use approved safety glasses during assembly.


HELPFUL REMINDER SYMBOLS

Look for these symbols for helpful reminders throughout this manual.

 = Assistance Required; two or more people.


 = Ensure squareness.

 = Important required step or operation.

 = Helpful assembly hint.

 = Mark part with pencil.

 **BEGIN** = Beginning of steps for assembly or installation.




 **FINISH** = You have finished the assembly or installation.

 = Level

ORIENT LUMBER AND TRIM FOR BEST APPEARANCE

Framing lumber is graded for structural strength and not appearance. Exterior trim is graded for one good side.

Always install the material leaving the best edge and best surface visible. Please remember that these blemishes in no way negatively affect the strength or integrity of our product. (See Fig. A, B, C.)

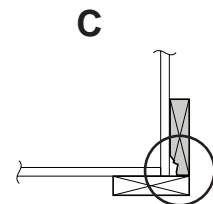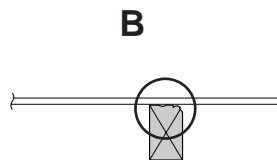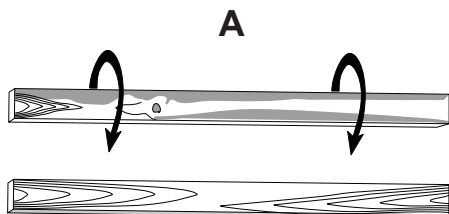

ADDITIONAL MATERIALS

FOUNDATION OR FLOOR MATERIALS

- If your purchase comes with a floor system, the materials to construct your floor will be in a separate kit(s).
- See the FLOOR LEVELING section on page 15 for recommended methods and suggested materials to properly level your floor, as this will vary depending on your specific site.

COMPLETING YOUR SHED


You will need these additional materials:

☐ **3-TAB SHINGLES** 11 Bundles

☐ **1" GALVANIZED ROOFING NAILS....** 8 Lbs
For shingles.

☐ **PAINT FOR SIDING** 4 Gallons
Use 100% acrylic latex exterior paint. (2) coats recommended.

☐ **PAINT FOR TRIM** 2 Quarts
Use 100% acrylic latex exterior paint.

☐ **CAULK** 6 Tubes
Use acrylic latex exterior caulk that is paintable. 

OPTIONAL MATERIALS

☐ **DRIP EDGE** 80 Feet


☐ **#15 ROOFING FELT**
To cover 329 Sq. Ft. of roof area.

☐ **1" GALVANIZED ROOFING NAILS.....**1/4 Lb
For roofing felt.

**REFER TO THE BACK OF THIS MANUAL AND THE MANUFACTURER'S INSTRUCTIONS
FOR INSTALLATION OF SHINGLES, DRIP EDGE AND FELT.**

PARTS IDENTIFICATION AND SIZES

Part identification letters are stamped on some parts.

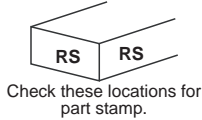

Treated lumber is stamped:

TREATED

WOOD SIZE CONVERSION CHART

Nominal Board Size	Actual Size
2 x 4	1-1/2" x 3-1/2" (3,8 x 8,9 cm)
1 x 4	3/4" x 3-1/2" (1,9 x 8,9 cm)
2 x 3	1-1/2" x 2-1/2" (3,8 x 6,3 cm)
1 x 3	3/4" x 2-1/2" (3,8 x 6,3 cm)

PARTS LIST




INVENTORY YOUR PARTS before you begin.

We suggest sorting parts by the category they are listed in.

WALLS

- ☐ x1 **GAA** 1 x 3 x 5" (2,5 x 7,6 x 12,7 cm) Gauge Block for 3/4" (1,9 cm) measurement
- ☐ x5 **AL** 2 x 4 x 7" (5,1 x 10,2 x 17,8 cm)
- ☐ x4 **AF** 2 x 4 x 18-1/8" (5,1 x 10,2 x 46 cm)
- ☐ x6 **STL** 2 x 4 x 44-1/2" (5,1 x 10,2 x 113 cm)
- ☐ x4 **SP** 2 x 4 x 48" (5,1 x 10,2 x 121,9 cm)
- ☐ x1 7/16" x 3-1/4" x 66-3/4" (1,1 x 8,3 x 169,5 cm) OSB
- ☐ x2 **AM** 2 x 4 x 67" (5,1 x 10,2 x 170,2 cm)
- ☐ x2 **UM** 2 x 4 x 68" (5,1 x 10,2 x 172,7 cm)
- ☐ x38 **AI** 2 x 4 x 78-1/2" (5,1 x 10,2 x 199,4 cm)
- ☐ x4 **TM** 2 x 4 x 72" (5,1 x 10,2 x 182,9 cm)
- ☐ x6 **TJ** 2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm)
- ☐ x14 **TP** 2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)

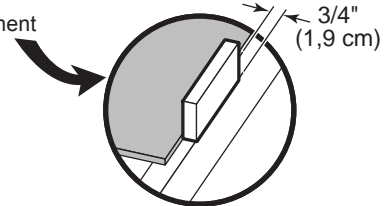

RAFTERS

- ☐ x20 6 x 24" (15,2 x 61 cm) OSB OR WOOD GRAIN ⚠
- ☐ x22 **ADA** 2 x 4 x 77-15/16" (5,1 x 10,2 x 198 cm)





TRIM

- ☐ x2 **WTC** 2 x 6 x 49-3/4" (5,1 x 16,2 x 126,4 cm)
- ☐ x2 **CQR** 19/32" x 3-1/2" x 84-15/16" (1,5 x 8,9 x 215,7 cm)
- ☐ x2 **CQL** 19/32" x 3-1/2" x 84-15/16" (1,5 x 8,9 x 215,7 cm)
- ☐ x4 **VX** 2 x 6 x 96" (5,1 x 15,2 x 243,8 cm)
- ☐ x8 3/8 x 3-1/2 x 83-1/2" (1 x 8,9 x 212,1 cm)

FLOOR (if DIY floor kit(s) purchased)

- ☐ **x4** TREATED 2 x 4 x 48" (5 x 10 x 122 cm) ☐ **x10** TREATED 2 x 4 x 45" (5 x 10 x 114,3 cm)
- ☐ **x10** TREATED 2 x 4 x 93" (5 x 10 x 236,2 cm)
- ☐ **x4** TREATED 2 x 4 x 96" (5 x 10 x 243,8 cm)

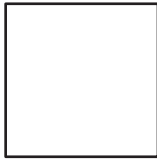


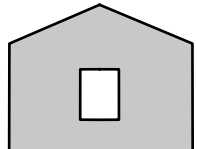

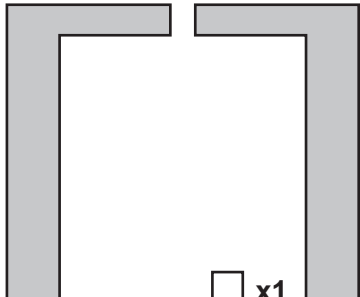
Floor panels are 5/8" (1,6 cm) thick. **NOTE: Panel parts are not stamped.**

- ☐ **x3**  47-7/8" x 48"
(121,6 x 121,9 cm) ☐ **x3**  48" x 96"
(121,9 x 243,8 cm)
- ☐ **x117**  3" (7,6 cm)
- ☐ **x207**  2" (5,1 cm)

WALL PANELS

Wall panels are 5/8" (1,6 cm) thick.




NOTE: Panel parts are not stamped.

- ☐ **x2**  3/8 x 23-7/8 x 84" (1 x 60,6 x 213,4 cm) ☐ **x13**  3/8 x 48 x 84" (1 x 121,9 x 213,4 cm)
- ☐ **x2**  ☐ **x2**  ☐ **x2**  ☐ **x1**  ☐ **x1**

ROOF PANELS


Roof panels are 7/16" (1,1 cm) thick.

NOTE: Panel parts are not stamped.







- ☐ **x2**  36-1/2" x 47-7/8"
(92,7 x 121,6 cm) ☐ **x4**  48" x 96"
(121,9 x 243,8 cm) ☐ **x2**  47-7/8" x 48"
(121,6 x 121,9 cm)
- ☐ **x4**  36-1/2" x 96"
(92,7 x 243,8 cm)

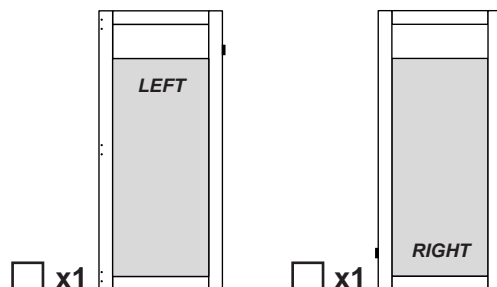DOORS

- ☐ **x4** EFF 5/4 x 3-1/2 x 24-5/8" (3,2 x 8,9 x 62,5 cm)
- ☐ **x2** OO 69" Door Stiffener (175,3 cm)
- ☐ **x2** NUC 1 x 4 x 69-1/4" (2,5 x 10,2 x 175,9 cm)
- ☐ **x2** . . DJD . . 5/4 x 3-1/2 x 72-3/8" (3,2 x 8,9 x 183,8 cm)
- ☐ **x1** FPA 5/4 x 3-1/2 x 74" (3,2 x 8,9 x 188 cm)





FASTENER/HARDWARE BAG

- ☐ x85  1-1/2" (3,8 cm)
- ☐ x155  2" (5,1 cm)
- ☐ x110  3" (7,6 cm)
- ☐ x25  2" (5,0 cm)
- ☐ x94  1-1/4" (3,2 cm)
- ☐ x85  3/4" (1,9 cm)


NOTE:



If you are using a nail gun, nails may be used where screws are shown for quicker assembly. Length of nail must match screw length.


NAIL BOXES (Shown Actual Size)



- ☐ x6 BOXES  3" (7,6 cm)
- ☐ x9 BOXES  2" (5,1 cm)




VENTS, WINDOW and DOOR HARDWARE




- ☐ x2 
Transom Window

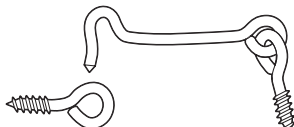

- ☐ x2 
- ☐ x8  #8 x 1" (2,5 cm)
Pan Head Screws

- ☐ x2 

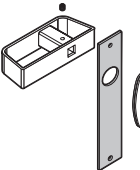
- ☐ x1 
64" Metal Threshold
 3/4" (1,9 cm) x11
Bagged separately / special coating

- 
-  x2 3/4" (19 mm)
Phillips Head Screw
- ☐ x1  x2 #8 x 2" (5,1 cm)
Square Drive Screw

- ☐ x6  Square Drive Bit
- ☐ x42  1" (2,5 cm) #14 Screws
- ☐ x12  3" (2,5 cm) #14 Screws

- ☐ x2 
- ☐ x8  3/4" (1,9 cm)


COMPONENT SECTION INDEX

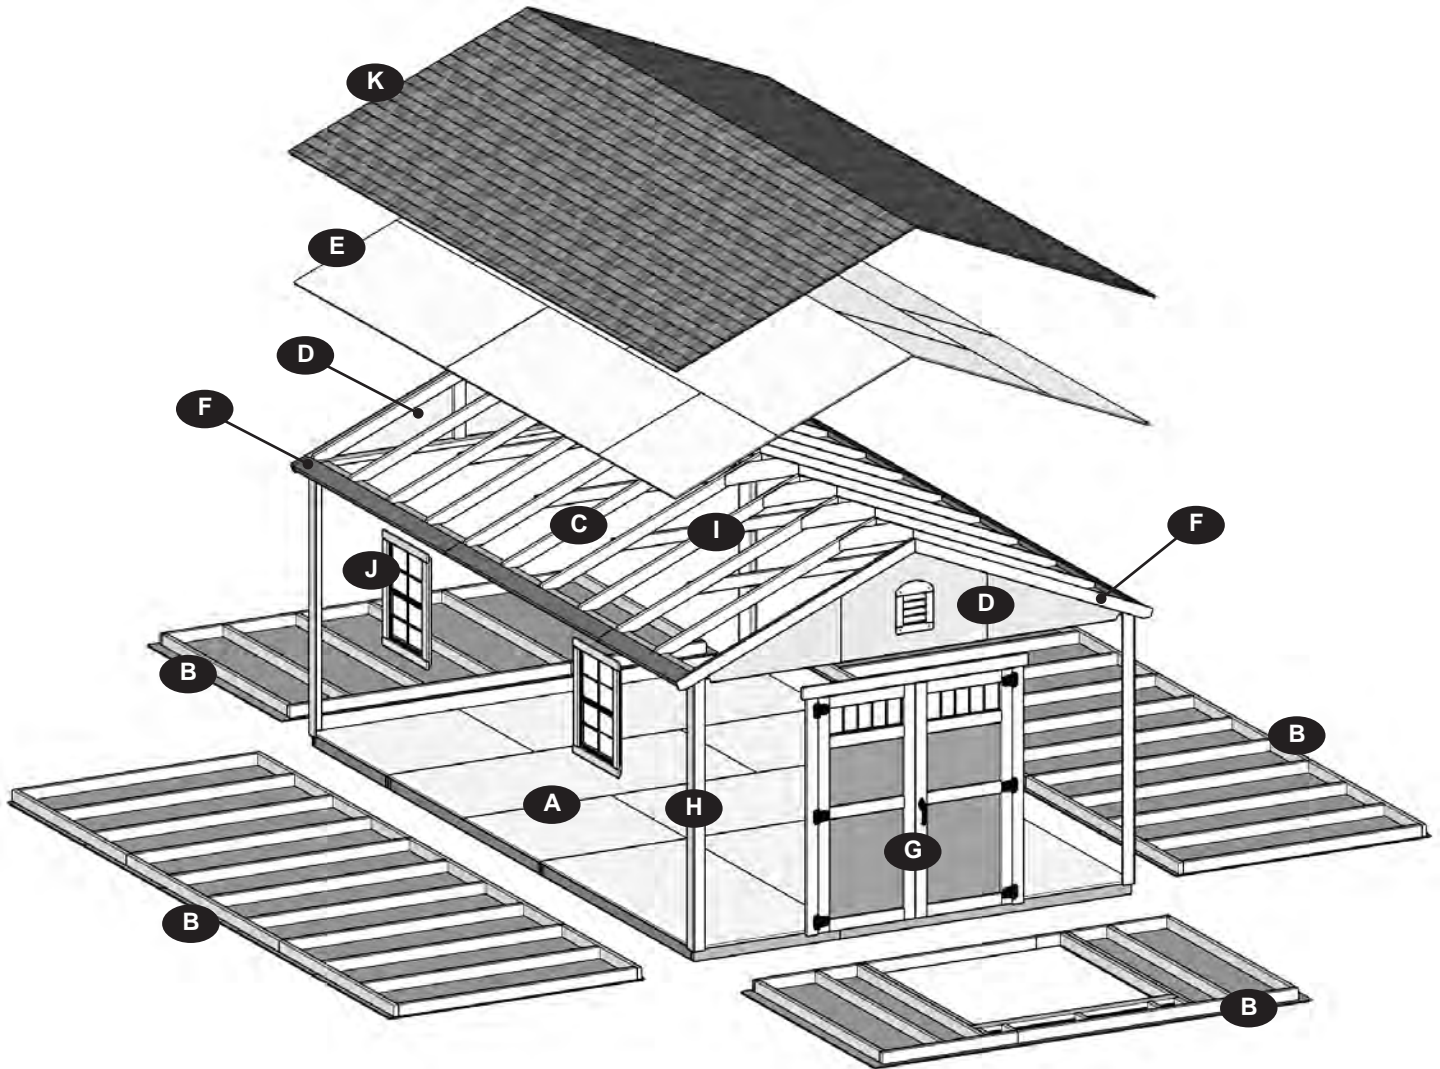

Description	Section	Page
Floor	A	10-17
Walls	B	20-42
Rafters	C	43-44
Gable Units	D	45-46
Roof Panels	E	47
Soffit & Fascia Trim	F	51
Doors	G	53
Corner Trim	H	63
Collar Ties	I	64
Windows	J	19
Shingles	K	68


CONCRETE FOUNDATION

If you choose to install your kit on a concrete slab refer to the diagram below.

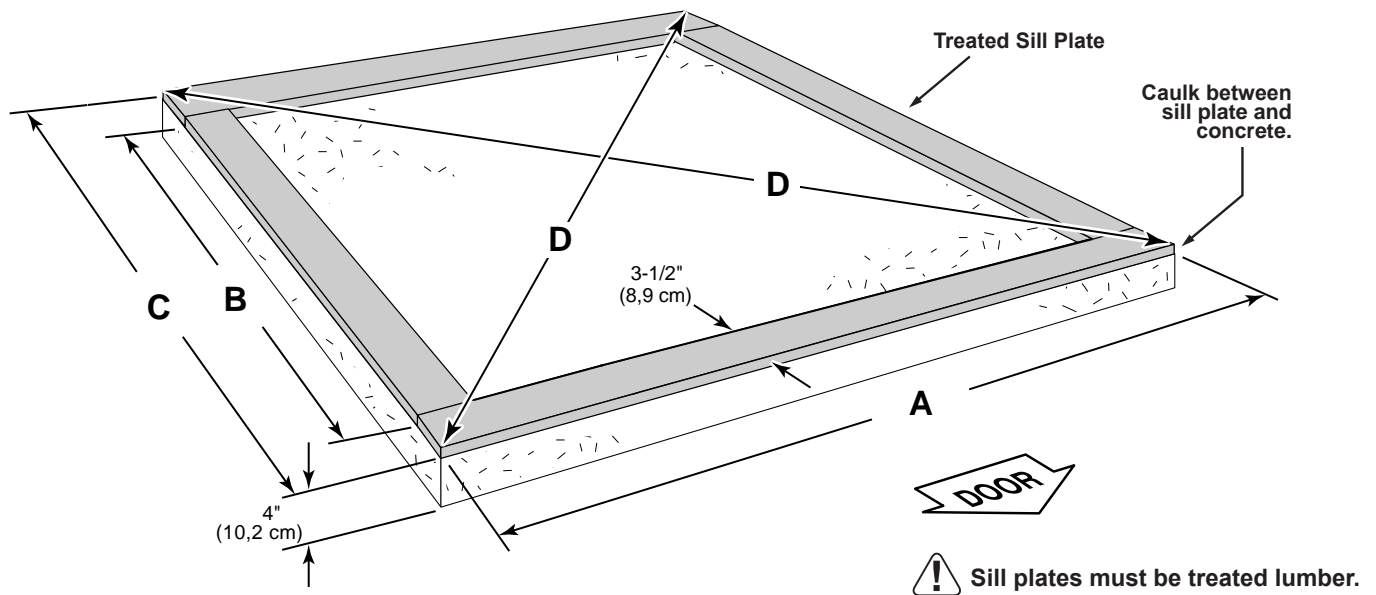

Building Size	Actual Floor Size	A	B	C	D
12'x 20' (365,8 x 609,6 cm)	12' x 20' (365,8 x 609,6 cm)	144" (365,8 cm)	233" (591,8 cm)	240" (609,6 cm)	279-7/8" (710,9 cm)

Building Requires:


- ☐ x4 2 x 4 x 12' (5,1 x 10,2 x 304,8 cm) ☐ x2 2 x 4 x 8' (5,1 x 10,2 x 233,6 cm)
- ☐ x1 Caulk  Cut to: 89" (226 cm)

 Allow new concrete slabs to cure for at least seven (7) days.




- A treated 2 x 4 (5,1 x 10,2 cm) sill plate is required when installing your shed on concrete.
Purchase full length treated lumber, or butt shorter pieces end-to-end and seal seams with caulk.
- Use a high quality exterior grade caulk beneath all sill plates.
- Fasten 2 x 4 (5,1 x 10,2 cm) sill plates to slab using approved concrete anchors (fasteners not included).
- Check local code for concrete foundation requirements.


BUILD YOUR OWN WOOD FLOOR OPTION

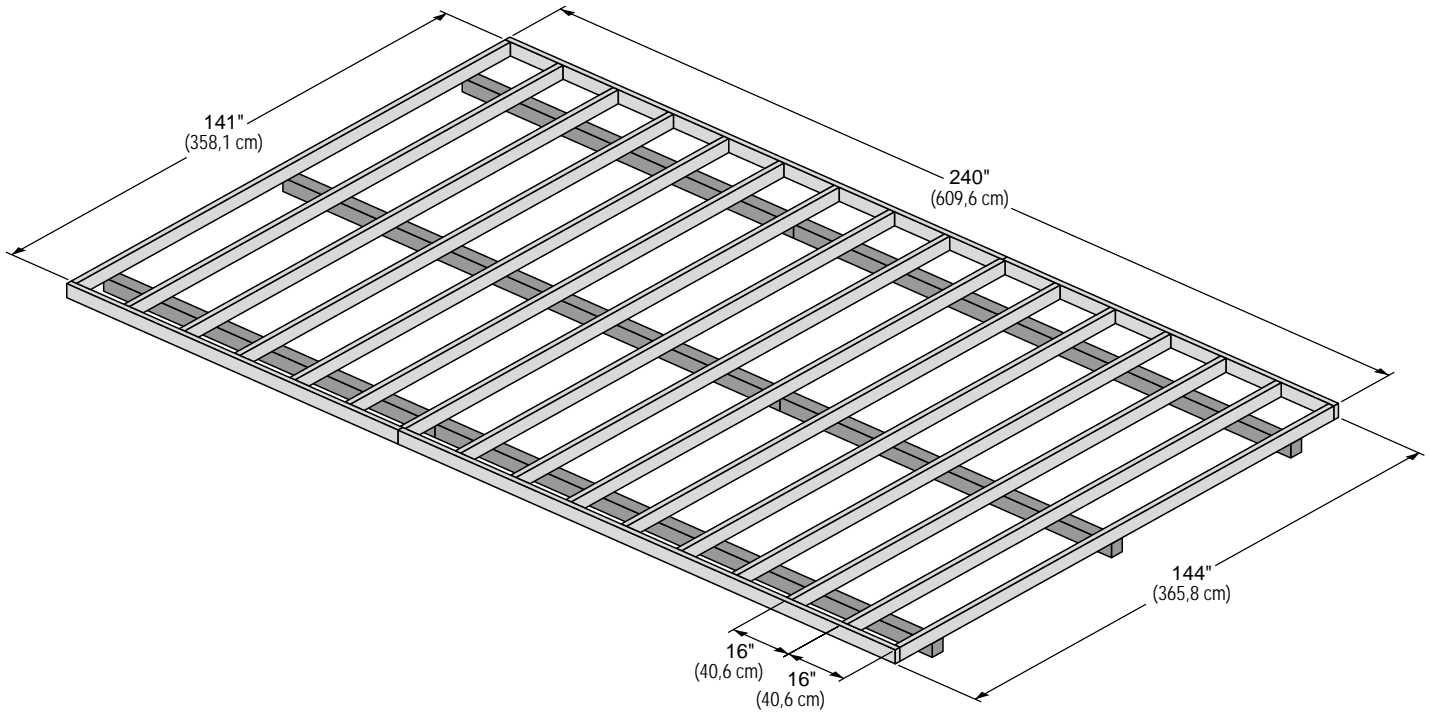(Materials not included.)



MATERIAL REQUIRED

- ☐ **x2** 2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)  **MUST be treated lumber**
- ☐ **x18** 2 x 4 x 12' (5,1 x 10,2 x 365,8 cm)  **MUST be treated lumber**
- ☐ **x6** 4 x 4 x 10' (10,2 x 10,2 x 304,8 cm)  **MUST be treated lumber**

- ☐ **x8**  5/8" x 48" x 96" (1,6 x 121,9 x 243,8 cm)

- ☐ **x2**  2" (5,1 cm) **1 lb. of 2" (5,1 cm) Hot Dipped Galvanized Box-Type Nails**

- ☐ **x68**  3" (7,6 cm) **40 Nails - 3" (7,6 cm) Hot Dipped Galvanized Box-Type Nails**

- ☐ **x96**  3" (7,6 cm) **Screws for Frame to 4"x 4"**
Minimum 3" screws / exterior grade.

BUILD YOUR OWN WOOD FLOOR OPTION

STOP!



LEVEL AND SQUARE FLOOR FRAME




STOP!

Before attaching floor decking, it is important to level and square the floor frame. A level and square floor frame is required to correctly construct your shed.

✓ BEGIN

- 1 See page 15 for the preferred floor leveling method.
- 2 Use a level to ensure that the floor frame is level before installing floor panels.
- 3 Check for frame squareness by measuring diagonally across corners. If the measurements are the same, the frame is square. The diagonal measurement will be approximately 279-7/8" (710,8 cm).
- 4 When the frame is level and square, secure one side of frame to the 4x4 runners with (1) fastener at the end of each runner. Move to the opposite end of the frame. Secure the frame to 4x4 runners with one fastener at ends of each runner making sure the frame remains square (**Fig. A**).

First, secure at ends with one fastener.

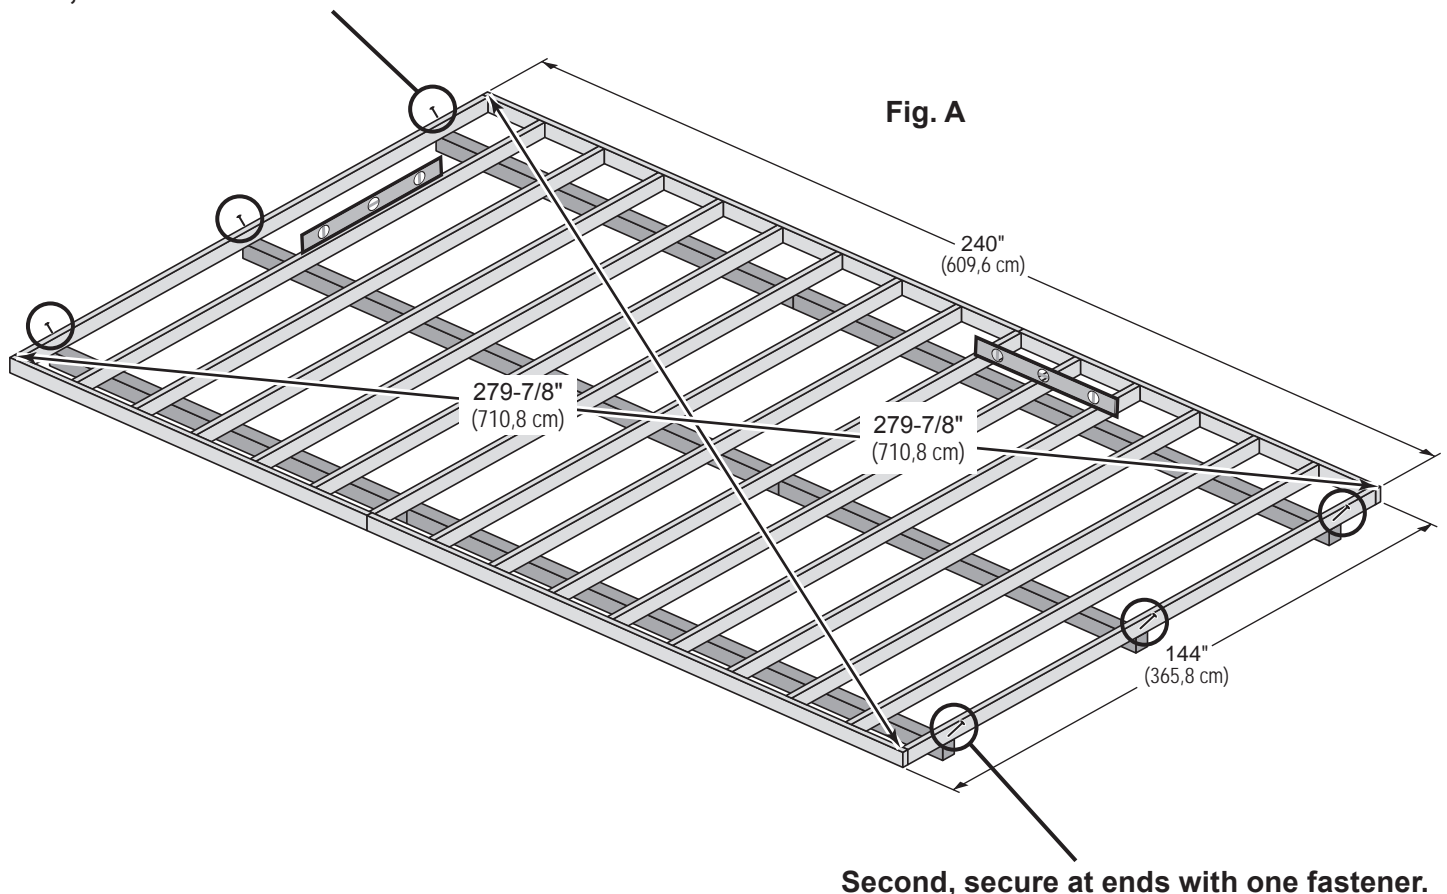

Your floor frame is secured to 4x4 runners and is now square.

FLOOR FRAME


PARTS REQUIRED:


x4 TREATED
2 x 4 x 48" (5 x 10 x 122 cm)

x20 TREATED
2 x 4 x 93" (5 x 10 x 236,2 cm)

x4 TREATED
2 x 4 x 96" (5 x 10 x 365,8 cm)

NOTE:
Look for TREATED Stamp.

x88  3" (7,6 cm)


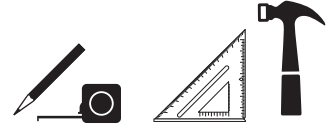


Build two 96" x 144" floor sections.

BEGIN

1 Arrange parts as shown on flat surface. Measure and mark each dimension from end of boards. Secure with (2) 3" nails at each mark and (4) nails at seams.

HINT:
For easier nailing
stand on frame.

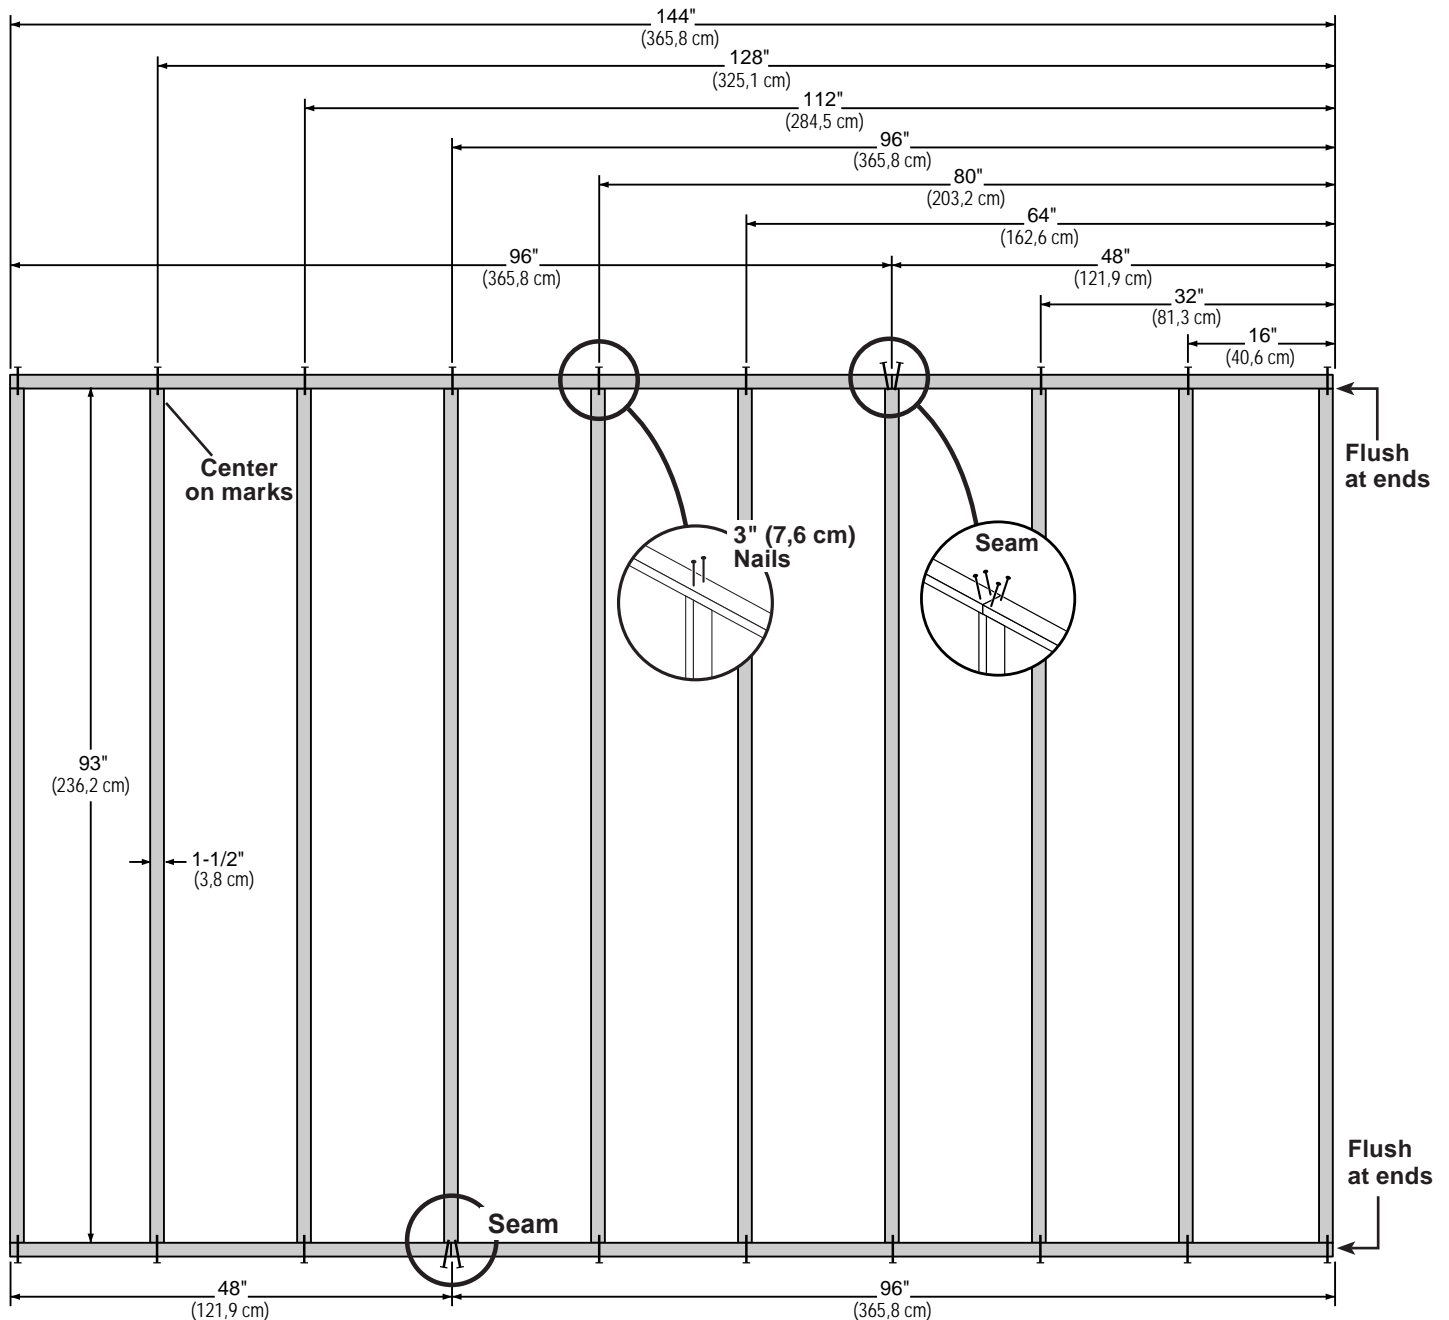

2 Repeat to build your 2nd 96" x 120" floor section.

FLOOR FRAME


PARTS REQUIRED:


x10 TREATED
2 x 4 x 45" (5 x 10 x 114,3 cm)

x2 TREATED
2 x 4 x 48" (5 x 10 x 122 cm)


x2 TREATED
2 x 4 x 96" (5 x 10 x 365,8 cm)

NOTE:
Look for TREATED Stamp.

x44  3" (7,6 cm)

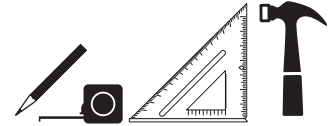

- 3** Arrange parts as shown on flat surface. Measure and mark each dimension from end of boards.
Secure with (2) 3" nails at each mark and (4) nails at seams.

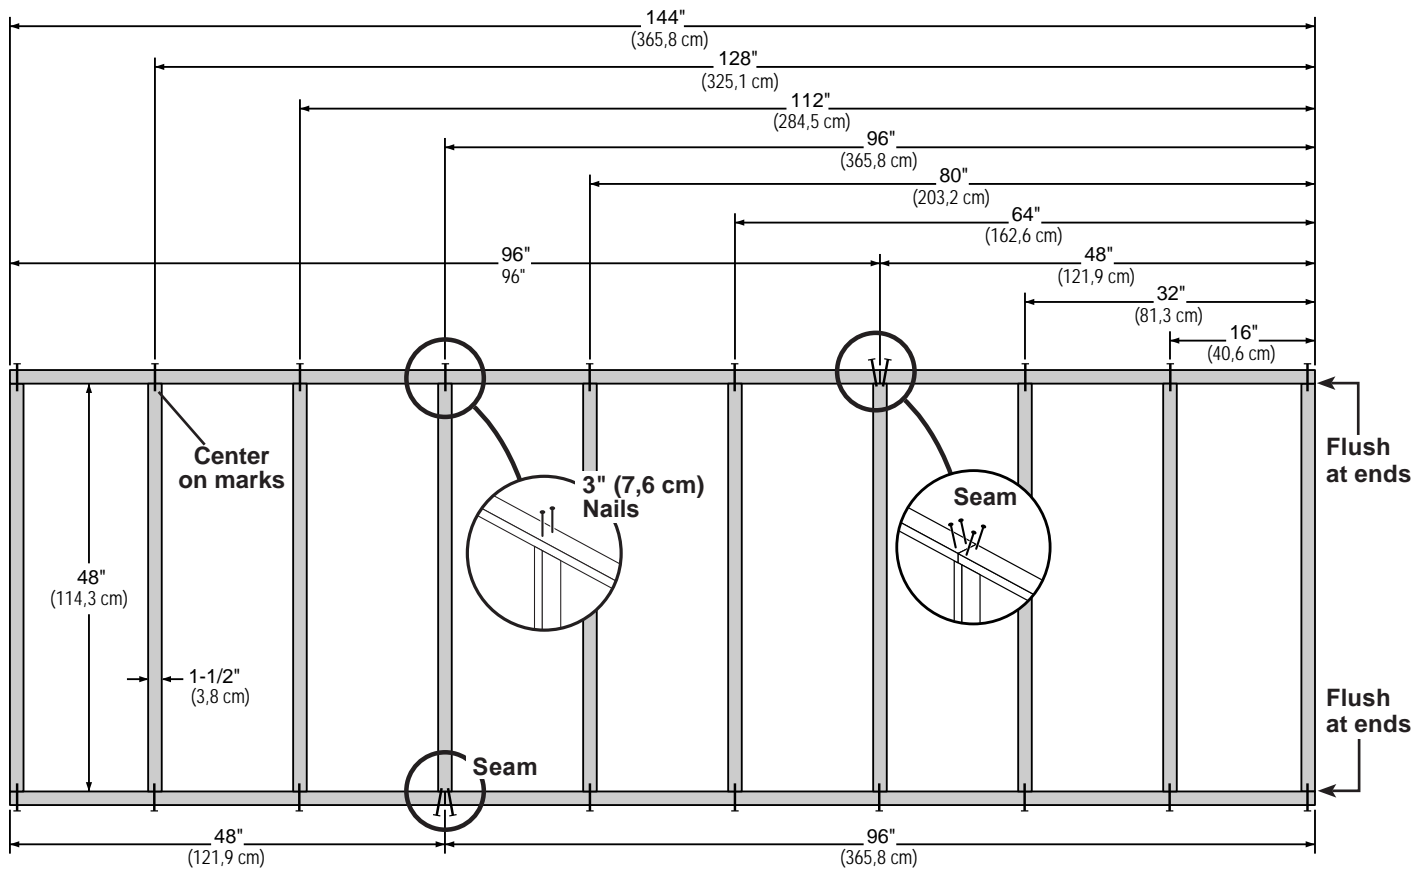


FLOOR FRAME

PARTS REQUIRED:



x72 3" (7,6 cm)

- Fasten floor sections together, as shown. Secure with 3" nails.

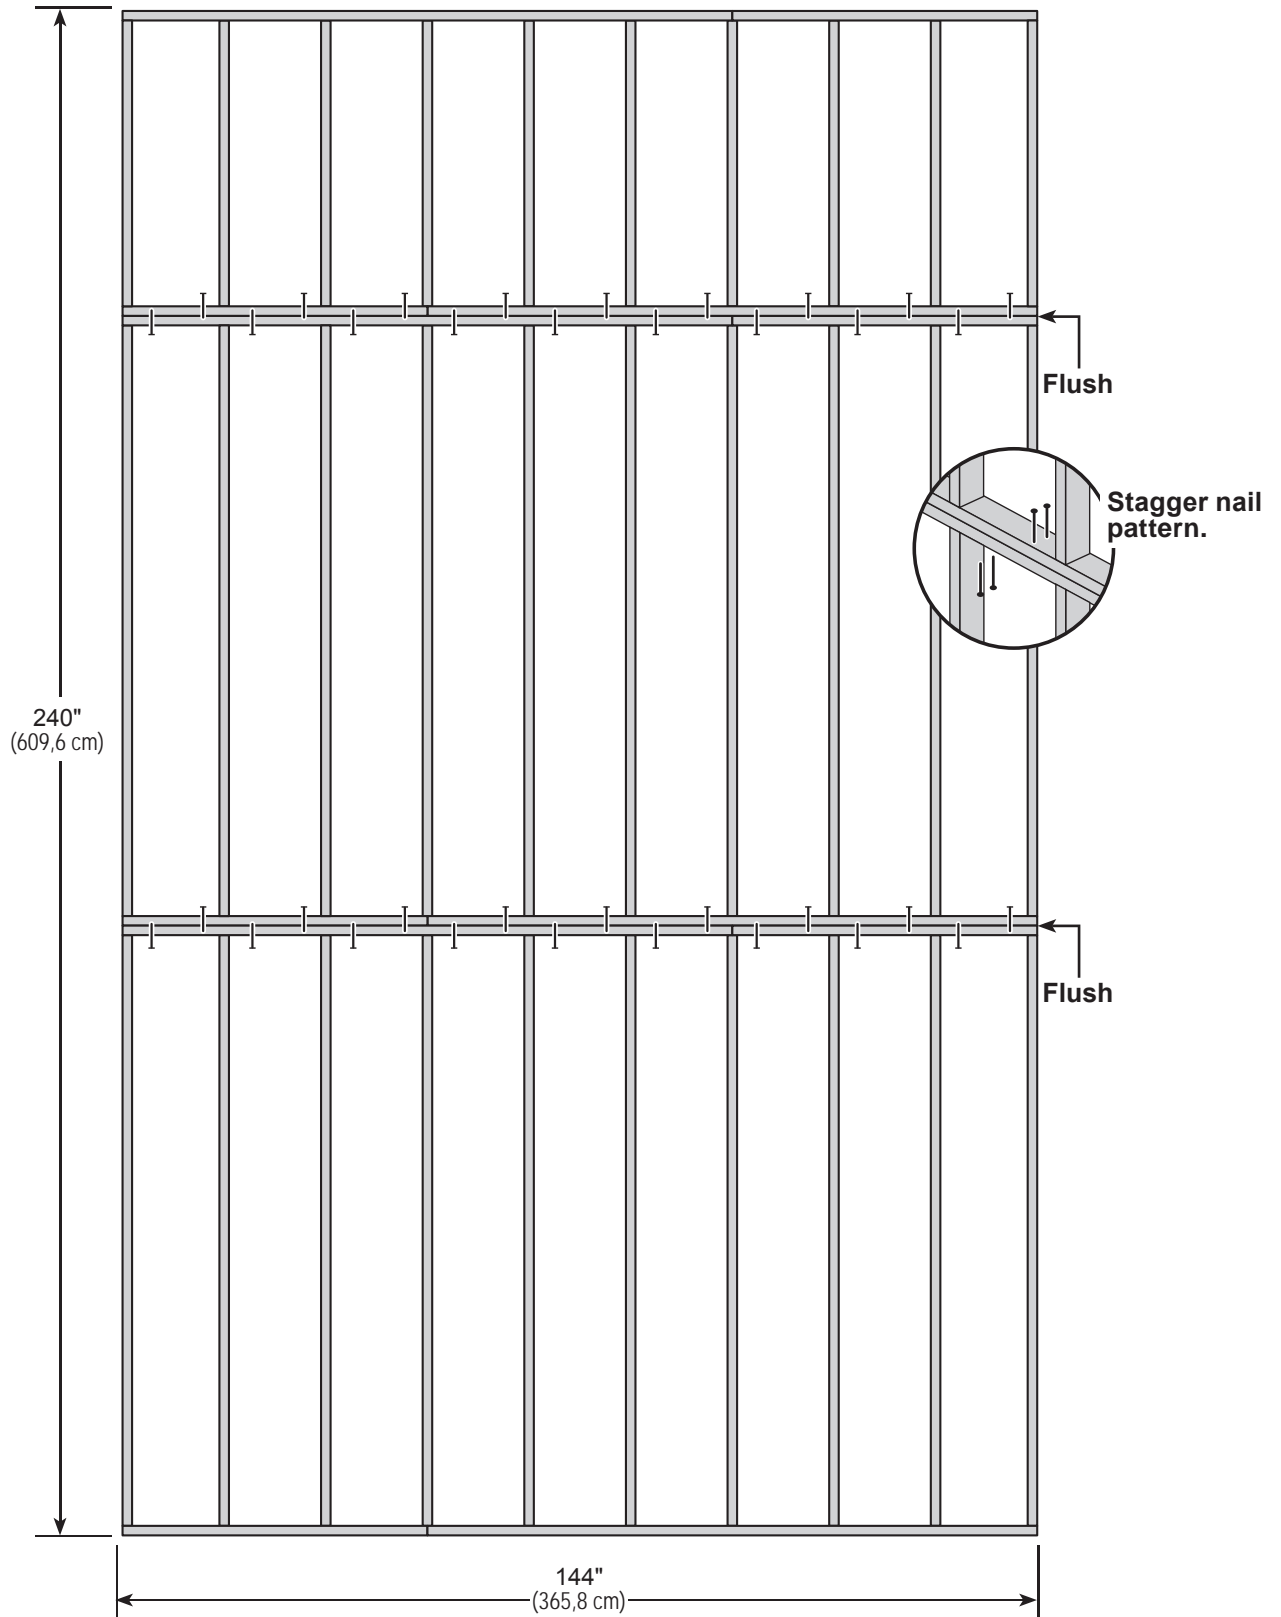

Your floor frame is now assembled. Proceed to level and square frame.

STOP!


LEVEL AND SQUARE FLOOR FRAME

**STOP!**

Before attaching floor decking, it is important to level and square the floor frame. A level and square floor frame is required to correctly construct your shed.

BEGIN

- 1 See page 15 for the preferred floor leveling method.
- 2 Use a level and check that the frame is level before installing floor panels.
- 3 Check for frame squareness by measuring diagonally across corners. If the measurements are the same, the frame is square. The diagonal measurement will be approximately 279-7/8" (710,9 cm).
- 4 After the frame is level and square, secure one side of frame to 4x4 runners using one fastener at ends of each runner. At the opposite end of the frame, secure the frame to 4x4 runners with one fastener at the ends of each runner, ensuring that the frame remains square.
Fasten the frame to the 4x4 runners with (2) 3" screws at each connection (**Fig. A**).

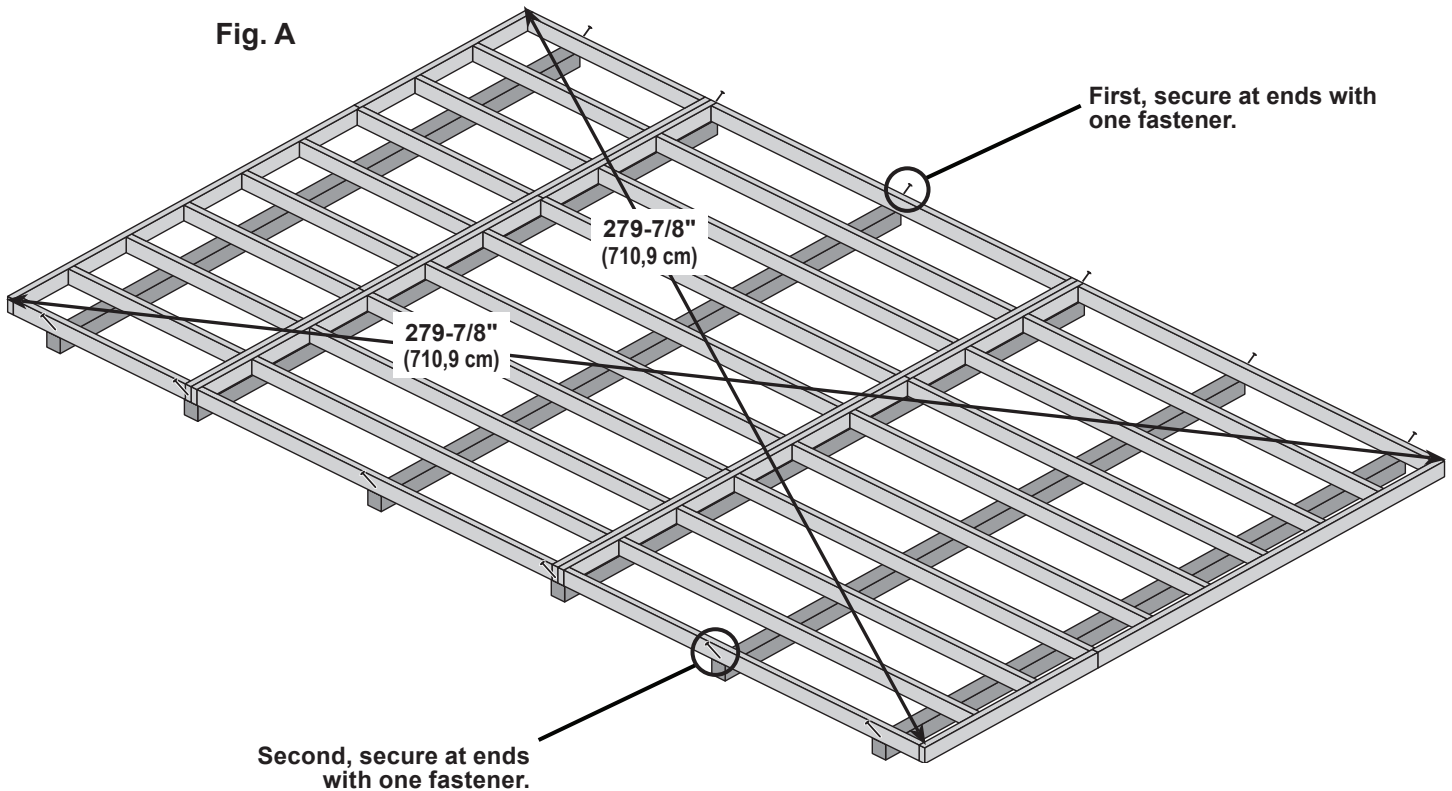Fig. A**FINISH**

Your floor frame is now square and level.

OPTIONAL WOOD FRAME FLOOR LEVELING OPTIONS

There are multiple ways to level your floor frame. Our recommended leveling method is shown below.

Leveling materials are not included in this kit.

PREFERRED METHOD - 4x4 TREATED RUNNERS

Runners are generally 12" (30,5 cm) from ends of floor frame and under seams.

Measurements to centers of 4x4's.

- 3" Screws angled into 4x4.
- (2) at each point frame and 4x4 touch.

Fasteners for Frame to 4x4:

(3" Screws shown as one option.)

Minimum 3" screws / exterior grade.

☐ x120  3" (7,6 cm)

MATERIAL REQUIRED:


☐ x6 4 x 4 x 12' (10,2 x 10,2 x 365,8 cm) Treated Lumber



Use only wood treated for ground contact and fasteners approved for use with treated wood.



Always support frame seams.

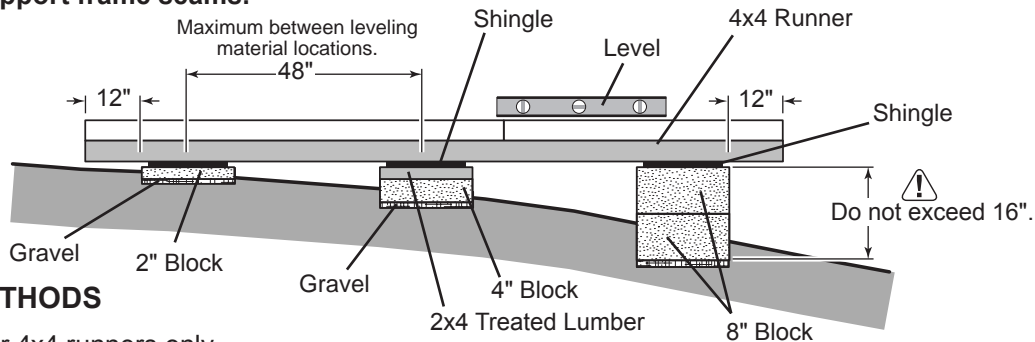

LEVELING METHODS

- Level under 4x4 runners only.
- Locate leveling material 12" from ends of runners and no more than 48" apart.
- Asphalt shingles should be used between 4x4 runners and blocks or treated lumber. Never use shingles in direct contact with ground.
- For best results and aiding in water drainage use gravel under each concrete block.

LEVELING MATERIALS

- ☐ Gravel
- ☐ Solid Masonry Blocks in 1", 2", 4" or 8" thickness
- ☐ 2x4 Treated Lumber
- ☐ Asphalt Shingles




Leveling higher than 16" not recommended.

CONCRETE

- If you are building your shed on a concrete foundation see page 9.

FLOOR PANELS

PARTS REQUIRED:




5/8 x 48 x 96"
(1,6 x 121,9 x 243,8 cm)



3/4" GAUGE
BLOCK


x8

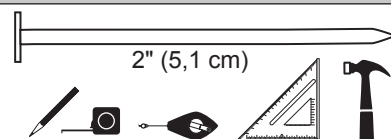

Install floor panels with the rough side facing up (painted grid lines).

✓ BEGIN

- 1 Install (1) **48" x 96"** panel on the 96" x 144" floor frame section, edge flush to the seam between the floor frames and 3/4" along the floor joist.
Use the GAA gauge block for the 3/4" measurement.
Secure panel with (1) 2" nail in the first two corners at the inner joist, as shown.
- 2 Move to the opposite side. Using the long edge of each panel as a lever, move the panel side-to-side until the loose corner is flush to the floor frame. Secure panel with (2) more nails in the opposite corners.
- 3 Install the next **48" x 96"** panel on the middle 96" x 144" floor frame section, edge flush to the seam between the floor frames and 3/4" along the floor joist.
Use the GAA gauge block for the 3/4" measurement.
Secure panel with (1) 2" nail in the first two corners at the inner joist, as shown.
- 4 Move to the opposite side. Move the frame until it is flush to 48" side of the panel.
Secure panel with (2) more nails in the opposite corners.

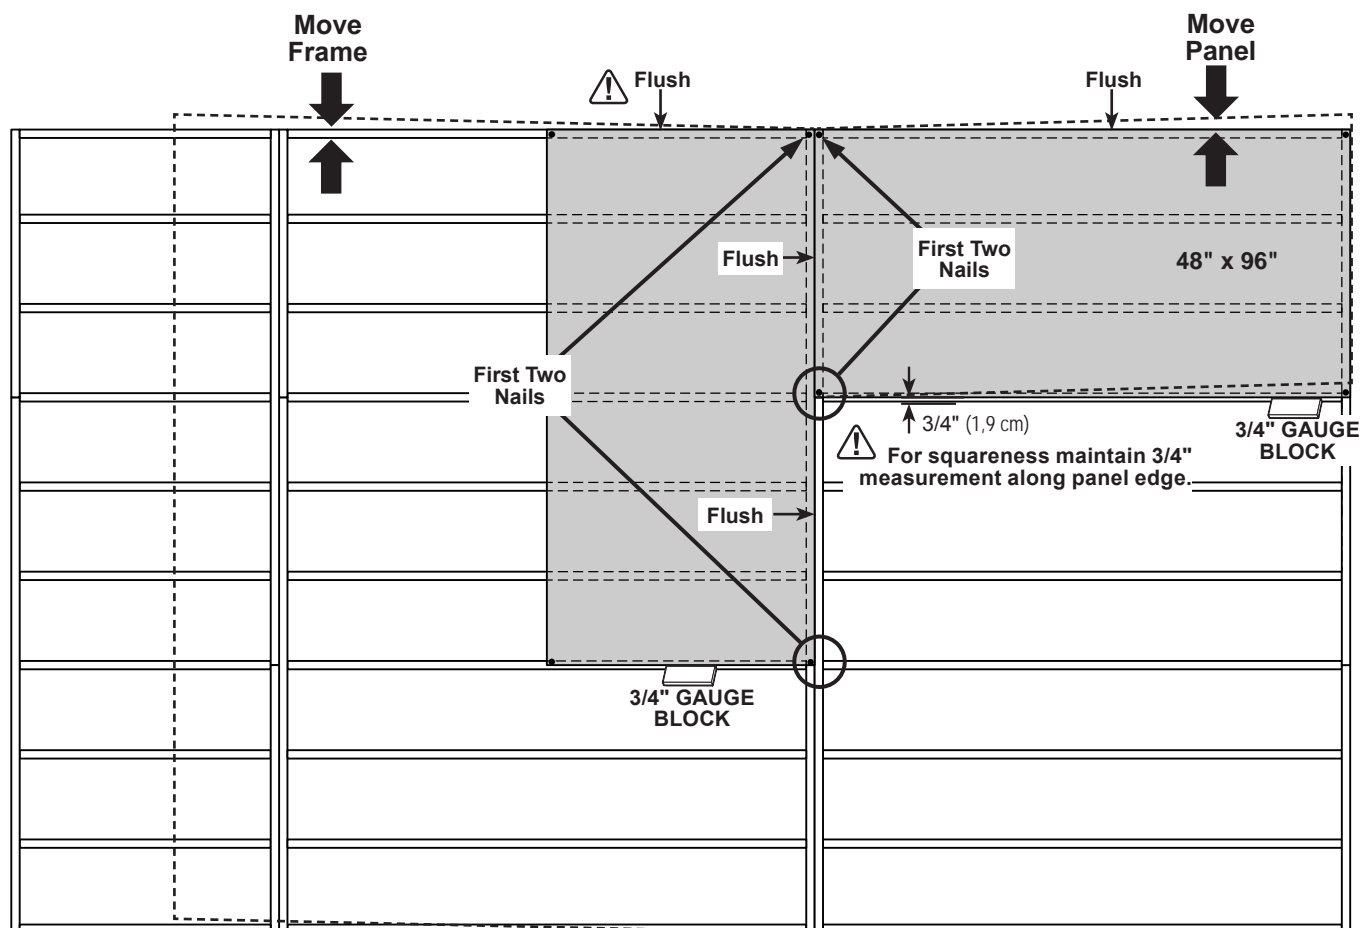

FLOOR PANELS

PARTS REQUIRED:

x5




5/8 x 48 x 96"
(1,6 x 121,9 x 243,8 cm)

x3



5/8 x 47-7/8 x 48"
(1,6 x 121,6 x 121,9 cm)

x451



3/4" GAUGE
BLOCK



5 Install the remaining panels in the following order:

1. 48 x 96" (A)
2. 48 x 96" (B)
3. 47-7/8 x 48" (A)
4. 48 x 96" (C)
5. 47-7/8 x 48" (B)
6. 48 x 96" (D)
7. 47-7/8 x 48" (C)


Secure panels with (1) 2" nail in each corner. All panels should be flush, as shown.

6 Ensure the floor is square by measuring diagonally across the frame corners.

If the measurements are the same your floor frame is square.

The measurement will be approximately 279-7/8" (710,9 cm).

7 Continue securing all panels with 2" nails spaced 6" apart on edges and 12" apart inside panel.

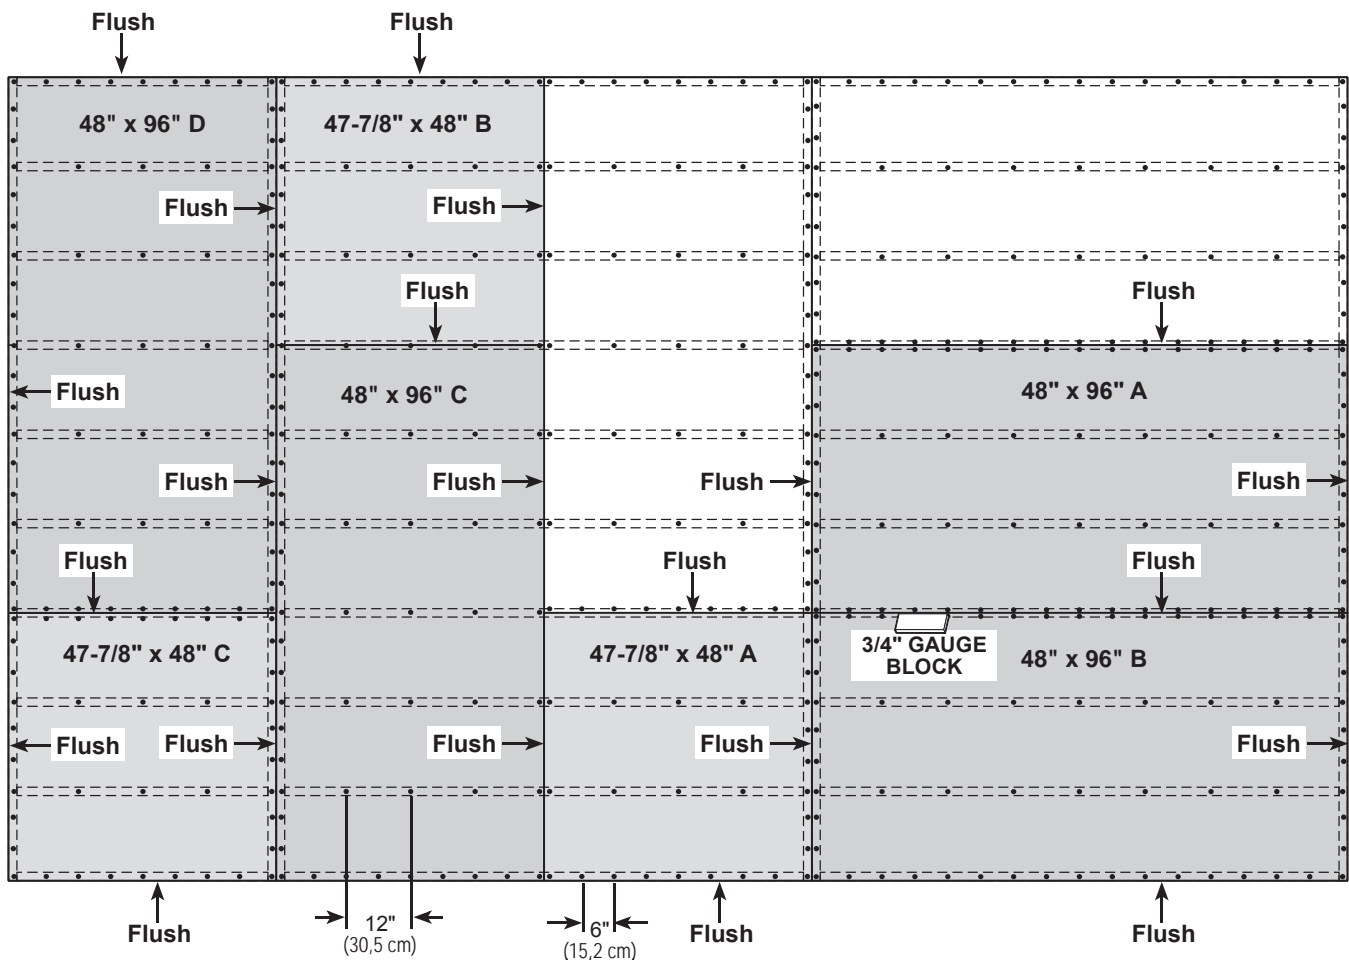


Your floor panels are now installed.

IMPORTANT!




Ensure that the floor frame is level after installing floor panels.
Re-level if necessary.

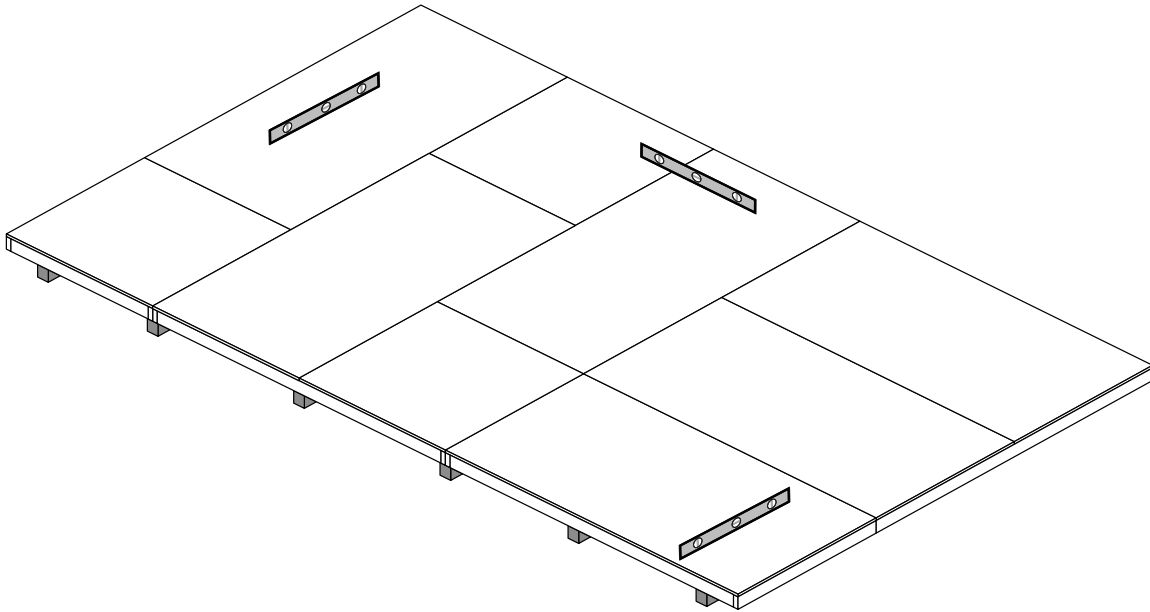

HINT:



- The floor should be used as a stable work surface for wall construction.
- Organize your assembly procedure during the build process to avoid over-handling of the walls.

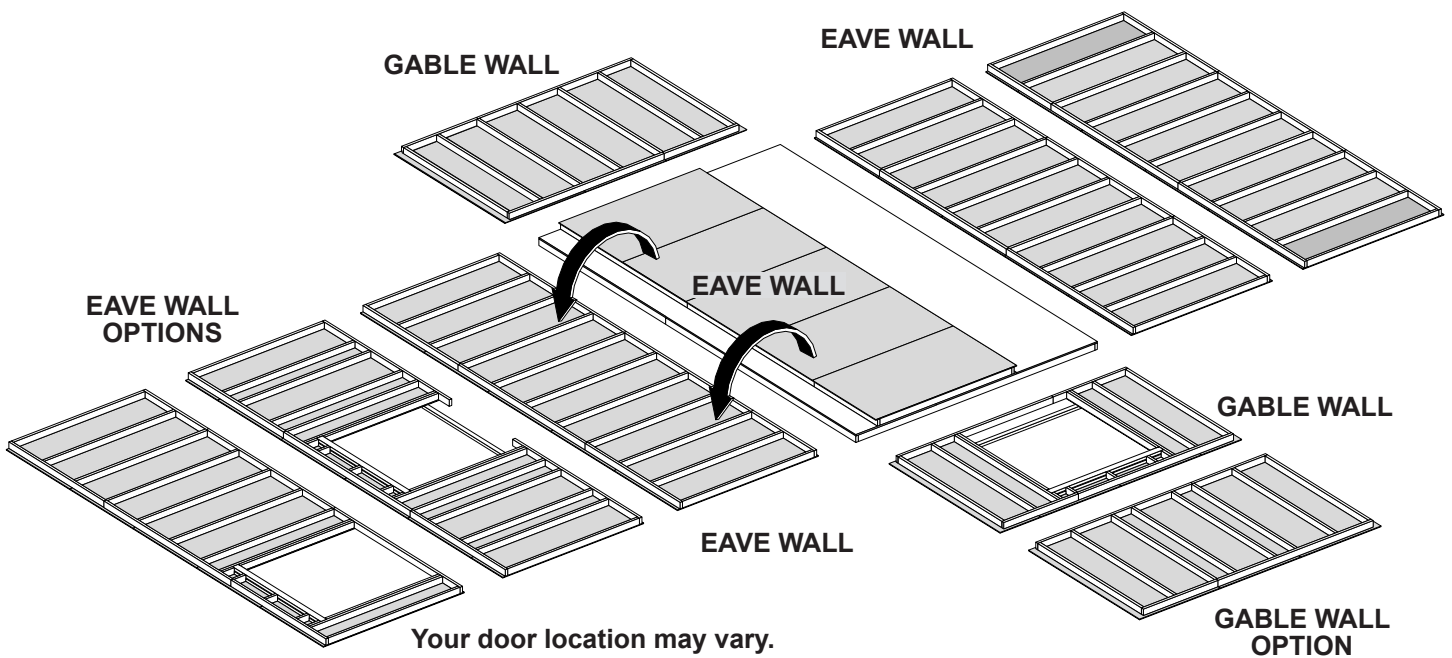

WINDOW INSTALLATION

If you purchased a shed with one or more windows, please see instructions located in the window kit for installation.

You will install windows after your shed is assembled.

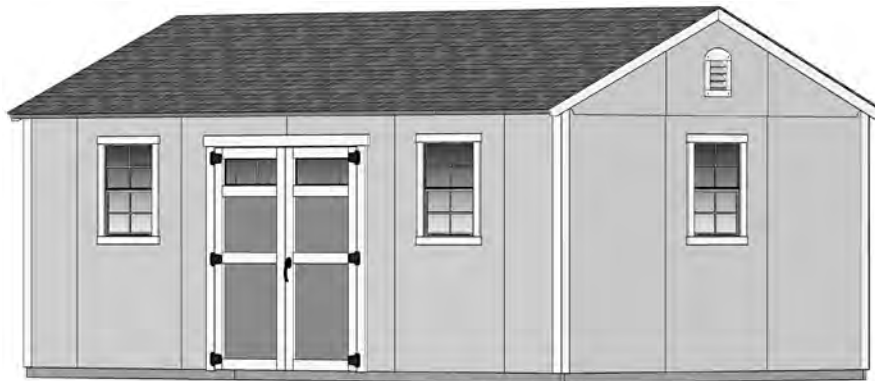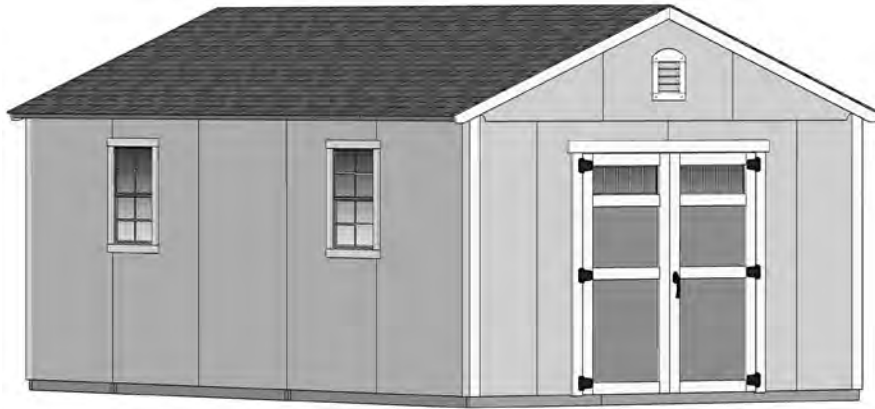

WALL INDEX


*Create your own style of shed. Choose your door location.
Use this guide to find the corresponding wall construction and installation pages.*



IMPORTANT! Build your door header before building any walls (see next page).


*After assembling the walls for your 12' x 20' shed,
go to page 38 for wall installation.*

Door on Gable Wall

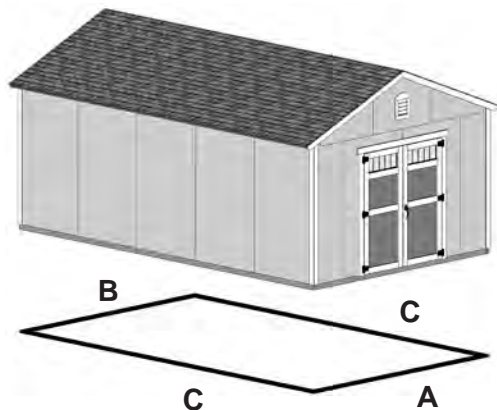


Wall A: Page 24
Wall B: Page 26
Wall C: Page 28

Eave Door Centered

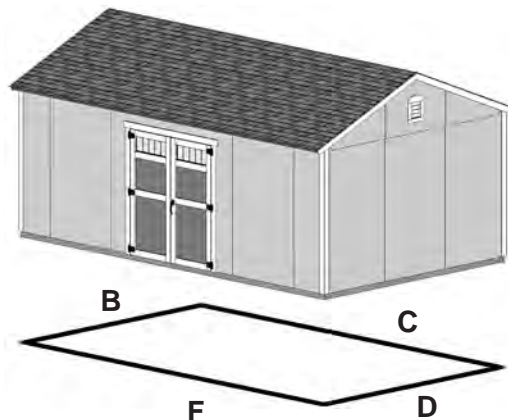

Wall B: Page 26
Wall C: Page 28
Wall D: Page 30
Wall F: Page 34

Eave Door w/ Right Offset

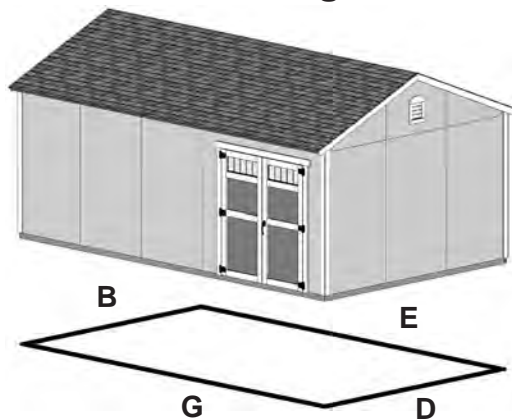

Wall B: Page 26
Wall D: Page 30
Wall E: Page 32
Wall G: Page 36

DOOR FRAME UNIT

STOP!


Assemble the door frame unit before building any walls!

Any wall with a door will require this assembly.

STOP!

PARTS REQUIRED:

- x2** **AM**
2 x 4 x 67" (5,1 x 10,2 x 170,2 cm)
- x1** **OSB**
7/16 x 3-1/4 x 66-3/4" (1,1 x 8,3 x 170,2 cm)




Pre-assemble the door header.

BEGIN

- Place (1) **AM** and **OSB** end-to-end on flat surface, flush in middle.
Center **OSB** on top of **AM**.




Fasten together with 3" nails in the pattern shown.

- Flip header assembly over and nail as shown on the other side.

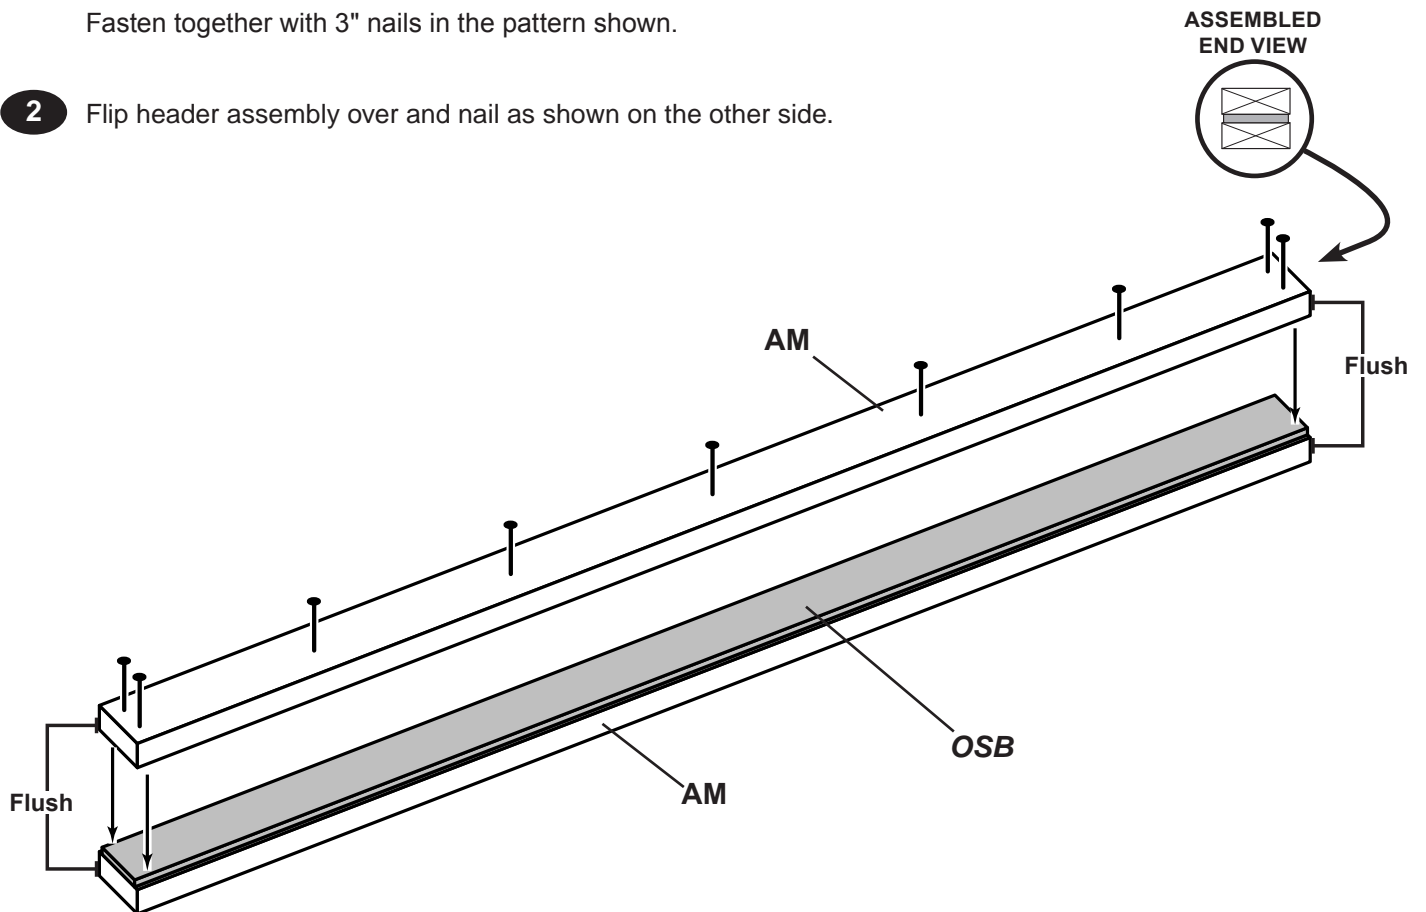

WALL PANEL INSTALLATION HINTS & EXAMPLES

PARTS REQUIRED:

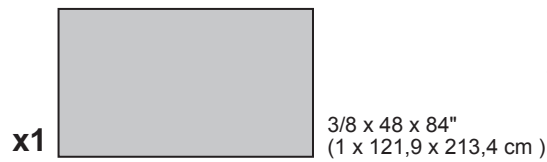


! Ensure your wall is square by installing one panel and squaring frame.

Install all wall panels with the primed side facing up.



✓ **BEGIN**

- Place (1) 48" x 84" panel on the wall frame, as shown.
Locate the panel 1-1/2" above the top plate.
Use a 2x4 as a gauge block for the 1-1/2" top overhang measurement.
Use the **GAA** gauge block to mark the 3/4" side measurement on the wall stud.
Secure panel with (2) 2" nails in the corners (**Fig. A**).

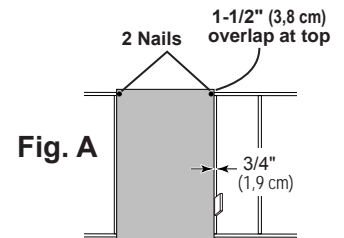

- Move to the opposite end. Using the long edge of the panel as a lever, move the panel side-to-side until you have a 3/4" measurement on the wall stud.
Secure corner with (2) 2" nails (**Fig. B**).

Secure panel with 2" nails spaced 6" apart on edges and 12" apart inside panel.

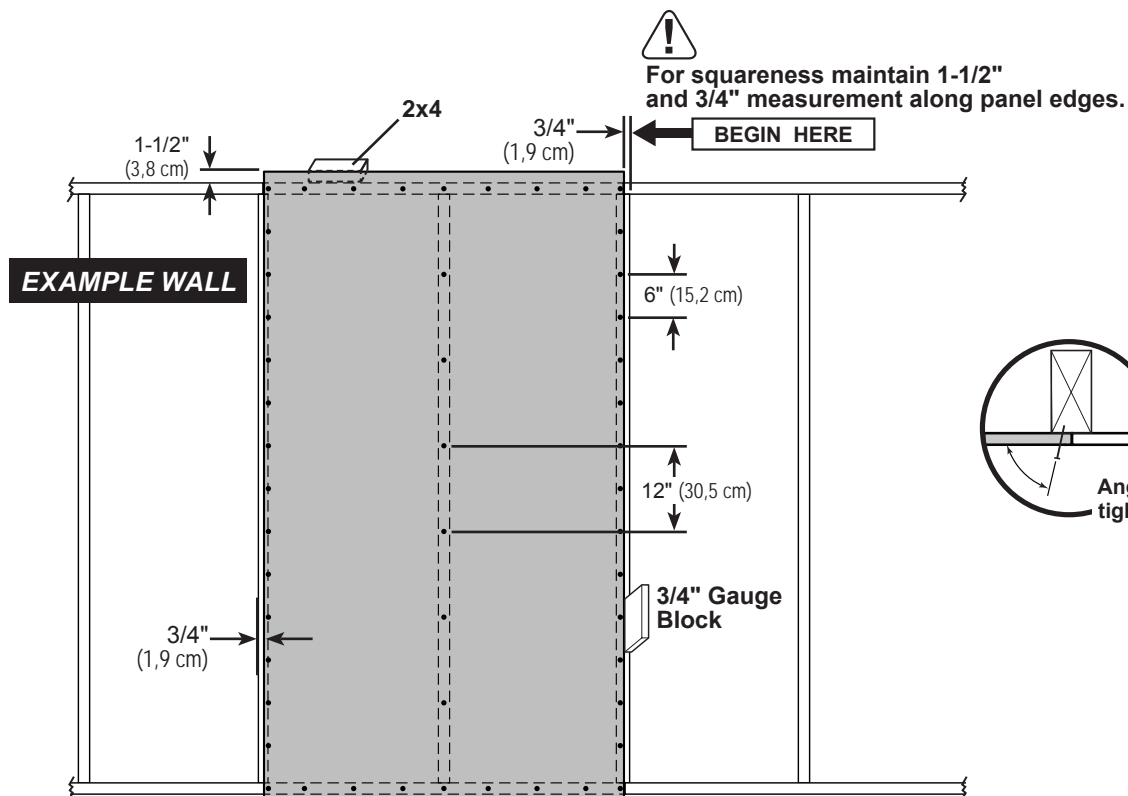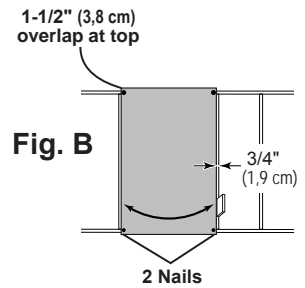

DOOR FRAME UNIT

PARTS REQUIRED:

x5 **AL**




2 x 4 x 7" (5,1 x 10,2 x 17,8 cm)

x2 **UM**


2 x 4 x 68" (5,1 x 10,2 x 172,7 cm)

x2 **AI**


2 x 4 x 78-1/2" (5,1 x 10,2 x 199,4 cm)

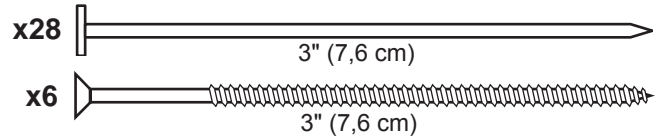

- 3** Arrange parts on edge on floor, as shown. Measure and mark from end of boards.
Orient **Assembled Header** on flat side (**Fig. A**).
Secure with (2) 3" nails at each connection.

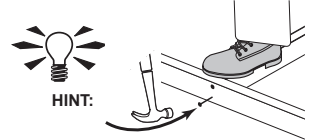

- 4** Fasten (3) middle parts **AL** to **Pre Assembled Header** with (2) 3" screws (**Fig. B**).
Secure (2) end parts **AL** to top plates with (2) 3" nails.

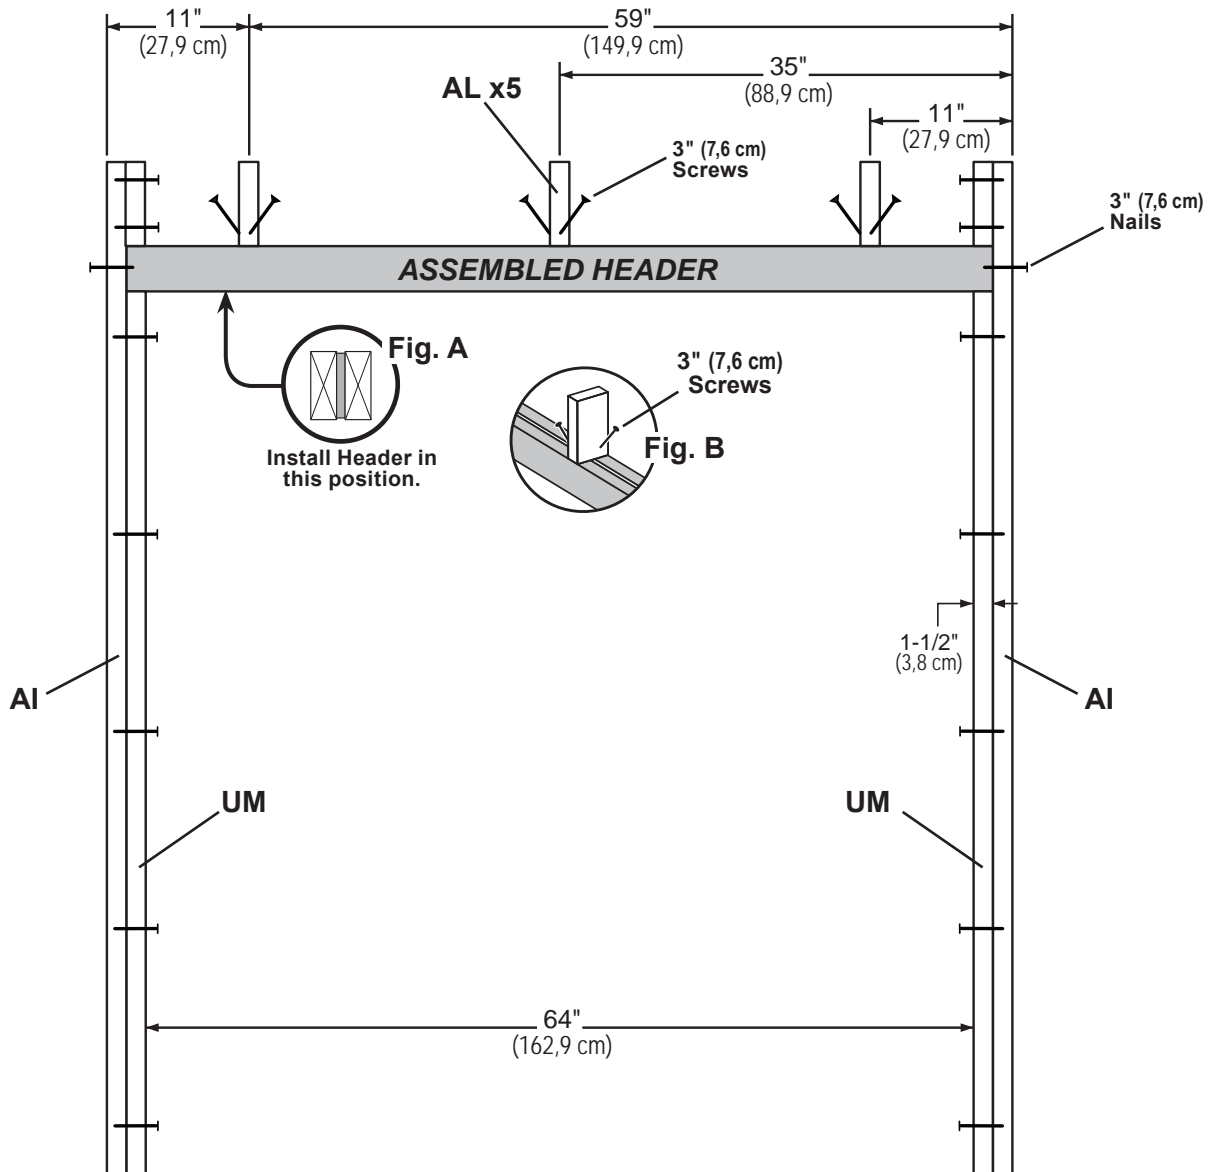


FINISH

Your door frame unit is now assembled.

GABLE WALL A

PARTS REQUIRED:

x40  3" (7,6 cm)




Assembled
Door Frame Unit

x2 **STL** 2 x 4 x 44-1/2" (5,1 x 10,2 x 113 cm)



x4 **AI** 2 x 4 x 78-1/2" (5,1 x 10,2 x 199,4 cm)

x2 **TJ** 2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm)




BEGIN

- 1 Arrange parts on edge on floor, as shown. Measure and mark from end of boards.
Place the **Door Frame Unit** at measurements shown.
Secure parts with (2) 3" nails at each connection and (4) 3" nails at seam.

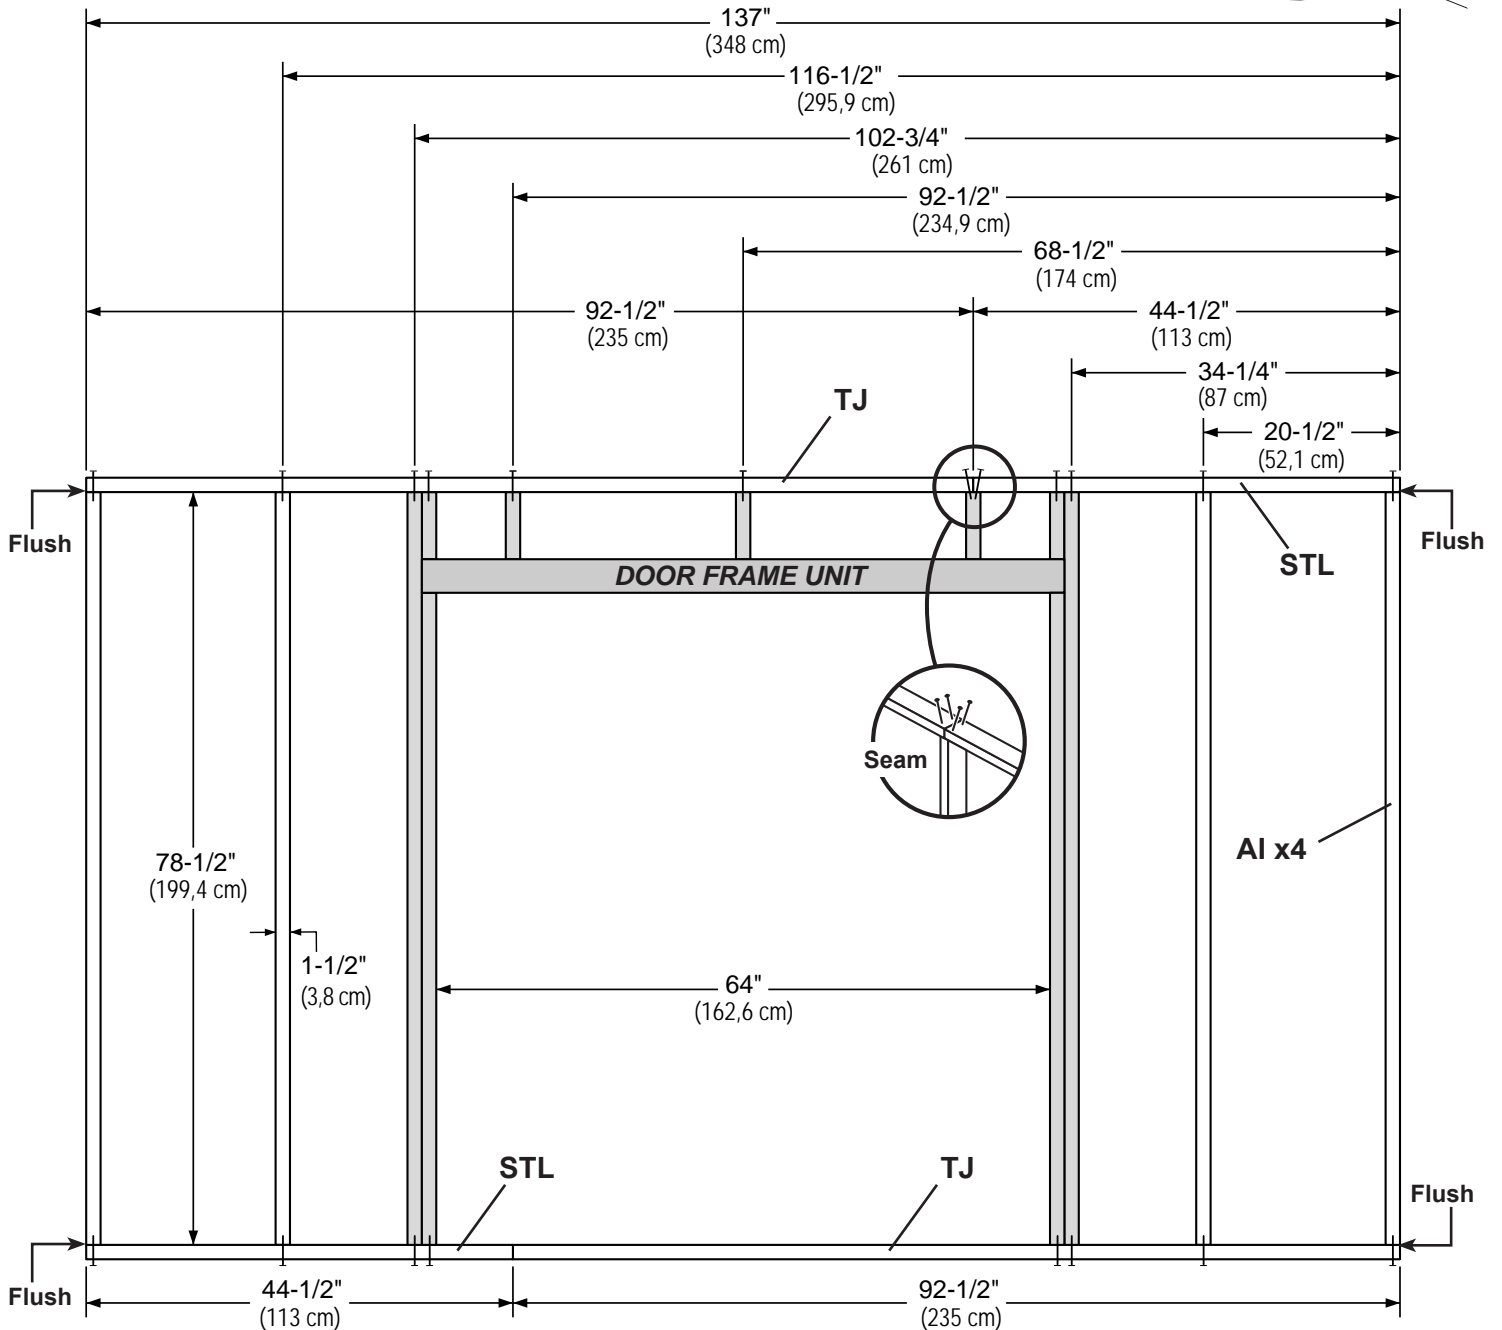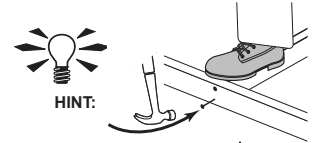

GABLE WALL A

PARTS REQUIRED:

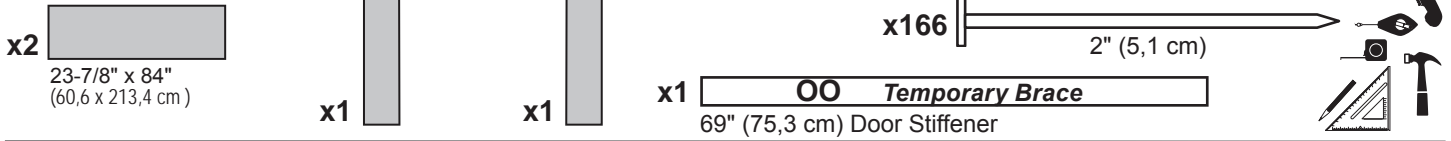


2

Install the left panel 1-1/2" from the top plate.
Use a 2x4 spacer for consistent measurement.
Secure panel with 2" nails spaced 6" apart on edges.

3

Install the right panel flush to installed panel, as shown.
Ensure 64" (162,8 cm) door measurement.
Use part OO as a temporary brace. Secure with with (2) 3" screws.


Secure panels with 2" nails spaced 6" apart on edges.

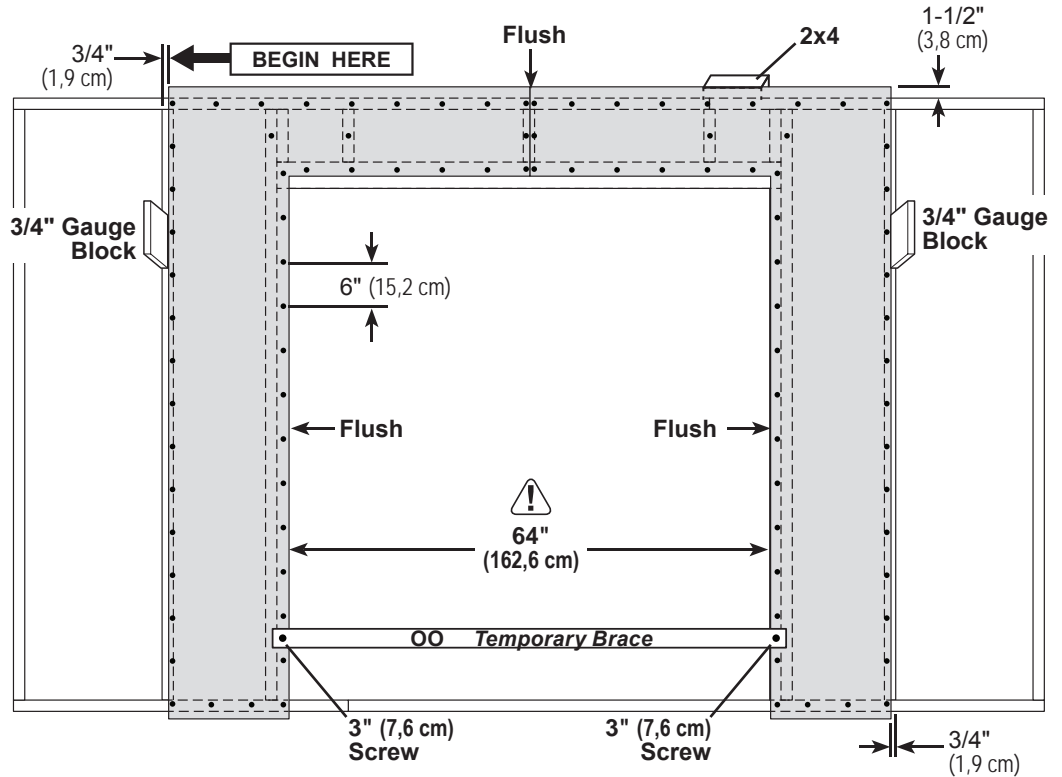

4

Install (2) 23-7/8" x 84" panels flush to installed panels and 1-1/2" from the top plate.


Secure panels with 2" nails spaced 6" apart on edges.

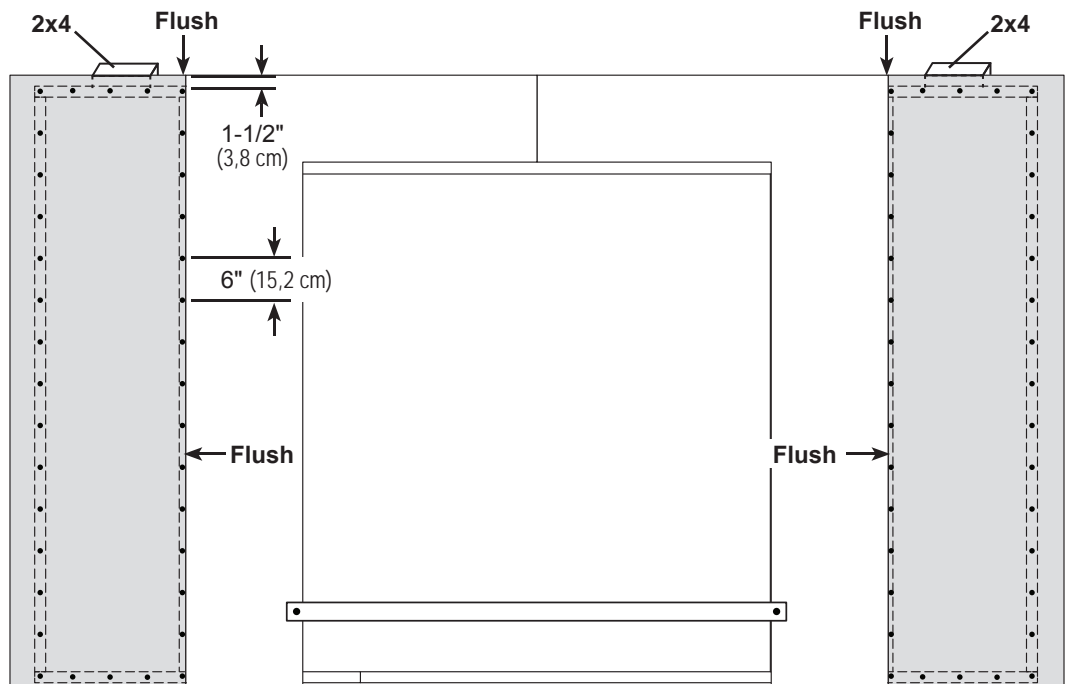

Your 12' wall A is now assembled.
Carefully flip the wall over.

GABLE WALL B

PARTS REQUIRED:

x32  3" (7,6 cm)

x2 **STL**  2 x 4 x 44-1/2" (5,1 x 10,2 x 113 cm)



x7 **AI**  2 x 4 x 78-1/2" (5,1 x 10,2 x 199,4 cm)

x2 **TJ**  2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm)



✓ BEGIN

- 1 Arrange parts on edge on floor. Measure and mark from end of boards. Secure with (2) 3" nails at each connection and (4) 3" nails at seams.

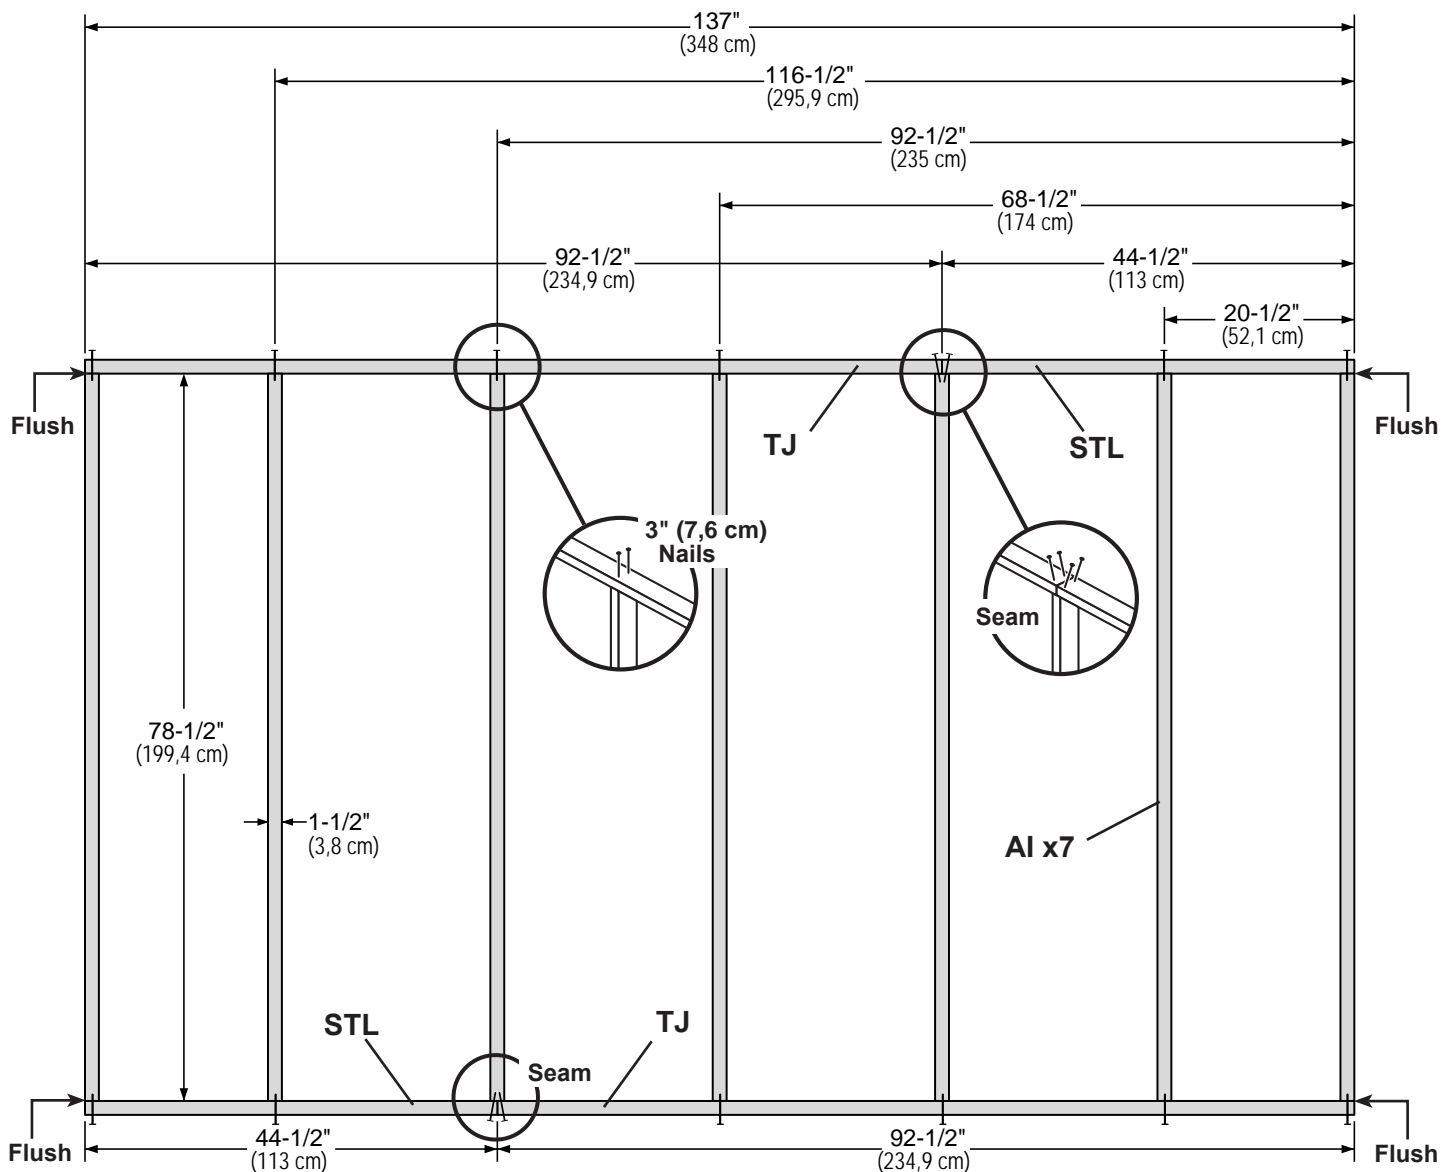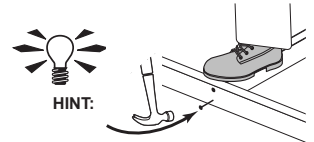

GABLE WALL B


PARTS REQUIRED:

x3



48 x 84"
(121,9 x 213,4 cm)

x150




2

Install 48" x 84" panel
1-1/2" from the top plate.

Use a 2x4 spacer for
consistent measurement.

Secure panel with 2" nails
spaced 6" apart on edges
and 12" inside panel.

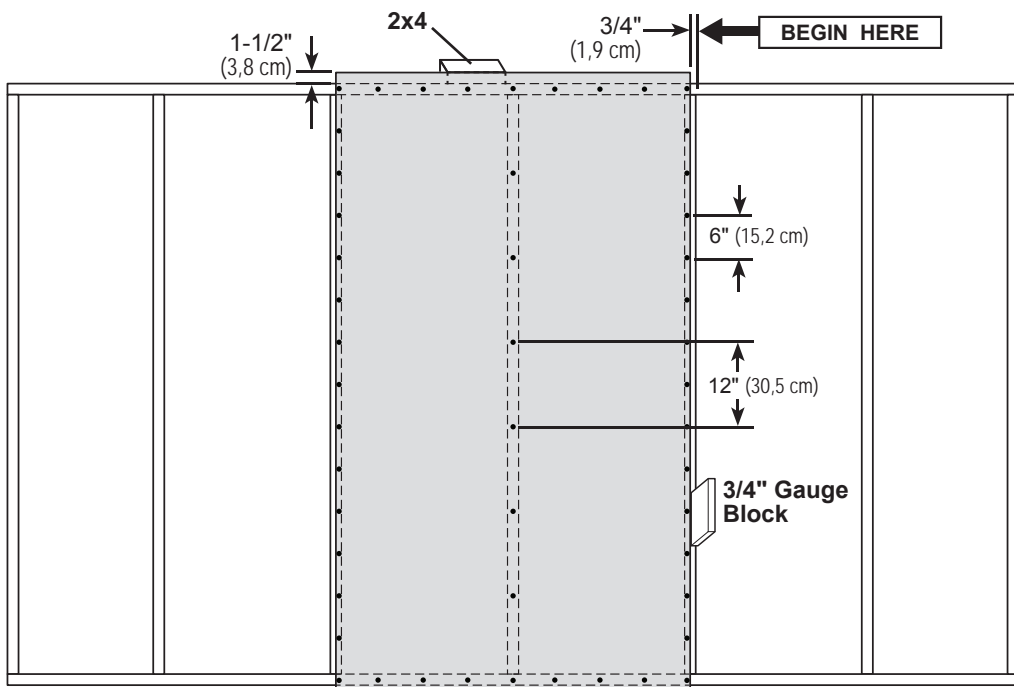


3

Install (2) 48" x 84" panels
flush to installed panel.

Locate panels 1-1/2" from
the top plate.

Secure with 2" nails
spaced 6" apart on edges
and 12" apart inside panel.

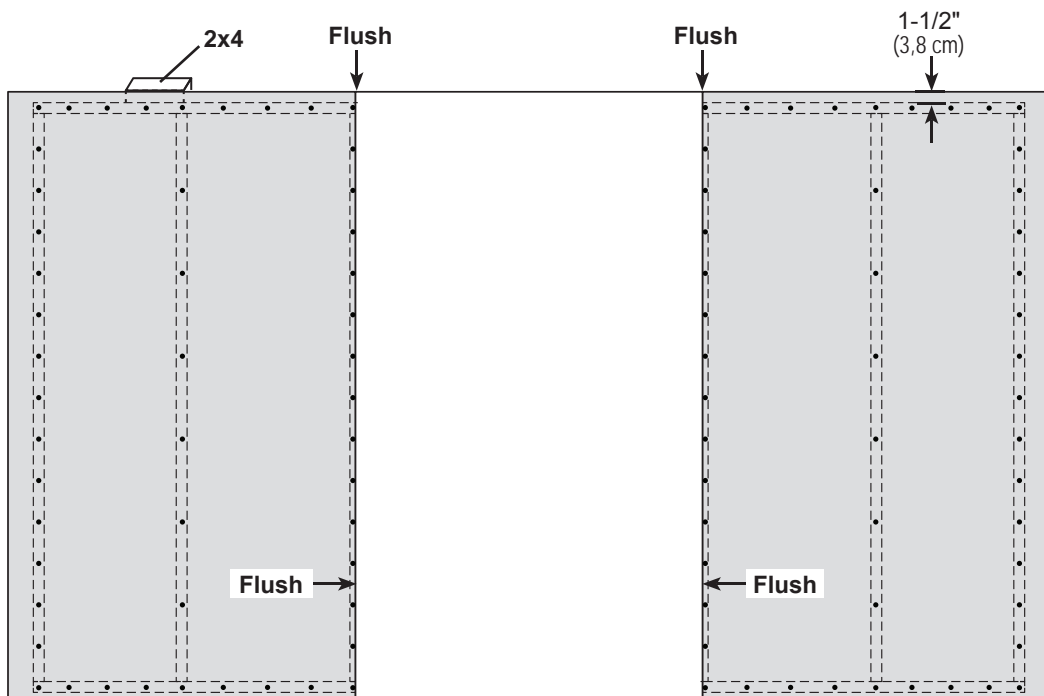



Your gable wall B is now
assembled.

Carefully flip the wall over.


EAVE WALL C


PARTS REQUIRED:


x52  3" (7,6 cm)

x1 **SP**  2 x 4 x 48" (5,1 x 10,2 x 121,9 cm)

x2 **TM**  2 x 4 x 72" (5,1 x 10,2 x 182,8 cm)

x11 **AI**  2 x 4 x 78-1/2" (5,1 x 10,2 x 199,4 cm)



x3 **TP**  2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)



If your door is on the 12' gable end, you will build 2 identical 20' eave wall C's.

✓ BEGIN

- 1 Arrange parts on edge on floor. Measure and mark from end of boards.
Secure with (2) 3" nails at each connection and (4) 3" nails at seams.

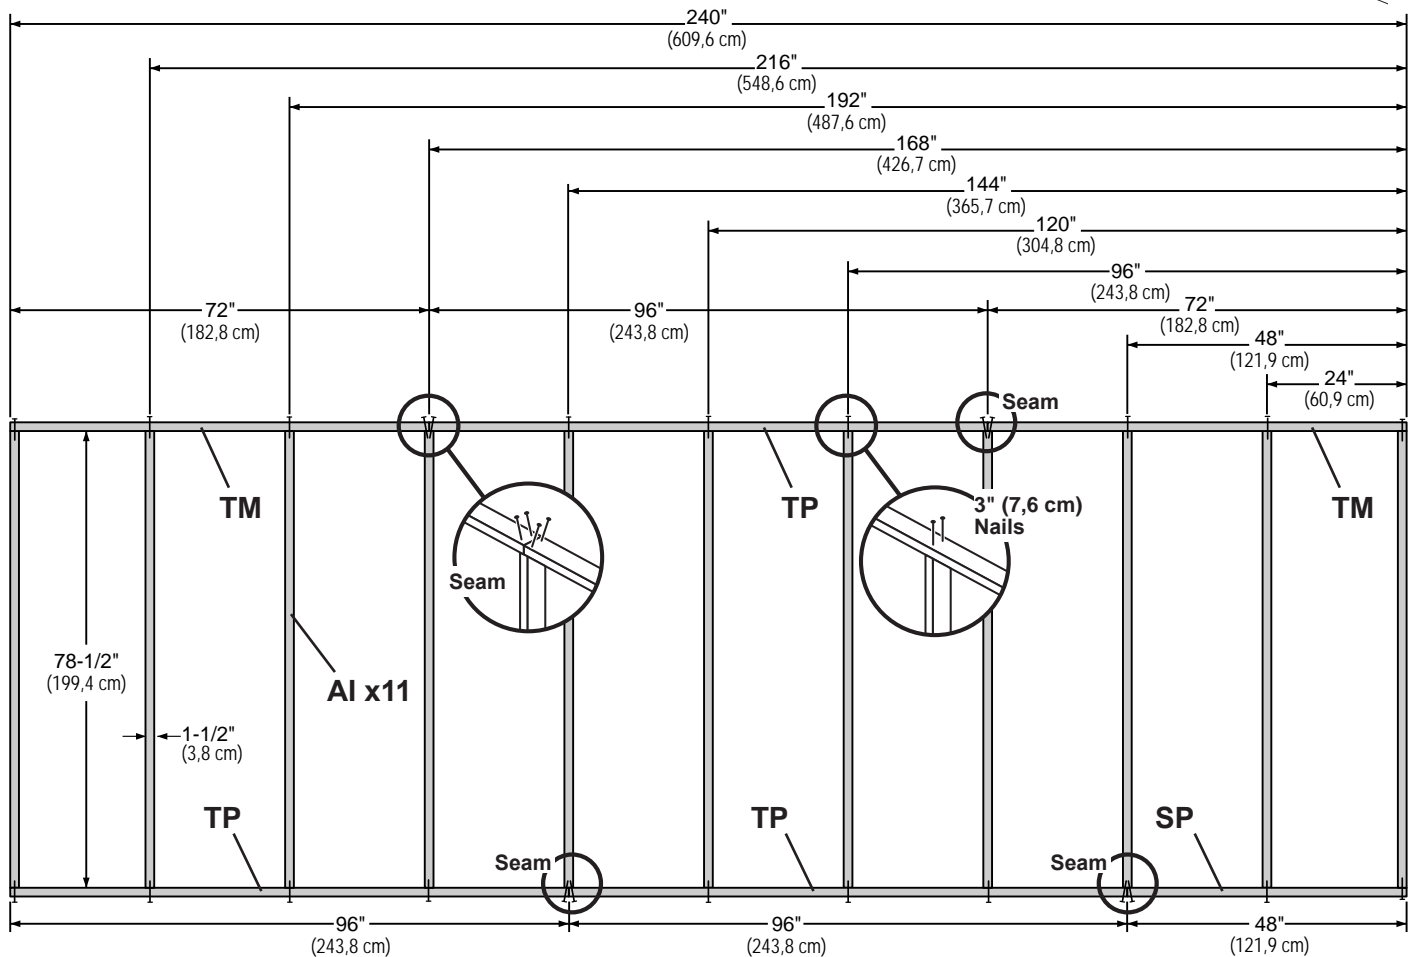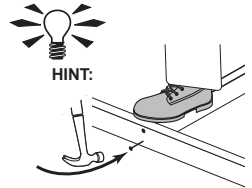

EAVE WALL C


PARTS REQUIRED:

x5




48 x 84" (121,9 x 213,4 cm)

x250




Install panels with the primed side facing up.

- 2 Install (1) 48" x 84" panel 1-1/2" from the top plate. Use a 2x4 spacer for consistent measurement. Secure panel with 2" nails spaced 6" apart on edges.

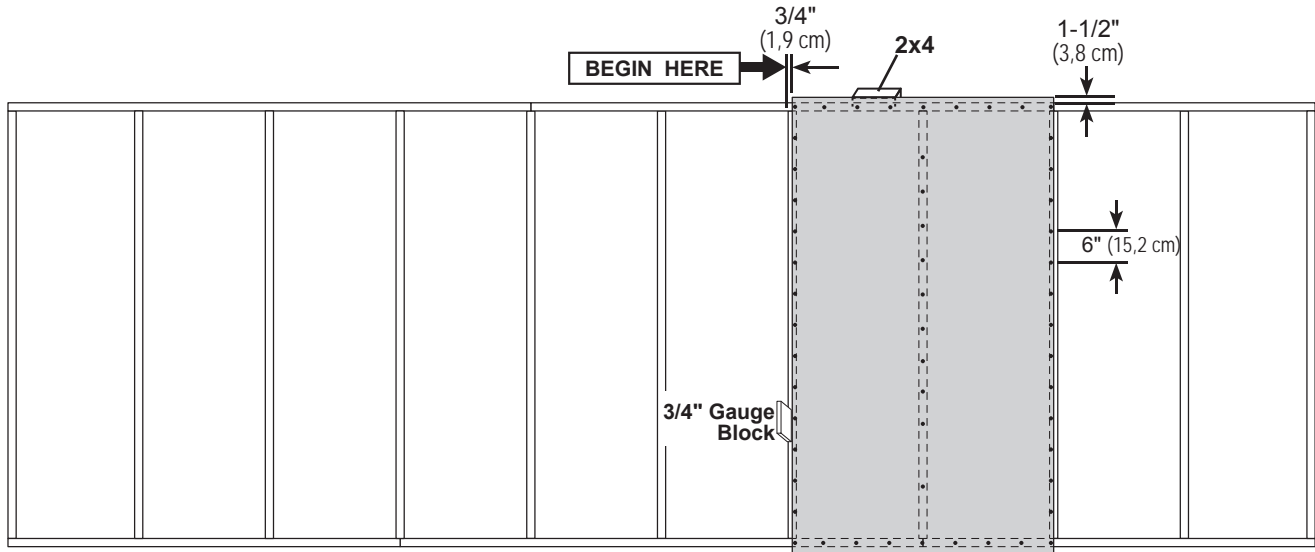


- 3 Install (4) 48" x 84" panels, as shown, flush to installed panels and 1-1/2" from the top plate. Secure panels with 2" nails spaced 6" apart on edges and 12" apart inside panel.

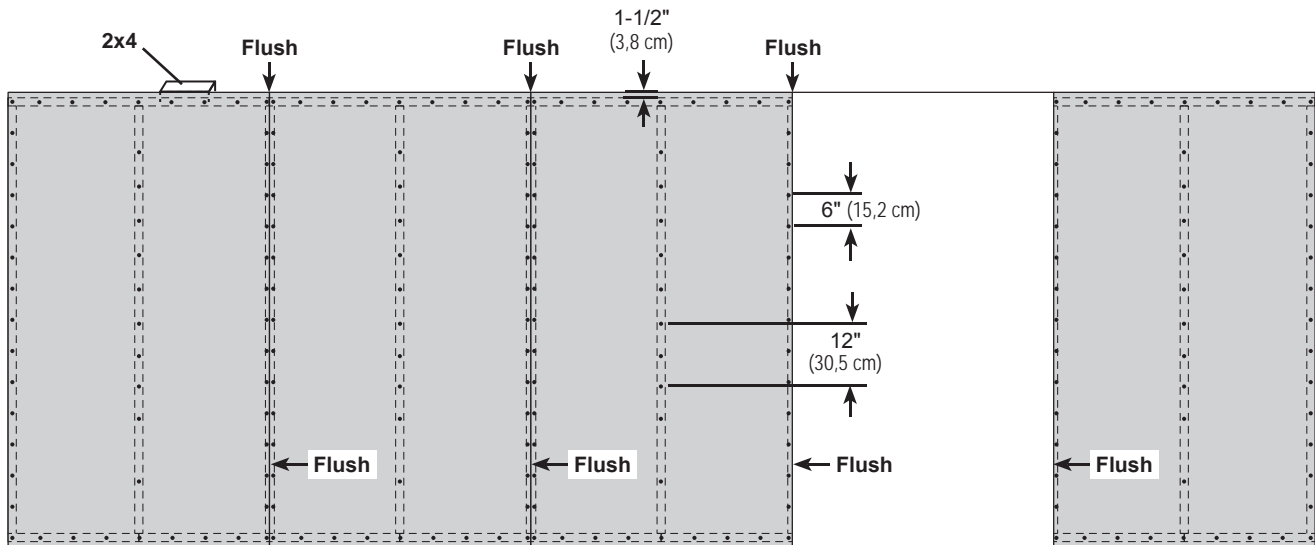


Your eave wall c is now assembled.
Carefully flip the wall over.


GABLE WALL D

PARTS REQUIRED:

x36  3" (7,6 cm)

x2 **STL**  2 x 4 x 44-1/2" (5,1 x 10,2 x 113 cm)

x8 **AI**  2 x 4 x 78-1/2" (5,1 x 10,2 x 199,4 cm)



x2 **TJ**  2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm)



✓ BEGIN

1

Arrange parts on edge on floor. Measure and mark from end of boards.
Secure with (2) 3" nails at each connection and (4) 3" nails at seams.

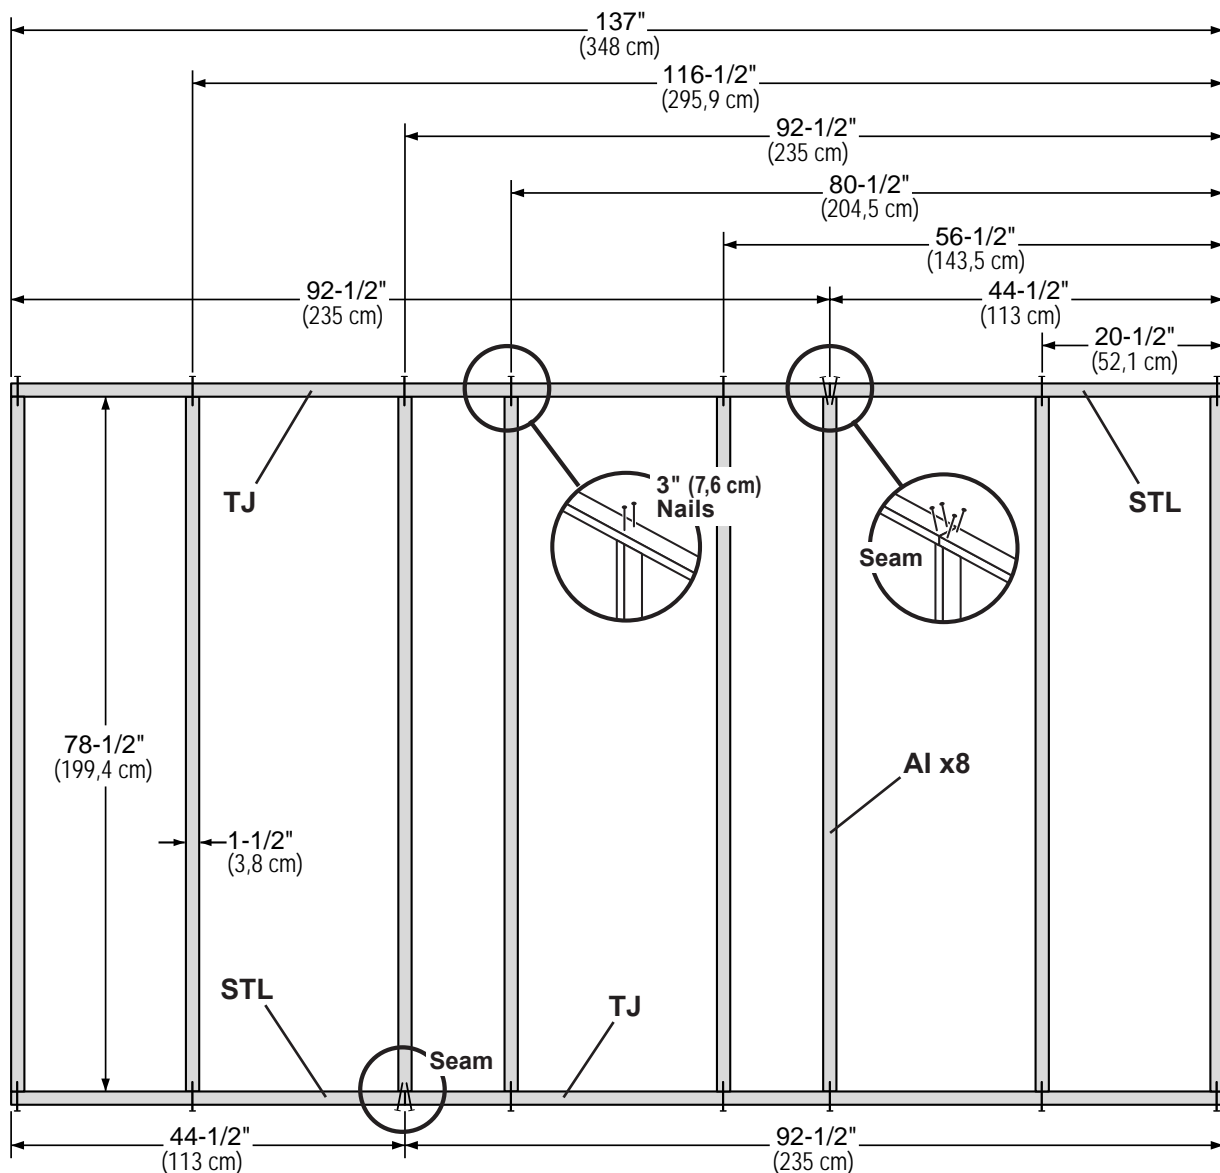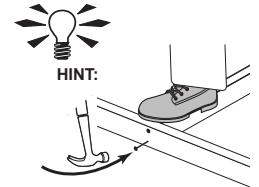

GABLE WALL D


PARTS REQUIRED:

x3



48 x 84"
(121,9 x 213,4 cm)

x156




2

Install 48" x 84" panel
1-1/2" from the top plate.

Use a 2x4 spacer for
consistent measurement.

Secure panel with 2" nails
spaced 6" apart on edges
and 12" inside panel.

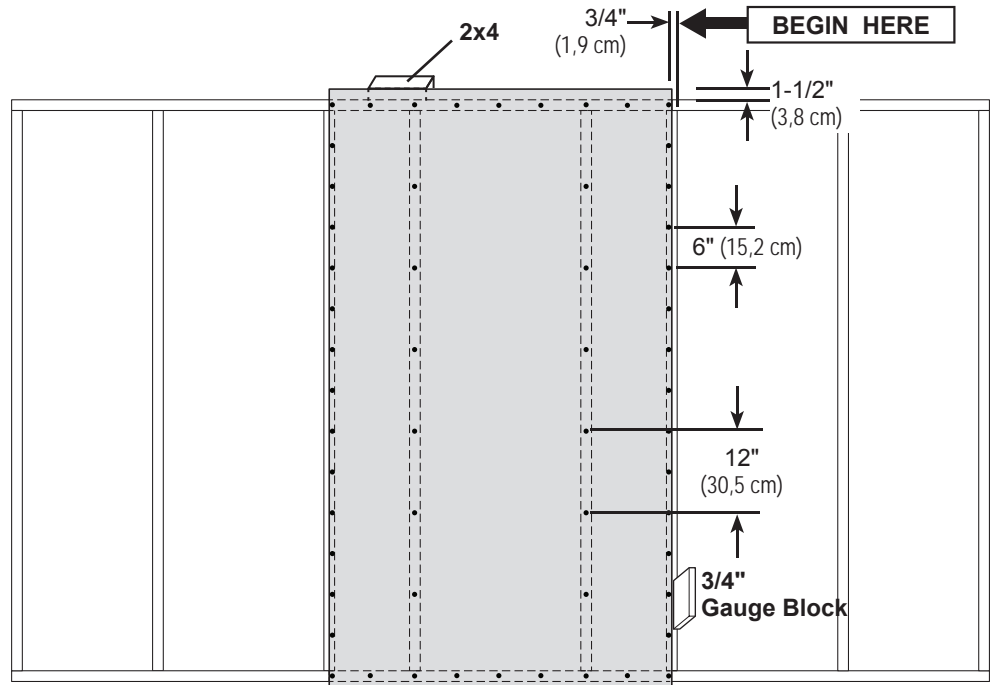


3

Install (2) 48" x 84" panels
flush to installed panel.

Locate panels 1-1/2" from
the top plate.

Secure with 2" nails spaced
6" apart on edges and 12"
apart inside panel.

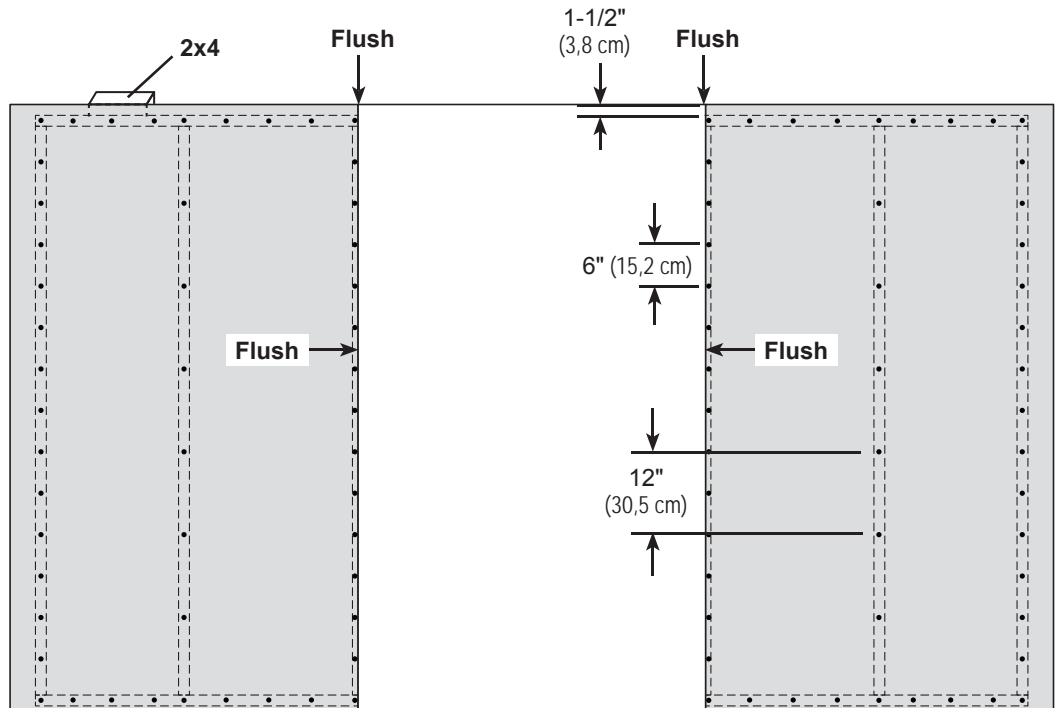

Your gable wall D is now assembled.
Carefully flip the wall over.

EAVE WALL E

PARTS REQUIRED:


x1 **SP** 2 x 4 x 48" (5,1 x 10,2 x 121,9 cm)

x2 **TM** 2 x 4 x 72" (5,1 x 10,2 x 182,8 cm)

x11 **AI** 2 x 4 x 78-1/2" (5,1 x 10,2 x 199,4 cm)

x3 **TP** 2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)



x52 **3"** (7,6 cm)



✓ BEGIN


1 Arrange parts on edge on floor. Measure and mark from end of boards.

Secure with (2) 3" nails at each connection and (4) 3" nails at seams.

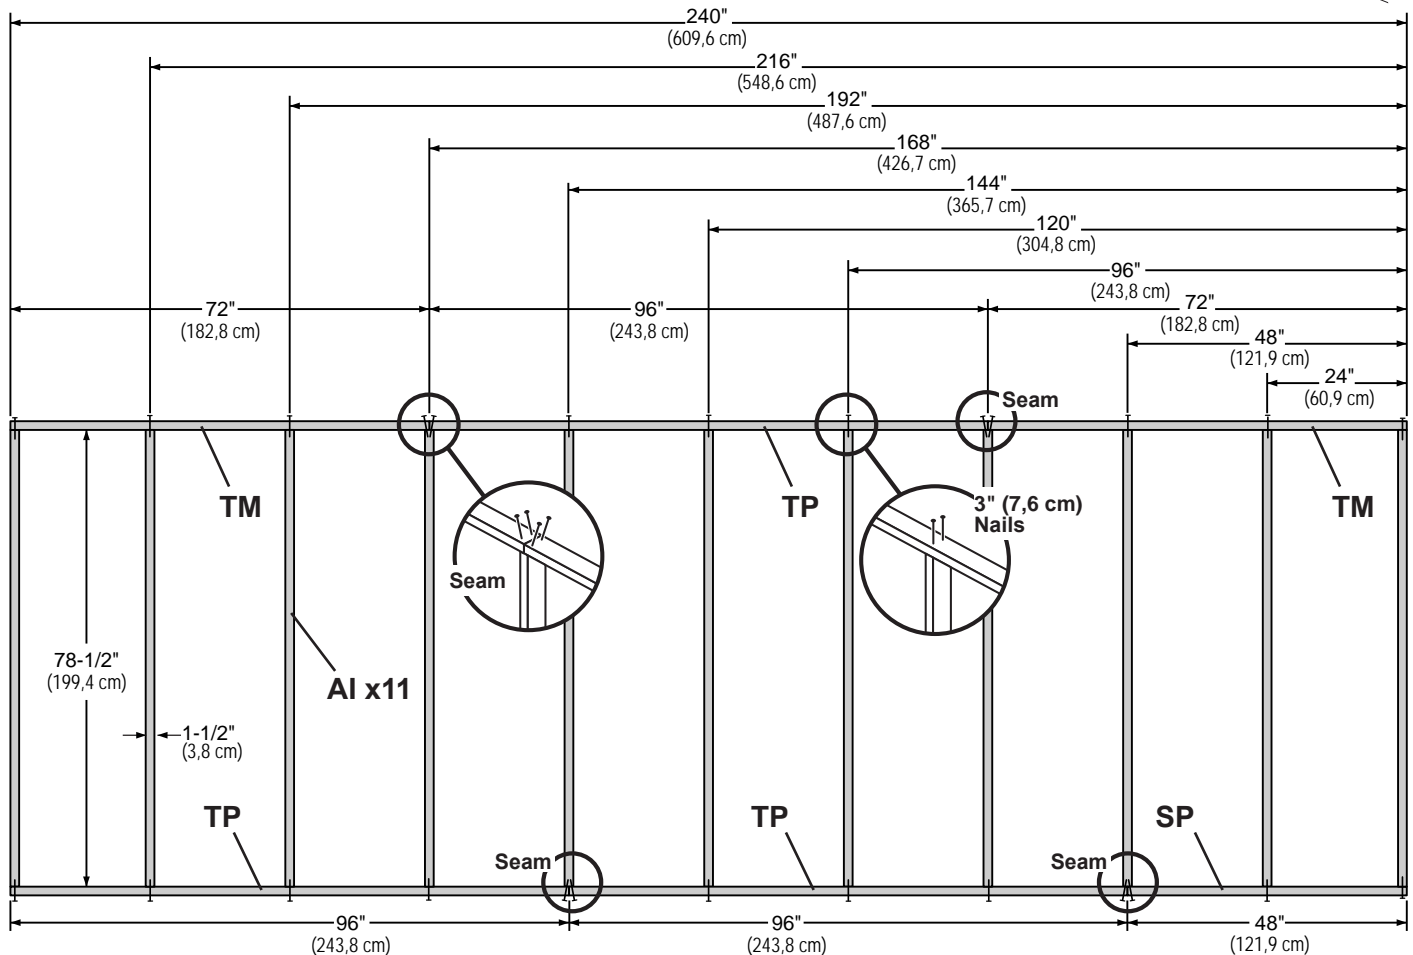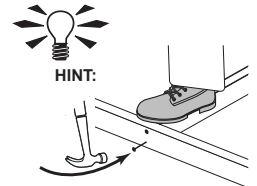


EAVE WALL E


PARTS REQUIRED:

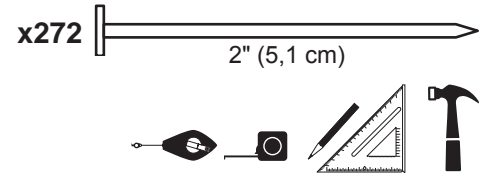

- 2** Install the first 48" x 84" panel 1-1/2" from the top plate.
Use a 2x4 spacer for consistent measurement.
Secure panel with 2" nails spaced 6" apart on edges and 12" inside panel.

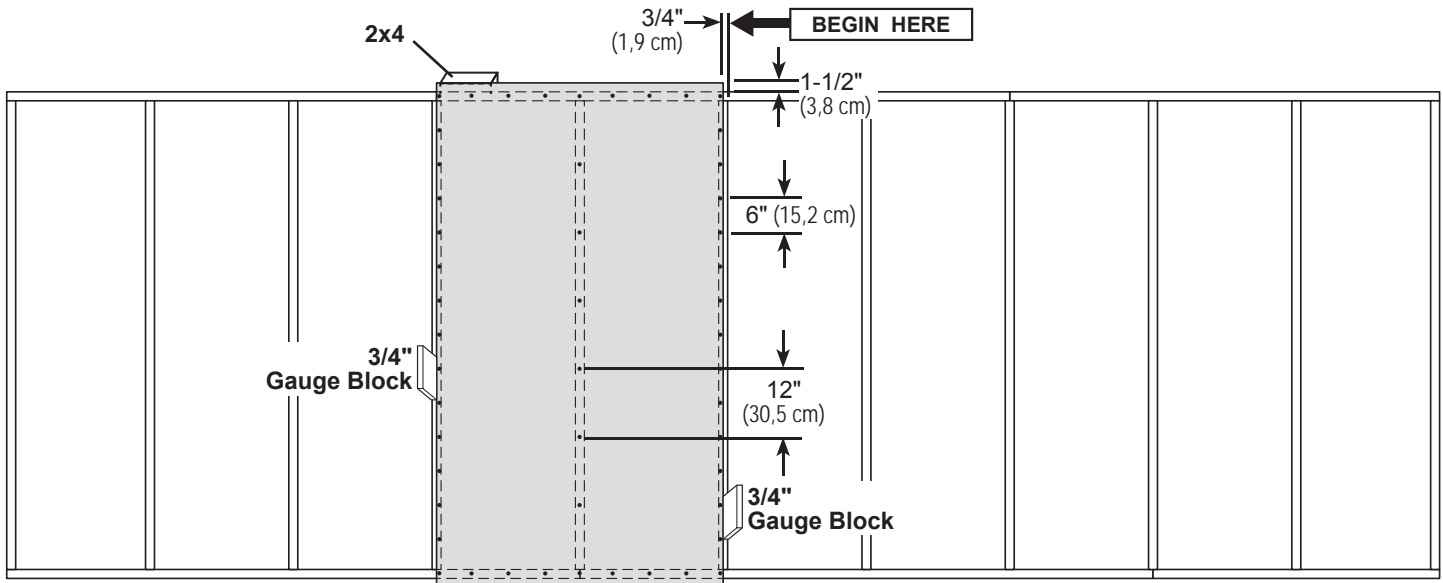

- 3** Install (3) 48" x 84" panel and (2) 23-7/8 x 84" panels flush to installed panels.
Install 48" x 84" first.
Secure with 2" nails spaced 6" apart on edges and 12" apart inside panel.

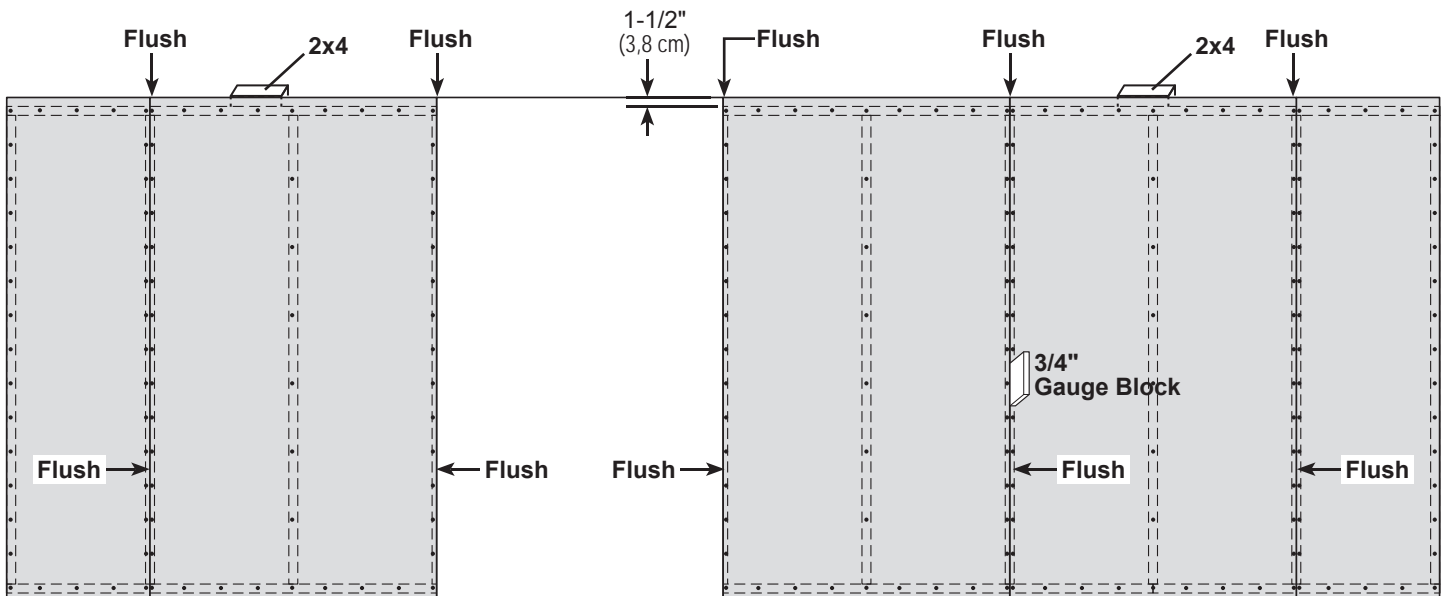

Your eave wall E is now assembled.
Carefully flip the wall over.

EAVE WALL F

PARTS REQUIRED:





	x66		3" (7,6 cm)
x2	TM		2 x 4 x 72" (5,1 x 10,2 x 182,9 cm)
x10	AI		2 x 4 x 78-1/2" (5,1 x 10,2 x 199,4 cm)
x3	TP		2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)




✓ BEGIN

- 1 Arrange parts on edge on floor, as shown. Measure and mark from end of boards. Place the **Door Frame Unit** at measurements shown. Secure parts with (2) 3" nails at each connection and (4) 3" nails at seam.

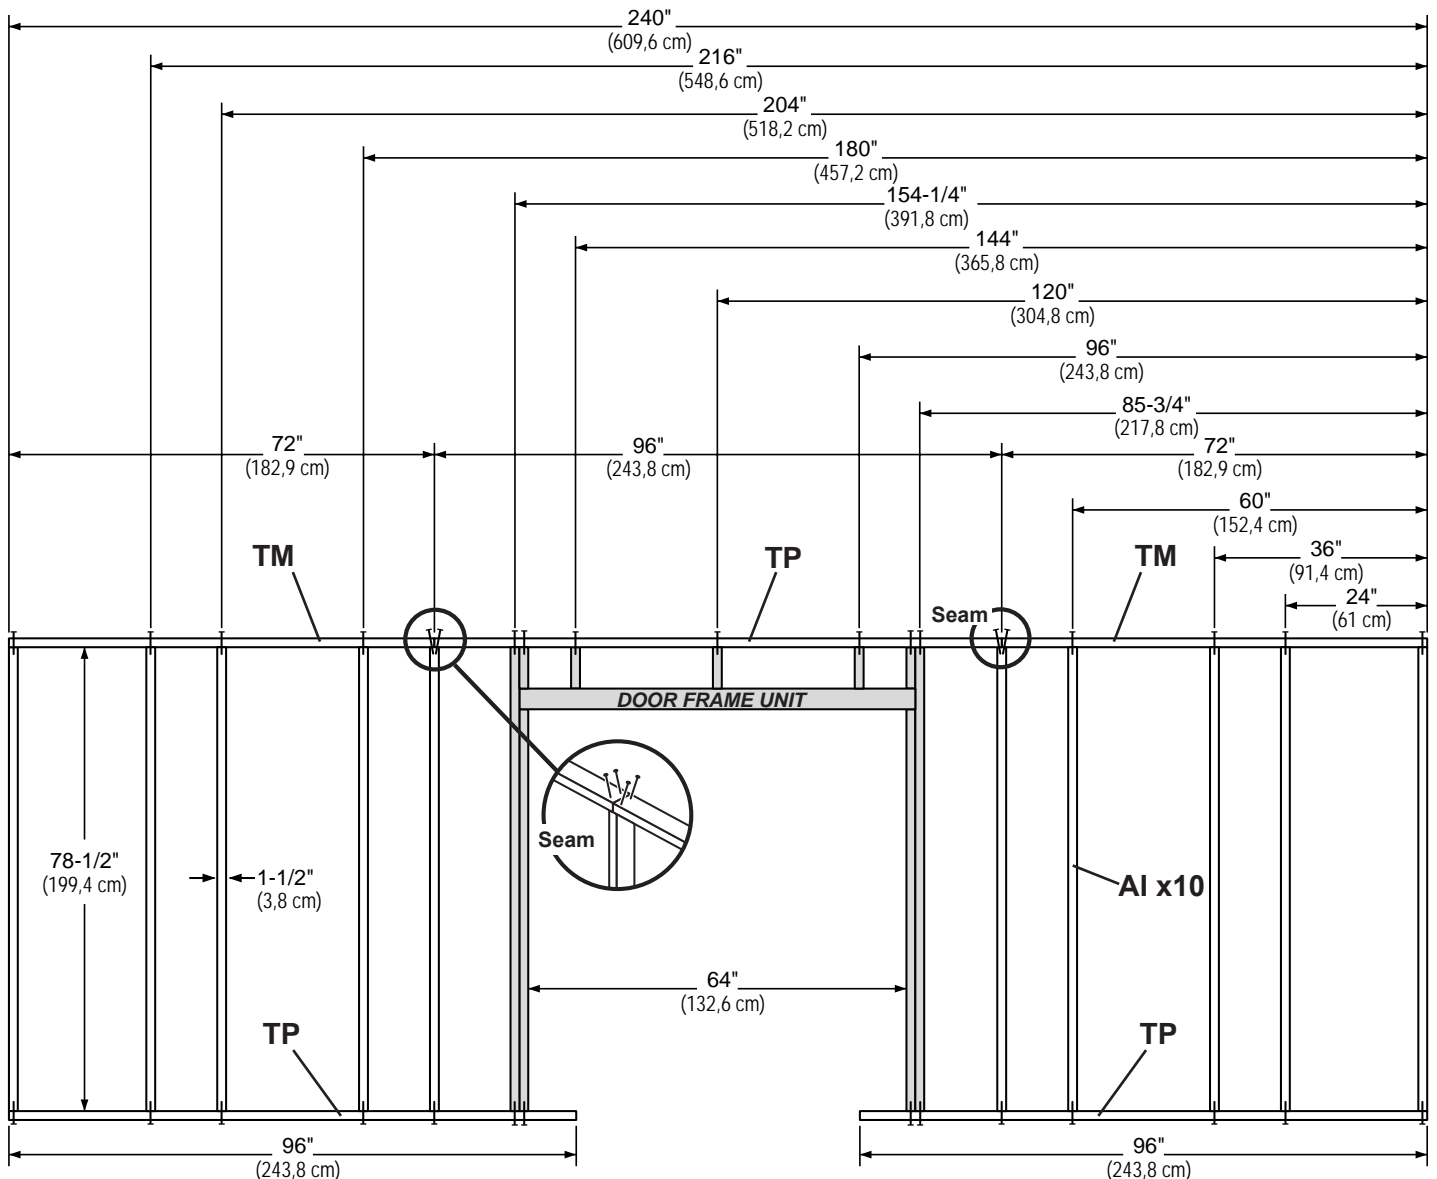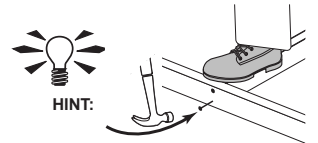


EAVE WALL F

PARTS REQUIRED:

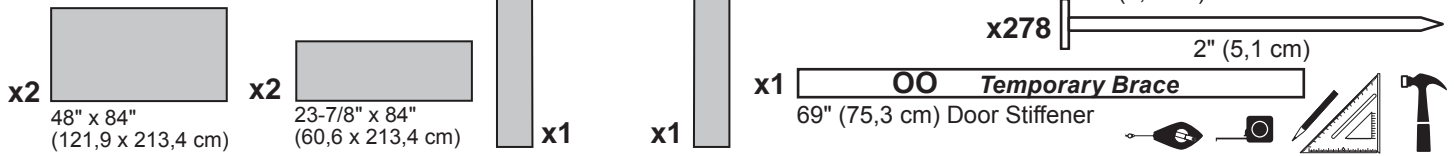


- 2** Install the left panel 1-1/2" from the top plate. Use a 2x4 spacer for consistent measurement. Secure panel with 2" nails spaced 6" apart on edges.

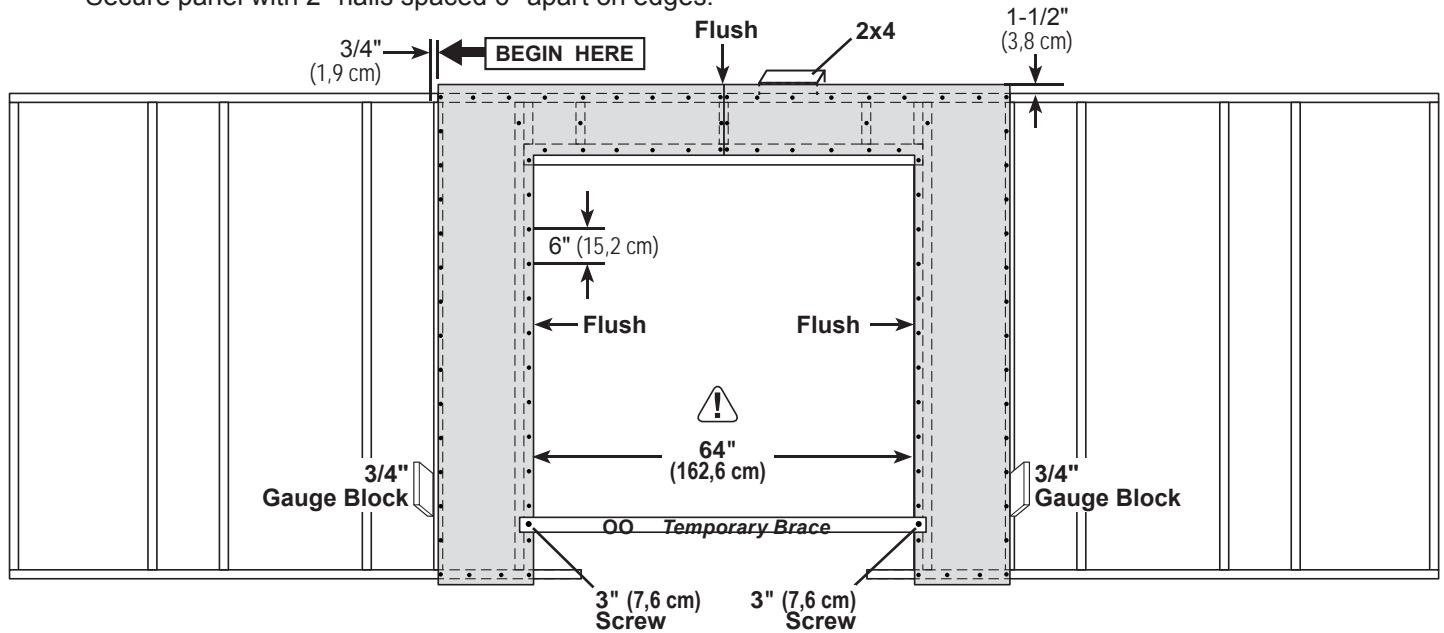

- 3** Install the right panel flush to installed panel, as shown. **Ensure 64" (162,8 cm) door measurement.** Use part OO as a temporary brace. Secure with (2) 3" screws. Secure panel with 2" nails spaced 6" apart on edges and 12" apart on edges.

- 4** Install (2) 48" x 84" panels and (2) 23-7/8" x 84" panels flush to installed panels. Secure panels with 2" nails spaced 6" apart on edges and 12" apart inside panel.

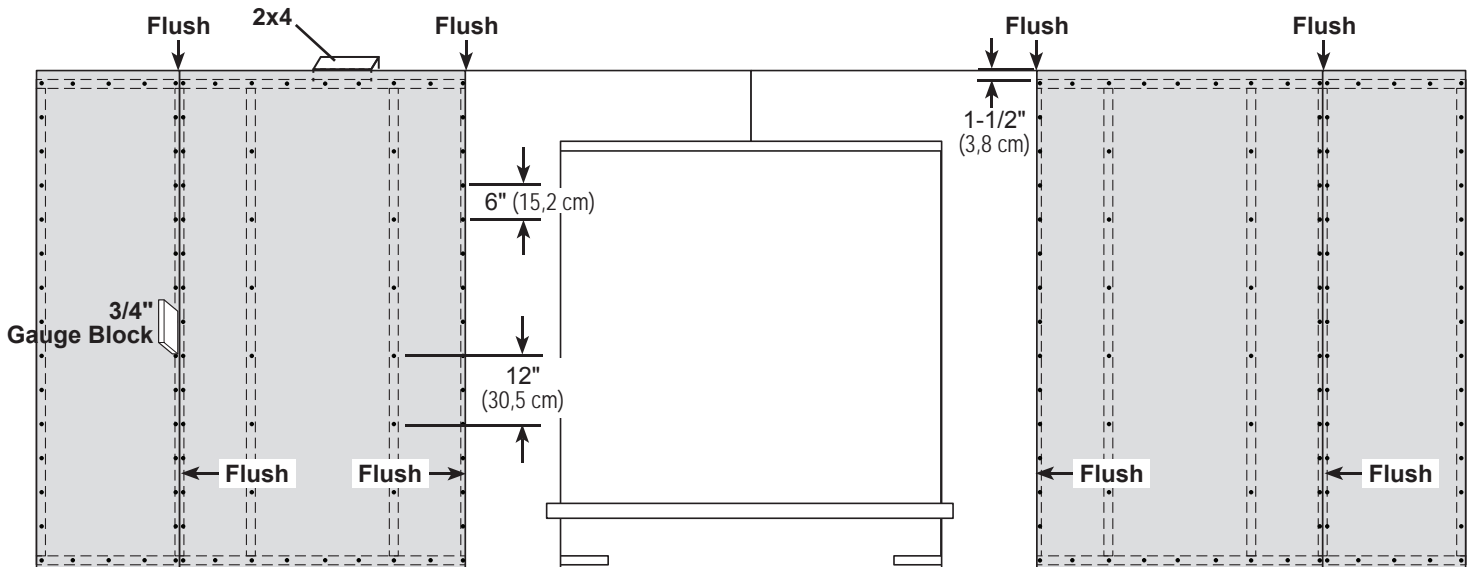


Your eave wall F is now assembled. Carefully flip the wall over.


EAVE WALL G

PARTS REQUIRED:

x60



3" (7,6 cm)

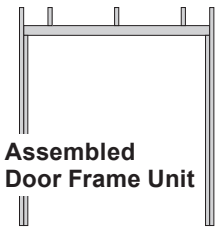

Assembled
Door Frame Unit

x2

TM

2 x 4 x 72" (5,1 x 10,2 x 182,9 cm)

x8

AI

2 x 4 x 78-1/2" (5,1 x 10,2 x 199,4 cm)

x3

TP

2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)


✓ BEGIN

1


Arrange parts on edge on floor, as shown. Measure and mark from end of boards.

Place the **Door Frame Unit** at measurements shown.

Secure parts with (2) 3" nails at each connection and (4) 3" nails at seam.


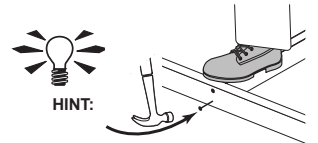


HINT:

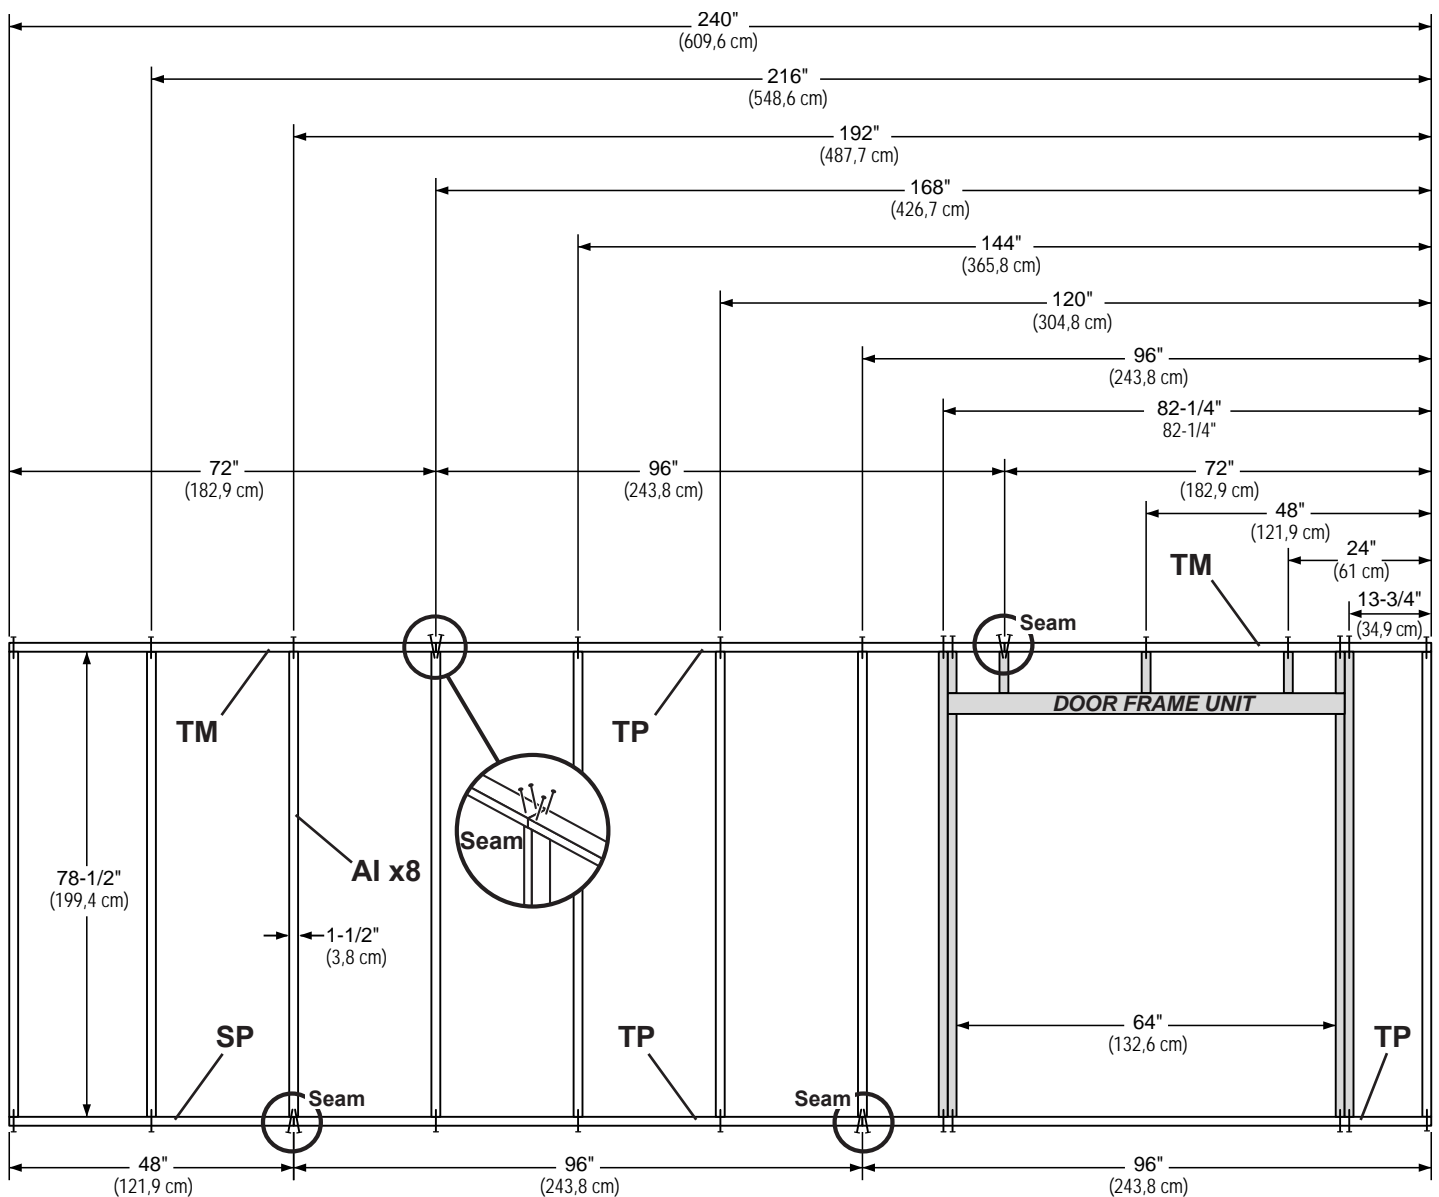


EAVE WALL G

PARTS REQUIRED:

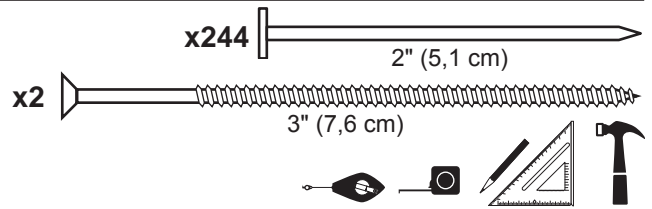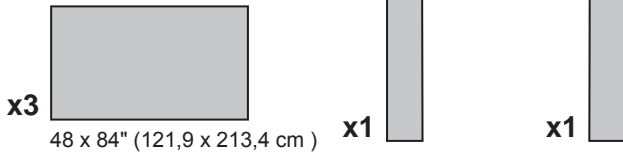


- 2** Install the left panel 1-1/2" from the top plate. Use a 2x4 spacer for consistent measurement. Secure panel with 2" nails spaced 6" apart on edges.

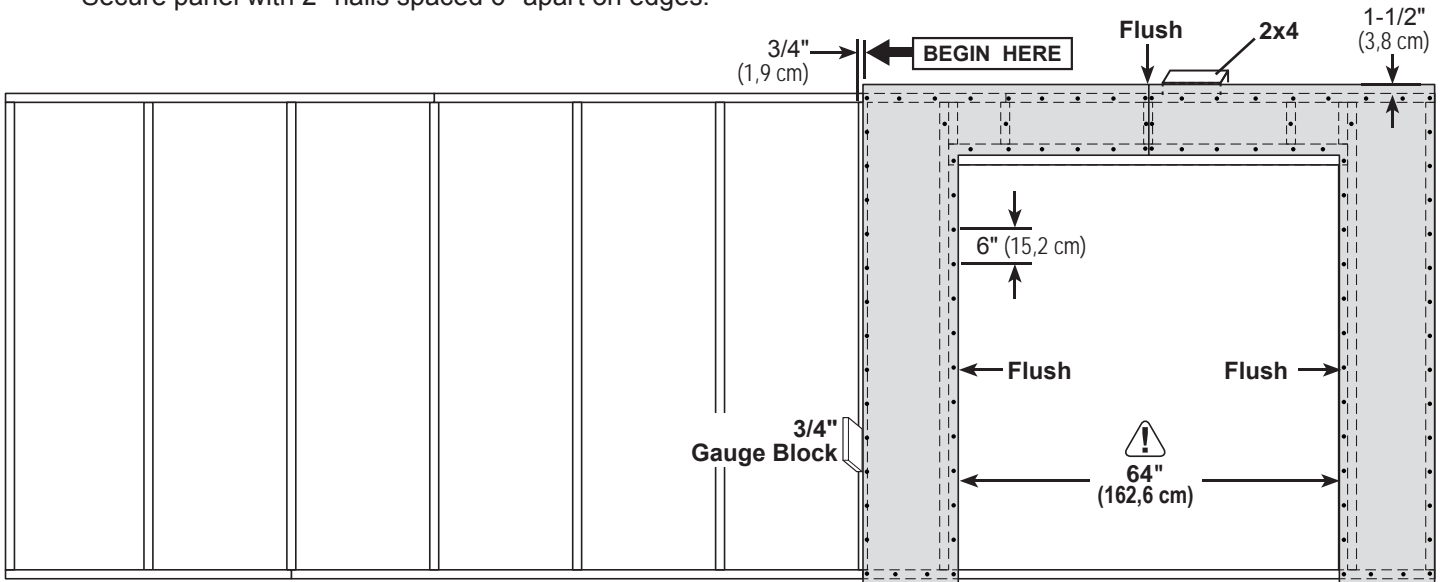

- 3** Install the right panel flush to installed panel, as shown.
Ensure 64" (162,8 cm) door measurement.
Secure panel with 2" nails spaced 6" apart on edges and 12" apart on edges.

- 4** Install (3) 48" x 84" panels flush to installed panels.
Secure panels with 2" nails spaced 6" apart on edges and 12" apart inside panel.

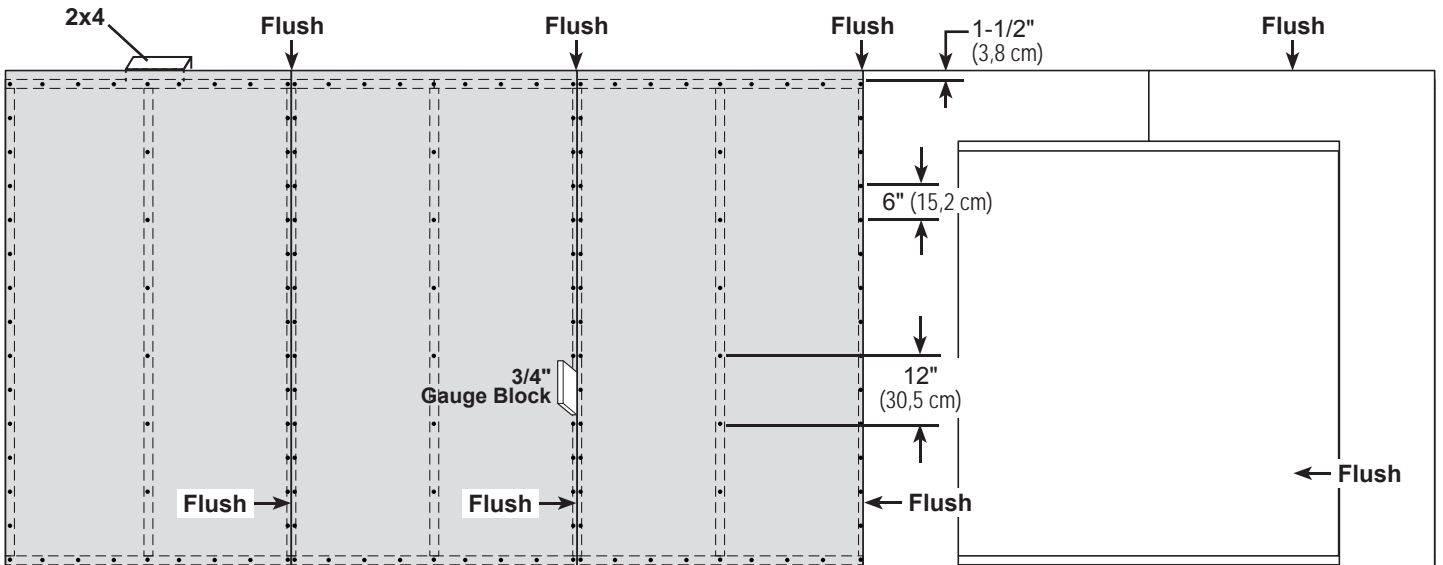


Your eave wall G is now assembled. Carefully flip the wall over.

EAVE WALL C, F or G INSTALLATION

PARTS REQUIRED:

x2 **TJ** *Temporary Brace*
2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm)




x20 3" (7,6 cm)
x4 3" (7,6 cm)
x45 2" (5,1 cm)

✓ **BEGIN**

1

Center eave wall on the floor.
1-1/2" overlap is to the top.


Install **TJ** as a temporary brace.
Secure with (2) 3" screws.

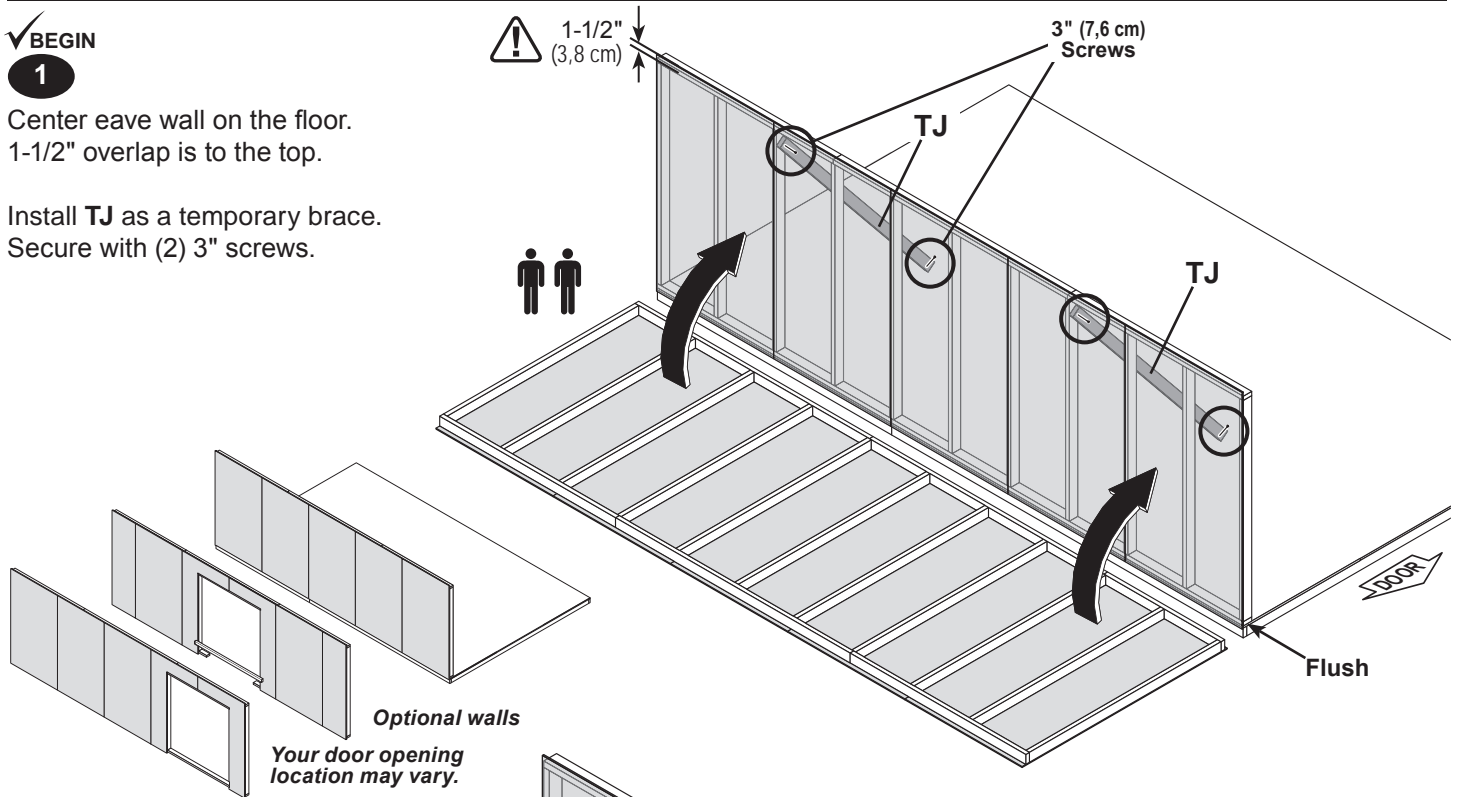

2

Secure lower edge of panels to floor
frame with 2" nails spaced 6" apart.
Angle nails into floor frame (**Fig. A**).


Secure wall bottom plates to floor
with 3" nails (**Fig. A**).

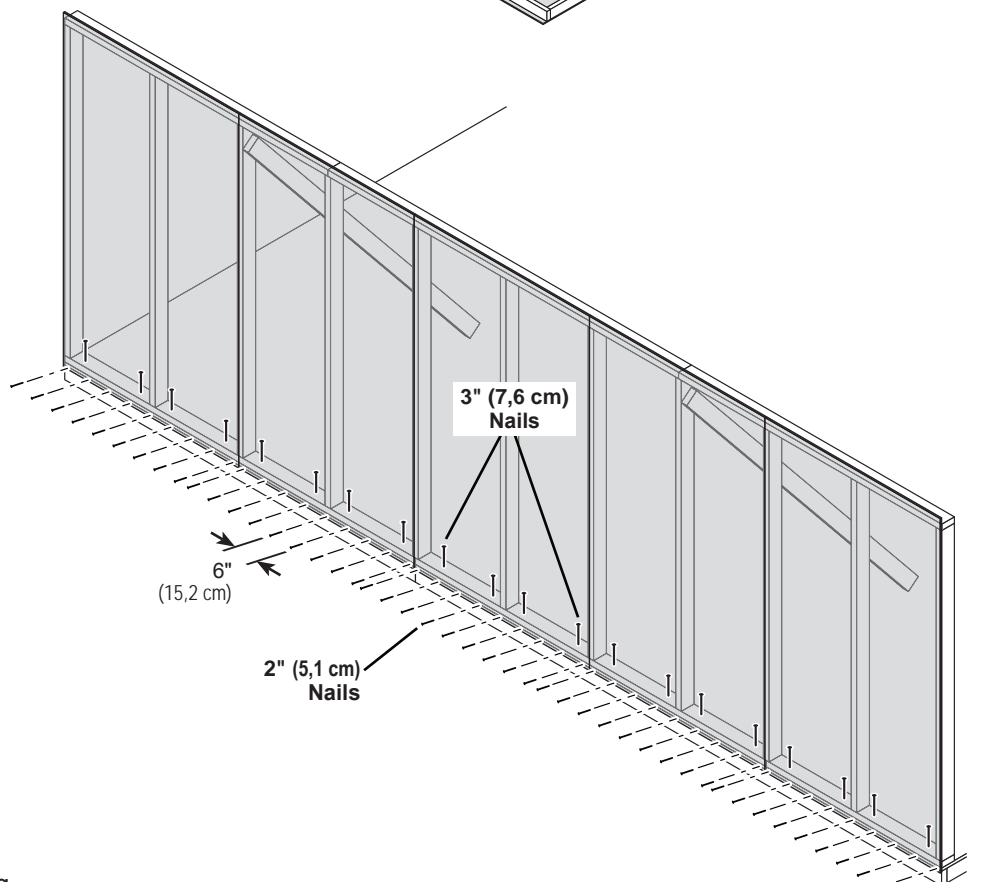

Your eave wall C, F or G is now standing.

GABLE WALL B INSTALLATION

PARTS REQUIRED

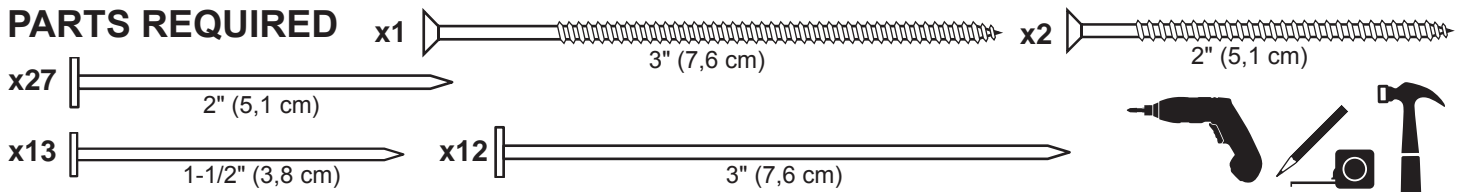


✓ BEGIN 1

Install gable wall centered on floor.
1-1/2" (3,8 cm) overlap is to the top.

Secure wall with (1) 2" screw into eave wall
bottom plate (**Fig. A**) and top plate (**Fig. B**).

Secure wall to bottom plate first.

⚠ **ENSURE PANEL CORNERS ARE FLUSH.**

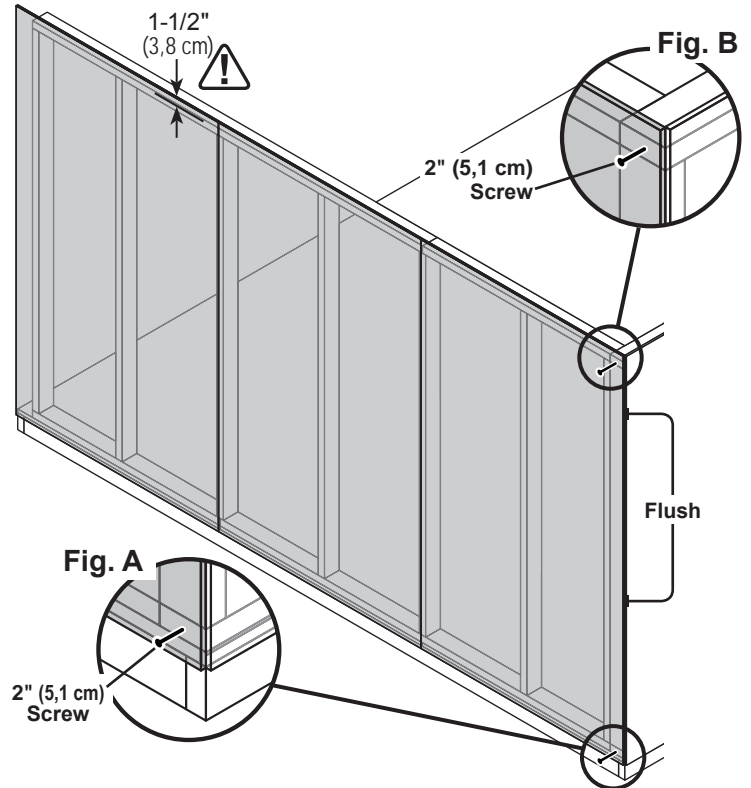


2

Secure lower edge of panels to floor with 2" nails spaced 6" apart.
Angle nails into floor frame (**Fig. C**).

Secure panel to eave wall stud with 1-1/2" nails spaced 6" apart.

3


Secure wall top plate with (1) 3" screw angled at the corner (**Fig. D**).

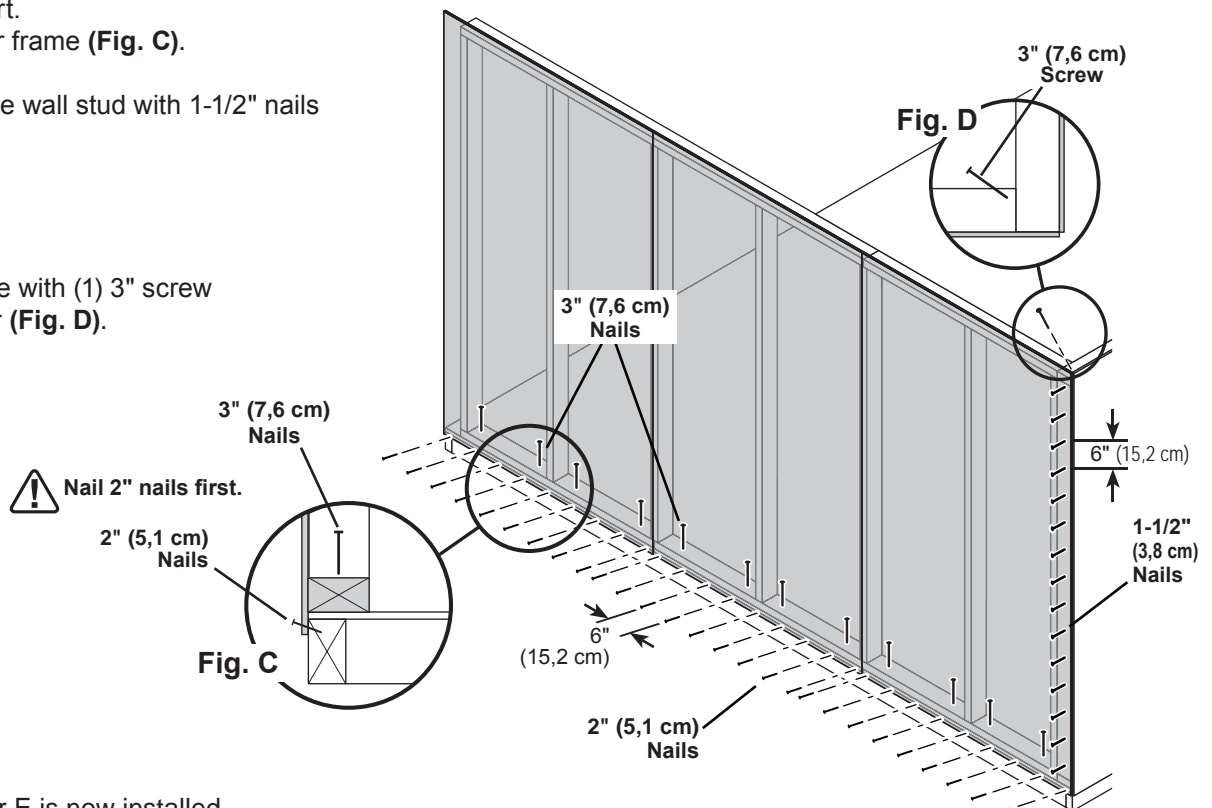

Your gable wall B or E is now installed.

(2nd) EAVE WALL C or E INSTALLATION

PARTS REQUIRED:

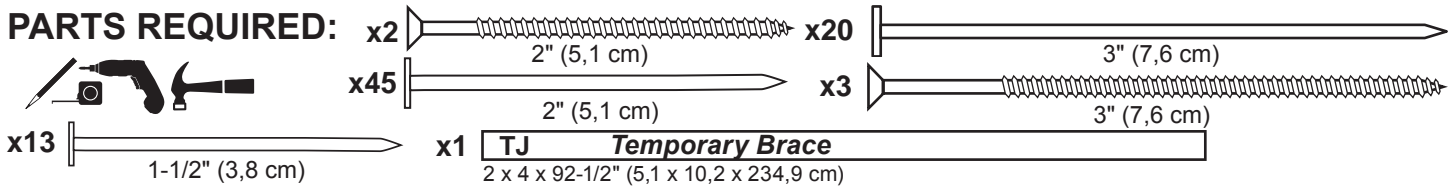

✓ BEGIN

1

Install 20' wall centered on floor.
1-1/2" overlap is to the top.

2

Secure wall with (1) 2" screw through
12' wall panel into 20' wall bottom
and top plates (**Fig. B, Fig. A**).


Secure wall to bottom plate first.

⚠ **ENSURE PANEL CORNERS
ARE FLUSH.**

3

Secure lower edge of wall panels to
floor frame with 2" nails spaced 6" apart.
Angle nails into floor frame (**Fig. C**).

Secure wall bottom plates to floor
with 3" nails (**Fig. C**).

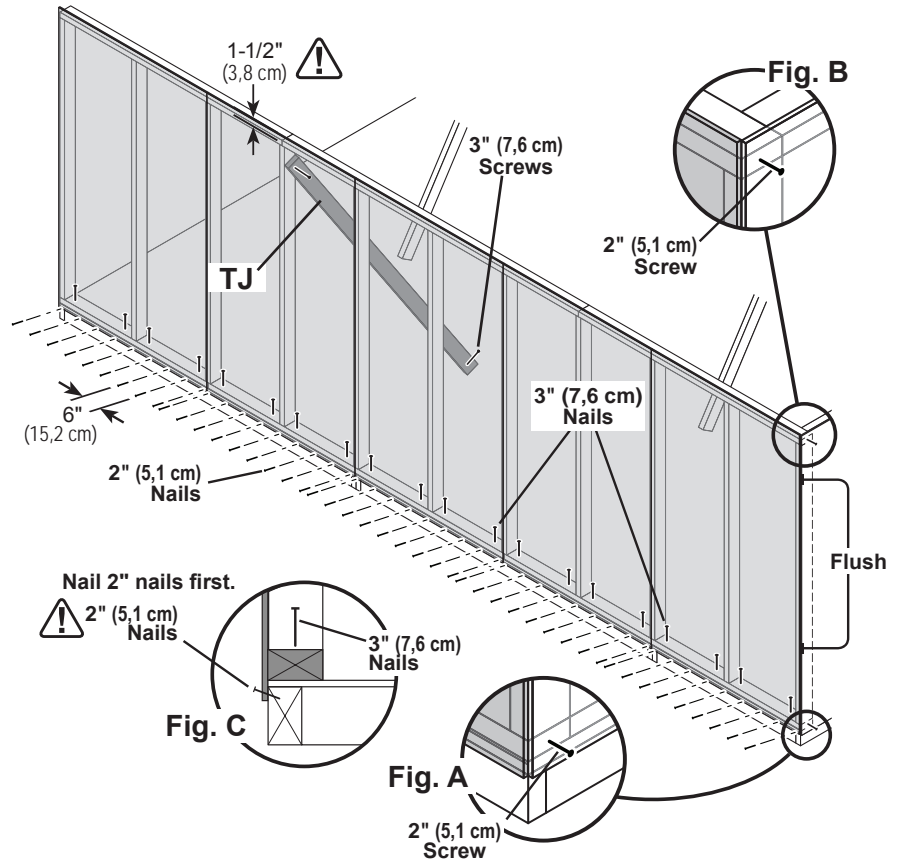


4

Secure 12' wall panel to 20' wall stud
with 1-1/2" nails spaced 6" apart.

5

Secure gable wall top plate with
(1) 3" screw at the corner at an
angle (**Fig. D**).

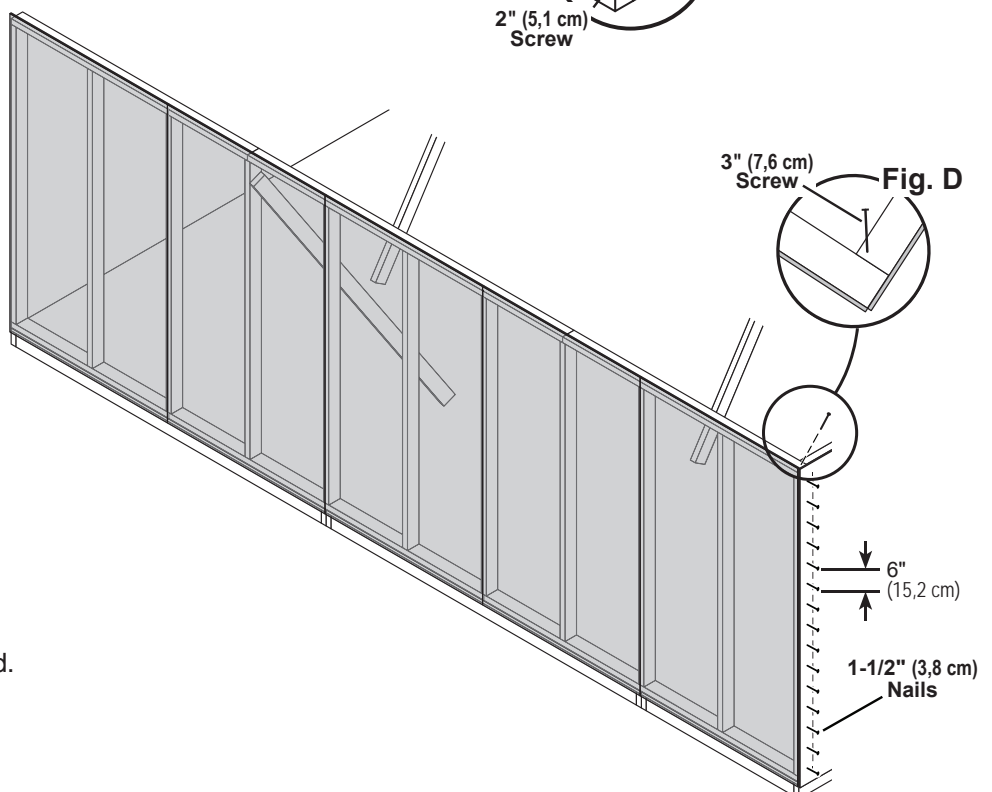


FINISH

Your eave wall C or E is now installed.

GABLE WALL A or D INSTALLATION

PARTS REQUIRED

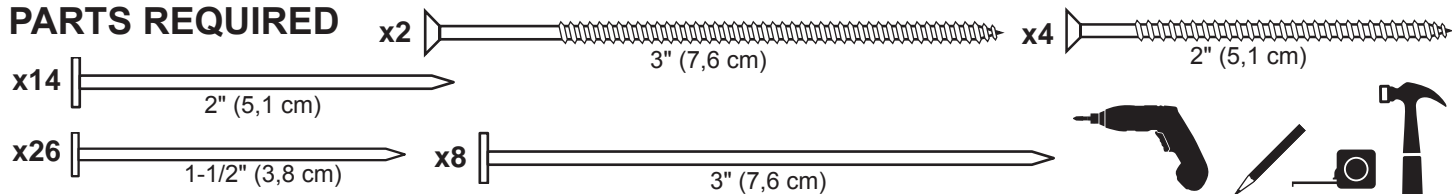



✓ BEGIN

1

Place gable wall on floor centered between eave walls. Secure wall with 2" screws into top and bottom plates (Fig. A, Fig. B).

Secure wall to bottom plate first.

⚠ ENSURE PANEL CORNERS ARE FLUSH. ⚠

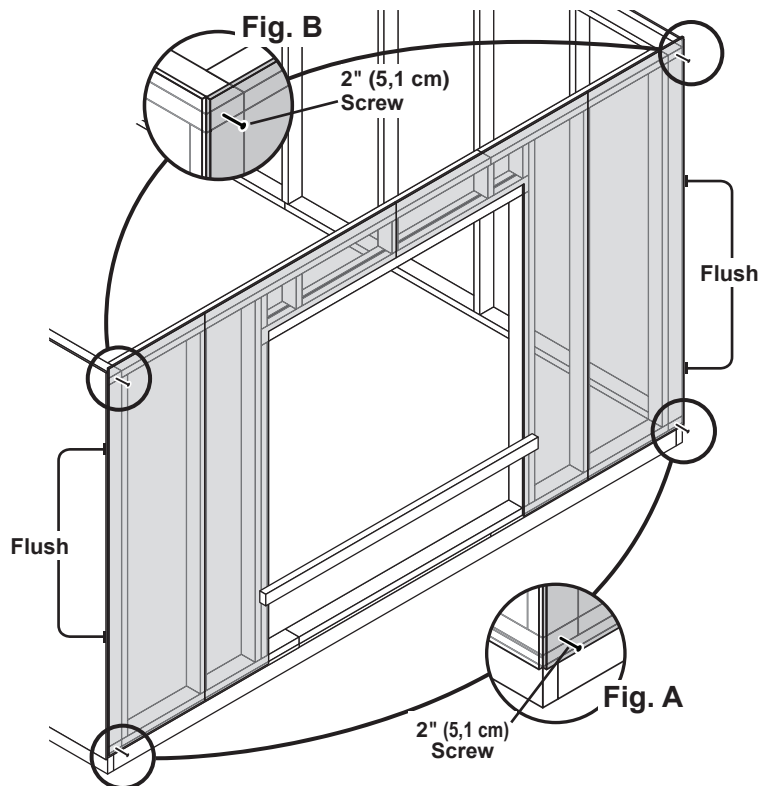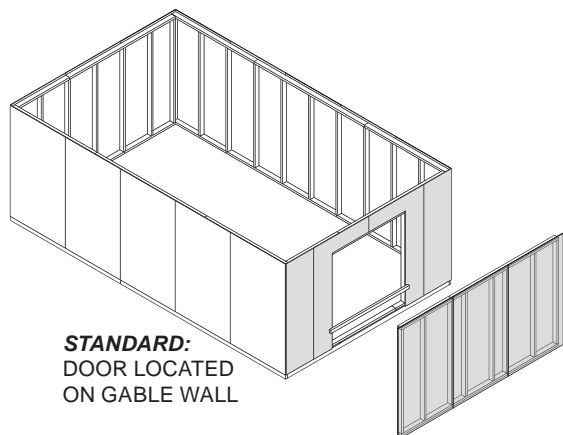


2

Nail lower edge of panels to floor with 2" nails spaced 6" apart. Angle nails into floor frame (Fig. C).

Nail panels to eave wall studs with 1-1/2" nails spaced 6" apart.

3

Secure wall top plates with 3" screws at each corner at an angle (Fig. D).

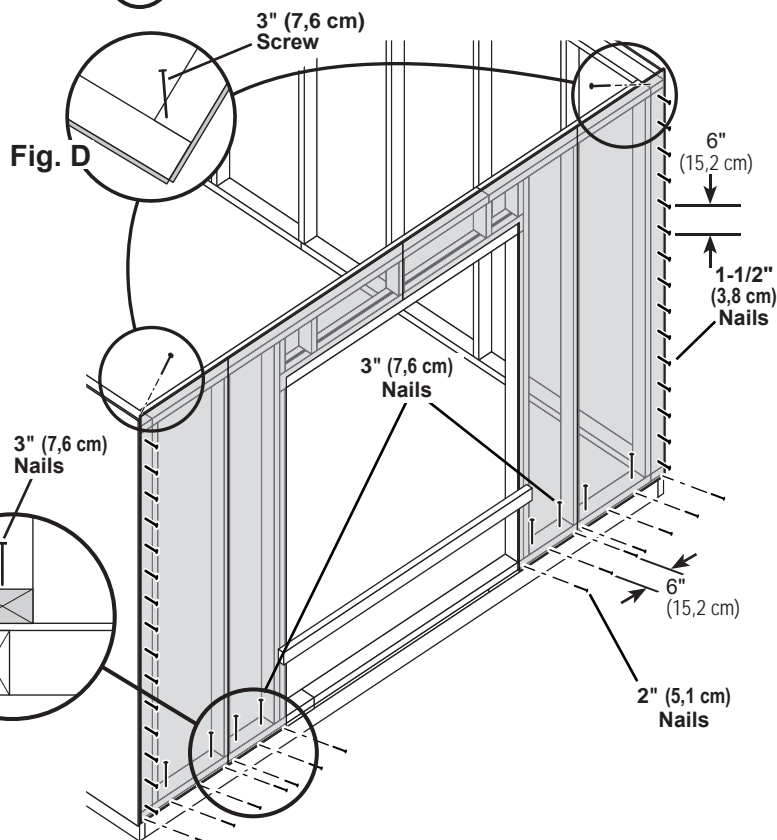


FINISH



Your walls are now installed.


**CUT OUT AND REMOVE BOTTOM PLATE AT
DOOR OPENING.**


WALL DOUBLERS INSTALLATION


PARTS REQUIRED:

x80  3" (7,6 cm)

x2 **SP**  2 x 4 x 48" (5,1 x 10,2 x 121,9 cm) x2 **STL**  2 x 4 x 44-1/2" (5,1 x 10,2 x 113 cm)


x2 **TJ**  2 x 4 x 92-1/2" (5,1 x 10,2 x 234,9 cm)

x4 **TP**  2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)

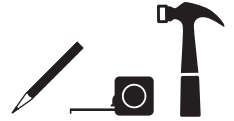

BEGIN

- 1 Orient parts on top of wall frames. Measure and mark from end of boards.
Secure from top with (2) 3" nails spaced every 24" (Fig. A).

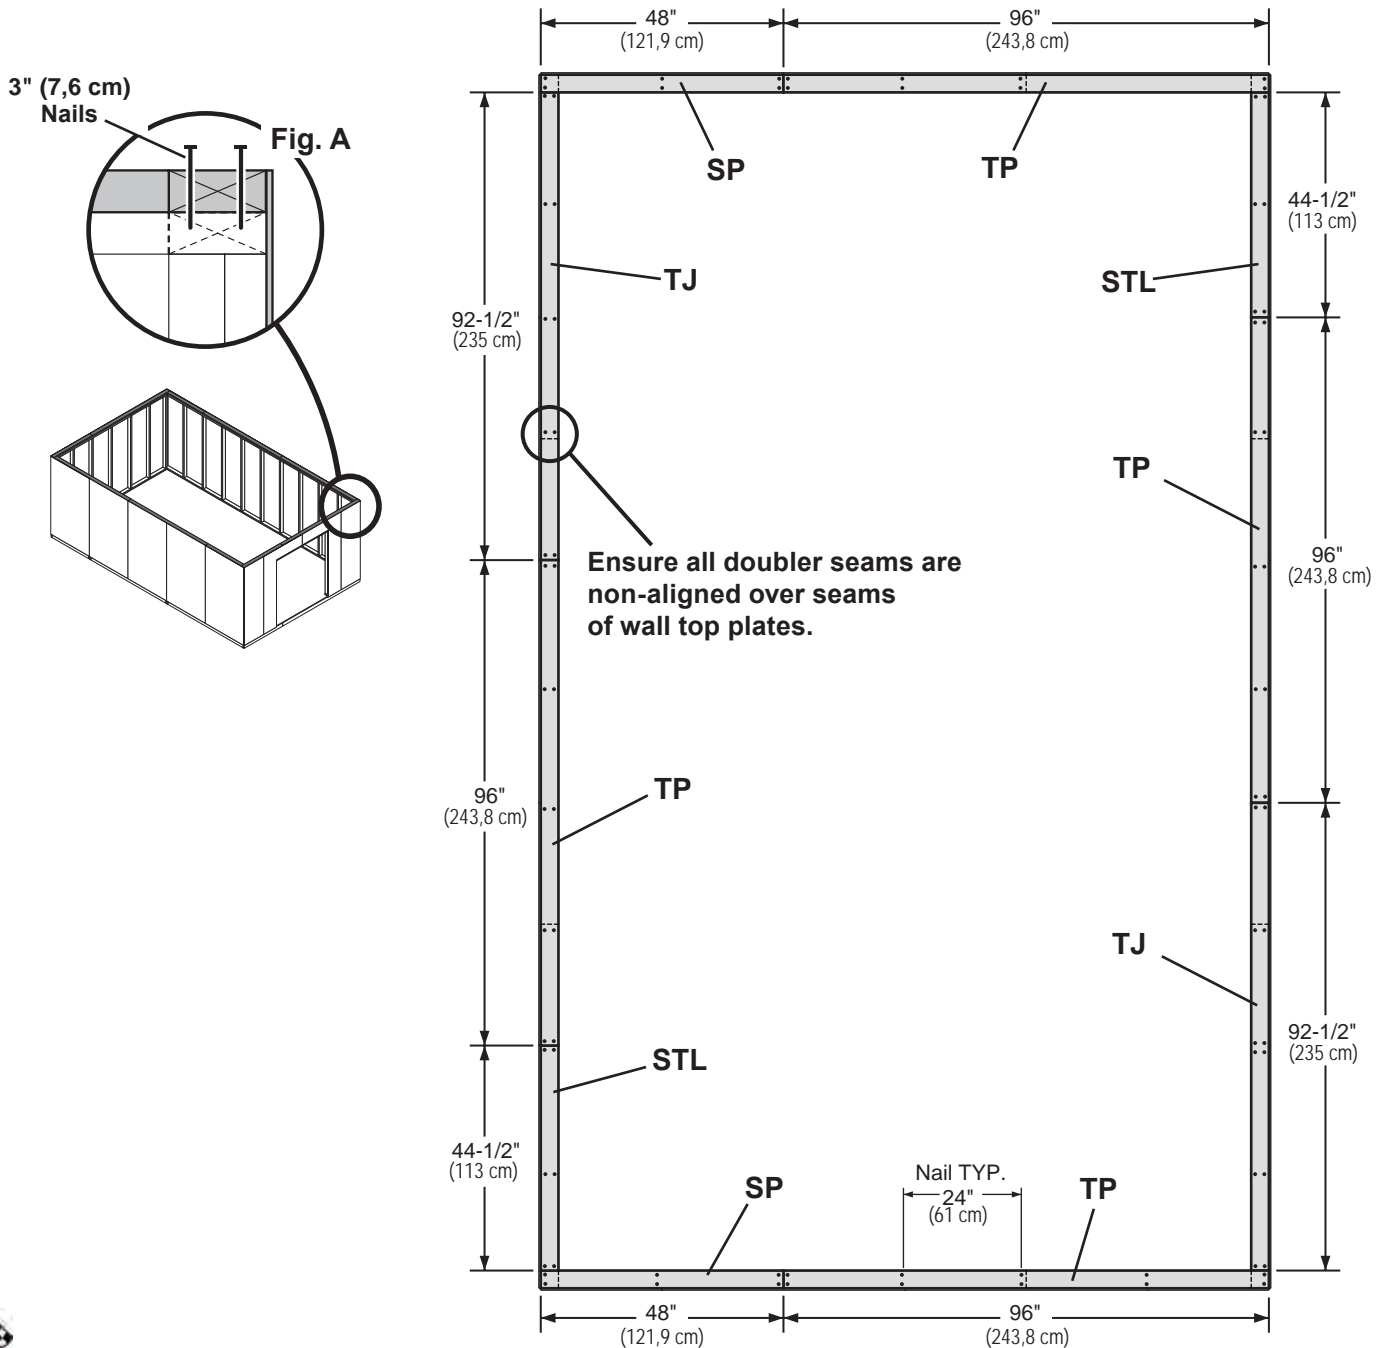

FINISH

Your wall doublers are now installed.


RAFTERS

PARTS REQUIRED:

x20  6 x 24" (15,2 x 60,9 cm)


x22 **ADA**
2 x 4 x 77-15/16" (5,1 x 10,2 x 198 cm)
Temporary Support

x1 **AF**
2 x 4 x 18-1/8" (5,1 x 10,2 x 46 cm)

x240  2" (5,1 cm)




HINT:
Use floor and walls to help assemble rafters!

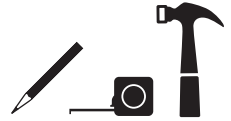

Build (2) rafter assemblies with (1) gusset (Fig. B).

✓ BEGIN

- 1 Place two rafter-halves **ADA** in the two corners of eave wall, flush to panels and end studs.
Flush rafters at peak. Secure gusset to rafters with 2" nails following the pattern shown (Fig. A).

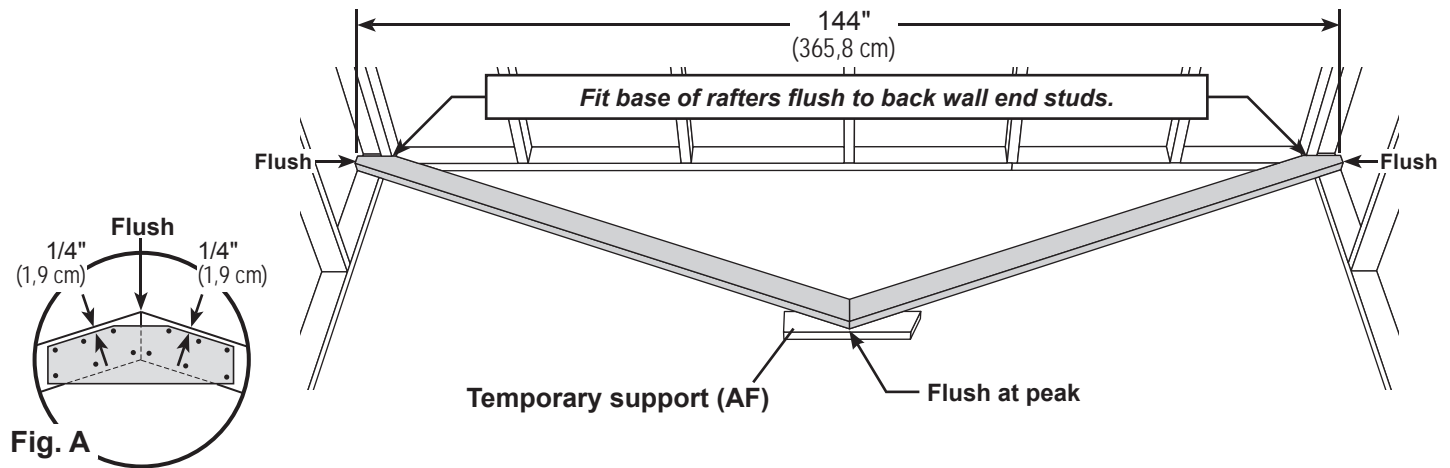

SET ASIDE THESE TWO RAFTER ASSEMBLIES.

Build 9 rafter assemblies with (2) gussets (Fig. C).

- 2 Place two rafter-halves **ADA** in the two corners of eave wall, flush to panels and end studs (step - 1).
Flush rafters at peak. Secure gusset to rafters with 2" nails following the pattern shown (Fig. A).
- 3 Flip over rafter assembly and fasten second gusset to other side with 2" nails (Fig. C).

Fig. B - Build 2


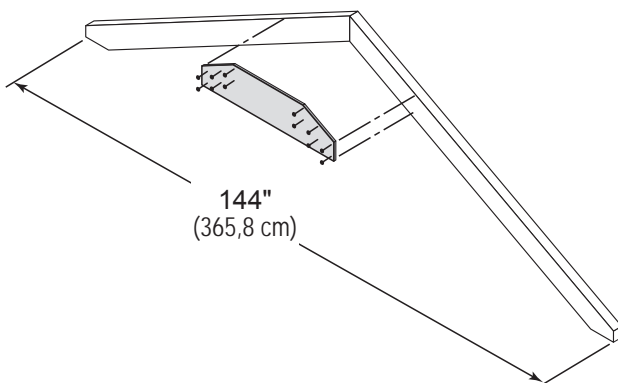




Fig. C - Build 9

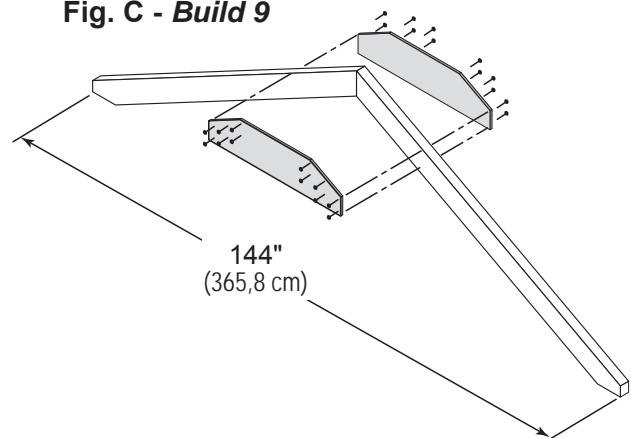


FINISH
Your rafters are now assembled.

RAFTER INSTALLATION

PARTS REQUIRED:

- x9  Two-Gusset Assembled
- x2  One-Gusset Assembled

x44  3" (7,6 cm)




✓ BEGIN

- 1 Align rafters over the wall studs.
Check that you have the measurements shown.
Secure rafters with (2) 3" screws angled at each end (**Fig. A, Fig. B**).
Secure gable end rafters with (1) 3" screw through top of rafter into doubler (**Fig. C**).
Secure rafters on opposite side.




 **Maintain the measurements between rafters.**

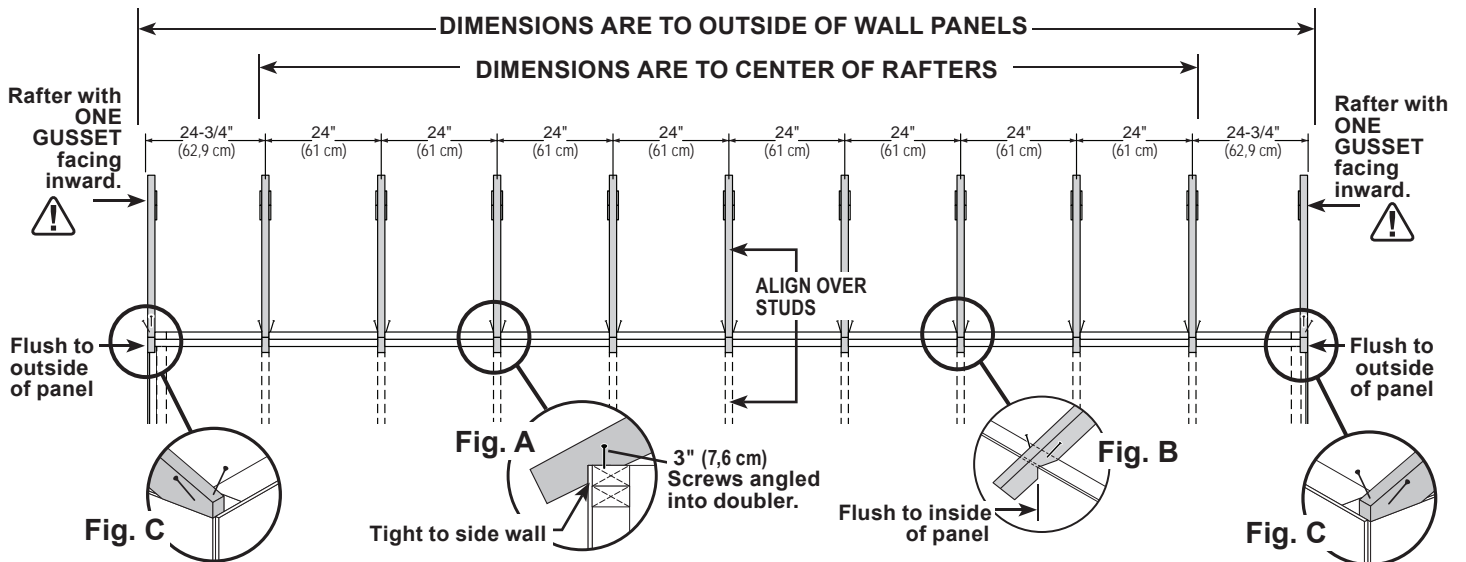

FINISH
Your rafters are now installed.

GABLE UNITS



PARTS REQUIRED:

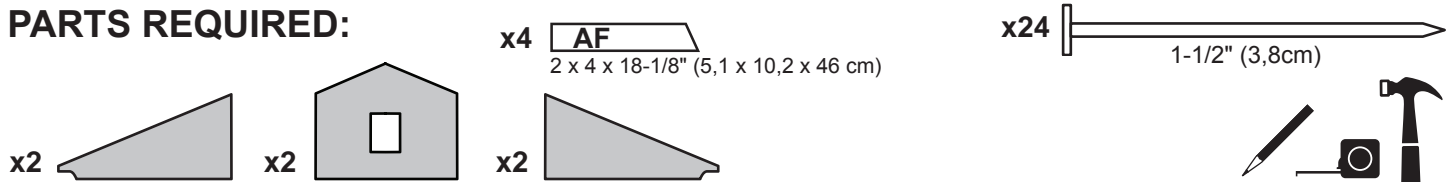

Install gable panels with the primed side facing up.

✓ BEGIN

- 1 Orient parts **AF** on the flat side, as shown. Install middle gable panel at measurements shown. Secure with 1-1/2" nails spaced 6" apart along edge.
- 2 Install left and right panels on **AF**, flush to middle gable panel. Secure with 1-1/2" nails spaced 6" apart along edge. Measure and mark the center of the middle gable panel

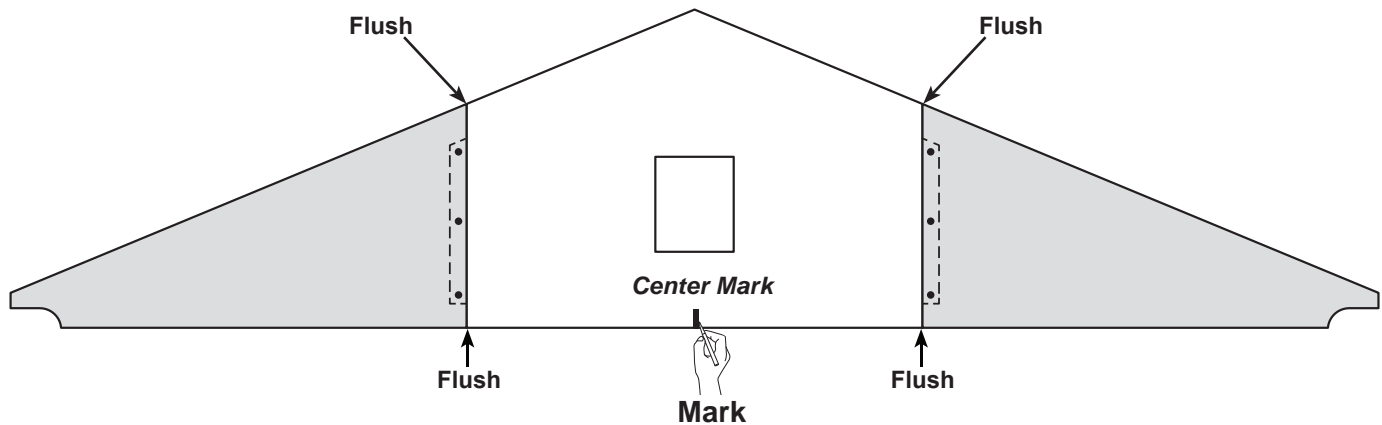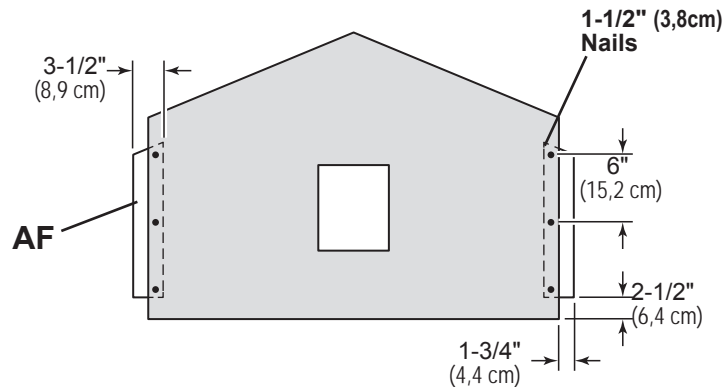



Repeat steps 1 - 2 to build the 2nd gable unit.



Your gable units are now assembled.

GABLE INSTALLATION

PARTS REQUIRED:

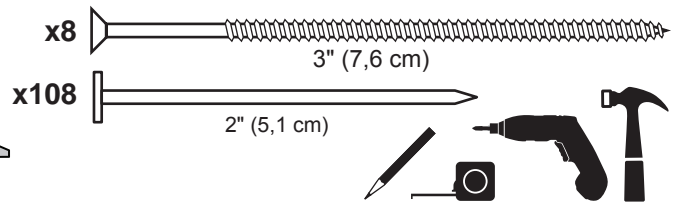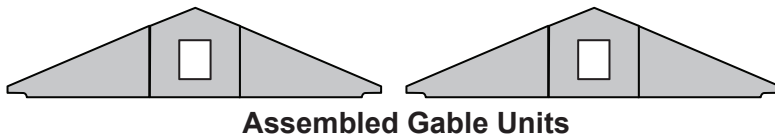


✓ BEGIN

- 1 Measure 2-1/2" down from top plate doubler and mark at each side as shown.
Set gable unit on top plate. Center gable unit using the center mark. Fasten with (1) 2" nail on each side.

⚠ BE SURE GABLE IS CENTERED ON WALL BEFORE NAILING. ⚠

- 2 Continue nailing lower edge of panels to wall doubler with 2" nails spaced 6" apart.

- 3 Working inside, secure gable unit with (2) 3" screws angled into each **AF** at an angle (**Fig. A**).

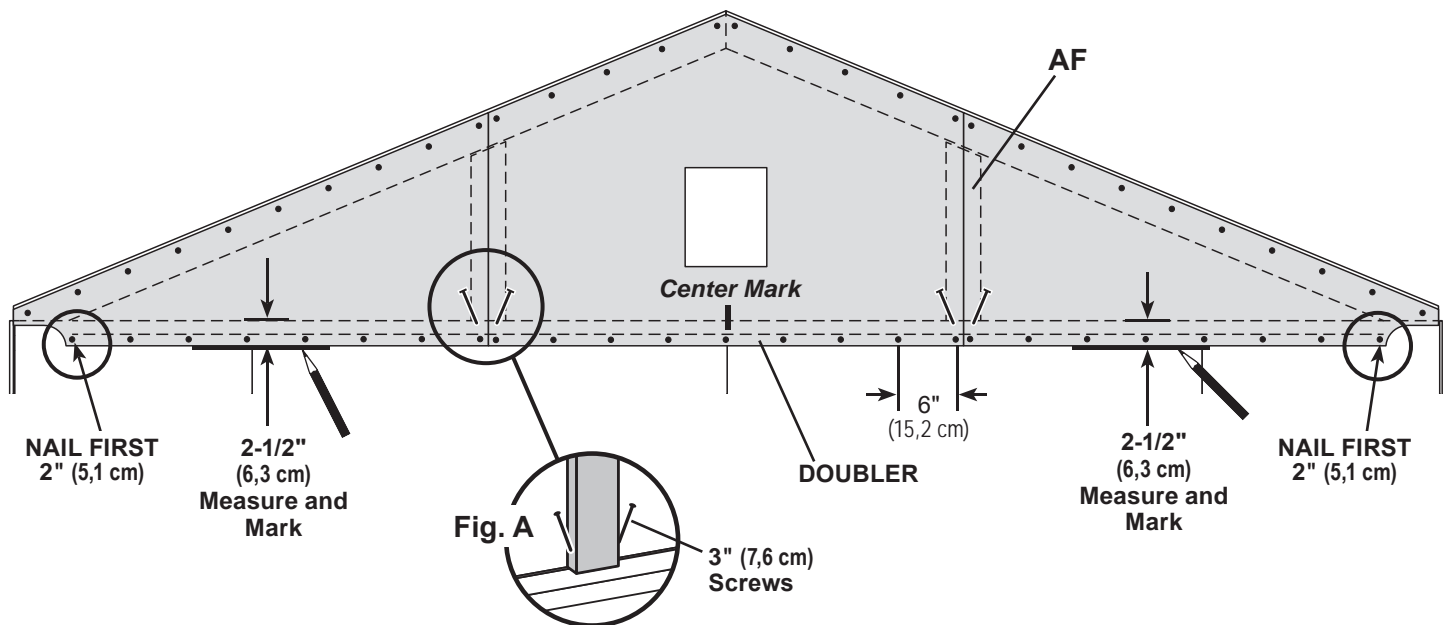

- 4 Secure panels to rafter with 2" nails spaced 6" apart.


Repeat steps to install the opposite side gable.



Your gable units are now installed

ROOF PANELS

PARTS REQUIRED:

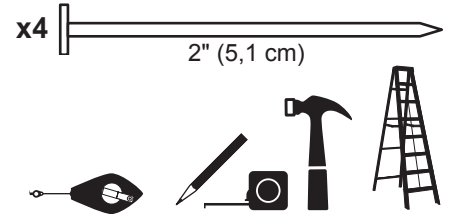

Roof panels may cause serious injury until securely fastened.

Note: Install all roof panels with the rough side up (painted grid lines).





✓ BEGIN

1

Place the 48" x 96" panel on rafters with a 3/4" measurement on the rafter (**Fig A**) and the panel flush at the peak (**Fig. B**).

Secure panel with (1) 2" nail in each corner.

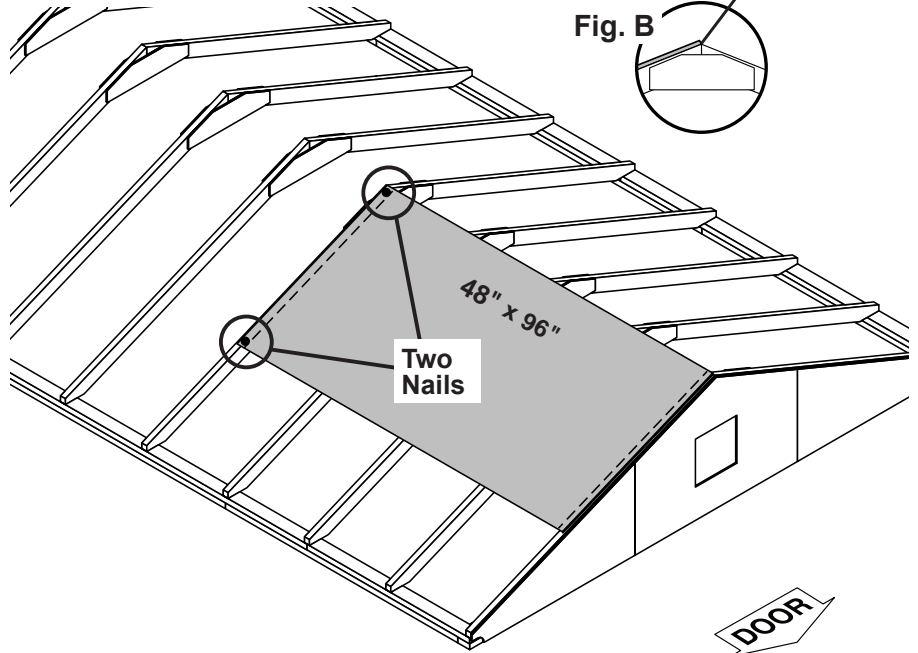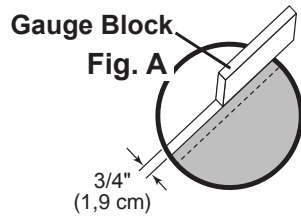


2

Move to the opposite end. Using the long edge of the panel as a lever, move the panel side-to-side until the top corner is flush to the peak (**Fig. B**).


Move gable end rafter edge until it is 1/2" from the panel (**Fig. C**).

Secure panel with (1) 2" nail in each corner.

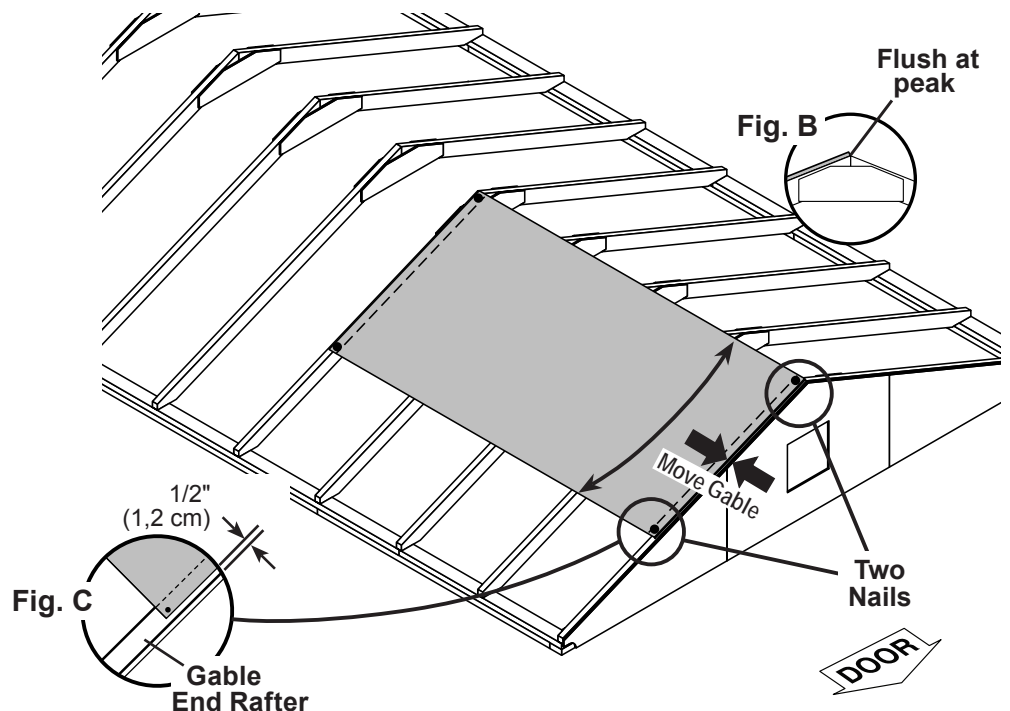

ROOF PANELS


PARTS REQUIRED:

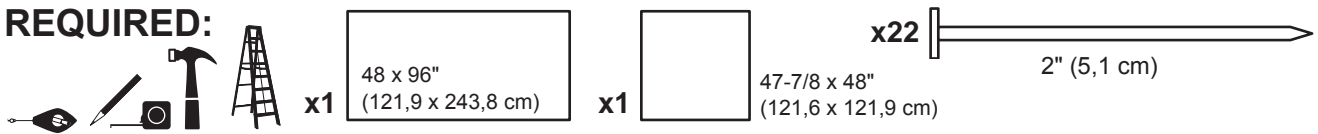

3

Install next 48" x 96" roof panel flush to the installed panel and flush at the peak.
Secure panel with (1) 2" nail in each corner.

Move to the opposite end.
Using the unattached end of the panel as a lever, move the panel side-to-side until the top corner is flush to the peak (**Fig. B**) and there is a 3/4" measurement on the rafter (**Fig A**).
Finish securing panel with (1) 2" nail in each corner.

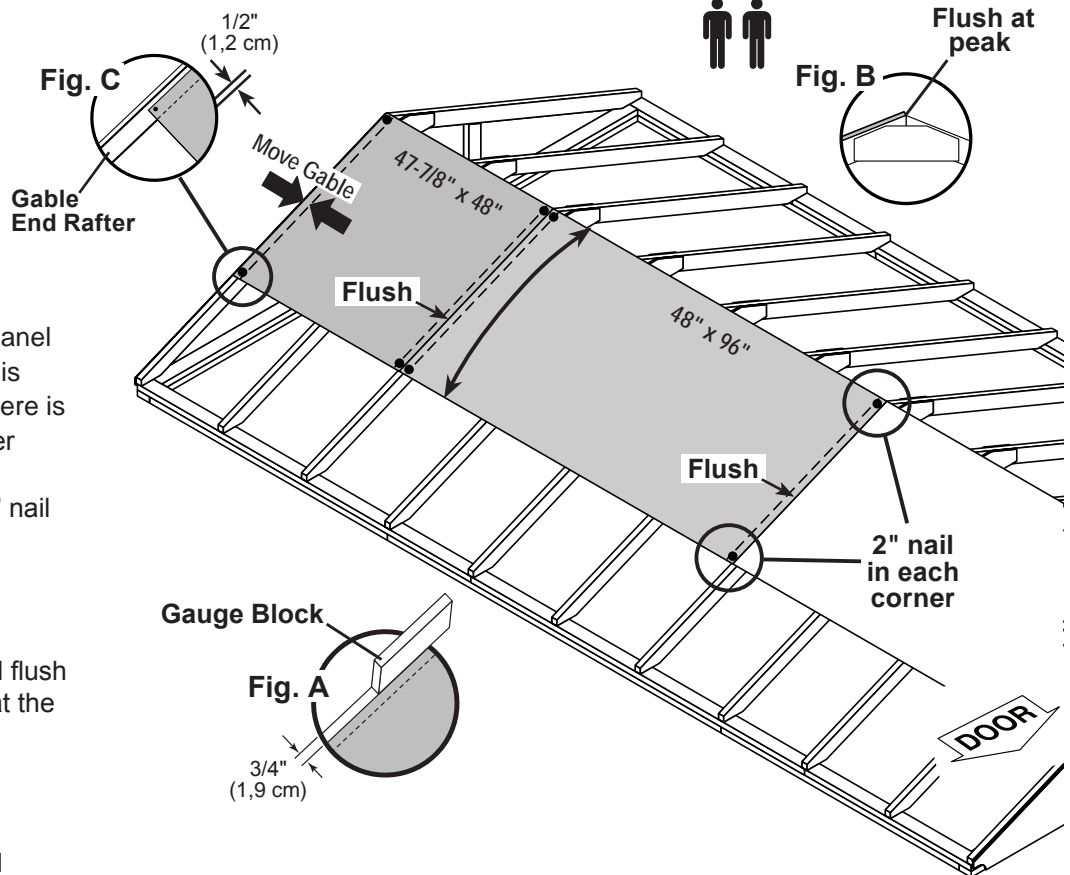

4


Install a 47-7/8" x 48" roof panel flush to the installed panel and flush at the peak (**Fig. B**).
Secure panel with (1) 2" nail in each corner.

Move gable end rafter edge until it is 1/2" from the roof panel (**Fig. C**).
Finish securing panel with (1) 2" nail in each corner.

5




Maintain spacing between the center of the rafters at the lower edge of the panels (**Fig. D**).
Secure panels with (1) 2" nail into each rafter, as shown.
Move to the top of the panel and keep spacing between the center of the rafters.
Secure panels with (1) 2" nail into each rafter.

Fig. D

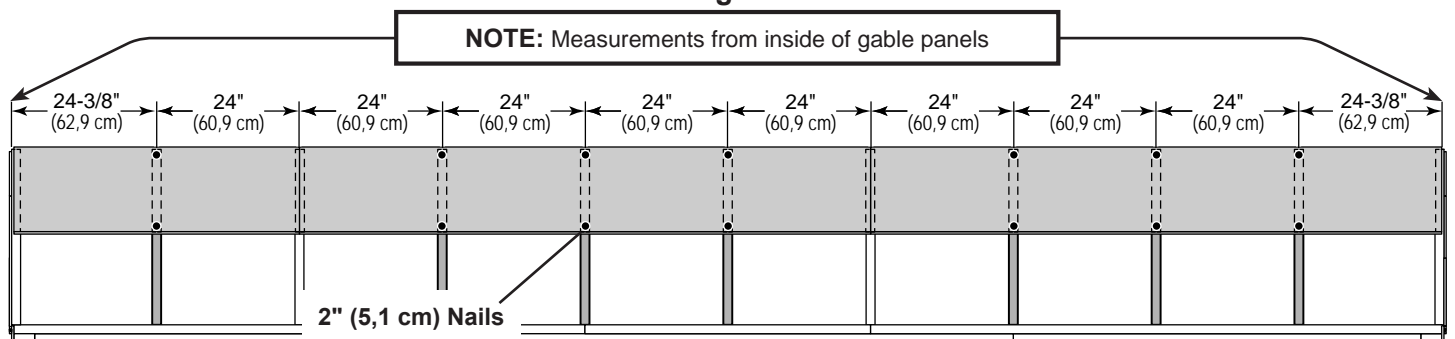


ROOF PANELS

PARTS REQUIRED:

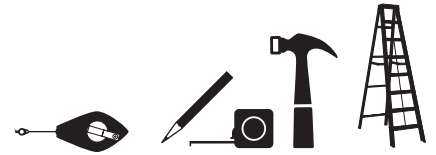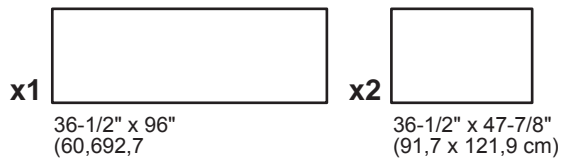


- 6** Next, install **36-1/2" x 96"** roof panel with a **3/4"** measurement on the rafter (**Fig A**).
Secure panel with (1) 2" nail in each corner.

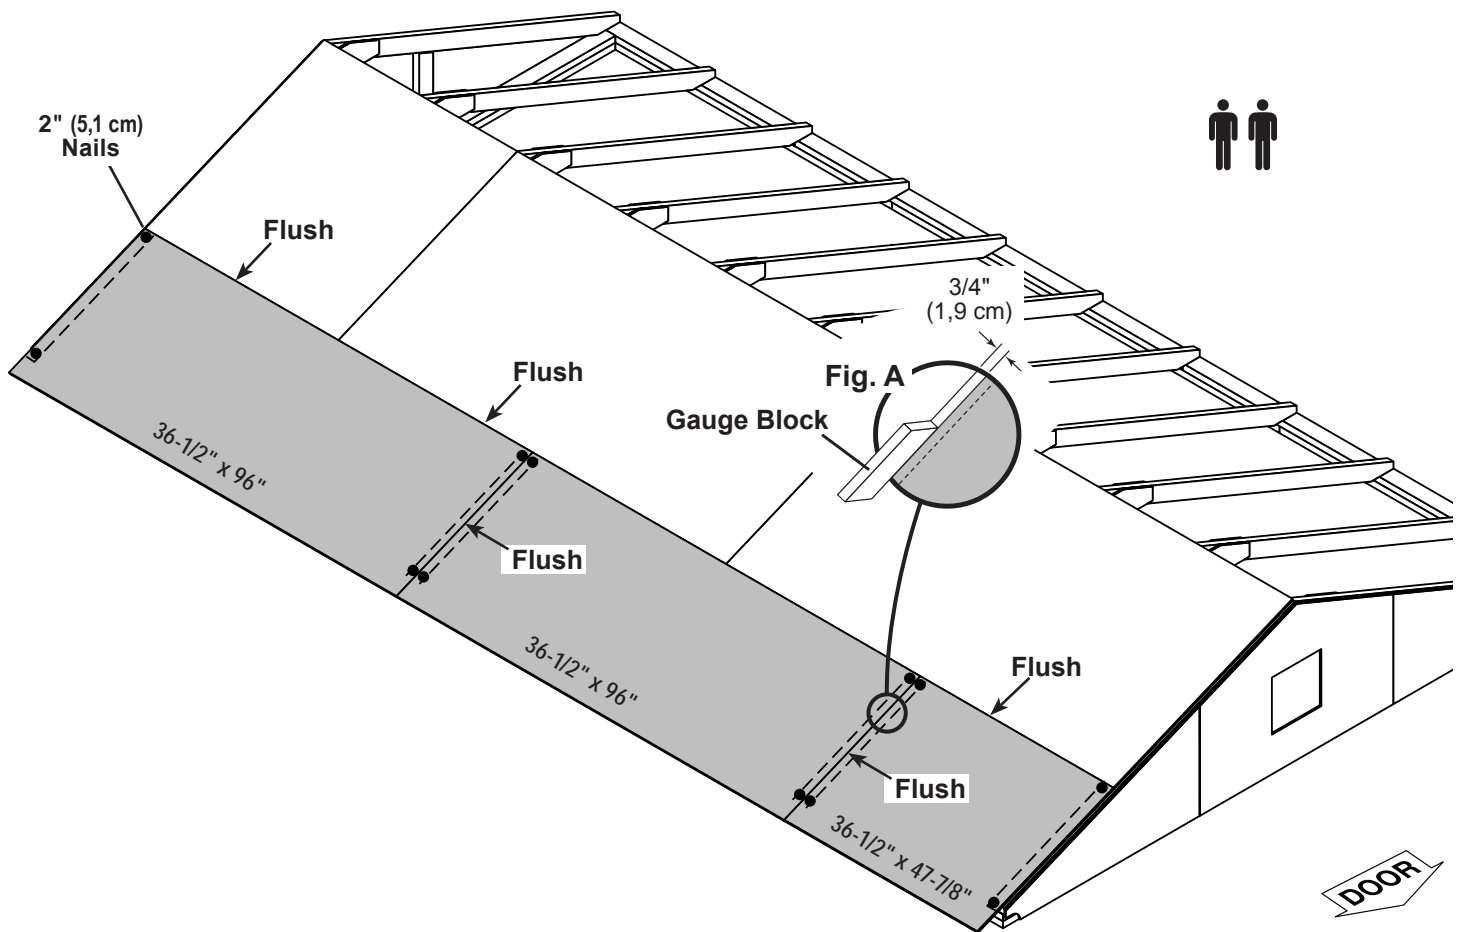


- 7** Install 2nd **36-1/2" x 96"** and **36-1/2" x 47-7/8"** roof panels flush to the installed panels.
Secure panels with (1) 2" nail in each corner.


ROOF PANELS

PARTS REQUIRED:

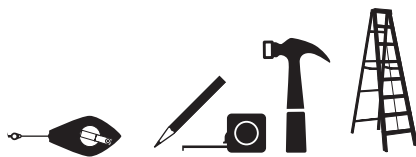


x268  2" (5,1 cm)

- 8** Secure all roof panels with 2" nails spaced 6" apart and 12" apart inside panels.

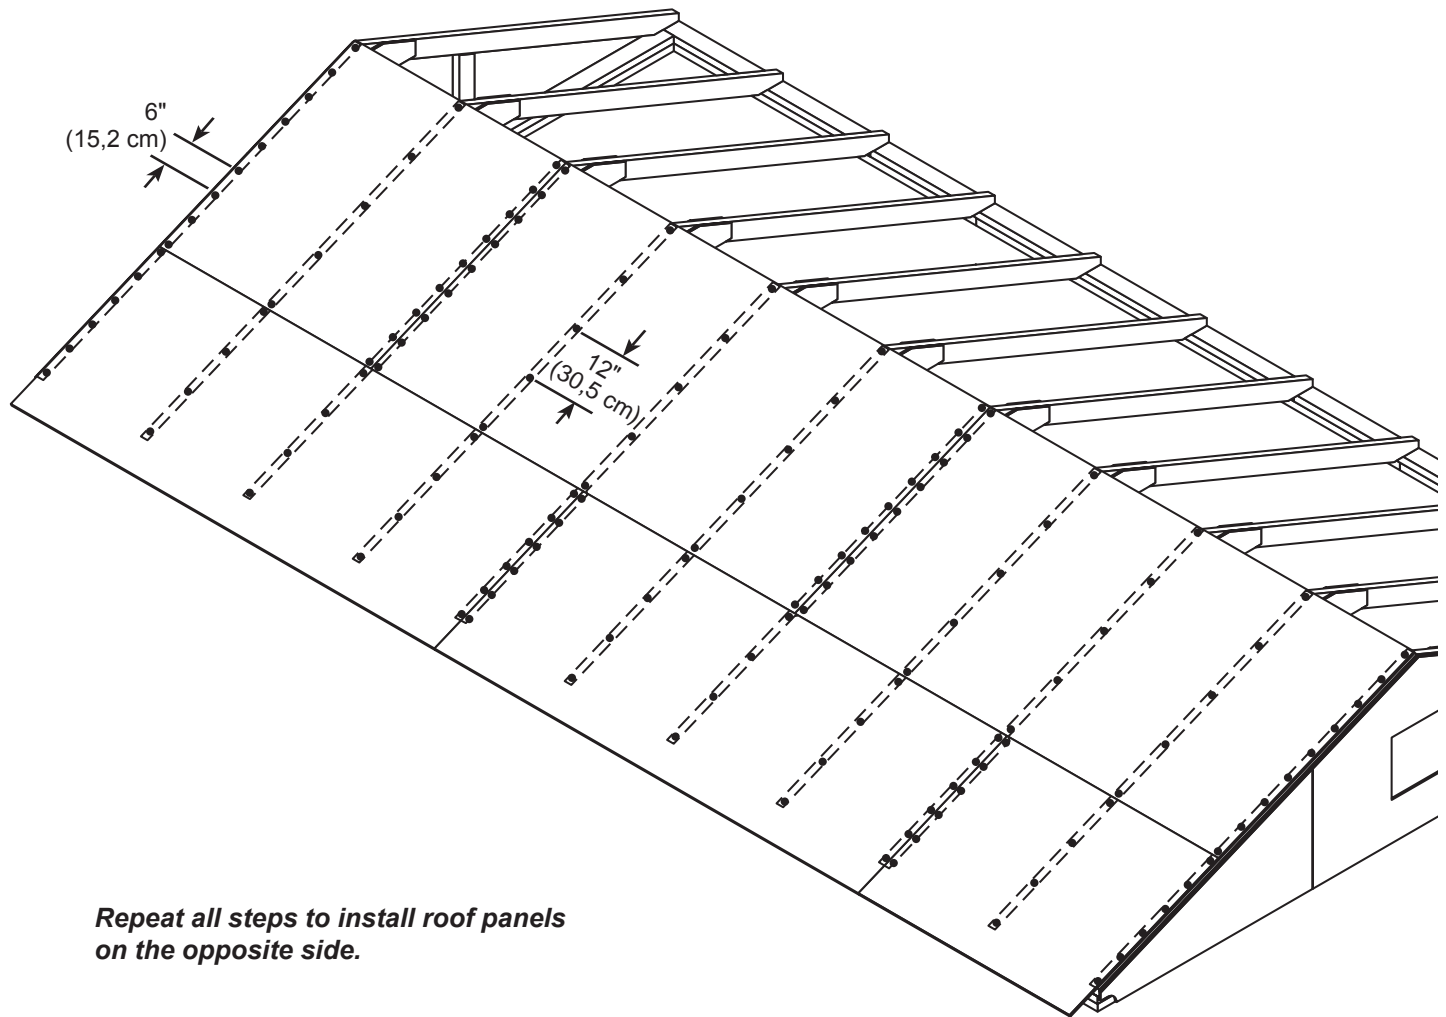

Repeat all steps to install roof panels on the opposite side.

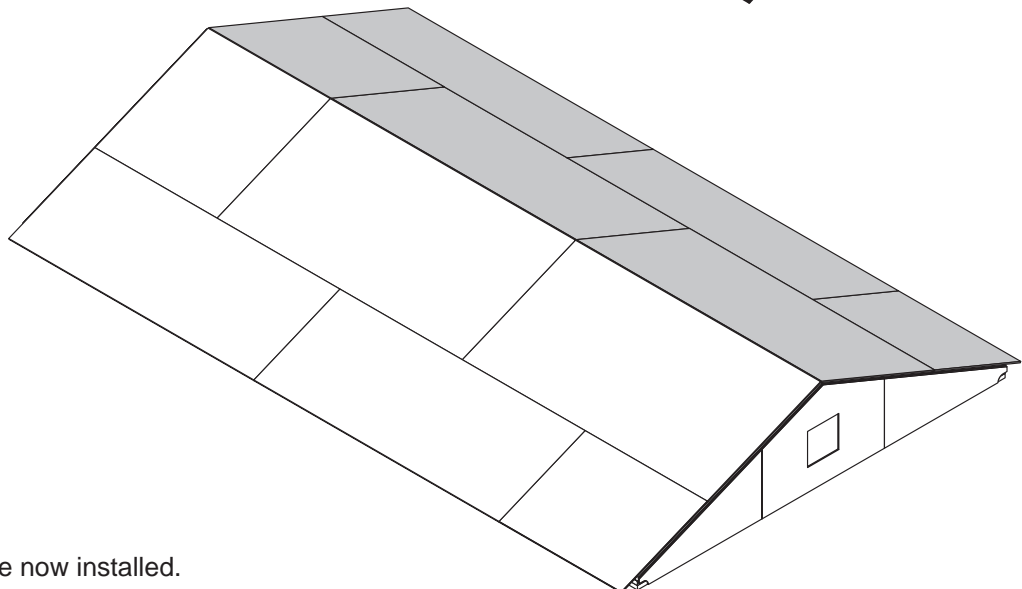


Your roof panels are now installed.


GABLE FASCIA

PARTS REQUIRED:

x2 **CQR**
19/32" x 3-1/2" x 84-15/16" (1,5 x 8,9 x 215,7 cm)

x2 **CQL**
19/32" x 3-1/2" x 84-15/16" (1,5 x 8,9 x 215,7 cm)


x52  2" (5,1 cm)

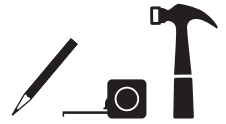

Install all trim with the primed side facing out.

✓ BEGIN

- 1 Install front gable trim **CQR** and **CQL** flush to top of roof panels and flush at gable peak.
Secure trim with 2" finishing nails spaced approximately 7-1/4" apart.

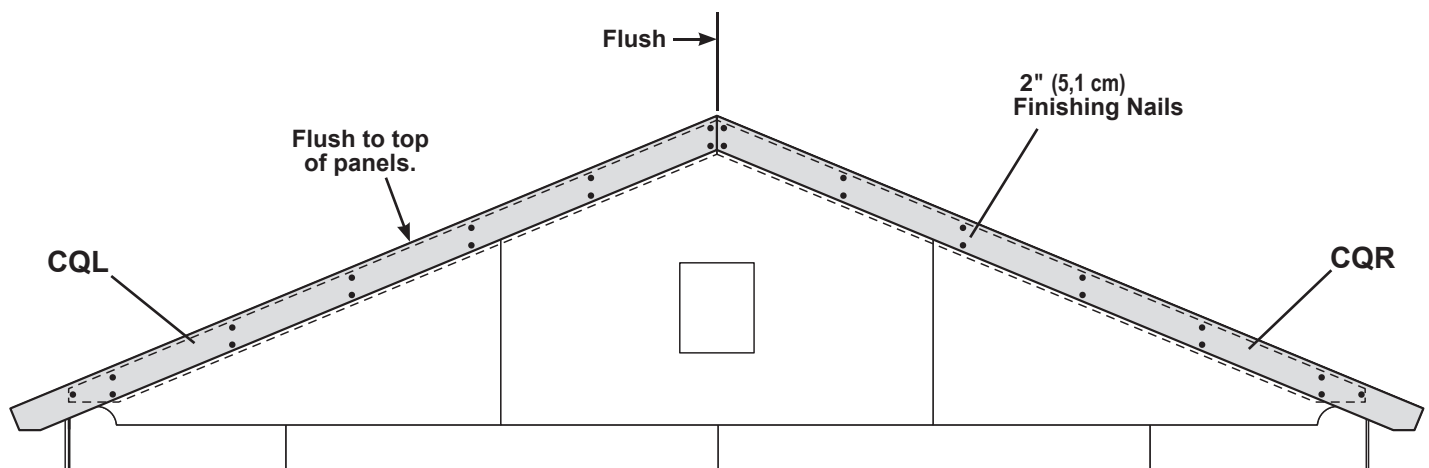

Repeat to install fascia on opposite side.




Your gable fascia boards are now installed.


EAVE SOFFIT

PARTS REQUIRED:

x2 **WTC**
2 x 6 x 49-3/4" (5,1 x 16,2 x 126,4 cm)

x4 **VX**
2 x 6 x 96" (5,1 x 15,2 x 243,8 cm)

x8  2" (5,1 cm)


x82  1-1/4" (3,2 cm)



✓ BEGIN

- 1 Place **WTC** eave trim flush along edge of roof panel (**Fig. A**) and flush to gable trim.
Screw through roof panel into **WTC** with 1-1/4" screws spaced evenly in a staggered pattern.
- 2 Install **VX** flush to edge of roof panel and flush to installed eave trim **WTC**.
Screw through roof panel into trim with 1-1/4" screws spaced evenly in a staggered pattern.
- 3 Install 2nd **VX** flush to edge of roof panel and flush to installed eave trim **VX**.
Screw through roof panel into trim with 1-1/4" screws spaced evenly in a staggered pattern.

NOTE: Eave trim may need to be trimmed to fit.

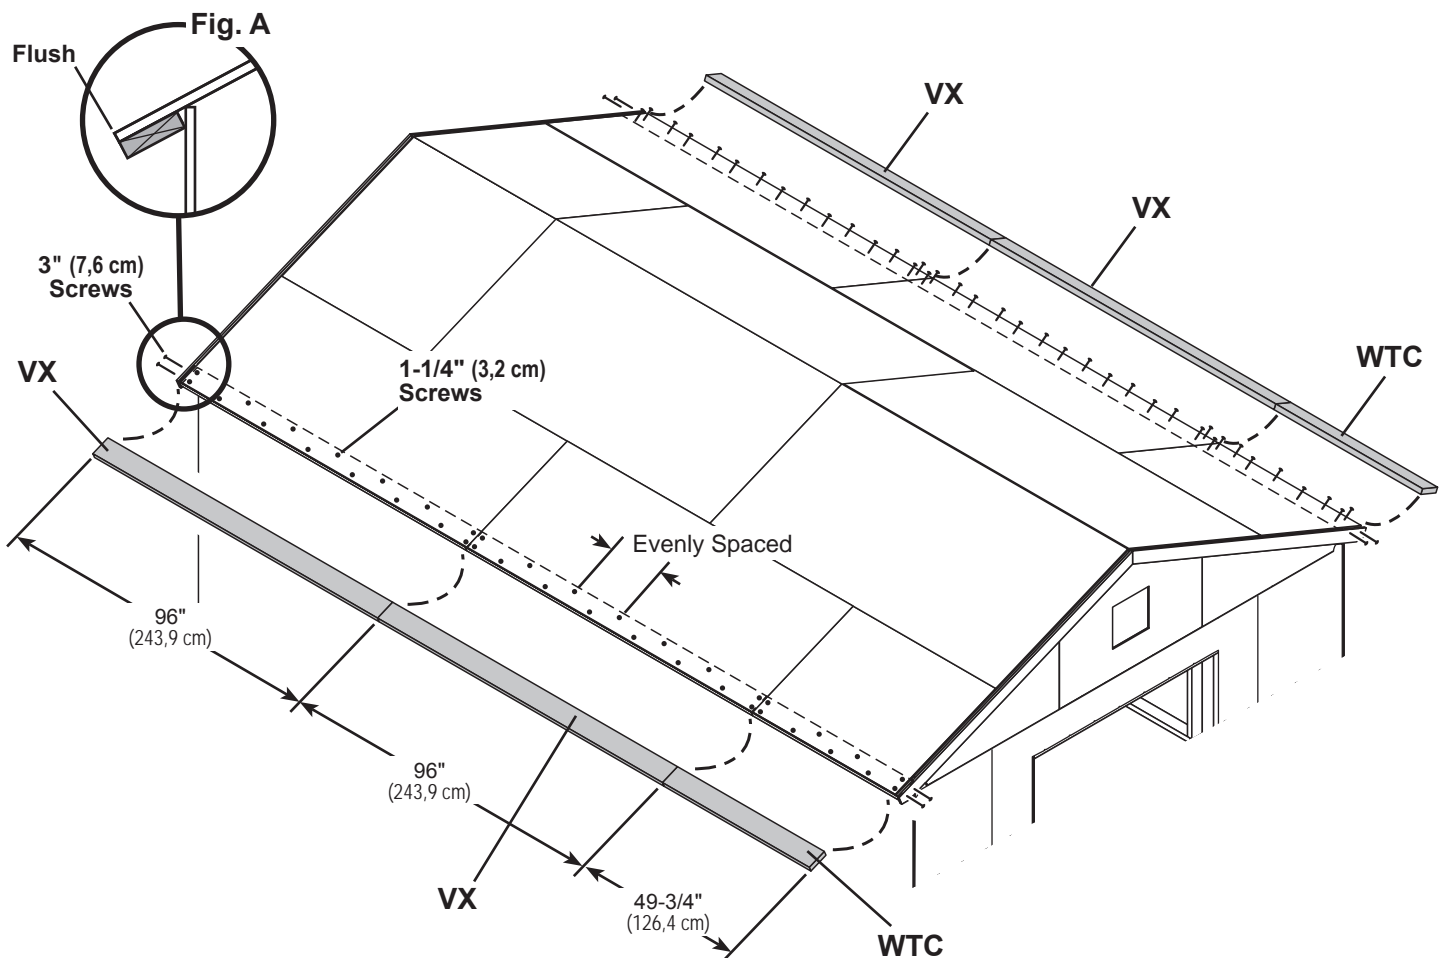

Repeat installation on opposite side.




FINISH

Your eave trim is now installed.


DOORS

PARTS REQUIRED:


x2 **DJD**
5/4 x 3-1/2 x 72-3/8" (3,2 x 8,9 x 183,8 cm)




x1



x1



x24  1" (2,5 cm) #14 Screws




✓ **BEGIN**


1 Arrange parts as shown on a flat surface.

DJD


DJD

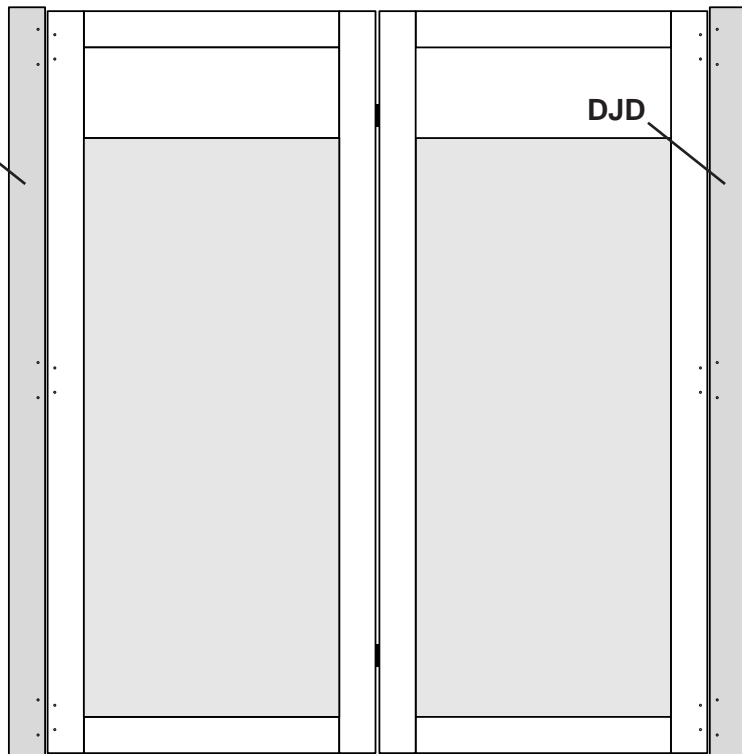

2 Align (6) hinges with pre-drilled holes in **DJD** and doors.

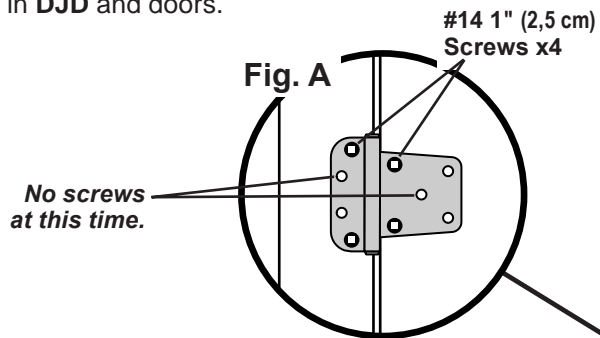

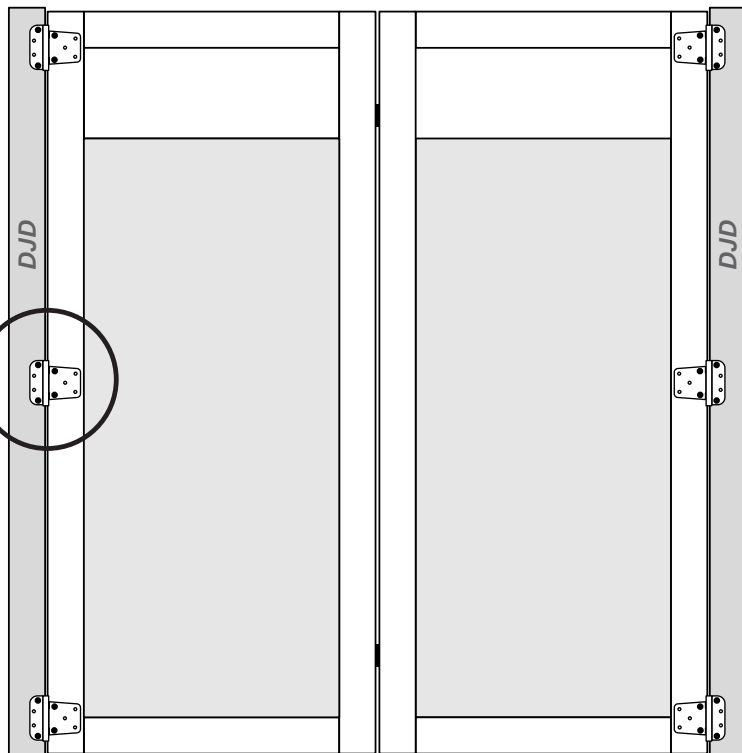

3 Secure hinges with (4) 1" #14 screws into hinge boards **DJD** and doors (**Fig. A**).





DOORS

PARTS REQUIRED:


x2 **OO** *Temporary Support*
Door Stiffener 69" (175,3 cm)

x30  1" (2,5 cm) #14 Screws
x8  Square Drive Bit

x8  3" (7,6 cm)
3/16" (5 mm) Drill Bit 



- 4** Using holes in hinge as a guide, predrill (3) 3/16" holes 3/4" deep into door.

Predrill (2) 3/16" through-holes in hinge boards **DJD** (Fig. B).

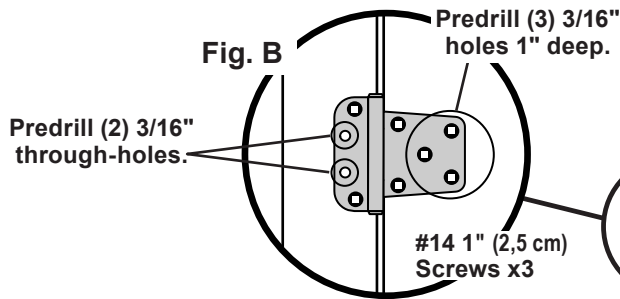

- 5** Secure hinges with (3) 1" screws into door trim.

Move pre-installed 1" screws in DJD to two middle hole locations (Fig. C).

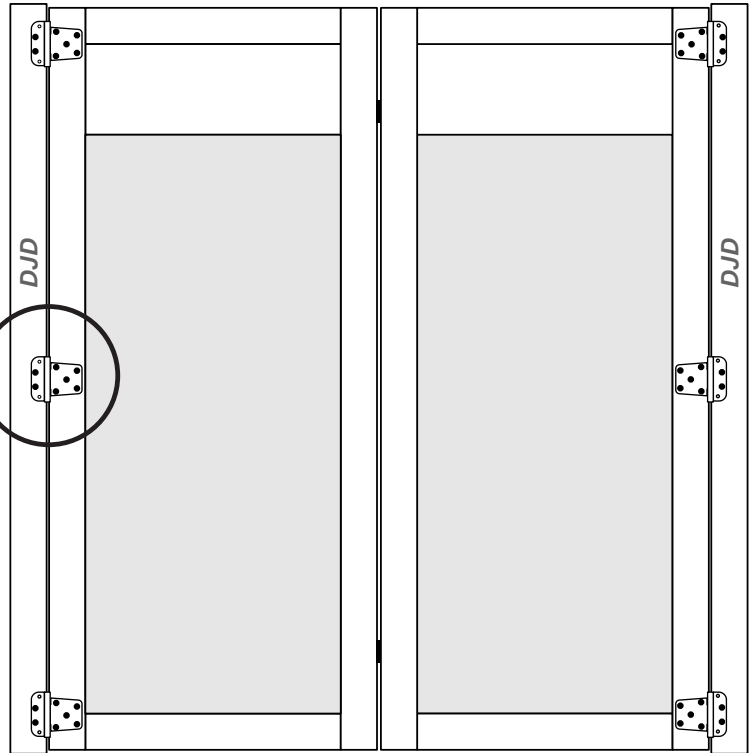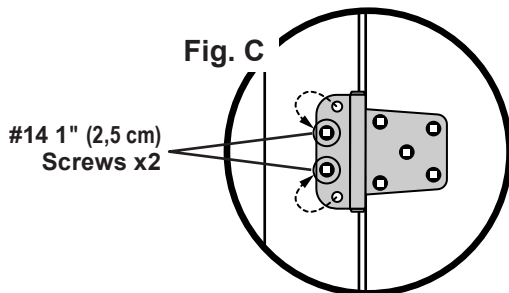


3/8" (1,0 cm)

 **Ensure doors have a 3/8" gap along the entire length.**

- 6** Securely hold doors together with (2) **OO** as temporary supports, as shown.

(4) 3" (7,6 cm) Screws

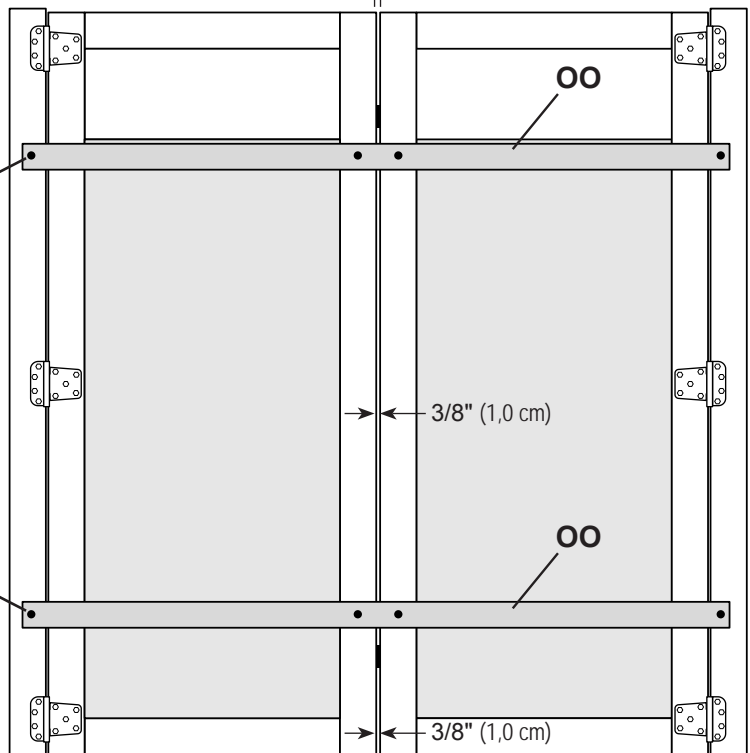

3/8" (1,0 cm)

3/8" (1,0 cm)

Your doors are now ready for installation.

Door edges flush.

DOORS

PARTS REQUIRED:

x1 **TM** *Temporary Support* 2 x 4 x 72" (2,5 x 7,6 x 183 cm)


x1 *Temporary Spacer* 3/8 x 3-1/2 x 83-1/2" (1 x 8,9 x 212,1 cm)

x12 3" (7,6 cm)

x12 3" (7,6 cm) #14 Screws
(Not shown to scale)

7 Install **TM** as a temporary support ledger board 3/8" below wall panels. **TM must be level.**


Use (1) corner trim board (83-1/2") as a temporary spacer to ensure the 3/8" measurement under wall panels (**Fig. A**).
Secure **TM** with (2) 3" screws. **Remove the temporary 3/8" spacer.**

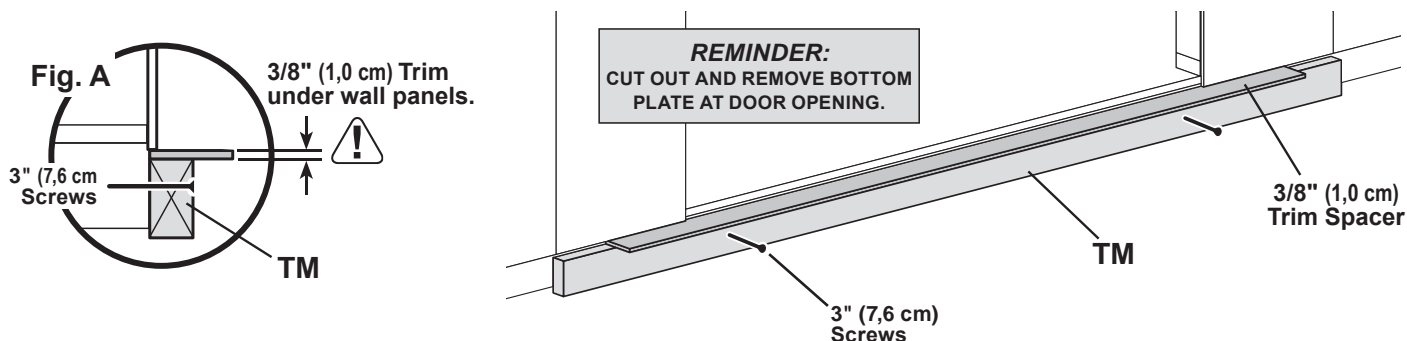

8 Align the door gap to the seam between panels (**Fig. B**). **Doors must be level.**

9 Secure hinge boards to wall supports and floor with (10) evenly spaced 3" screws, as shown.

10 Secure hinges with (12) 3" #14 screws into hinge boards **DJD** (**Fig. D**).

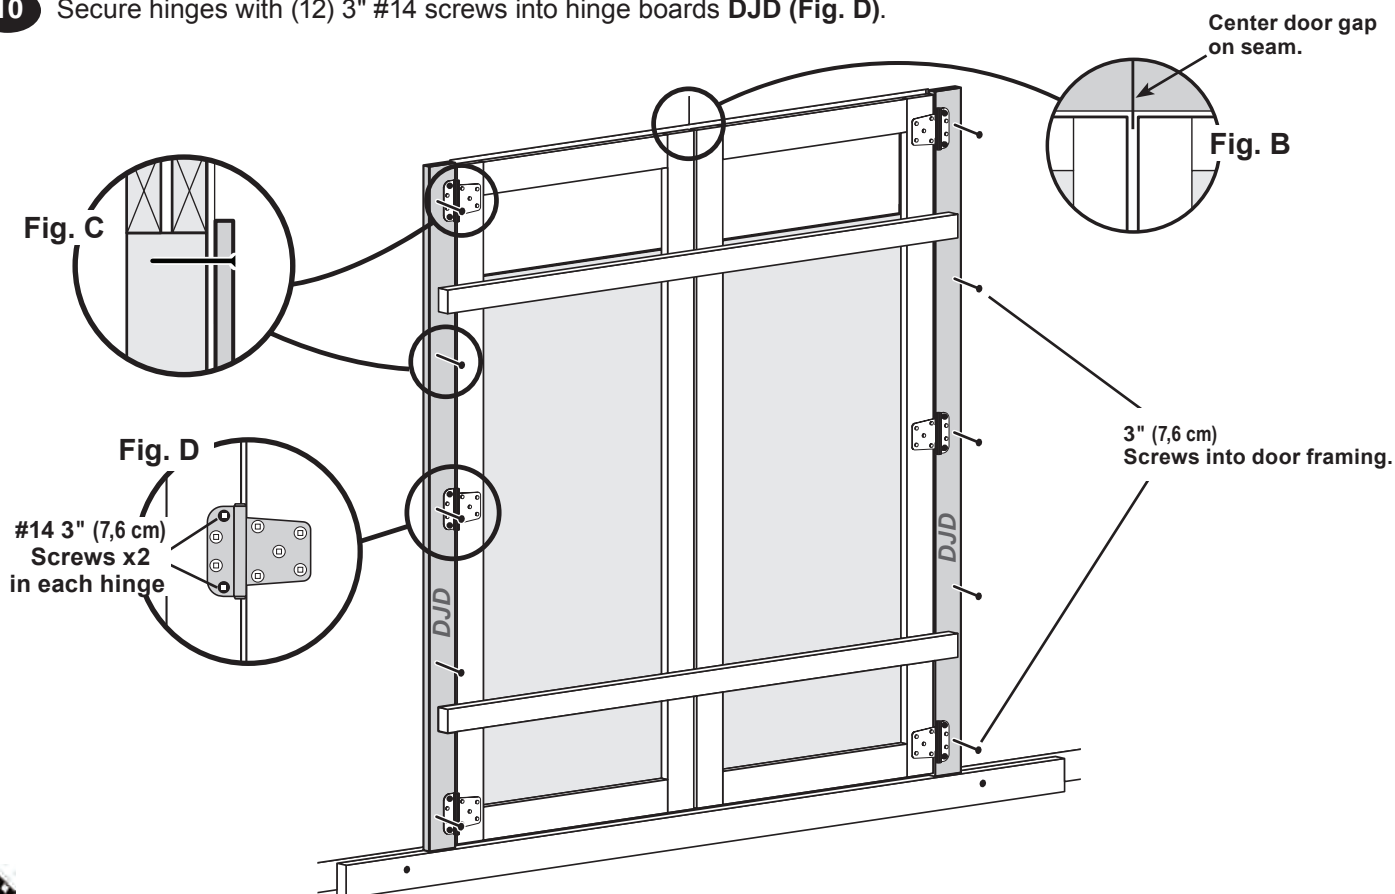

Your doors are now installed.


Remove temporary supports and ensure that the doors open properly.


DOOR TRIM


PARTS REQUIRED:


x4 EFF
5/4 x 3-1/2 x 24-5/8" (3,2 x 8,9 x 62,5 cm)

x1 FPA
5/4 x 3-1/2 x 74" (3,2 x 8,9 x 188 cm)

 3/4" (1,9 cm) x11
Bagged separately / special coating


x1  64" Metal Threshold

x5  2" (5,1 cm)


x52  3/4" (1,9 cm)

BEGIN

- 1 Secure door trim from inside using 3/4" screws (Fig. A).
- 2 Secure two horizontal door rails **EFF** with (4) 3/4" screws from behind to center of doors.
- 3 Reinforce the door trim with 3/4" screws through door panel into trim (Fig. A).
Locate screws as shown (Fig. B).
- 4 Center trim **FPA** over doors and secure using (5) 2" finish nails into wall framing.

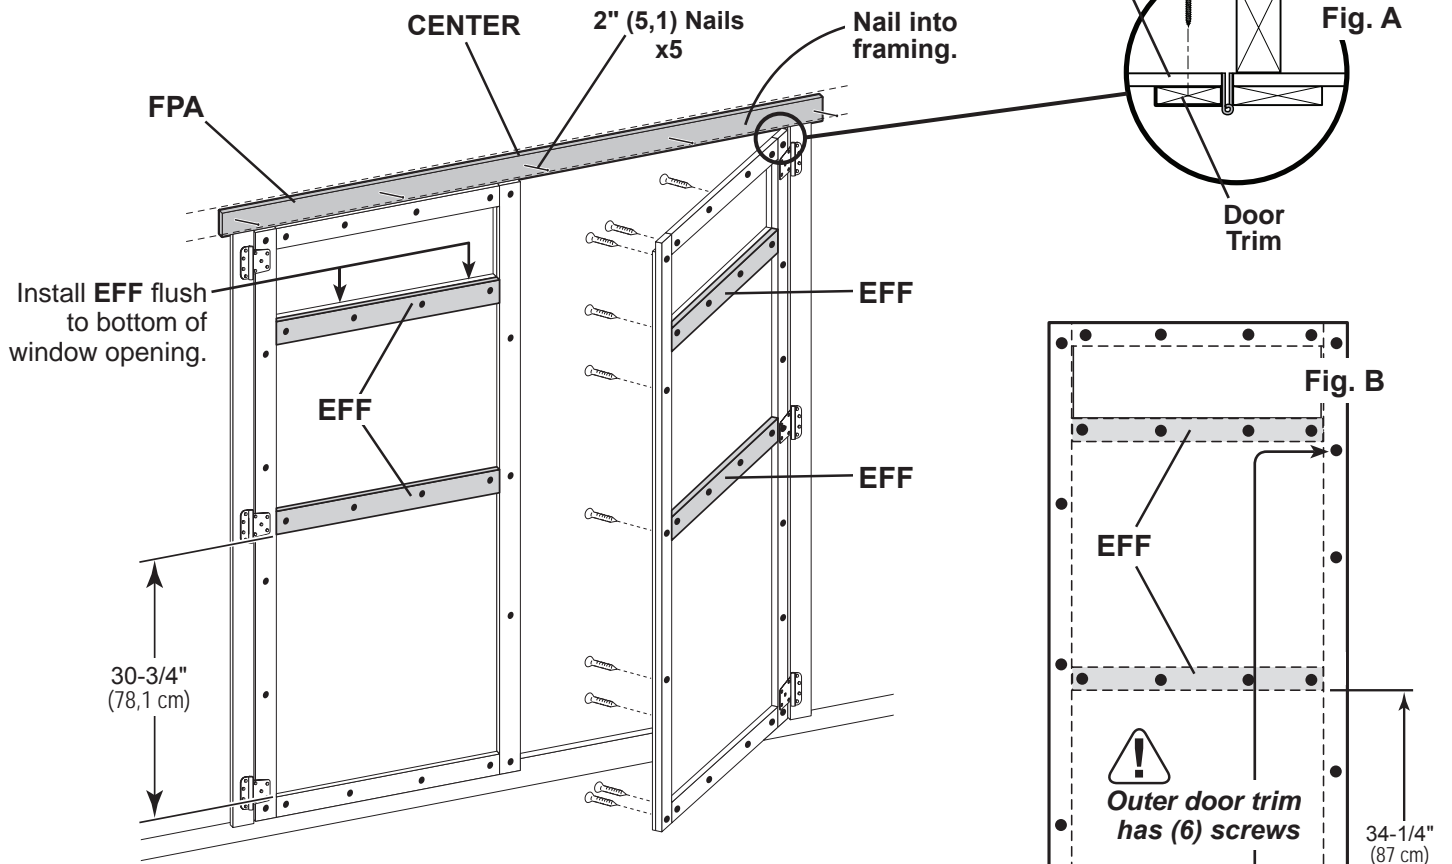




- 5 Center metal threshold between doors.
secure using (11) 3/4" special coating screws (Fig. C).

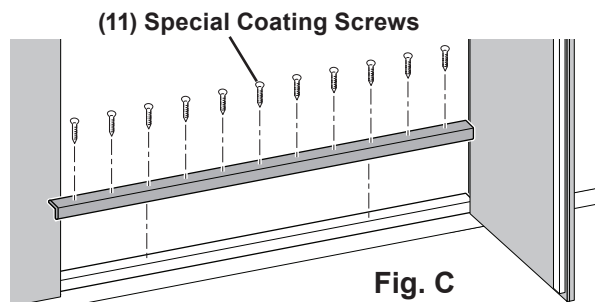

Your doors and trim are now secured.

DOOR TRANSOM WINDOWS


PARTS REQUIRED:

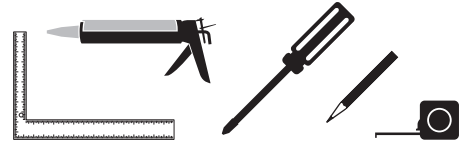

✓ BEGIN

- 1 Apply high quality exterior-grade caulk behind frame near edge before installing to seal window.

You must caulk completely around window frame and all exposed door panel edges and trim to validate your warranty.
Use a paintable exterior rated caulk.

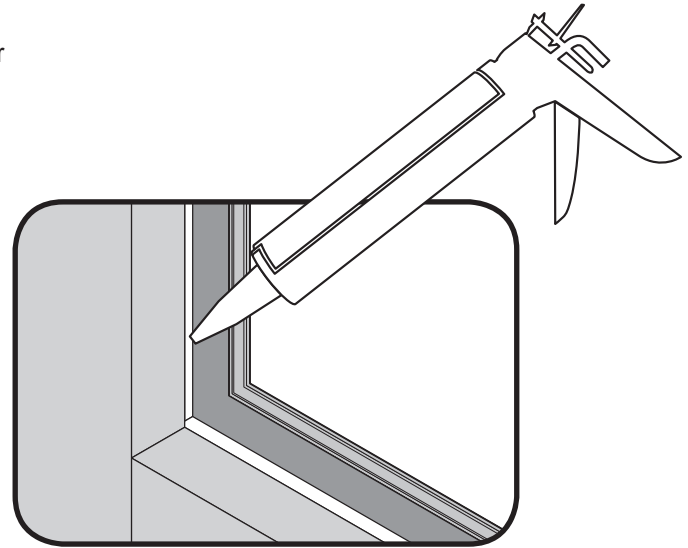


FRONT SIDE VIEW

- 2 From back side of door, measure 15-13/16" from inside edge of door.
Mark center of window opening on door.

Position window in opening flush to bottom of window opening. Center window on mark.

Secure with (4) screws to secure each window.

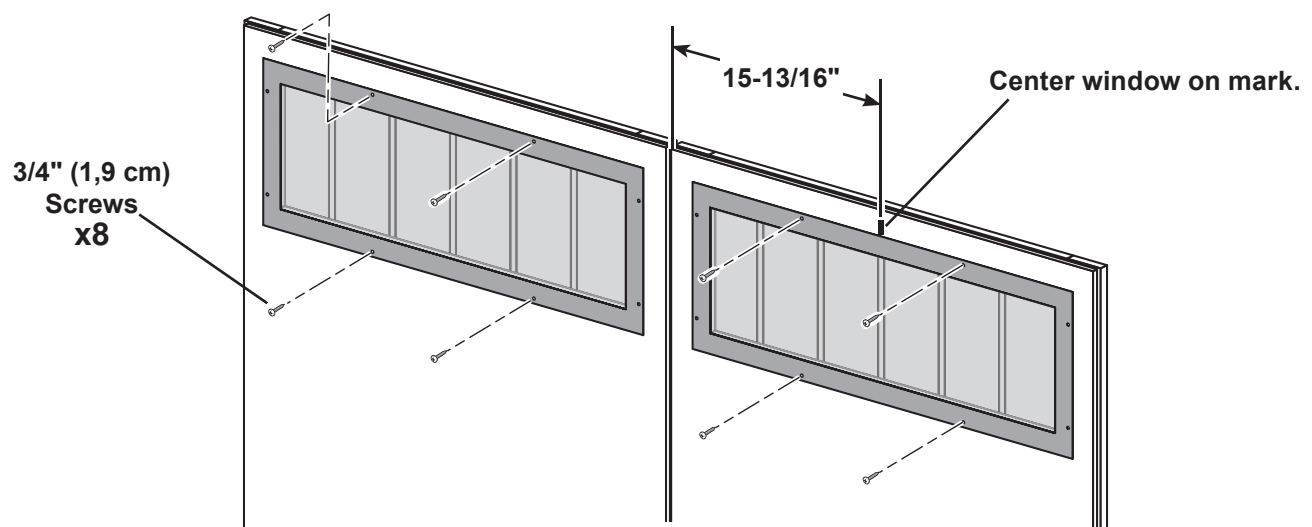

BACK SIDE OF DOORS




Your transom windows are installed.

DOOR STIFFENERS

PARTS REQUIRED:

x2 **OO**
69" Door Stiffener (175,3 cm)

x14  2" (5,1 cm)






✓ BEGIN


1 Center **OO** vertically on the left door in the door opening flush with the edge of door (**Fig. A**).

2 Secure with (7) 2" screws through outside trim into **OO** (**Fig. B**)

*Repeat steps to install **OO** on right door.*

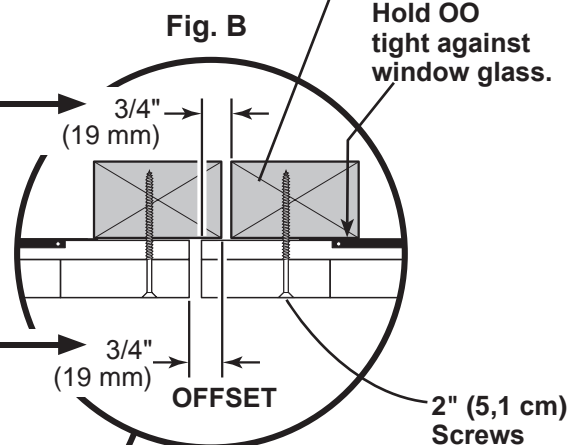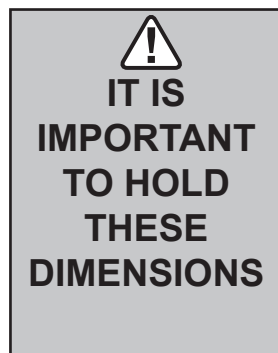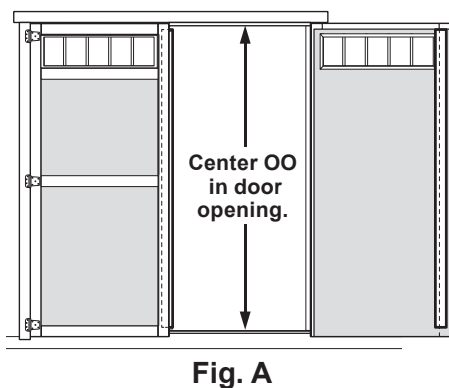

2" (5,1 cm) Screws x14

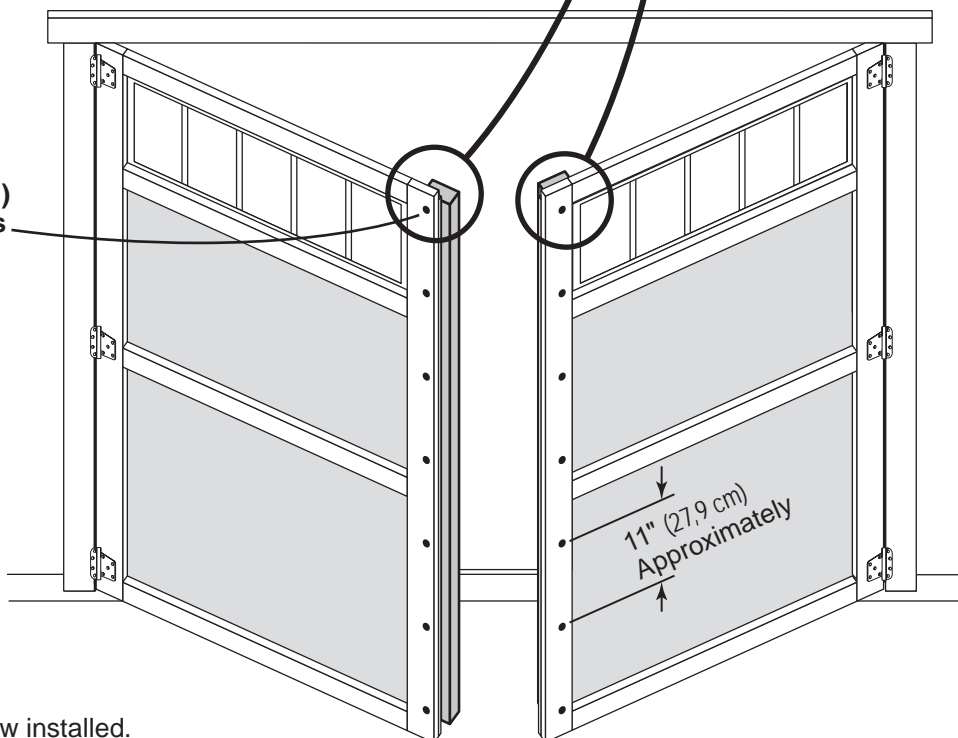

Your door stiffeners are now installed.

DOOR HARDWARE

PARTS REQUIRED:



1/4" (6 mm) Drill Bit
3/4" (19 mm) Drill Bit




✓ BEGIN 1

Measure and mark location of hole on outside of right door as shown (**Fig. A**).
Pre-drill hole with 1/4" drill.


Re-drill hole with 3/4" drill.

Keep drilled hole square to trim to avoid breaking edge of door stiffener.

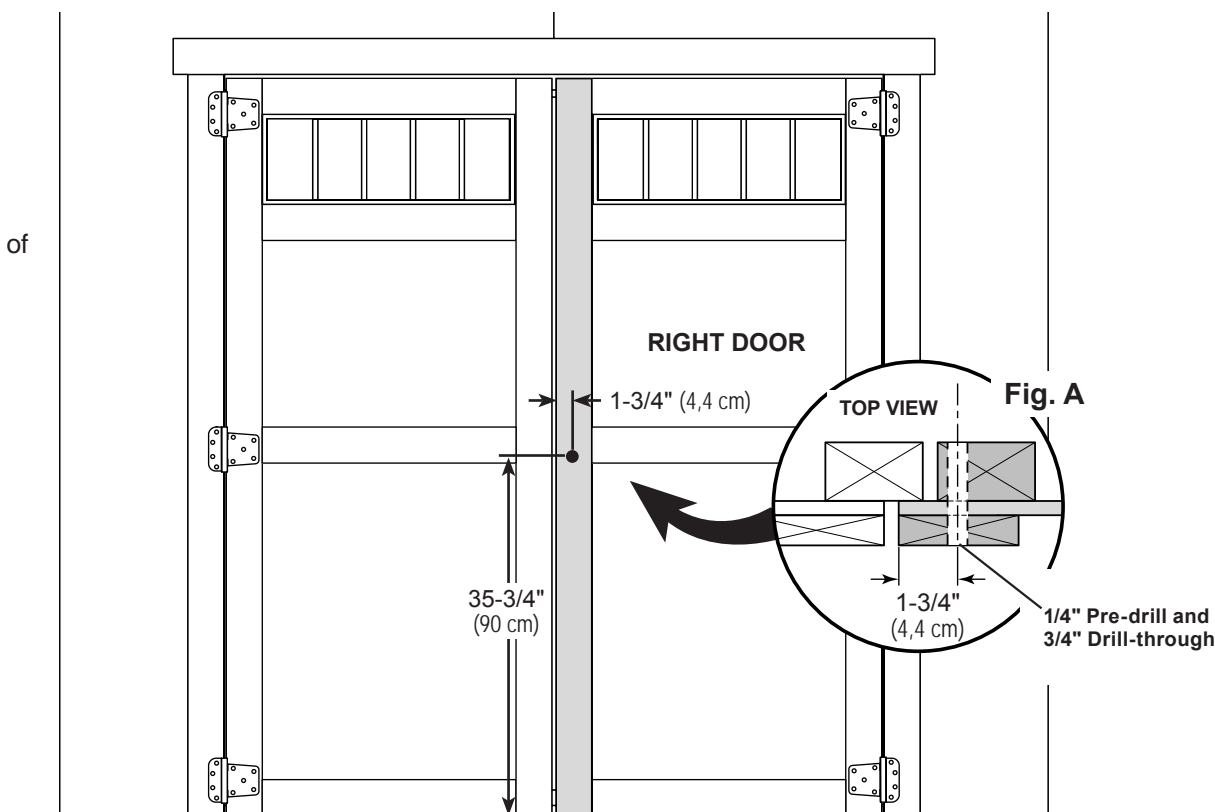

DOOR HARDWARE

PARTS REQUIRED:

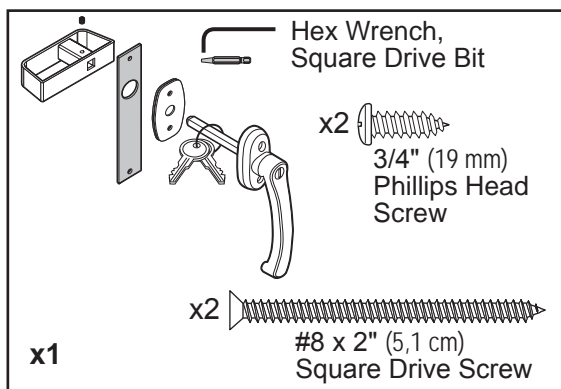


- 2 Pre-assemble, test-fit parts and mark (2) pilot hole locations, as shown. Remove parts and pre-drill (2) 3/32" holes.

Align plate centered with holes. Secure plate with (2) 3/4" screws (*supplied*).

Place gasket over shaft and insert handle through hole. Align handle, plate and gasket with holes. Secure with (2) 2" screws (*supplied*).

Slide D-handle over shaft until flush with inside plate. Secure with set-screw.

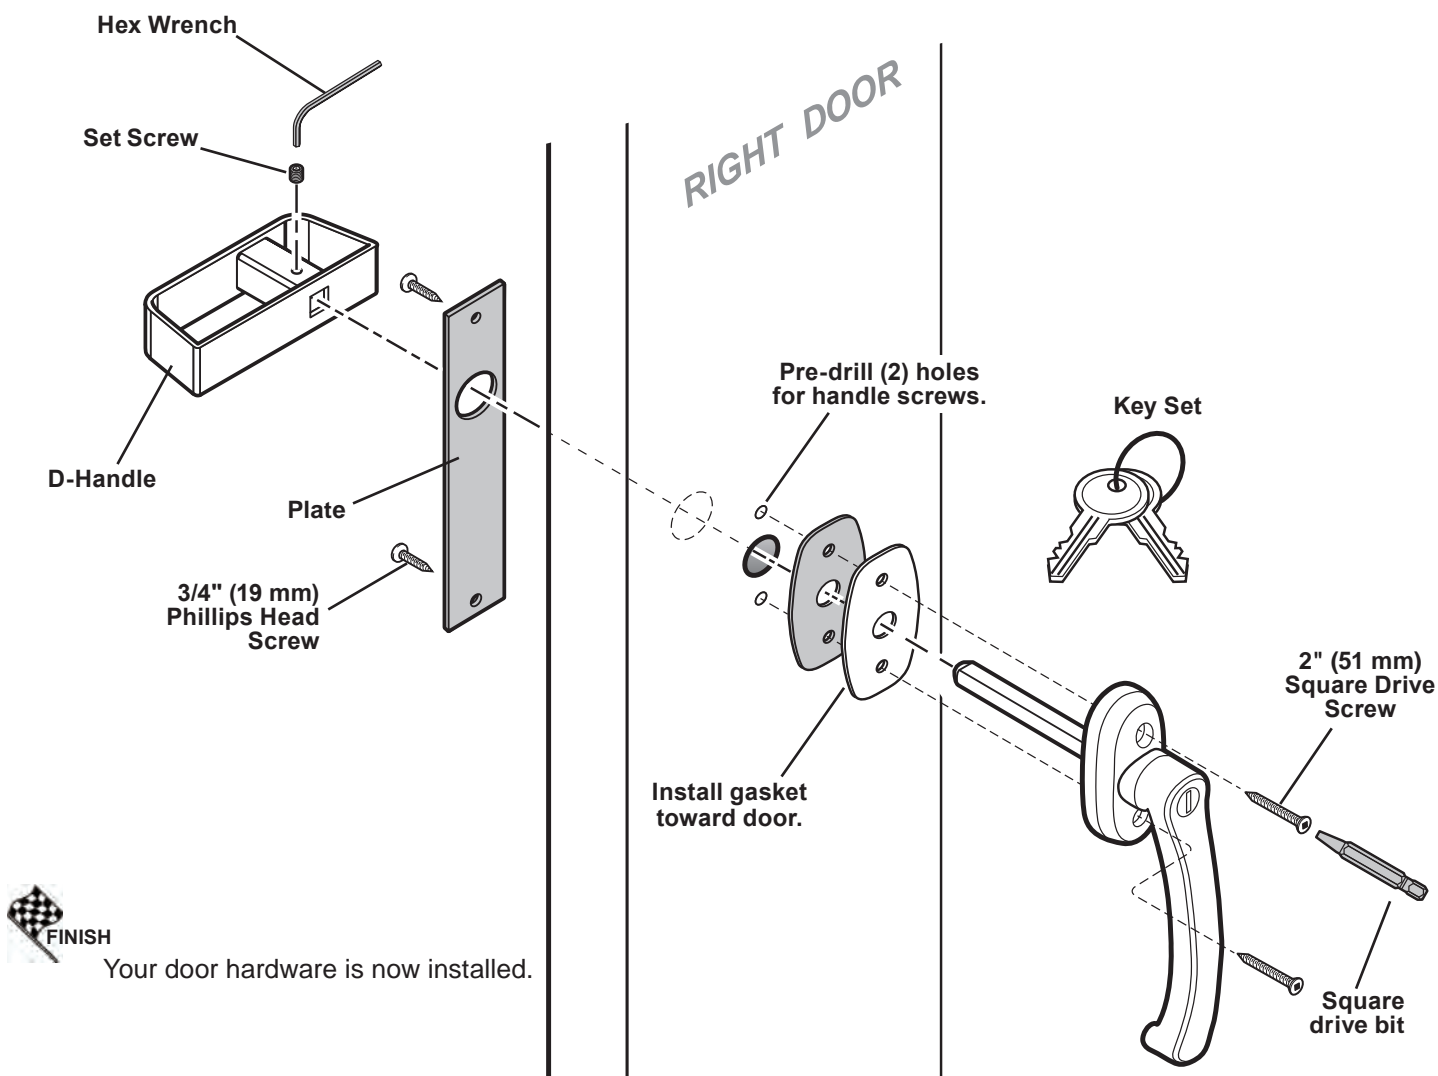

DOOR WEATHERSTRIPPING

PARTS REQUIRED:

x2 **NUC**

1 x 4 x 69-1/4" (2,5 x 10,2 x 175,9 cm)


x20

2" (5,1 cm)

✓ **BEGIN**

1

Install (2) **NUC** weatherstrips flush along inside of doors and flush to door header. Secure with 2" finishing nails, as shown (**Fig. A**).


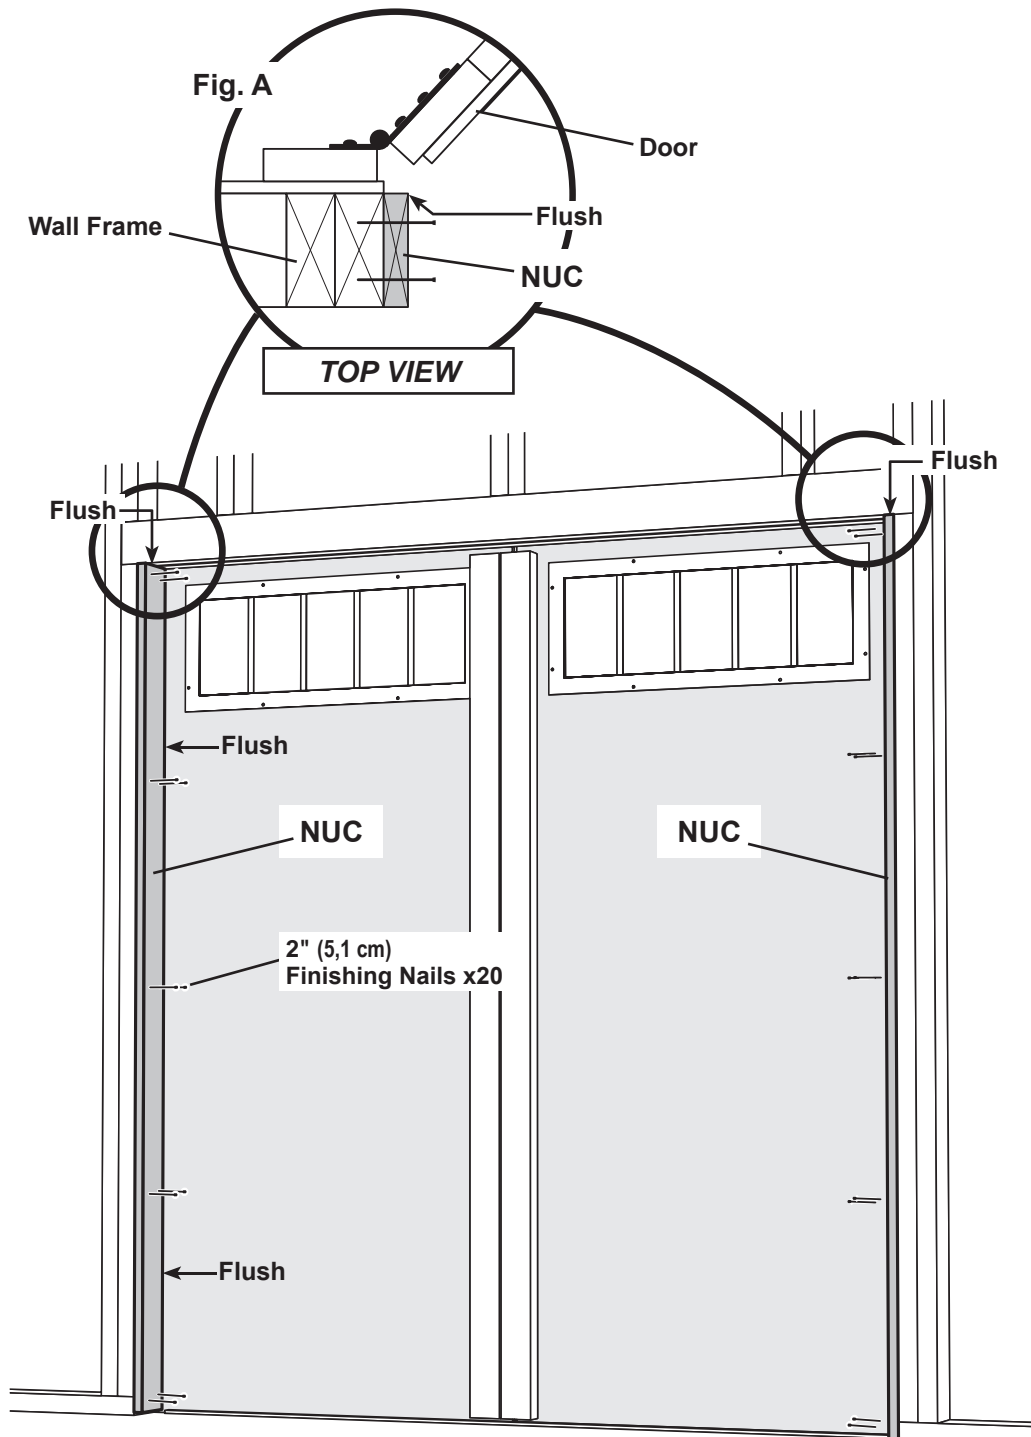


FINISH

Your double door weatherstripping is now installed.

DOUBLE DOOR HARDWARE

PARTS REQUIRED:



✓ BEGIN

- 1 Place upper bolt on **OO** in open position with bolt end 3/8" (9,5 mm) down from frame. Bolt is open when loop is contacting base (**Fig A**).
- 2 Mark and pre-drill holes for screws. Install bolt with screws supplied.
Drill 5/16" (8 mm) hole deep enough for bolt to slide into.
- 3 Place lower bolt on **OO** in open position with bolt end 1/2" (12,7 mm) up from floor. Bolt is open when loop is connecting base (**Fig. B**).
- 4 Mark and pre-drill holes for screws. Install bolt with screws supplied.
Drill 5/16" (8 mm) hole deep enough for bolt to slide into.

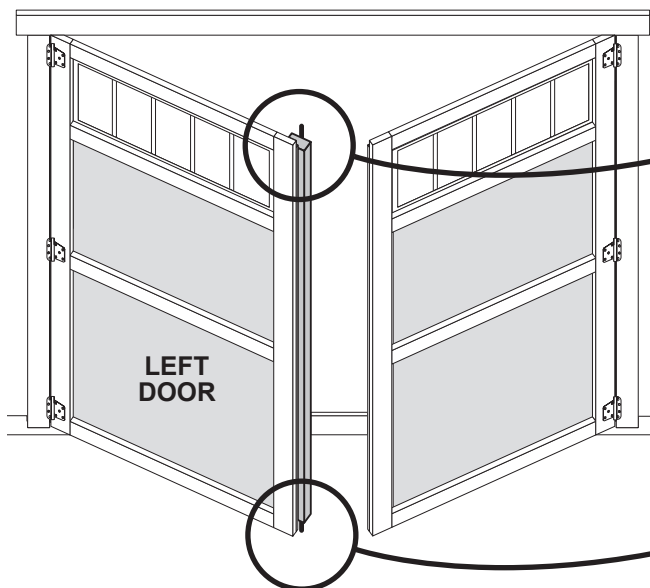


Fig. A


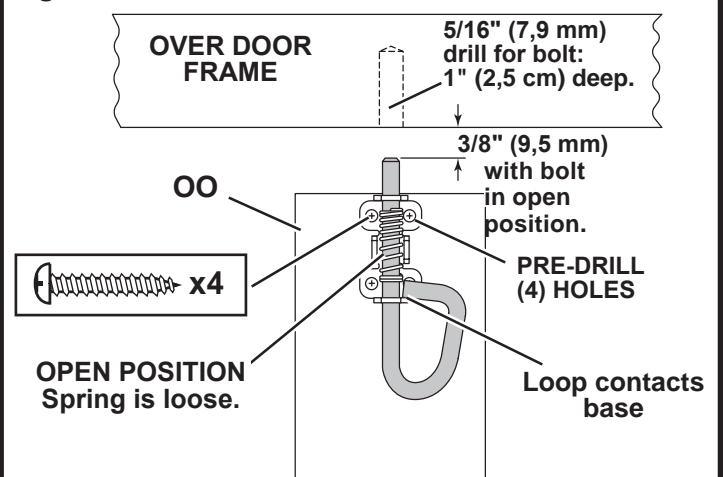


Fig. B

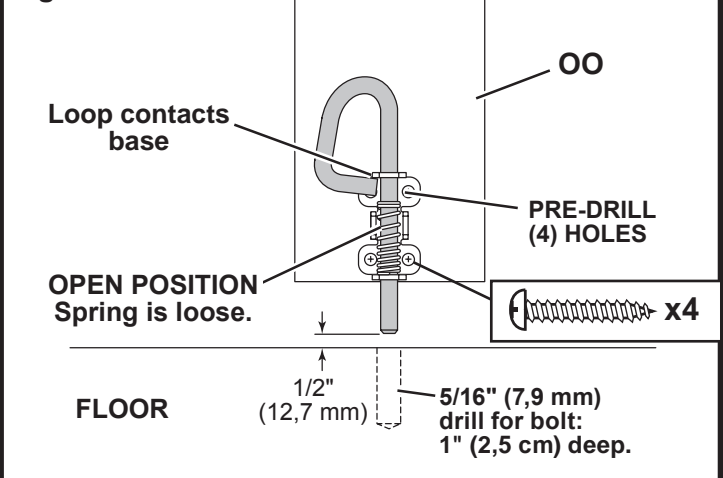


FINISH


Your spring bolts are now installed.

CORNER TRIM

PARTS REQUIRED:

x8 
3/8 x 3-1/2 x 83-1/2" (1 x 8,9 x 212,1 cm)




x64 
2" (5,1 cm)



✓ BEGIN

- 1 Install gable end **83-1/2"** corner trim flush to gable panel (**Fig. A**) and flush with eave wall panel (**Fig. B**). Secure with 2" finishing nails spaced evenly.
- 2 Install eave side **83-1/2"** corner trim flush to eave soffit and flush along seam of installed corner trim (**Fig. C**). Secure with 2" finishing nails spaced evenly.


Repeat steps to install trim to all four corners.

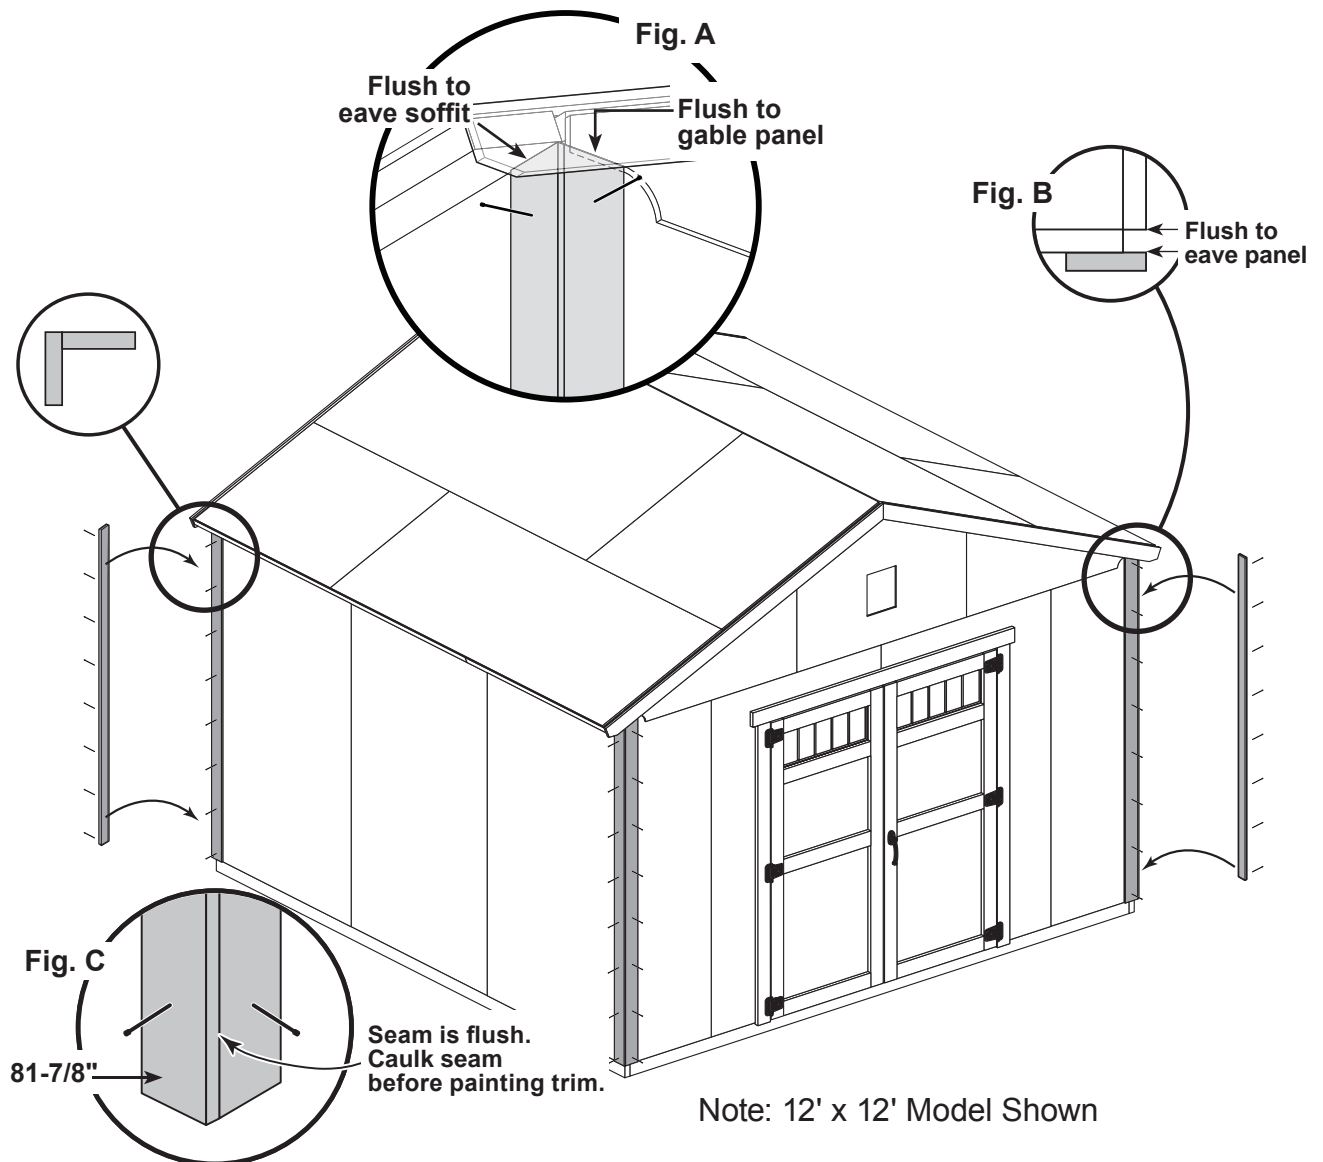


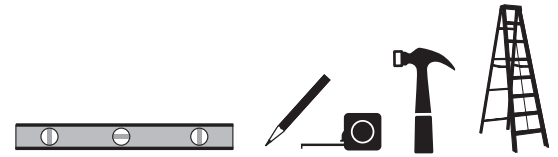
Your corner trim is now installed.

COLLAR TIE INSTALLATION

PARTS REQUIRED:

x24  3" (7,6 cm)

x4 **TP** 
2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)




✓ BEGIN

1 Install (4) collar ties **TP** to the rafters with (3) 3" nails at each end (**Fig. A**).



Install collar ties on the 2nd, 4th, 6th and 8th rafters from the door wall, as shown.

Ensure collar ties are level.

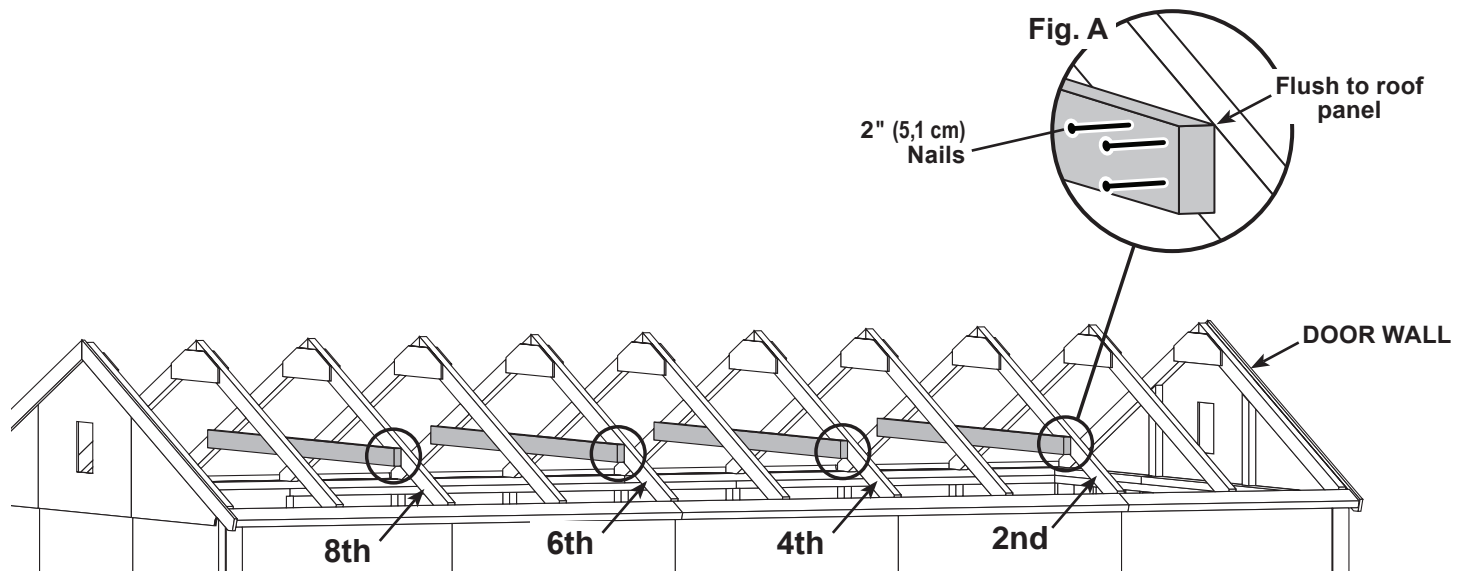

HINT:

For best appearance, install collar ties on side of rafter away from door.





FINISH


Your collar ties are now installed.

GABLE VENTS

PARTS REQUIRED:

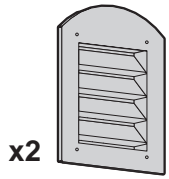

x8 
#8 x 1" (2,5 cm)
Pan Head Screws

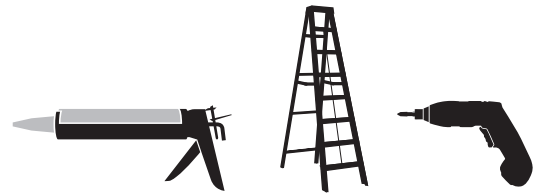

✓ BEGIN


1

Locate vent in the gable wall, as shown.

Seal vent from behind with exterior grade caulk before installing.

Secure vent with 1" screws.



Repeat to install 2nd vent in the opposite gable.

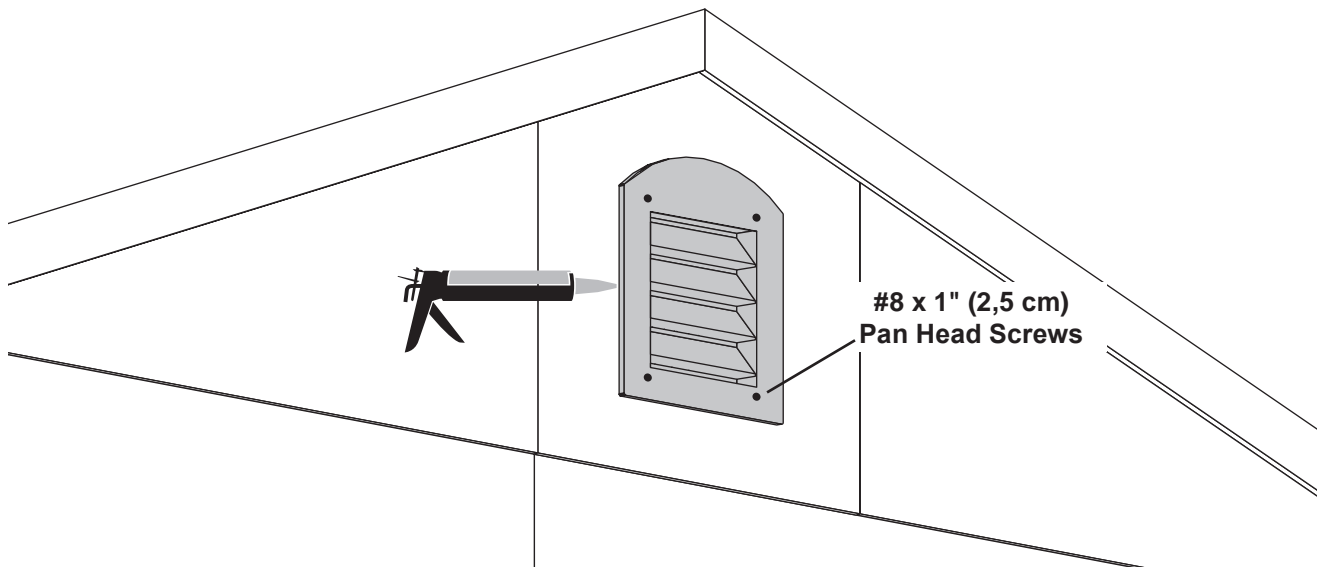

Your vents are now installed.

HOOKS & EYES


PARTS REQUIRED:

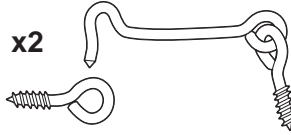

✓ **BEGIN**

1 Install hooks in wall and into wall framing (**Fig.A**).


2 Swing door open to locate eye.

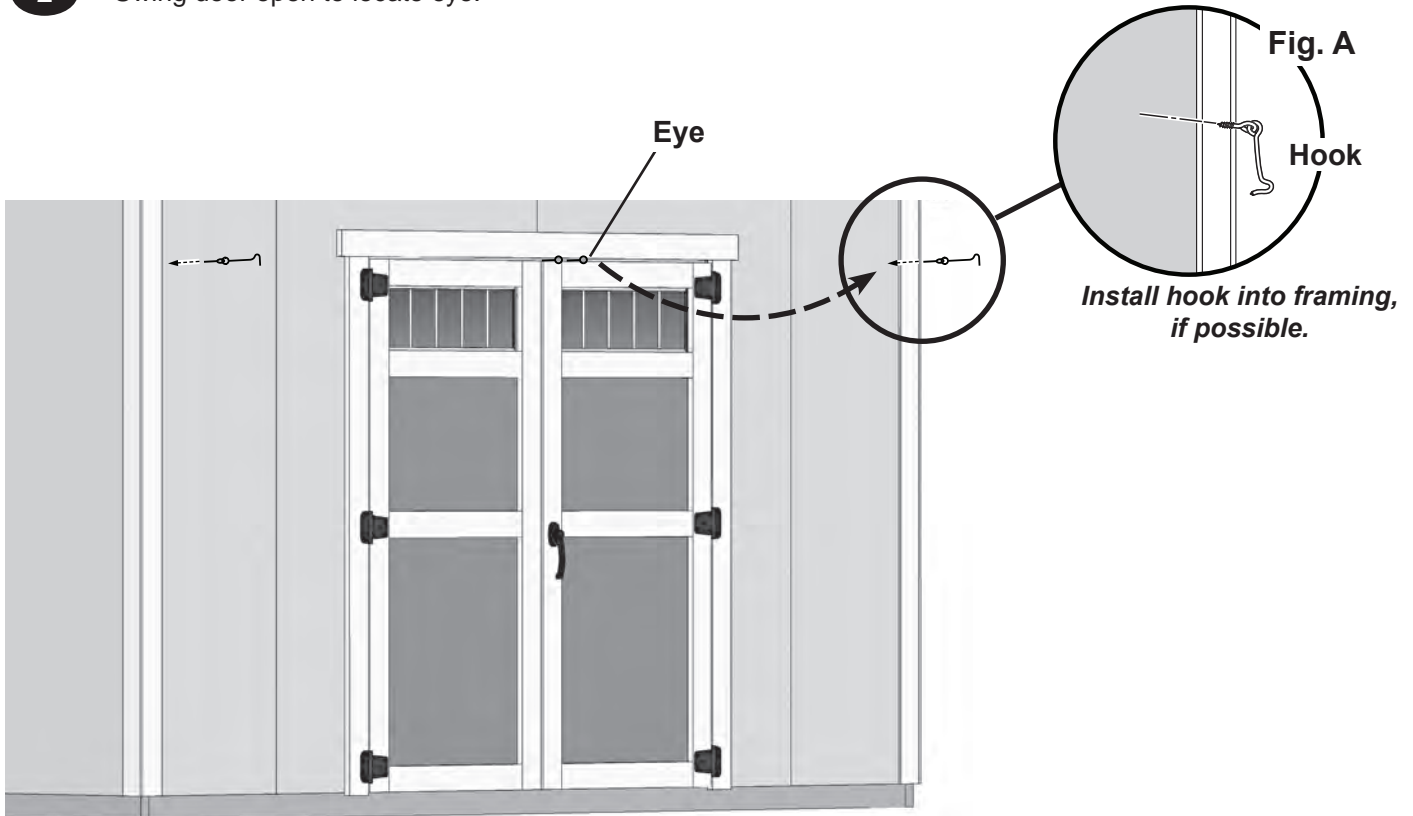

✓ **FINISH**

You have installed your hooks & eyes.

PAINT & CAULK - NOT INCLUDED -




- Use acrylic latex caulk that is paintable. Caulk at all horizontal and vertical seams, between the trim and walls, and all around the door trim.
- Use a high quality exterior acrylic latex paint. When painting your building, there are a few key areas that can be easily overlooked that must be painted:
 - Bottom edge of all siding and trim
 - Inside of doors and all 4 edges

Note:

Prime all un-primed exterior wood before painting.
(Follow directions provided by manufacturer.)

ROOF FELT - NOT INCLUDED -



- Install felt flush to all roof edges overlapping 3". Use minimal amount of roofing nails to hold in place.

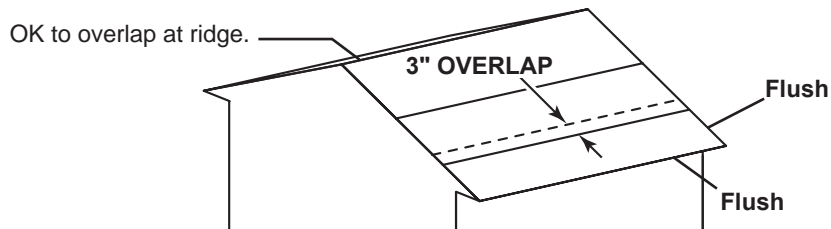

DRIP EDGE - NOT INCLUDED -




- Install drip edge over roof felt on gable side and under roof felt on eave side (**Fig. A**).
- Do not use nails on side of drip edge that hangs over side of building.
- Only nail top of drip edge as shown.

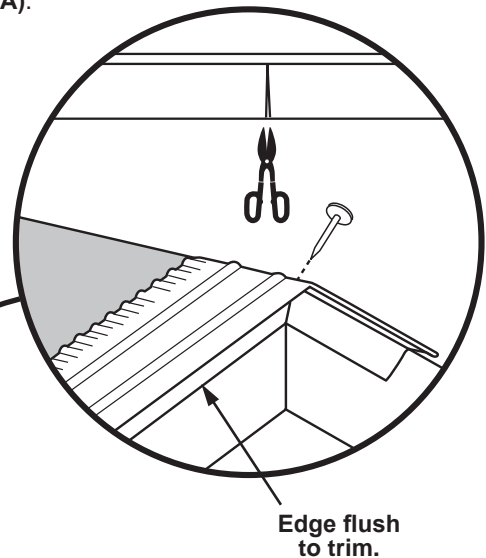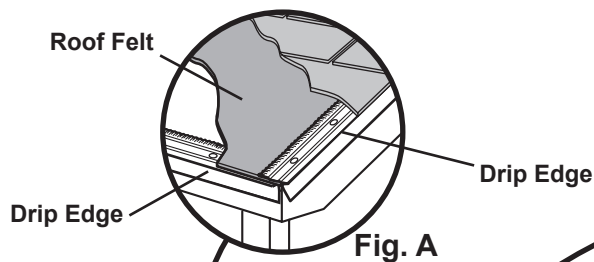


Snip bottom side of drip edge and bend over to other side of roof.

(Follow directions provided by manufacturer.)

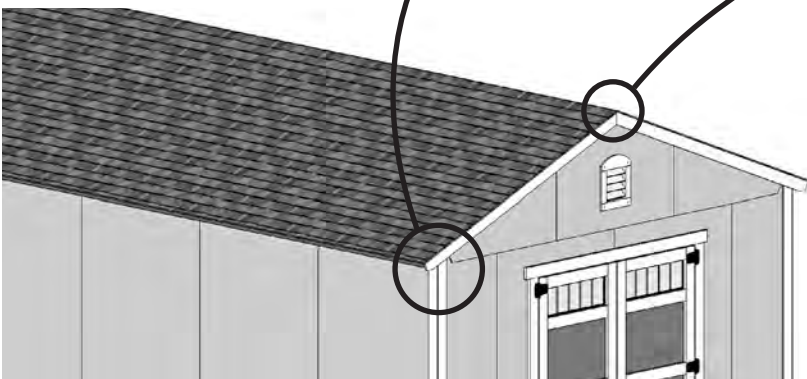


SHINGLES - NOT INCLUDED -

- Follow directions provided by manufacturer and these instructions.

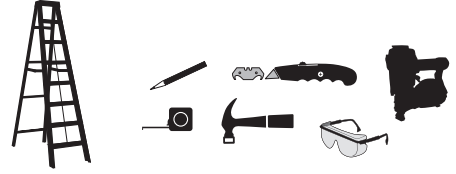


- ⚠️ **Familiarize yourself with a 3-Tab Shingle.**

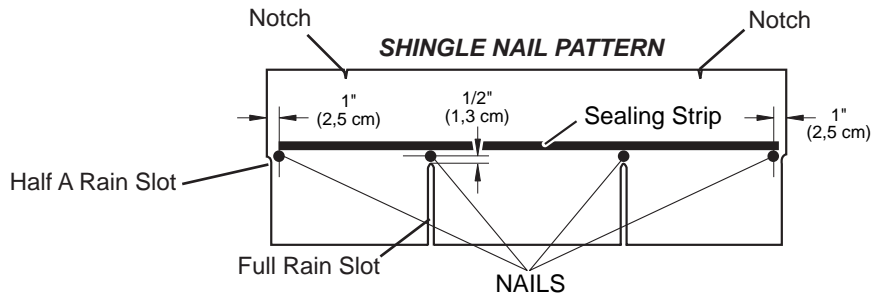

- ⚠️ **NEVER DRIVE FASTENERS INTO OR ABOVE SEALING STRIPS.**


✓ BEGIN

- 1 Install first starter row upside down and color up with a 1" overhang at back and bottom of roof panel. Use (4) nails per shingle. **Starter row must be straight and level all the way across with lower edge of roof deck.**
NOTE: If you have installed drip edge install shingles flush to drip edge.

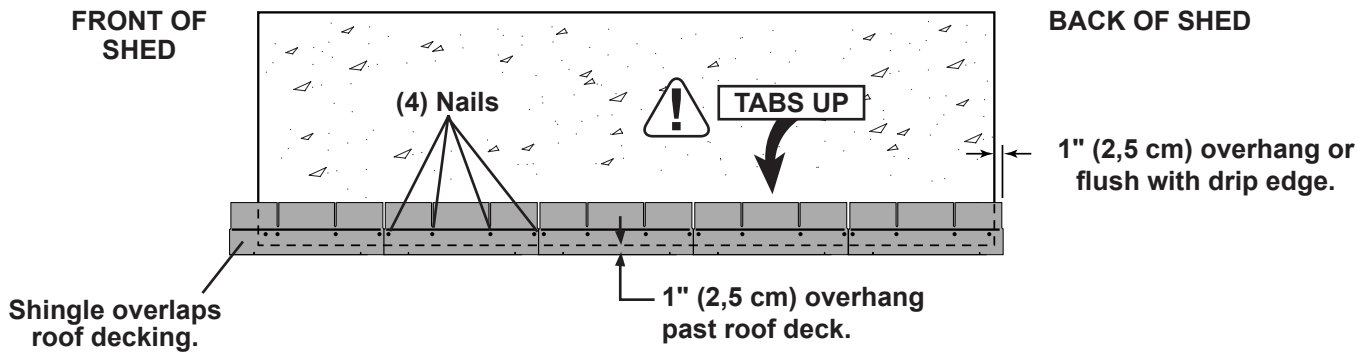


SHINGLES continued...


- 2 Beginning at front of shed, install first row of shingles with notch at 1" past roof edge or flush with drip edge.

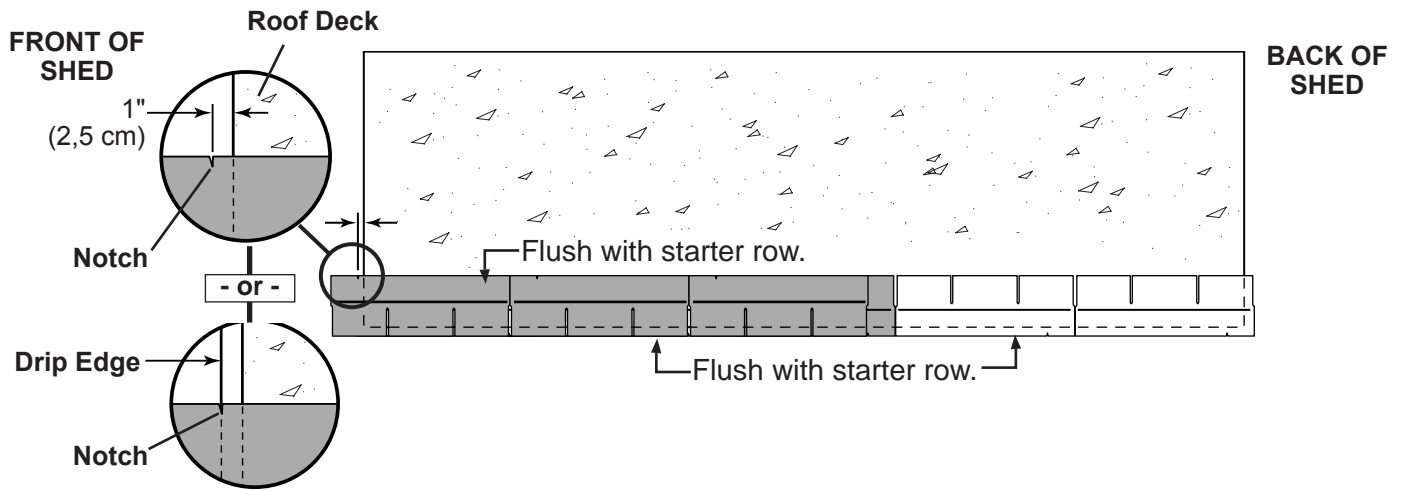

- 3 Install second row of shingles flush at top of first row's rain slots. Ensure 1" overhang or flush to drip edge at front, stagger each row.

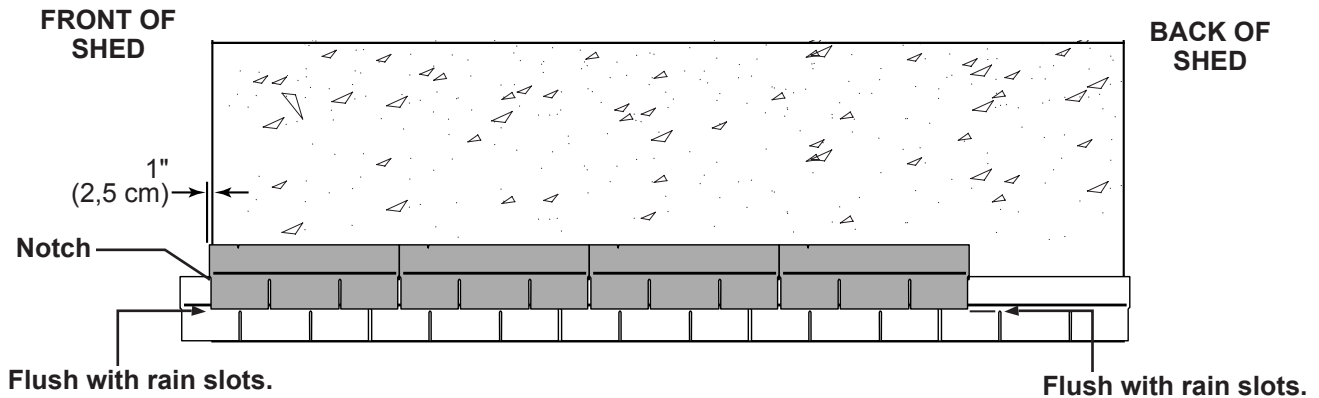



- 4 Continue installing rows of shingles by staggering at front.

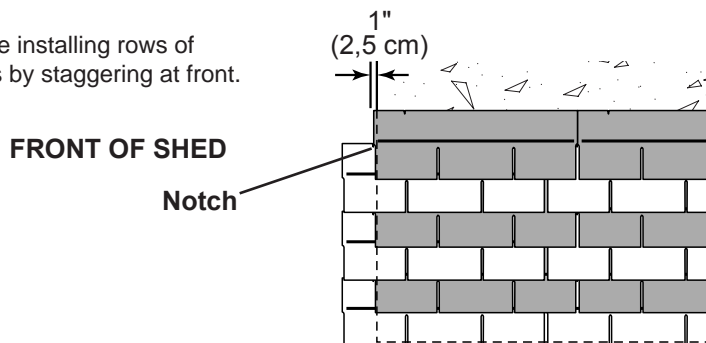

SHINGLES

continued...

- 5** Continue installing rows of shingles to the peak. At the peak make sure there is a maximum of 5" or less to the rain slot, as shown below. If shingles overlap at ridge cut to peak with a utility knife.

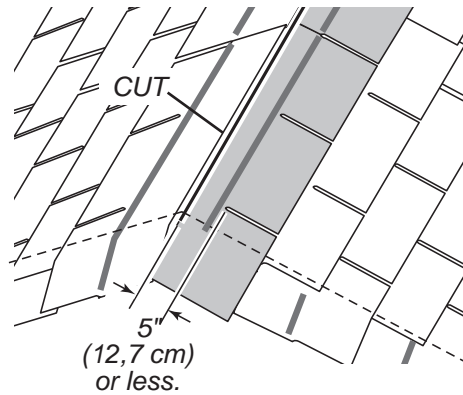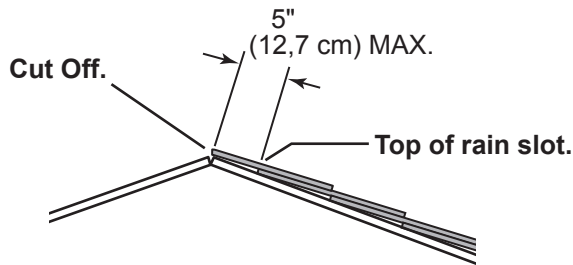


- !** • If more than 5" to rain slot you must install another row of shingles.

- 6** Repeat steps 1 - 5 to shingle the opposite side of your roof. Trim shingles at ridge.

- 7** Once both sides are shingled you need to trim ends. Strike a chalk line 1" from edge.

- 8** Using your shingle hooked blade carefully cut shingles along chalk line.

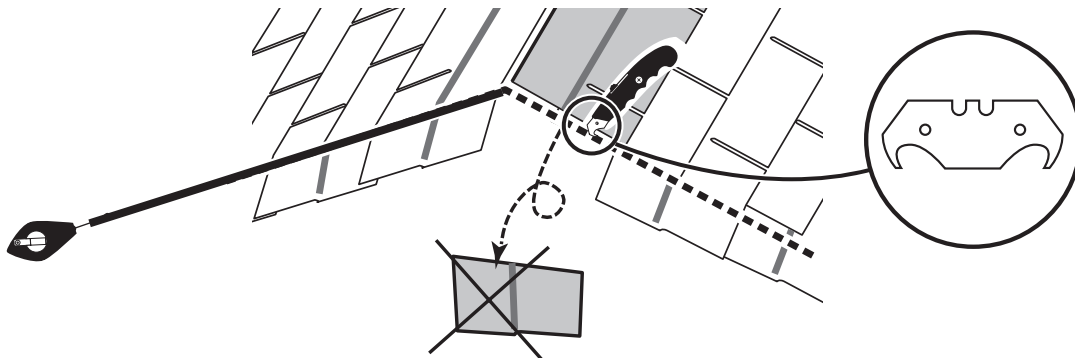


You have finished shingling your roof. Proceed to capping the ridge.

SHINGLES - RIDGE CAP

- You will finish off the top of the roof with a ridge cap made from shingles.

✓ **BEGIN**

- 1** Cut shingles into THREE pieces. **Hint:** Use cut-off pieces first.

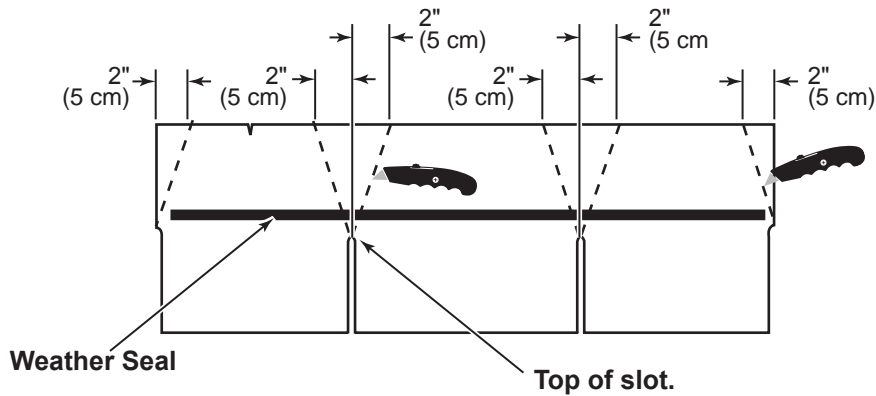


Score shingle, then snap-off angled cut.


Note: • You will need about 51- 53 cut pieces.

51 to 53 Pieces

- 2** Install first ridge cap flush to shingles at front, as shown.

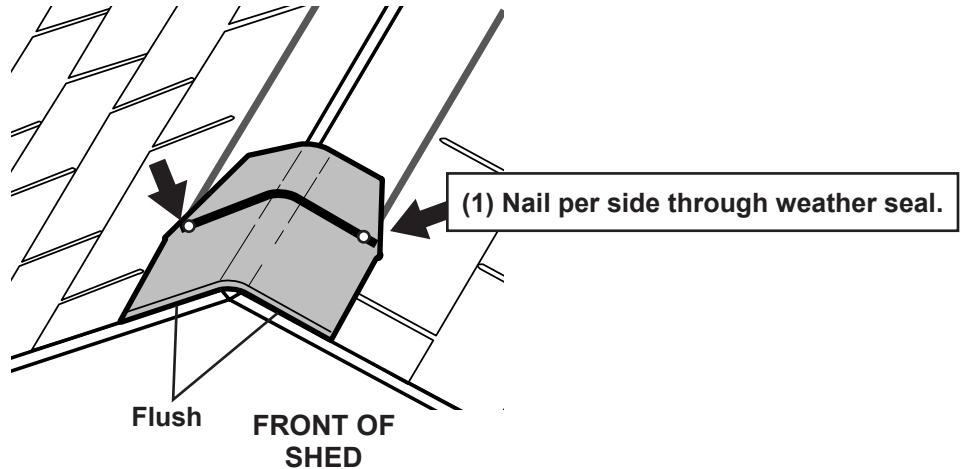


- 3** Install second ridge cap 5" back, as shown.

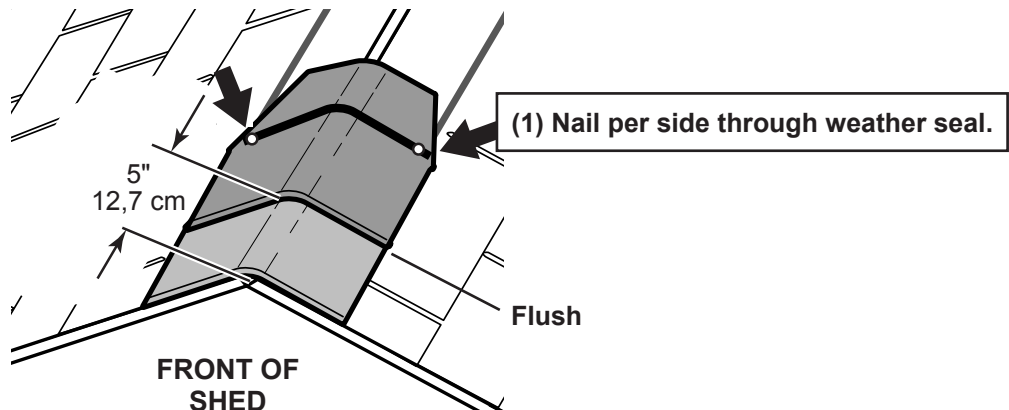


SHINGLES - RIDGE CAP continued...


- 4 Continue installing ridge cap to back of roof.

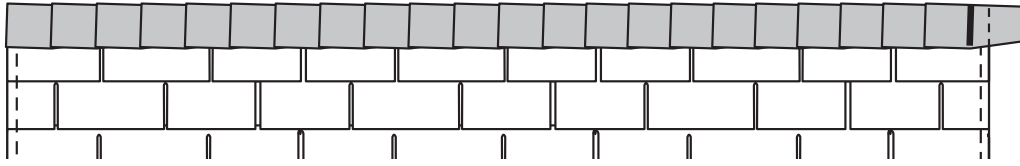


- 5 Make sure there is 4" between the shingle-color and edge of shingles.

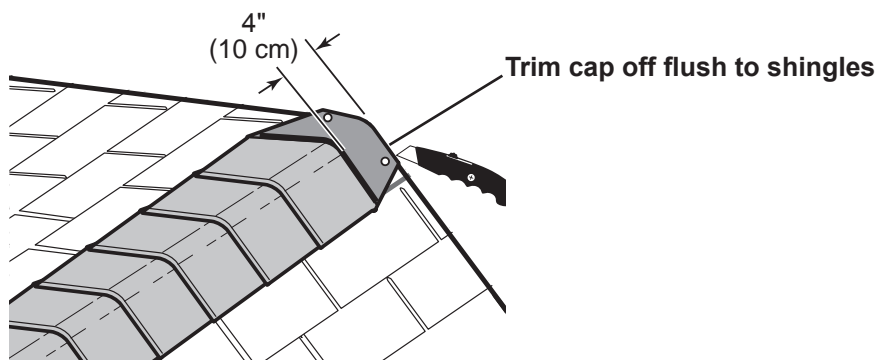

- 6 When you have 4" minimum of shingle color cut one piece to cap your roof.

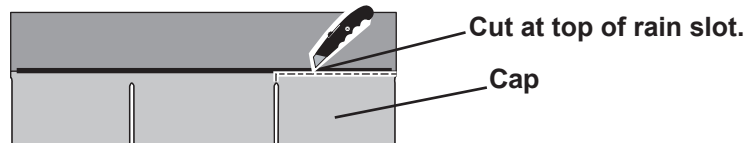

- 7 Install flush to shingles.

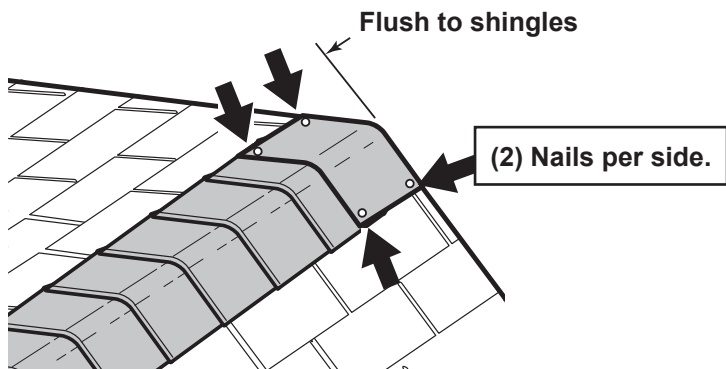

You have finished your ridge cap.

16949 12' x20' Order Form

CATEGORY	PART DESCRIPTION	PART SIZE	PART ITEM #	BUILDING QTY.	PART ID
2 X 4	Side Wall Top Plate	*LUM SPF 2X4X72 #2&BTR	O 72000000000	4	TM
	Side Wall Btm "A" / Dblr "A" / Collar Tie	LUM SPF 2X4X96 #2&BTR	12306	14	TP
	Back/Frt T & B Plate "A" / Dblr "A"	2 X 4 X 92 1/2"	O 92080000000	6	TJ
	Back/Frt T & B Plate "B" / Side Wall Dblr "B"	2 X 4 X 44 1/2" PLATE	O 44080000000	6	STL
	Side Wall Btm "B" / Back & Frt Doubler "B"	2X4X48" DOUBLER/ PLATE/ CRATE	O 48000000000	4	SP
	Wall Studs	2 X 4 X 78 1/2"	O 78080000000	38	AI
	Jack Studs	2 X 4 X 68" STUD	O 68000000000	2	UM
	Over Door Crippler	2 X 4 X 7"	O 07000000000	5	AL
	Header	2 X 4 X 67"	O 67000000000	2	AM
	Rafter	2 X 4 X 77-15/16" @ 22.5	O 77152222000	22	ADA
	Front / Rear Gable Connector	2 X 4 X 18 1/8"-22.5" CONNECT	O 18022222000	4	AF
2 X 6	Overhang "A"	LUM WSPF 2X6X96 #1 PREMIUM PET	12416	4	VX
	Overhang "B"	2 X 6 X 49 3/4" OVERHANG	N 49120000000	2	WTC
1 X 3 PINE	Gauge Block	1 X 3 X 5" PINE FILLER	U 05000000000	1	GAA
1 X 4 PINE	Weatherstrip	1 X 4 X 69-1/4"	T 69040000000	2	NUC
7/16 OSB	Upper Roof Panel "A"	OSB 7/16" x 4' x 8'	11110	4	---
	Upper Roof Panel "B"	7/16" OSB 47 7/8" X 48" ROOF	C 48004714000	2	---
	Lower Roof Panel "A"	7/16" OSB 36-1/2" X 96" ROOF	C 96003608000	4	---
	Lower Roof Panel "B"	7/16" OSB 36 1/2" X 47-7/8"	C 47143608000	2	---
	Door Header Filler	7/16" OSB 3 1/4" X 66 3/4" HEADER	C 66120304000	1	---
GUSSETS	Gusset	EZ8" OSB 6" X 24" GUSSET 22.5"	J 24000600225	20	---
NO GROOVE SIDING	Center Gable Panel With HOLE	3/8" NG 33-1/2" X 48"	K 4800330804V	2	---
	Front / Rear Gable Panel - Right	3/8" NG 23 9/16" X 48" RIGHT FRONT GABLE	K 48002309300	2	---
	Front / Rear Gable Panel - Left	3/8" NG 23 9/16" X 48" LEFT FRONT GABLE	K 48002309400	2	---
	Corner Trim	3/8" NG 3-1/2" X 83-1/2"	K 83080308000	8	---
	Rearwall Panel "A" / Side Panel	SIDING NGSE 3/8X4'X7'	11507	13	---
	Front Wall Panel	NG 23 7/8" X 84" WALL PANEL	K 84002314000	2	---
	Door Panels	NG 31 1/4" X 71 3/8" DOOR PANEL w/ WINDOW	K 7106310400W	2	---
	Frontwall Panel Right	NG 48" x 84" RIGHT FRONTWALL	K 84004800101	1	---
	Frontwall Panel Left	NG 48" x 84" LEFT FRONTWALL	K 84004800201	1	---
19/32 X 4 SMART TRIM	Gable Trim Right	19/32 TST 3 1/2" X 84 15/16" 22.5" O/E RGT TRIM	UT84150308221	2	CQR
	Gable Trim Left	19/32 TST 3 1/2" X 84 15/16" 22.5" O/E LFT TRIM	UT84150308222	2	CQL
5/4 X 4 SMART TRIM	Drilled Hinge Board	5/4 TST 3 1/2" X 72-3/8" DRILLED	UU7206030800D	2	DJD
	Door Rails	5/4 TST 3 1/2" X 24-5/8"	UU24100308000	4	EFF
	Over Door Trim	5/4 TST 3 1/2" X 74"	UU74000308000	1	FPA
PURCHASED COMPONENTS	Door Stiffener	LSL 1-1/4 X 2-1/4 X 69 PET	12715	2	OO
	Arched Gable Vent	VENT 8X10, APL# CV12X18W-PE, A	15021	2	---
	Hinge Screw Addendum	H/K ADDENDUM - 1" & 2-1/2" SCREWS FOR FM HINGES	15142-SCR	1	---
	Transom Window for Door	WINDOW 9 X 27 TRANSOM (SINGLE	15235	2	---
	Premium L-Handle	HANDLE - L & D HANDLE BAG W/SCREWS	15434	1	---
	HD Face Mount Hingles	HINGE BAG OF (6) W/LAGS - FLUSH MOUNT, BLACK DELRIN BUSHING, BLACK LAGS	15142-B	1	---
	Hardware Kit	H/K CLASSIC SERIES GABLES	15781	1	---
	Hardware Kit	H/K CLASSIC/HHP 8' GABLE	15625	1	---
	Threshold	THRESHOLD 7/8" X 1-1/2" X 63-7/8	15420	1	---
PACKAGING	Instructions		16949	1	---
Right Door Assembly	30475-R				
	Door Panel	NG 31 1/4" X 71 3/8" DOOR PANEL w/ WINDOW	K 7106310400W	1	---
	Vertical Door Stile	5/4 TST 3 1/2" X 71-5/8"	UU71100308000	1	ATC
	Drilled Door Stile	5/4 TST 3 1/2" X 71-5/8" DRILLED	UU7110030800D	1	BBD
	Horizontal Door Rails	5/4 TST 3 1/2" X 24-5/8"	UU24100308000	2	EFF
Left Door Assembly	30475-L				
	Door Panel	NG 31 1/4" X 71 3/8" DOOR PANEL w/ WINDOW	K 7106310400W	1	---
	Vertical Door Stile	5/4 TST 3 1/2" X 71-5/8"	UU71100308000	1	ATC
	Drilled Door Stile	5/4 TST 3 1/2" X 71-5/8" DRILLED	UU7110030800D	1	BBD
	Horizontal Door Rails	5/4 TST 3 1/2" X 24-5/8"	UU24100308000	2	EFF

LIMITED CONDITIONAL WARRANTY*

Backyard Storage Solutions, LLC warrants the following:

1. Every product is warranted from defects in workmanship and manufacturing for 1 year.
2. All accessories, hardware and metal components are warranted for 2 years.
3. All Oriented Strand Board (OSB) is warranted for 2 years
4. Siding and Trim is warranted for 10 years.
5. Solar Shed windows are warranted for 1 year.
6. Cedar lumber is warranted for 15 years.
7. Preserved Pine is warranted for 10 years.
8. Redwood is warranted for 10 years.

Backyard Storage Solutions, LLC will repair, replace or pay for the affected part. In no event shall Backyard Storage Solutions, LLC pay the cost of labor or installation or any other costs related thereto. All warranties are from date of purchase. If a cash refund is paid on an affected part, it will be prorated from the date of purchase.

CONDITIONS

The warranty is effective only when:

1. The unit has been erected in accordance with the assembly instructions.
2. The unit has been properly shingled and painted or stained and reasonably and regularly maintained thereafter.
3. The failure occurs when the unit is owned by the original purchaser.
4. Backyard Storage Solutions, LLC has received the warranty registration card within thirty (30) days of purchase and notification of the failure in writing within the warranty period specified above.
5. Backyard Storage Solutions, LLC has had reasonable opportunity during the sixty (60) days following receipt of notification to inspect and verify the failure prior to commencement of any repair work.

REQUIREMENTS

Storage Buildings

To validate your warranty, it is necessary to properly maintain your Backyard Storage Solutions, LLC unit; shingle the roof and paint or solid-colored stain the siding using quality, 100% acrylic latex exterior product with a minimum of two (2) coats within thirty (30) days of assembly; caulk above all doors and all horizontal and vertical trim boards; paint and seal all exposed edges, sides and faces of siding/trim and OSB siding to include all exterior walls and all sides and all edges of doors.

Gazebos & Pergolas

To validate your warranty, it is necessary to properly maintain your Backyard Storage Solutions, LLC unit. This includes treating all of the exposed cedar and pine surfaces on your gazebo or pergola structure with an exterior grade wood preservative, an exterior oil-based semi-transparent stain, an acrylic latex exterior paint or an acrylic latex solid color exterior stain within 30 days of assembly and as needed thereafter to maintain your warranty.

Keep vegetation trimmed away from building and make sure siding panels and trim do not come in contact with masonry or cement. The minimum ground clearance for siding must be one half inch ($\frac{1}{2}$ inch) from concrete slab or two and one half inches ($2\frac{1}{2}$ ") from the ground when building is erected or constructed on a treated wood floor kit. Water from sprinklers must be kept off unit. In no event will Backyard Storage Solutions, LLC be responsible for any indirect, incidental, consequential or special damages nor for failure(s) that are caused by events, acts or omissions beyond our control including, but not limited to, misuse or improper assembly, improper maintenance (which eventually leads to rot or decay) and acts of God. Backyard Storage Solutions, LLC will not be held responsible for any labor costs incurred to construct your unit.

This warranty gives you certain specific rights that vary from state to state.

CLAIM PROCEDURE

To make a claim under this warranty, you can either call 1-888-827-9056 or email: customerservice@backyardproducts.com.

Please have ready the information below when you call or include the information in your email:

1. The model and size of the product.
2. A list of the part(s) for which the claim is made.
3. Proof of purchase of the Backyard Storage Solutions, LLC item, as shown on the original invoice or receipt.
4. Run code: found on exterior product label or assembly instructions enclosed in the product package.

All other inquiries can be mailed to:

Backyard Storage Solutions, LLC
Attn: Customer Service
1000 Ternes
Monroe, MI 48162

***WARRANTY TERMS MAY VARY OUTSIDE THE U.S.A.**

IMPORTANT: This is your warranty certificate.

10Y MV LDR: 3/20/2019