




INSTALLATION MANUAL

FOR SHOWER DOOR

INSTALLATION INSTRUCTIONS

Shower Door

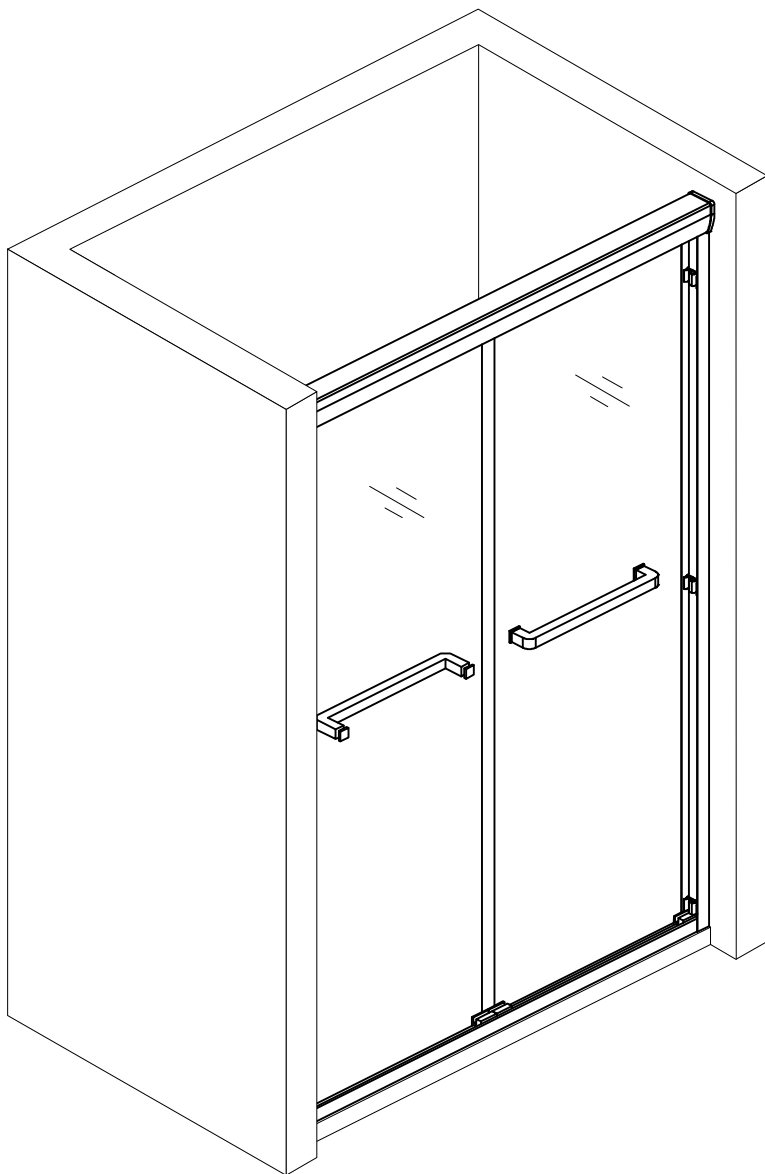

SAFETY INFORMATION

CAUTION

Please carefully read the following important safety information before handling or installing this shower door. There is a risk of serious injury while handling this product.

To minimize these risks, please note:

Always wear safety glasses and gloves while handling.

Always follow the installation instructions. Inspect glass for damage before installation.

Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.

Do not cut or modify the tempered glass as it will shatter if cut.

Carefully remove product from packaging and keep packaging until installation is complete.

Inspect all parts for damage or missing; If there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.

Cover the drain with tape to prevent the loss of small parts.

The shower base and finished walls should be installed before beginning the shower door installation.

During the installation, protect the shower floor with a drop cloth to avoid damage. This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!

Keep this installation manual for future reference.

NOTE: Two people should perform this installation.

NEED TOOLS



Safety Glasses



Silicone Adhesive Sealant



Tape Measure



Rags



Drill Bits



Drill



Screwdriver



Pencil



Hammer



Knife


















Glove



Spirit Level



ESSENTIAL ACCESSORIES LIST

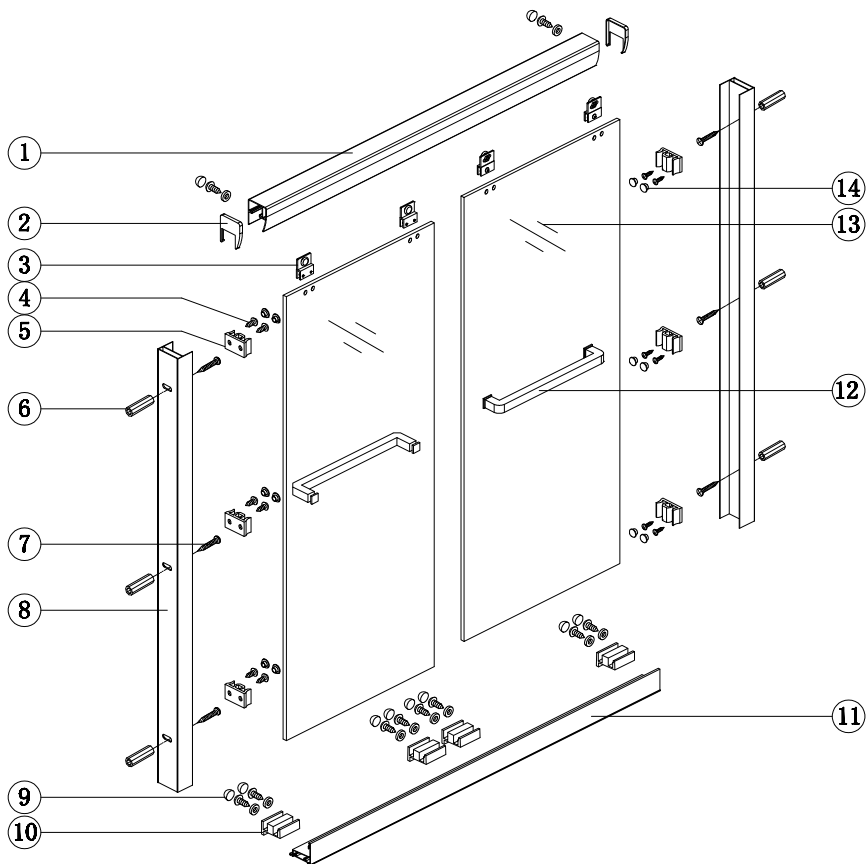



① Top Rail  1 Pc	② Decorative Cover  1 Pair	③ Roller  4 Pcs	④ S4x16 Screws  12 Pcs	⑤ Anti-collision Block  6 Pcs
⑥ Wall Plugs  6 Pcs	⑦ S4x30 Metric Screw  6 Pcs	⑧ Wall Jamb  2 Pcs	⑨ S4x16 Screws  10 Pairs	⑩ Slider Block  2 Pair
⑪ Bottom Rail  1 Pc	⑫ Handle/Towel Bar  2 Pcs	⑬ Door Panel  2 Pcs	⑭ Screw Caps  12 Pcs	

NOTE: Inspect all parts for missing prior to installation! Contact us for any part missing.


Step1: Measure dimensions.

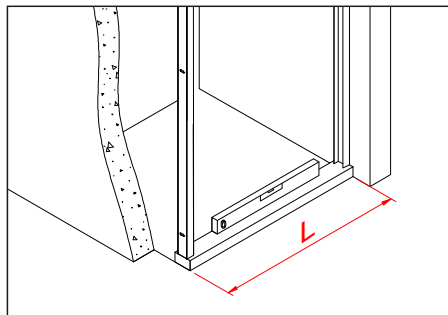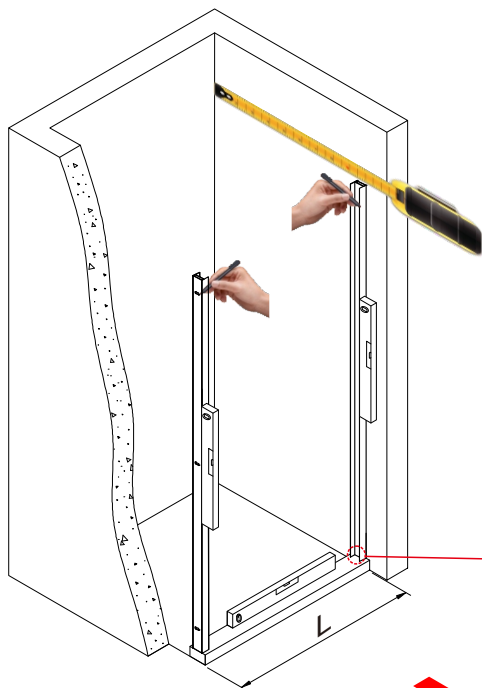


Determine the size of the shower opening.
if necessary, the top and bottom guide rails
(① and ⑪) can be cut (cutting both ends).

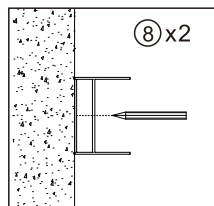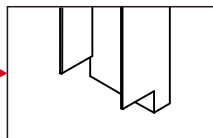


Place wall jamb ⑧
against the wall, use a level to ensure it is
horizontal and
perpendicular to the wall,
and use a pencil to draw
the position of the hole.

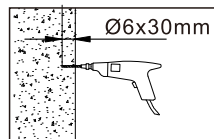


Drill the holes with
6*30 mm bore bit.


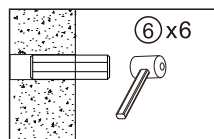


Insert the wall plugs ⑥
into the holes with a
hammer.




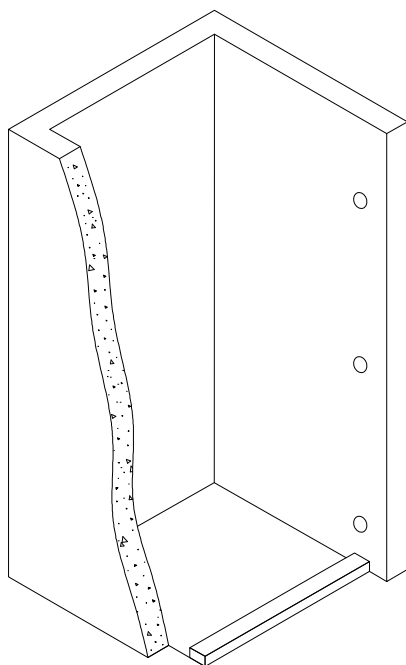


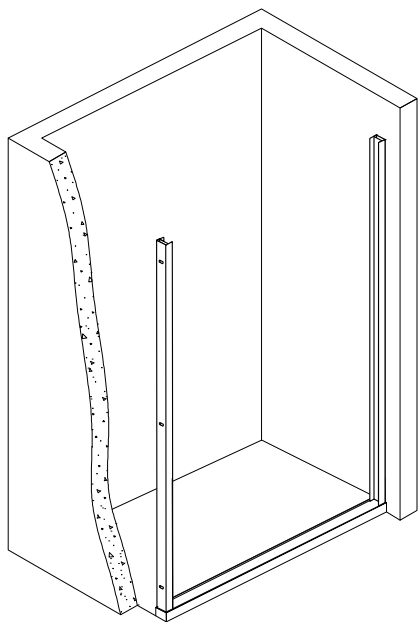


Step2:Place the bottom rail ⑪ on the base.

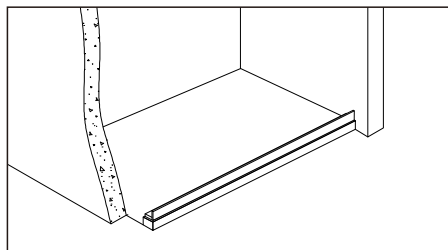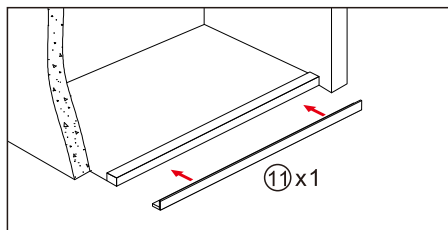


Step3:Attach the wall jamb ⑧ to bottom rail ⑪,
wall jamb with notch faces downward.
With the hole facing inward.
Screw in the screws ⑦.
Making sure the wall jamb is level.

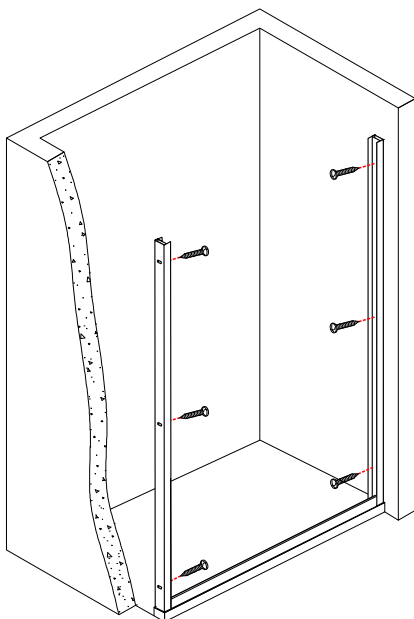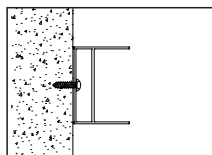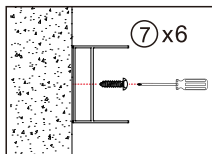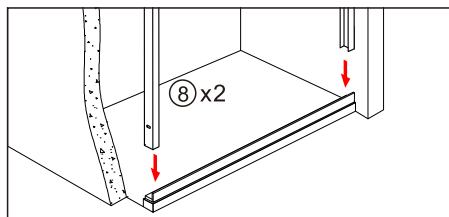

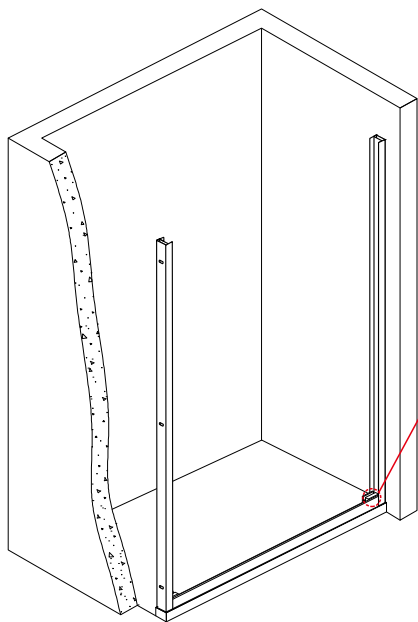

Step4:




Install the slider block ⑩ into the bottom rail.
Lock the slider block with the screws ⑨.
Install the decorative cover.

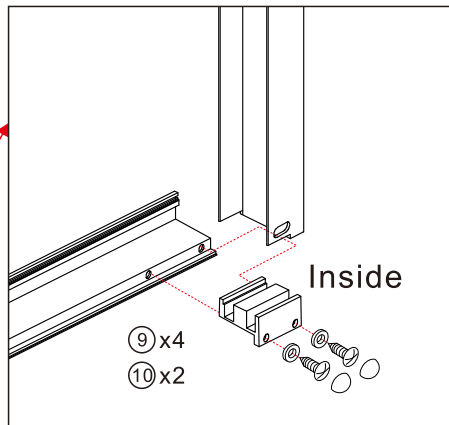


NOTE:Please pay attention to the installation direction of the slider, install one on the left and right.

Step5:

Install accessories ② on both ends of top rail ①.
Insert the top rail into the wall jamb ⑧.
Lock with the screws ⑨.
Install decorative cover

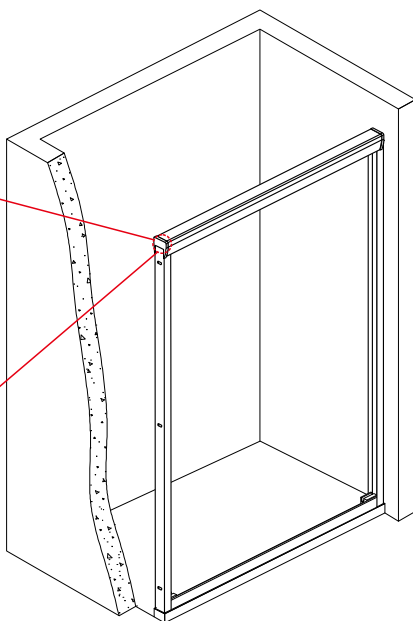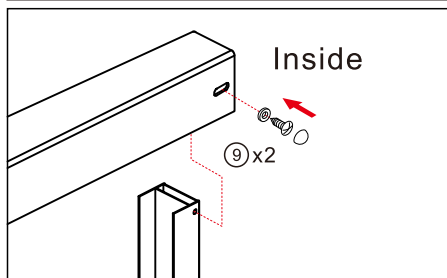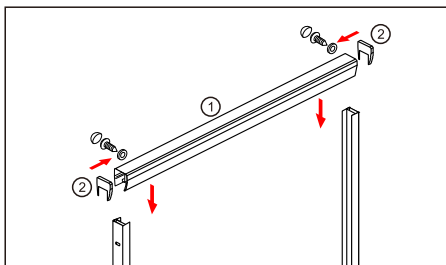

NOTE:The surface of the track is curved outward.


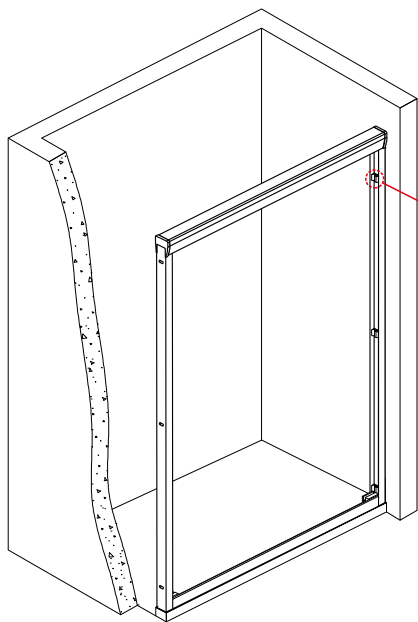


Step6:


Attach the anti-collision block ⑤ into the wall jamb ⑧.

Lock with the screws ④.



Install screw caps ⑭.

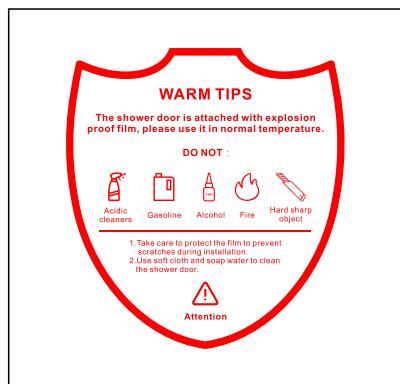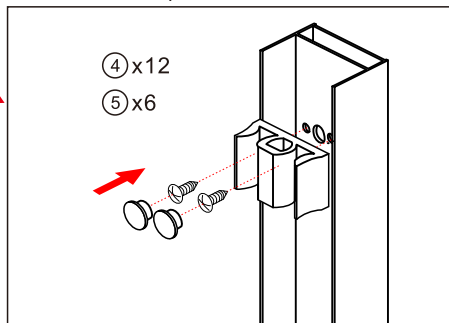

NOTE:Our shower door is affixed with explosion-proof film. Please install the side with the explosion-proof film prompt inside the shower room.

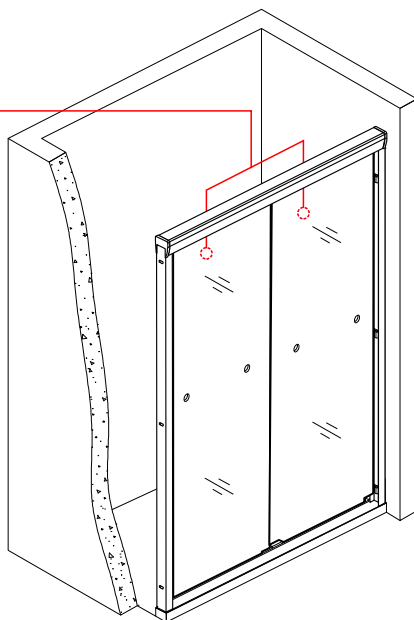


Step7:Install Roller ③.





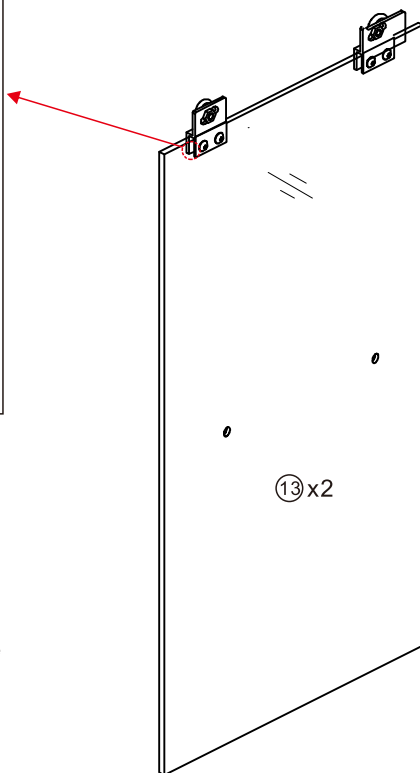
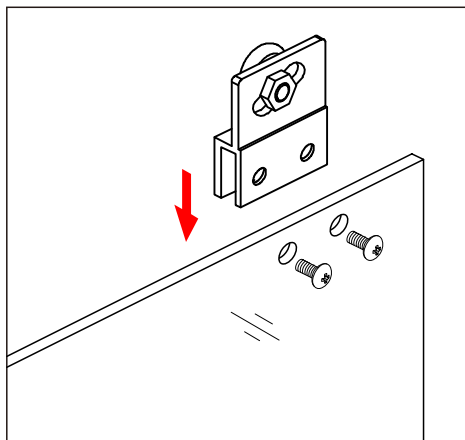


ADJUST ROLLERS NOTE:

1. The roller wheels ③ can be adjusted to better align the vertical edges of the door glass with the wall profiles if needed, to prevent leaks.
2. In order to adjust the roller wheels, remove that door ⑬ from the upper guide rail ①. Please make sure the glass is put on the padded surface.
3. Unscrew the screw first with screw driver.
4. Adjusting a roller wheel ③ up (higher in the slot) will lower the door glass ⑬, and adjusting a roller wheel down (lower in the slot) will raise the door glass.
5. Tighten the screw, put the door on the guide rail, gently move the door and observe the door whether aligns with the wall jamb.
6. Repeat step 2-5 until the door aligns with the wall jamb.


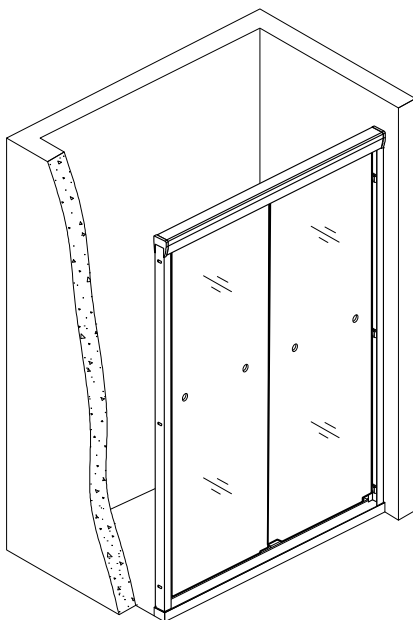


Step8: Install the door panel ⑬.
 Tips: Door panel with WARM TIPS label facing inward, tilt it upwards when hanging it.

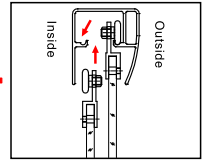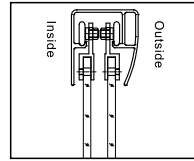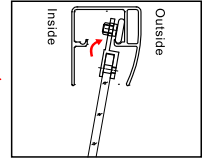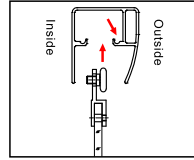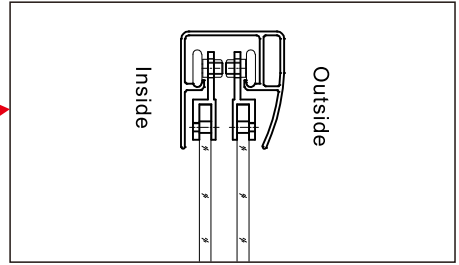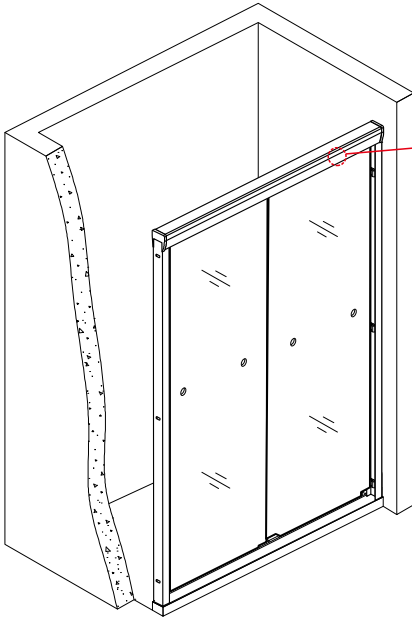

Step9:

Adjust and test the door panel.
 Install the bottom rail block ⑩.
 Tips: Push the glass panel aside,
 insert the bottom rail block,
 and adjust the position of the block.
 Use screws ⑨ to lock the slider block.

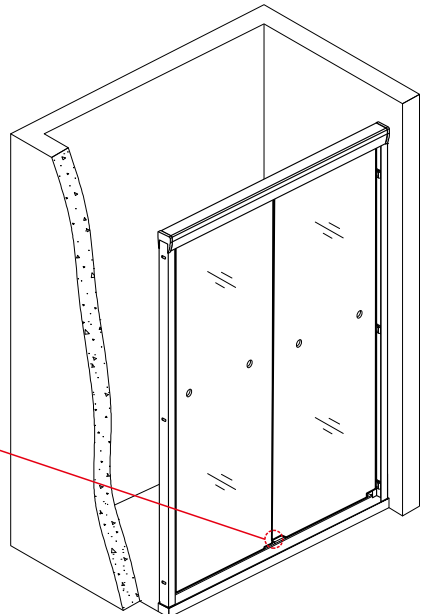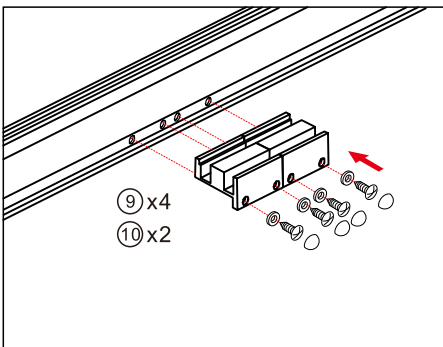


Step10: Test effect.

Test whether the glass door slides smoothly.

1. Whether the glass door panel can be pushed into the left and right anti-collision blocks smoothly.
2. Whether the bottom of the glass door panel is smoothly pushed into the bottom slider. If not, adjust the bottom rails, sliders, and wheels on the glass door.


IF NOT, YOU CAN TRY:

1. Adjust the roller wheel ③ to keep the glass door at the appropriate height.
2. Check whether the bottom rail ⑪ and wall jamb ⑧ are horizontal and vertical, then adjust the angle.

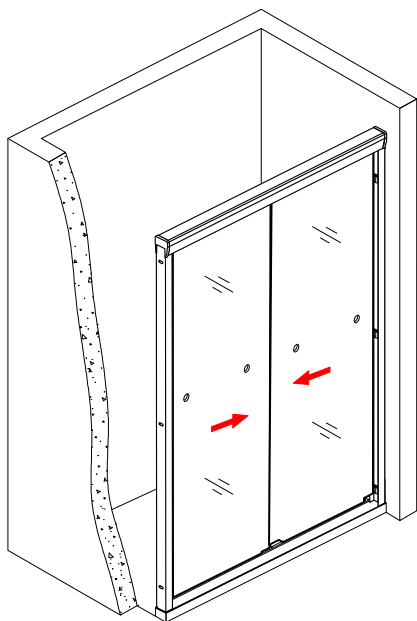

Step11: Install towel bar ⑫.


Unscrew the towel bar kit and install it on the door panel.

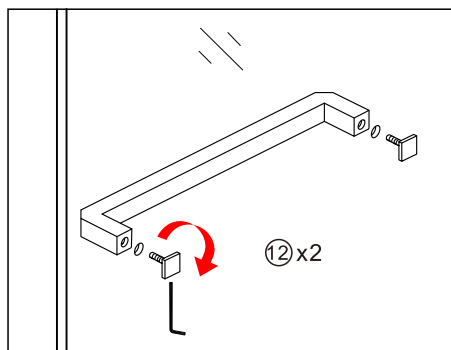

NOTE:


Don't over tighten!

Don't forget to install spacers on both sides of the door panel.

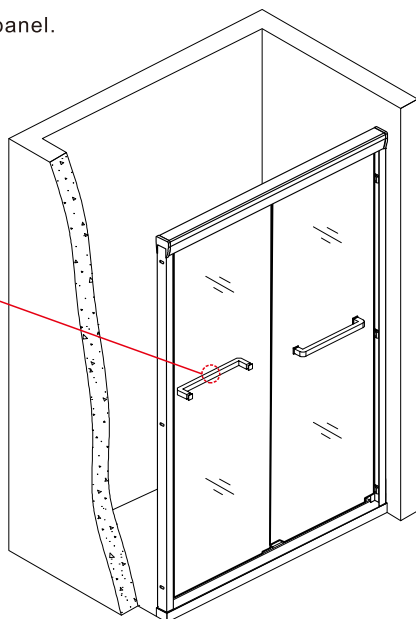

Step12: Sealing.

Apply 100% silicone sealant along the wall jambs inside and outside the shower, and apply along the threshold outside the shower.

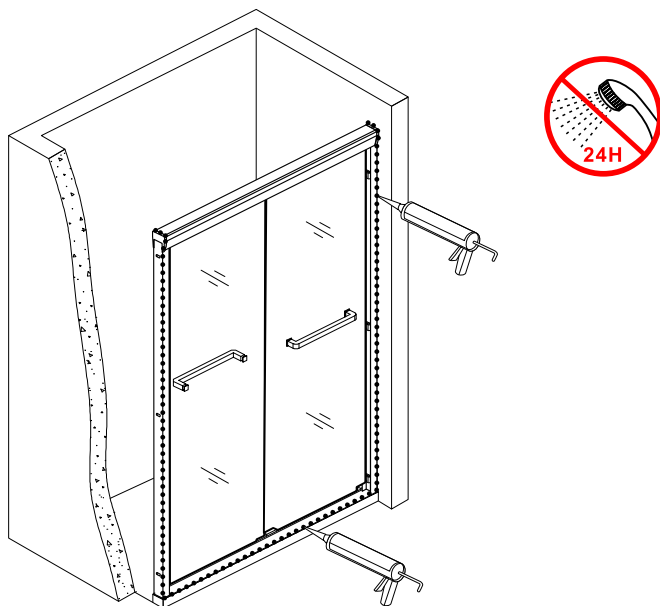


NOTE: The surfaces need to be clean and free of debris before applying silicone.

Ensure that the Shower door closes tightly and opens smoothly.

Apply a good quality silicone sealant along the wall Jamb and Bottom Rail.

Allow 24 hours for the silicone to cure before using the shower.

Use Painter's Tape to hold the Water seal tight in position while the silicone cures.

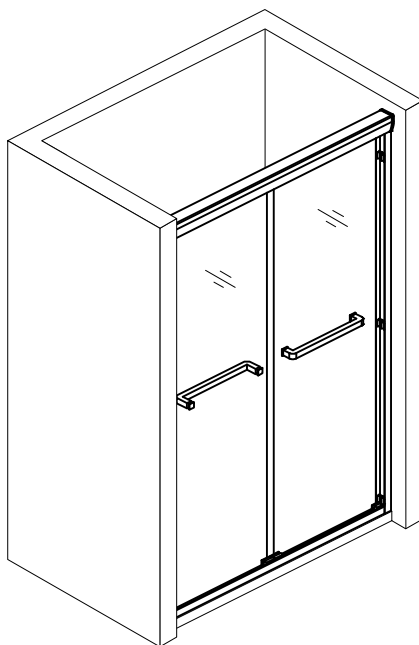

SHOWER DOOR MAINTENANCE MANUAL

Cleaning:

1. When cleaning the frame, glass and hardware accessories of the shower door, please use a soft cloth. If there is slight dirt, please use a soft cloth or sponge dipped in "neutral detergent" for cleaning. After removing the stubborn dirt, please rinse with plenty of water to prevent the cleaning agent from remaining on the surface of the shower door and causing corrosion damage.
2. When using the special detergent and cleaning agent for bathroom, please be sure to use it correctly according to the precautions described in the detergent. Incorrect use will cause the product to have some bad conditions, such as paint peeling, color fading, rust, tarnishing, etc.
3. Do not use the following items for cleaning: acid, alkaline solvents, medicines (such as hydrochloric acid), solvents containing bleach, acetone diluent, detergent powder, toilet cleaner, etc, otherwise the product will be damaged. There are some bad conditions, such as paint peeling, discoloration, rust, tarnishing, etc.
4. The cleaning items that can be used for the product are: soft cloth, toothbrush, neutral detergent, a mixture of diluted vinegar and salt. Note: any cleaning agent will have a certain impact on the surface of the product, so use caution. Rinse with clean water in time to prevent damage to the surface caused by the residual detergent.

How to use and maintain the pulley of the shower door:

1. Avoid hitting the movable door with force, so as not to cause the movable door to fall off.
2. Pay attention to regularly clean the slide rails, pulleys and sliders, and add lubricant (lubricating oil or lubricating wax).
3. Regularly adjust the fixing screws of the pulley to ensure the effective bearing and good sliding of the pulley on the movable door.

Maintenance of tempered glass:

1. Do not hit or hit the glass surface with sharp objects to avoid damage.
2. Do not wipe the glass surface with rough objects to avoid scratches.
3. After using for a period of time, the glass will remain dirt, remove the dirt on the glass. you can use a mixture of cool and salt to wash with a toothbrush, you can remove the stains. Pay attention to rinse with clean water in time after use.

THANK YOU FOR SHOPPING WITH US!




**PLEASE DO NOT RETURN TO STORE!
PLEASE CHECK ALL THE ACCESSORIES
BEFORE INSTALLATION.**

Tips: If there is any questions for the products, please feel free to contact us. We will solve it at the first time.

For quick and better to solve problem for you,
Required information is a MUST:

1. Where you buy
2. PO Number/Tracking number
3. SKU Number
4. Problem to Clarify
5. Picture/Video

Email: servicefast1@outlook.com

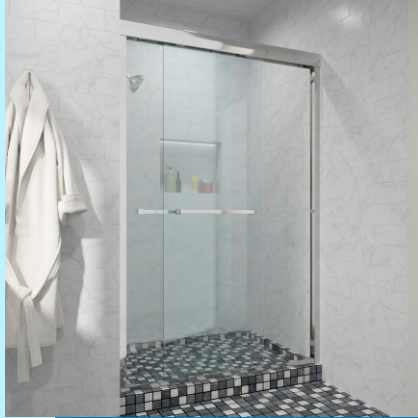

Bring Better Life for You!

Email: servicefast1@outlook.com