


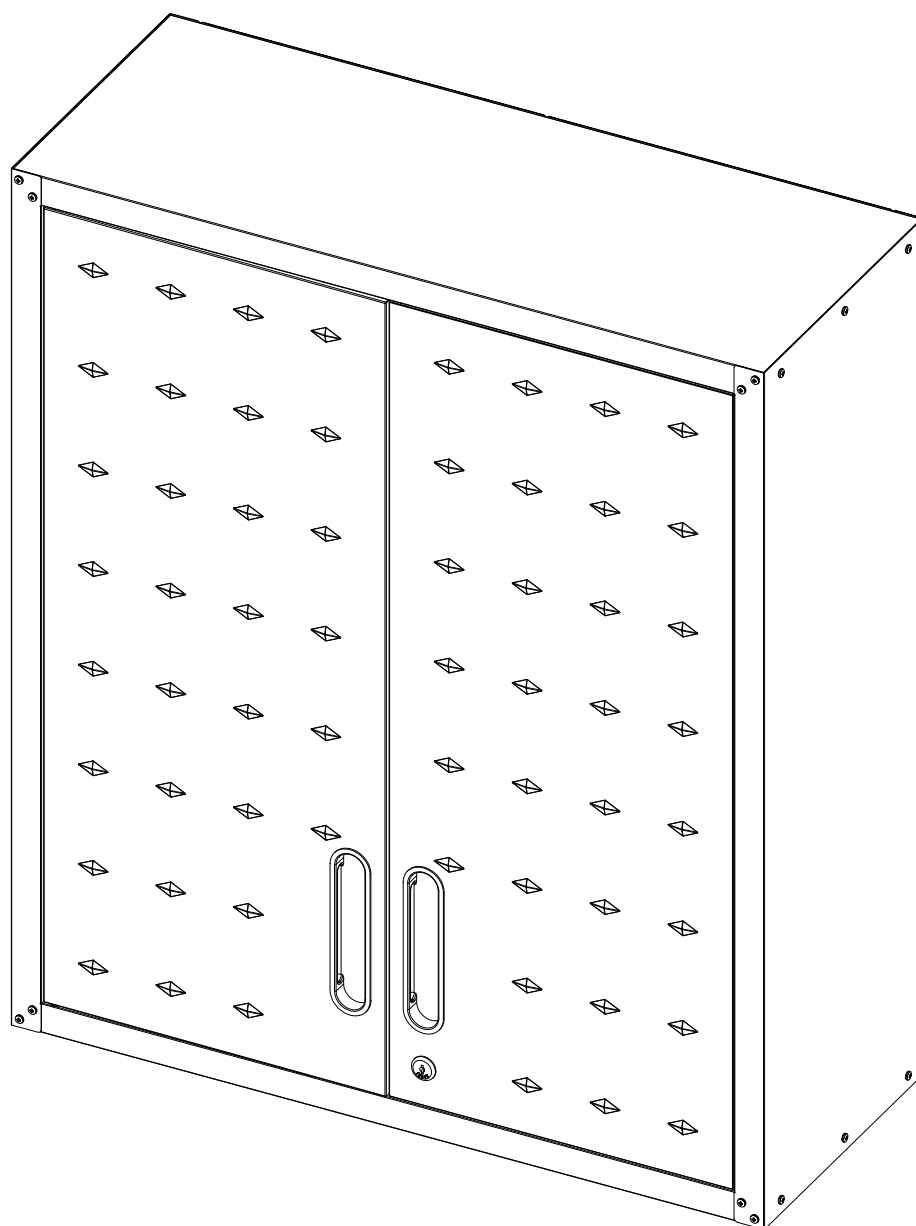
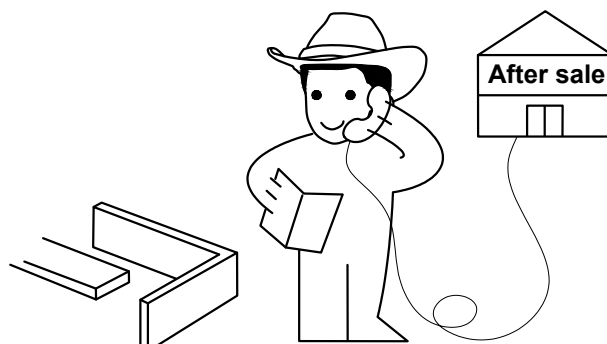
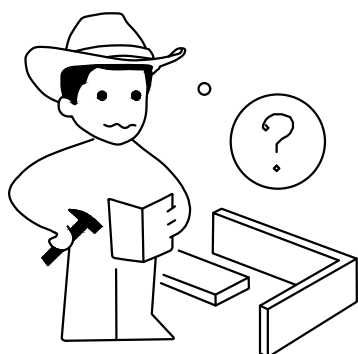
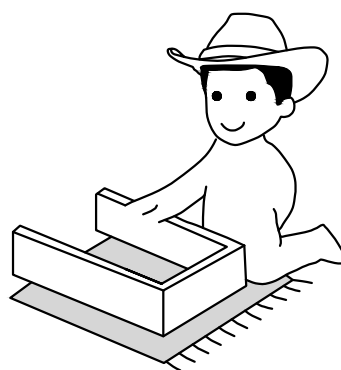
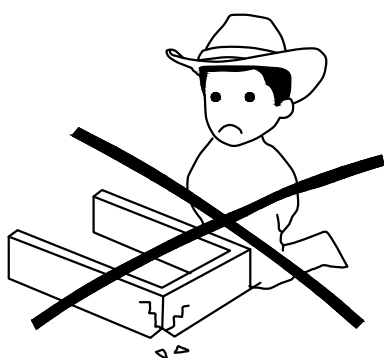
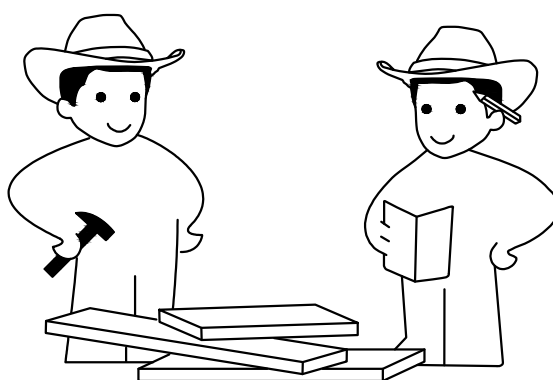
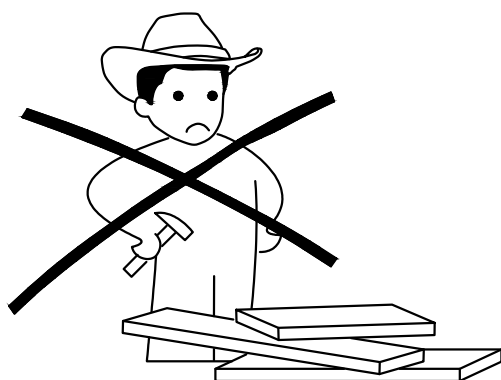

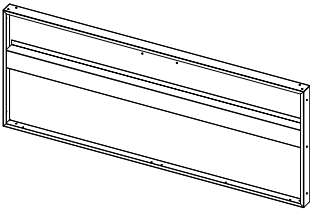
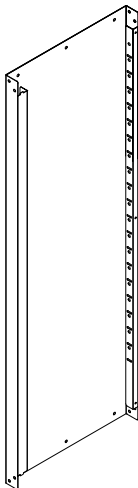
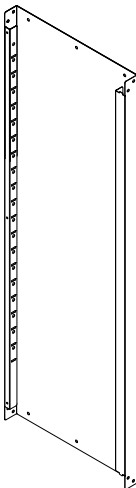
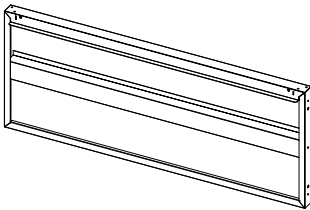
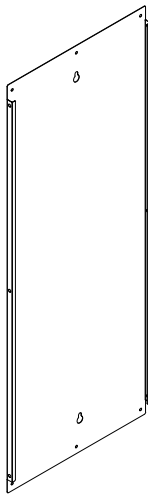
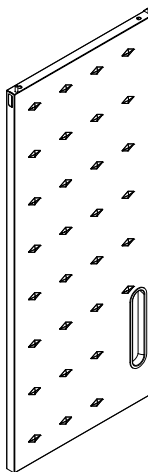
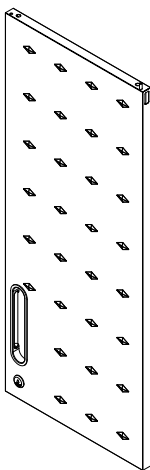
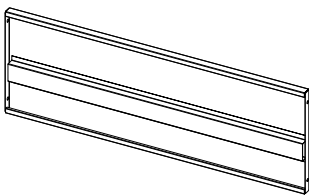





Installation video




1×1		2×1		3×1		4×1	
							
5×2		6×1		7×1		8×1	
							
A×48	C×3	F×4pcs	Q×4	S×1	R×2	U×4	V×4
 M4× 8mm 0.3inch							 M8  M5  M5×40 mm
							



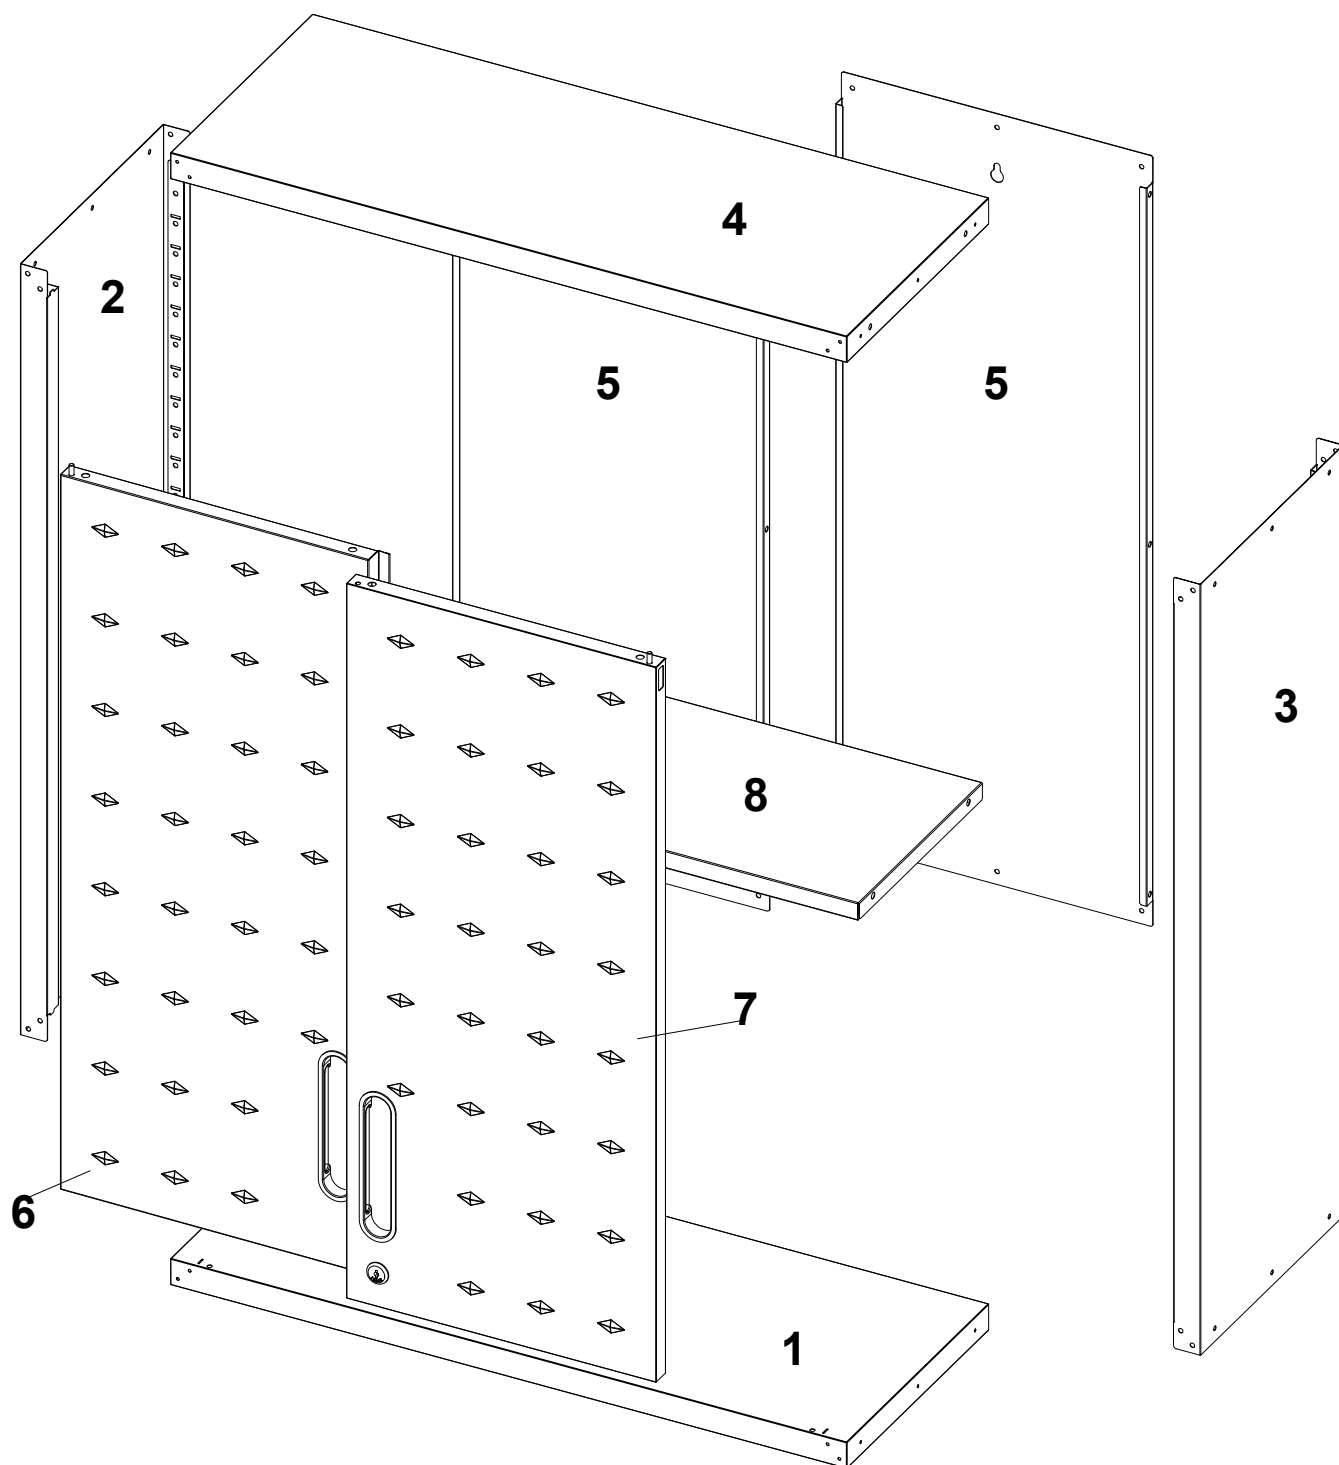


1



Align the lower buckle of side panel 2 with the slot at the top of the toolbox bottom plate, and then lower it down so that side panel 2 is stuck at the top of the toolbox floor

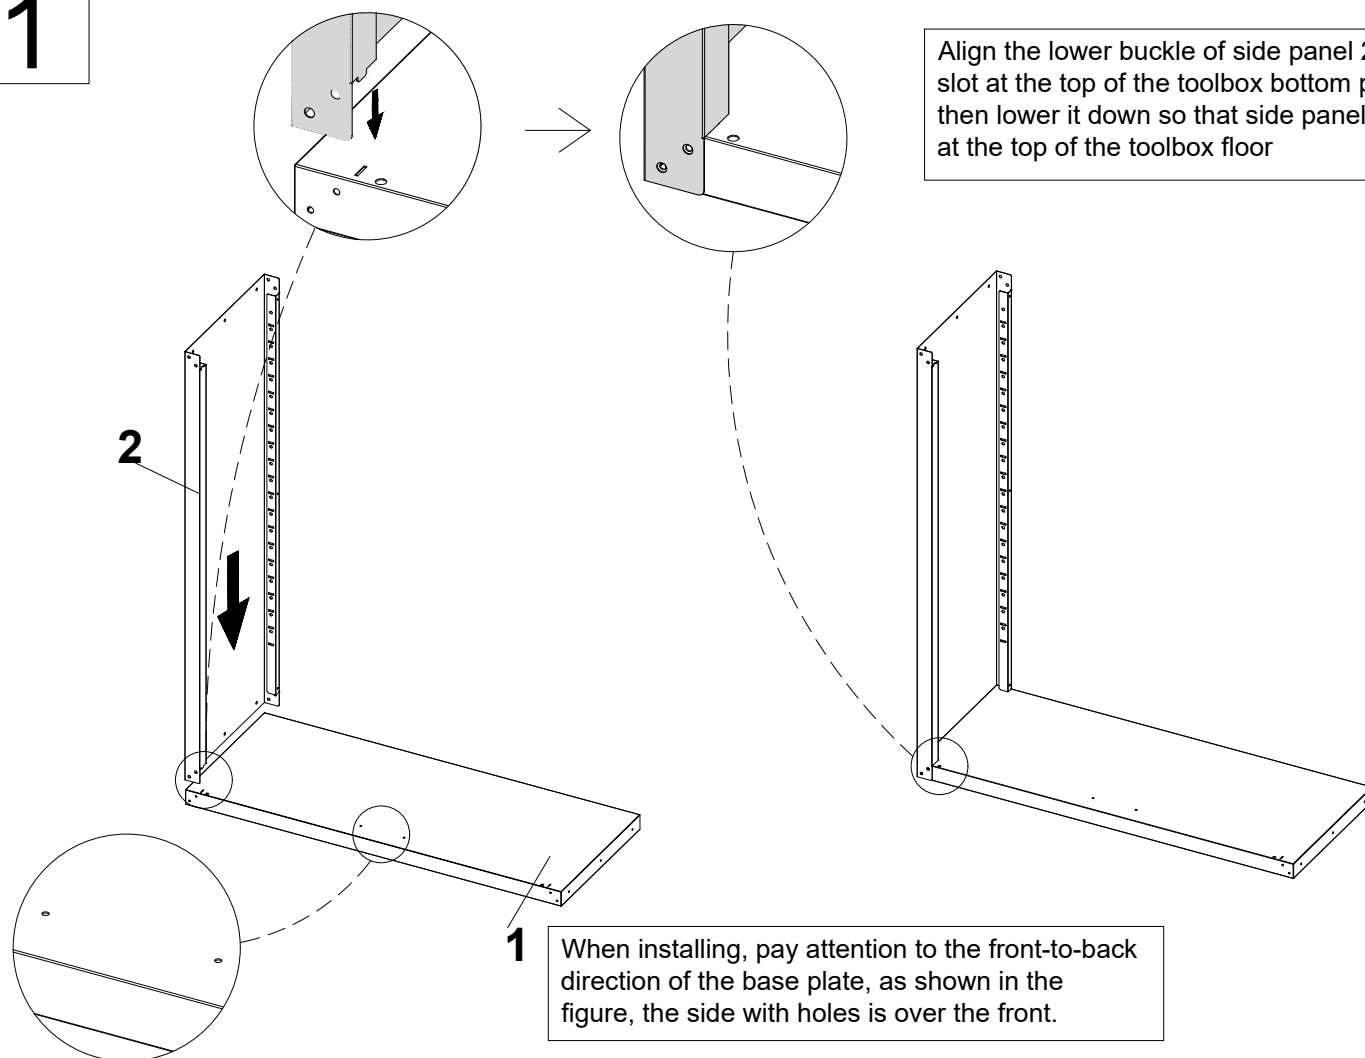

2



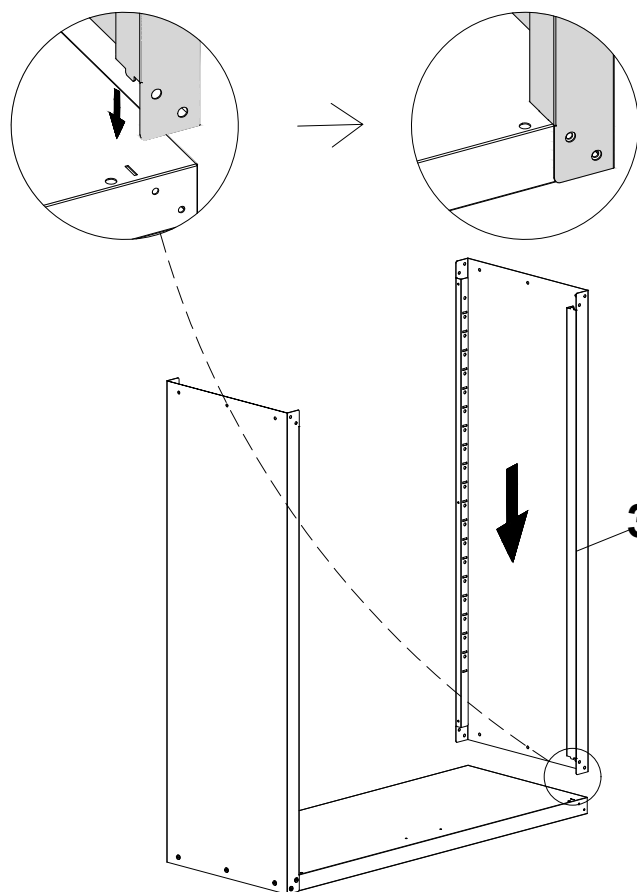
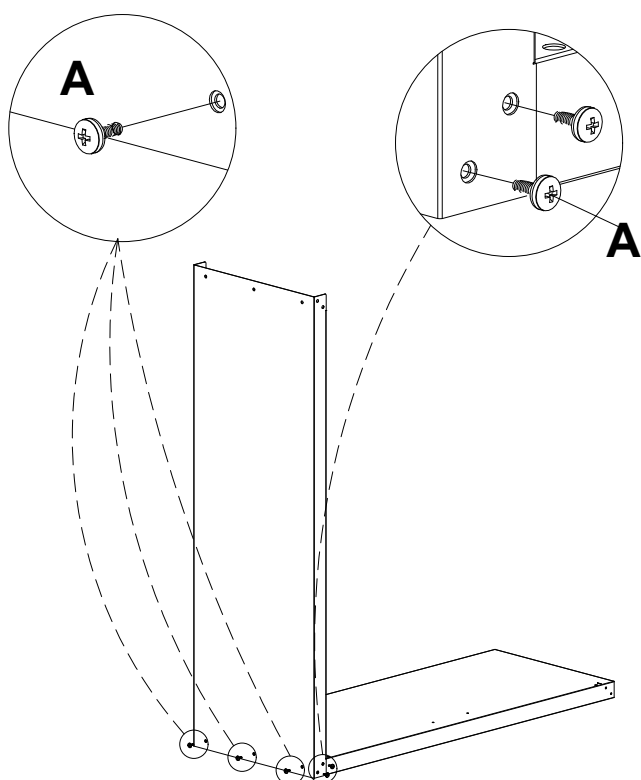



3

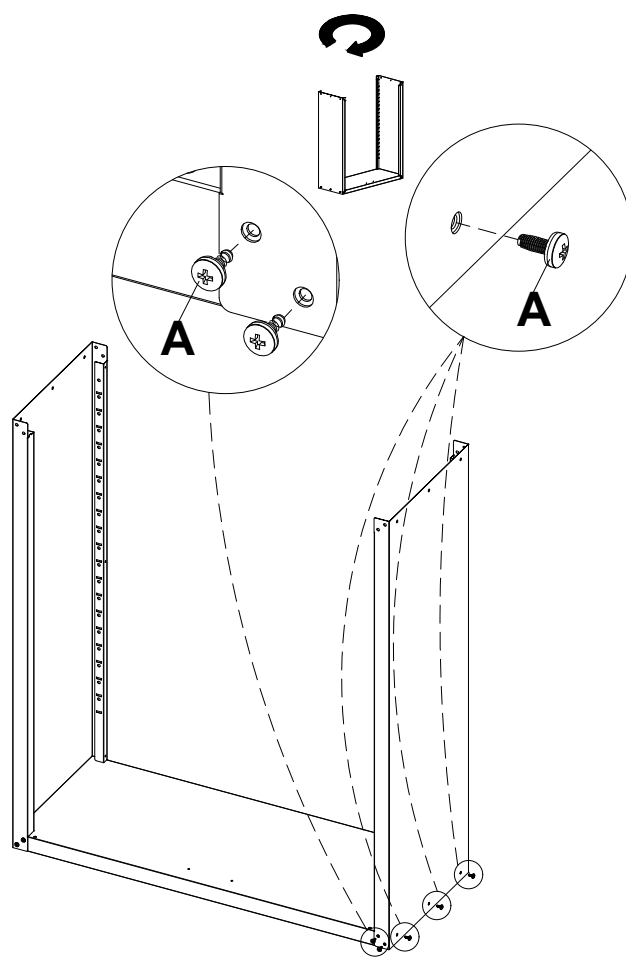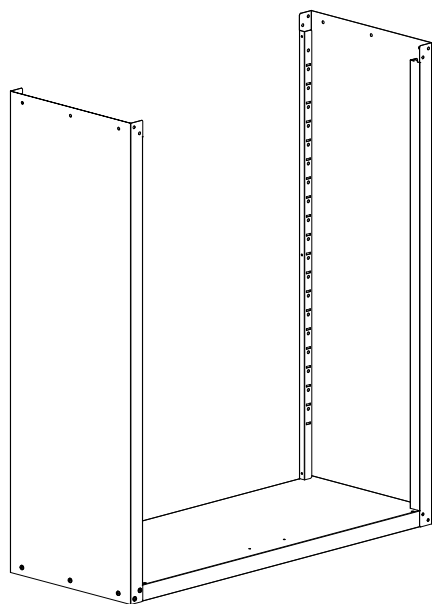


4

Align the card slots on both sides of the lower end of panel 4 with the buckles on the top of side panels 2 and 3, then lower it down so that panel 4 is stuck on the top of the toolbox

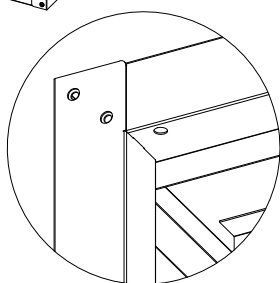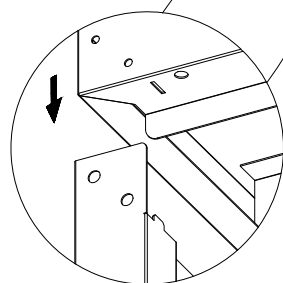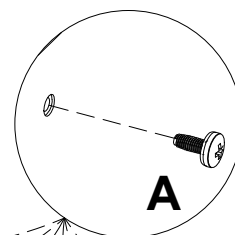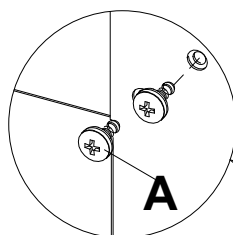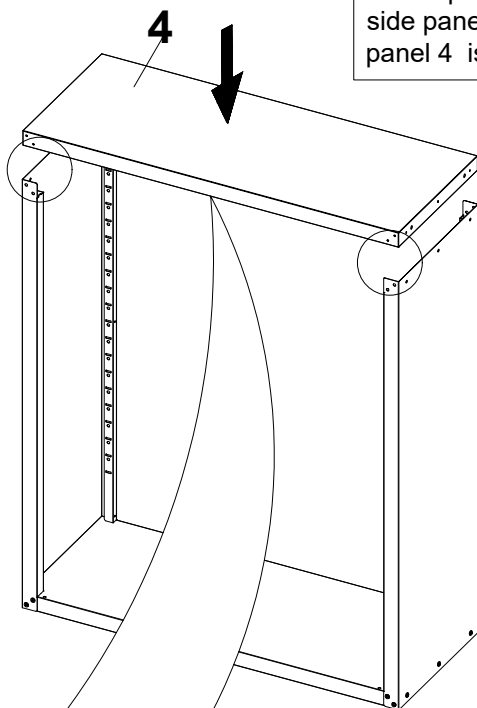



5

put three bolts and nuts to hold them in place

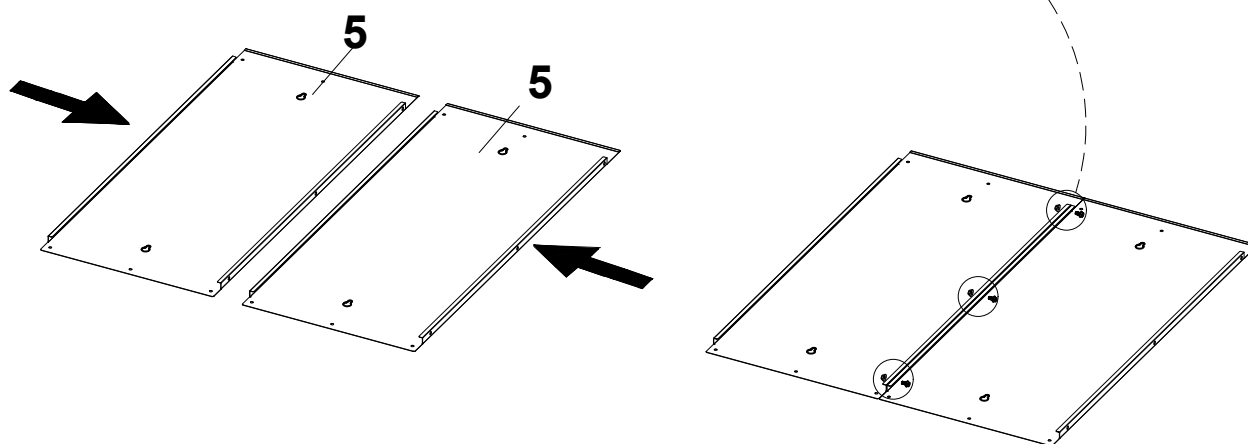



 **C×3**

6

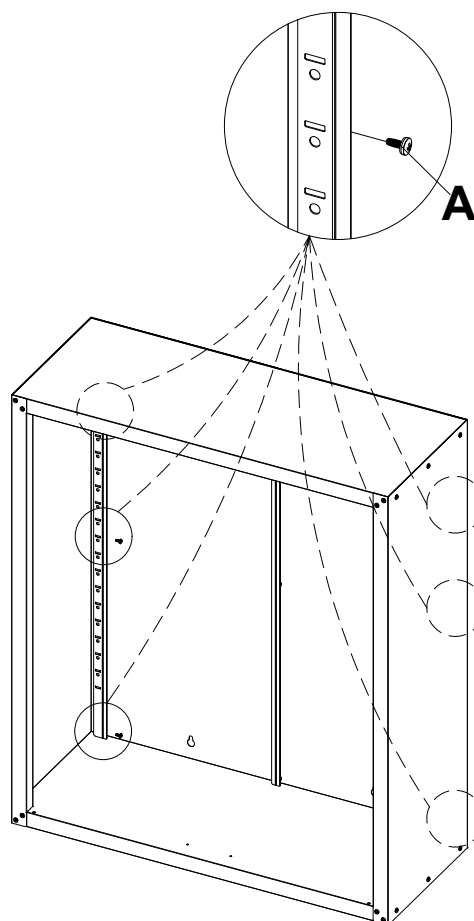
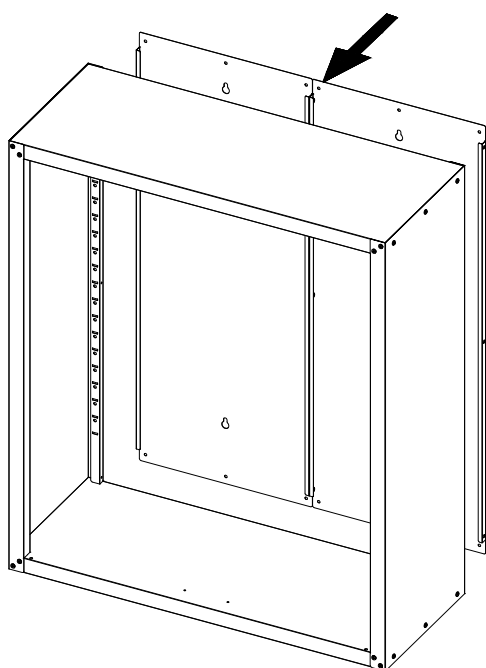


 **A×6**

7

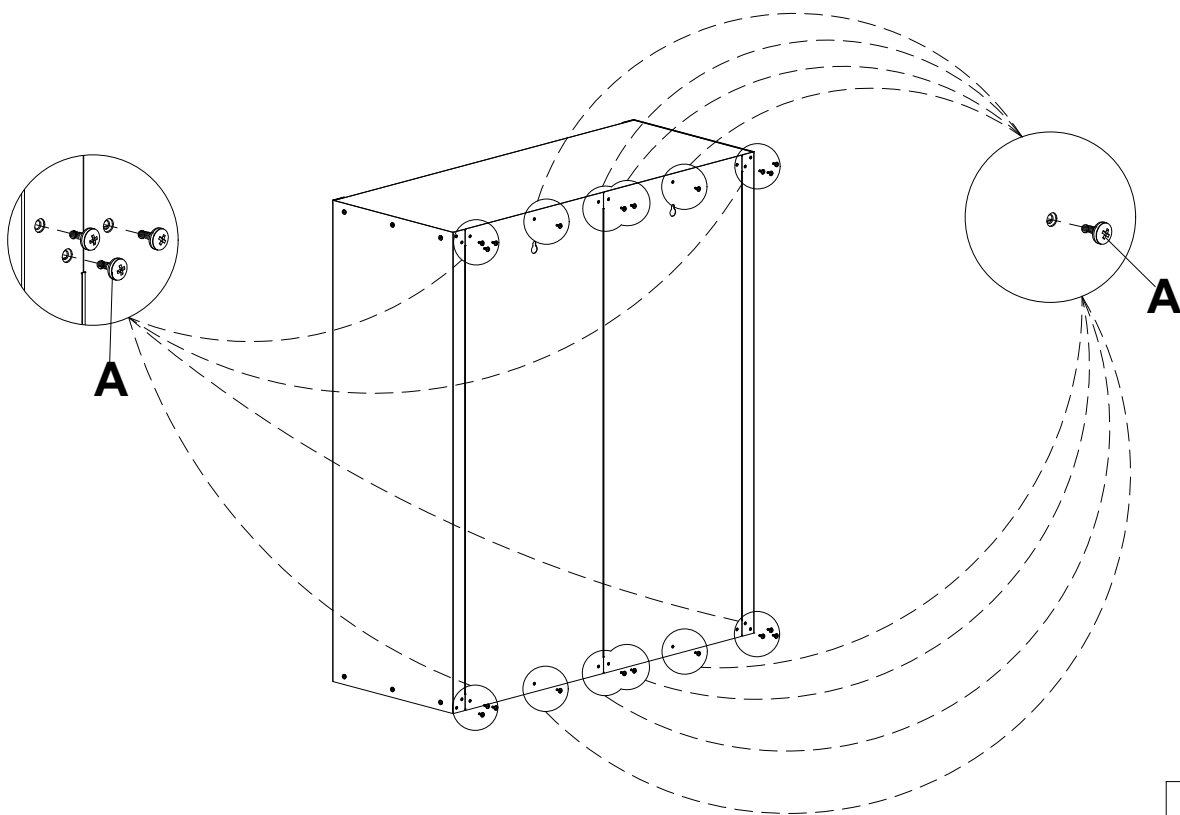


8

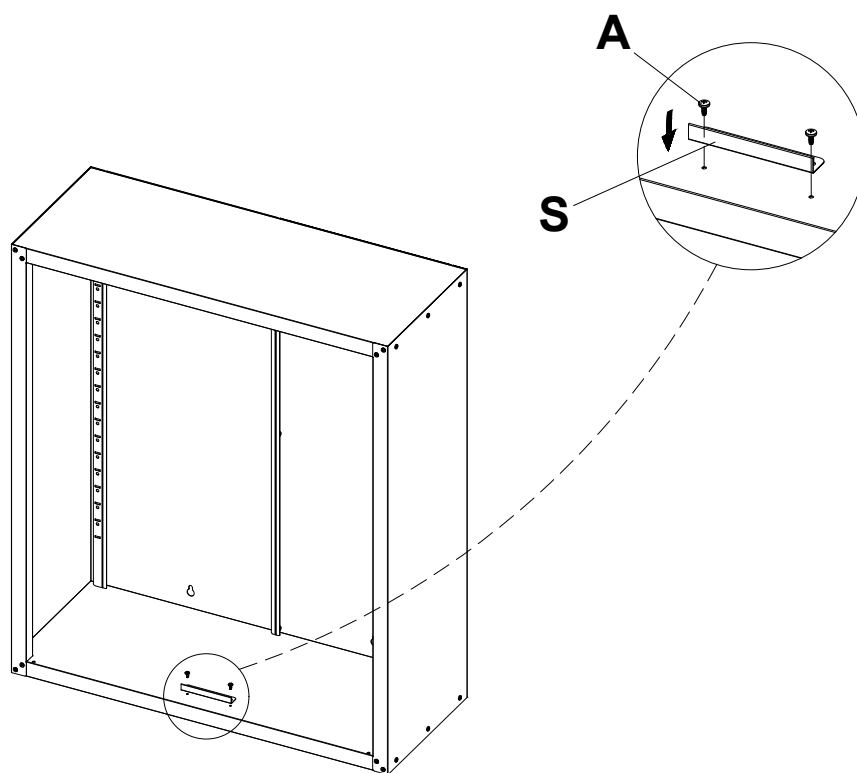

Sx1




9

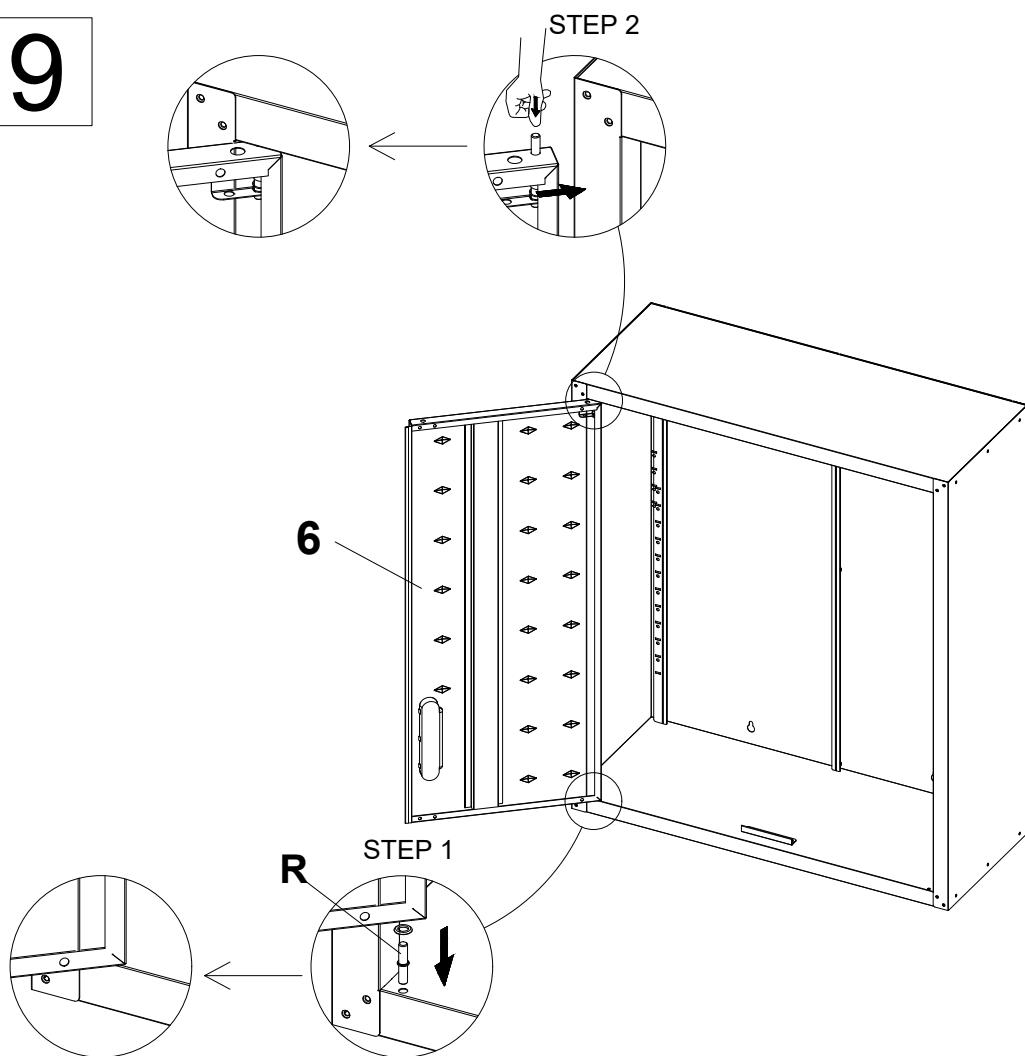


R×1

10

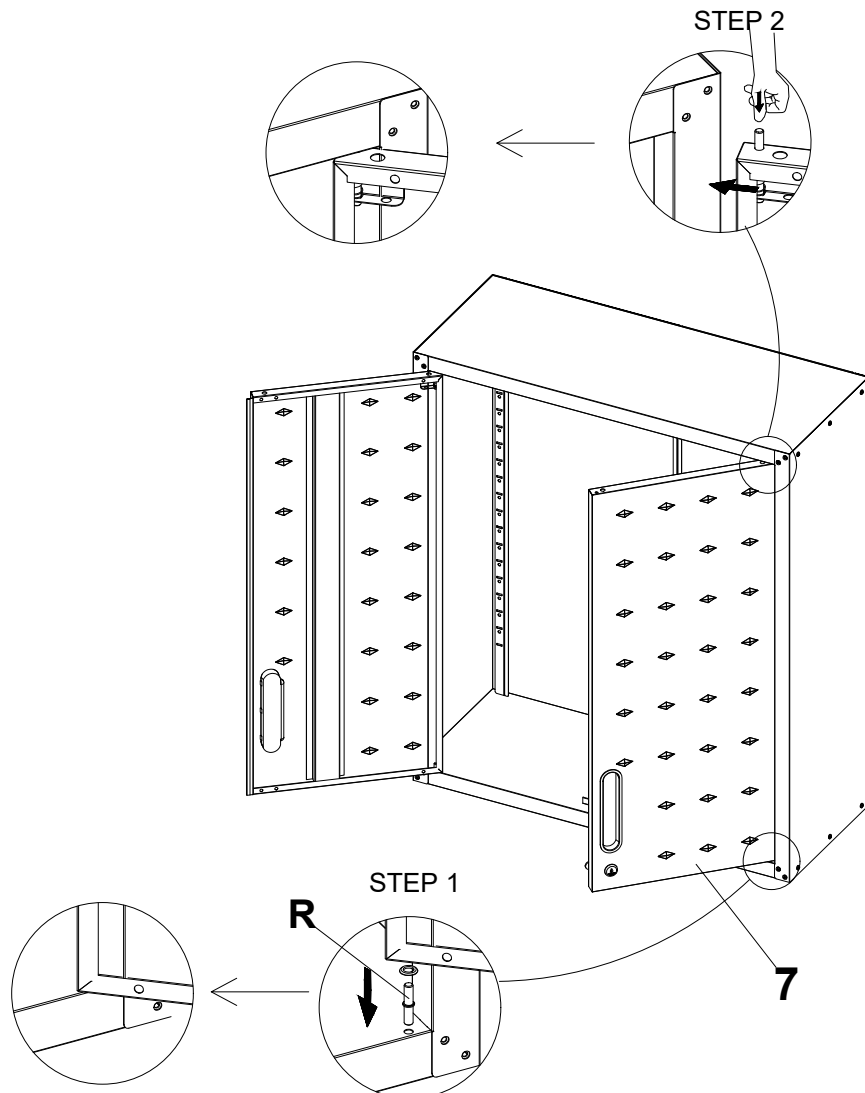



R×1

11

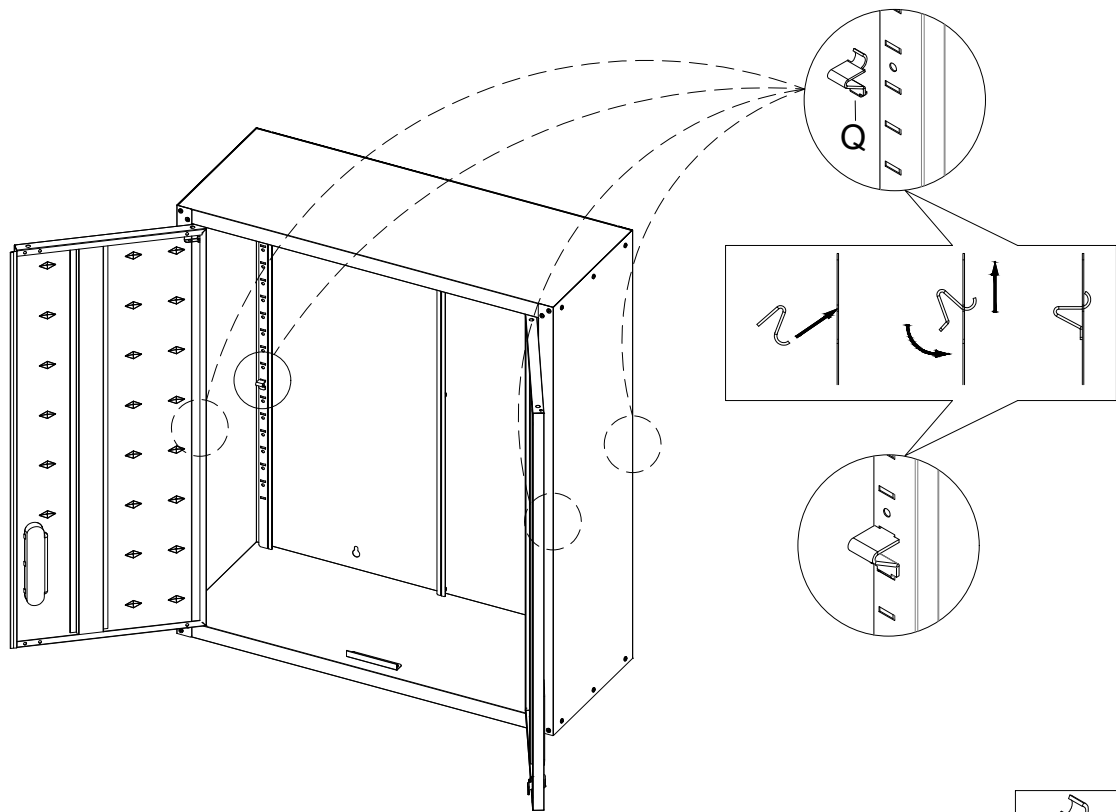



Q×4

12

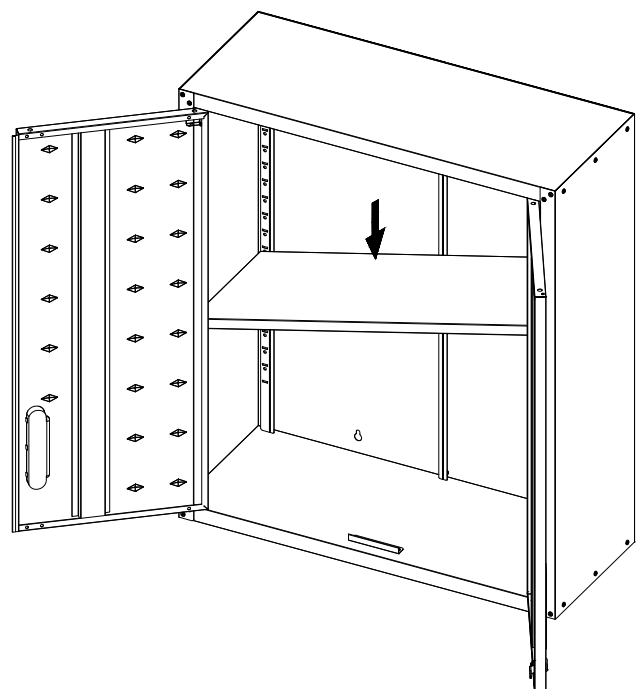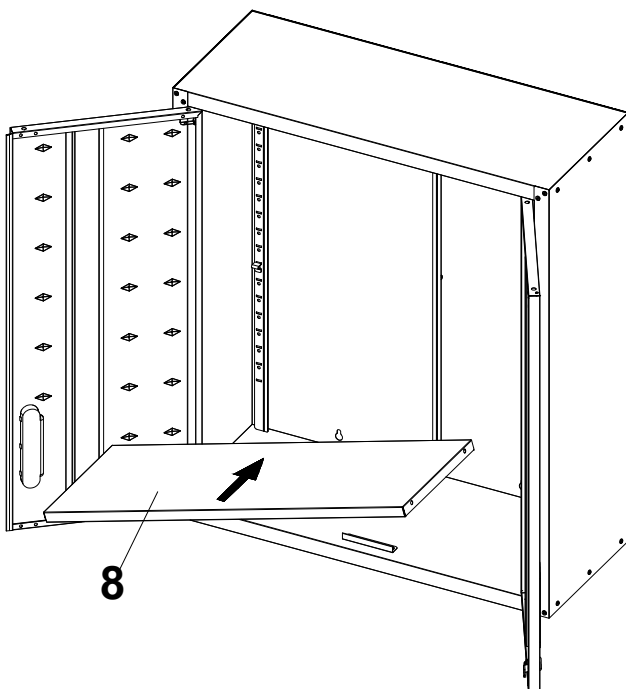


13

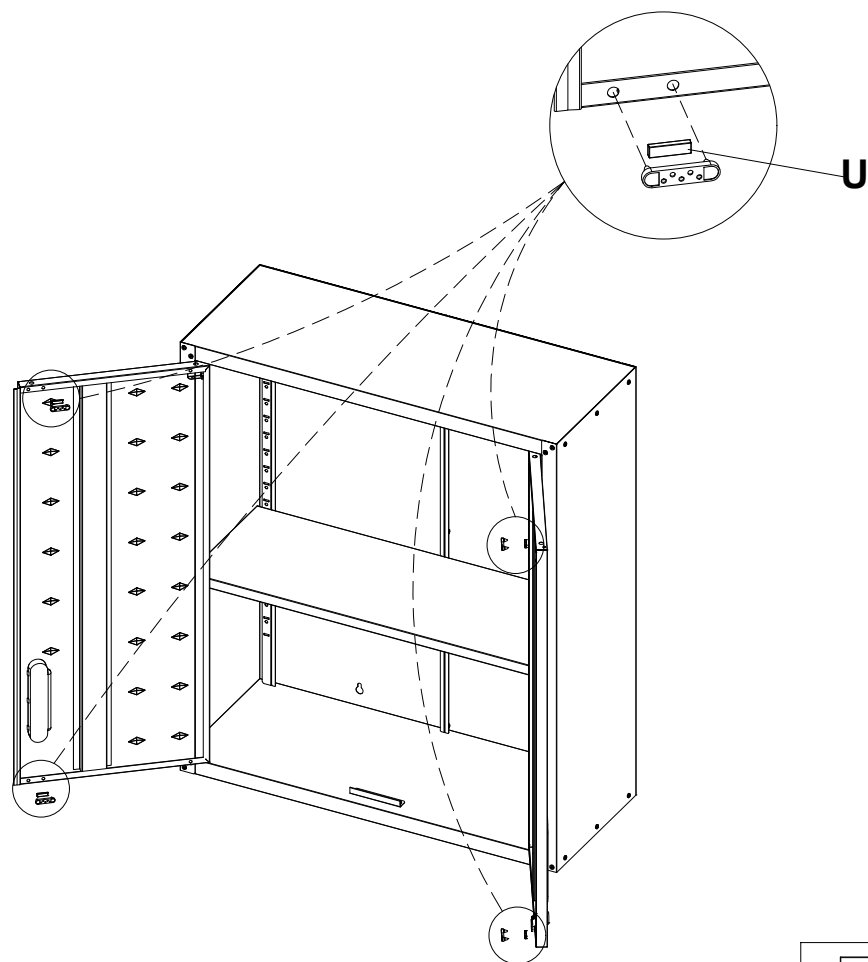


 **U×4**

14

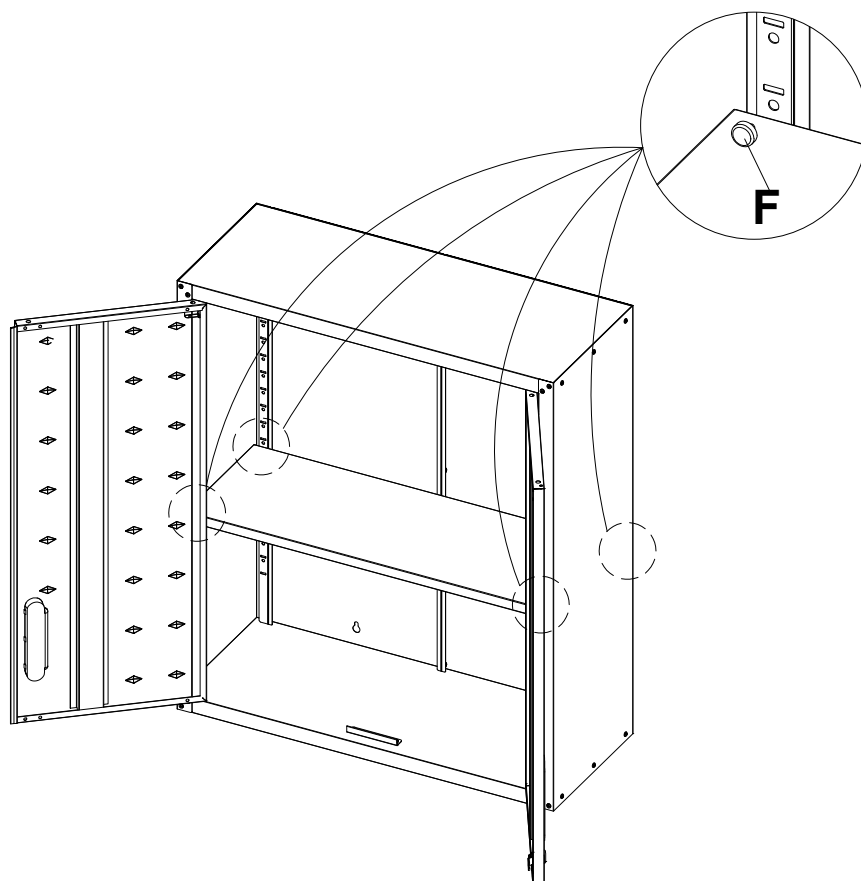

 **F×4**

15

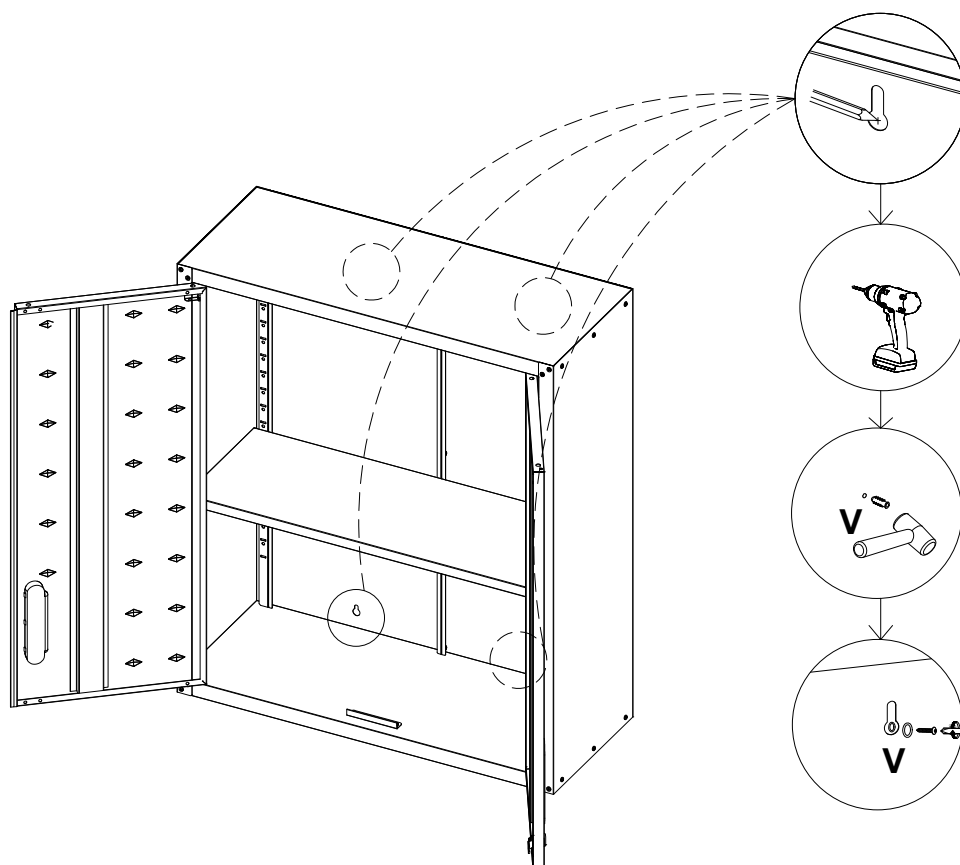

 **Vx4**

