
10X12 FT

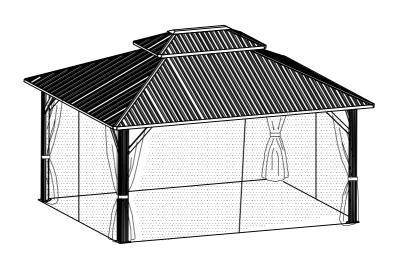

Item no.	Reference Image	Qty.
A		X4
B		X2
B1		X2
B2		X2
B3		X2
Ea		X4
Eb		X4
3		X4
(1)	• • • •	X4


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
F2	0 0 0	X4	D		X1
Gl		X2	M		X1
G2	· · · · · · · · · · · · · · · · · · ·	X2	N		X12
G 3	>	X2	NI		X4
G4		X2	P		X4
G5		X2	0		X4
G 6		X2	•		X4
G		X2	Z		X56
G 8		X2	Z1		X24
(1)		X4	0		X104
A		X4	W		X4
K		X4	W1		X4
K1		X4	W2	0)	X4


Item no.	Reference Image	Qty.
W3		X4
0		X4
Y		X104
VI		X2
V 2		X2
V 3		X2
Q1		X2
Q 2		X2
Q 3		X2
Q4		X2
©3 ©4 ©5 ©6		X2
		X2
S		X2


Item no.	Reference Image	Qty.
Sa		X2
R1		X2
R2		X2
R3		X2
R4		X2
R5		X2
R6		X2
R7		X2
R8		X2
SI		X2
S2		X2
<u>S</u>		X2
S4		X2

Item no.	Reference Image	Qty.
1	M6X16mm	X144
2	M6X23mm	X64
3	M6X25mm	X8
4	ST4.8X12mm	X24
5	M6X10mm	X8
6	M6X42mm	X4
7	9 M6X47mm	X28
8	(9) M6X15mm	X16


Item no.	Reference Image	Qty.
9		X12
10	9 M 5X12mm	X20
11		X2
12	S4	X1
13	S5 S6	X1
14		X12
16	Î	X12
17)		X4
18		X4

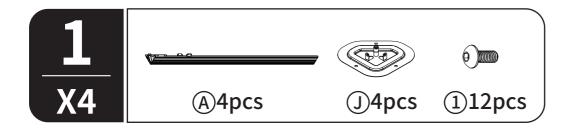


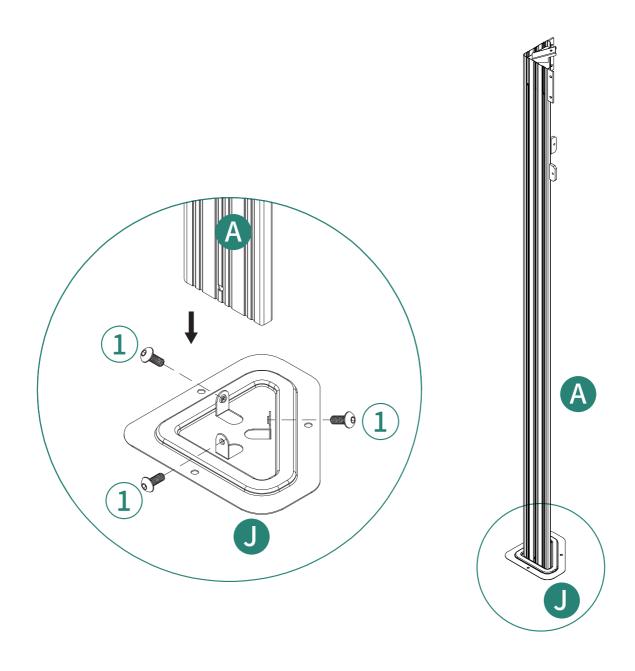


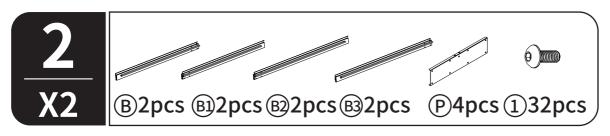



When connecting B and B1 via P, B2 and B3 via P, make sure that 1 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

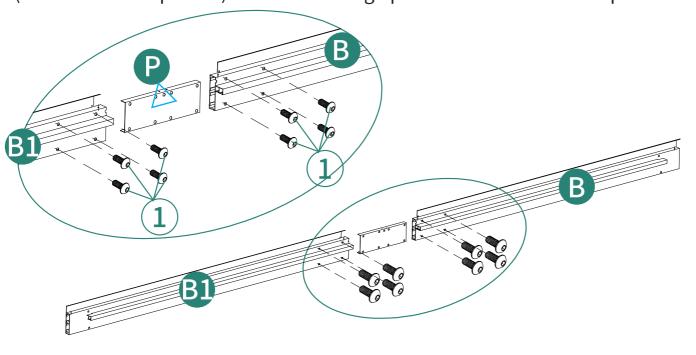


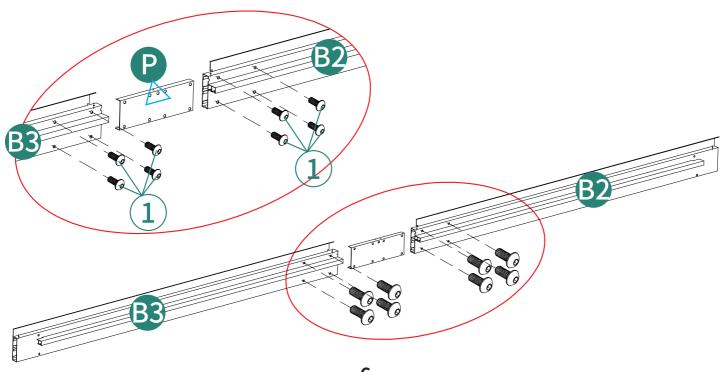


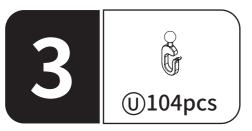


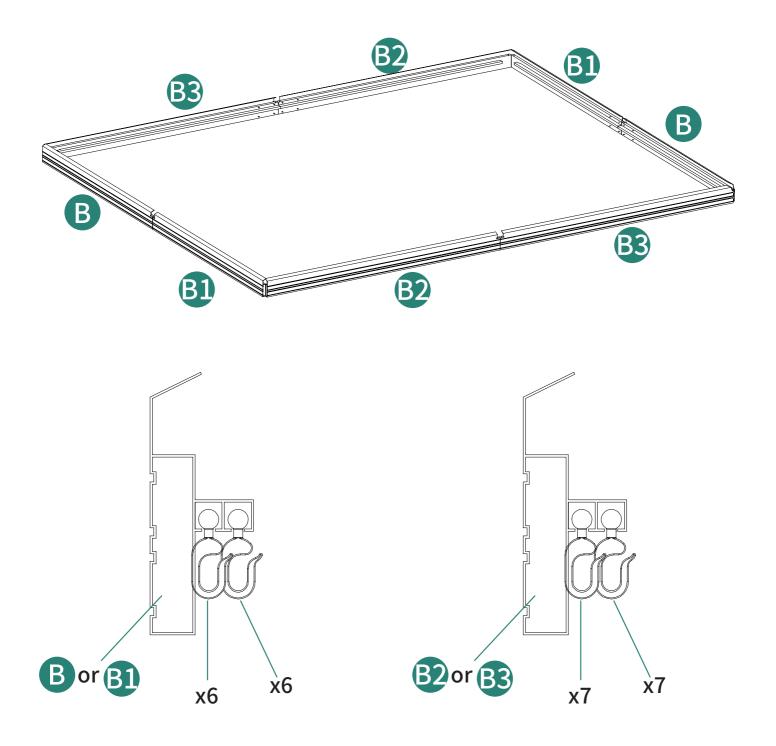


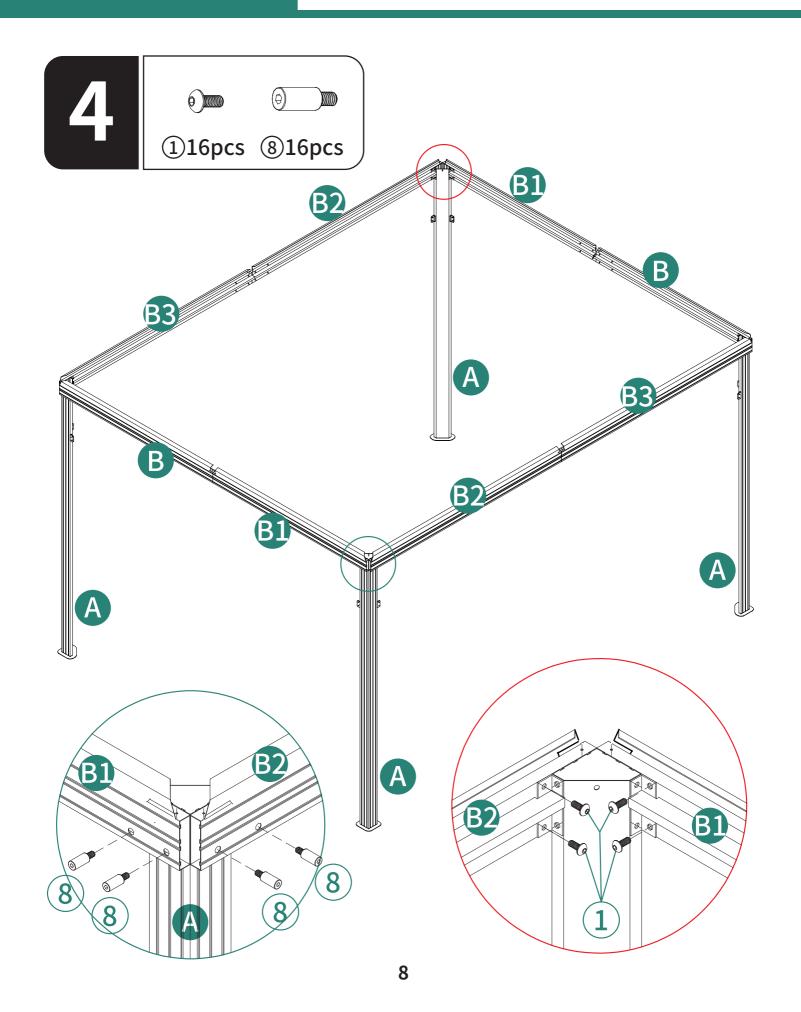


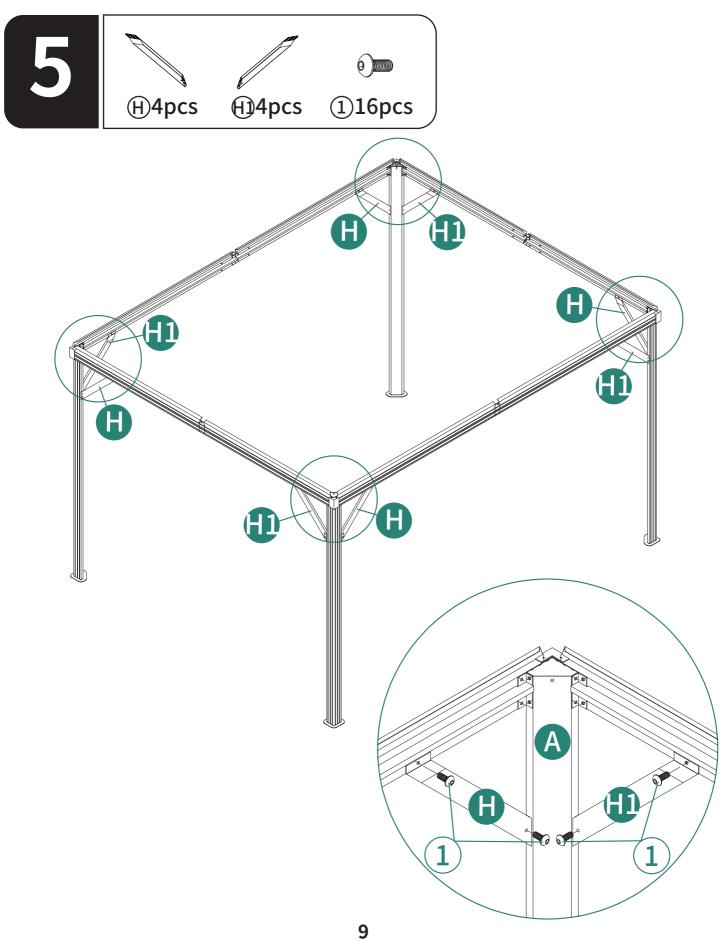


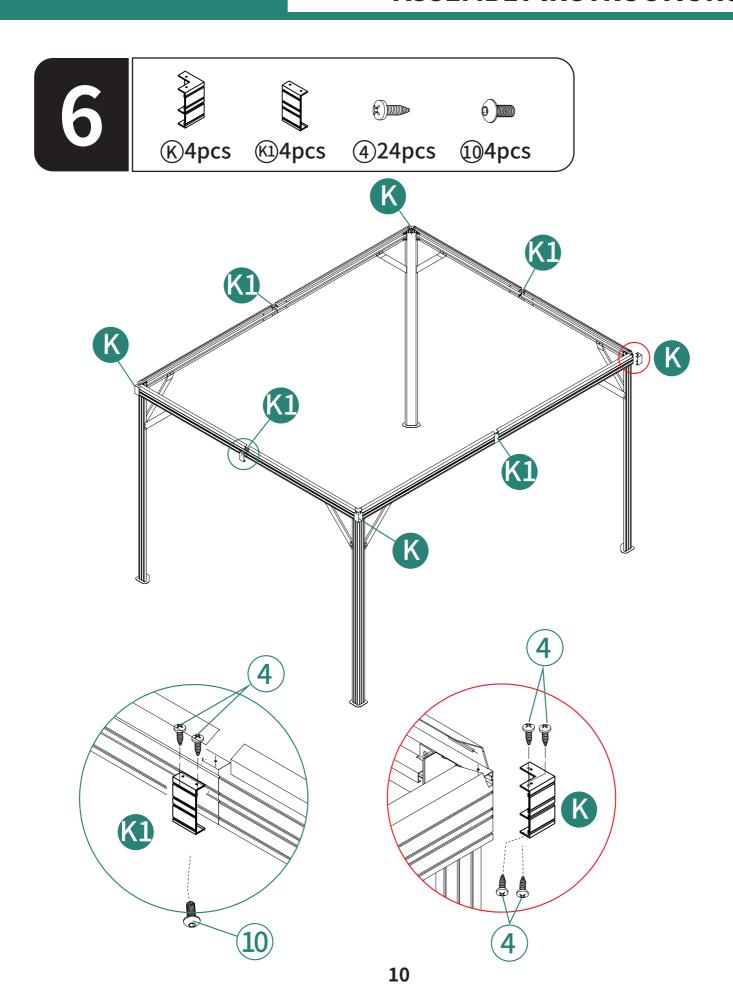


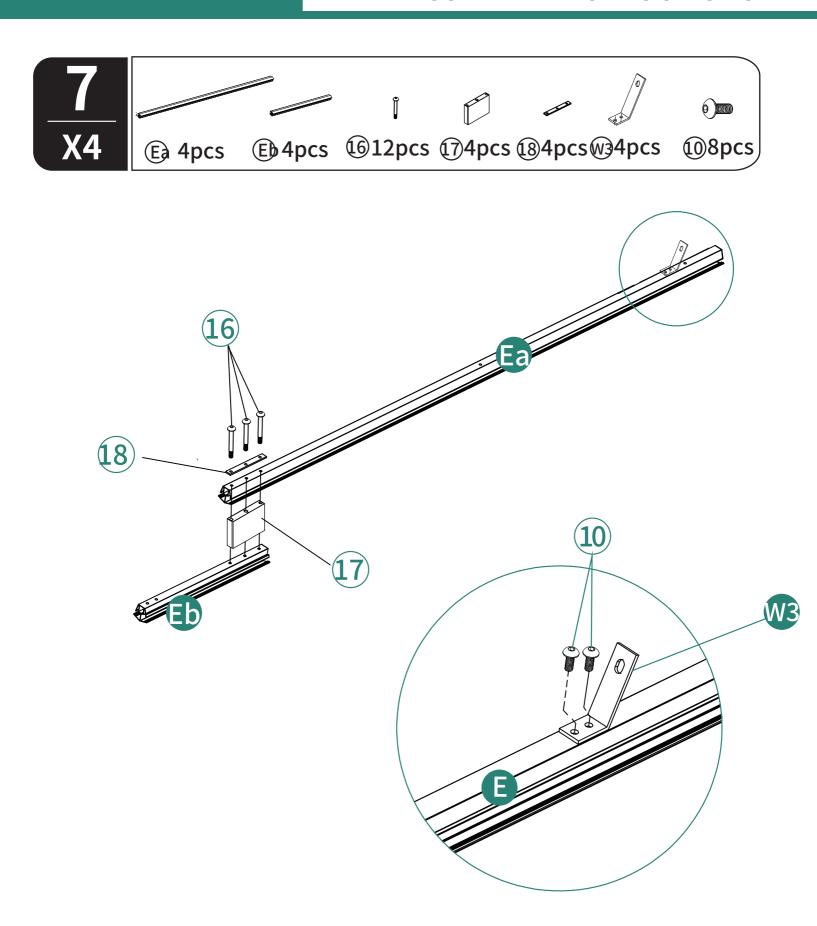


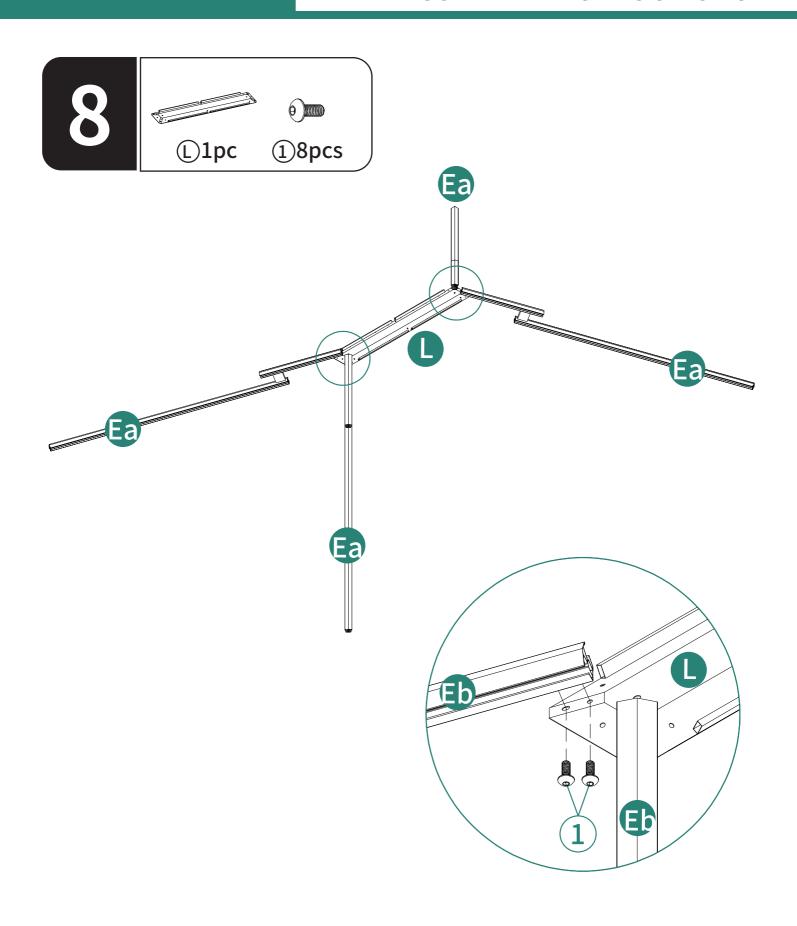


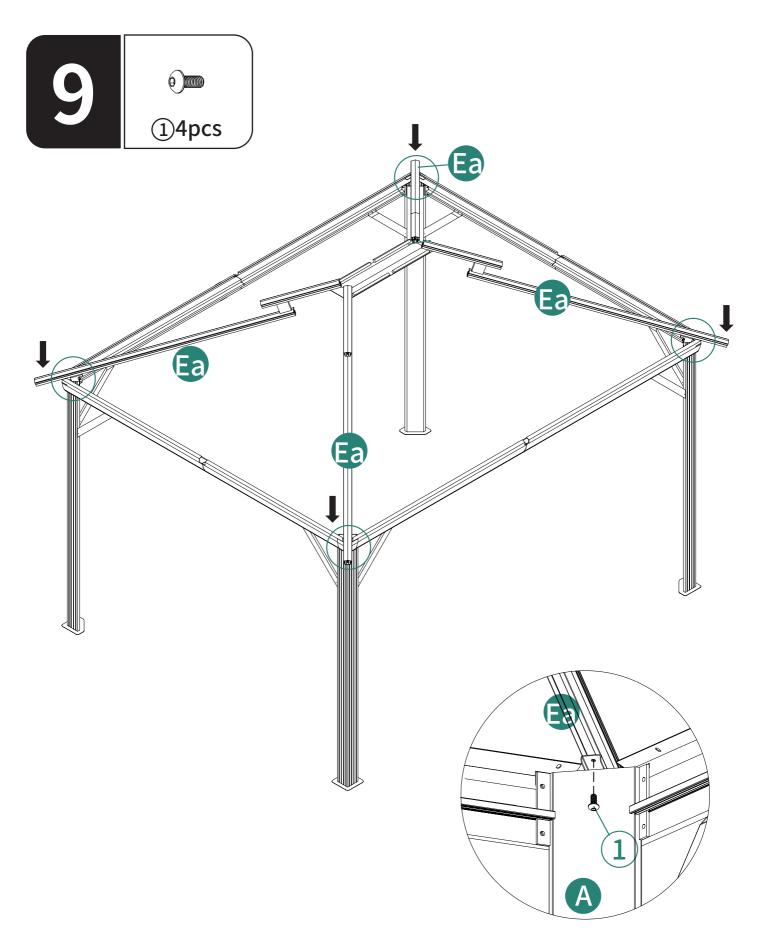


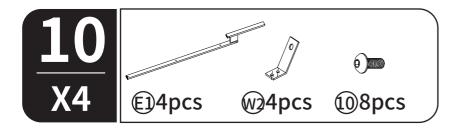


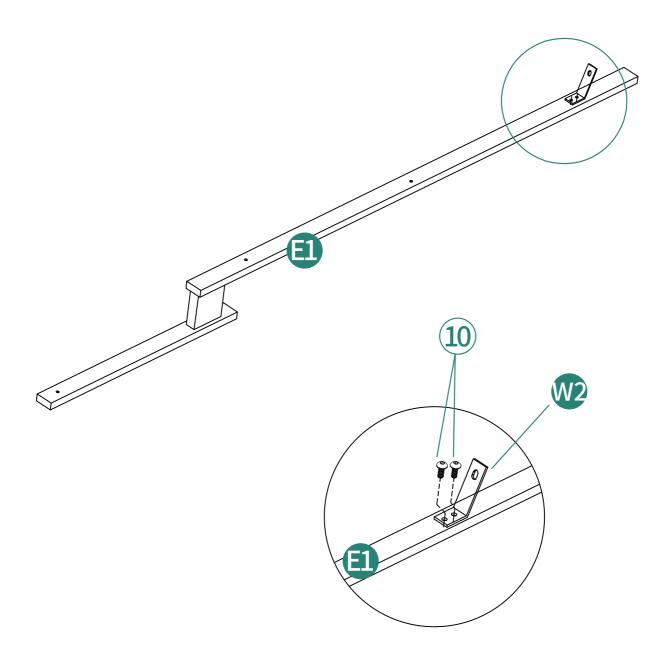


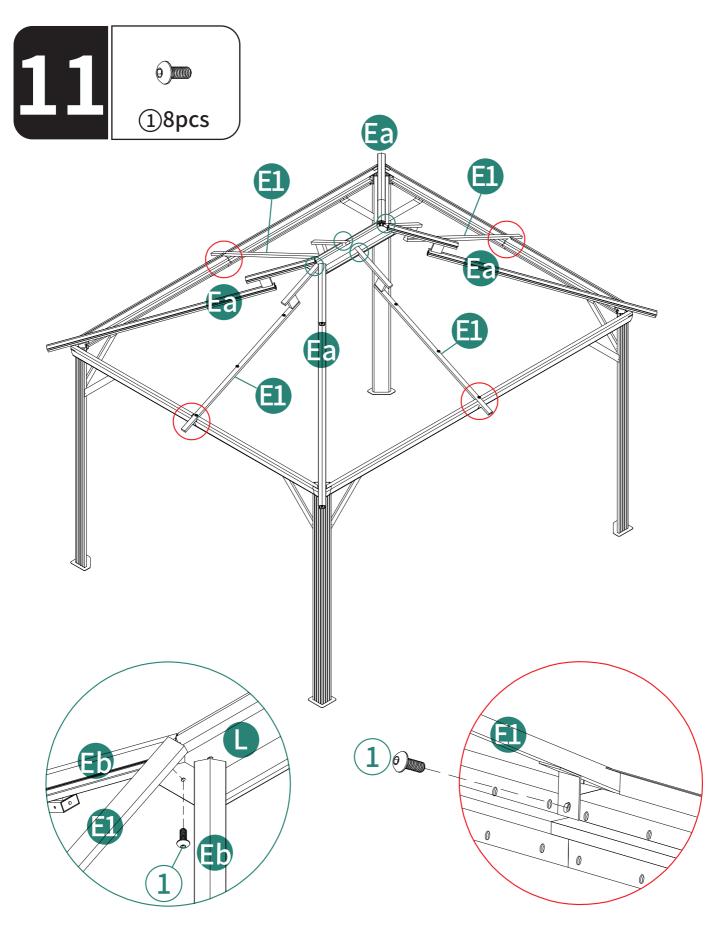


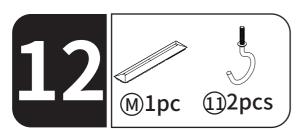

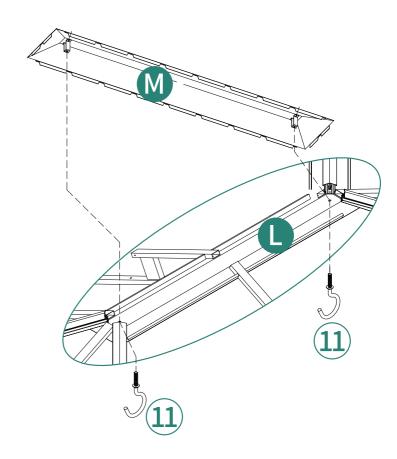

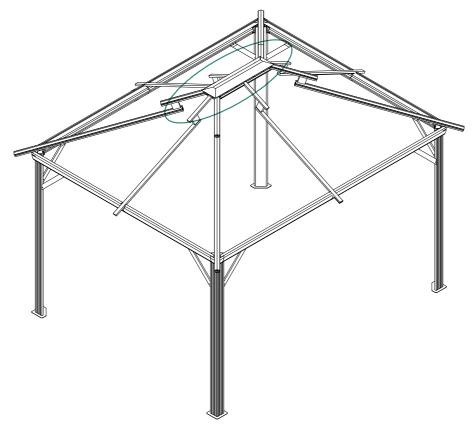


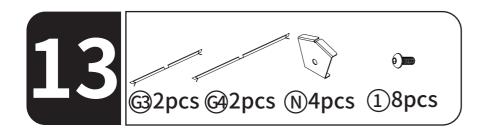


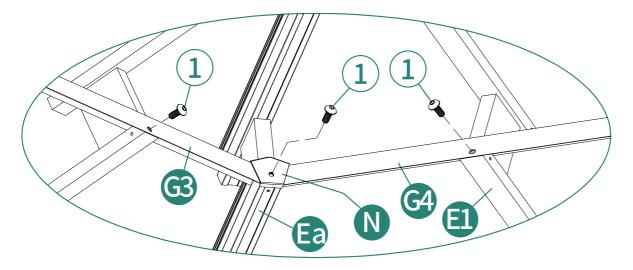



Do not tighten the screw 1 before completing step 19. It's view from the bottom inside gazebo.



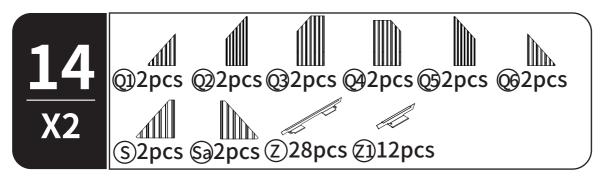

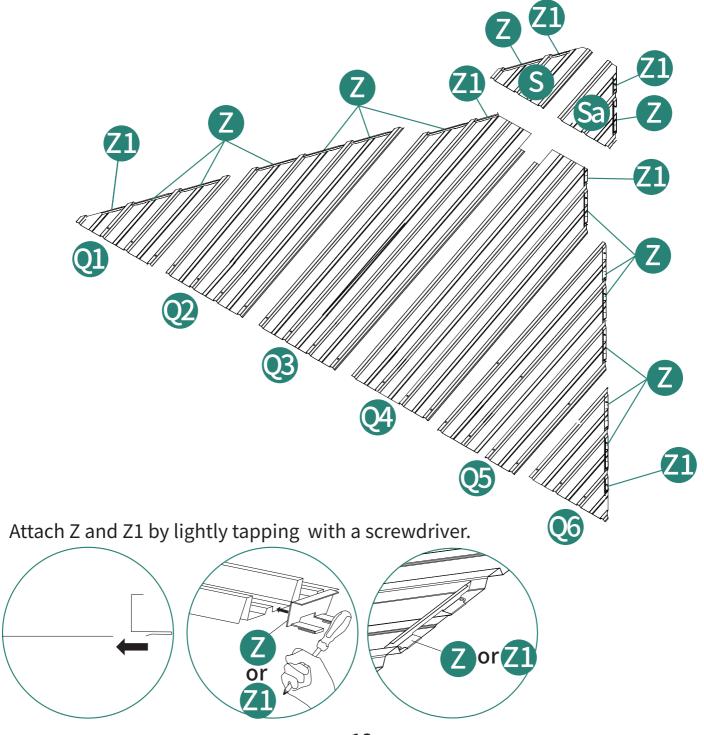


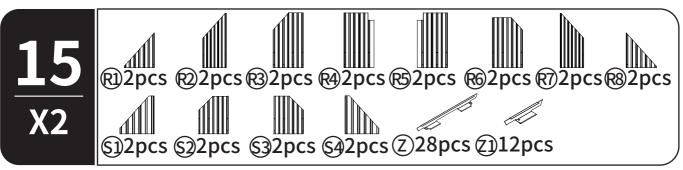


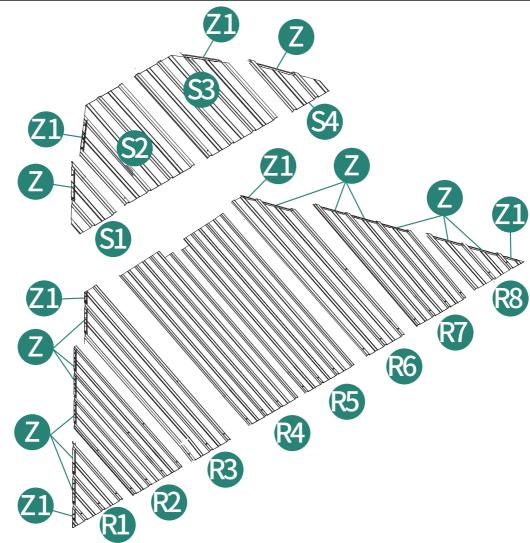



Attach Z and Z1 by lightly tapping with a screwdriver.



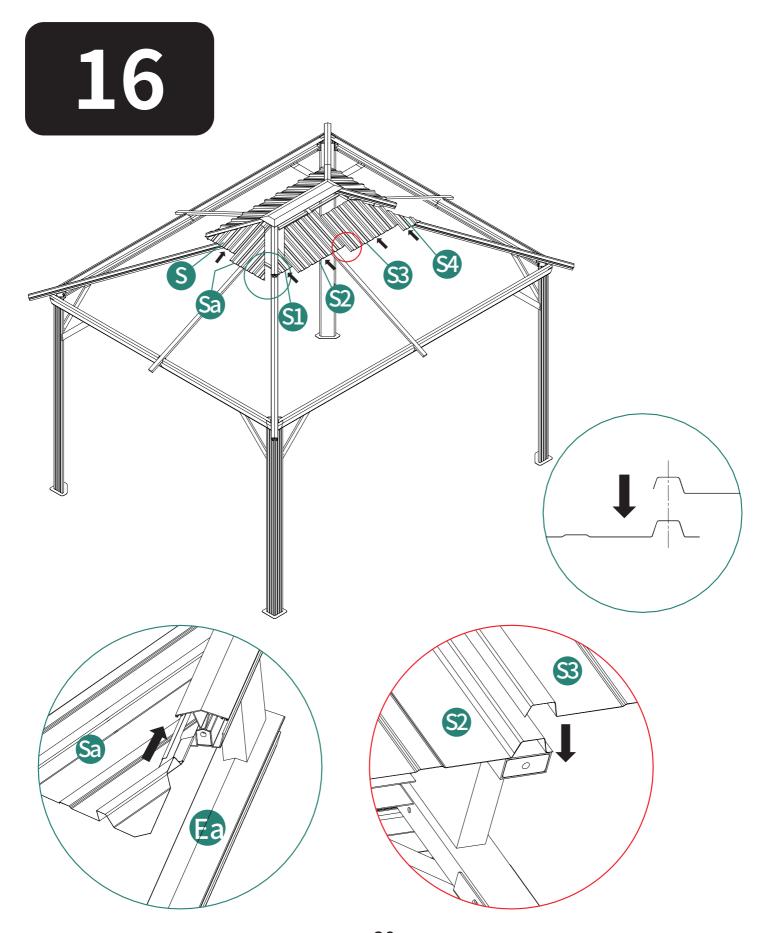


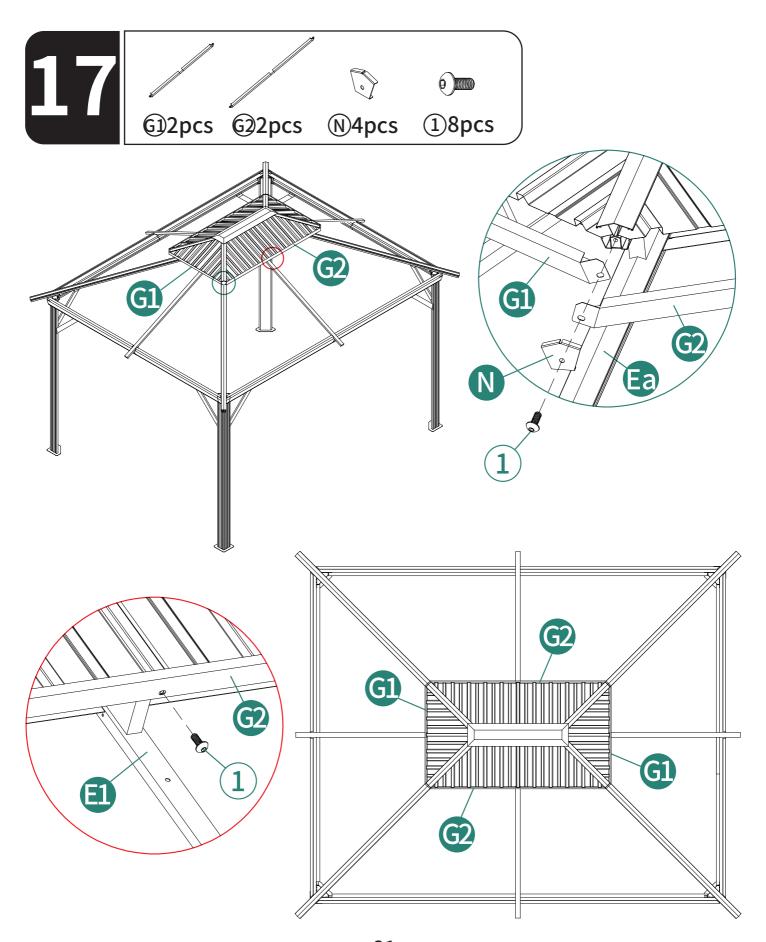


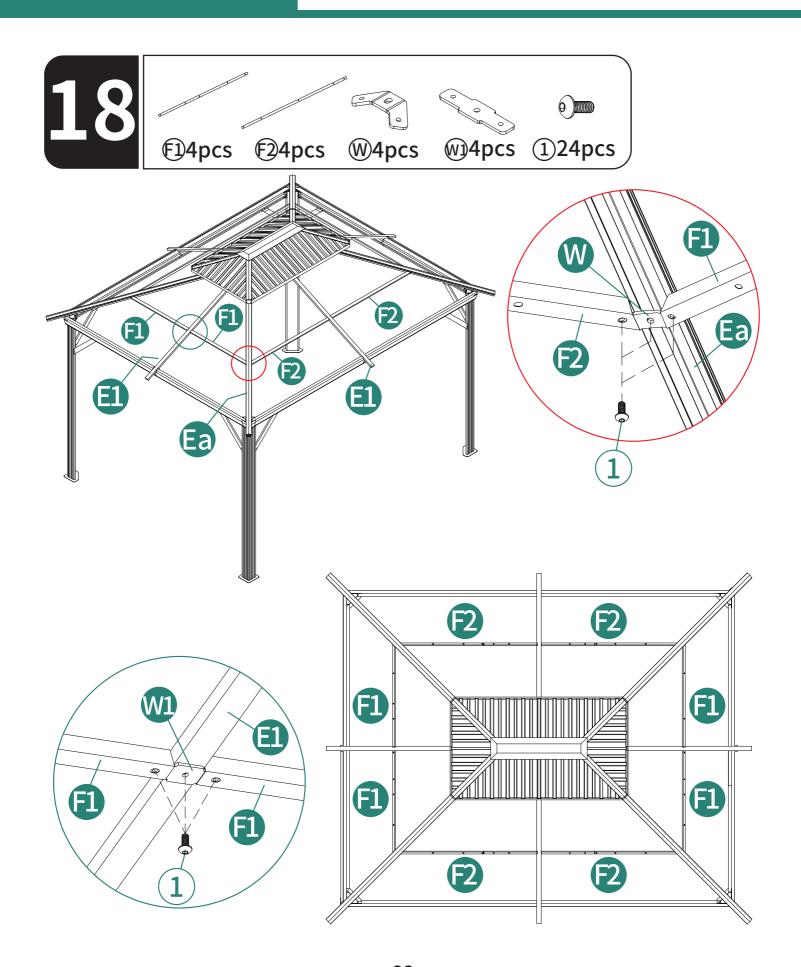

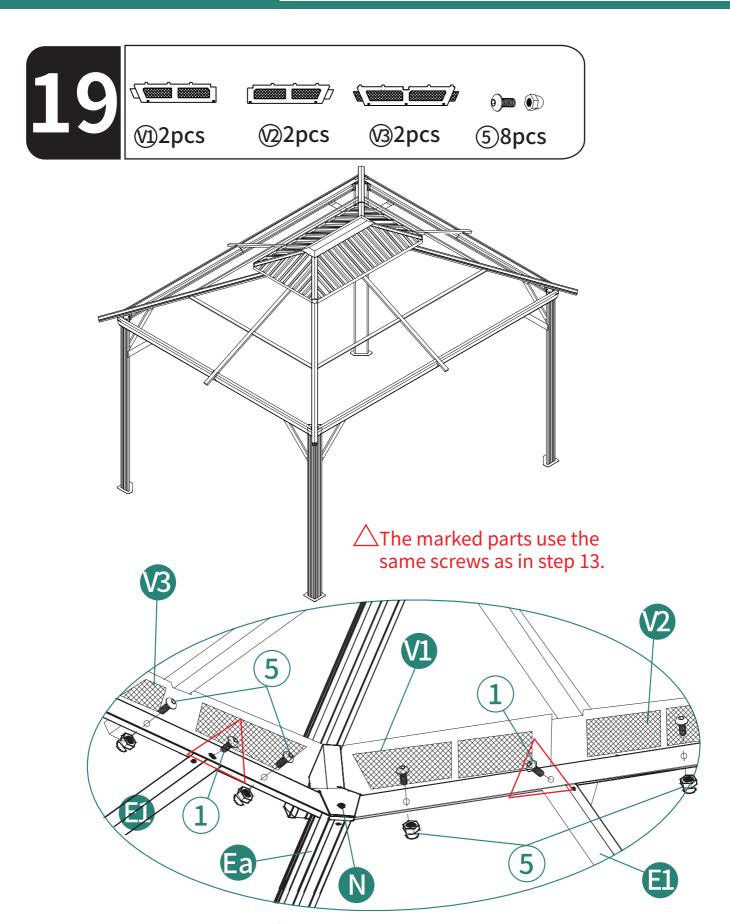



It's view from the bottom inside gazebo.

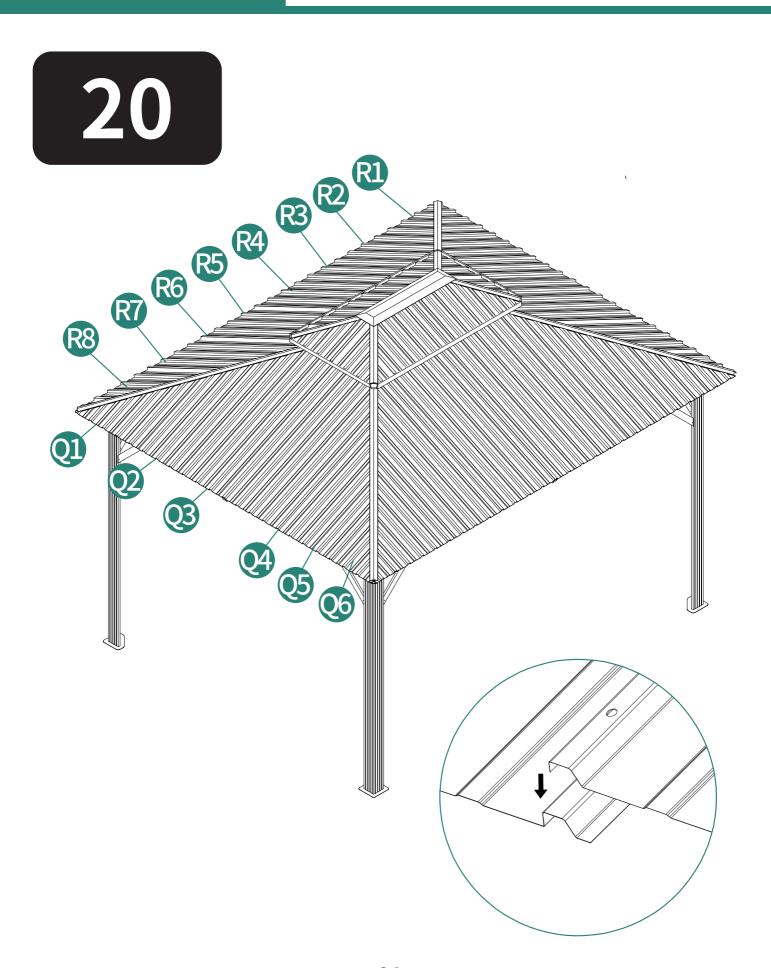


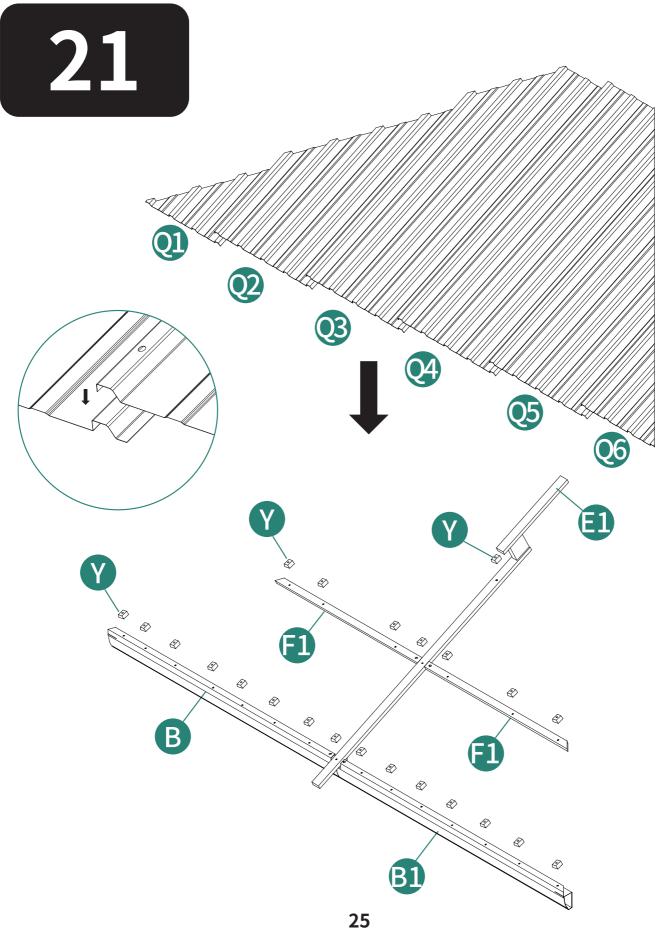



22 RT R6 **R5** R4

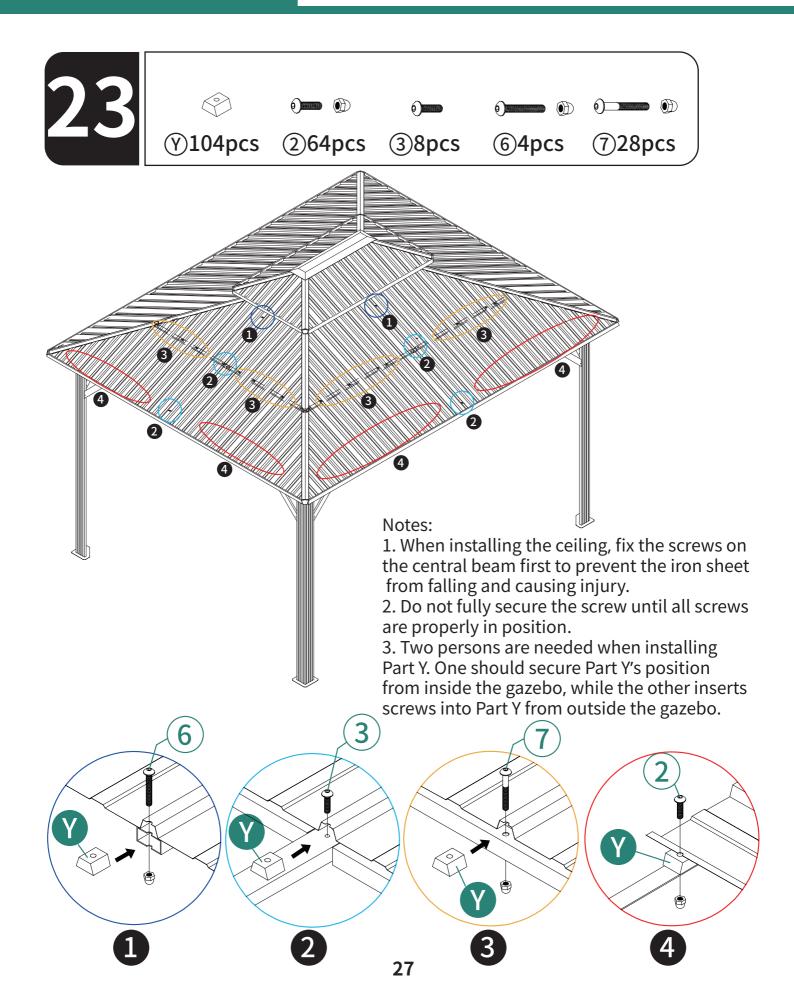

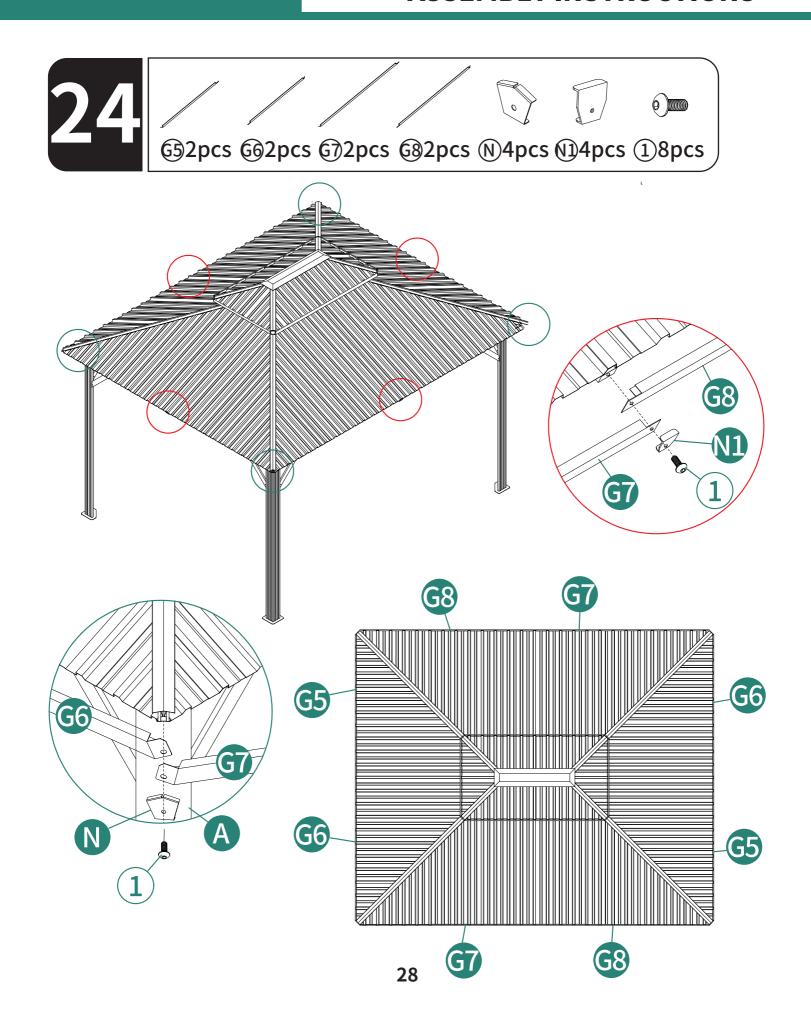


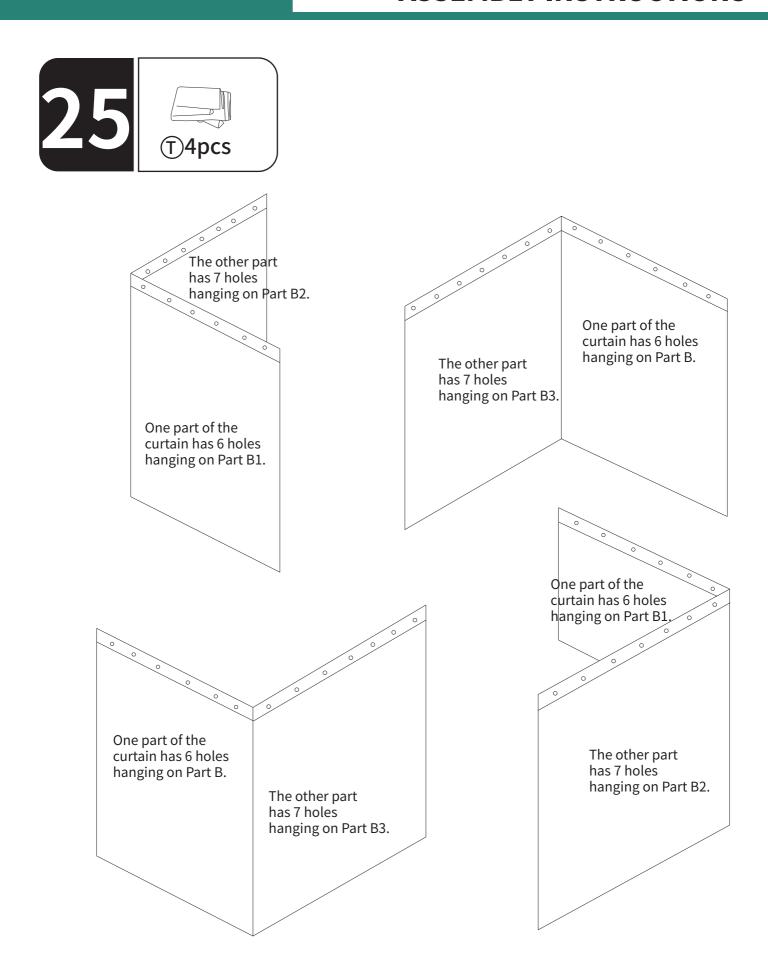

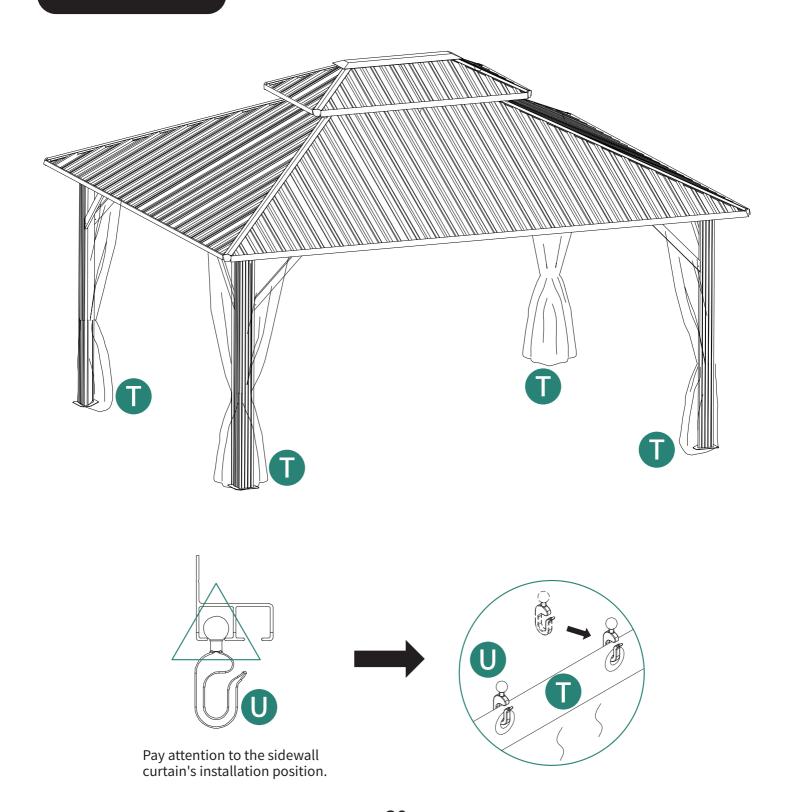


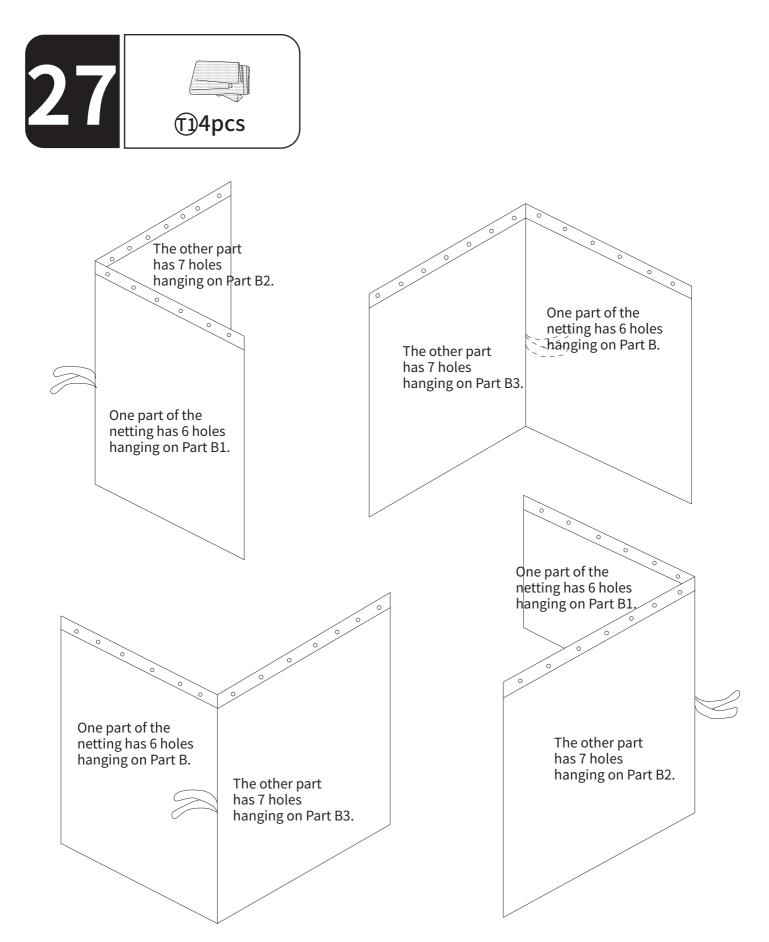

28

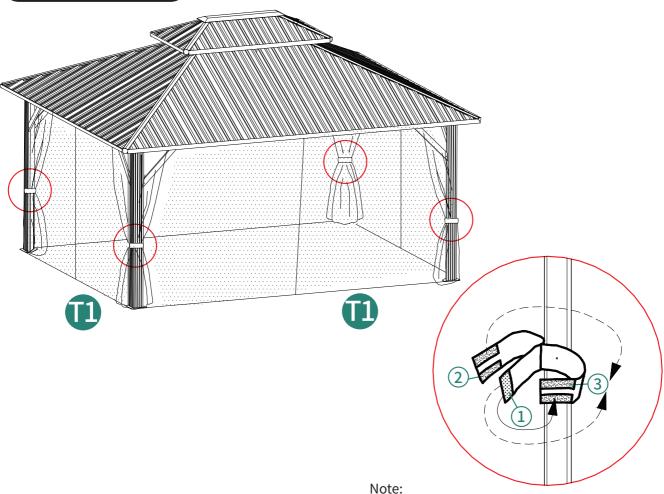

Attach 1 to 2 to secure parts T1 and T (curtains) together. Attach 1 to 3 to secure the back curtain (T). Attach 1 to 3 to secure the front netting (T1).

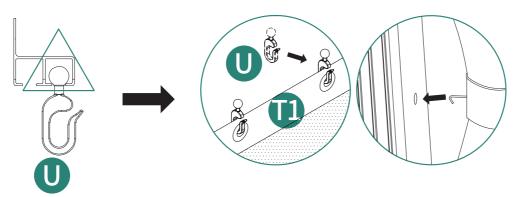

Pay attention to the sidewall netting's installation position.

Hang the hook attached to the netting on Part A.

