



ASSEMBLY INSTRUCTIONS

TWIN HOUSE BED WITH TRUNDLE













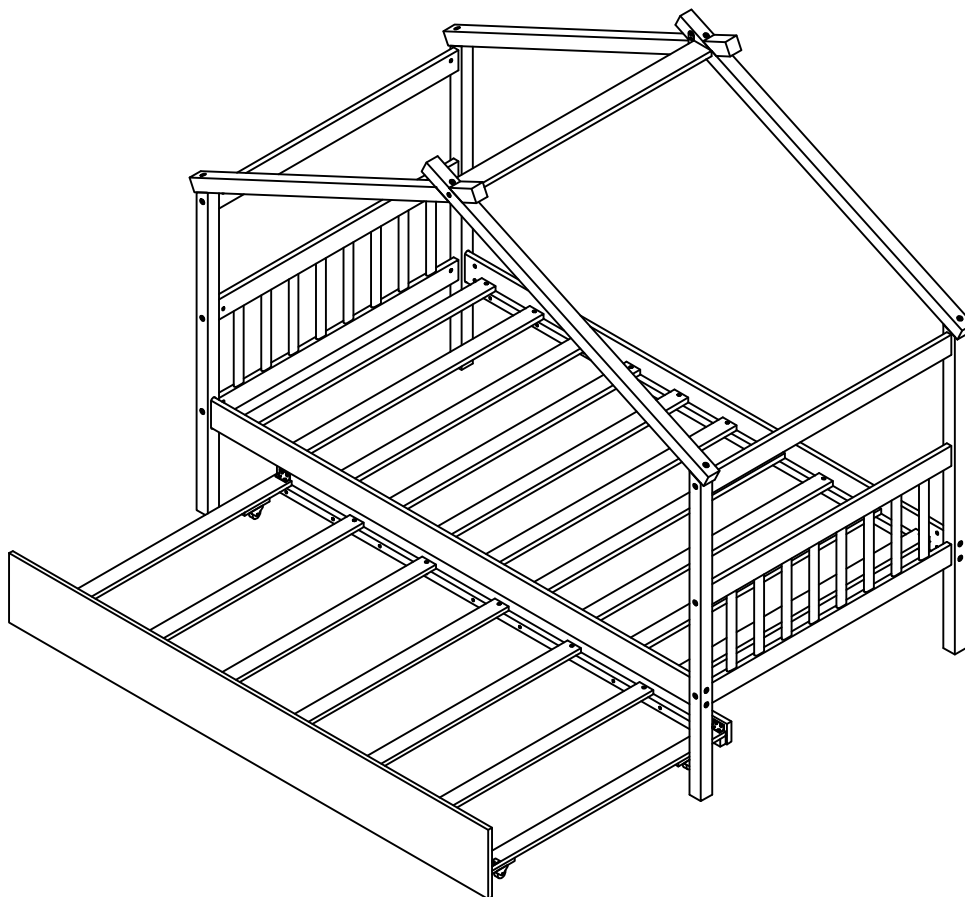


WF300800





Detail View

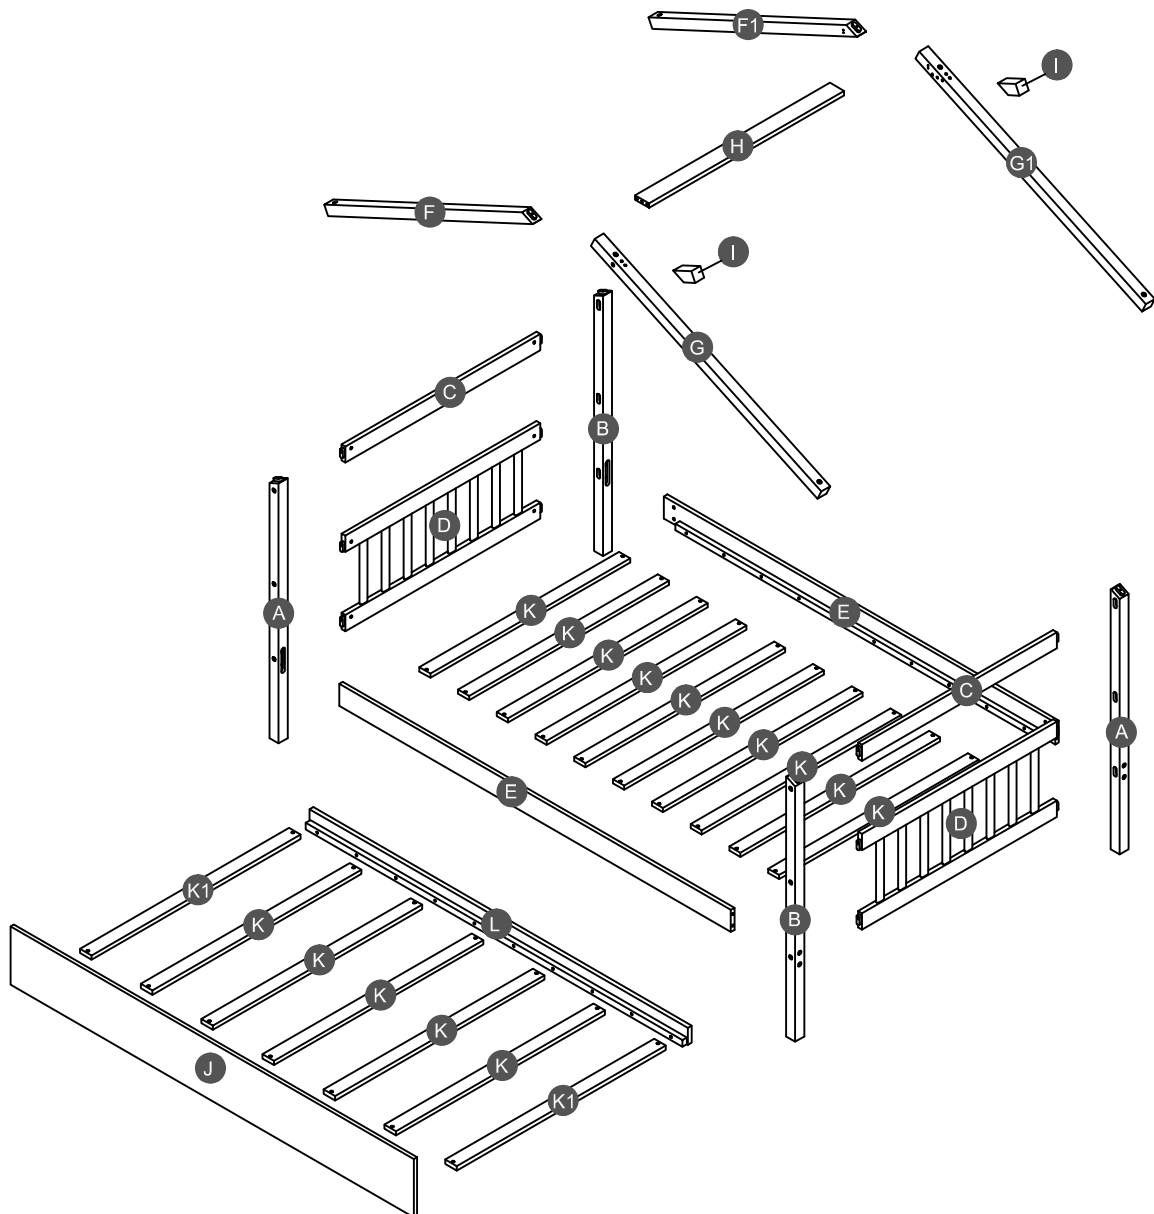


Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Horizontal bar HB/FB - 2pcs
D  Frame HB/FB - 2pcs	E  Side rail - 2pcs	F  Upper (Left Front) - 1pc
F1  Upper (Left Back) - 1pc	G  Upper (Right Front) - 1pc	G1  Upper (Right Back) - 1pc
H  Upper horizontal bar - 1pc	I  Block - 2pcs	J  Front panel of Trundle - 1pc
K  Slats - 15pcs	K1  Slats - 2pcs	L  Back panel side rail of Trundle -1pc

Hardware List


1  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (6pcs)	2  $(\varnothing 15) 1/4" \times 100 \text{mm}$ Hex-Head bolts (8pcs)	3  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (14pcs)
4  $(\varnothing 12) 1/4" \times 65 \text{mm}$ Hex-Head bolts (8pcs)	5  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (22pcs)	6  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)
7  $\varnothing 4 \times 30 \text{mm}$ Wood screws (42pcs)	8  $\varnothing 3.5 \times 19 \text{mm}$ Wood screws (8pcs)	9  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (16pcs)
10  $75 \times 20 \times 2 \text{mm}$ Metal bracket (2pcs)	11  $95 \times 95 \times 18 \times 3 \text{mm}$ Metal bracket (2pcs)	12  $40 \times 18 \times 18 \times 2 \text{mm}$ Metal bracket (2pcs)
13  $100 \times 63 \times 20 \text{mm}$ Wheels (4pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !



STEP 1:

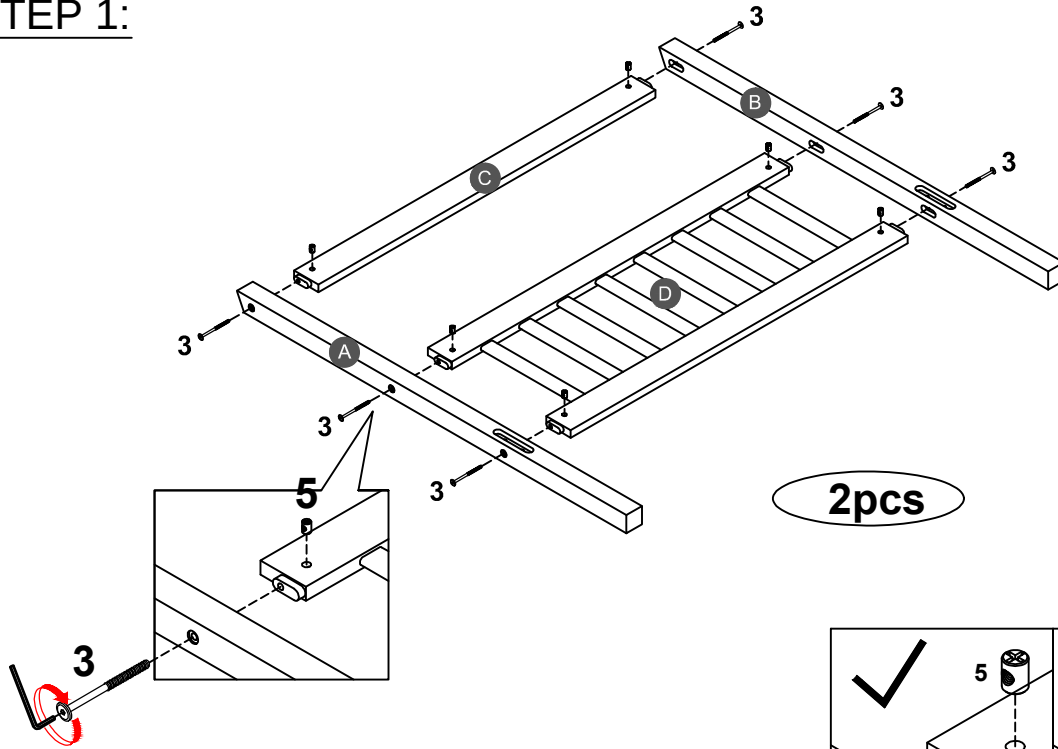


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

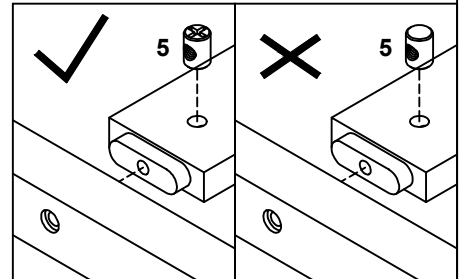


STEP 2:

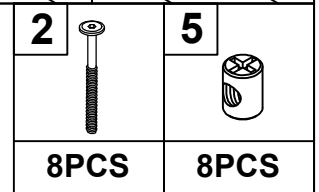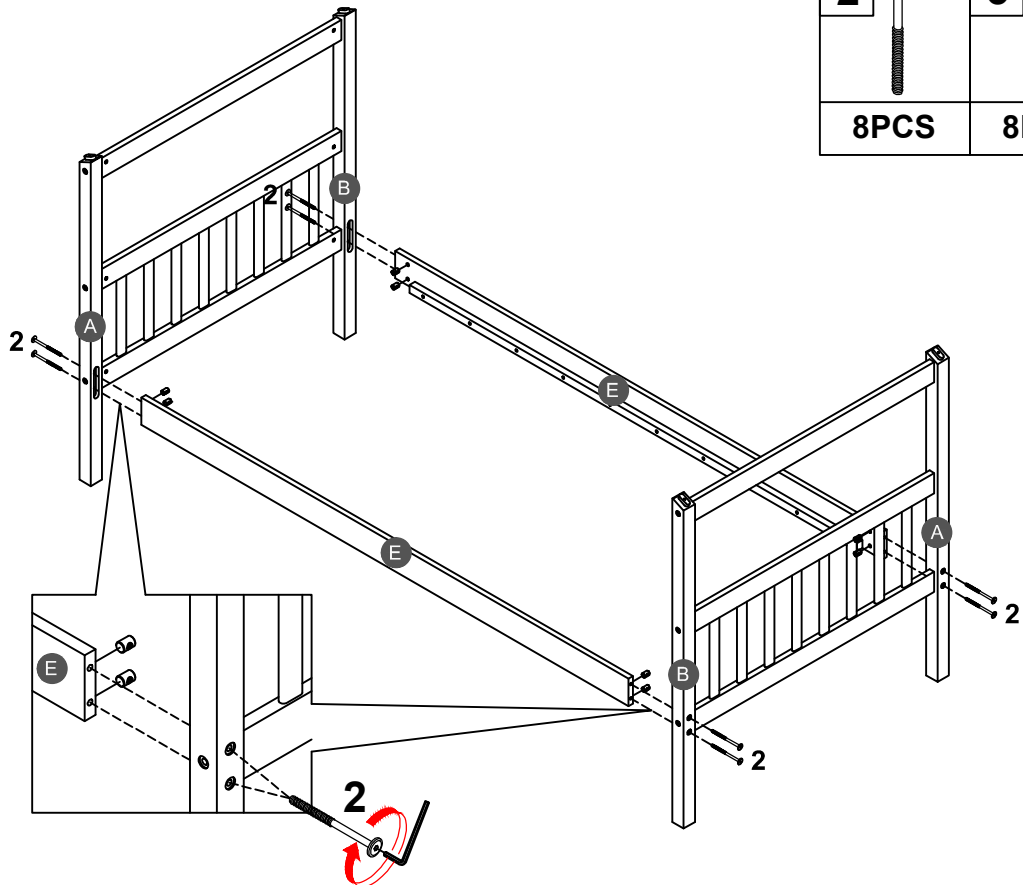


STEP 3:

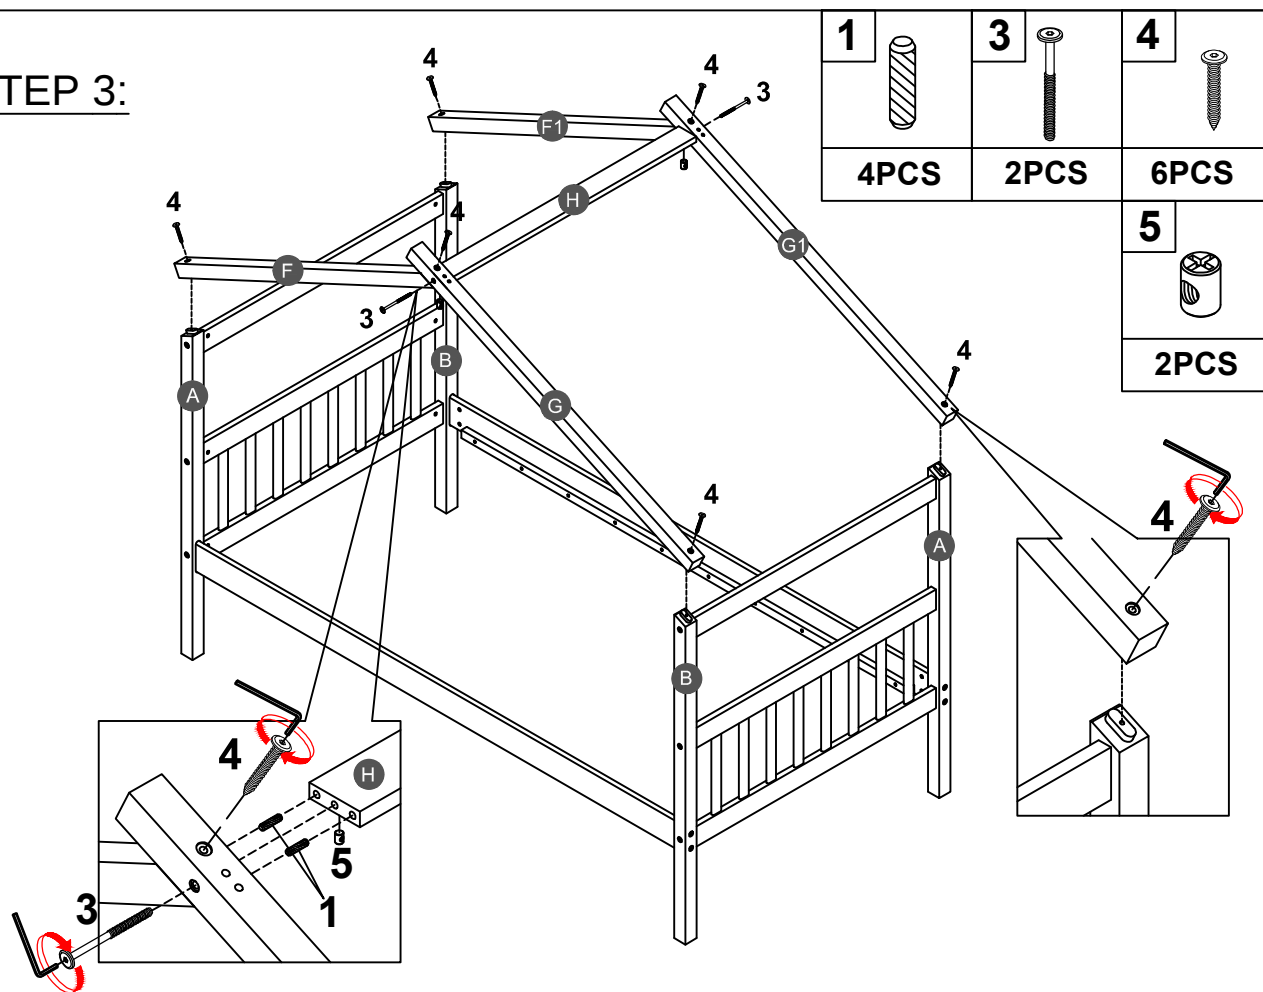


STEP 4:

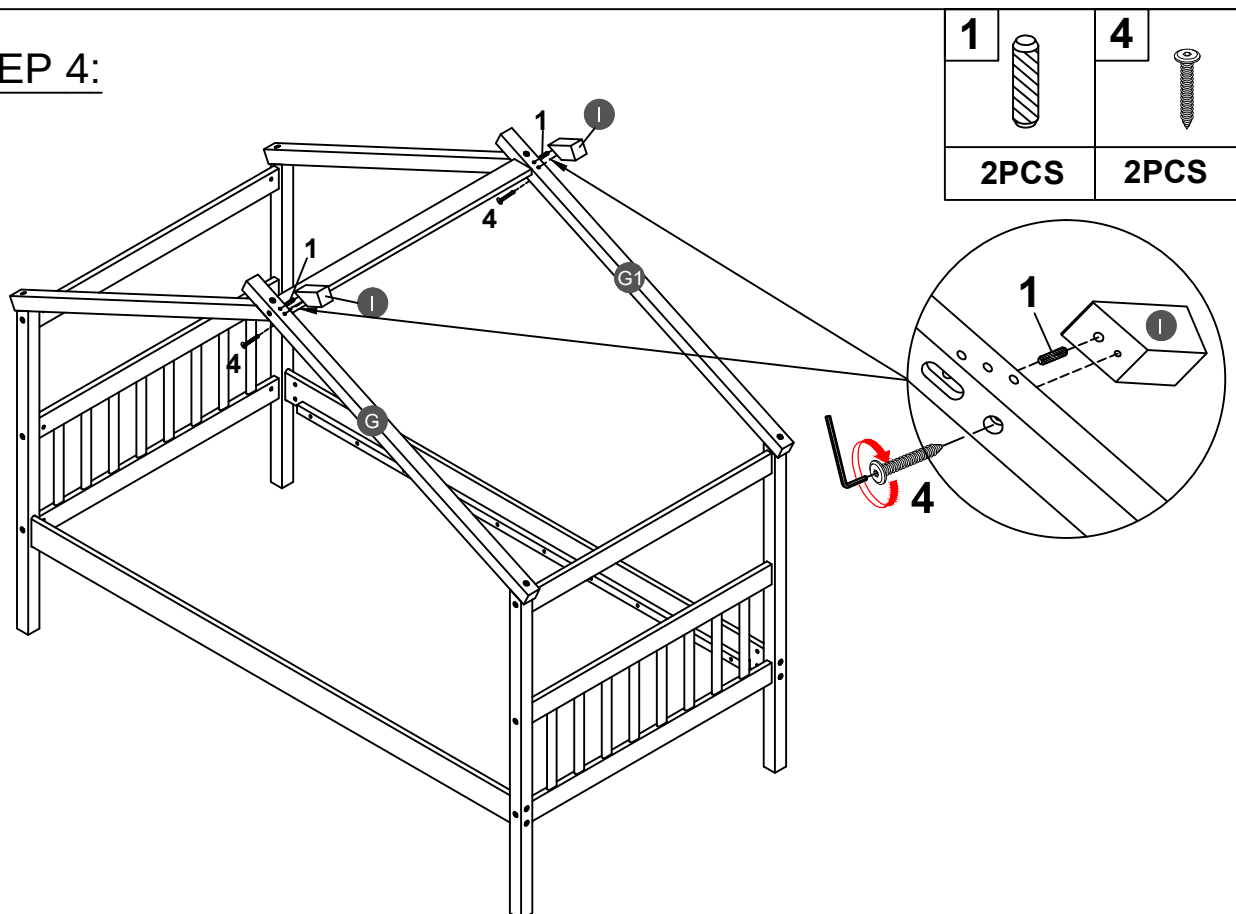



STEP 5:

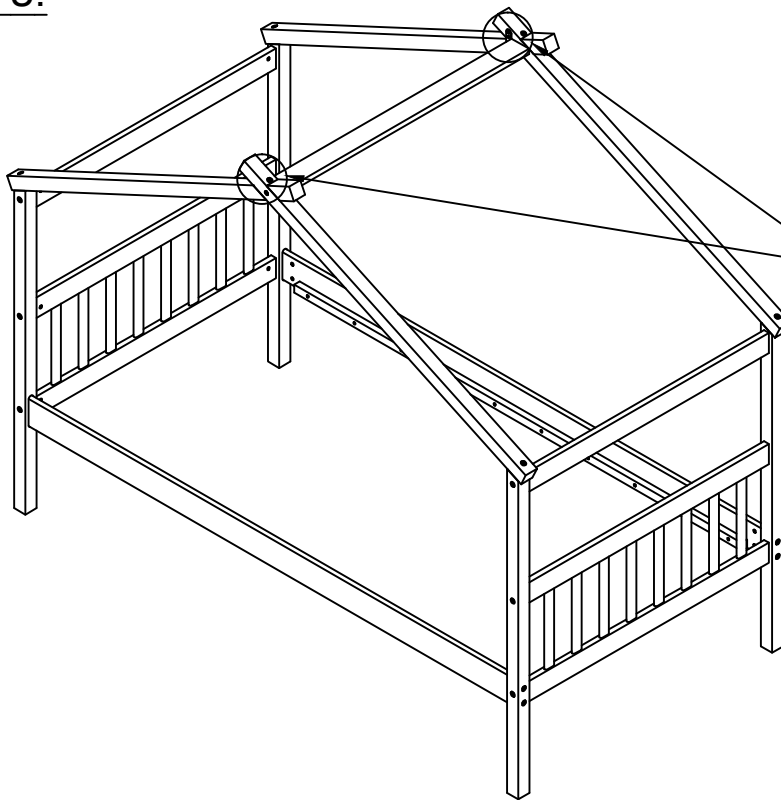


8		10	
8PCS		2PCS	

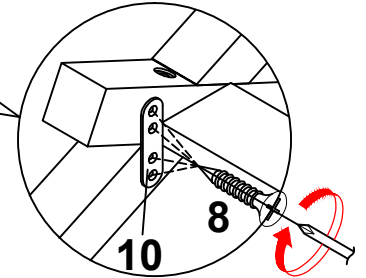

STEP 6:

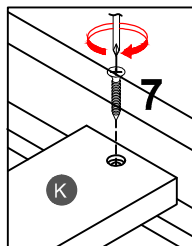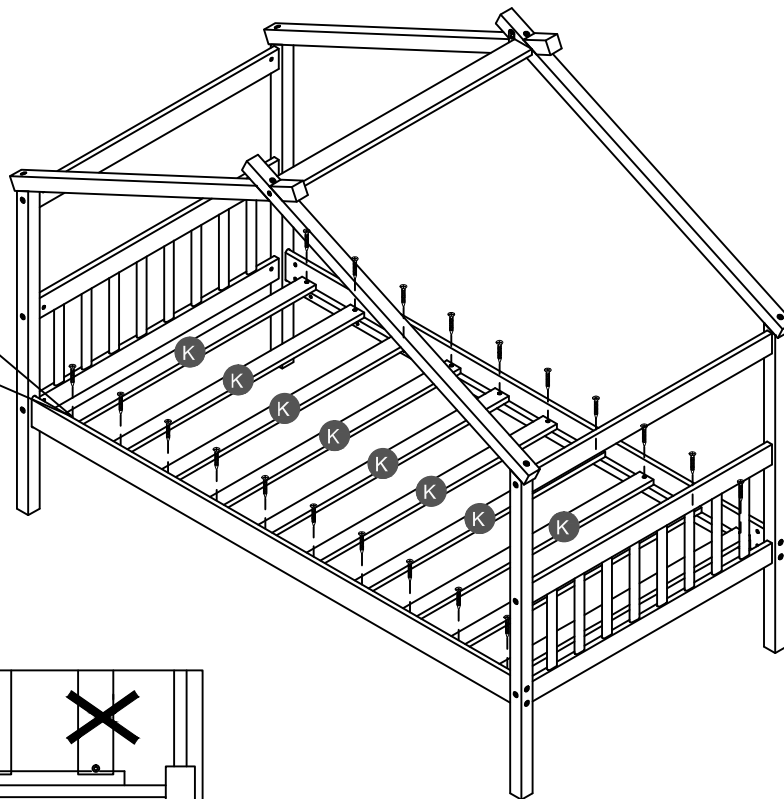


7	
20PCS	

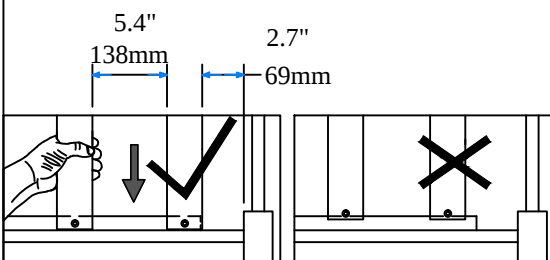

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 7:

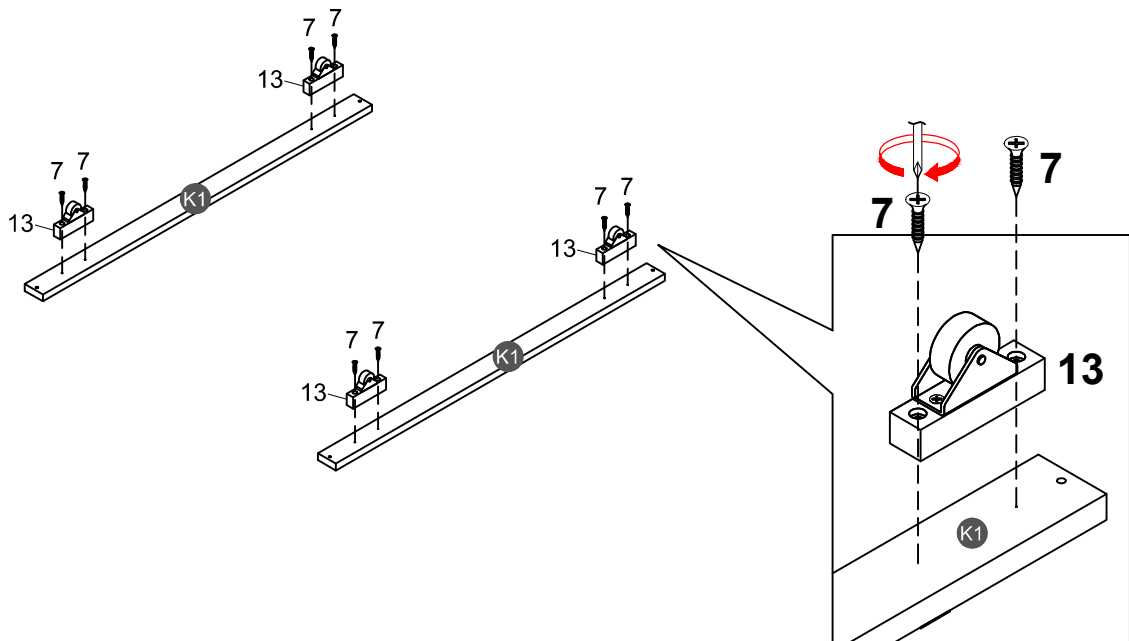

7




8PCS

13



4PCS



STEP 8:

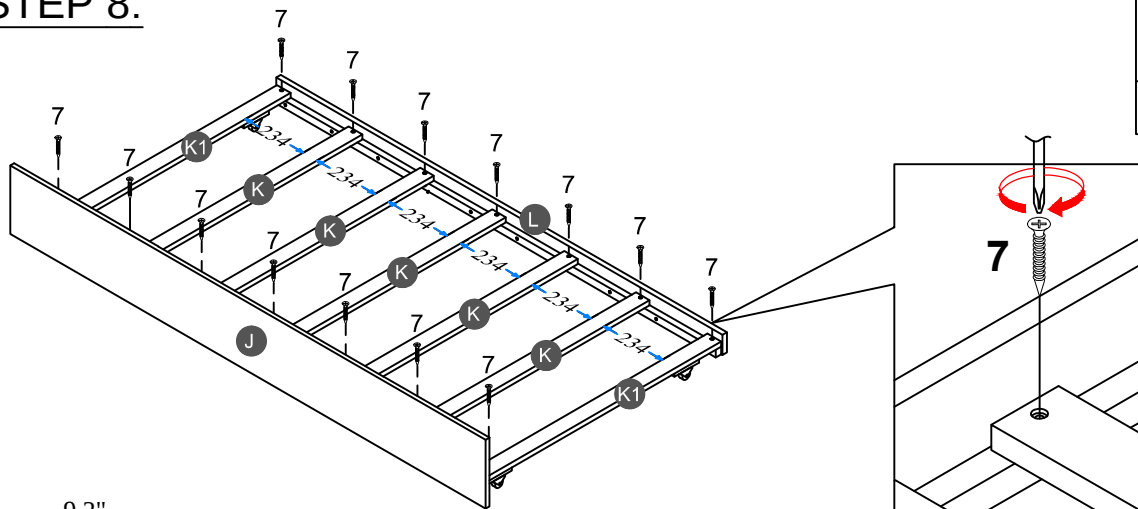

7





14PCS

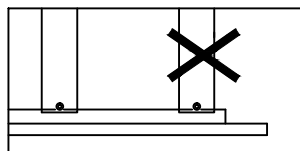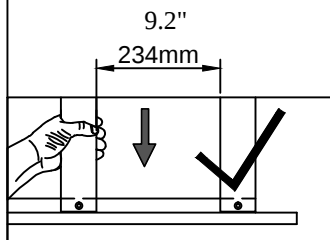

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.


STEP 9:

9		11	
8PCS		2PCS	

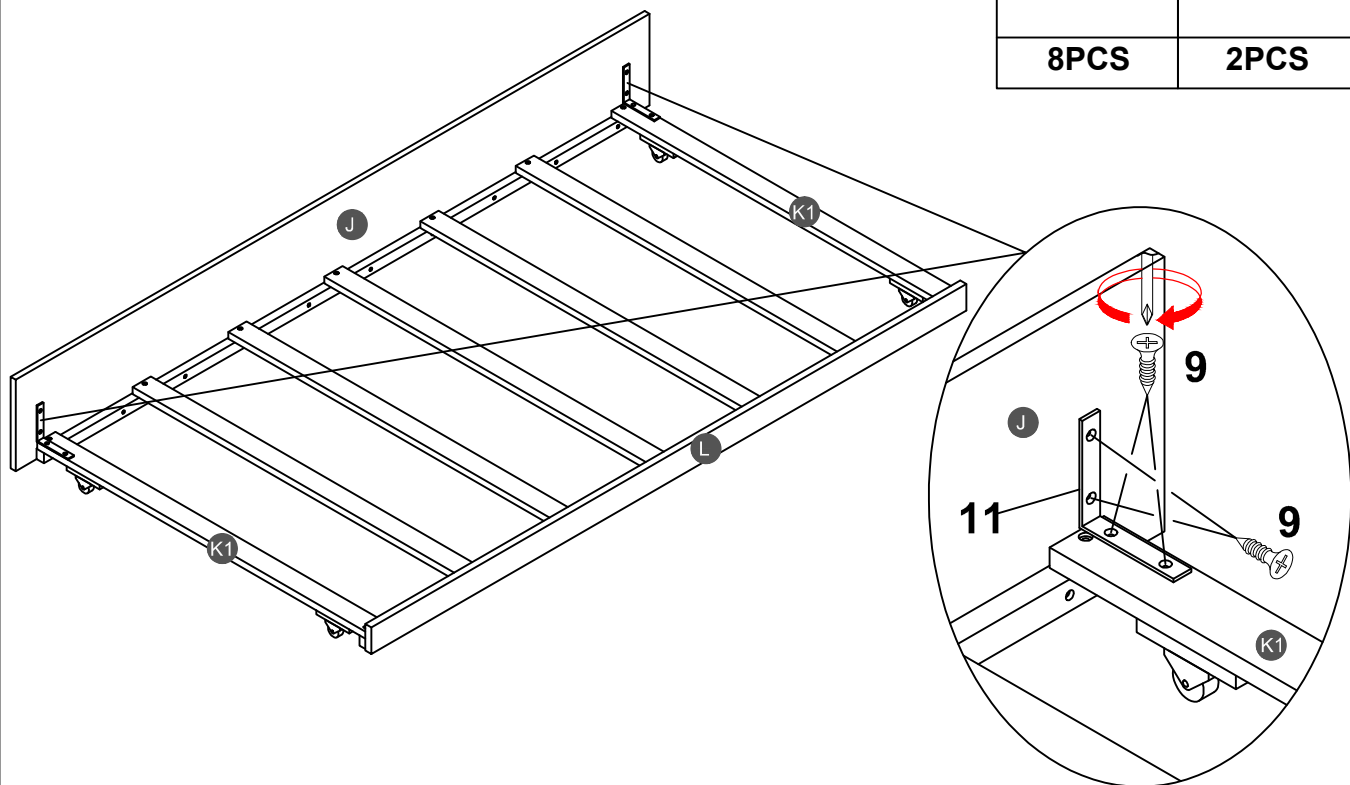


STEP 10:

9		12	
8PCS		2PCS	

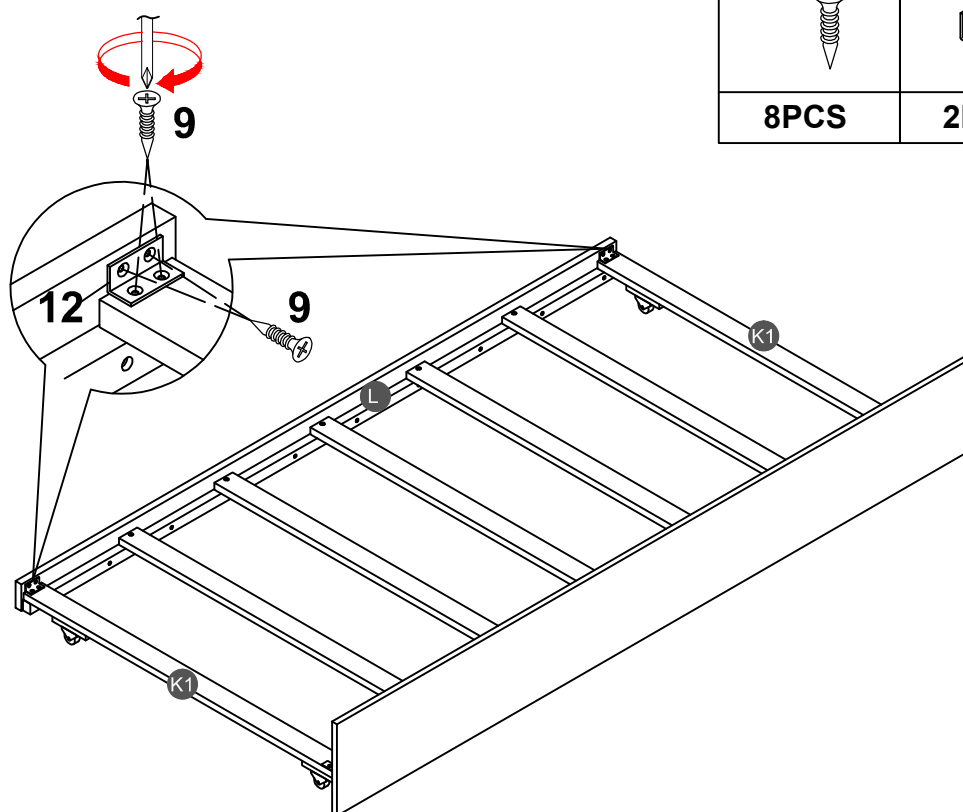

STEP 11:

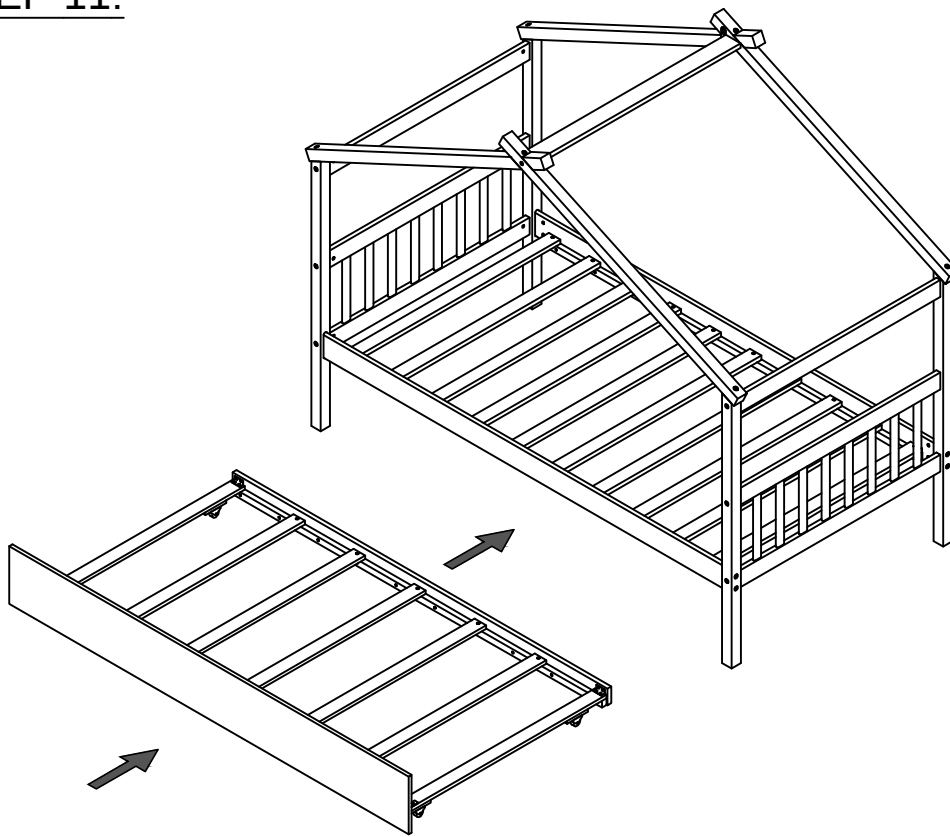

Push Trundle and Drawer under the bottom of Bunkbed.

