

STAIR BRACKETS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, paint manufacturers' instructions, and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- construction adhesive
- caulking gun
- nail gun
- finishing nails
- extra fine sandpaper
- rag
- paint


SPECIAL INSTRUCTIONS AND NOTES

- It is highly recommended that you paint/finish the stair bracket with 100% acrylic latex paint before installation.
- Once installed, you can apply any necessary touch-up paint/finish.
- Clean installation surface and back of bracket of all dirt and dust with a clean cloth or sponge.
- Make sure that the surface and the back of the bracket are completely dry before attempting installation.

STEP BY STEP INSTRUCTIONS

1. Lay the bracket face down on a soft surface that will not scratch/dent the bracket.
2. Apply a 1/2" bead of adhesive caulk all the way around the back edge of the bracket.
3. Press the bracket in place against the corner angle of the stair. Smooth caulk around the edge with a finger.
4. Wipe off any excess adhesive caulk with a sponge or damp rag.
5. Small finishing nails can be used for additional support.

EXAMPLE INSTALLATION DIAGRAMS

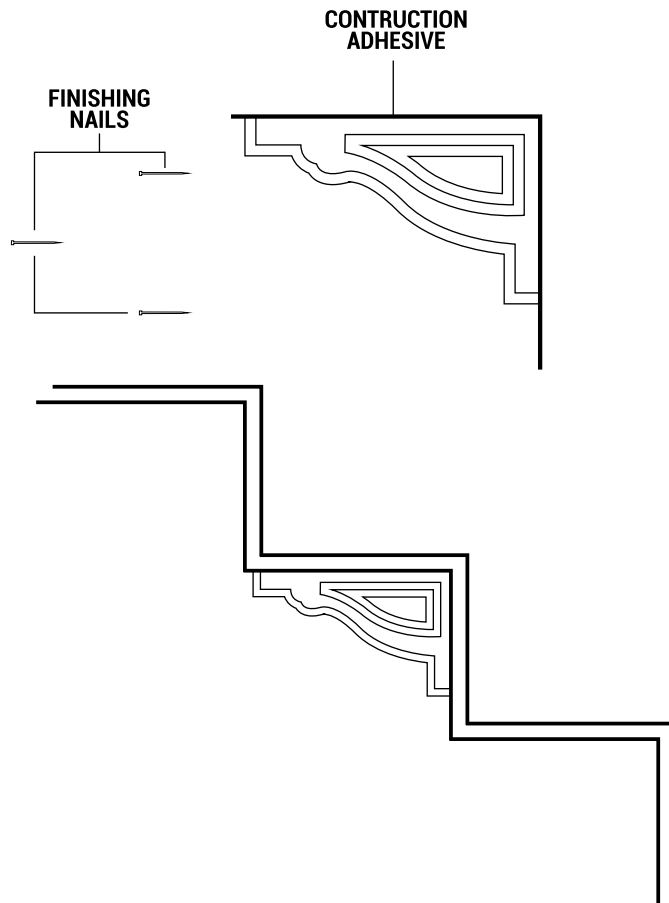

We Can Help. Call (866) 607-0453



EKENA
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com