SEI ITEM NO HE4011


Wall Mirror With Pegs

Max Load:

Assembly Instructions



For assistance with assembly contact:
 Southern Enterprises, Inc.
Customer Service 1-800-633-5096
 <u>service@seidal.com</u>
 www.seidal.com

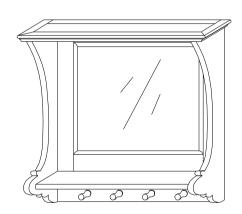

Wall Mirror With Pegs Parts List

Please review all parts and hardware before disposing of any packaging.

Call Customer Service if missing hardware. Do not return to store/retailer.

Using a screw that is too long will cause damage.


Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra hardware with your unit.

A	В	C	
TOP PANEL	LEFT FACING PANEL	RIGHT FACING PANEL	
D	E		
MIRROR PANEL	REAR PANEL	CROSS - PANEL	
G Quantity of 4	Quantity of 4	Quantity of 1	
WOODEN PEGS	BOLTS	ALLEN WRENCH	
Quantity of 17	(4) Quantity of 17	(5) Quantity of 1	
CAM-BOLTS	CAM-LOCKS	CAM-TOOL	
(6) Quantity of 2	Quantity of 2	(8) Quantity of 6	
Mattatan			
SCREWS	ANCHOR	COTTON MAT	


Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.


For replacement parts or questions, please Call Customer Service at 1-800-633-5096 Do not return product to store, please call manufacturer for assistance, questions or parts.

Assembly Tool Required No.2 Phillips Screwdriver



Wall Mirror With Pegs Assembly Instructions

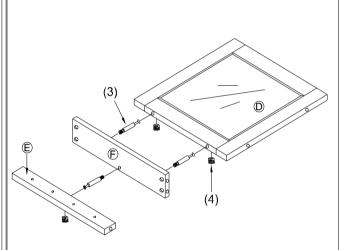



Assembly Instructions:

Wood may scratch easily. Be careful when assembling.

Unpack and lay parts on clean, padded surface like carpet or blanket.

Rotate the 3 cam-bolts (3) into holes in cross - panel (F).

Place the cam-bolts (3) into holes in panel (D/E) and attach using cam-locks (4).

Figure 1



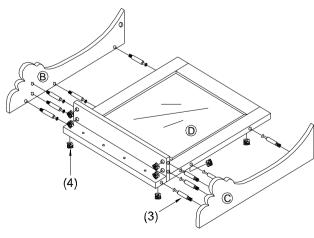


Figure 2

Rotate the 8 cam-bolts (3) into holes in facing panel (B/C).

Place the cam-bolts (3) into holes in panel (D/E/F) and attach using cam-locks (4).

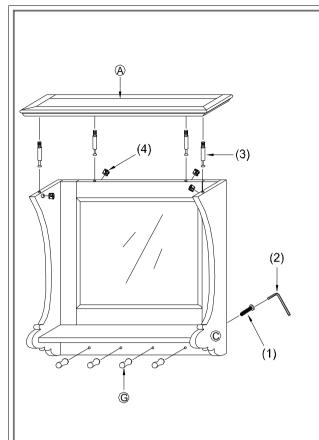

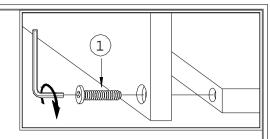


HOW TO USE THE ALLEN WRENCH

Rotate the 4 cam-bolts (3) into holes in top panel (A).

Place the cam-bolts (3) into holes in panel (B/C/D) and attach using cam-locks (4).

Attach the 4 wooden pegs (G) to rear panel (E) using 4 screws (1).

Figure 3

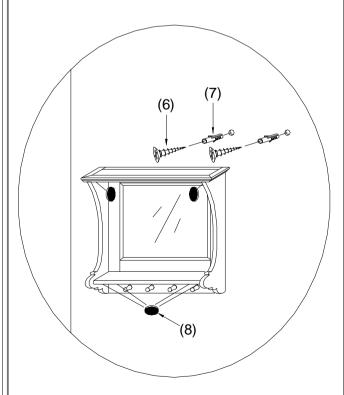

Drill to holes into the wall.

Holes should be spaced with the middle of the top panel.

Insert anchors (7) into holes.

Insert screws (6) into anchors (7) and rotate screws (6) until anchors (7) expand in wall.

Please insert at least one screw into a wall stud.

Cover cam-locks (4) with cotton mats (8) provided.

Figure 4



Customer Service 1-800-633-5096 service@seidal.com

600 Freeport Pkwy, Ste: 200

Coppell, TX 75019

SEI ITEM NO HE4011

PARTS REPLACEMENT FORM

Customer Information	ı			
Name				
Address				
City/State/Zip Code				
Phone Number				
Please indicate wher	re you purchased this item:Store/Website/C	Catalog		
Please indicate color/size/style number:				
Style No Parts	Letter Parts Description Quantit	y Needed		
Missing or damaged	hardware and/or parts will be repla	aced free		

Missing or damaged hardware and/or parts will be replaced free of charge. We do not sell parts. Southern Enterprises Inc. will provide replacement parts for only those items purchased within the last 9 months. If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacement merchandise. Parts will not be available for items arriving fully assembled. Parts will be sent if available from SEI