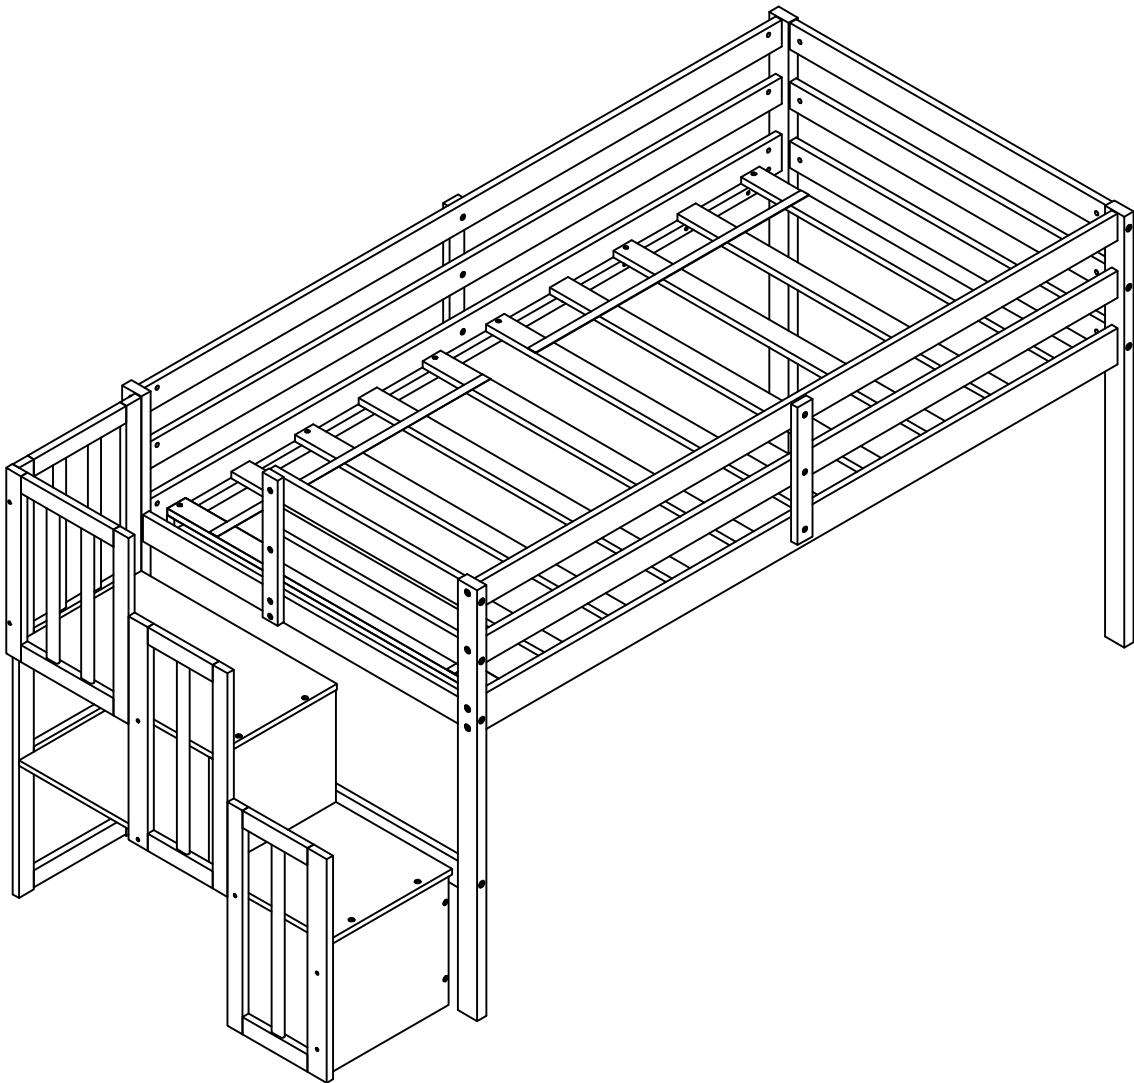



ASSEMBLY INSTRUCTIONS

LOFT BED






















DN33704






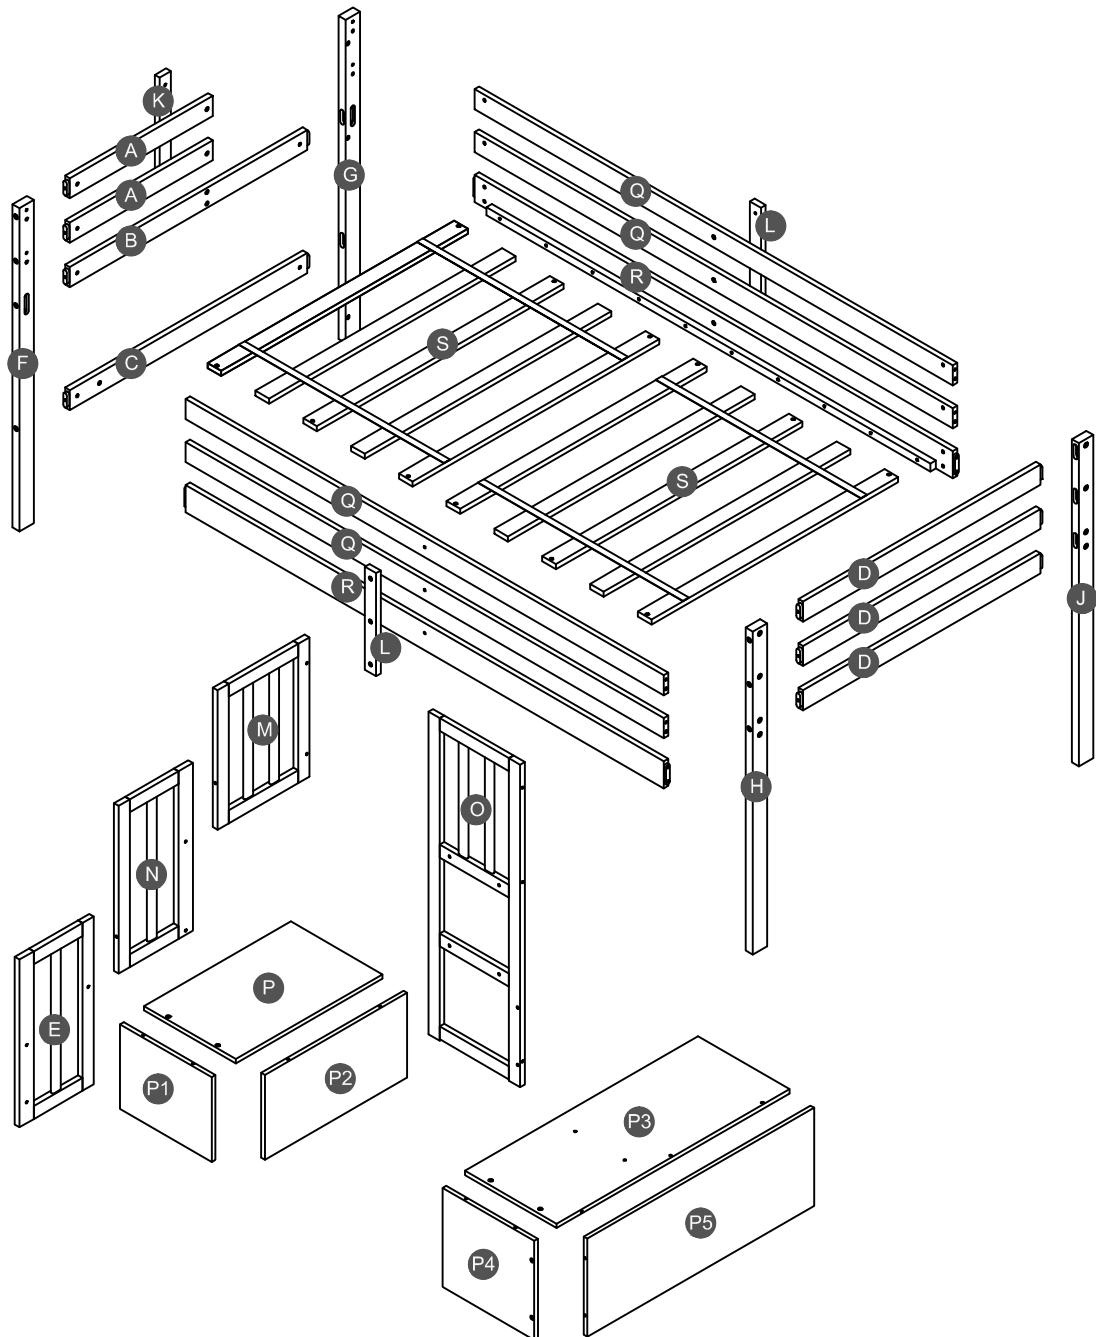
Detail View





Part List

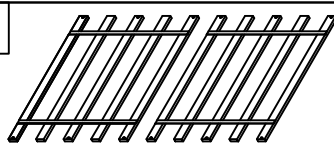A  Upper horizontal FB - 2pcs	B  Horizontal FB- 1pc	C  Lower horizontal FB- 1pc
D  Upper HB - 3pcs	E  Lower guard side - 1pc	F  Leg FB (Left Front) - 1pc
G  Leg FB (Left Back) - 1pc	H  Leg HB (Right Front) - 1pc	J  Leg HB (Right Back) - 1pc
K  Support guard rail - 1pc	L  Vertical guard rail - 2pcs	M  Upper guard side - 1pc
N  Guard side - 1pc	O  Frame guard back - 1pc	P  Upper step ladder panel -1pc
P1  Upper front panel - 1pc	P2  Upper side panel - 1pc	P3  Lower step ladder panel -1pc
P4  Lower front panel - 1pc	P5  Lower side panel - 1pc	Q  Guard rail - 4pcs
R  Side rail-2pcs	S  Slats - (10pcs)	

Hardware List


1	 Ø10*40mm Wood dowel (8pcs)	2	 Ø8*30mm Wood dowel (4pcs)	3	 (Ø15)1/4"*100mm Hex-Head bolts (12pcs)
4	 (Ø15)1/4"*80mm Hex-Head bolts (16pcs)	5	 (Ø12)1/4"*60mm Hex-Head bolts (27pcs)	6	 (Ø12)1/4"*30mm Hex-Head bolts (10pcs)
7	 (1/4")4.5*58mm Allen key (1pc)	8	 1/4"*15 (9.5mm) Horizontal-Hole bolts(53pcs)	9	 Ø4*30mm Wood screws (12pcs)

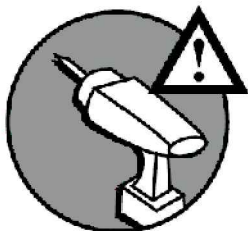ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

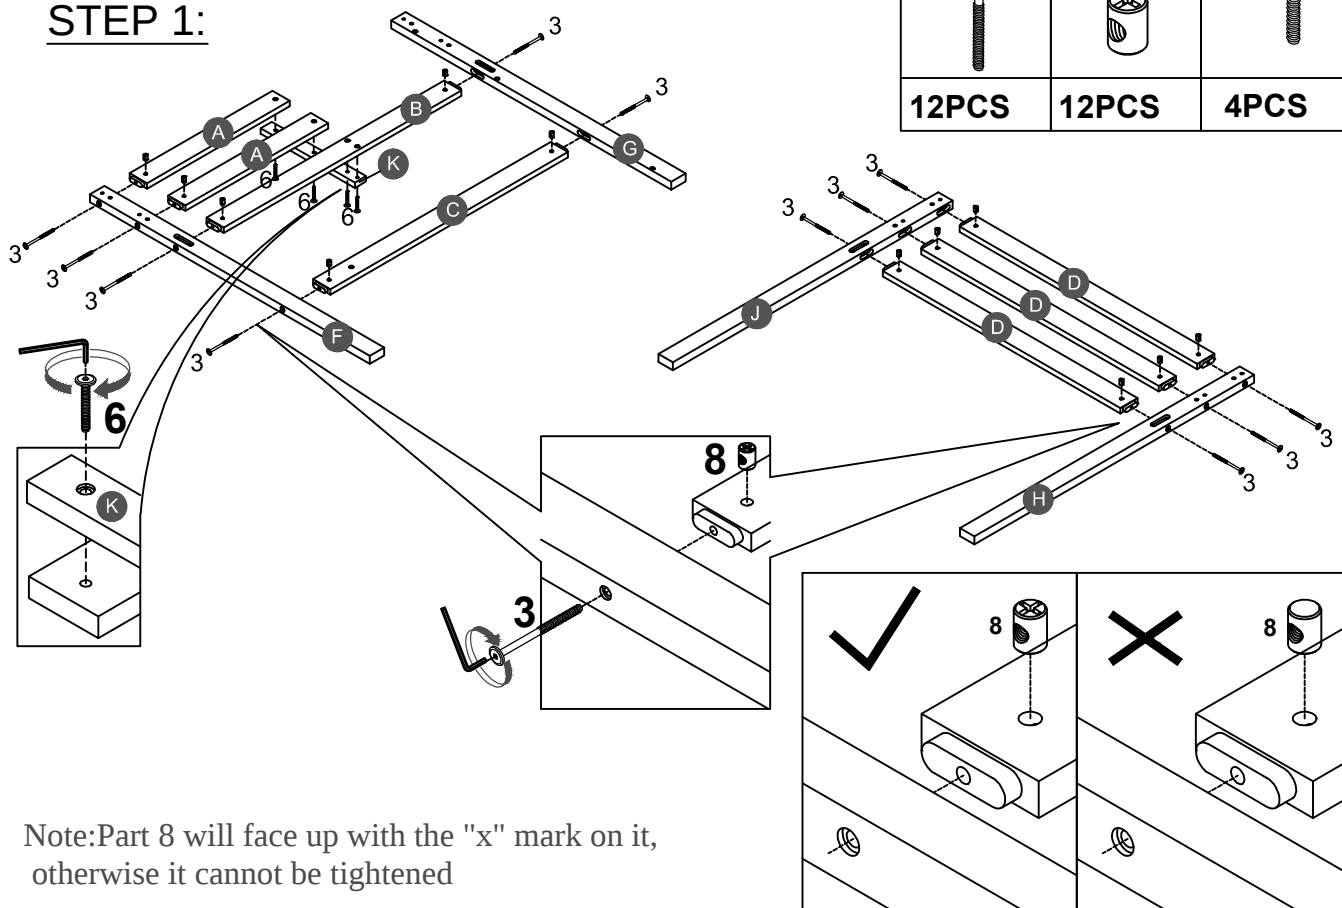
STEP 1:



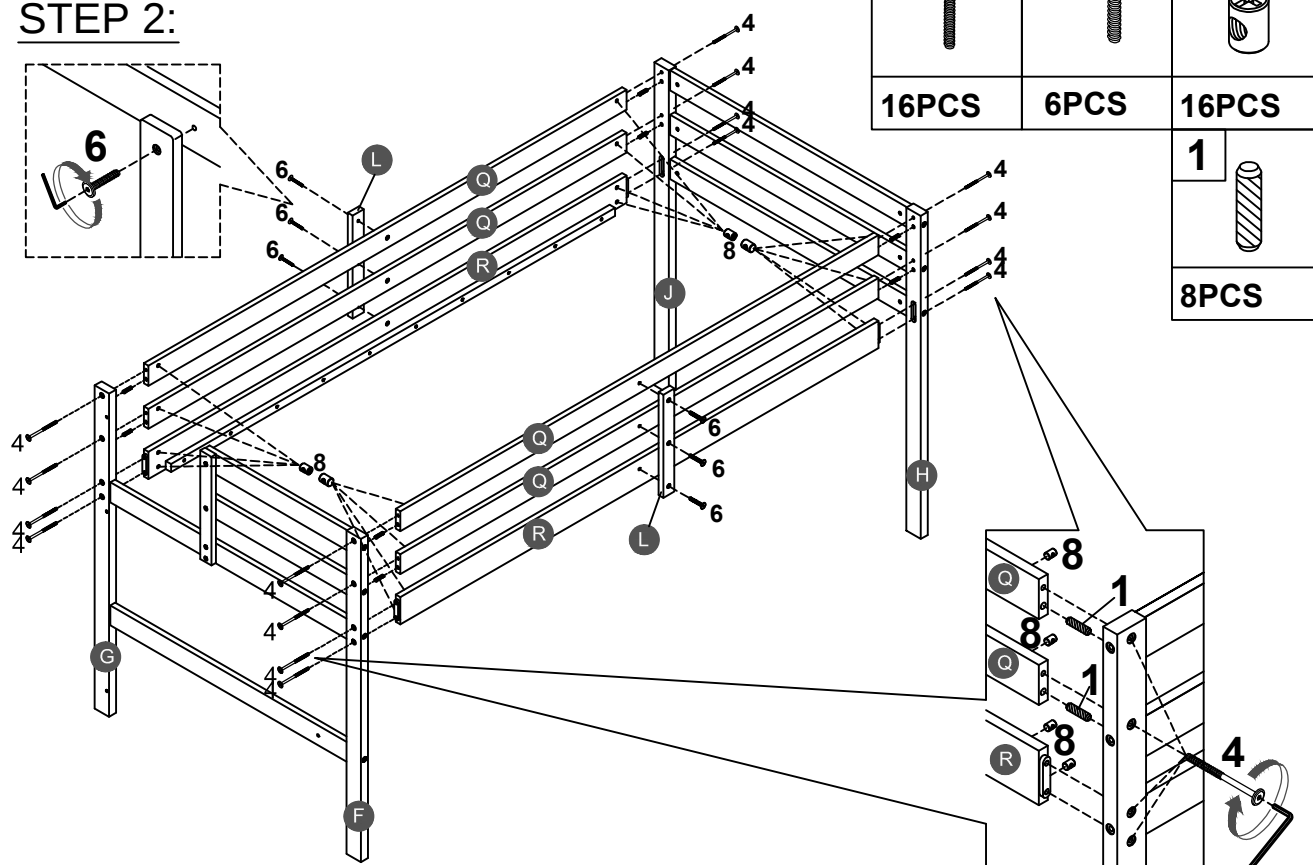STEP 2:




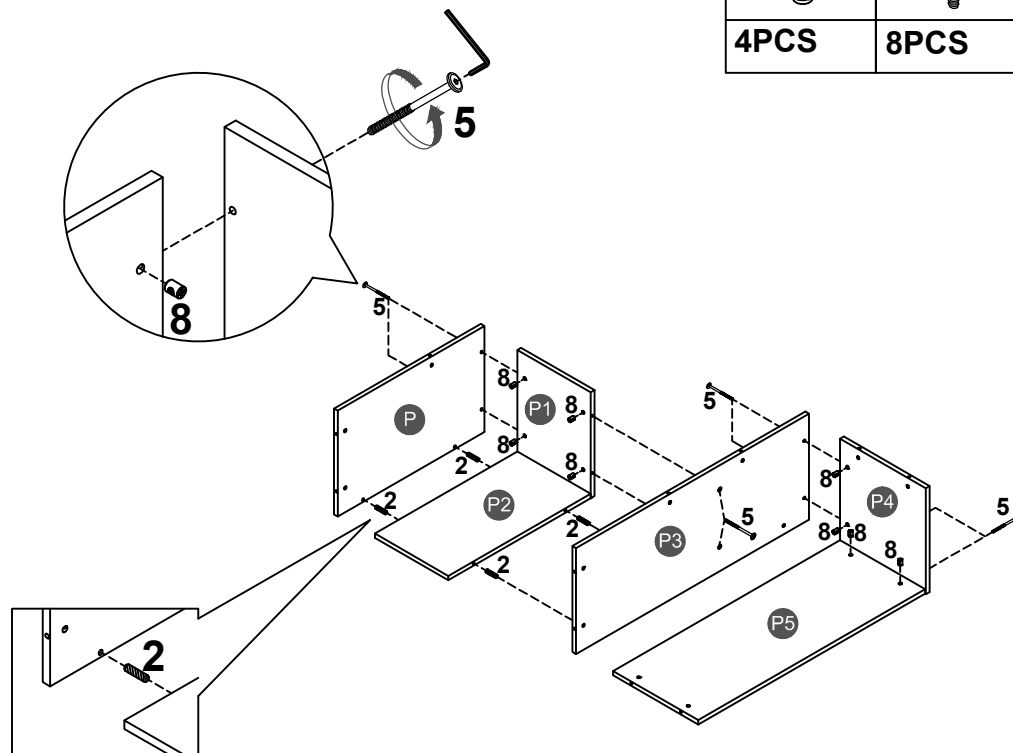STEP 3:



2		5		8	
4PCS		8PCS		8PCS	

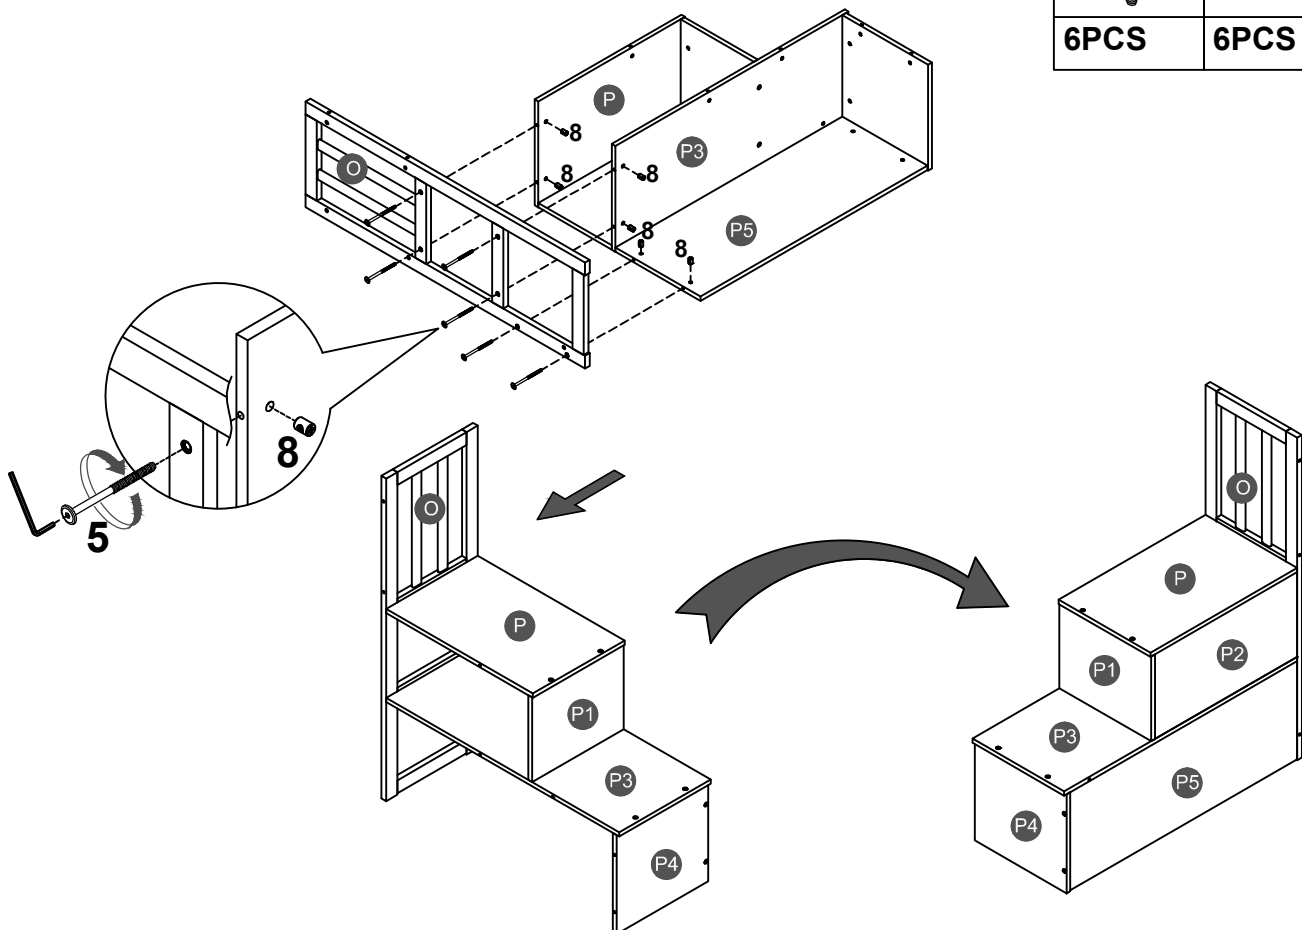
STEP 4:




5		8	
6PCS		6PCS	

STEP 5:

5		8	
4PCS		4PCS	


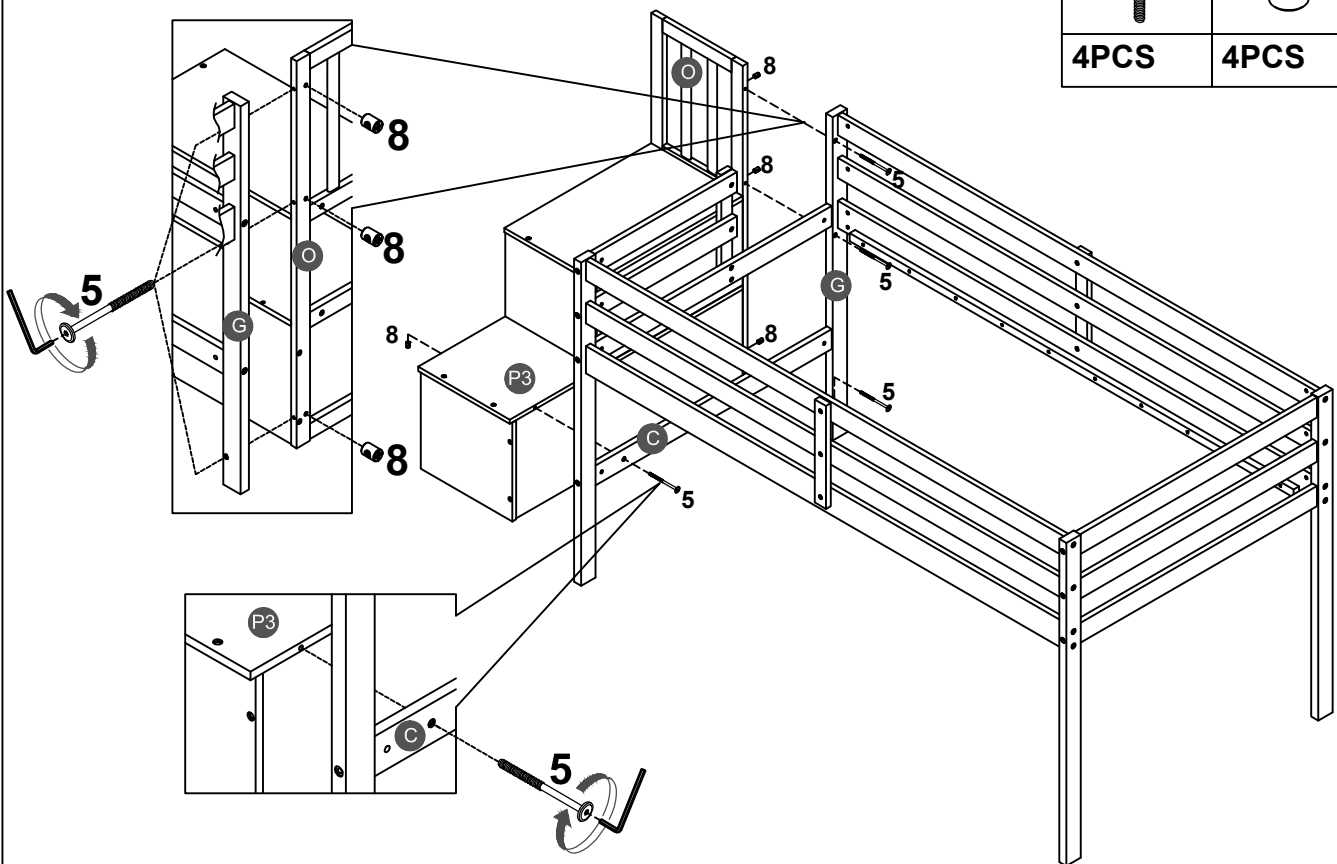


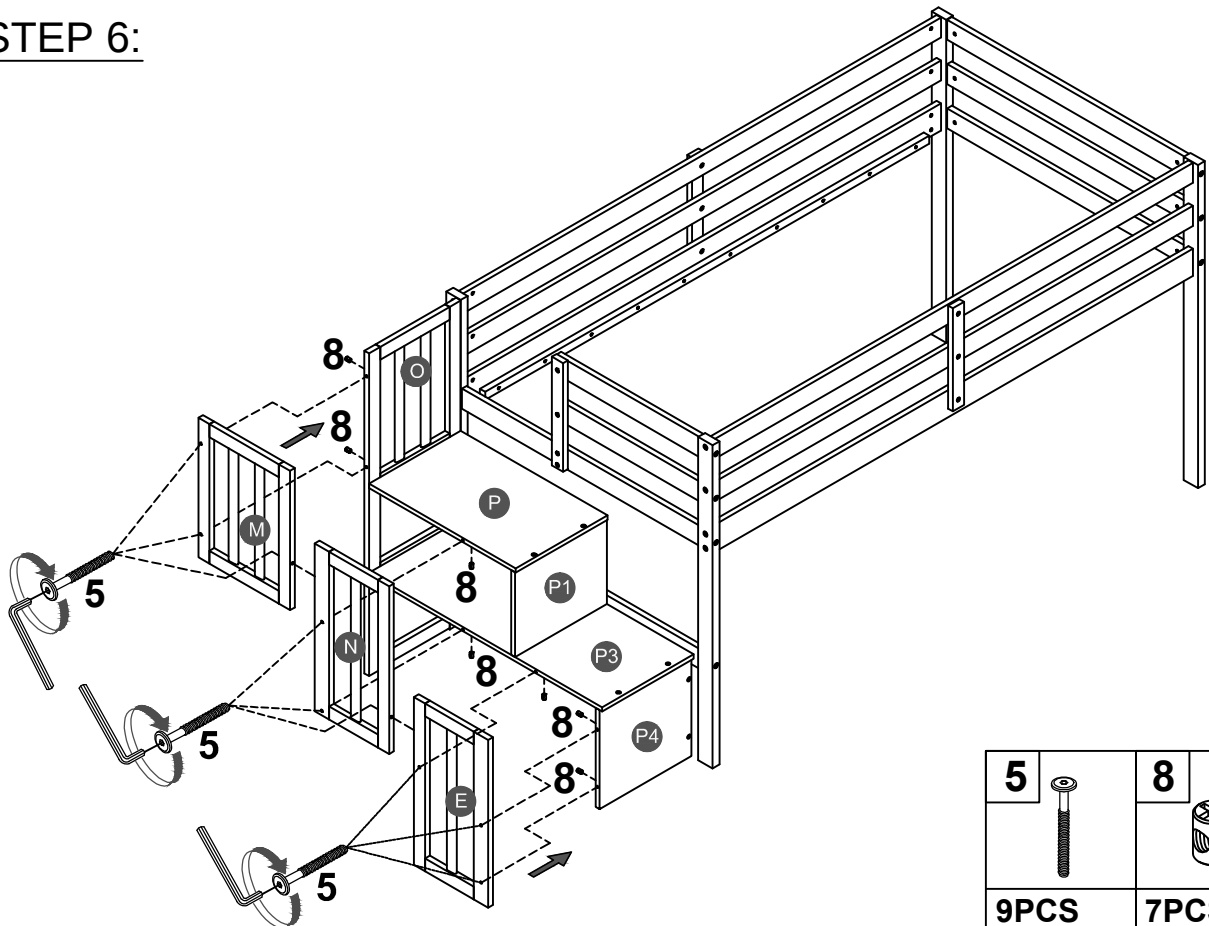STEP 6:



5		8	
9PCS		7PCS	

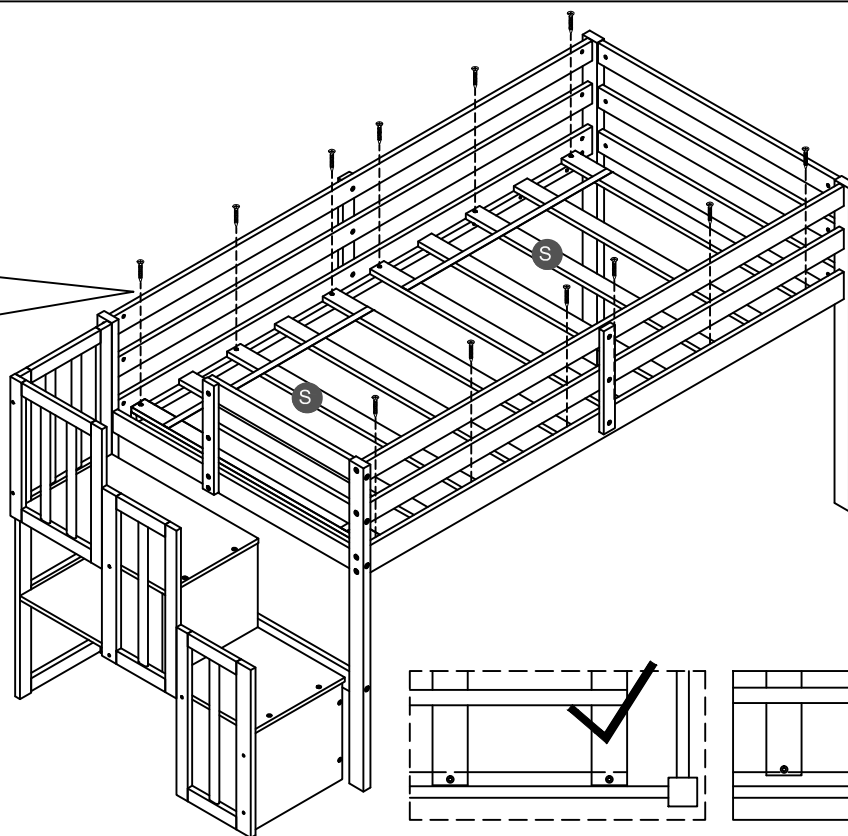
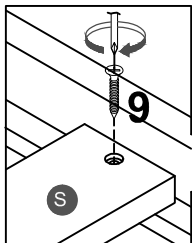
STEP 7:



9



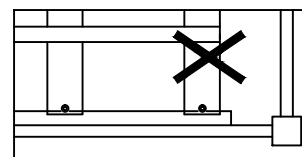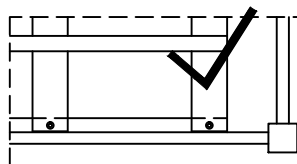12PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

