

For more information  
check out our installation video at:  
[www.m-rockstone.com](http://www.m-rockstone.com)



Easy Step by Step  
Instructions

A Professional  
look every time

Engineered for  
durability

Designed to be  
the most realistic  
stone available

**Thank you for purchasing your M-Rock Post Surrounds.**

**Assembly Tips:**

1. Read the instructions and become familiar with the parts.
2. Watch the Installation video at [www.m-rockstone.com](http://www.m-rockstone.com)
3. Ensure that you have all the parts, fasteners and tools that you will need.
4. We are here to help. Just call customer service 866-896-7625.

**Starter Pack Contents:**

[4] Starter Strips  
[20] Spacer Disks


**Additional Supplies needed:**  
Dipped or galvanized screws.  
Size will depend on installation,  
with a minimum of 1 ¼”.



**Step 1:**

Install a starter strip on each side of the post. Drill through the “V” channel of the starter strip. Each starter strip should be installed with two screws and two space disks as shown below in the diagram.

**Installation Diagram:**

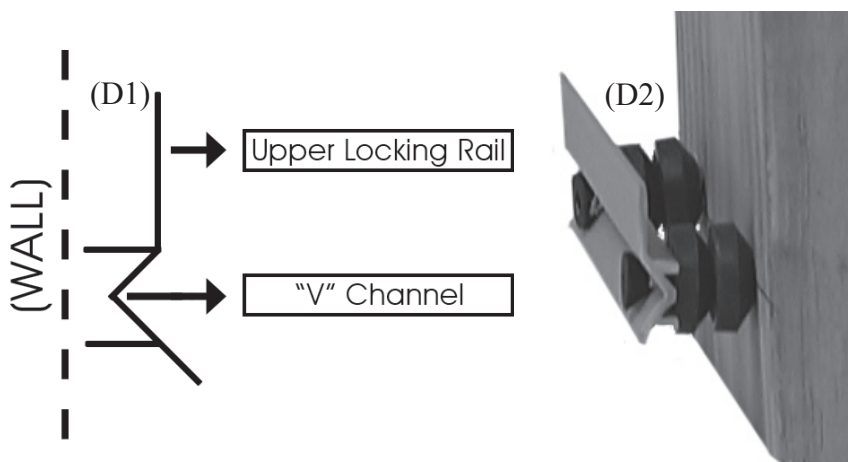

**Step 2:**

There are 4 different shaped stones as shown above. Lock shape 1 onto the starter strip followed in sequence by shapes 2, 3, and 4. DO NOT screw any of the sections to the post until all four are in place. Each section of the first level will require one screw and one Spacer Disk or shim when necessary. Do not over tighten the screws; only tighten until snug or until no visible gap in corners.



### Step 3:

Rotate 1/4 turn and repeat Step 2 by stacking the next row directly on top of the first row and continue with each additional row. As you are working up the post, other necessary adjustments may need to be made. Install Spacer Disks where necessary.



**Pyramid Post Cap**

**Post Trim Rings**



### Step 4:

Cutting may be necessary to finish the top row. If you have to make any cuts, do not cut the bottom section of the rail on the stone, so that it can still be locked into place. Make your cut and set the stone into place to assure the fit. Once you are confident that your fit is correct, use a quality Construction Adhesive. Apply the desired amount to the top and back section and along each vertical butt joint, ensuring that the stone is locked into place.



### Tips for finishing your post:

You have a few options when it comes to finishing your post project, depending on the look you are going for.

#### 1) **Pyramid Post Cap:**

To top/cap your post. It is designed with a 2" overhang to cover the last row of post surround and the "pyramid" design is for both function and look. You simply attach your Pyramid Post Cap with a quality Construction Adhesive.

#### 2) **Post Trim Rings:**

Designed to allow your post to continue up, while trimming the top of the post surround with a nice finished look. The trim ring comes in two pieces and will need to be installed with a quality Construction Adhesive, leaving a 1/8" or 1/4" gap between the top of the post and your trim. Apply the Construction Adhesive along the bottom groove and where the two pieces will meet. Caulking around the Post Trim Ring may be needed.