


# SMARTCORE®


## SOFT & SOUND

### EASY DIY INSTALLATION

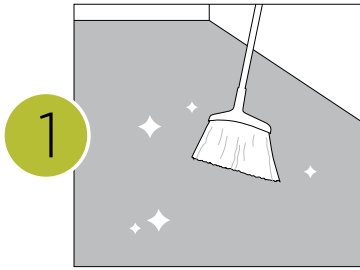


#### CLEAN FLOOR BEFORE LAYING UNDERLAYMENT

Ensure the floor is clean and dry before installing underlayment.

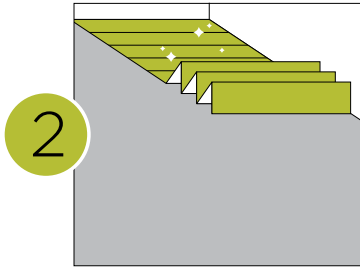


#### START IN A CORNER, SHINY-SIDE UP

Starting in a corner, install the first row of underlayment with moisture barrier facing upward. Install the underlayment to the wall and trim around any obstacles.

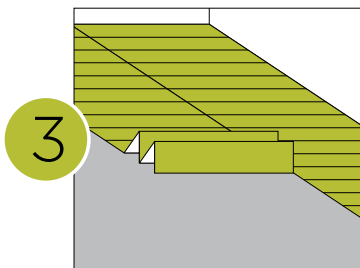


#### SECOND ROW, NO GAPS, USE TAPE

Align the second row of underlayment to the first row ensuring there are no gaps or overlapping seams. Seal with underlayment tape (not included).

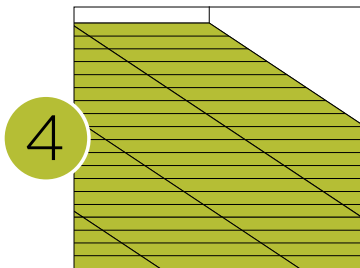

#### REPEAT

Repeat this process until the entire floor is covered.

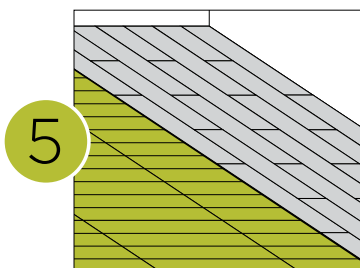

#### INSTALL FLOORING

Install the flooring per the manufacturer's instruction.

*Recommended to be used under approved floating luxury vinyl floor with click systems.*