


ASSEMBLY INSTRUCTIONS

EEI-7117

V0.16.04.24

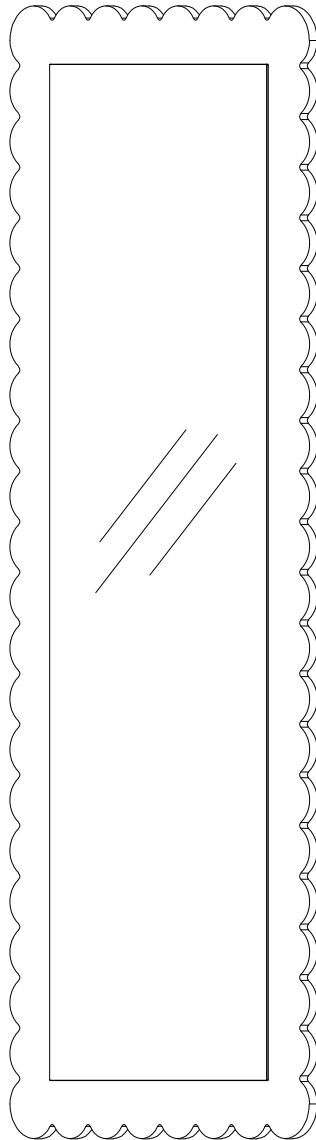

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 20 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Mirror Panel	x1
2	Back Panel	x2

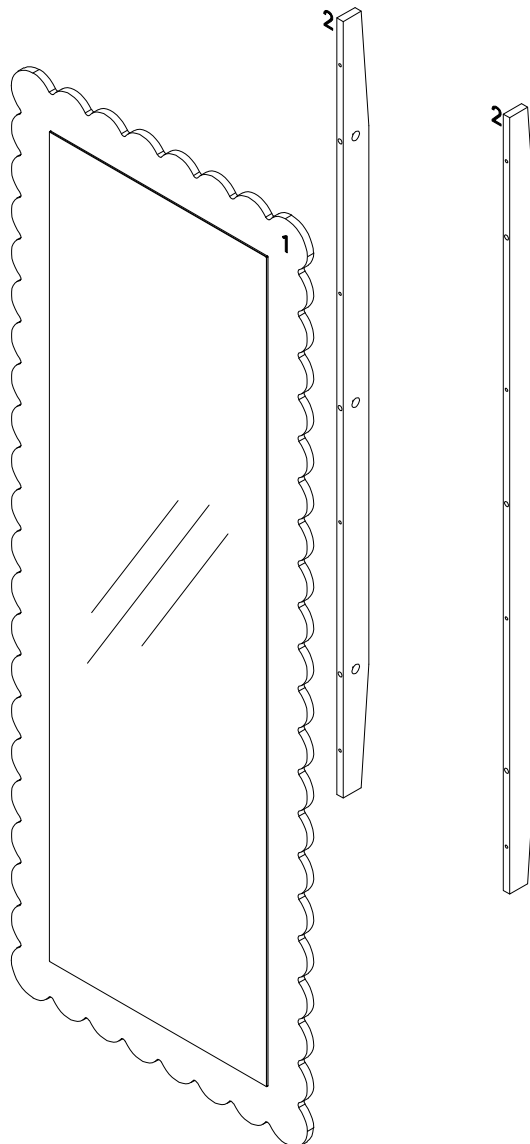

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Provided hardware:

A.		Screw M3.5 x 12 mm	x5
B.		Screw M4 x 25mm	x2
C.		Wood Dowel Ø6 x 20 mm	x8
D.		Cam Bolt 20 x 5 mm	x6
E.		Cam Lock 15/12	x6
F.		PVC Wall Plug	x2
G.		Silicon Floor Bumper	x2
H.		Keyhole wall Bracket	x2
J.		PP Strap	x1

What you need:



Phillips



Phillips Head Screwdriver

You may also need:

+ Power Drill

+ Level

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Step 1


OPTION A

HARDWARE

- C** Wood Dowel Ø6 x 20 mm x8
- D** Cam Bolt 20 x 5 mm x6

COMPONENTS

- 1** Mirror Panel x1
- 2** Back Panel x2

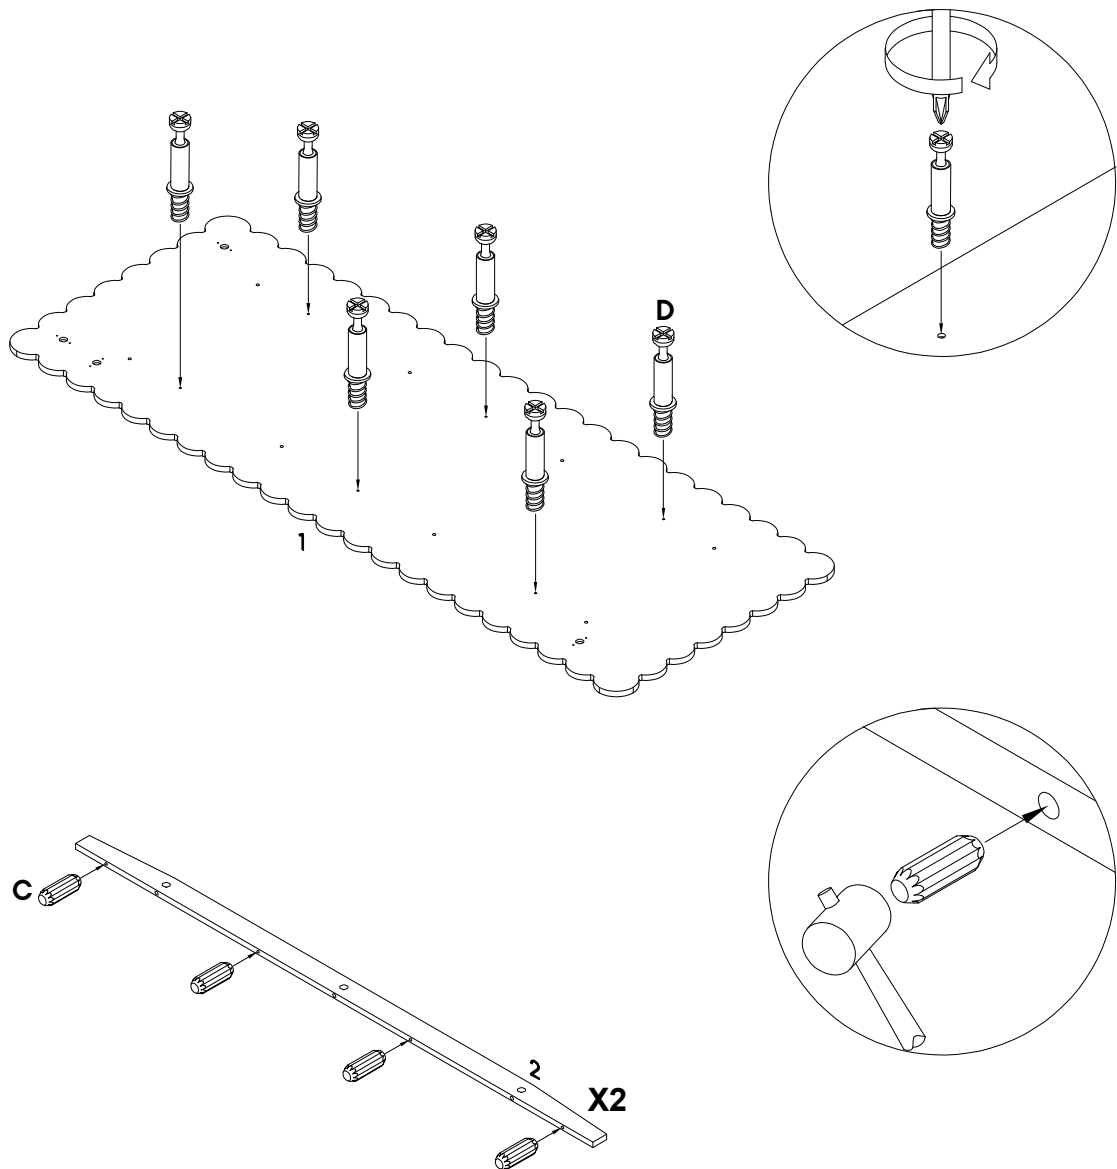

Step 2




OPTION A

HARDWARE

A Screw M3.5 x 12 mm	x1
E Cam Lock 15/12	x6
G Silicon Floor Bumper	x2
J PP Strap	x1


COMPONENTS

1 Mirror Panel	x1
2 Back Panel	x1

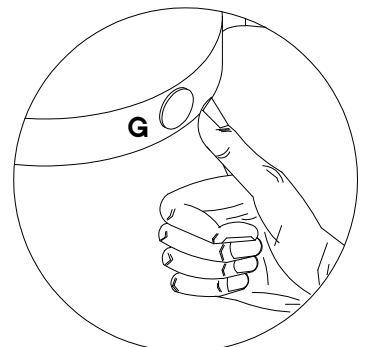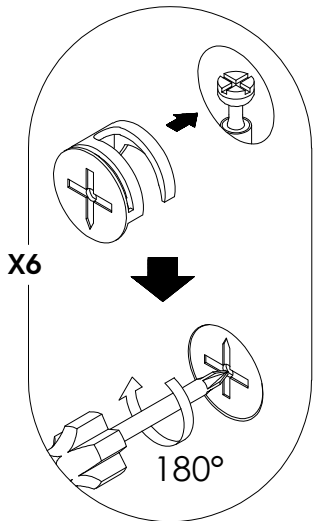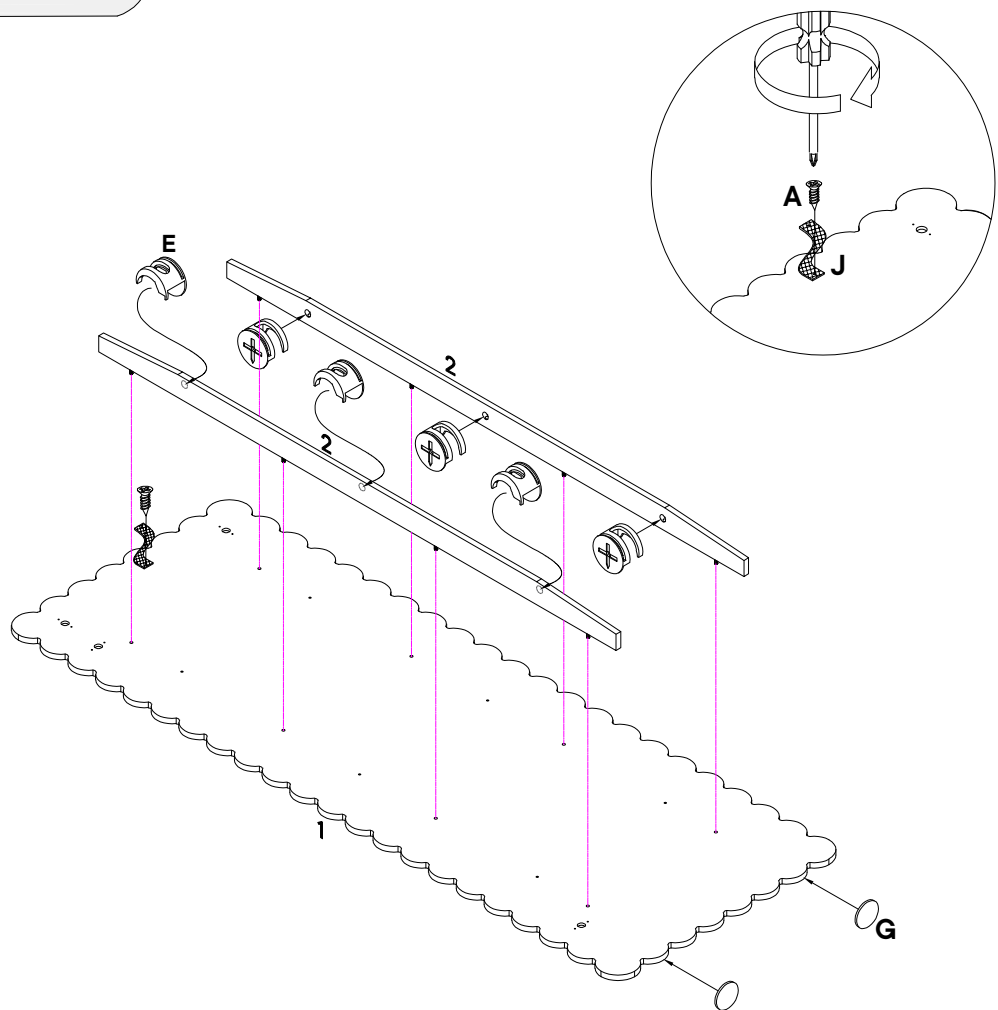

Step 3

OPTION A

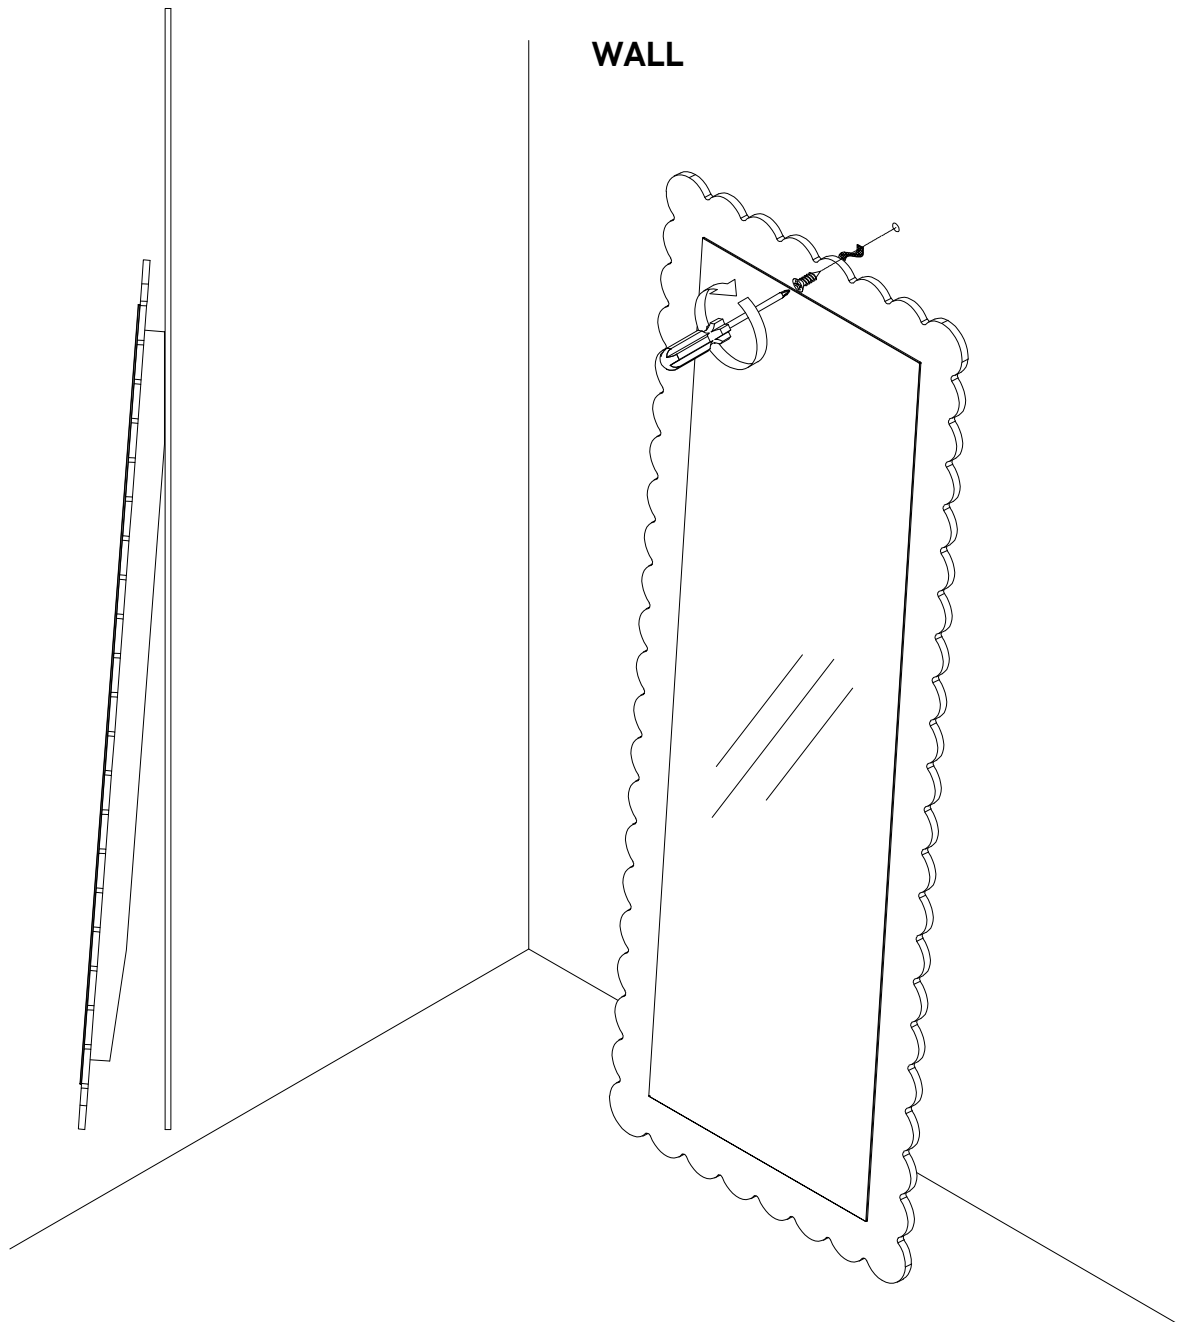

Step 4


OPTION B

HARDWARE

- | | |
|-------------------------------|----|
| A Screw M3.5 x 12 mm | x4 |
| H Keyhole Wall Bracket | x2 |

COMPONENTS

- | | |
|-----------------------|----|
| 1 Mirror Panel | x1 |
|-----------------------|----|


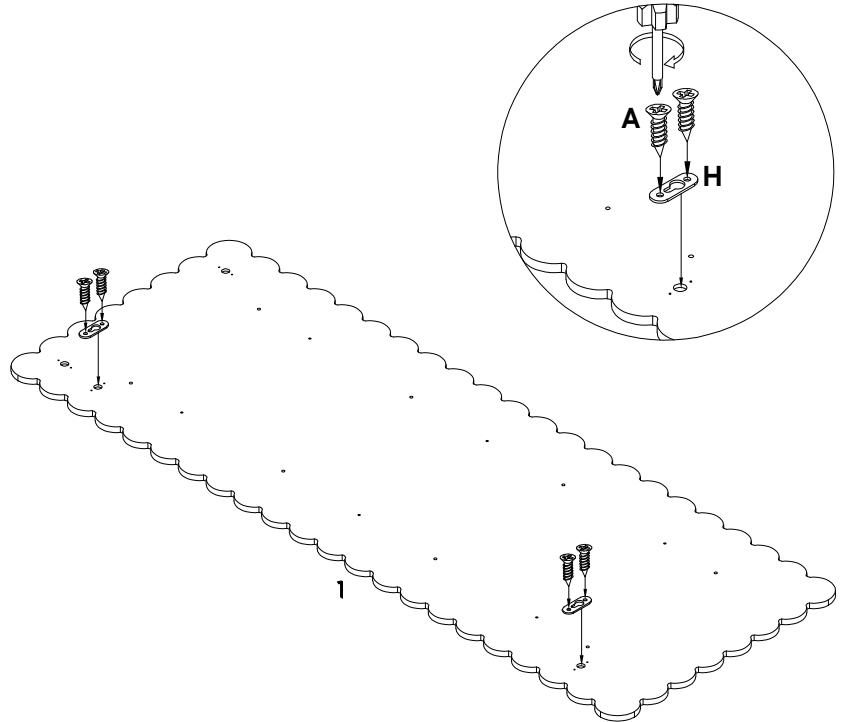


Step 5

HARDWARE



- | | |
|---------------------------|----|
| B Screw M4 x 25 mm | x2 |
| F PVC Wall Plug | x2 |

Different wall materials require unique wall fasteners. The PVC wall plugs (F) and screws (B) are designed for fixing to concrete walls only. Please consult your local hardware store to ensure you are using the correct hardware for your wall type

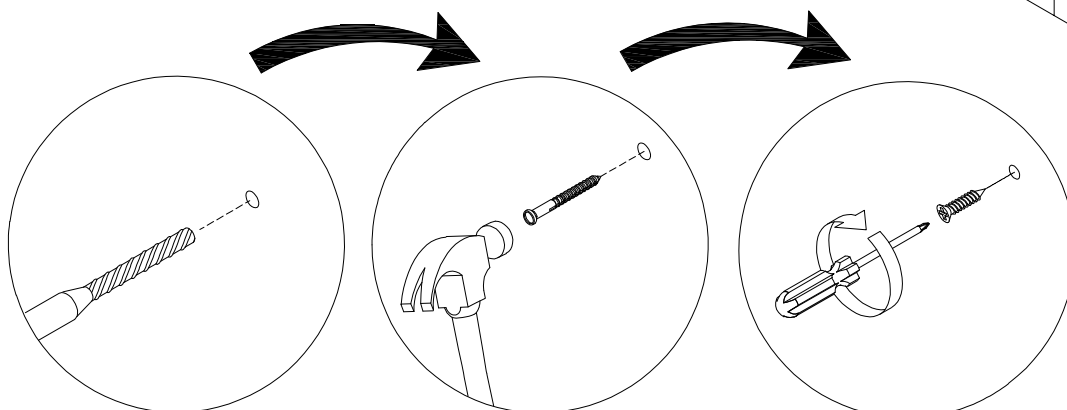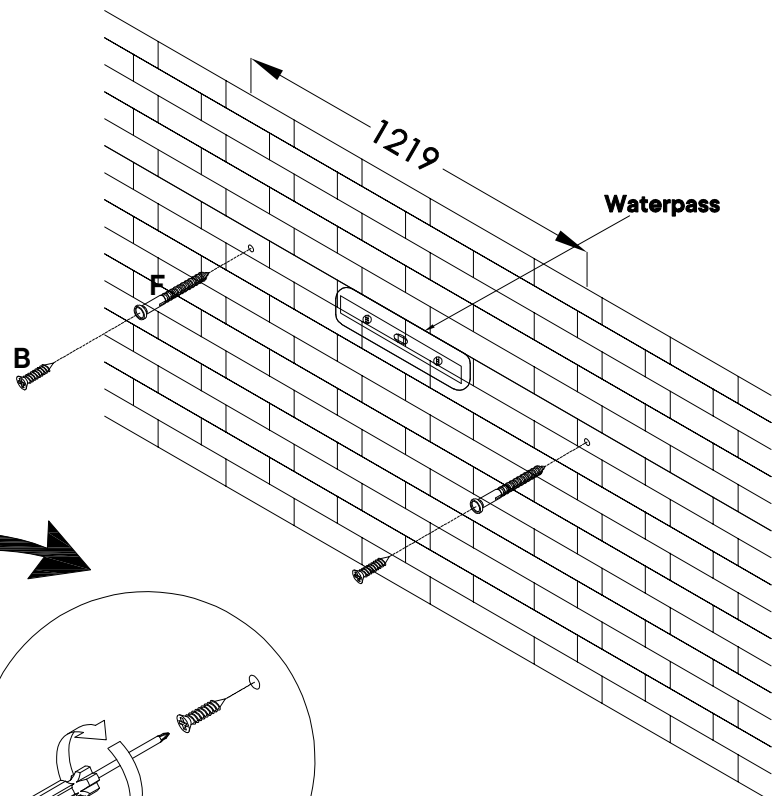


Step 6

OPTION B

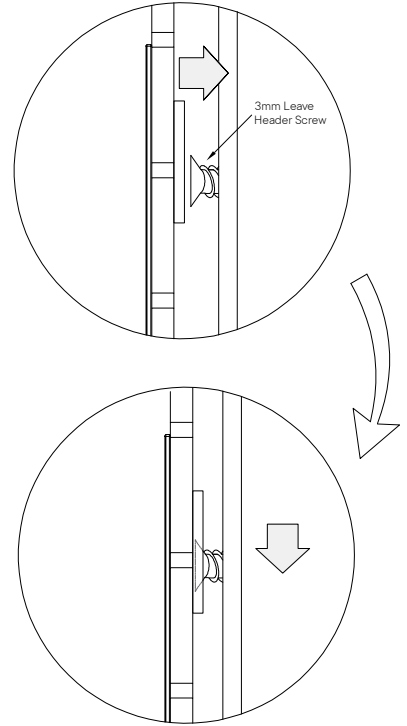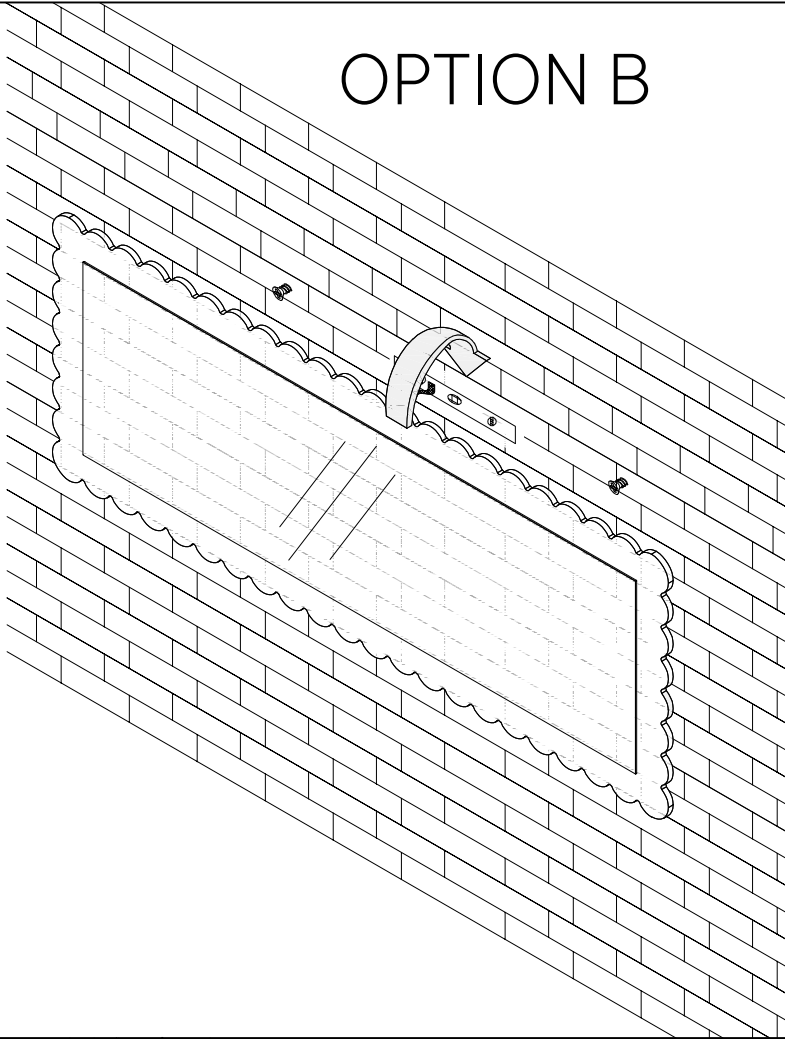

Step 7

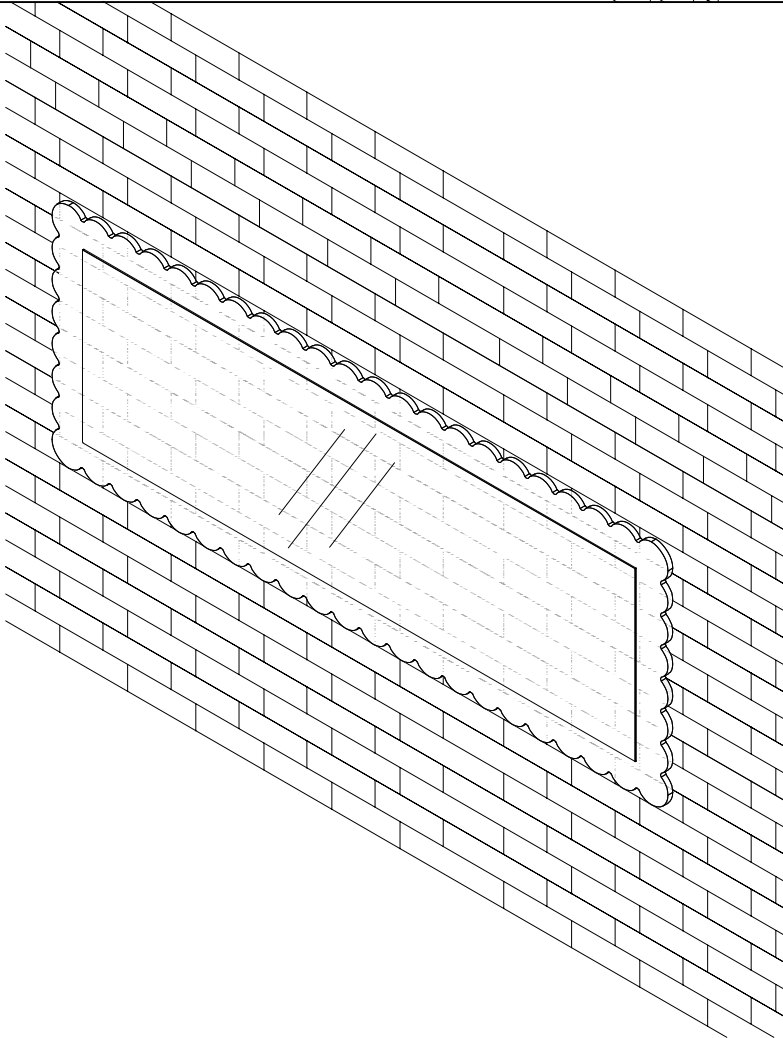

Step 8


OPTION C

HARDWARE

- A** Screw M3.5 x 12 mm x4
- H** Keyhole Wall Bracket x2

COMPONENTS

- 1** Mirror Panel x1


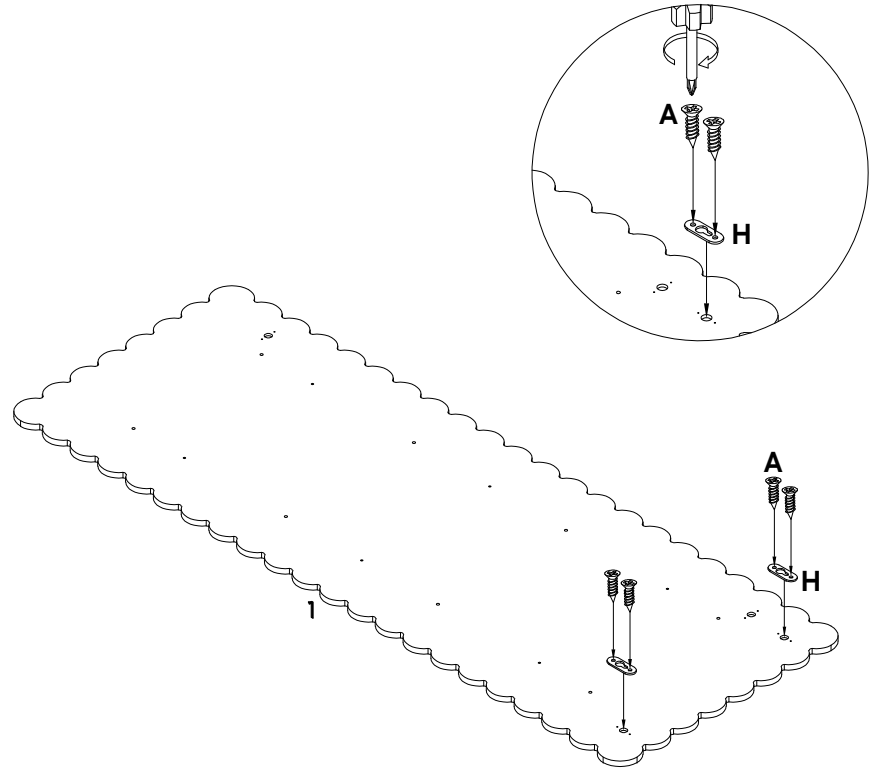


Step 9

HARDWARE



- B** Screw M4 x 25 mm x2
- F** PVC Wall Plug x2

Different wall materials require unique wall fasteners. The PVC wall plugs (F) and screws (B) are designed for fixing to concrete walls only. Please consult your local hardware store to ensure you are using the correct hardware for your wall type

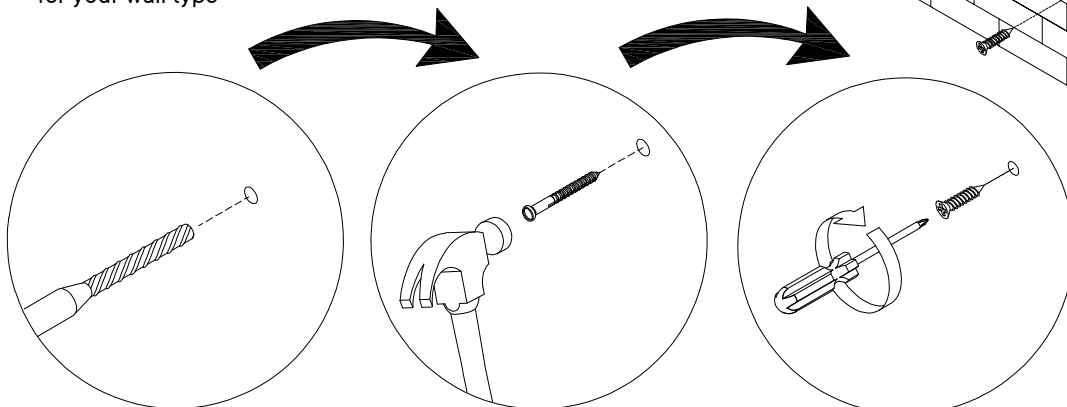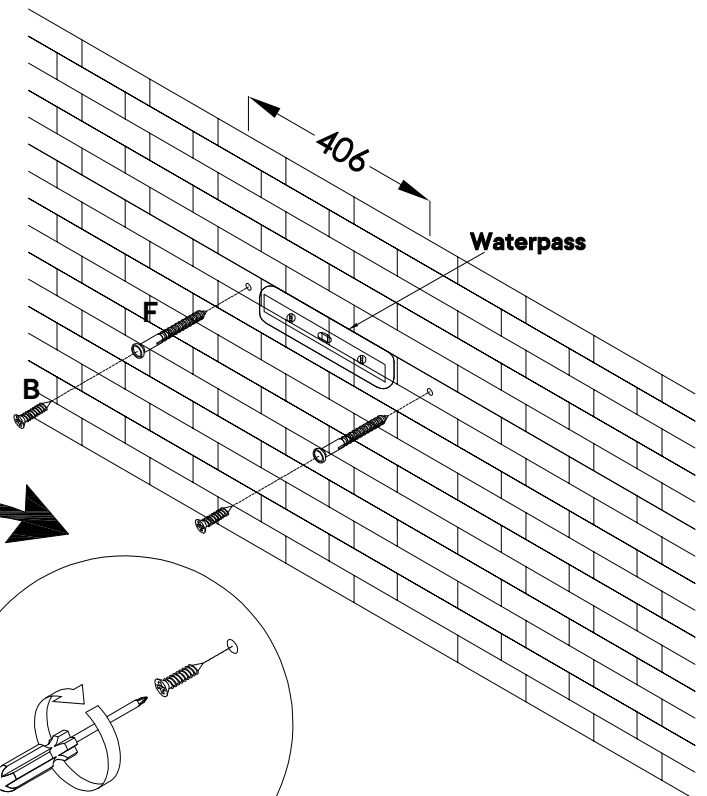

Step 10

OPTION C

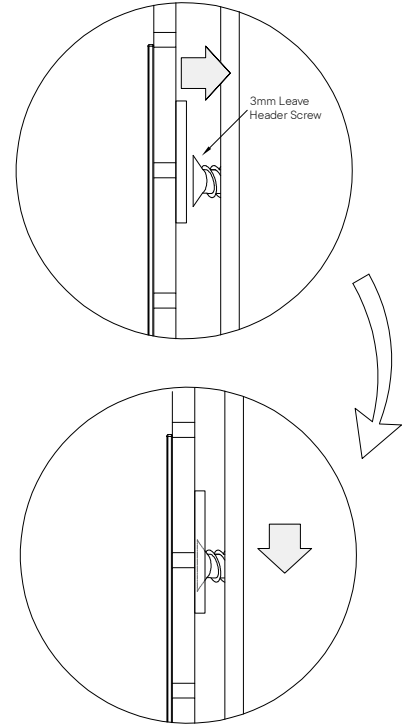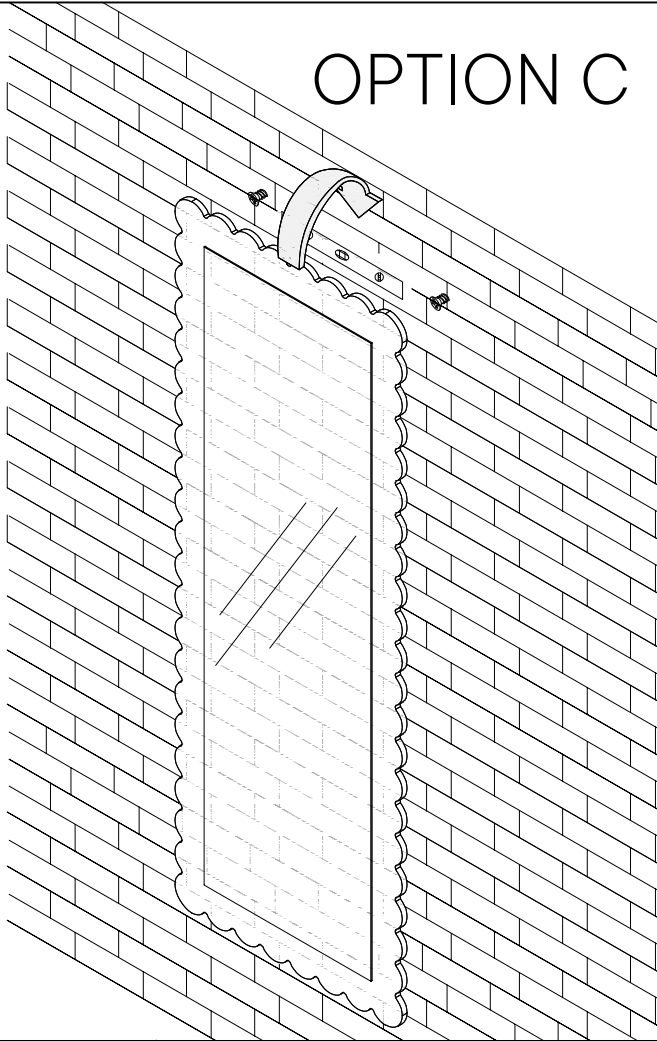

Step 11

