



ZIPPITY

Easy Does It!

ZIPPITY OUTDOOR SHOWER POST EXTENSION KIT (4-PACK) (58" T)



ASSEMBLY INSTRUCTIONS ZP19012

60 MIN

Approximate assembly time

Want to see a video on how to
assemble this product?

Scan the QR code

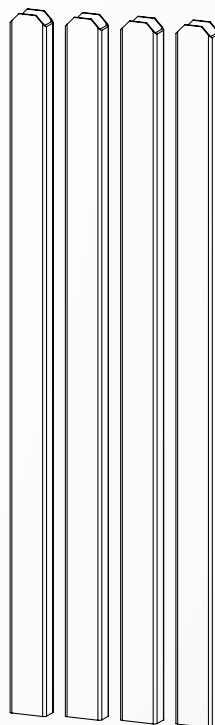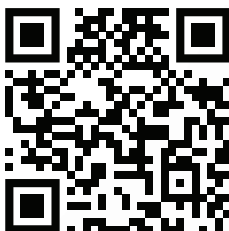

GENERAL INFORMATION



IMPORTANT

- + Check the inside of the larger pieces in your box for other materials packed inside.
- + When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- + We recommend an area approximately 5'x 8' for unobstructed assembling.
- + You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 parts.nychbrands.com

 support@zippity-outdoor.com

 **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **ZP19012** and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number inside the box.


NEED ASSEMBLY HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6196.**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

Detailed Product Dimensions & Specifications

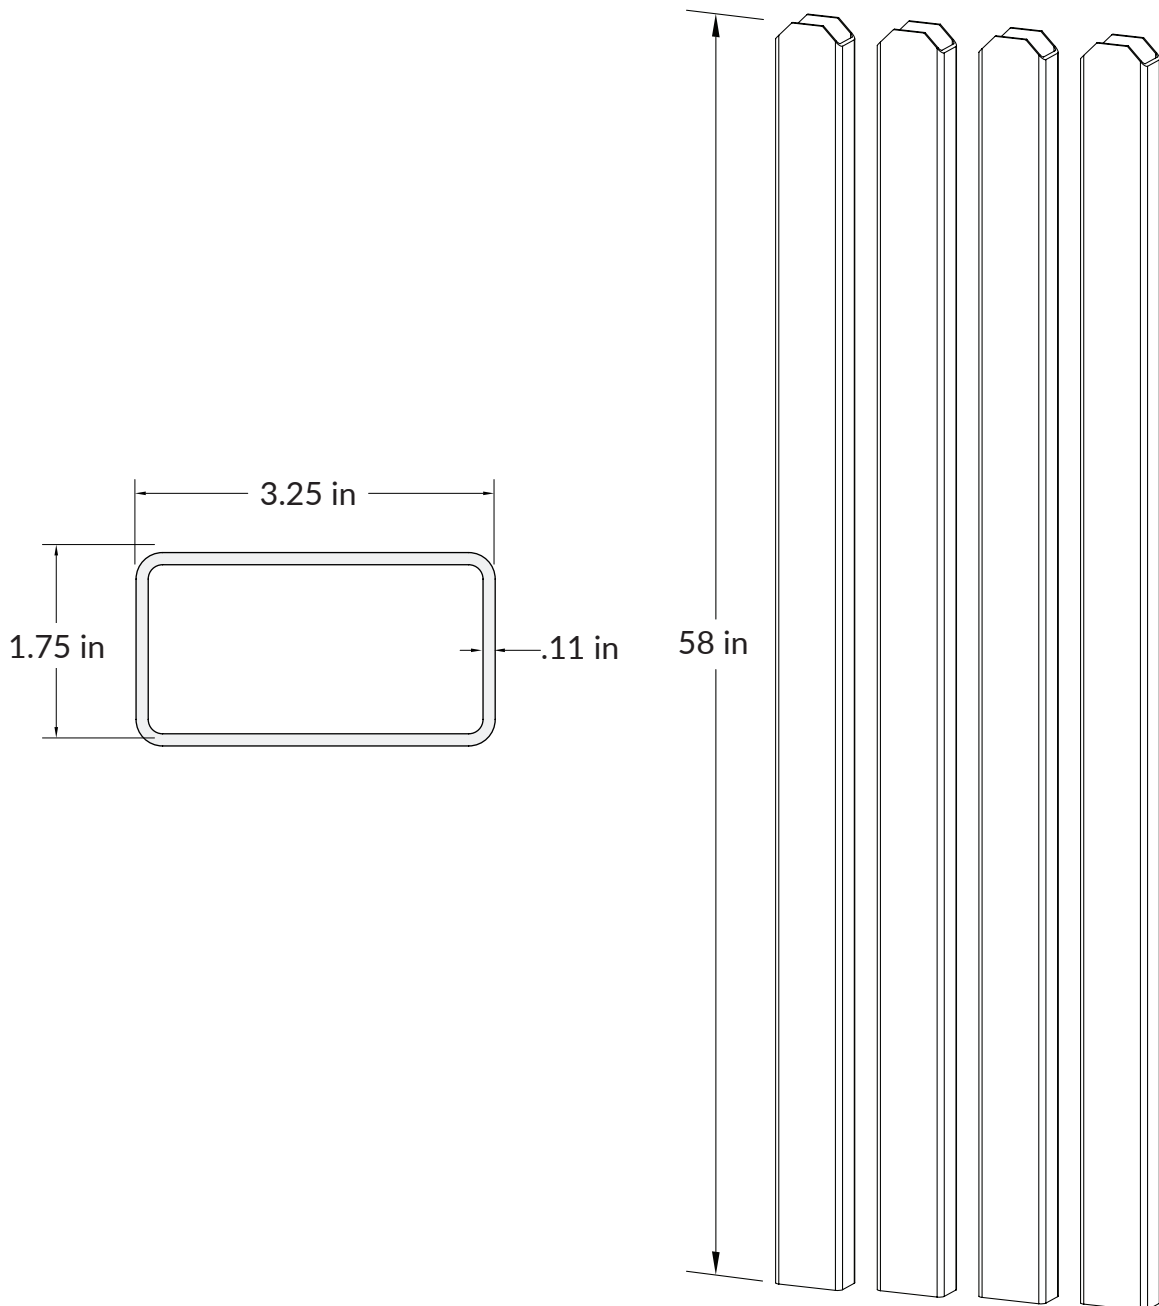

STEP 1: LAY OUT MATERIALS

A ▶

Post Extension (4)



NOT INCLUDED WITH PURCHASE:




80 lb Concrete
Mix (8)

STEP 2: INSTALL POST EXTENSION INTO POST

STEP 2.1 ▶


▶ Insert (4) Post Extensions (A) into the bottom of all 4 posts (included in ZP19009 or ZP19024) as illustrated.

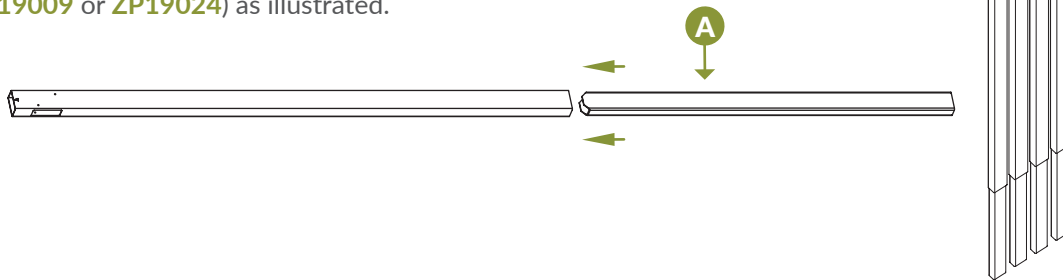

STEP 3: INSTALL POST EXTENSIONS INTO THE GROUND

STEP 3.1 ▶

▶ Once the shower unit is assembled, mark the post locations and temporarily set the unit aside. Dig (4) 9" diameter, 36" deep holes at the post locations. Lower the unit into the ground and fill the holes with concrete (NOT INCLUDED). Use support blocks to hold the unit while the concrete cures.

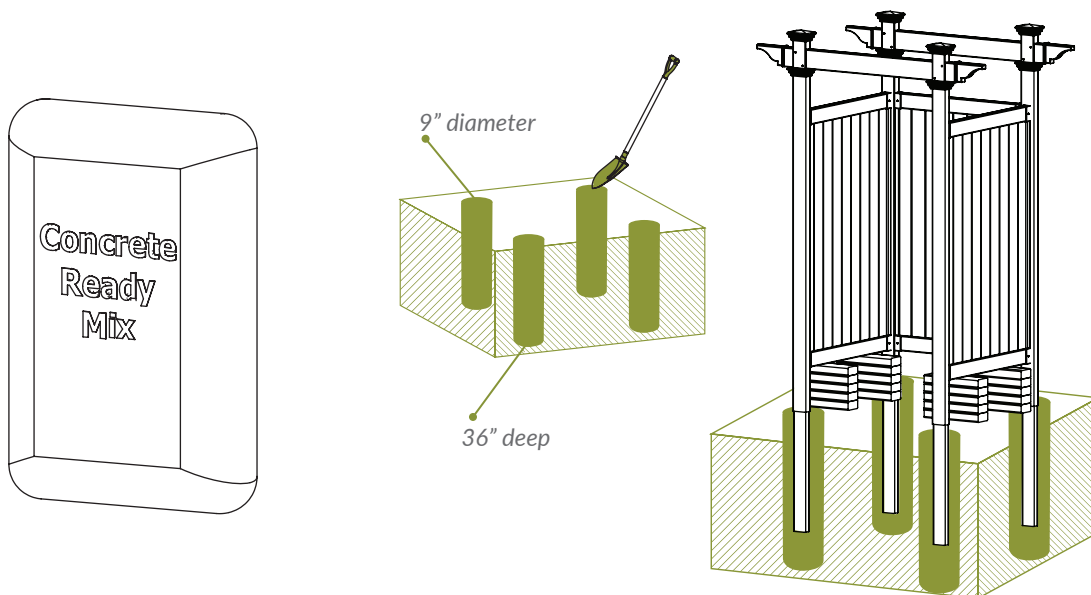



ZIPPITY

Easy Does It!



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



support@zippity-outdoor.com

704-892-5222
877-234-6196



WWW.ZIPPITY-OUTDOOR.COM