



6 Light Modern Chandelier Fixture

Installation Instructions for item AL10008C6

AMBIATE

CAUTION: To prevent electrical shock, ensure electricity has been turned off at the circuit breaker before beginning.

- Read all instructions before installing.
- Ensure all electrical connections must be made in accordance with the National Electric Code and local codes and ordinances. If you are uncertain of the methods of installing electrical wiring and lighting fixtures, secure the services of a qualified licensed electrician.
- Retain installation instructions for future maintenance reference.

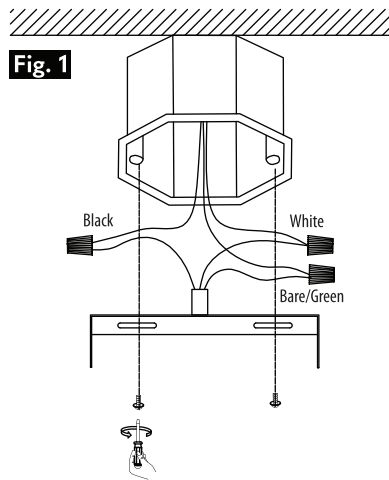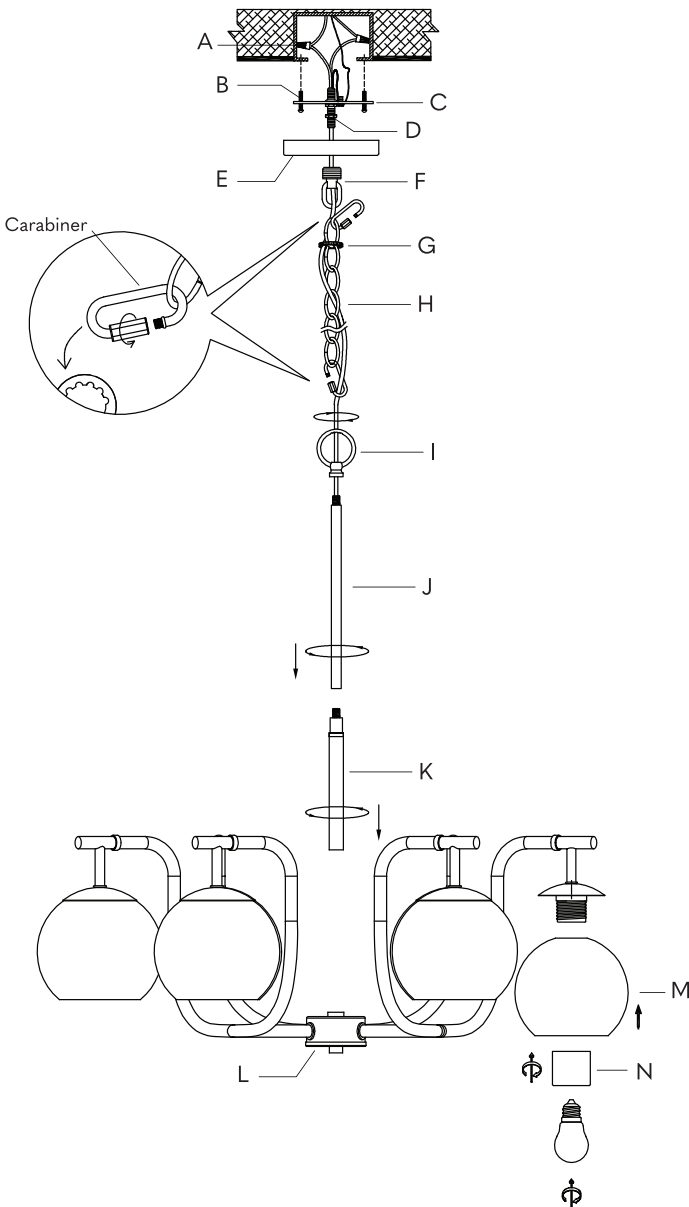

PREPARATION

1. Shut off the power at the circuit breaker and remove existing fixture, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Be careful not to lose any small parts necessary for installation.

MOUNTING THE FIXTURE

3. Thread the fixture's wires through the stems (K & J) and the fixture loop (I). Then screw together the fixture loop (I) and the stems (K & J) to the fixture (L) (excluding the glass shades, wait until step 13).
4. Remove the crossbar (C) from the canopy (E) and install it onto the junction box using the mounting screws (B). Before mounting the crossbar, ensure the canopy loop (F) is installed on the crossbar (C) using the nipple and locknuts (D).
5. Use the canopy ring (G) to secure the canopy (E) to the crossbar (C).
6. Attach the chain (H) to the canopy loop (F) with the carabiner.
7. Hang the assembled fixture by the fixture loop (I) to the chain (H) using the other carabiner. Remove excess chain to achieve the desired length.
8. Measure the length of the wires and allow at least 1 foot of excess wire.
9. Thread the wires through the chain (H).
10. Remove the canopy (E) and pull the wires through.
11. Connect the fixture wires to junction box wires as shown (Fig. 1). Black to black, white to white, and bare/green to bare/green. Make sure that all wire connectors (A) are secure. If your outlet box has a green or bare copper ground wire, connect the bare copper wire from the fixture to it. Otherwise, connect the fixture's ground wire directly to the crossbar using the green screw. After wires are connected, tuck them carefully inside the junction box.
12. Use the canopy ring (G) to re-secure the canopy (E) to the crossbar (C).
13. Attach the glass shades (M) to the fixture with the thumbscrews (N).
14. Install bulbs, not to exceed max rated wattage. Turn on power at the circuit breaker.